


Workshop manual

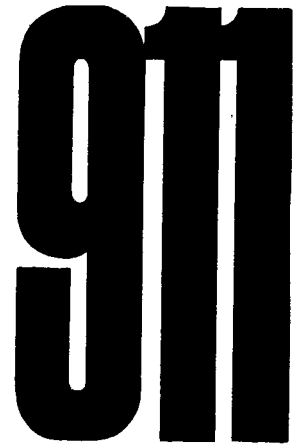

**DR. ING. h. c. F. PORSCHE KG
STUTTGART-ZUFFENHAUSEN**

This publication contains the essential removal, installation and adjustment procedures for the Porsche 911 vehicles sold in the USA and Canada. Components and procedures described in this manual are identical for all types unless differences are pointed out in the text. It is assumed that the reader is familiar with basic automotive repair procedures. Special tools required in performing certain service operations are identified in the manual and recommended for use. Use of tools or procedures other than those recommended in this repair manual may be detrimental to the vehicle's safe operation as well as the safety of the person servicing the vehicle.

The Workshop Manual 911 - from model 1972 on - is subdivided into 10 Assembly Groups, delivered in supplements to volume I and II.

Survey of the individual Assembly Groups:

| | |
|------------------------------------|------------|
| Engine and Clutch | Code No. 1 |
| Fuel System | Code No. 2 |
| Transmission | Code No. 3 |
| Front Axle | Code No. 4 |
| Rear Axle | Code No. 5 |
| Brakes, Wheels, Tires | Code No. 6 |
| Pedal Controls and Manual Controls | Code No. 7 |
| Maintenance Jobs, Technical Data | Code No. 0 |
| Body | Code No. 8 |
| Electrical System | Code No. 9 |

For identification of the volumes, the back of the folders is provided with a transparent pocket at the top for insertion of the pertinent type.

To find the individual repair steps quickly, each Assembly Group of this Workshop Manual is subdivided into "Main Groups", "Chapters" and "Sections" and provided with a very detailed list of contents; refer to example on next page.

Technical Information sheets should be filed at the beginning of their respective groups. The contents of the Technical Informations will be incorporated into the Workshop Manual at suitable intervals. The List of Contents will be edited whenever extensions and supplements are published.

Motor und Kupplung
Engine and Clutch
Moteur et Accouplement
Motore e Frizione

1

1

1

1

1

1

1

1

1

1

CONTENTS

0 - INFORMATION, DESCRIPTION, TECHNICAL DATA

0.1 Description

| | |
|---|-----------|
| Engine changes - 1972 model | 0.1 - 1/1 |
| Oil tank changes - 1972 model | 0.1 - 2/1 |
| Oil cooler system and oil circuit schematic | 0.1 - 2/2 |
| Oil cooler schematic - 1973 model | 0.1 - 3/1 |
| Oil cooler schematic with cooling coil - 1974 model | 0.1 - 3/2 |
| Engine, front view cross section | 0.1 - 4/1 |
| Engine, side view cross section | 0.1 - 4/3 |
| Specifications for 2.7 liter-engine where differ 2.4 liter-engine | 0.1 - 5/1 |
| Engine changes - 1974 model | 0.1 - 6/1 |
| Cross section of engine with emission control equipment | 0.1 - 7/1 |
| Layout of exhaust gas recirculation system | 0.1 - 7/2 |
| Engine cross section with emission control - 1978/1979 models | 0.1 - 7/3 |
| Emission control layout - 1980 model | 0.1 - 7/4 |

0.2 Technical data

| | |
|--|-----------|
| General data | 0.2 - 1/1 |
| Power performance curves | 0.2 - 1/7 |
| Technical data, Type 911 T - Continuous Injection System (CIS) | 0.2 - 3/1 |
| Technical data, Type 911/S/Carrera - 1974 model | 0.2 - 4/1 |
| Full-power performance - 1974 model | 0.2 - 4/4 |
| Technical data, Type 911 S and Carrera - 1975 model | 0.2 - 5/1 |
| Engine tightening data | 0.2 - 5/2 |
| Technical data, Type 911 - 1976 model | 0.2 - 6/1 |
| Technical data, Type 911 S - 1977 model | 0.2 - 7/1 |
| Technical data, Type 911 SC - 1978 model | 0.2 - 7/3 |
| Technical data, Type 911 SC - 1980 model | 0.2 - 7/5 |
| Technical Data, Type 911 SC - from 1981 Models | 0.2 - 7/7 |

2 - COOLING SYSTEM, EXHAUST SYSTEM, EMISSION CONTROL

2.1 Cooling system

| | |
|-------------------------------------|-----------|
| Fan drive belt, replacing/adjusting | 2.1 - 1/1 |
|-------------------------------------|-----------|

2.2 Exhaust system and heating

Exhaust system and heater blower, removing and installing 2.2 - 1/1

Exhaust system - 1978 model 2.2 - 1/5

2.3 Emission control

Air injection components, removing and installing 2.3 - 1/1

Air pump belt, tensioning 2.3 - 1/4

Reactors and EGR equipment, removing and installing 2.3 - 2/1

Exhaust gas recirculation system 2.3 - 2/6

Reactor, checking for leaks 2.3 - 3/1

Exhaust gas recirculation system, checking 2.3 - 3/2

Air injection system, checking 2.3 - 3/3

3 - OIL CIRCULATION

3.1 Oil circulation

Oil tank, removing and installing 3.1 - 1/1

Oil tank, removing and installing - 1973 model 3.1 - 1/2

Auxiliary pressure relief valve, removing and installing 3.1 - 1/3

Auxiliary pressure relief valve, disassembling and assembling 3.1 - 1/4

Oil cooler coil, removing and installing 3.1 - 1/5

Oil cooler, removing and installing 3.1 - 2/1

3.2 Oil tank, removing and installing - 1974 model 3.2 - 1/1

3.3 Pressure relief valve cooling coil, removing and installing - 1974 model 3.3 - 1/1

3.4 Pressure relief valve, disassembling and assembling - 1974 model 3.4 - 1/1

3.5 Oil cooler coil, removing and installing - 1974 model 3.5 - 1/1

Cooling coil oil lines, service installing - 1974 model 3.5 - 1/3

Replacing oil lines to front oil cooler or to cooling coil 3.5 - 1/5

Oil cooler, removing/installing 3.6 - 1/1

Auxiliary pressure relief/safety valves 3.6 - 2/1

5 - CAMSHAFT HOUSING AND CYLINDER HEAD

5.1 Camshaft housing

Injection tube in camshaft housing, removing and installing 5.1 - 1/1

Chain tensioner, overhauling 5.1 - 2/1

Sealing cylinder head/camshaft housing mating surfaces 5.1 - 2/7

5.2 Cylinder head

| | |
|---------------------------------|-----------|
| Valve springs, installed length | 5.2 - 1/1 |
| Adjusting timing | 5.3 - 1/1 |

6 - CYLINDERS AND PISTONS

6.1 Cylinders and pistons

| | |
|---|-----------|
| Piston changes - 1972 model | 6.1 - 1/1 |
| Piston and cylinder dimensions - 1972 model | 6.1 - 1/2 |
| Piston and cylinder dimensions - 1973 model | 6.1 - 2/1 |
| Piston and cylinder dimensions - 1974 model | 6.1 - 3/1 |
| "LS" cylinders and pistons, installation instructions | 6.1 - 3/2 |
| Pistons and cylinders, measuring | 6.1 - 4/1 |
| Piston and cylinder sizes, 911 SC - 1978 model | 6.1 - 6/1 |
| Piston weight classes - 911 SC from 1981 models | 6.1 - 6/3 |

7 - CRANKCASE AND CRANKSHAFT

7.1 Crankcase and crankshaft

| | |
|--|-----------|
| Crankcase, measuring and reconditioning | 7.1 - 1/1 |
| Modified flywheel installation - 1978 model | 7.1 - 2/1 |
| Flywheel with pilot bearing - 1980 model | 7.1 - 3/1 |
| Oil filter screen and suction plate, removing/installing | 7.1 - 4/1 |

7.3 Crankshaft

| | |
|--|-----------|
| Crankshaft changes - 1972 model | 7.3 - 1/1 |
| Crankshaft dimensions | 7.3 - 1/2 |
| Connecting rod changes - 1972 model | 7.3 - 1/3 |
| Connecting rod weight groups | 7.3 - 1/4 |
| Connecting rod weight groups - 1978 model | 7.3 - 1/5 |
| Pistons for injection engines | 7.3 - 2/1 |
| Modified crankshaft drive - 1978 model | 7.3 - 3/1 |
| Crankshaft specifications, standard and undersize - 1978 model | 7.3 - 3/6 |

9 - CLUTCH


9.1 Clutch

| | |
|---|-----------|
| Clutch changes - 1972 model | 9.1 - 1/1 |
| Clutch free play, adjusting | 9.1 - 1/2 |
| Throwout bearing, removing and installing | 9.1 - 2/1 |
| Clutch - 1975 model | 9.1 - 3/1 |
| Clutch modified - 1978 model | 9.1 - 4/1 |

ENGINE CHANGES - BEGINNING WITH 1972 MODELS

General Information

Beginning with 1972 models, Type 911 engines have a cubic displacement of 2.4 liters (2341 c/142.8 cu.in.)

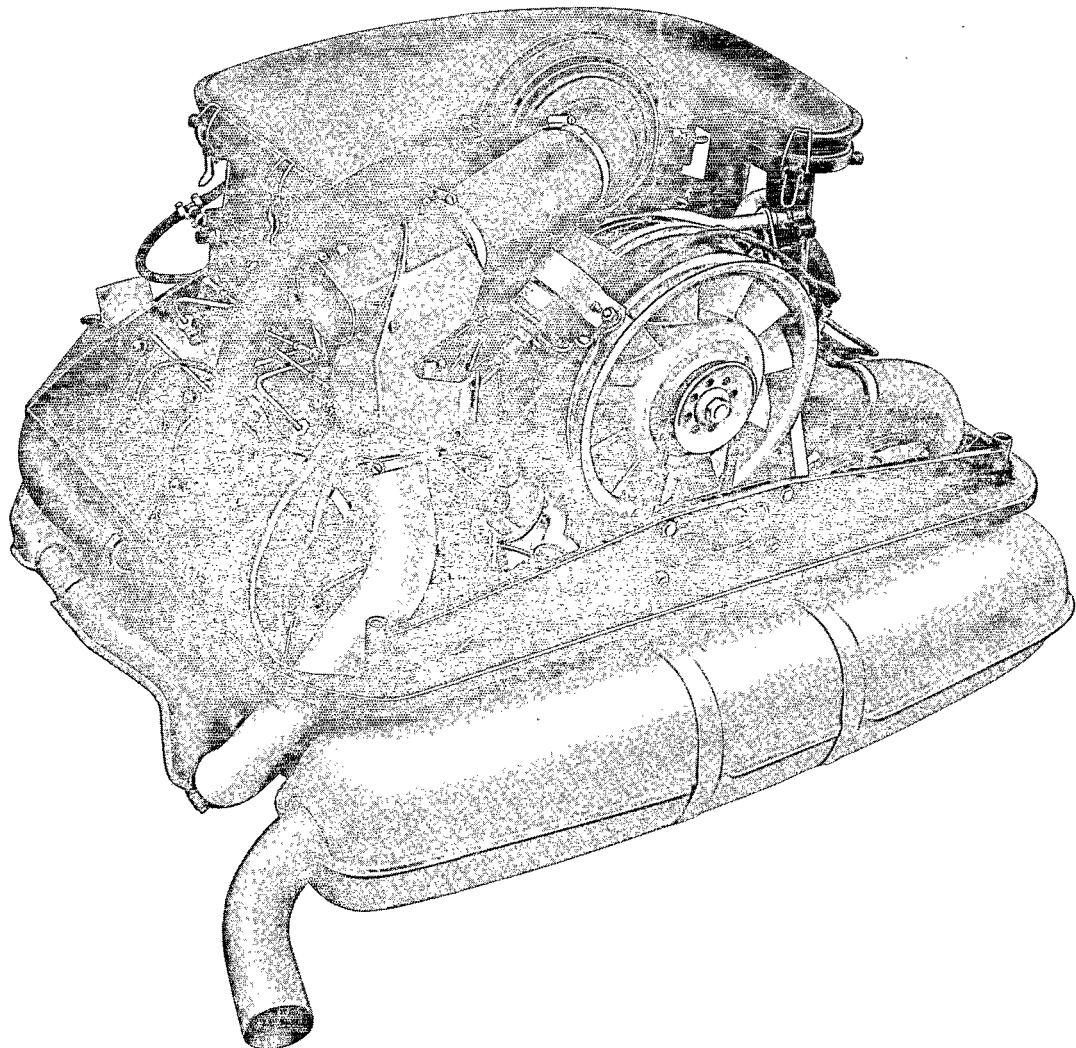

Individual changes and changed service operations are described on the pages that follow.

Summary of Changes:

1. Technical Data
2. Crankcase
3. Crankshaft
4. Connecting rods and bearings
5. Pistons
6. Location of oil tank and oil lines
7. Clutch pressure plate, throwout bearing, and clutch disc
8. Ignition - see Group 9 (Electrical System)
9. Fuel system - see Group 2

OIL TANK CHANGES - BEGINNING WITH 1972 MODELS

General Information


Beginning with 1972 models, the oil tank is located in right rear wheelhousing in front of the rear axle. The oil filler neck is now accessible from the outside. It is located under a hinged lid in the right rear fender. The oil filter housing is separated from the tank and mounted on the right engine compartment wall.

The auxiliary oil cooler under the right front fender continues to be standard equipment in Type 911S vehicles.




OIL COOLING SYSTEM AND OIL CIRCUIT SCHEMATIC


TYPE 911 S VEHICLES (FROM 72-MODELS)

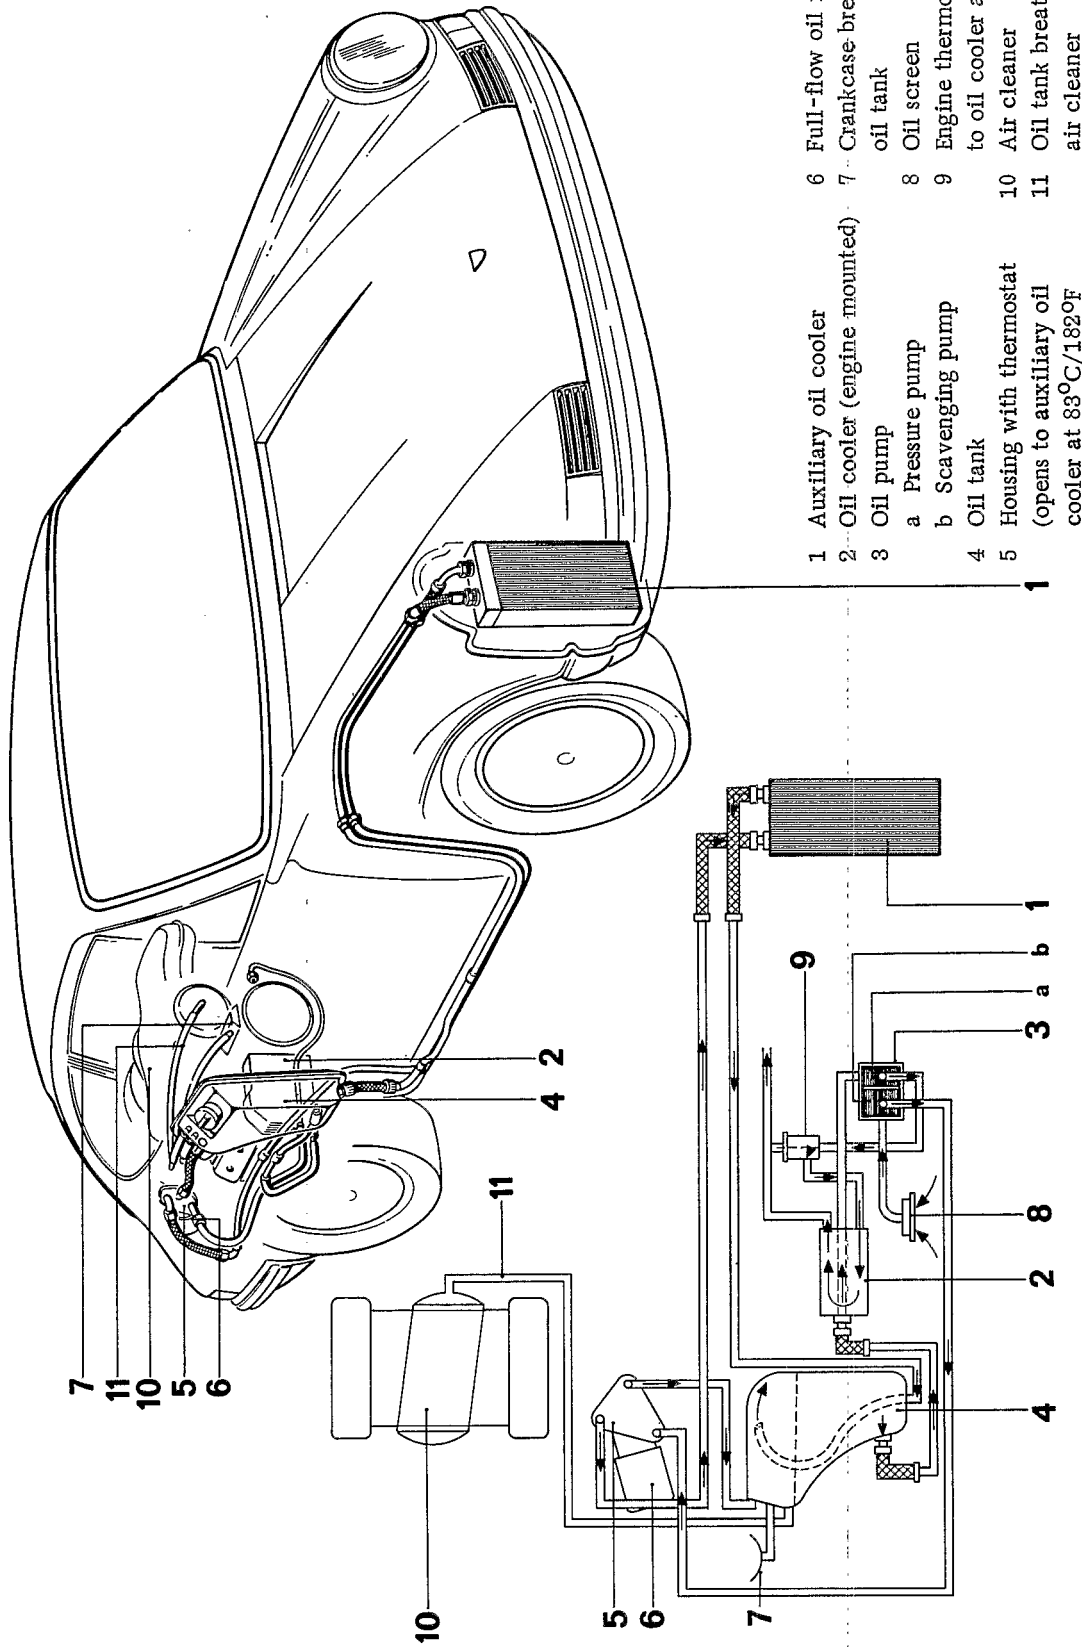

OIL COOLER SCHEMATIC


TYPE 911S VEHICLES (FROM 1973-MODEL ON)

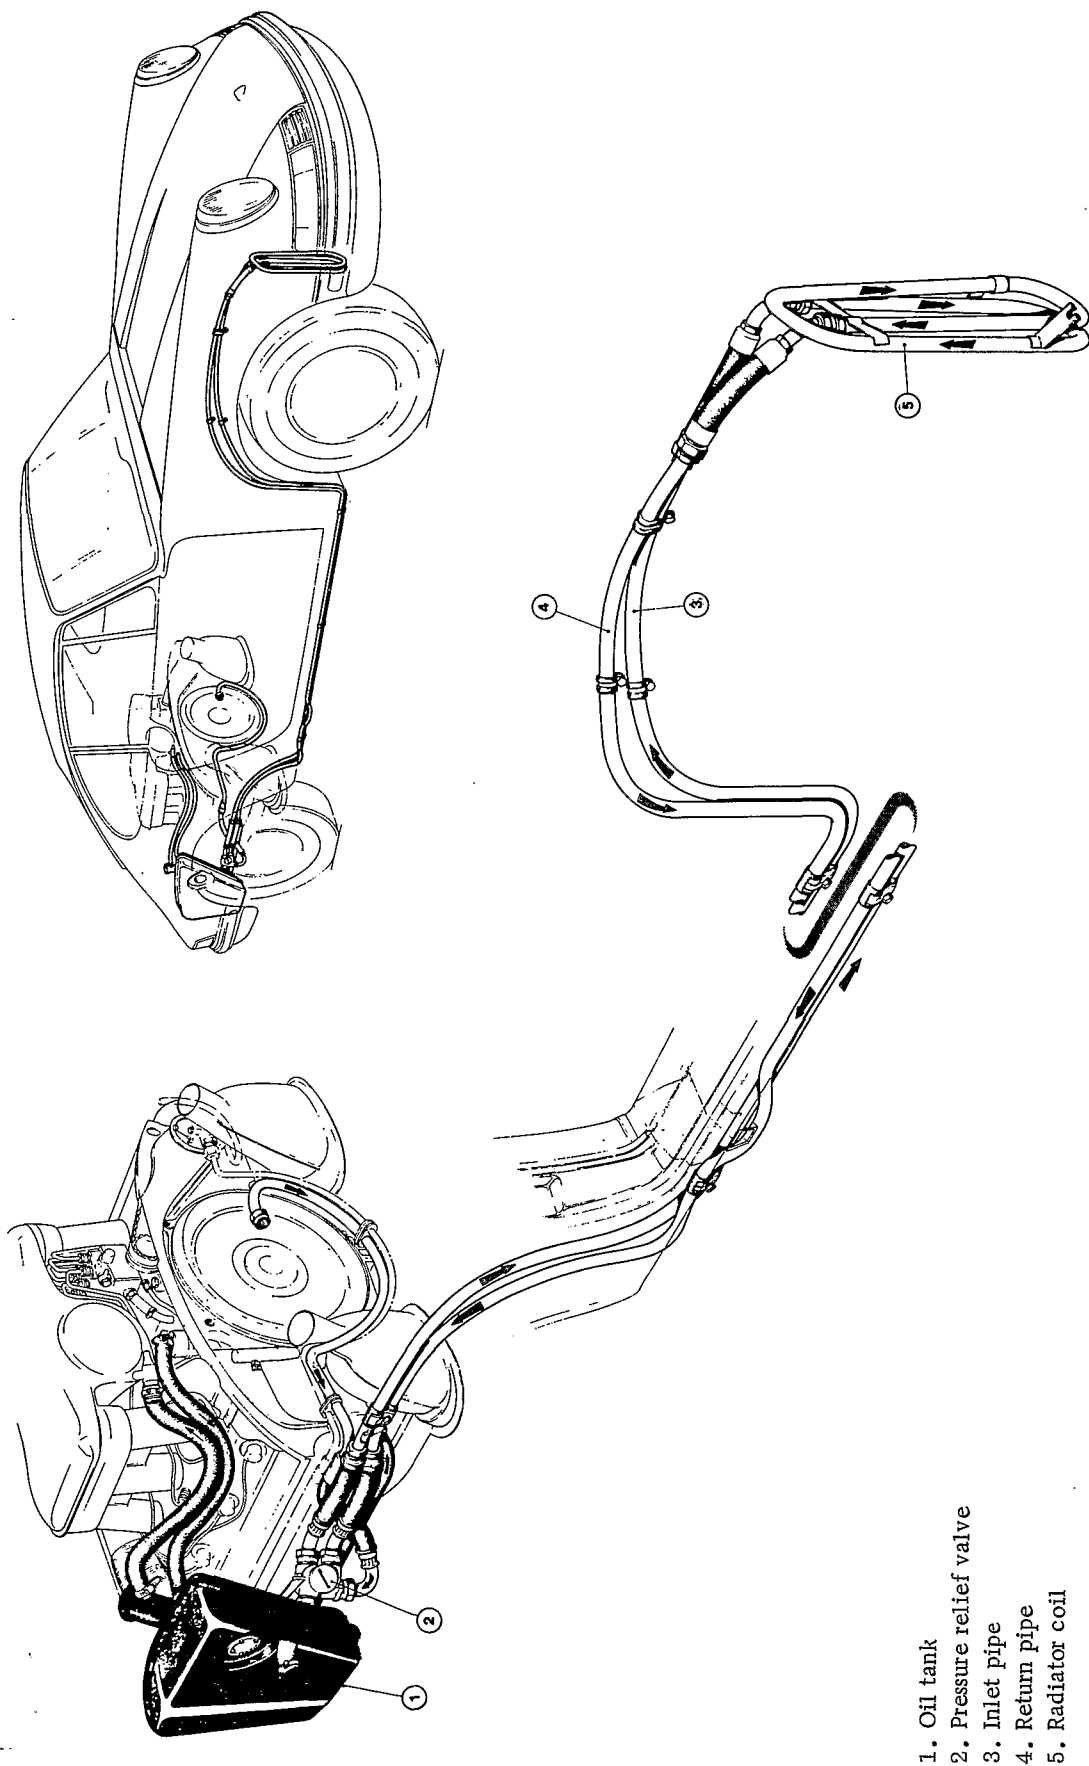

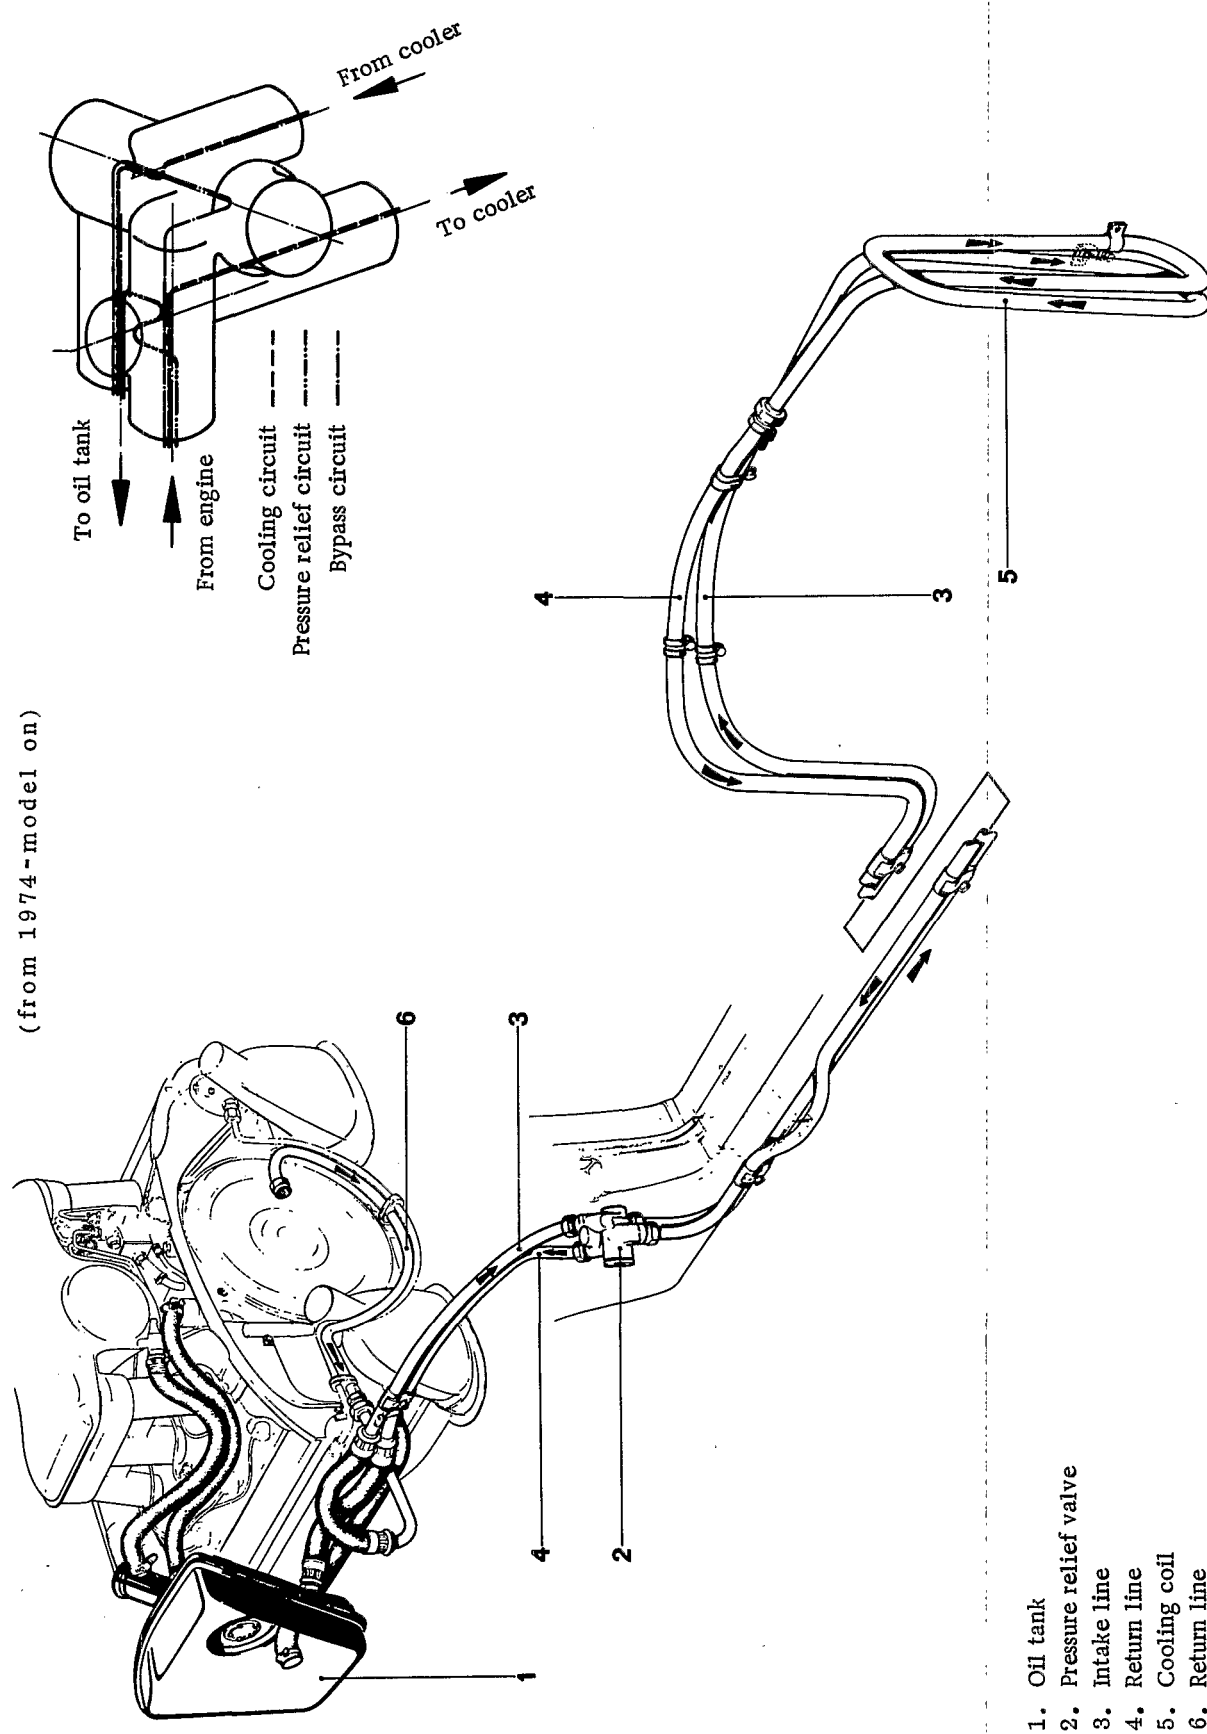


(from 1974-model on)

- 1. Oil tank
- 2. Pressure relief valve
- 3. Intake line
- 4. Return line
- 5. Cooling coil
- 6. Return line

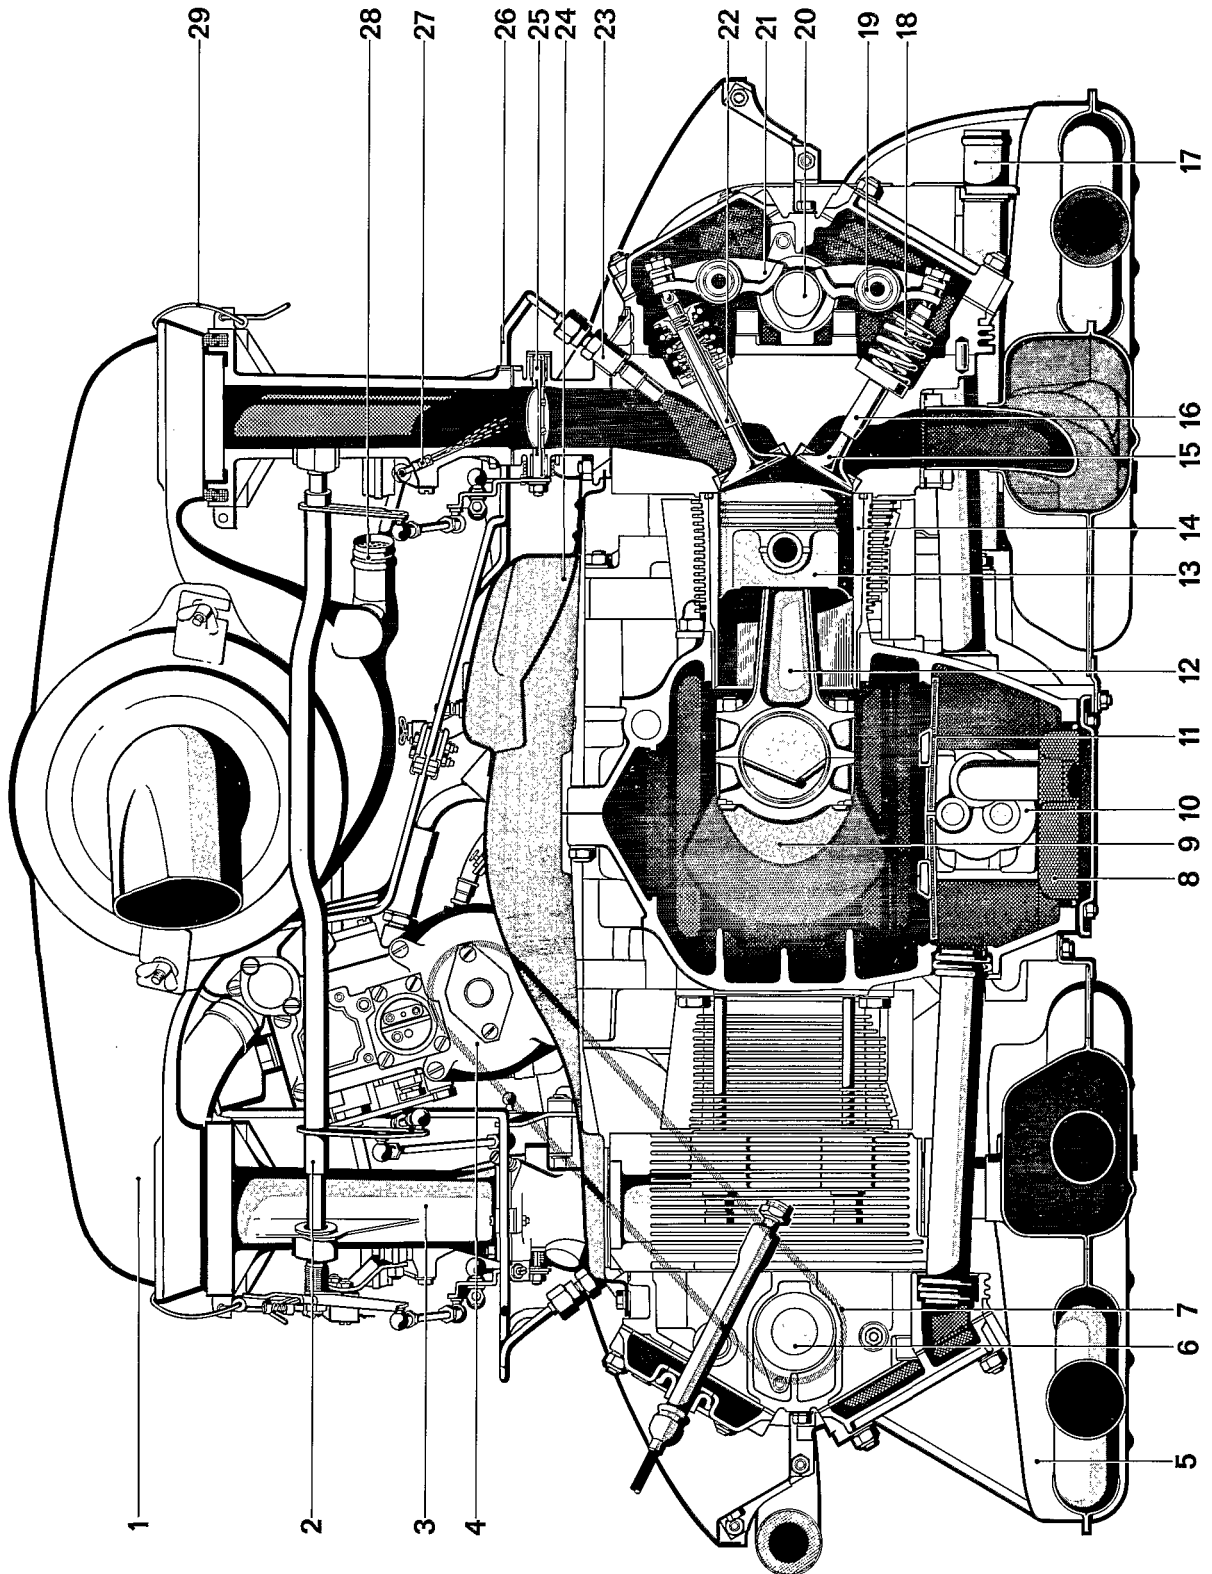

ENGINE CROSS-SECTION

- 1.. Air filter housing
2. Cross-shaft
3. Intake stacks
4. Fuel injection pump
5. Heat exchanger
6. Camshaft
7. Spur belt
8. Oil screen
9. Crankshaft
10. Oil pump
11. Oil screen in crankcase
12. Connecting rod
13. Piston
14. Cylinder
15. Exhaust valve
16. Valve guide
17. Oil hose connector (oil tank to oil pump)
18. Valve spring
19. Rocker arm shaft
20. Camshaft
21. Rocker arm
22. Intake valve
23. Fuel injector
24. Upper air shroud
25. Throttle valve housing
26. Fuel injection line
27. Cold start enrichment nozzle
28. Crankcase ventilation filter
29. Air filter housing retaining clips

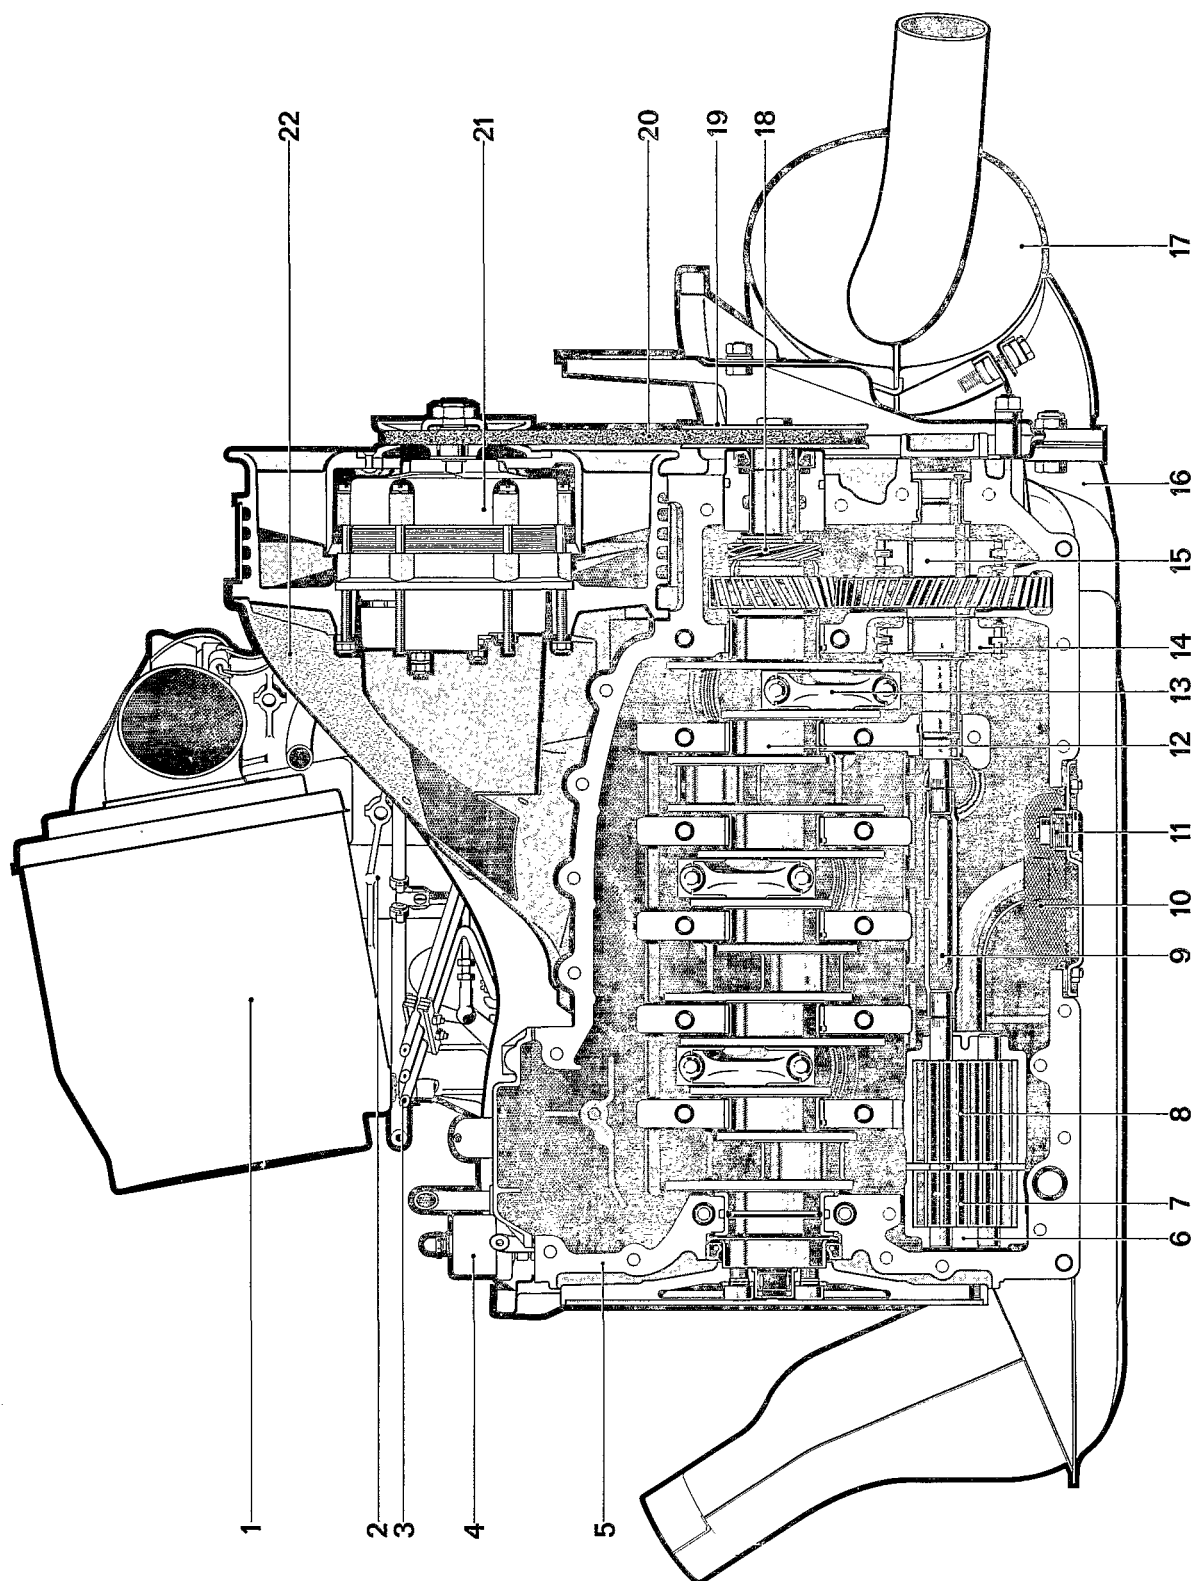

ENGINE SIDE-SECTION


1. Air filter housing
2. Air inlet tube
3. Fuel injection lines
4. Oil pressure sensor
5. Crankcase
6. Oil pump
7. Pressure side (to lubrication points)
8. Suction side (to oil tank)
9. Connecting shaft
10. Oil screen
11. Oil drain plug (magnetic)
12. Crankshaft
13. Connecting rod
14. Sprocket gear
15. Intermediate shaft
16. Heat exchanger
17. Exhaust muffler
18. Distributor drive gear
19. Belt pulley
20. V-belt
21. AC generator
22. Upper air shroud

SPECIFICATIONS FOR THE 2.7 LITER ENGINE WHERE DIFFERING FROM THE
2.4 LITER ENGINE

| | |
|--------------------------|--|
| Crankcase: | Cylinder base bore in crankcase increased from 92 mm dia to 97 mm dia. |
| Pistons: | 90 mm dia instead 84 mm dia Piston pin offset by 0.4 mm instead 0.8 mm. |
| Cylinders: | Cylinder walls coated with NIKASIL compound. Cooling fins reduced from 15 to 11. |
| Ignition distributor: | Advance curve changed. |
| Ignition timing: | TDC at 850 - 950 rpm |
| Spark plugs: (gap in mm) | BOSCH W 265 P 21 (0.55) BOSCH W 260 T 2 (0.7) BERU 265/14/3P (0.55) BERU 260/14/3 (0.7) |
| Throttle valve housing: | Idle air ports enlarged from 3.3 mm dia to 4 mm dia. |


ENGINE CHANGES - BEGINNING WITH 1974 MODELS

1. Type 911, 911 S, and Carrera engines are equipped with NIKASIL light-alloy cylinders with a 90 mm bore.
2. Pistons: Piston heads in Type 911 S engines are marked "A 2". Type 911 pistons, by comparison, have a deeper depression and a higher protrusion, without special markings.

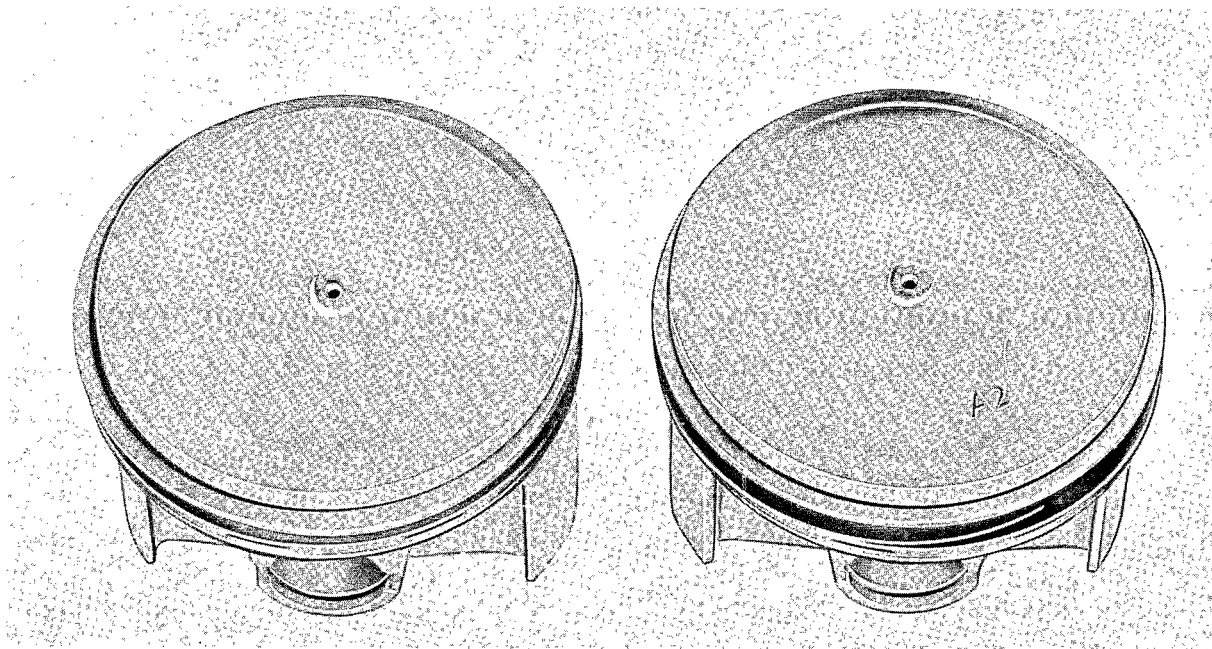


3. Cylinder head: The mounting orifice for the injection valve is discontinued since the valve is relocated to the intake stack.
4. Type 911 and 911 S engines received modified camshafts with changed valve timing.

CROSS SECTION OF ENGINE WITH EMISSION CONTROL EQUIPMENT

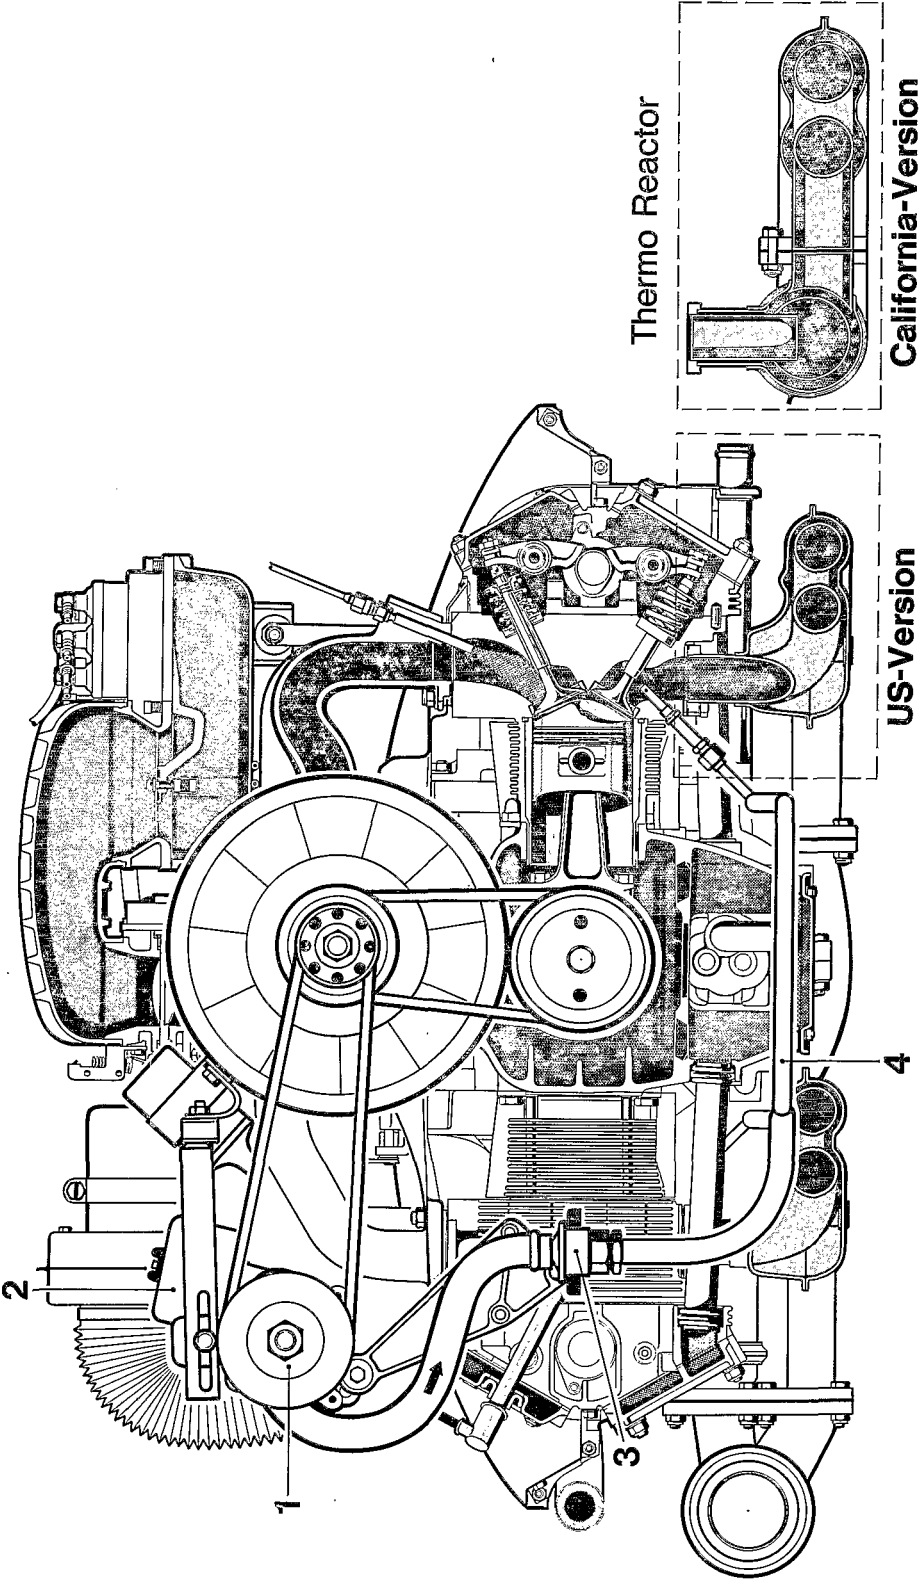

- 1 Air pump
- 2 Air pump filter
- 3 Check valve
- 4 Exhaust port air line


LAYOUT OF EXHAUST GAS RECIRCULATION SYSTEM

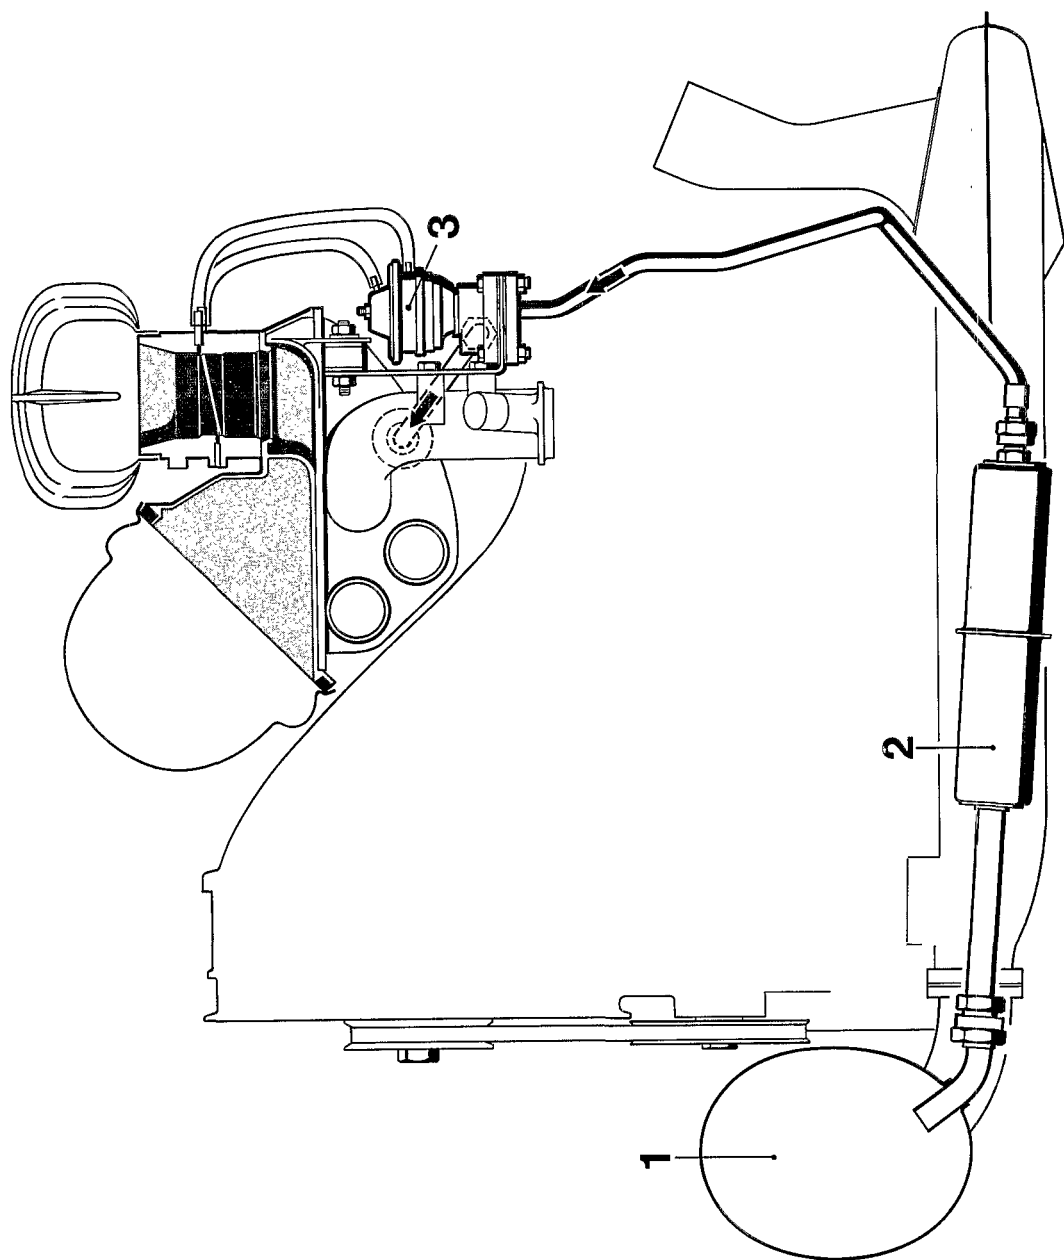

- 1 Muffler
- 2 EGR filter
- 3 EGR valve


Operation: The EGR valve is opened by vacuum from the intake manifold in two stages at partial throttle. In this way exhaust gases flow into the intake housing and are mixed with fresh gas. The amount of nitrogen oxide - NO_x - in the exhaust gas is reduced through the controlled dilution of the fuel-air mixture.

CROSS SECTION VIEW OF ENGINE WITH EMISSION CONTROL 911 SC
(1978/1979 Models)

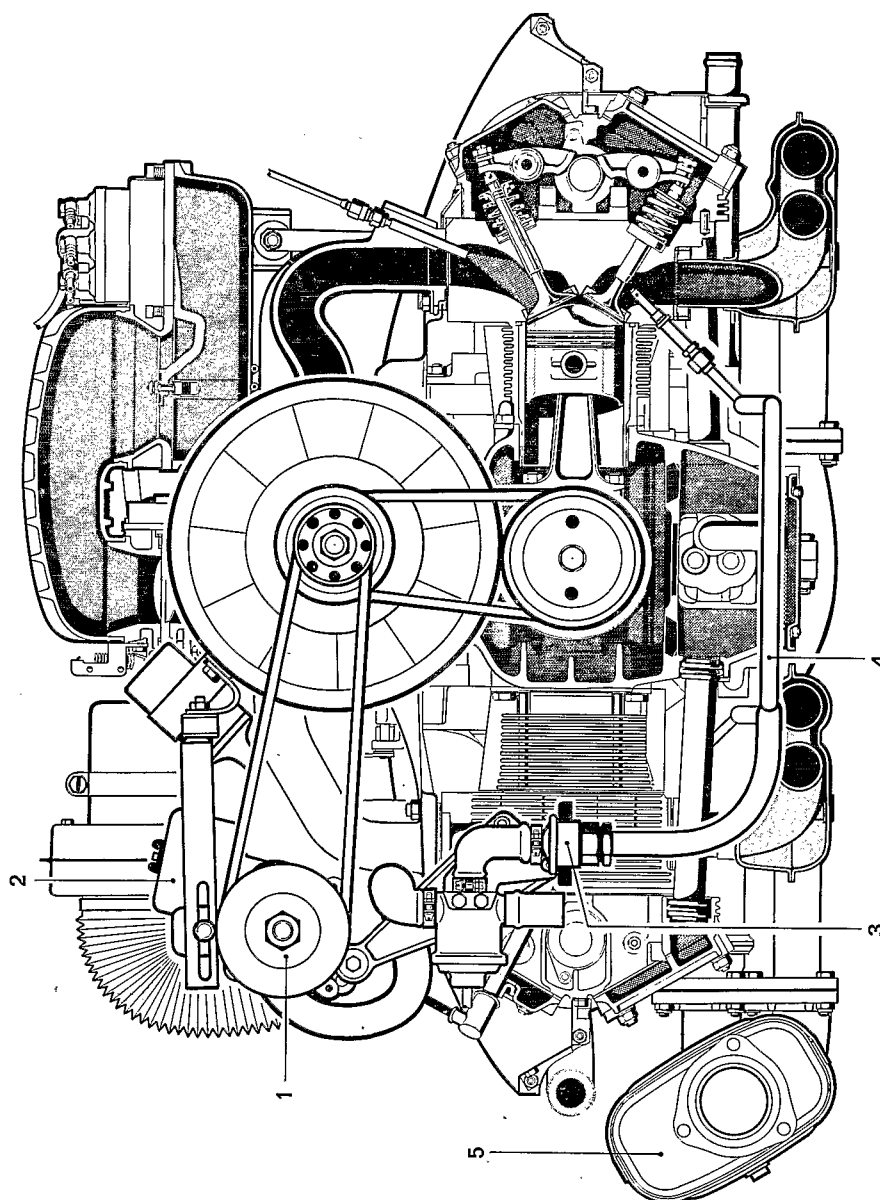

- 1 - Air pump
- 2 - Air pump filter
- 3 - Check valve
- 4 - Air line to exhaust port
- 5 - Catalytic converter

LAYOUT DRAWING OF EMISSION CONTROL 911 SC
(1980 Model)

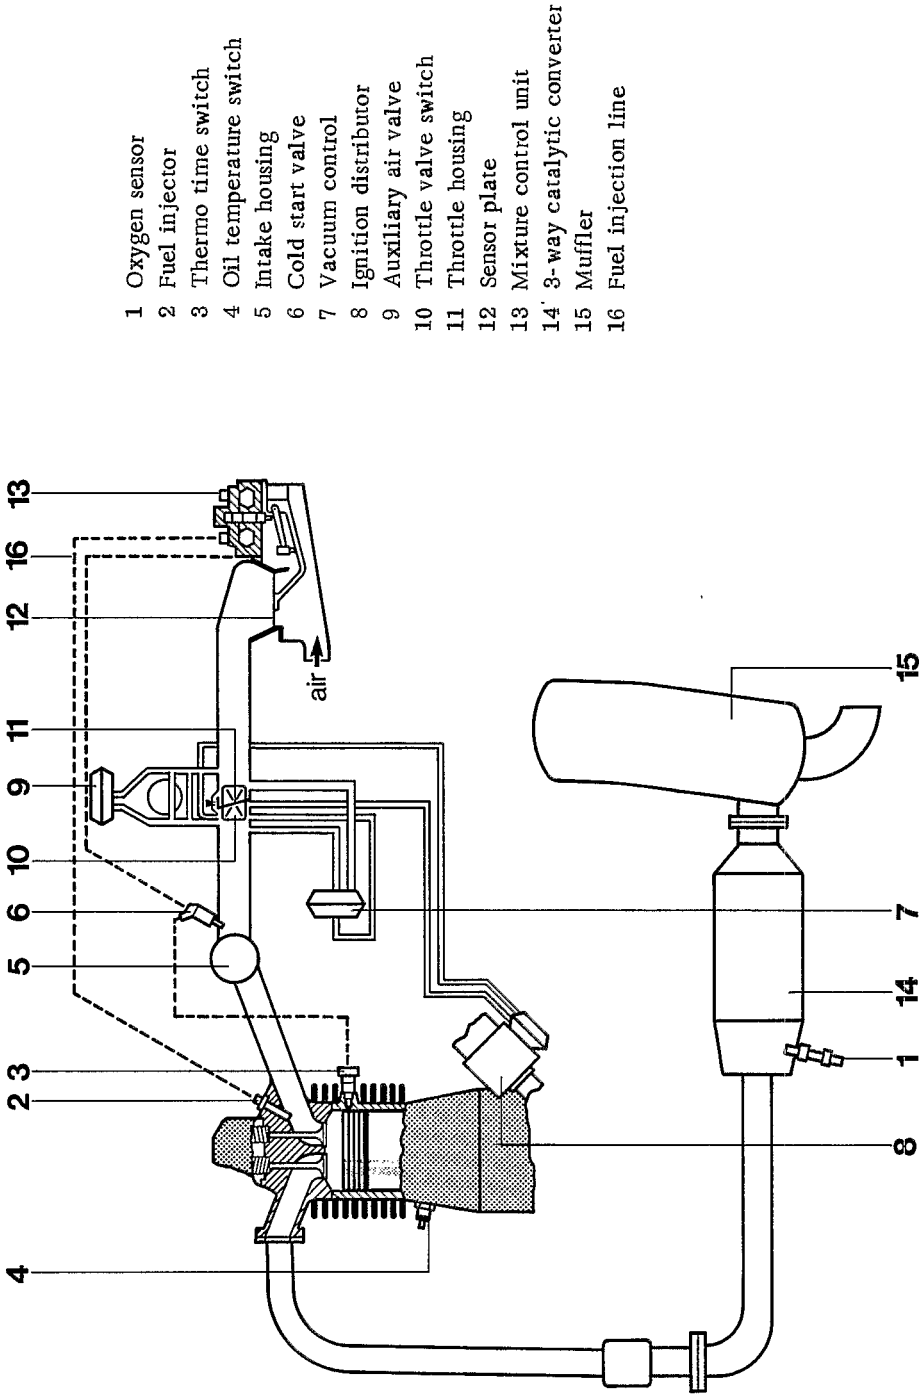

TECHNICAL DATA - TYPE 911 VEHICLES BEGINNING WITH 1972 MODELS

| | 911 T | 911 E | 911 S |
|-------------------------|--|--------------------------------------|-------------------------|
| ENGINE | | | |
| Type | four-stroke gasoline engine with two opposing cylinder banks | | |
| Number of cylinders | 6 | 6 | 6 |
| Cylinder arrangement | | horizontal, three cylinders per bank | |
| Bore | 84 mm (3.31 in.) | 84 mm (3.31 in.) | 84 mm (3.31 in.) |
| Stroke | 70.4 mm (2.77 in.) | 70.4 mm (2.77 in.) | 70.4 mm (2.77 in.) |
| Engine displacement | 2341 cc (142.8 cu. in.) | 2341 cc (142.8 cu. in.) | 2341 cc (142.8 cu. in.) |
| Compression ratio | 7.5 : 1 | 8.0 : 1 | 8.5 : 1 |
| Horsepower rating (DIN) | 140 | 165 | 190 |
| (SAE Net) | 137 | 157 | 181 |
| Maximum torque (DIN) | 20 mkgp | 21 mkgp | 22 mkgp |
| (SAE) | 166 ft/lb | 174 ft/lb | 181 ft/lb |
| @ engine speed | 4000 rpm | 4500 rpm | 5200 rpm |

| | 911 T | 911 E | 911 S |
|--|--|--|--|
| Specific power output per liter (DIN HP) | 60 | 70 | 81 |
| (SAE Net HP) | 67 | 79 | 90 |
| Nominal piston speed @ maximum power | 13.1 m/sec | 14.5 m/sec | 15.2 m/sec |
| Maximum engine revolutions | 6500 rpm | 7100 rpm | 7300 rpm |
| Required fuel rating | 91 octane | 91 octane | 91 octane |
| Cooling | air cooled by fan on alternator shaft | air cooled by fan on alternator shaft | air cooled by fan on alternator shaft |
| Cooling fan drive | by V-belt from crankshaft | by V-belt from crankshaft | by V-belt from crankshaft |
| Crankshaft/blower ratio | 1 : 1.3 | 1 : 1.3 | 1 : 1.3 |
| Air flow rate | approx. 1230 ltr/sec @ 5800 rpm | approx. 1380 ltr/sec @ 6500 rpm | approx. 1380 ltr/sec @ 6500 rpm |


| | 911 T | 911 E | 911 S |
|-----------------------------|--|--|---|
| Lubrication | dry sump | dry sump | dry sump |
| Oil cooling | oil cooler on crankcase in fan air stream | oil cooler on crankcase in fan air stream | oil cooler on crankcase in fan air stream; auxiliary cooler in front of vehicle |
| Oil filter | full flow | full flow | full flow |
| Oil consumption | 1, 5 - 2 ltr/1000 km 1, 5 - 2 US qts/600 mi | 1, 5 - 2 ltr/1000 km 1, 5 - 2 US qts/600 mi | 1, 5 - 2 ltr/1000 km 1, 5 - 2 US qts/600 mi |
| Crankcase | two-piece pressure casting of aluminum/magnesium alloy | two-piece pressure casting of aluminum/magnesium alloy | two-piece pressure casting of aluminum/magnesium alloy |
| Crankshaft | forged, surface-hardened | forged, surface-hardened | forged, surface-hardened |
| Intermediate shaft bearings | two, plain-journal | two, plain-journal | two, plain-journal |
| Crankshaft bearings | eight, plain-journal | eight, plain-journal | eight, plain-journal |
| Main bearings 1-7 | split inserts, 3-layer | split inserts, 3-layer | split inserts, 3-layer |
| Main bearing 1 | thrust bearing | thrust bearing | thrust bearing |
| Main bearing 8 | one-piece bushing, hard-lead lined | one-piece bushing, hard-lead lined | one-piece bushing, hard-lead lined |

| | 911 T | 911 E | 911 S |
|-------------------------|--|---|--|
| Connecting rods | forged steel | forged steel | forged steel, surface-hardened (Tenifer) |
| Connecting rod bearings | split inserts, 3-layer bronze, pressed-in | split inserts, 3-layer bronze, pressed-in | split inserts, 3-layer bronze, pressed-in |
| Piston pin bushings | light alloy, die-cast | light alloy, die-cast | light alloy, forged |
| Pistons | floating, with circlips | floating, with circlips | floating, with circlips |
| Piston pins | two compression rings one oil scraper | two compression rings one oil scraper | two compression rings one oil scraper |
| Piston rings | individual, grey cast iron with integral cooling fins | individual, grey cast iron sleeve with finned light alloy jacket | individual, grey cast iron sleeve with finned light alloy jacket |
| Cylinders | light alloy, finned individual castings for each cylinder | light alloy, finned individual castings for each cylinder | light alloy (Y-alloy), finned individual castings for each cylinder |
| Cylinder heads | shrunk-in, grey-cast iron | shrunk-in, grey-cast iron | shrunk-in, grey-cast iron |
| Valve seat inserts | shrunk-in, special bronze | shrunk-in, special bronze | shrunk-in, special bronze |
| Valve guides | | | |

| | 911 T | 911 E | 911 S |
|---|---|---|---|
| Spark plug threads | M 14 x 1, 25, machined into cylinder heads | M 14 x 1, 25, machined into cylinder heads | M 14 x 1, 25, machined into cylinder heads |
| Valves | 1 intake, 1 exhaust valve per cylinder | 1 intake, 1 exhaust valve per cylinder | 1 intake, 1 exhaust valve per cylinder |
| Valve arrangement | overhead in "V" | overhead in "V" | overhead in "V" |
| Exhaust valves | sodium cooled, with reinforced seat | sodium cooled, with reinforced seat | sodium cooled, with reinforced seat |
| Valve springs | 2 coil springs per valve | 2 coil springs per valve | 2 coil springs per valve |
| Valve timing | OHC, 1 camshaft per cylinder bank | OHC, 1 camshaft per cylinder bank | OHC, 1 camshaft per cylinder bank |
| Camshafts | cast steel, in three plain bearings in base metal of camshaft housing | cast steel, in three plain bearings in base metal of camshaft housing | cast steel, in three plain bearings in base metal of camshaft housing |
| Camshaft drive | by chain | by chain | by chain |
| Valve clearance, cold, intake and exhaust | 0.10 mm (0.004 in.) measured between valve stem and rocker arm | 0.10 mm (0.004 in.) measured between valve stem and rocker arm | 0.10 mm (0.004 in.) measured between valve stem and rocker arm |


| | 911 T | 911 E | 911 S |
|---|---|---|---|
| Valve timing with 1 mm (0.040 in.) valve clearance | | | |
| inlet opens | 16° BTC | 16° BTC | 38° BTC |
| inlet closes | 30° ATC | 30° ATC | 50° ATC |
| exhaust opens | 42° BTC | 42° BTC | 40° BTC |
| exhaust closes | 4° BTC | 4° BTC | 20° ATC |
| Intake valve lift at overlap TC with 0.1 mm (0.004 in.) valve clearance | | | |
| | 2, 4 - 2, 8 mm | 2, 4 - 2, 8 mm | 5.0 - 5.4 mm |
| Ignition type | capacitive discharge system (CDS) | capacitive discharge system (CDS) | capacitive discharge system (CDS) |
| Firing order | 1-6-2-4-3-5 | 1-6-2-4-3-5 | 1-6-2-4-3-5 |
| Ignition transformer | BOSCH | BOSCH | BOSCH |
| Distributor (either kind) | MARELLI 50.10.974.1 BOSCH JFUDR6 0231169003 | MARELLI 50.10.974.2 BOSCH JFUDR6 0231169004 | MARELLI 50.10.974.3 BOSCH JFUDR6 0231169005 |
| Spark advance | centrifugal and vacuum | centrifugal and vacuum | centrifugal and vacuum |
| Basic ignition timing | 5° ATC @ 900 rpm | 5° ATC @ 900 rpm | 5° ATC @ 900 rpm |
| Dwell angle | BOSCH 38° ± 3° MARELLI 40° ± 3° | BOSCH 38° ± 3° MARELLI 40° ± 3° | BOSCH 38° ± 3° MARELLI 40° ± 3° |

Full-power Performance Type 911 TUSA

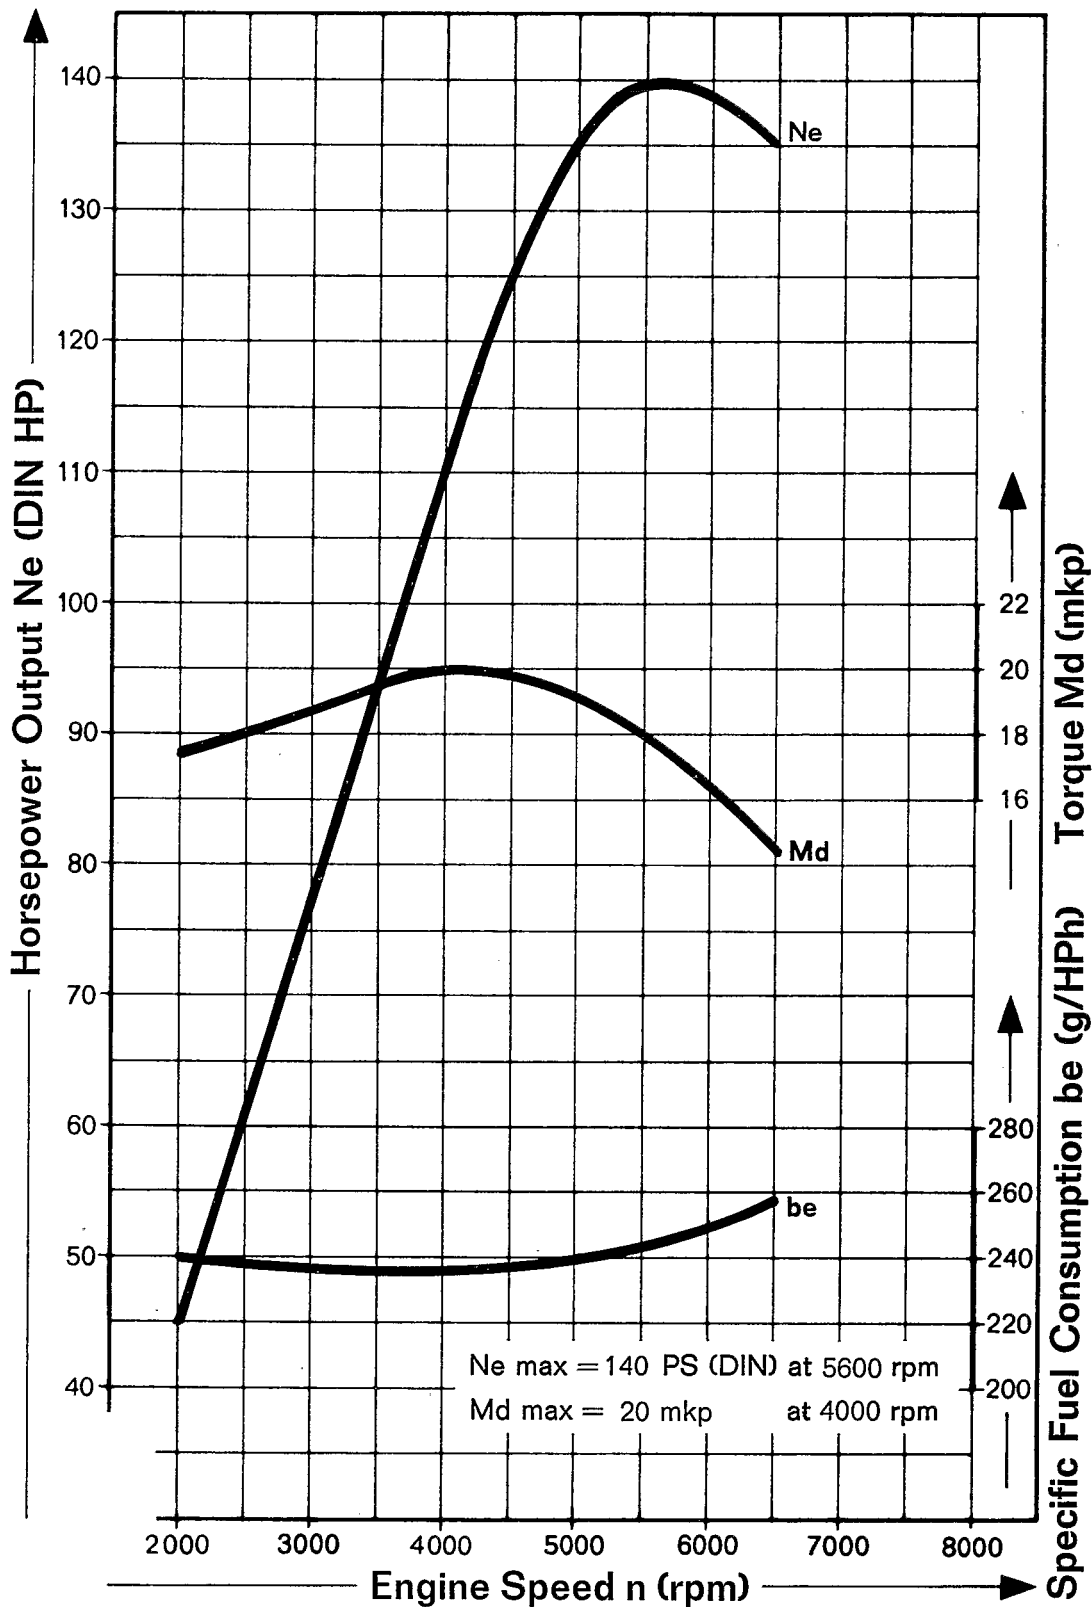


Full-power Performance

Type 911 E

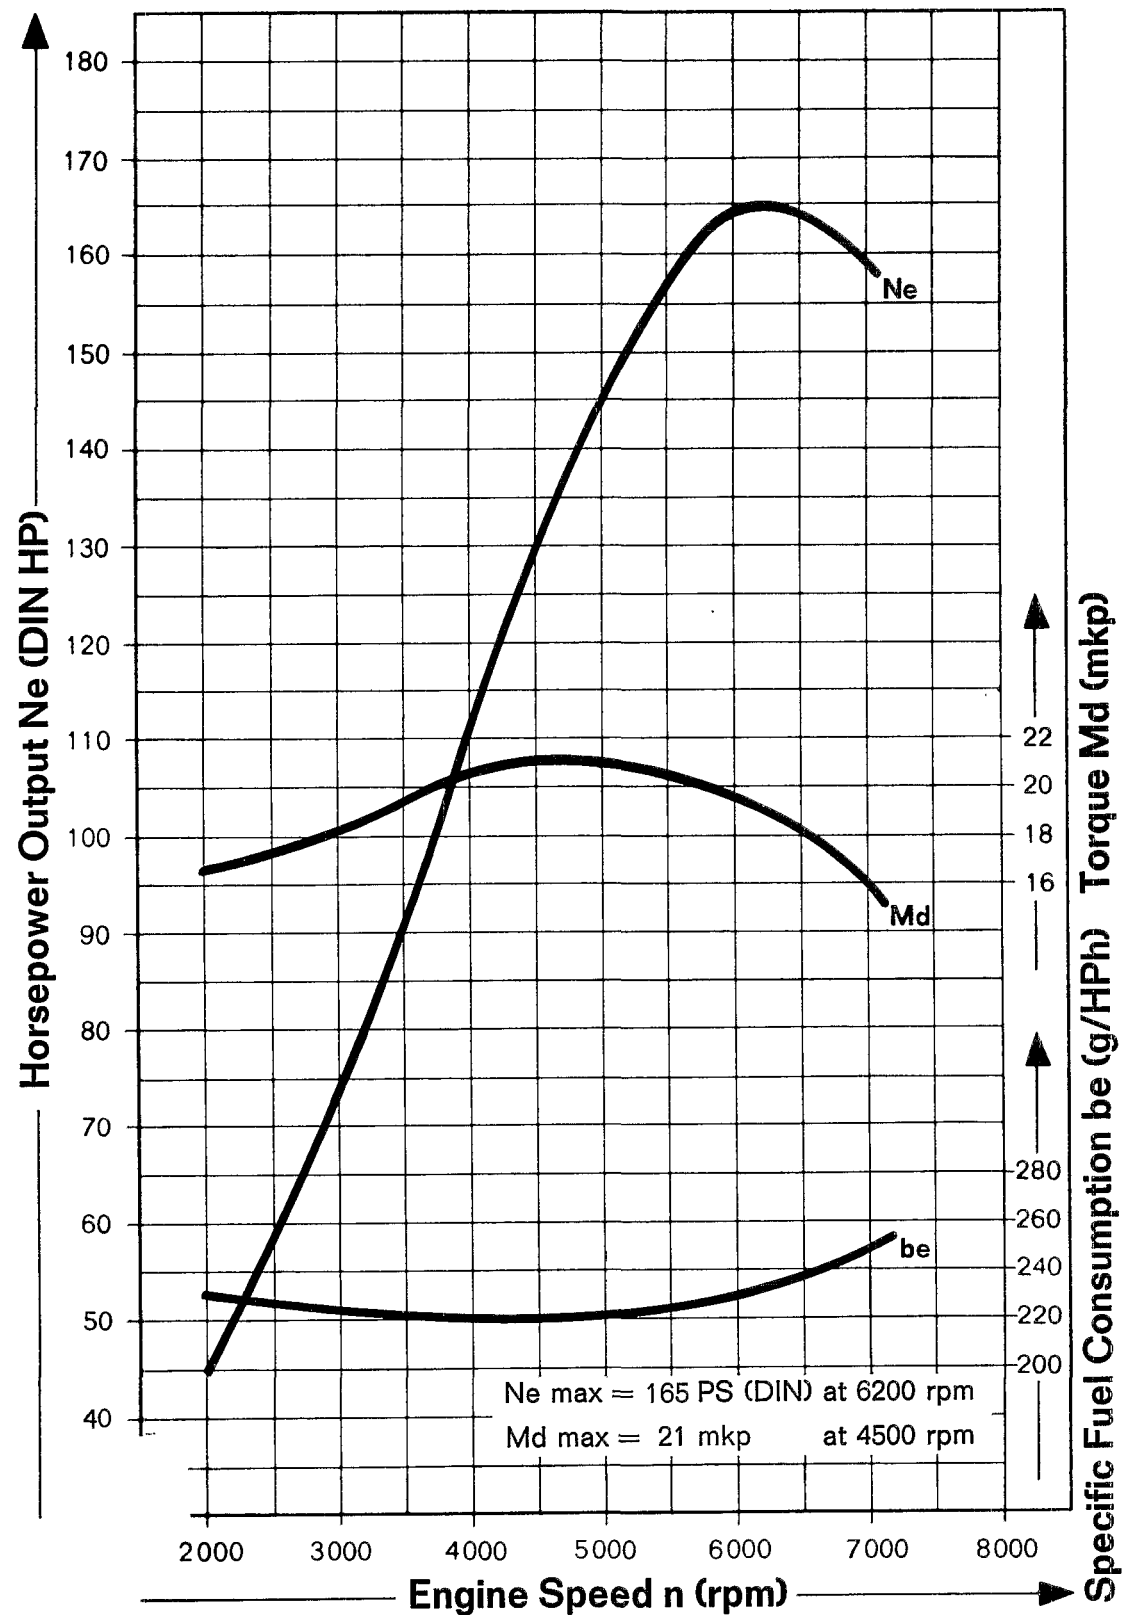


Full-power Performance

Type 911 S

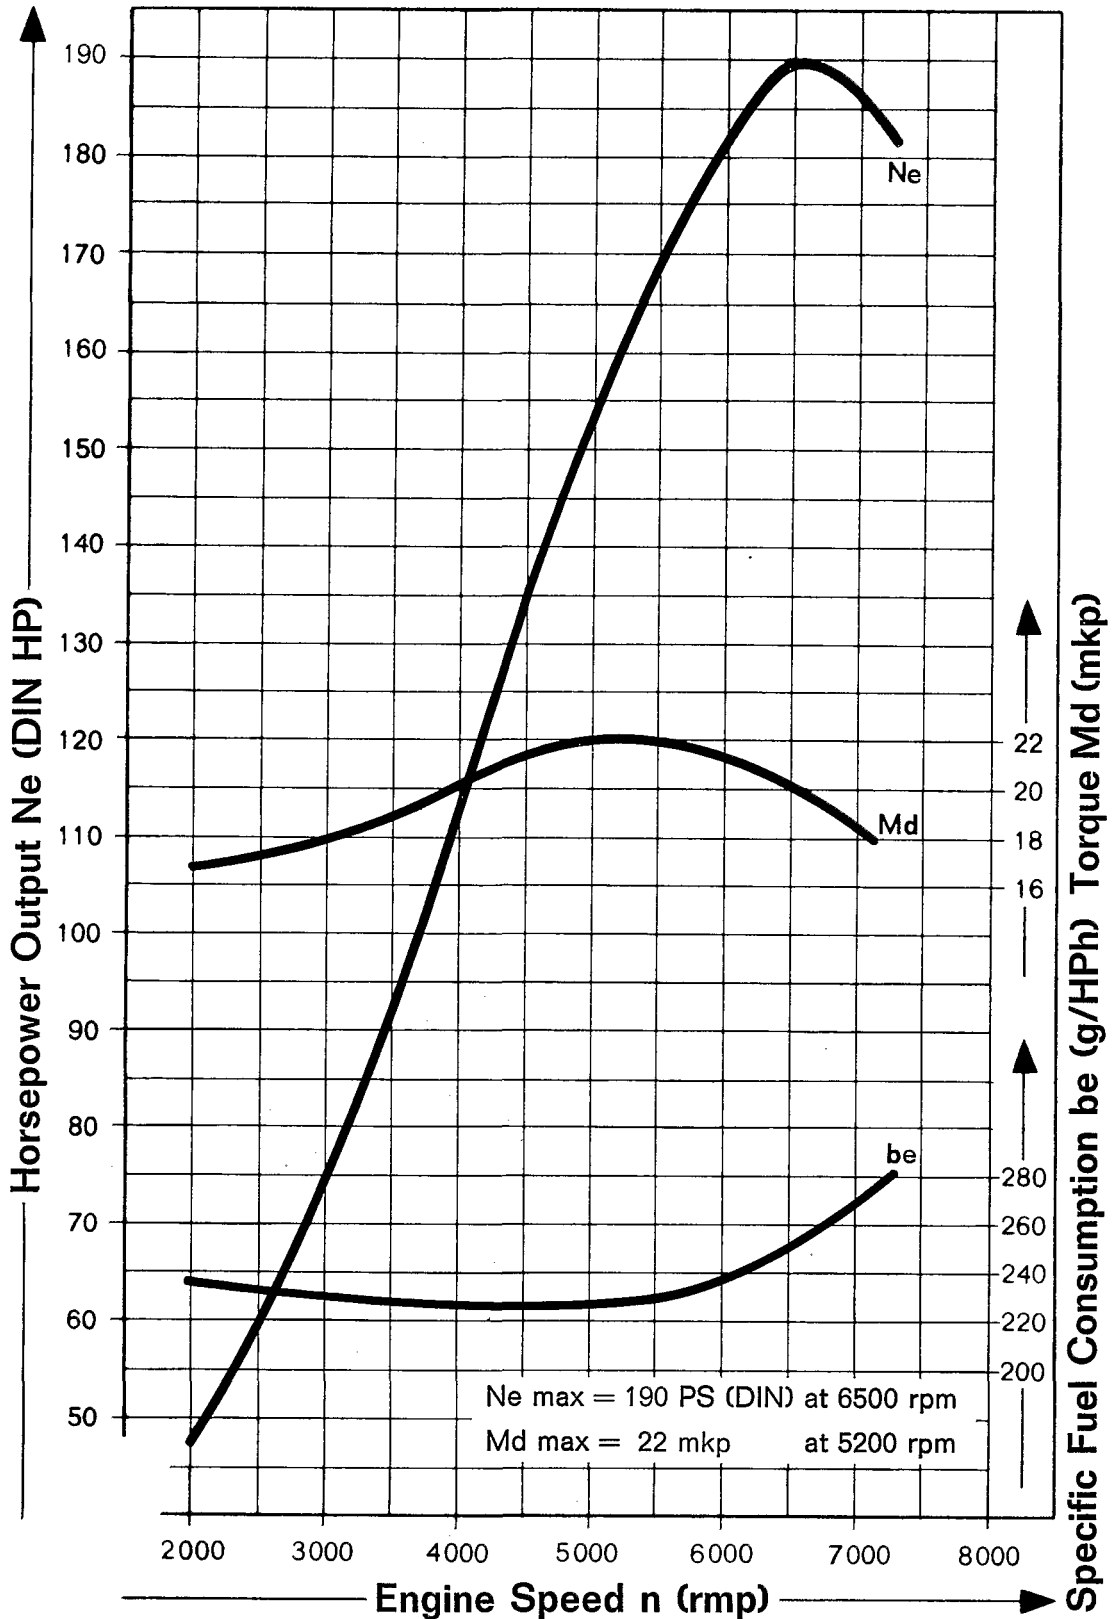

Full-power Performance

Carrera

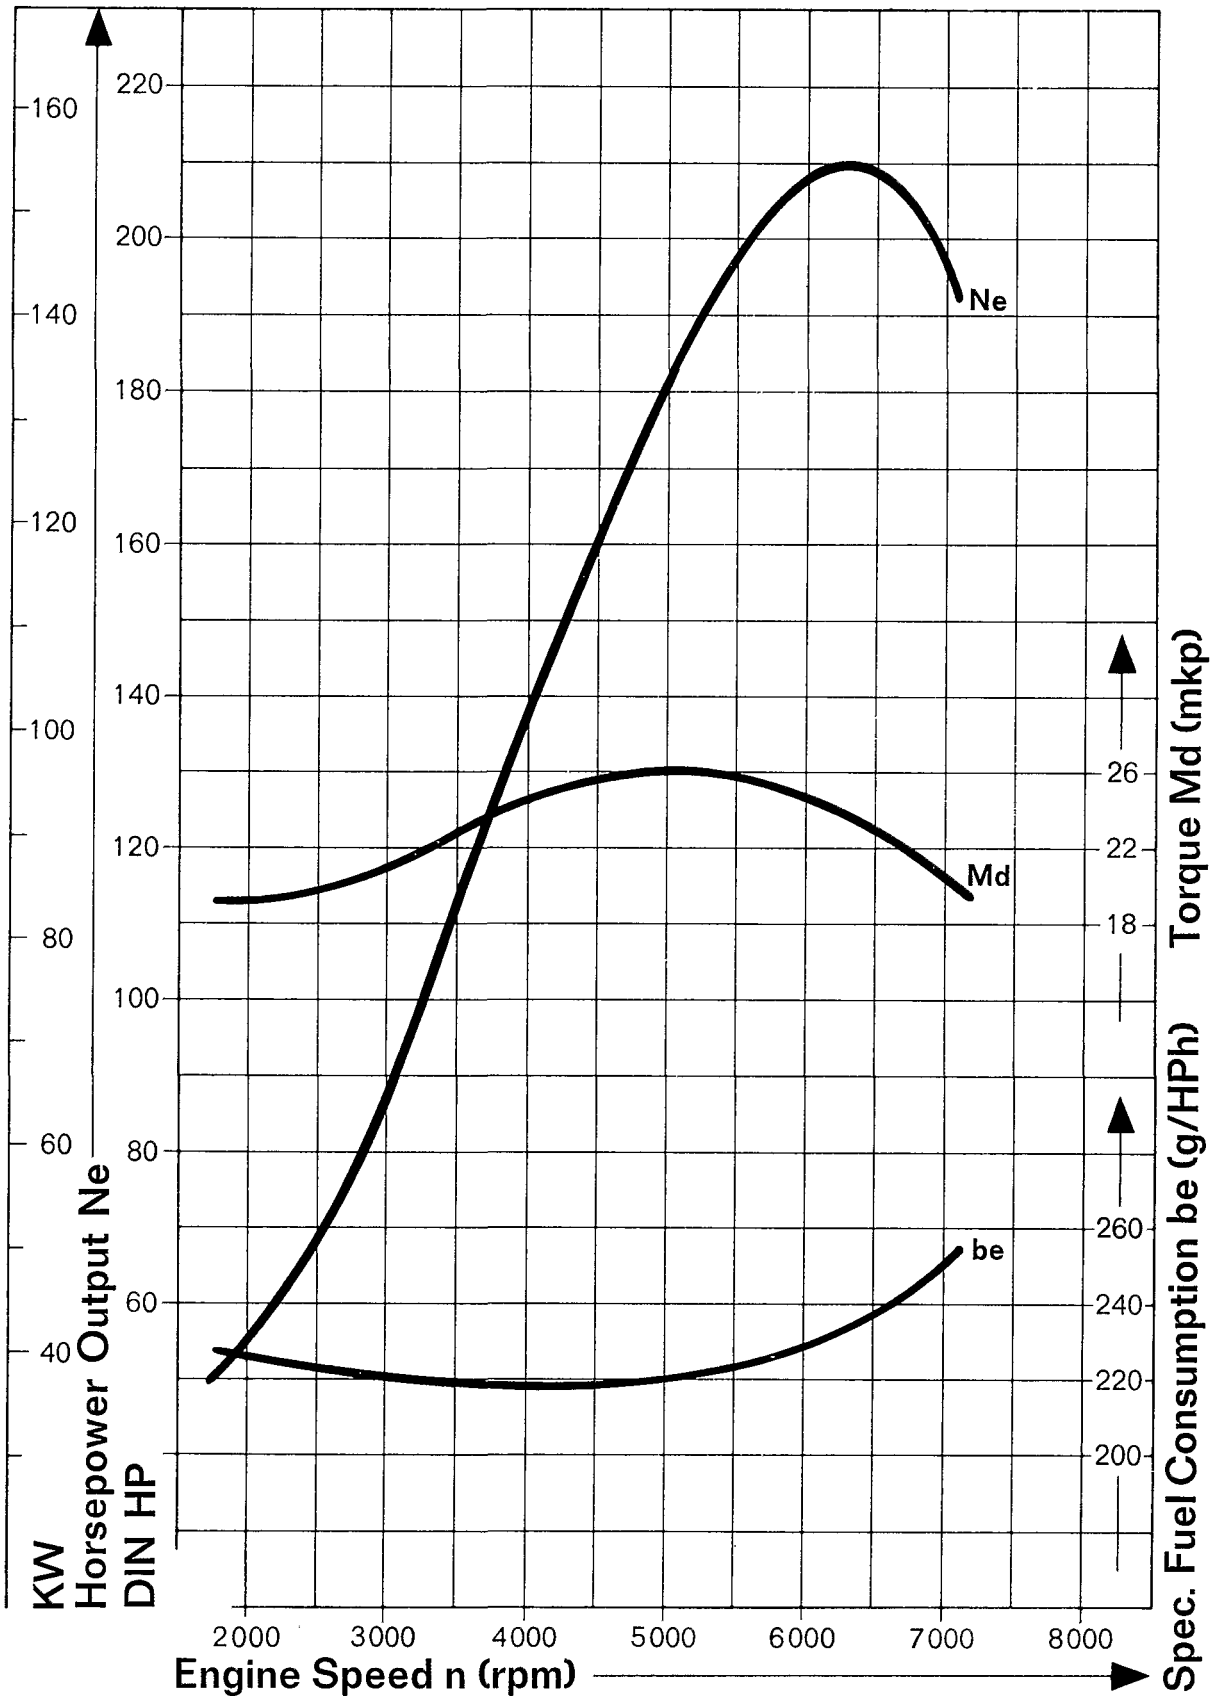

TECHNICAL DATA FOR CARRERA 2.7 FROM 1973 MODEL

Engine

| | |
|--|-----------------|
| Number of cylinders | 6 |
| Bore, mm | 90 |
| Stroke, mm | 70.4 |
| Displacement, actual, cc | 2687 |
| Displacement, tax formula, cc | 2653 |
| Compression ratio | 8.5 : 1 |
| Max. horsepower, DIN HP or KW at crankshaft rpm | 210/154 6300 |
| Max. torque, DIN kpm or Nm at crankshaft rpm | 26/255 5100 |
| Specific power output, DIN HP/1 or KW/1 | 78/57 |
| Required fuel rating, min. RON | 91 |
| Nominal fuel consumption, ltr/100 km | 10.8 |
| Engine weight, kg or lbs | approx. 182/402 |

Cylinders and Pistons

| | |
|-------------------|---|
| Cylinder material | Light alloy with NIKASIL-coated cylinder bore |
| Piston material | Forged, aluminum alloy |

Ignition

| | |
|---------------------------|---|
| Ignition distributor | BOSCH Nr. 023 116 9011 MARELLI Nr. 610 15 155 |
| Breaker point gap | 0.35 BOSCH and MARELLI |
| Dwell angle | BOSCH $38 \pm 3^\circ$ MARELLI $37 \pm 3^\circ$ |
| Basic ignition adjustment | TDC at 900 \pm 50 rpm |
| Spark plugs (gap in mm) | BOSCH W 265 P 21 (0.55) BOSCH W 260 T 20 (0.7) BERU 265/14/3P (0.55) BERU 260/14/3 (0.7) |
| Fuel injection pump | BOSCH No. 0408 126 019 PORSCHE No. 911 110 254 00 |

TECHNICAL DATA, TYPE 911T - USA CONTINUOUS INJECTION SYSTEM

Internal designation

911/91 with manual transmission

911/96 with Sportomatic

| | | |
|-------------------------------------|------|---------|
| Horsepower rating (DIN) in HP or KW | max. | 140/103 |
| @ crankshaft rpm | | 5700 |

| | |
|---------------------------|----------|
| Torque (DIN) in kpm or Nm | 20.5/201 |
| @ crankshaft rpm | 4000 |

| | | |
|--|------|-------|
| Specific power output (DIN) in HP/liter or KW/liter | max. | 60/44 |
|--|------|-------|

| | |
|-------------------|---------|
| Compression ratio | 8.0 : 1 |
|-------------------|---------|

| | |
|-----------------------------------|----|
| Required octane rating - research | 91 |
|-----------------------------------|----|

| | |
|--|-----|
| Nominal fuel consumption (DIN) in ltr/100 km | 9.0 |
|--|-----|

| | | |
|---------------------------|---------|-----------|
| Engine weight in kg or lb | approx. | 183 (404) |
|---------------------------|---------|-----------|

Valve Timing

| | |
|--|----------------|
| Camshaft, left, part number | 911 105 141 00 |
| Camshaft, right, part number | 911 105 142 00 |
| Camshaft identification, left | 141.00 |
| Camshaft identification, right | 142.00 |
| Cam height and base circle radius, intake | 38.43 mm |
| Cam height and base circle radius, exhaust | 37.38 mm |

Intake valve lift at TDC overlap, with 1 mm
valve clearance

| | |
|---------------|--------|
| intake valve | 9.6 mm |
| exhaust valve | 8.8 mm |

Valve timing with 1 mm valve clearance, in
degrees of crankshaft rotation

| | |
|----------------|---------|
| exhaust opens | 30° BBC |
| exhaust closes | 10° BTC |
| intake opens | 0° BTC |
| intake closes | 32° ABC |

| | |
|-----------------------------|--------------|
| Ignition timing | 5° ATC |
| at idle speed (engine warm) | 900 ± 50 rpm |

Spark plugs


| | |
|-------|------------|
| BOSCH | W 235 P 21 |
|-------|------------|

| | |
|------|-----------|
| BERU | 235/14/3P |
|------|-----------|

| | |
|---------------|---------|
| Electrode gap | 0.55 mm |
|---------------|---------|

Full-power Performance

Type 911 T

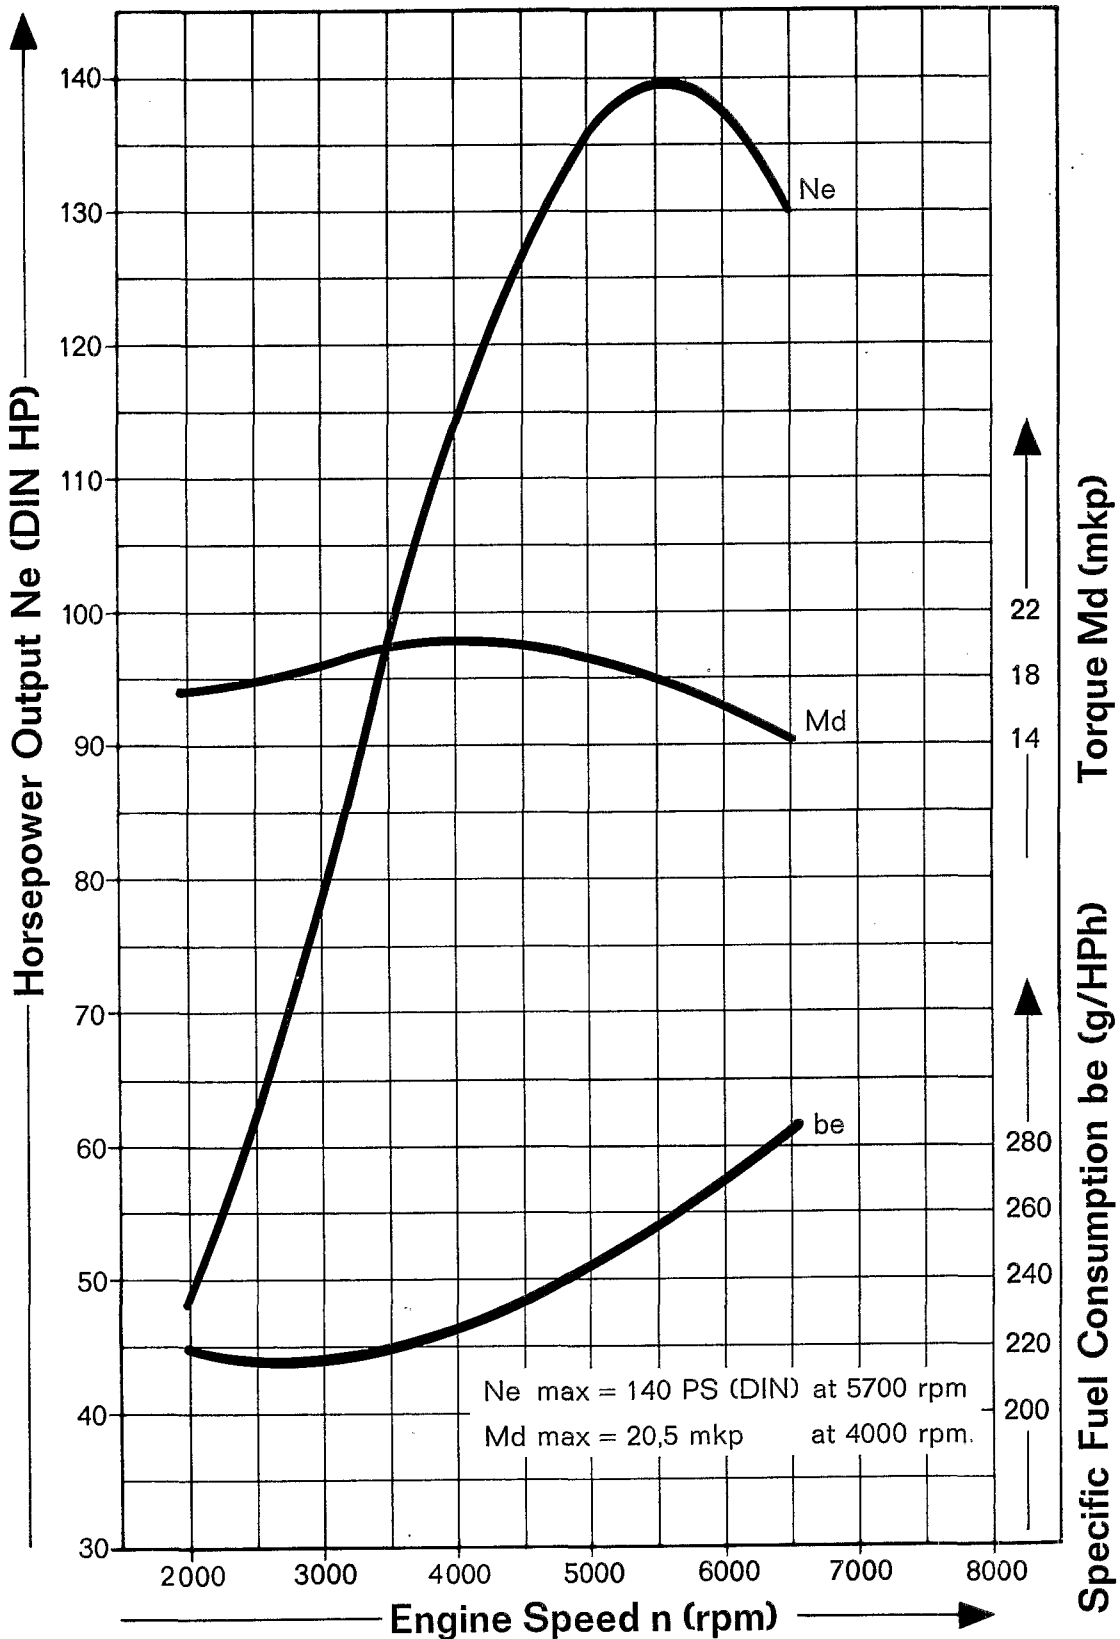

TECHNICAL DATA FOR TYPE 911 VEHICLES BEGINNING WITH 1974 MODELS

911 911 S/CARRERA

MOTOR

| Type | four-stroke gasoline engine with two opposing cylinder banks | |
|-----------------------------------|--|-------------------------------------|
| Number of cylinders | 6 | 6 |
| Cylinder arrangement | horizontal, 3 cylinders per bank | horizontal, 3 cylinders per bank |
| Bore, mm (inch) | 90 (3.54) | 90 (3.54) |
| Stroke, mm (inch) | 70.4 (2.77) | 70.4 (2.77) |
| Displacement, actual, cc (CID) | 2687 (163.97) | 2687 (163.97) |
| Compression ratio | 8 : 1 | 8.5 : 1 |
| Horsepower rating, max.: | | |
| according to DIN 70020, HP/KW | 150/110 | 175/129 |
| according to SAE J 245, net HP/KW | 143/107 | 167/125 |
| all at crankshaft rpm of | 5700 | 5800 |

Max. torque:

according to DIN 70020, kpm/Nm

according to SAE J 245, net lb.ft./Nm

all at crankshaft rpm of

Specific power output:

according to DIN 70020, HP/ltr or KW/ltr

according to SAE J 245, net HP/ltr or KW/ltr

Octane requirements, RON

Fuel consumption (MPG) under mixed traffic conditions, approx.

Engine weight, kg/lbs, approx.

Valve timing with 1 mm valve clearance:

Intake opens

Intake closes

Exhaust opens

Exhaust closes

Intake valve stroke at TDC-overlap with 0.1 mm valve clearance
model 75

| | |
|-----------|-------------|
| 24/235 | 24/235 |
| 168/228 | 168/228 |
| 3800 | 4000 |
| 55.8/41 | 65/48 |
| 53.2/39.8 | 62.2/46.5 |
| 91 | 91 |
| 12 - 14 | 13 - 15 |
| 182/402 | 182/402 |
| 1° ATC | 6° ATC |
| 35° ABC | 50° ABC |
| 29° BBC | 24° BBC |
| 7° BTC | 2° BTC |
| 0.7 - 0.9 | 0.40 - 0.54 |
| 0.5 - 0.7 | |

911 911 S/CARRERA

Valve lift with 0.1 mm valve clearance:

| | | | |
|-----------------|----|----------------|----------------|
| intake valve | mm | 9.6 | 10.4 |
| exhaust valve | mm | 8.8 | 8.8 |
| Camshaft, right | | 911 105 142 00 | 911 105 144 00 |
| Camshaft, left | | 911 105 141 00 | 911 105 143 00 |

Identification mark on end flank of camshaft:


| | | |
|-----------------|------------|------------|
| camshaft, left | 911 141 00 | 911 143 00 |
| camshaft, right | 911 142 00 | 911 144 00 |

Installed length of valve springs:

| | | | |
|-------------------|----|------------|------------|
| for intake valve | mm | 35 ± 0.3 | 35 ± 0.3 |
| for exhaust valve | mm | 35.5 ± 0.3 | 35.5 ± 0.3 |


Full-power Performance

911

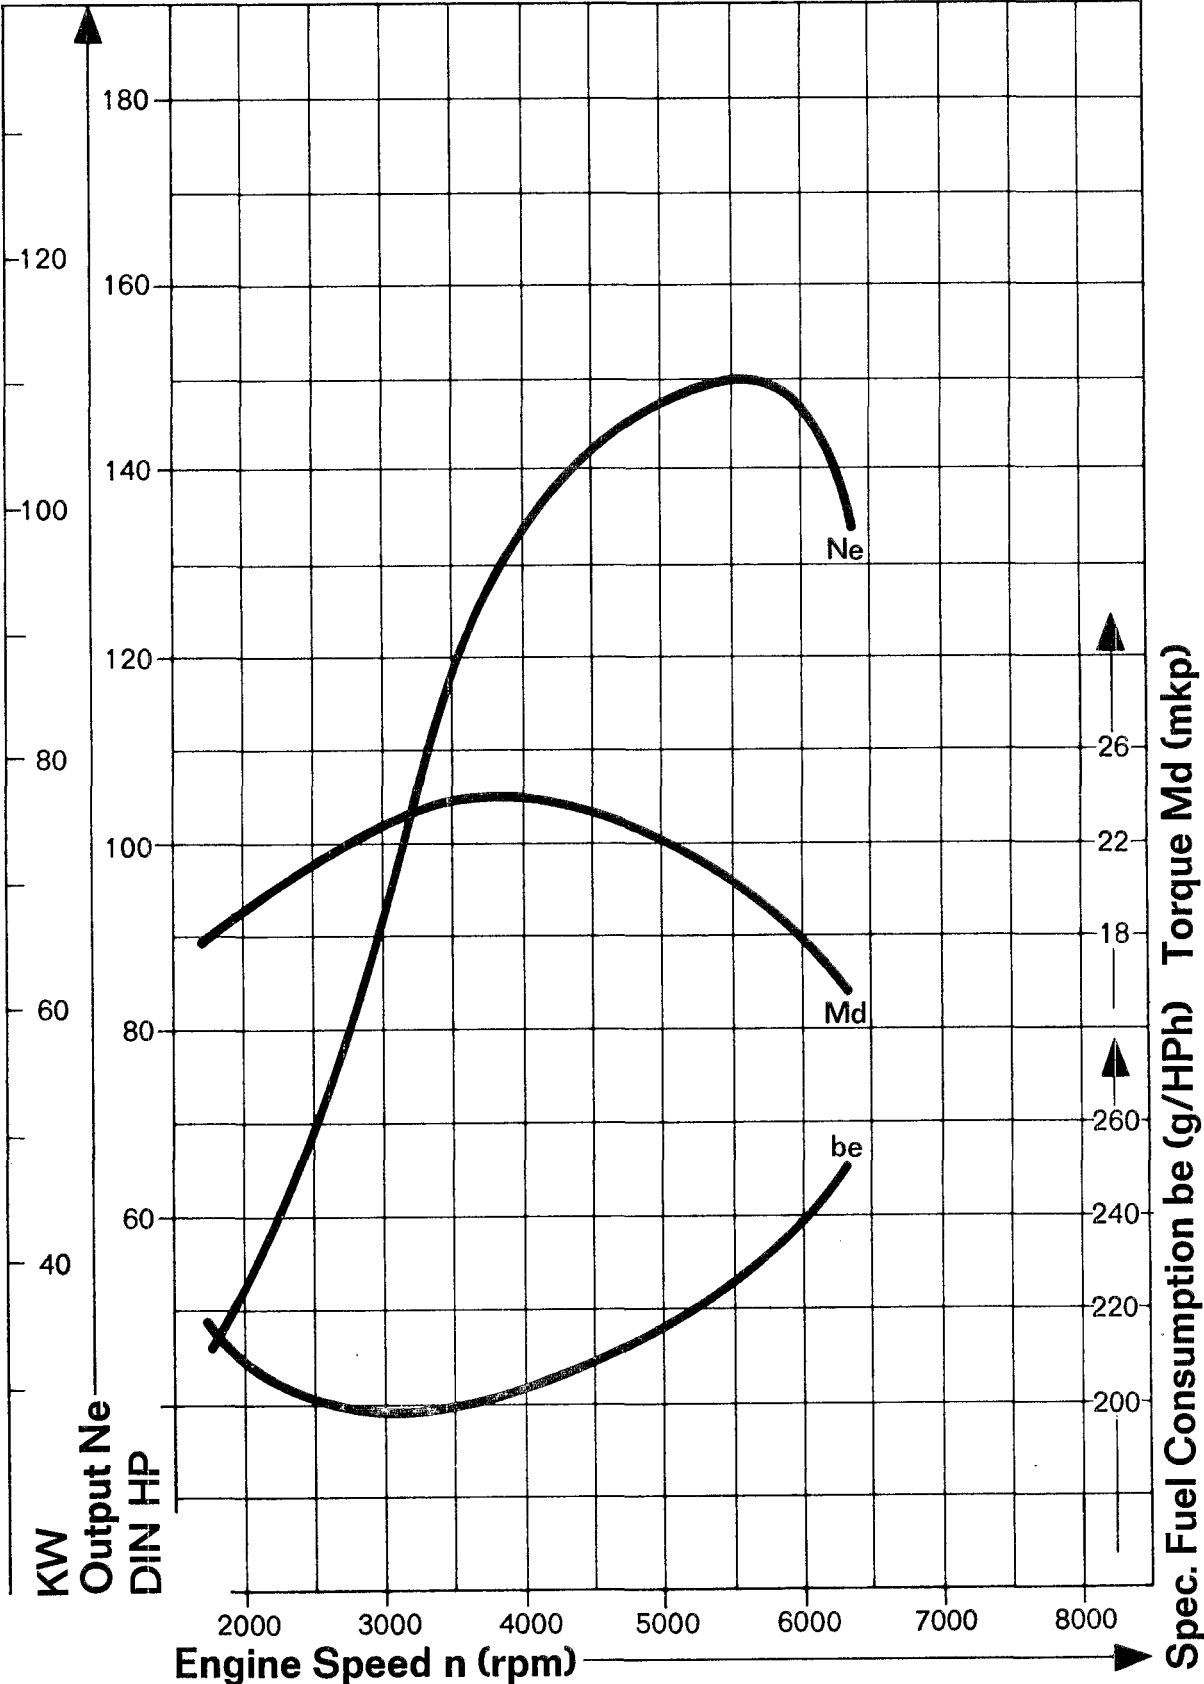

Full-power Performance

911 S

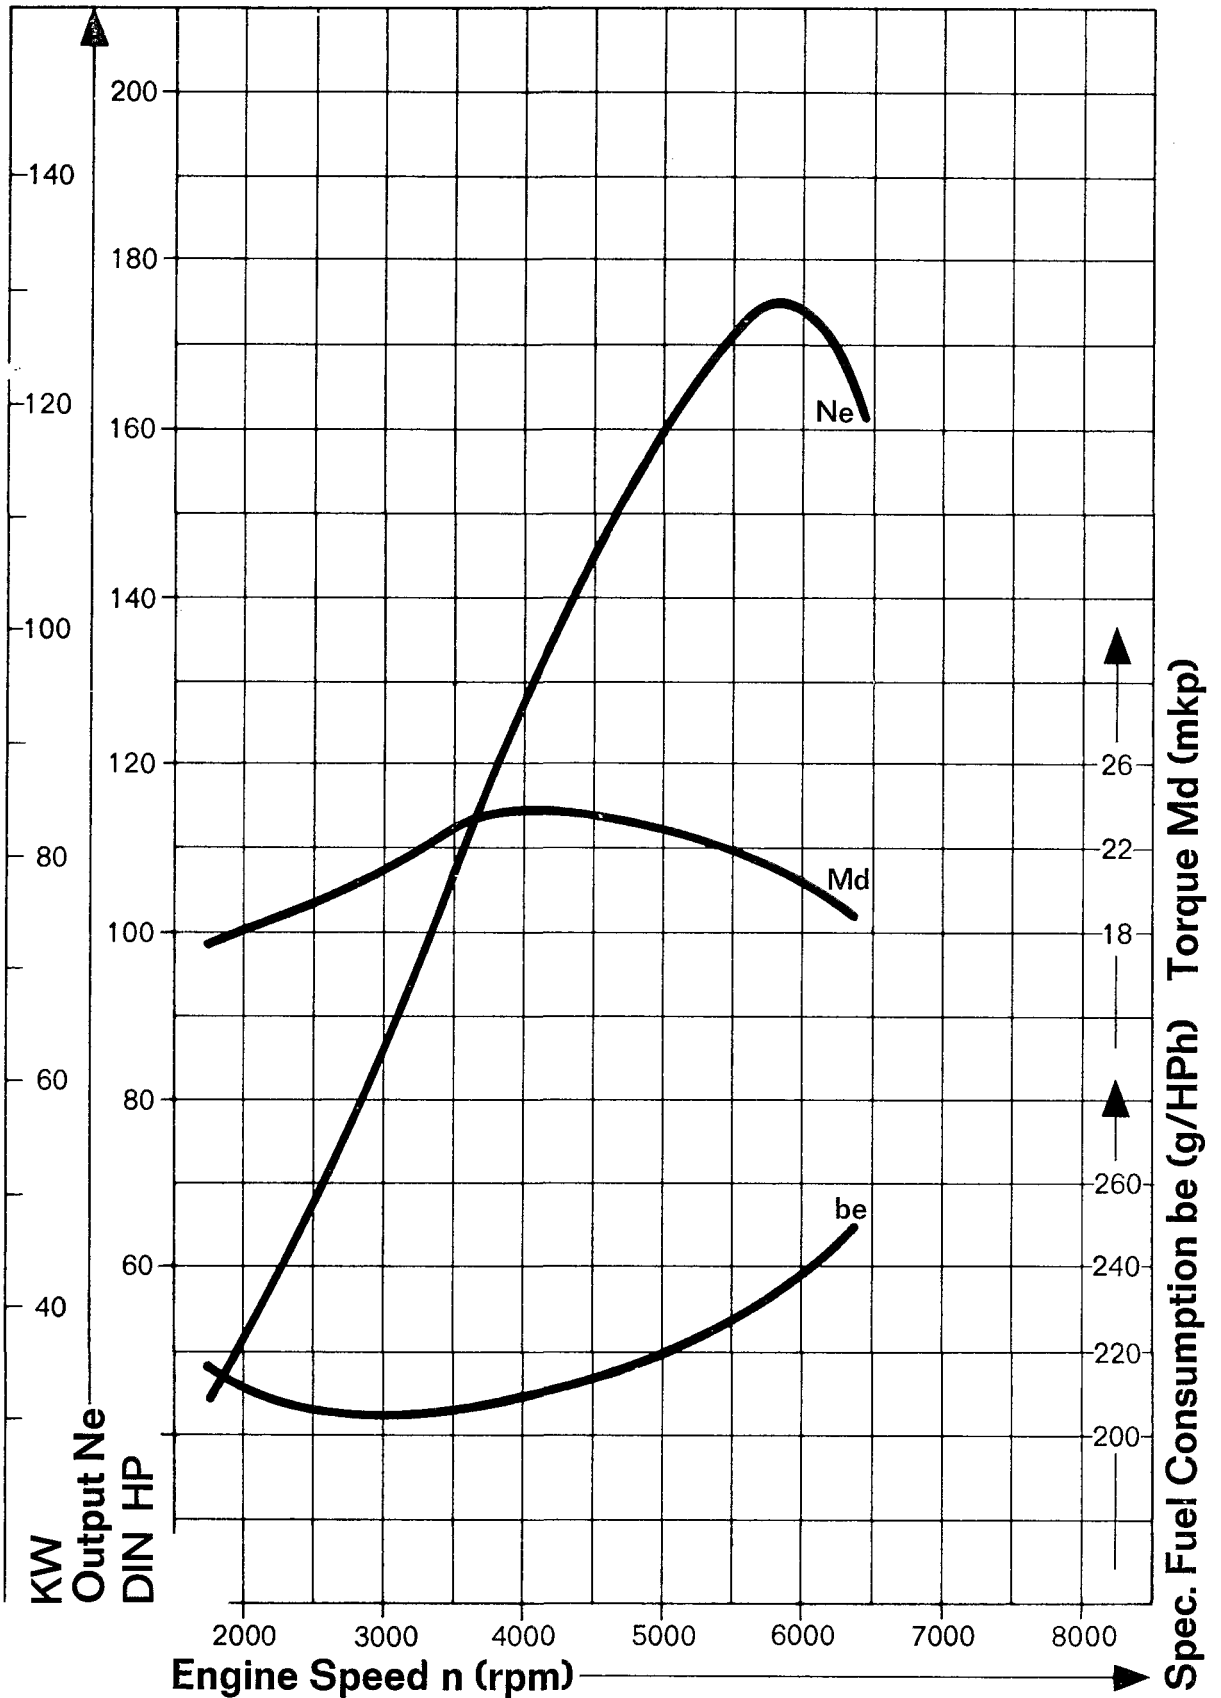

TECHNICAL DATA FOR 1975 911 S AND CARRERA MODELS

| ENGINE | USA | California |
|---|---|---|
| Type | 911/43/48 | 911/44/49 |
| No. of cylinders | 6 | 6 |
| Bore in mm (in.) | 90 (3.54) | 90 (3.54) |
| Stroke in mm (in.) | 70.4 (2.77) | 70.4 (2.77) |
| Displacement in cm ³ (in. ³) | 2687 (163.97) | 2687 (163.97) |
| Compression ratio | 8,5 : 1 | 8,5 : 1 |
| Max. output: | | |
| DIN HP or kW | 165/121.5 | 160/118 |
| SAE NET HP or kW | 157/115 | 152/112 |
| at crankshaft rpm | 5800 | 5800 |
| Max. torque: | | |
| DIN in kpm or Nm | 23/225 | 23/225 |
| SAE NET ft lbs. or Nm | 166/225 | 166/225 |
| at crankshaft rpm | 4000 | 4000 |
| Max. output/liter: | | |
| SAE NET in HP/liter or kW/liter | 58.5/43.2 | 53.8/41.7 |
| RON fuel specification | 91 | 91 |
| Fuel consumption (DIN) in liter/100 km | 9.8 | 10.2 |
| Approx. engine weight in kg (lbs.) | 180 (397) | 192 (423) |
| Valve timing with 1 mm valve clearance (in crankshaft degrees): | | |
| Intake opens | 6° after TDC | 6° after TDC |
| Intake closes | 50° after BDC | 50° after BDC |
| Exhaust opens | 24° before BDC | 24° before BDC |
| Exhaust closes | 2° before TDC | 2° before TDC |
| Intake valve lift at overlap TDC with 0.1 mm valve clearance (in mm) | 0.40 - 0.54 | 0.40 - 0.54 |
| Valve lift at 0.1 mm clearance: | | |
| Intake valve in mm | 10.4 | 10.4 |
| Exhaust valve in mm | 8.8 | 8.8 |
| Camshaft, right | 911 105 144 00 | 911 105 144 00 |
| Camshaft, left | 911 105 143 00 | 911 105 143 00 |
| Identification on face of camshafts: | | |
| Camshaft, right | 911 144 00 | 911 144 00 |
| Camshaft, left | 911 143 00 | 911 143 00 |
| Valve spring sizes: | | |
| Intake valve in mm | 35 ± 0.3 | 35 ± 0.3 |
| Exhaust valve in mm | 35.5 ± 0.3 | 35.5 ± 0.3 |
| Exhaust, heating | Single pipe system with new heat ex- changers, heater blower, primary muff- ler and new exhaust muffler and air injec- tion | Double pipe system with reactors and heat exchangers, heater blower and new exhaust muffler, exhaust gas recirculation and air injection |

TIGHTENING TORQUES FOR ENGINE

| Location | Threads | Torque | |
|--|------------------|---------|-----------|
| | | Nm | kpm |
| Connecting rod nuts | M 10 x 1.25 | 50 | 5 |
| Crankcase bolts | M 10 | 35 | 3.5 |
| All bolts on crankcase and camshaft housing | M 8 | 25 | 2.5 |
| Hexagon nuts (oil filter screen cover) | M 6 | 10 | 1 |
| Flywheel bolts | M 12 x 1.5 | 150 | 15 |
| (from 1978 models) | M 10 x 1.25 | 90 | 9 |
| Pilot bearing to crankshaft | M 6 | 10 | 1 |
| Pulley to crankshaft (without air conditioner) | M 12 x 1.5 | 80 | 8 |
| Double-belt pulley to crankshaft (with air conditioner) | M 12 x 1.5 | 170 | 17 |
| Safety valve plug to crankcase | M 18 x 1.5 | 60 | 6 |
| Pressure relief valve plug to crankcase | M 18 x 1.5 | 60 | 6 |
| Adapter (oil pressure sender) to crankcase | M 12 x 1 | 35 | 3.5 |
| Adapter in crankcase (oil return line) | M 12 x 1 | 120 | 12 |
| Cylinder head nuts | M 10 socket head | 33 | 3.3 |
| Rocker arm shafts | M 6 socket head | 18 | 1.8 |
| Nut on camshaft | M 27 x 2 | 150 | 15 |
| Hex. head bolt on camshaft | M 12 x 1.5 | 120 | 12 |
| Cover to camshaft housing | M 8 | 8 | 0.8 |
| Adapter to cylinder head (air injection) | M 10 x 1 | 15 | 1.5 |
| Air line (coupling nut) to adapter | M 14 x 1.5 | 22 | 2.2 |
| Reactor to cylinder head | M 8 | 20 - 23 | 2.0 - 2.3 |
| Spark plugs | M 14 x 1.25 | 25 - 30 | 2.5 - 3.0 |

| Location | Threads | Torque | |
|---|------------|---|----------|
| | | Nm | kpm |
| Bracket for engine carrier | M 10 | 40 | 4 |
| Wide clamp on fan housing | M 6 | 6.5 | 0.65 |
| | M 8 | 12 | 1.2 |
| Pulley to alternator | M 16 x 1 | 40 S. E. V. alternator (Motorola) | 4 |
| | M 14 x 1.5 | 40 Bosch | 4 |
| Oil pressure switch to crankcase | M 10 x 1 | max. 20 | max. 2 |
| Temperature sender to crankcase | M 14 x 1.5 | max. 25 | max. 2.5 |
| Oil pressure sender to adapter | M 18 x 1.5 | max. 35 | max. 3.5 |
| Oxygen sensor to catalytic converter | M 18 x 1.5 | 50 - 60 | 5 - 6 |
| Cap nut on catalytic converter | M 14 x 1.5 | 30 | 3.0 |
| Oil drain plug (on cover for oil filter screen) | M 22 x 1.5 | 42 | 4.2 |
| Oil drain plug (oil tank) | M 22 x 1.5 | 42 | 4.2 |

TECHNICAL DATA - TYPE 911 S, 1976 MODEL

911 S

ENGINE

| | | |
|--|-----------------------------------|-----------------|
| Type | | 911/82/84/89 |
| Bore | mm/in. | 90/3.54 |
| Stroke | mm/in. | 70.4/2.77 |
| Displacement | cm ³ /in. ³ | 2687/164.0 |
| Compression ratio | | 8.5 : 1 |
| Horsepower SAE Net at engine speed | kW/HP rpm | 117/157 5800 |
| Torque SAE Net at engine speed | Nm/ftlb rpm | 228/168 4000 |
| Output per liter SAE Net J245 | kW/HP | 44/59 |
| Max. engine speed | rpm | 6700 |
| Cutoff speed of speed limiter in distributor | rpm | 6500 \pm 200 |
| Engine weight, dry | kg/lb | 182/401 |
| Valve Drive | | |
| Valve clearance, cold engine measured betw. valve and adjusting screw: | | |
| Intake | mm | 0.10 |
| Exhaust | mm | 0.10 |
| Valve timing at 1 mm clearance | | |
| Intake opens | | 6° ATDC |
| Intake closes | | 50° ABDC |
| Exhaust opens | | 24° BBDC |
| Exhaust closes | | 2° BTDC |
| Intake valve lift at TDC overlap with 0.1 mm valve clearance | mm | 0.40 - 0.54 |
| Identifying number on cam end face | | |
| Camshaft, left | | 911.143.00 |
| Camshaft, right | | 911.144.00 |
| No. of bearings | | 3 |

911 S

Valve spring sizes

| | | |
|--------|----|--------------|
| Intake | mm | 35 ± 0.3 |
|--------|----|--------------|

| | | |
|---------|----|----------------|
| Exhaust | mm | $35,5 \pm 0.3$ |
|---------|----|----------------|

Basic ignition timing

(vacuum hose connected)

 5° ATDC at
 900 ± 50 rpm

Spark plugs, gap 0.55mm/0.022 in.

Bosch W 235 P 21

Beru 235/14/3P

Cooling - Fan Drive

Crankshaft/fan ratio

1 : 1.8

Air delivery rate

ltr/sec. 1265 at crank-
shaft speed of 6000 rpm

Lubrication

Oil pressure at 5000 rpm
and $80^{\circ}\text{C}/176^{\circ}\text{F}$

approx.

5 atm/73,5 psi

Oil consumption

approx.

ltr/600 mi. 1.5 - 2.0

TECHNICAL DATA - TYPE 911 S, 1977 MODEL

| | | | 911 S |
|--|------------------------------------|------|---------------------------|
| ENGINE | | | |
| Engine type | | | 911/85/90 |
| Bore | mm/inch | | 90/3.54 |
| Stroke | mm/inch | | 70.4/2.77 |
| Displacement | cm ³ /inch ³ | | 2687/164.0 |
| Compression ratio | | | 8,5 : 1 |
| Power SAE Net at engine speed | kW/HP | | 117/157 |
| | rpm | | 5800 |
| Torque SAE Net at engine speed | Nm/lbft | | 228/168 |
| | rpm | | 4000 |
| Output per liter | | | kW/HP 44/59 |
| Max. engine speed | | | rpm 6700 |
| Cutoff speed of speed limiter in distributor | | | rpm 6500 [±] 200 |
| Engine weight (dry) | | | kg/lbs 182/401 |
| Valve drive | | | |
| Valve clearance (on cold engine) measured betw. valve and adjust- ing screw: | | | |
| Intake | mm | | 0.10 |
| Exhaust | mm | | 0.10 |
| Valve timing with 1 mm valve clearance | | | |
| Intake opens | 6° | ATDC | |
| Intake closes | 50° | ABDC | |
| Exhaust opens | 24° | BBDC | |
| Exhaust closes | 2° | BTDC | |
| Intake valve lift at TDC with 0,1 mm valve clearance | | | mm 0.40 - 0.54 |

| | | 911 S |
|---|---------|--|
| Identifying number on cam end face | | |
| Left camshaft | | 911.143.00 |
| Right camshaft | | 911.144.00 |
| Bearing journals | | 3 |
| Valve springs: free length | | |
| Intake valve | mm | 35 ± 0.3 |
| Exhaust valve | mm | 35.5 ± 0.3 |
| Ignition Timing | | |
| USA Version | | |
| (vacuum hose permanently plugged, vacuum advance inoperable) | | $0^{\circ} - Z1 \text{ mark -}$ $\text{at } 950 \pm 50 \text{ rpm}$ |
| * California Version | | |
| (vacuum hose connected) | | $15^{\circ} \text{ ATDC at}$ $1000 \pm 50 \text{ rpm}$ |
| Spark plugs | | |
| Electrode gap | mm | Bosch W 225 T 30 -0.7- Beru 225/14/3A -0.7- *(Bosch W 235 P 21 -0.6-) * Beru 235/14/3P -0.55- |
| Cooling - Fan Drive | | |
| Crankshaft/fan ratio | | 1 : 1.8 |
| Air delivery rate | ltr. | 1265/sec. at 6000 rpm crankshaft speed |
| Engine Lubrication | | |
| Oil pressure at 5000 rpm and $80^{\circ} \text{ C}/176^{\circ} \text{ F}$ | approx. | 5 bar/73.5 psi |
| Oil consumption (per 600 miles) | approx. | 1.5 - 2.0 ltr/qt |

TECHNICAL DATA, TYPE 911 SC - 1978 MODELS

911 SC

ENGINE

| | | | |
|---|------------------------------------|----|---|
| Engine type | | | USA - 930/04 California - 930/06 |
| Bore | mm/inch | | 95.0/3.74 |
| Stroke | mm/inch | | 70.4/2.77 |
| Total Displacement | cm ³ /inch ³ | | 2994/182.7 |
| Compression ratio | | | 8.5 : 1 |
| Net Horse power, SAE at engine speed | kW/HP rpm | | 128/172 5500 |
| Torque, SAE Net at engine speed | Nm/lb ft rpm | | 237/175 4200 |
| Output per liter, SAE Net | KW/l, HP/l | | 43/57 |
| Max. engine speed | rpm | | 7000 |
| Cut-off speed (overrev protection) | | | Speed limited by cutting off fuel pump |
| | rpm | | 6700 to 7000 |
| Engine weight (dry) | kg/lbs | | approx. 200/441 |
| Valve drive | | | |
| Valve clearance (cold engine) measured between valve and rocker arm adjusting screw | | | |
| | Intake | mm | 0.10 |
| | Exhaust | mm | 0.10 |
| Valve timing with 1 mm valve clearance | | | |
| | Intake opens | | 1° BTDC |
| | Intake closes | | 53° ABDC |
| | Exhaust opens | | 43° BBDC |
| | Exhaust closes | | 3° ATDC |
| Intake valve lift at TDC overlap with 0.1 mm valve clearance | mm | | 0.9 to 1.1 |

911 SC

Identification on camshaft face

Left camshaft

930.147.08

Right camshaft

930.148.08

Number of bearings

4

Length of installed valve springs

Intake valve

mm

 34.5 ± 0.3

Exhaust valve

mm

 34.5 ± 0.3

Ignition

CDI (breakerless)

Basic ignition timing

 5° BTDC at idle of

(vacuum hose attached)

900 to 1000 rpm

(oil temp. 80° C/ 176° F)

Spark plugs/electrode gap

mm

Bosch W 145 T 30/0.8

(0.032 in.)

Beru 145/14/3 /0.8

(0.032 inc.)

Emission control

930/04 air pump and

catalytic converter

930/05, 930/15 and

930/06 air pump,

catalytic converter

and EGR

Cooling - Fan drive

Crankshaft/fan ratio:

approx.

1 : 1.8

Air delivery rate

1380 l/s at 6000

rpm of crankshaft

Engine lubrication

Oil pressure at 5000 rpm and

oil temp. of 80° C (176° F)

bar/psi

approx. 4.5/66

Oil consumption

1/1000 km

approx. 1.5 to 2.0

(US qt/600 mi.)

TECHNICAL DATA, TYPE 911 SC - from 1980 Model

911 SC

Engine

| | | |
|--|------------------------------------|----------------------------|
| Engine type (internal code) | | 930/07 |
| Bore | mm/inch | 95.0/3.74 |
| Stroke | mm/inch | 70.4/2.77 |
| Total displacement | cm ³ /inch ³ | 2994/182.7 |
| Compression ratio | | 9.3 : 1 |
| Max. output per DIN 70020 | kW/HP | 132/180 |
| Net horsepower per SAE J 245 | kW/HP | 128/172 |
| at engine speed | rpm | 5500 |
| Max. torque per DIN 70020 | Nm/kpm | 245/25 |
| Net torque per SAE J 245 | Nm/ft lbs | 237/175 |
| at engine speed | rpm | 4200 |
| Max. output per liter DIN 70020 | kW/l, HP/l | 44/60 |
| SAE J 245 | kW/l, HP/l | 42/57 |
| Max. engine speed | rpm | 7000 |
| Cut-off speed | | Speed limited by switching |
| (engine speed limiter) | | off fuel pump |
| | rpm | 6300 to 6700 |
| Engine weight (dry), approx. | kg/lbs | 190/419 |
| Valve train | | |
| Valve clearance (cold engine) | | |
| measured between valve and rocker | | |
| arm adjusting screw | Intake | mm 0.10 |
| | Exhaust | mm 0.10 |
| Valve timing with 1 mm valve clearance | | |
| Intake opens before TDC | | 7° |
| Intake closes after BDC | | 47° |
| Exhaust opens before BDC | | 49° |
| Exhaust closes before TDC | | 3° |
| Intake valve lift at TDC with 0.1 mm | mm | 1.4 to 1.7 |
| valve clearance | | |

911 SC

Identification on camshaft face

Left camshaft 930.147.08

Right camshaft 930.148.08

Number of bearings four

Valve spring installed length

Intake valve mm 34,5 \pm 0,3Exhaust valve mm 34,5 \pm 0,3

Ignition

CDI (breakerless)

Basic ignition timing

5° BTDC at 900 to 1000 rpm
idle speed, vacuum hose dis-
connected, 90° C/195° F
oil temperature

Spark plugs - electrode gap -

mm

Bosch W 5 D (W 225 T 30)

- 0,7 -

Beru 14/5 D (225/14/3 A)

- 0,7 -

Emission Control

Oxygen sensor and 3-way
catalytic converter

Cooling - fan drive

Crankshaft/fan ratio

approx.

1 : 1.68

Air delivery rate

1500 l/sec. at 6000 rpm
crankshaft speed

Engine lubrication

Oil pressure at 5000 rpm and 90° C/
195° F oil temperature

bar/psi

approx. 4.5/66

Oil consumption

l/1000 km

approx. 1.5 to 2.0

(1 US qt. /600 mi.)

TECHNICAL DATA, TYPE 911 SC - from 1981 Models

911 SC

Engine

| | | |
|---------------------------------------|------------------------------------|-----------------------|
| Engine type (internal code) | | 930/16 |
| Bore | mm/inch | 95.0/3.74 |
| Stroke | mm/inch | 70.4/2.77 |
| Total displacement | cm ³ /inch ³ | 2994/182.7 |
| Compression ratio | | 9.3 : 1 |
| Max. output acc. DIN 70020 | kW/HP | 132/180 |
| Net power acc. SAE J 245 | kW/HP | 128/172 |
| at engine speed | rpm | 5500 |
| Max. torque acc. DIN 70020 | Nm/kpm | 245/25 |
| Net torque acc. SAE J 245 | Nm/ft lbs | 237/175 |
| at engine speed | rpm | 4200 |
| Max. liter output acc. DIN 70020 | kW/l, HP/l | 44/60 |
| SAE J 245 | kW/l, HP/l | 42/57 |
| Max. engine speed | rpm | 6700 |
| Cut-off speed | | Speed limited by |
| engine speed limiter | | switching off fuel |
| | | pump |
| | rpm | 6500 [±] 200 |
| Engine weight (dry) | kp/lbs | approx. 190/419 |
| Valve train | | |
| Valve clearance (cold engine): | | |
| measured between valve and rocker arm | | |
| Intake | mm | 0.10 |
| Exhaust | mm | 0.10 |
| Valve timing with 1 mm valve | | |
| clearance | | |
| Intake opens | | 7° before TDC |
| Intake closes | | 47° after BDC |
| Exhaust opens | | 49° before BDC |
| Exhaust closes | | 3° before TDC |
| Intake valve lift at TDC overlap with | | |
| 0.1 mm valve clearance | mm | 1.4 to 1.7 |

911 SC

Identification on camshaft face

Left camshaft

930.147.08

Right camshaft

930.148.08

Number of bearings

four

Installed length of valve springs

Intake valve

mm

34.5 - 0.8

Exhaust valve

mm

34.5 - 0.8

Ignition

CDI (breakerless)

Basic ignition setting

5° before TDC

(vacuum hoses detached, oil temperature approx. 90°C/195°F)

at 950 rpm

Spark plugs - electrode gap -

mm

Bosch W 5 D

(W 225 T 30) - 0.7 -

Beru 14/5 D

(225/14/3 A) - 0.7 -

Emission control

Oxygen sensor with
3-way catalytic converter

Cooling - blower drive

Crankshaft/fan ratio

approx. 1 : 1.68

Air delivery rate

1500 ltr./sec. at
6000 rpm crank-
shaft speed

Engine lubrication

Oil pressure at 5000 rpm and approx.
90°C/195°F oil temperature

bar/psi

approx. 4.0/58


Oil consumption

ltr./1000 km

approx. 1.5

(1 US qt/600 mi.)

REPLACING AND ADJUSTING FAN DRIVE BELT

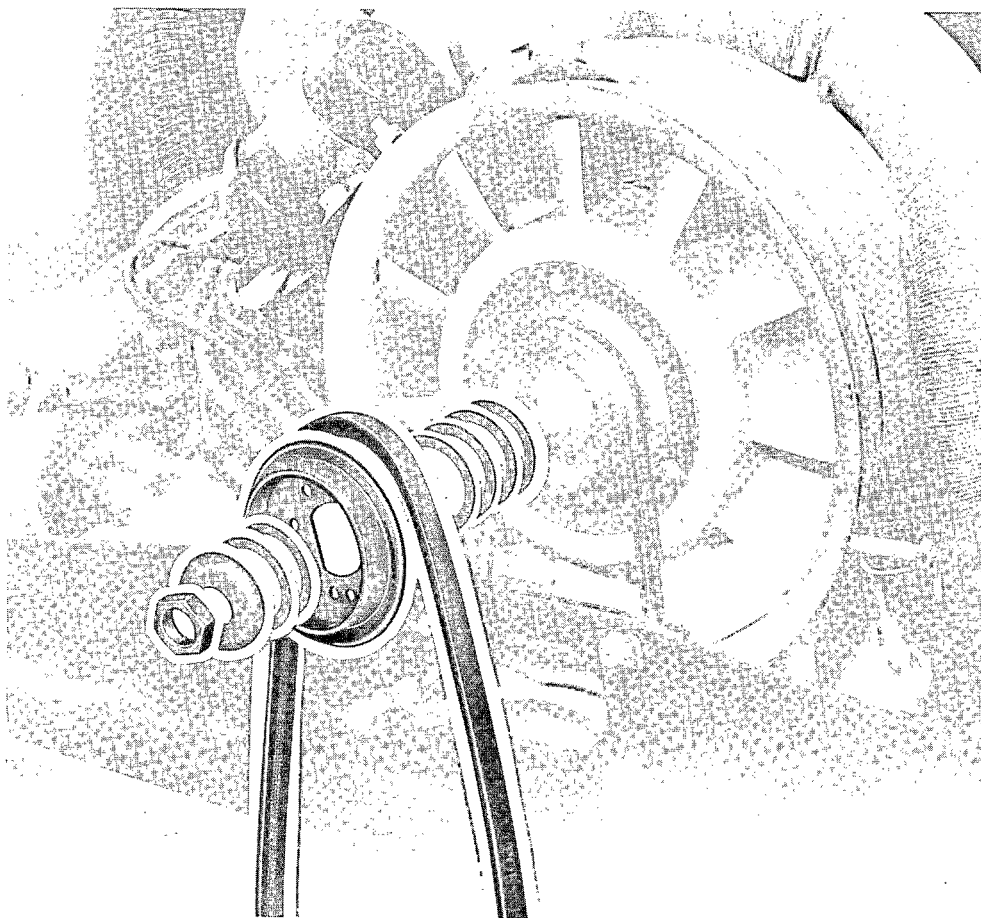

Effective with the 1980 models all 911 SC engines have the larger fan from the 911 Turbo. New belt size: 9,5 x 710 mm.

Note

Only the approved belt from Goodyear, Part No. 999.192.176.50, may be used for these engines.

When installing the new belt for the first time, it must be much tighter than was formerly the case.


Approximate rule:


Tighten belt as in the past (belt deflects by 10 to 15 mm at point midway between two pulleys). Then remove 1 shim from the shims between the pulley sections (approx. 5 mm deflection).

Adjusting instructions for engine prior to 1980 models with small fan:

Check tightness by applying thumb pressure at point midway between both pulleys.
Deflection: approx. 10 to 15 mm.

REMOVING AND INSTALLING EXHAUST SYSTEM AND HEATER BLOWER


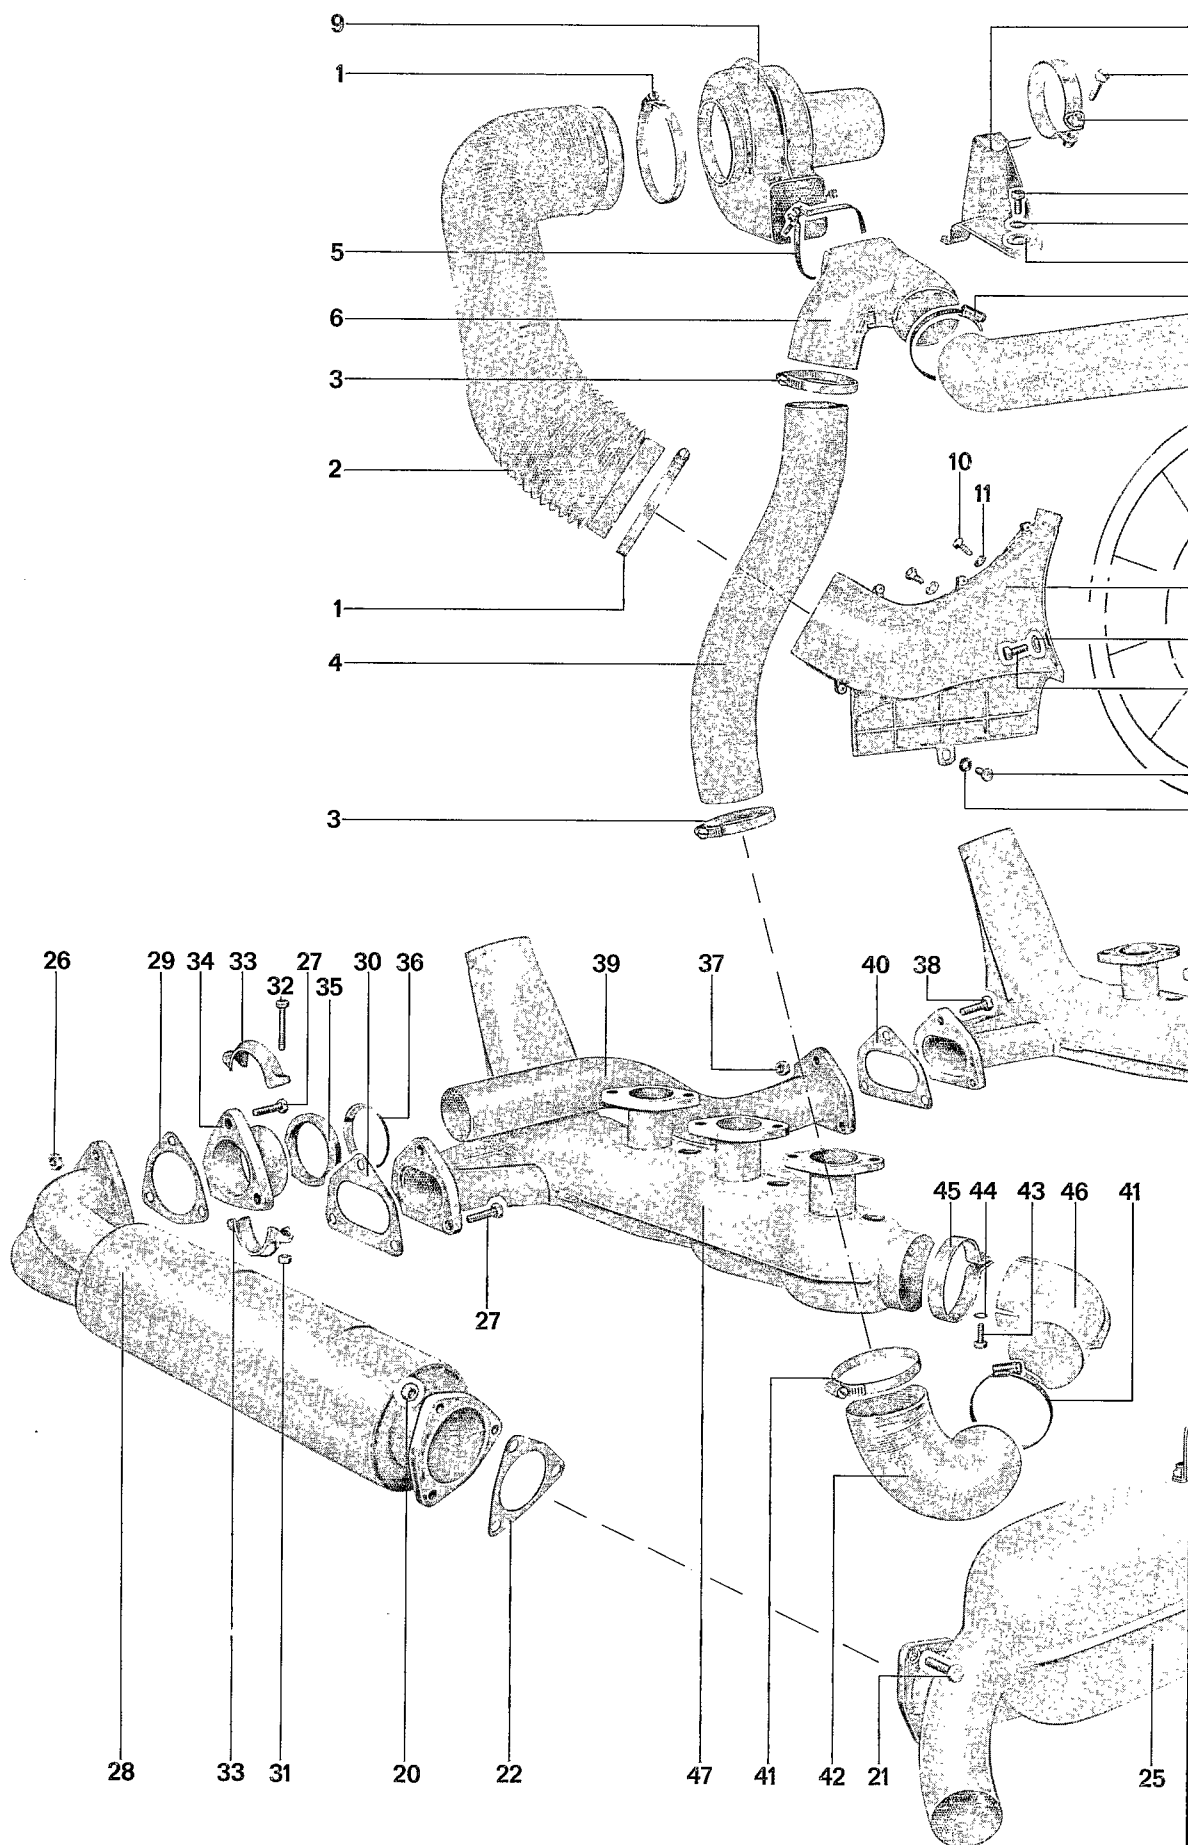


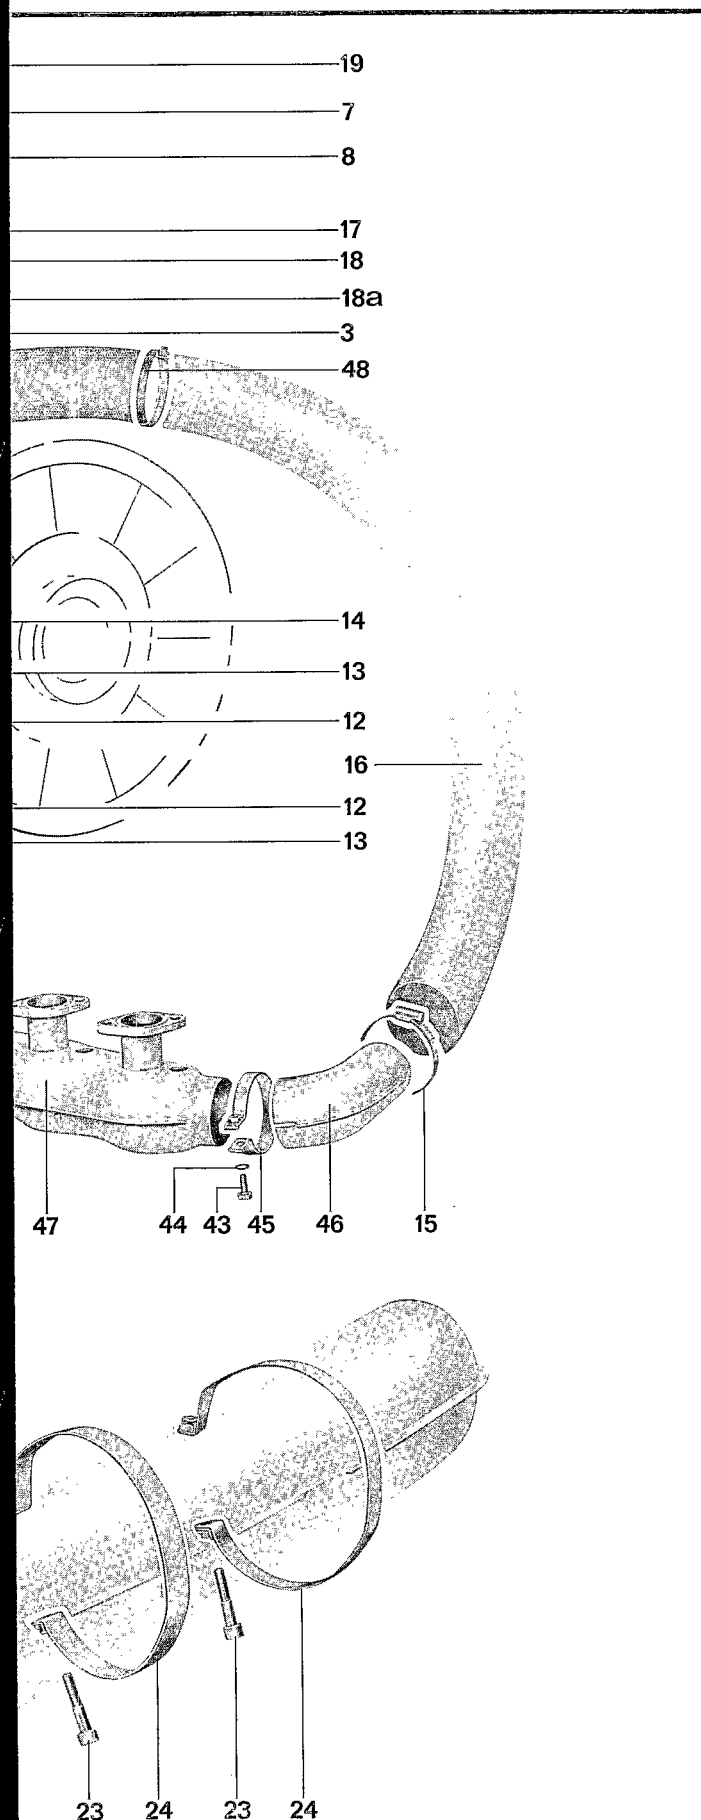

| No. | Description | Qty. | Notes | | Remarks |
|-----|--------------------------|------|---------|------------------------------|---------|
| | | | Removal | Installation | |
| 1 | Hose clamp | 2 | | | |
| 2 | Hose (heater air/blower) | 1 | | Hose must not touch anything | |
| 3 | Hose clamp | 3 | | | |
| 4 | Heater hose, left | 1 | | | |
| 5 | Clamp, adapter | 1 | | | |
| 6 | Adapter | 1 | | | |
| 7 | Screw | 1 | | | |
| 8 | Clamp | 1 | | | |
| 9 | Blower | 1 | | Install correctly | |
| 10 | Sheet metal screw | 2 | | | |
| 11 | Washer | 2 | | | |
| 12 | Bolt | 2 | | | |
| 13 | Washer | 2 | | | |
| 14 | Heater air adapter | 1 | | | |
| 15 | Hose clamp | 1 | | | |
| 16 | Heater hose, right | 1 | | | |
| 17 | Bolt | 2 | | | |
| 18 | Lock washer | 2 | | | |
| 18a | Washer | 1 | | | |
| 19 | Clamp | 1 | | | |
| 20 | Nut (self-locking) | 3 | | Replace if necessary | |
| 21 | Bolt | 3 | | | |
| 22 | Gasket | 1 | | Replace | |
| 23 | Fillister head screw | 2 | | | |
| 24 | Clamp | 2 | | | |

| No. | Description | Qty. | Notes | | Remarks |
|-----|--------------------|------|---------|----------------------------|---------|
| | | | Removal | Installation | |
| 25 | Muffler | 1 | | Check for leaks and damage | |
| 26 | Nut (self-locking) | 6 | | Replace if necessary | |
| 27 | Bolt | 6 | | | |
| 28 | Primary muffler | 1 | | | |
| 29 | Gasket | 1 | | Replace | |
| 30 | Gasket | 1 | | Replace | |
| 31 | Nut | 2 | | | |
| 32 | Bolt | 2 | | | |
| 33 | Clamp | 2 | | | |
| 34 | Flange | 1 | | | |
| 35 | Seal | 1 | | Replace | |
| 36 | Support disc | 1 | | | |
| 37 | Nut (self-locking) | 3 | | Replace if necessary | |
| 38 | Bolt | 3 | | | |
| 39 | Adapter | 1 | | | |
| 40 | Gasket | 1 | | Replace | |
| 41 | Hose clamp | 2 | | | |
| 42 | Flex hose | 1 | | | |
| 43 | Screw | 2 | | | |
| 44 | Washer | 2 | | | |
| 45 | Clamp | 2 | | | |
| 46 | Adapter | 2 | | | |
| 47 | Heat exchanger | 2 | | Check for damage | |
| 48 | Cable strap | 1 | | | |

EXHAUST SYSTEM - 1978 MODELS (Engine Type 930/04, 06)

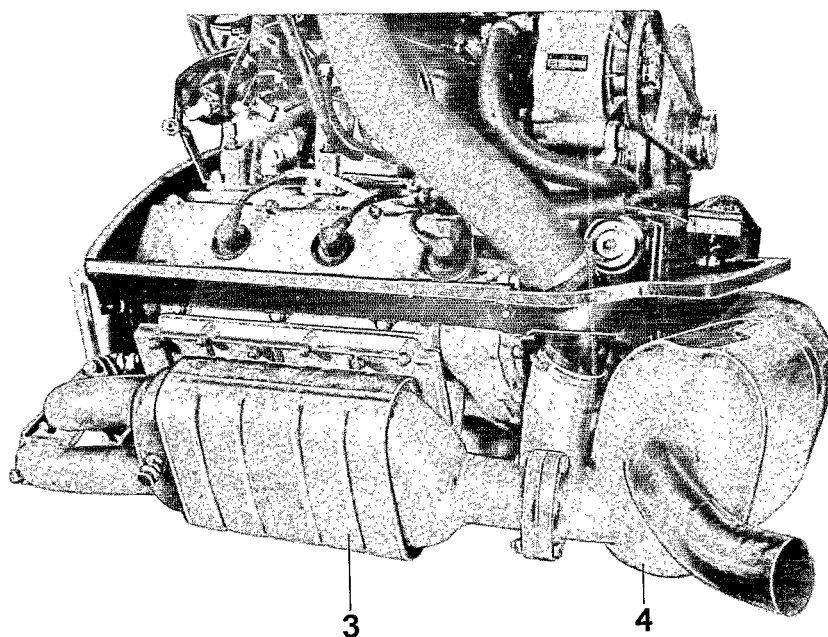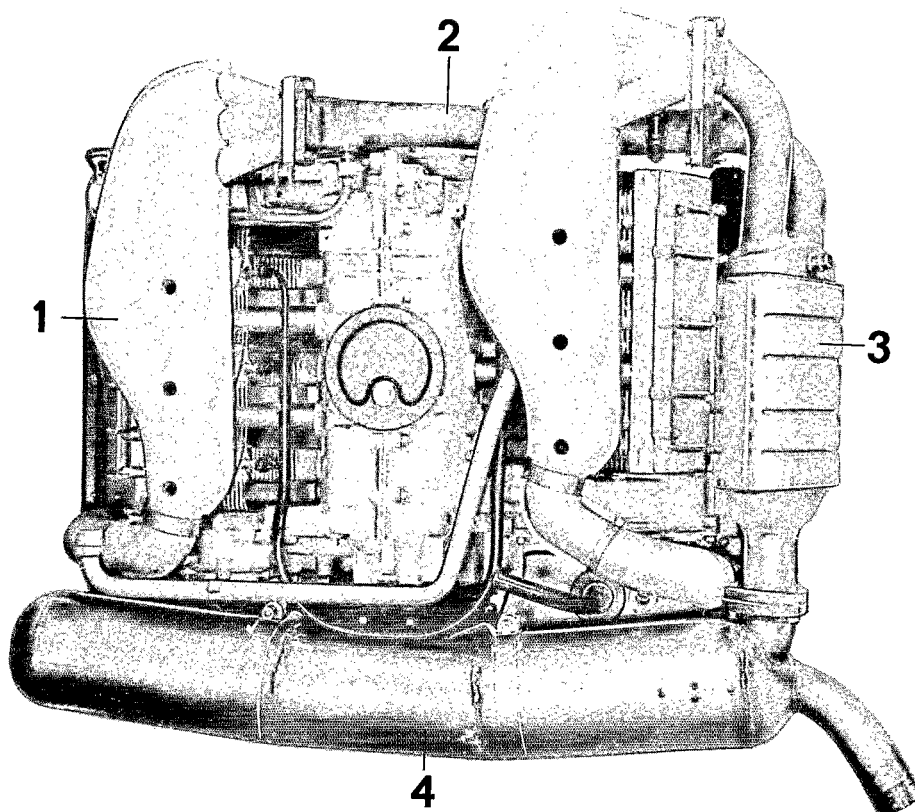


1 - Heat exchanger

3 - Catalytic converter

2 - Exhaust pipe

4 - Exhaust muffler

REMOVING AND INSTALLING AIR INJECTION

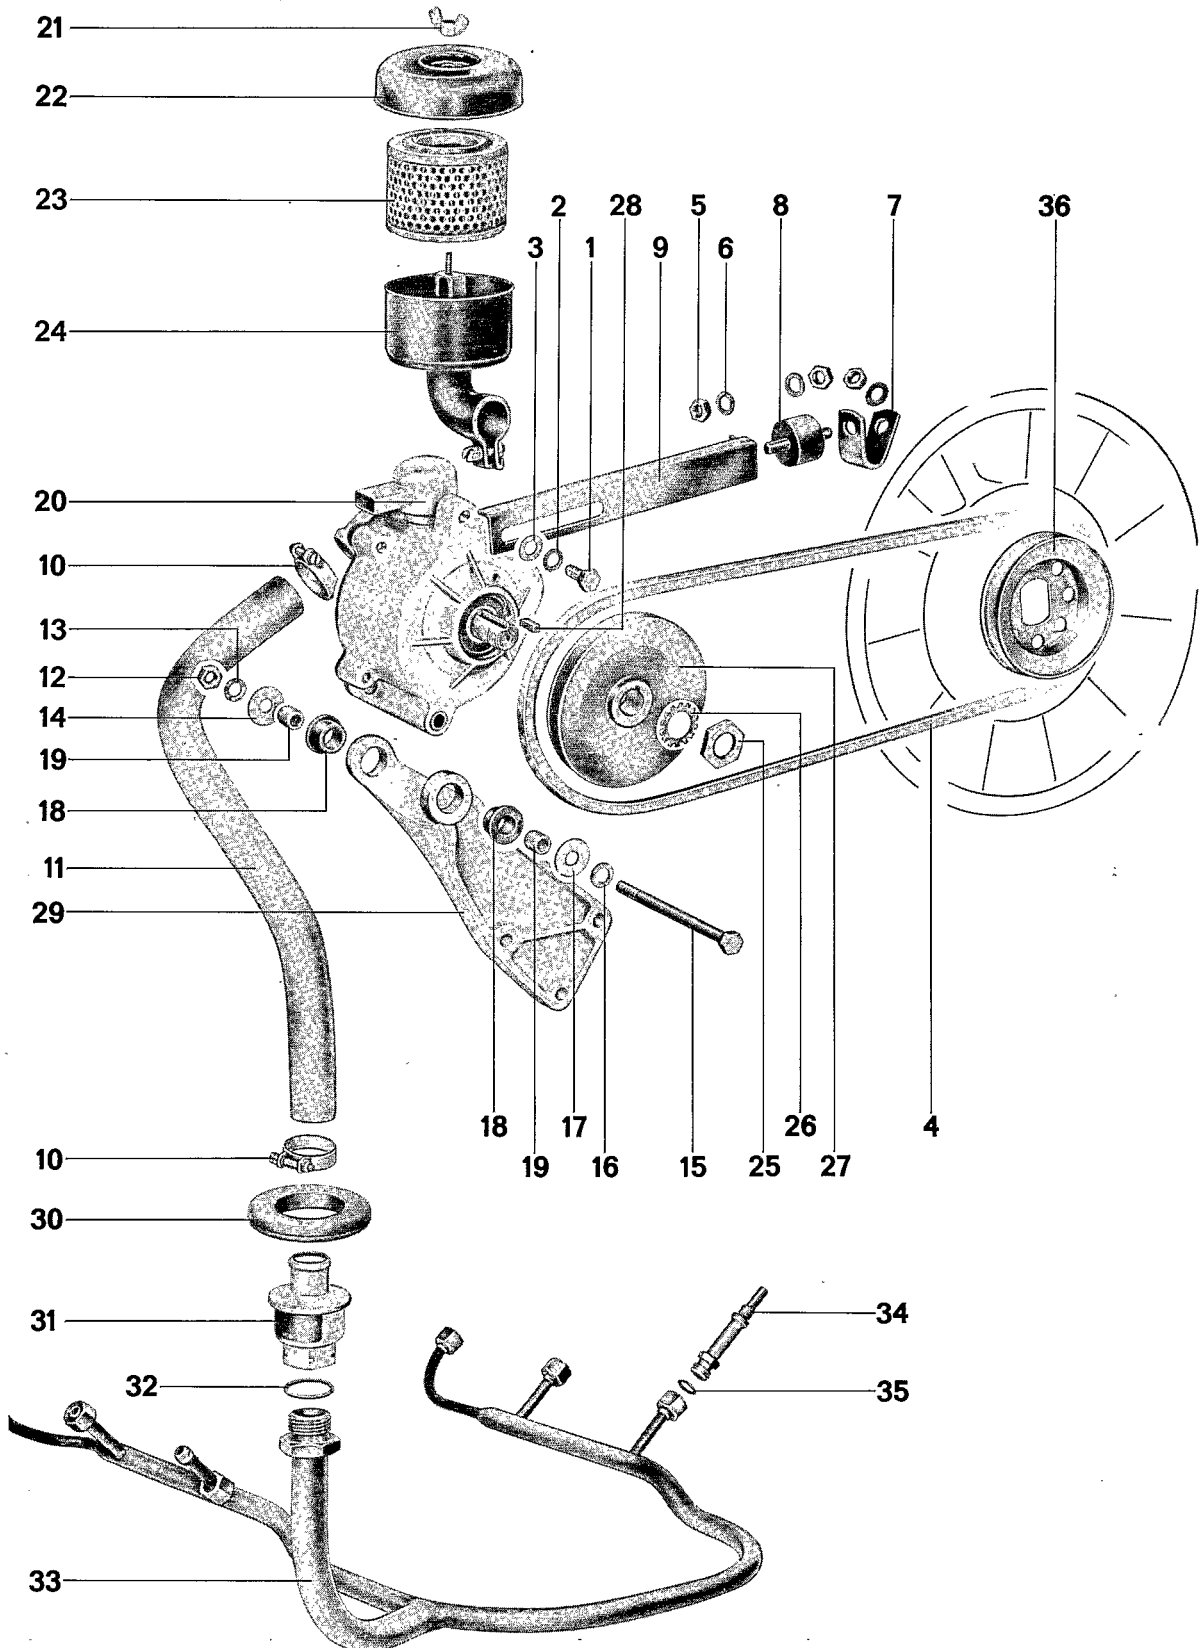


| No. | Description | Qty. | Notes | | Remarks |
|-----|------------------|------|---------|---|------------------------------|
| | | | Removal | Installation | |
| 1 | Bolt | 1 | | | |
| 2 | Washer | 1 | | Replace if necessary | |
| 3 | Plain washer | 1 | | | |
| 4 | V-belt | 1 | | Check tension | Refer to page 2.3- 1/4 |
| 5 | Nut | 3 | | | |
| 6 | Washer | 3 | | Replace if necessary | |
| 7 | Bracket | 1 | | | |
| 8 | Rubber/metal pad | 1 | | Check, replacing if necessary | |
| 9 | Holder, air pump | 1 | | | |
| 10 | Hose clamp | 2 | | | |
| 11 | Hose | 1 | | Check, replacing if necessary | |
| 12 | Nut | 1 | | | |
| 13 | Washer | 1 | | Replace if necessary | |
| 14 | Plain washer | 1 | | | |
| 15 | Bolt | 1 | | | |
| 16 | Washer | 1 | | Replace if necessary | |
| 17 | Plain washer | 1 | | | |
| 18 | Rubber bushing | 2 | | Install correctly, lubricate lightly | |
| 19 | Spacer | 2 | | | |
| 20 | Air pump | 1 | | | |
| 21 | Winged nut | 1 | | | |
| 22 | Filter cover | 1 | | | |
| 23 | Filter cartridge | 1 | | Replace if necessary | |
| 24 | Filter housing | 1 | | | |

| No. | Description | Qty. | Notes | | Remarks |
|-----|-------------------|------|---------|-------------------------|---------|
| | | | Removal | Installation | |
| 25 | Nut | 1 | | | |
| 26 | Lock washer | 1 | | | |
| 27 | Pulley | 1 | | | |
| 28 | Flat key | 1 | | | |
| 29 | Carrier, air pump | 1 | | | |
| 30 | Seal | 1 | | | |
| 31 | Check valve | 1 | | | |
| 32 | Seal | 1 | | Replace | |
| 33 | Air line | 1 | | | |
| 34 | Jet | 6 | | Torque 1.0 - 1.2 mkg | |
| 35 | Seal | 6 | | Replace | |
| 36 | Pulley, engine | 1 | | | |


TENSIONING AIR PUMP BELT

Adjusting


1. Loosen bolt.
2. Move air pump to left.
3. Tighten bolt.
4. The belt tension is correct, if the belt can be pressed together about 15 mm (5/8 in.) at its centerpoint with considerable thumb pressure.

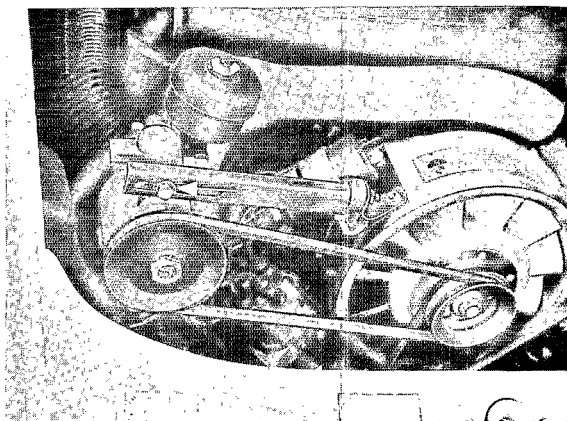

Removing/installing pulley (California version).

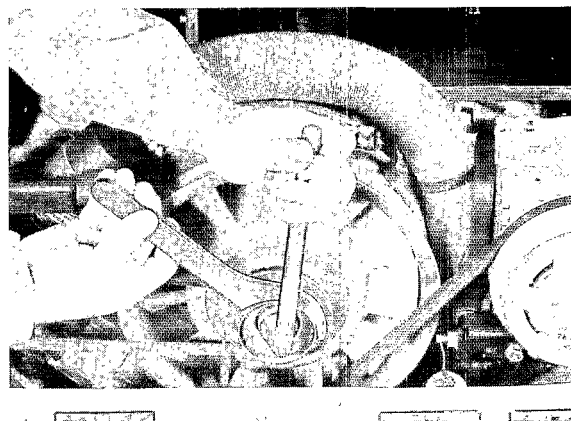

REMOVING AND INSTALLING REACTORS AND EGR EQUIPMENT

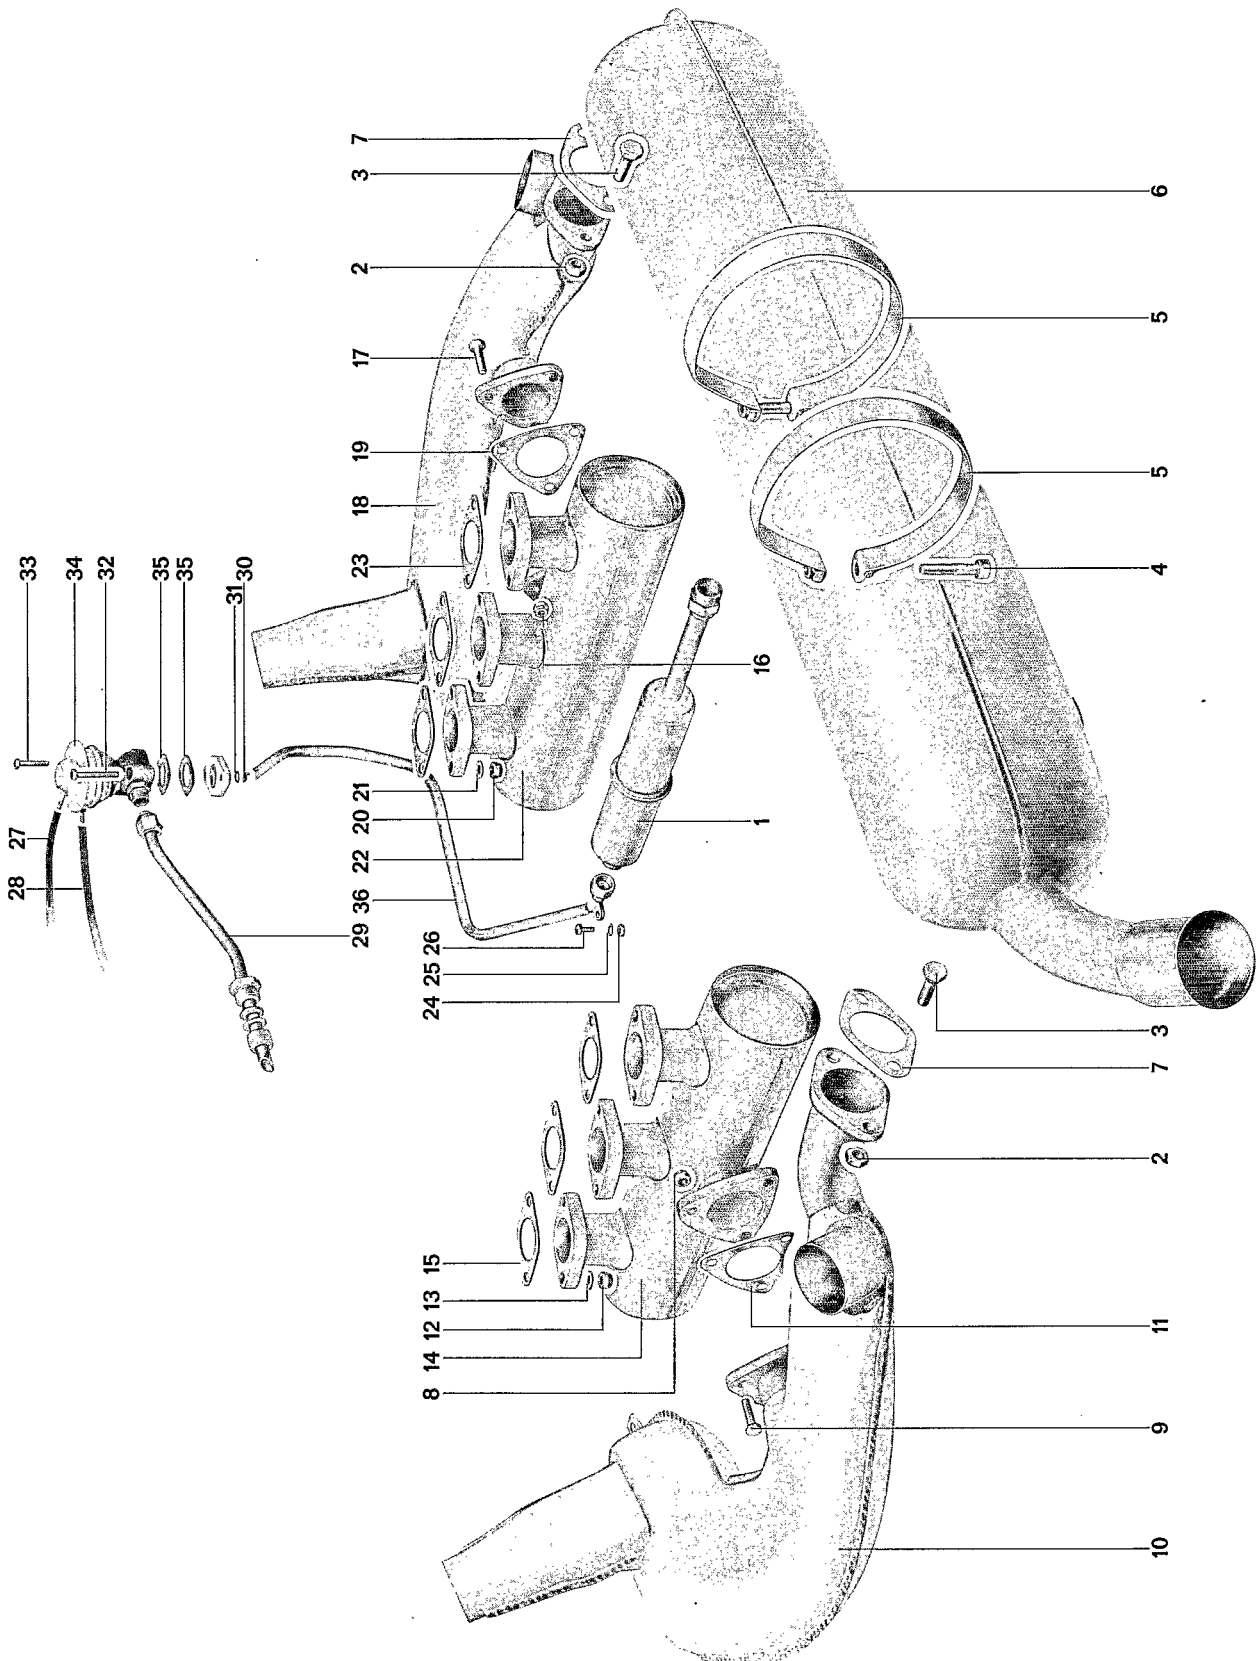

| No. | Description | Qty. | Note when | | Remarks |
|-----|--------------------|------|--|---|---------|
| | | | removing | installing | |
| 1 | EGR filter | 1 | | Replace every 30,000 miles | |
| 2 | Nut (copper pltd.) | 4 | | Replace | |
| 3 | Bolt | 4 | | Replace, if necessary | |
| 4 | Socket head screw | 2 | | | |
| 5 | Clamp | 2 | | | |
| 6 | Muffler | 1 | | Check for leaks and damage | |
| 7 | Gasket | 2 | | Replace | |
| 8 | Nut (copper pltd.) | 3 | | Replace | |
| 9 | Bolt | 3 | | Replace, if necessary | |
| 10 | Heat exchanger | 1 | | Check for leaks and damage | |
| 11 | Gasket | 1 | | Replace | |
| 12 | Nut (copper pltd.) | 6 | | Replace, torque to 2.3 mkp | |
| 13 | Washer | 6 | | | |
| 14 | Reactor | 1 | Allow it to cool down to room temperature. Remove heat exchanger and oil return line | Check for leaks | 2.3-3/1 |
| 15 | Seal | 3 | | Replace, install with blue side facing toward cylinder head | |
| 16 | Nut (copper pltd.) | 3 | | Replace | |
| 17 | Bolt | 3 | | Replace, if necessary | |
| 18 | Heat exchanger | 1 | | Check for leaks and damage | |


| No. | Description | Qty. | Note when | | Remarks |
|-----|--------------------------|------|--|---|--------------------|
| | | | removing | installing | |
| 19 | Gasket | 1 | | Replace | |
| 20 | Nut (copper pltd.) | 6 | | Replace, torque to 2.3 mkp | |
| 21 | Washer | 6 | | | |
| 22 | Reactor | 1 | Allow it to cool down to room temperature. Remove heat exchanger | Check for leaks | 2.3-3/1 |
| 23 | Seal | 3 | | Replace, install with blue side facing toward cylinder head | |
| 24 | Nut | 1 | | | |
| 25 | Washer | 1 | | | |
| 26 | Bolt | 1 | | | |
| 27 | Vacuum hose for stage I | 1 | | Connect to top vacuum chamber | |
| 28 | Vacuum hose for stage II | 1 | | Connect to bottom vacuum chamber | |
| 29 | EGR valve outlet pipe | 1 | Only detach at EGR valve | | |
| 30 | Nut | 2 | | | |
| 31 | Washer | 2 | | | |
| 32 | Bolt | 1 | | | |
| 33 | Bolt | 1 | | | |
| 34 | EGR valve | 1 | | Check, replacing if necessary | 2.3-2/6 2.3-3/2 |
| 35 | Gasket | 2 | | Replace, install one betw. holder and EGR line and the other betw. valve and holder | |

| No. | Description | Qty. | Note when removing installing | Remarks |
|-----|-------------|------|--|---------|
| 36 | EGR line | 1 | The right engine cover must be removed to replace EGR line Check passage, cleaning if necessary | 2.3-3/2 |

EXHAUST GAS RECIRCULATION SYSTEM

Component parts of the exhaust gas recirculation system are subject to a certain amount of wear and must therefore be inspected and/or replaced after operation for 30,000 miles (also refer to Group 9).

REMOVING AND INSTALLING EGR VALVE

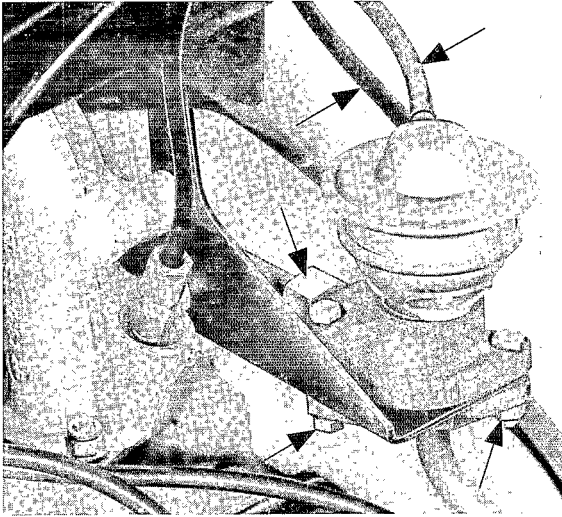


Removing

1. Disconnect vacuum hoses.
2. Detach EGR valve outlet pipe at valve.
3. Remove mounting bolts.

Note: The replacement of gaskets requires detaching the EGR line at the EGR filter and clamp.

Installing

1. Replace gaskets.

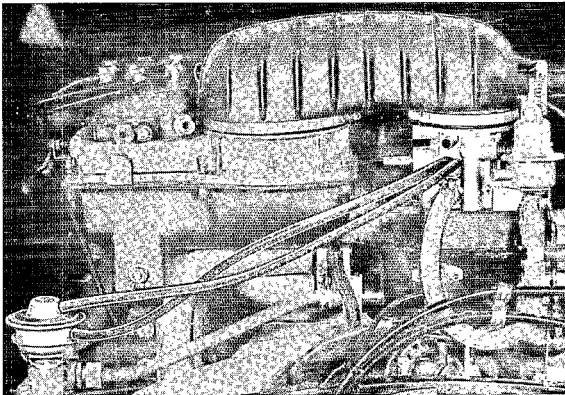

Connect vacuum hoses as follows:


- Stage I - Upper chamber to left connection on throttle housing (as seen in driving direction).
- Stage II - Lower chamber to right connection on throttle housing (as seen in driving direction).

CHECKING REACTOR FOR LEAKS


Note

The reactor's operation need not be checked. It only needs to be checked for leaks.


1. Let engine run at idle.
2. Insert appropriate plug in outlet pipe of muffler and check reactors for leaks by listening. Replace a leaky reactor.

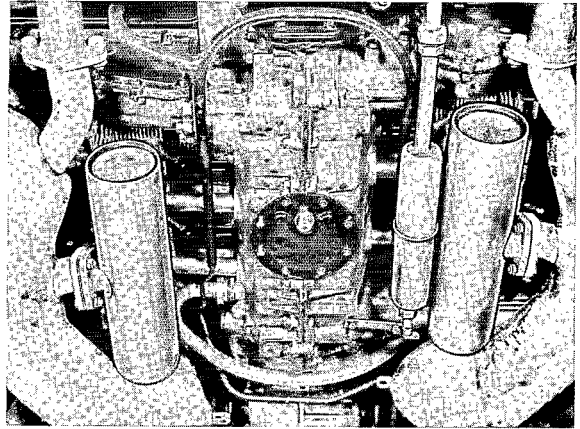

CHECKING EXHAUST GAS RECIRCULATION SYSTEM

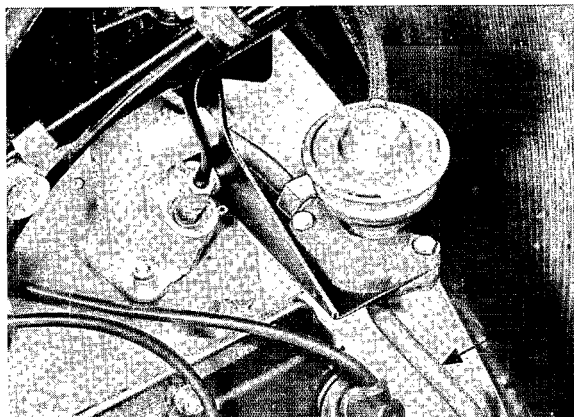

1. Let cold engine run at slightly higher idle. This will heat the outlet pipe from EGR filter to EGR valve.

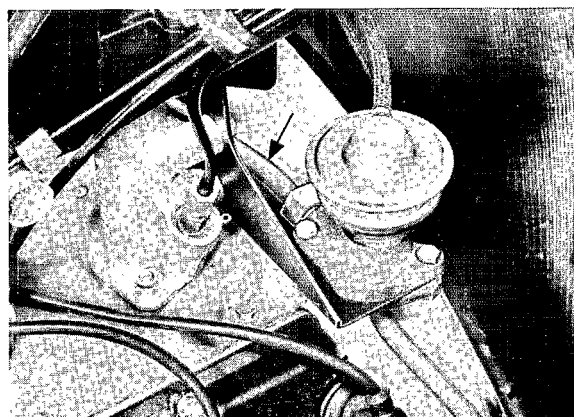


2. Increase engine speed to about 4,000 rpm. The outlet pipe from the EGR valve to the intake housing must now be hot, too.

If the outlet pipe between the EGR valve and intake housing is not hot, the following conditions could be causing this:

- a) EGR valve defective
 - b) EGR lines plugged
 - c) Vacuum bores in throttle valve housing plugged
 - d) Vacuum hoses plugged or leaking
 - e) EGR filter between muffler and EGR valve clogged
-

CHECKING AIR INJECTION SYSTEM

1. Clean air filter of secondary air pump with compressed air. Replace if severely clogged.
2. Check air pump belt tension (max. deflection: 10-15 mm).
3. Loosen and disconnect air injection hose at air pump. Insert plug in hose.
4. Connect CO tester according to manufacturer's instructions.

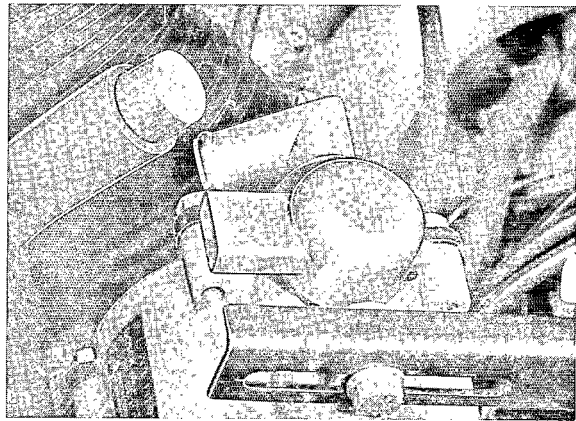

Note

The CO should be checked immediately after a test drive as long as the engine is still at operating temperature.

5. Adjust CO to 1.5 - 2.0 % at idle speed of 900 ± 50 rpm.
6. Reconnect air injection hose to air pump.
7. The CO must now drop below 1.0 % with the engine idling at 900 ± 50 rpm. If the CO is still above 1.0 %, there is a defect in the air injection system. Of course, the engine must be in perfect working condition in every other aspect. If necessary, install a new pump to determine cause.

REMOVING AND INSTALLING OIL TANK


1. Remove right rear wheel.

Caution

Cover brake disc to prevent oil spillage during removal of tank.

2. Drain oil from tank.


3. Loosen hose clamps and retaining clamp of return line.

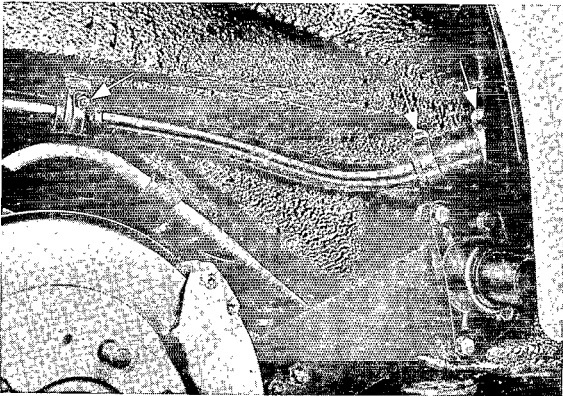


4. Detach return hose from oil tank.

5. In Type 911 S also detach the oil hose from bottom of tank.

6. Loosen retaining strap.

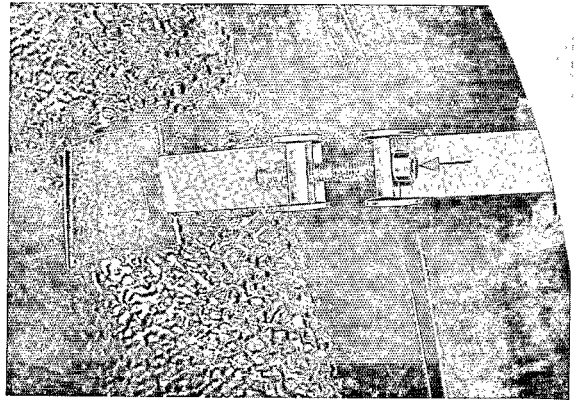

7. Pull tank partially out of the wheelhousing and remove oil line, breather hoses, and oil level gauge wires. Remove tank.

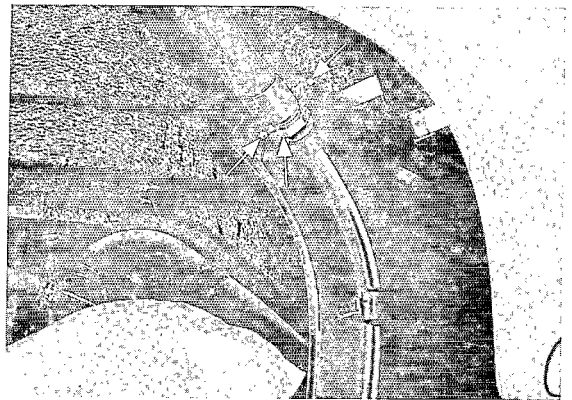

Make sure during installation that plastic caps between tank and body, and retaining strap liner are correctly seated.

Coat oil hose connections with Molykote or similar lubricant when assembling.


REMOVING AND INSTALLING OIL TANK (FROM 1973 MODEL ON)

General:

Beginning with the 1973 models, the oil tank is located in the right rear wheelhouse behind the rear axle.

Removing

1. Remove right rear wheel.
2. Drain oil.
3. Detach oil hoses and pressure relief valve.
4. Detach ground straps from batteries. Disconnect electrical wires from the oil level sensor.
5. Detach tubular support from bumper outer part and longitudinal support. Turn support to the side.
6. Unscrew oil filter.
7. Disconnect oil breather hoses from oil tank.
8. Remove oil tank retaining nuts (accessible from engine compartment).
9. Remove oil tank.
10. Remove oil filter base.

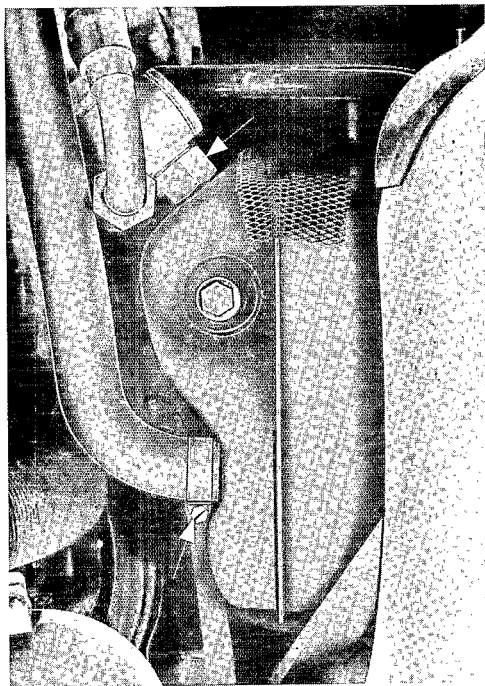


Installing

Note the following during reassembly:


1. Properly position rubber seal fitting between wheelhouse panel and oil tank. Glue seal to the oil tank.
2. Make sure that O-ring is properly seated in the oil filter base.

REMOVING AND INSTALLING AUXILIARY PRESSURE RELIEF VALVE

1. Disconnect oil hoses.
2. Remove pressure relief valve from oil tank.
Remove support bracket.

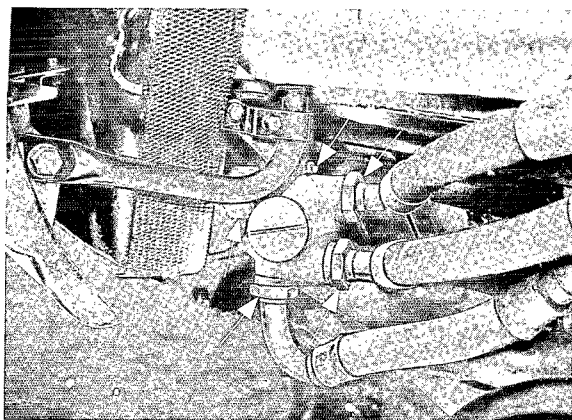

DISASSEMBLING AND REASSEMBLING AUXILIARY PRESSURE RELIEF VALVE

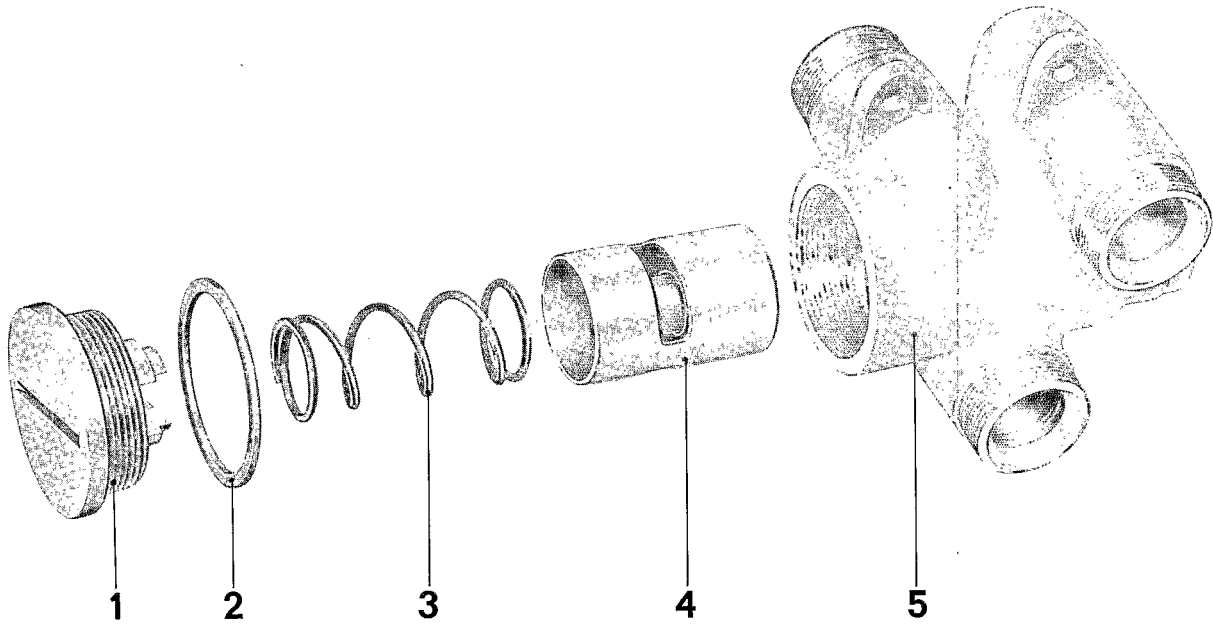


| Nr. | Description | Qty | Note when: | | Remarks |
|-----|----------------------|-----|------------|------------|---------|
| | | | removing | installing | |
| 1 | Plug | 1 | | | |
| 2 | Seal ring | 1 | | Replace | |
| 3 | Spring | 1 | | | |
| 4 | Relief valve plunger | 1 | | | |
| 5 | Relief valve housing | 1 | | | |


REMOVING AND INSTALLING OIL COOLER COIL

Removing

1. Remove right front wheel.
2. Disconnect oil hoses.
Caution:
Counter with a second open-end wrench.

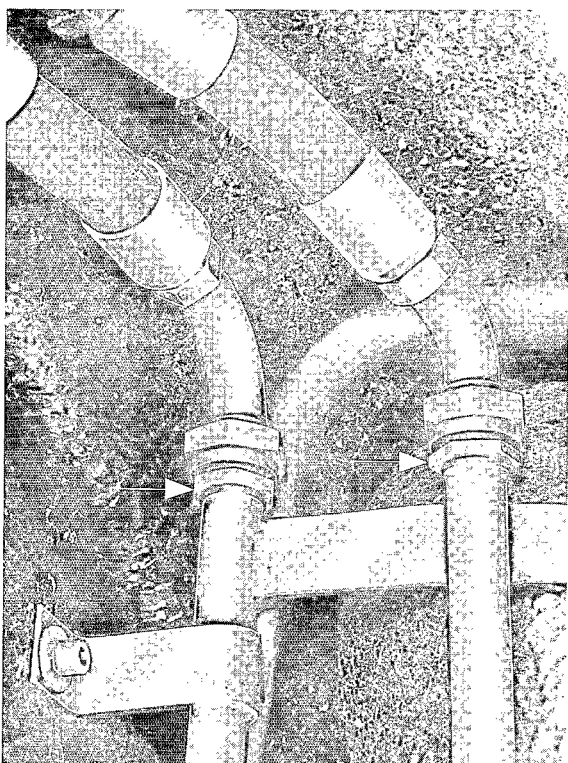

3. Remove Allen bolts and retaining screw from the right bumper bracket.

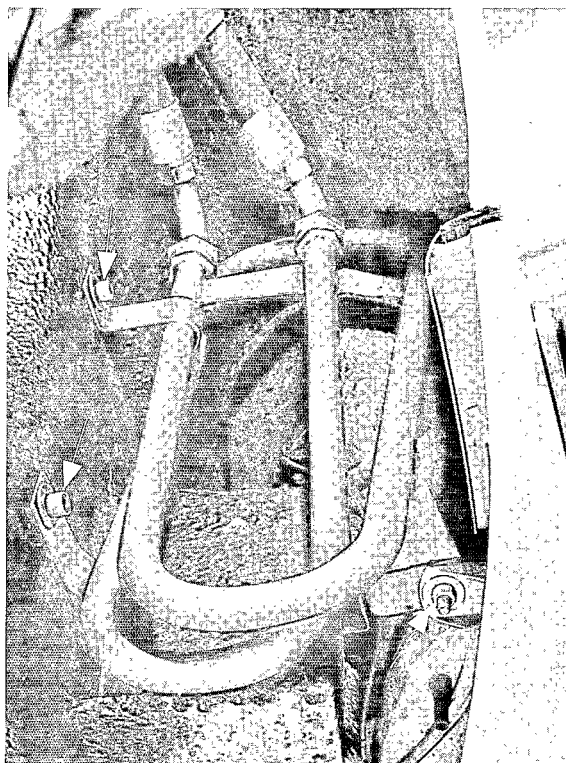

4. Remove oil cooler coil.

Installing

Apply counter-force at the oil lines during installation to prevent damage.

Coat oil hose connectors with Molybdenum disulfide grease during installation.

REMOVING AND INSTALLING OIL COOLER


General:

Beginning with the 1973 models, all six-cylinder engines are equipped with a two-piece air shroud which simplifies the removal and installation of the oil cooler.


Removing

1. Remove air filter top.
4. Remove oil cooler air duct.



2. Remove front engine shroud.

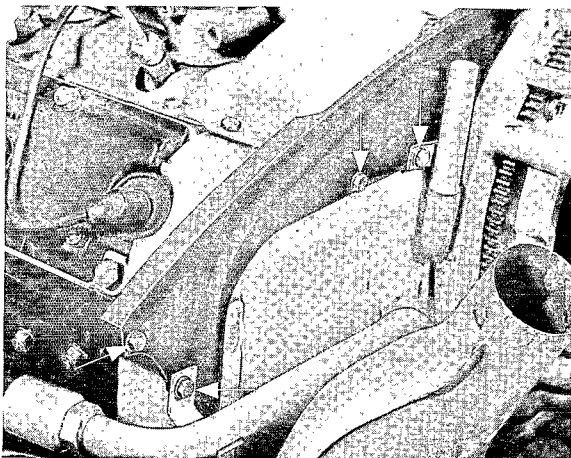

3. Remove right engine shroud.

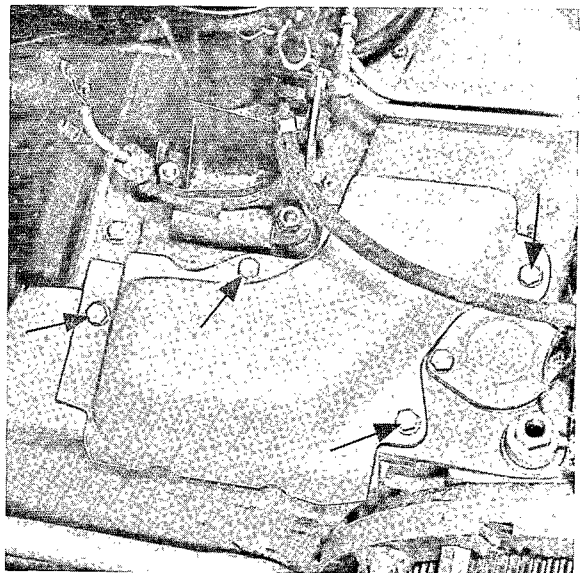

5. Drain oil.
6. Detach oil hose from oil cooler and remove upper retaining nuts.

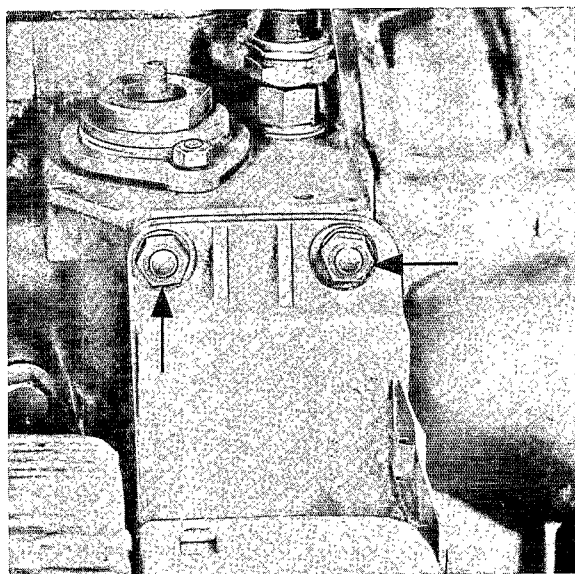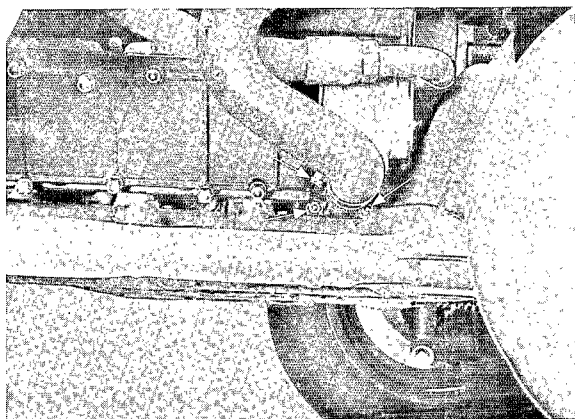

Installing



Install new sealing rings at the oil cooler.


NOTE: When positioning the oil cooler on crankcase, make sure that sealing rings are properly seated.

REMOVING AND INSTALLING OIL TANK BEGINNING WITH 1974 MODELS

Removal


1. Remove right rear wheel.
2. Drain oil.
3. Detach oil hoses and remove bolt from support tube of lower fender section.
4. Remove screws from support tube and turn it to the side.
5. Detach wires from oil level sender.
6. Detach breather hoses and remove tank cover from tank.
7. Unscrew oil filter.

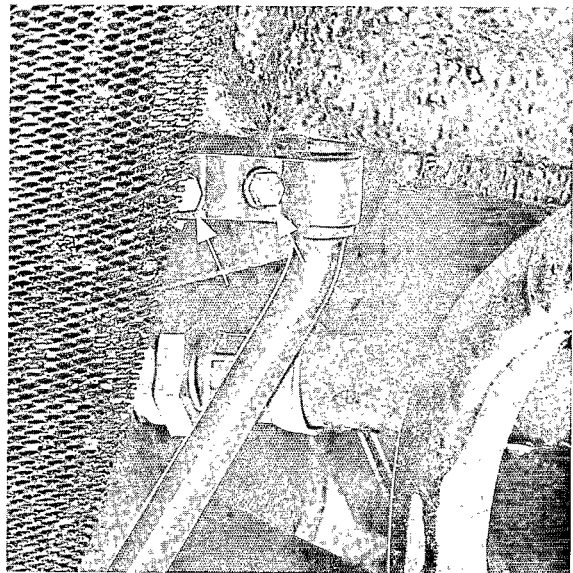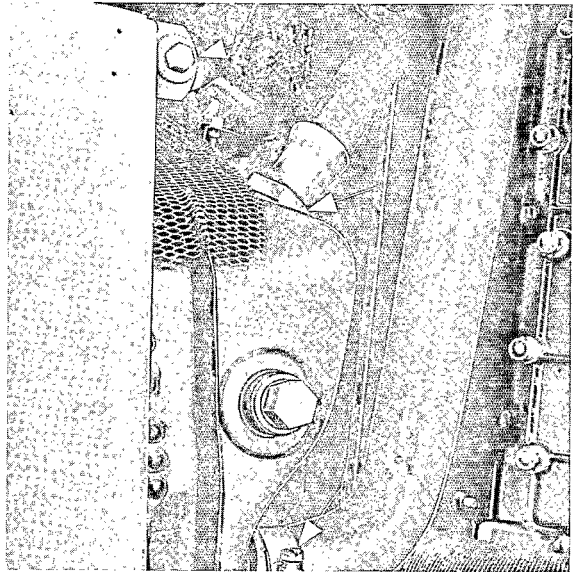

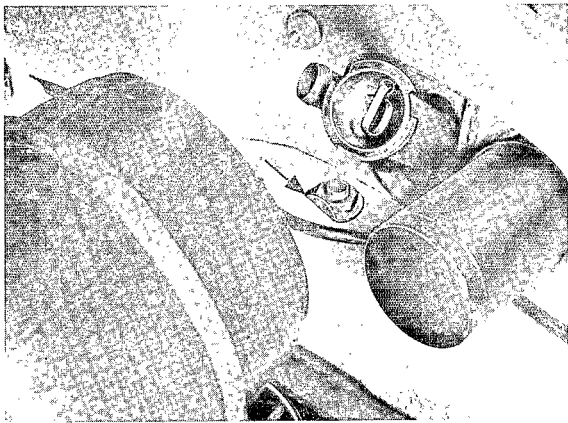

8. Open the lock plate, remove nut, and pull out support tube through the bottom.

9. Remove oil tank retaining nuts and washers.

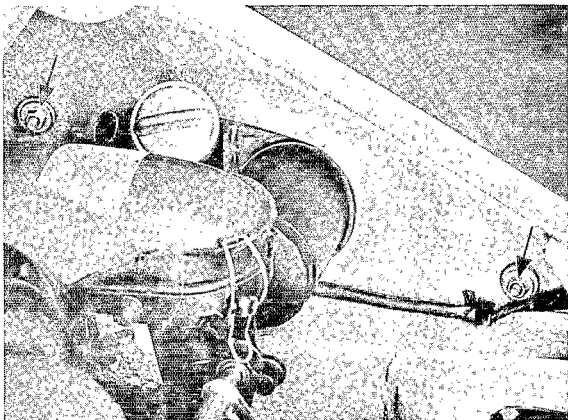

Installation


1. Glue wheelhouse gasket to oil tank in proper position.

REMOVING AND INSTALLING PRESSURE RELIEF VALVE OF COOLING COIL
BEGINNING WITH 1974 MODELS


Removal

1. Drain oil from tank.
2. Detach oil lines.
3. Remove retaining clamp from upper oil lines.
4. Remove the valve.

Caution:
Catch spilling oil.

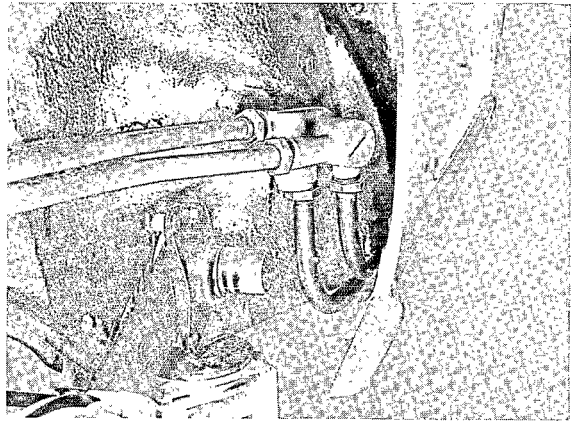

DISASSEMBLING AND REASSEMBLING PRESSURE RELIEF VALVE
Beginning with 1974 Models

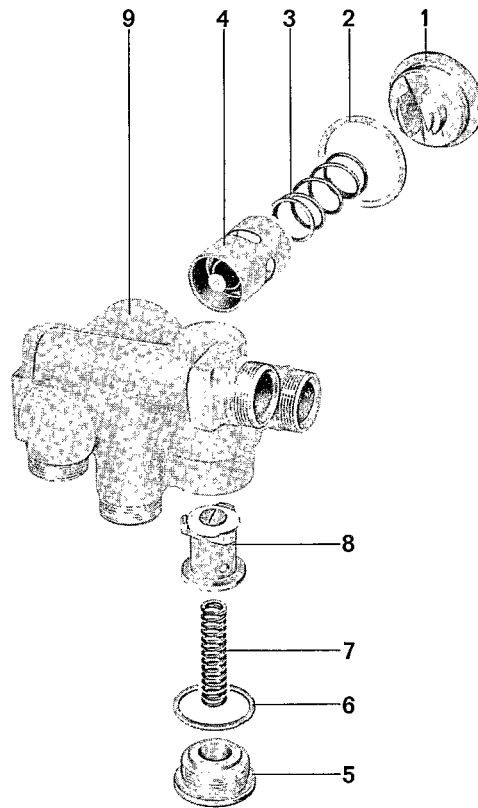

| No. | Description | Qty | Note when: | | Remarks |
|-----|-----------------------------------|-----|------------|------------|---------|
| | | | removing | installing | |
| 1 | Plug | 1 | | | |
| 2 | Gasket | 1 | | Replace | |
| 3 | Spring | 1 | | | |
| 4 | Plunger | 1 | | | |
| 5 | Plug | 1 | | | |
| 6 | Gasket | 1 | | Replace | |
| 7 | Spring | 1 | | | |
| 8 | Plunger for pressure relief valve | 1 | | | |
| 9 | Valve housing | 1 | | | |

REMOVING AND INSTALLING OIL COOLER COIL


Beginning with 1974 models

Removal

1. Remove right front wheel.


2. Disconnect oil hoses.

Caution:
Counterhold with a second open-end wrench.
Catch spilling oil.

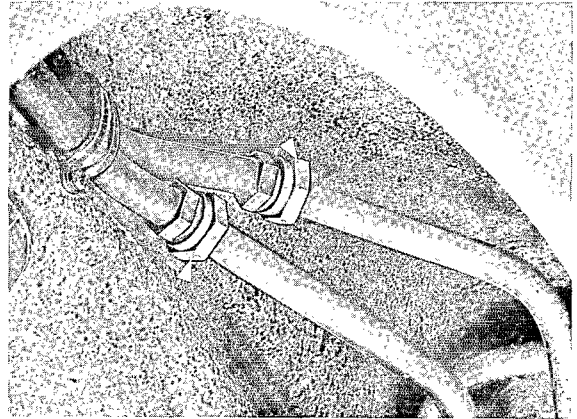

3. Remove retaining bolt and take cooler coil out.

4. Remove attaching bracket.

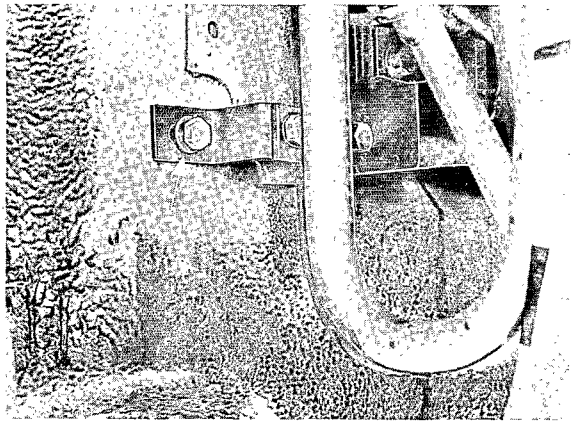

Installation

1. Apply counter force when connecting oil lines to prevent damage.

2. Coat oil hose connectors with MOLYKOTE-A during installation.


3. Mount cooler coil without stress.

SERVICE INSTALLATION OF COOLING COIL OIL LINES BEGINNING
WITH 1974 MODELS

1. Raise car on hoist. Remove wheels on right side of car.


2. Drain oil from oil tank.

3. Disconnect oil return hose from engine to oil tank.

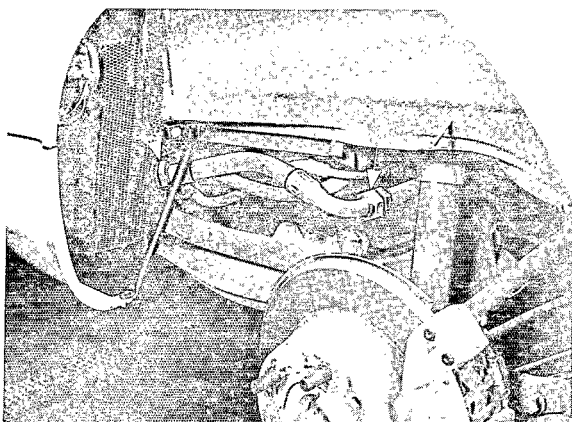

4. Remove rocker panel cover.


5. Remove plugs in oil line and cooling coil mounting points on front wheelhousing.

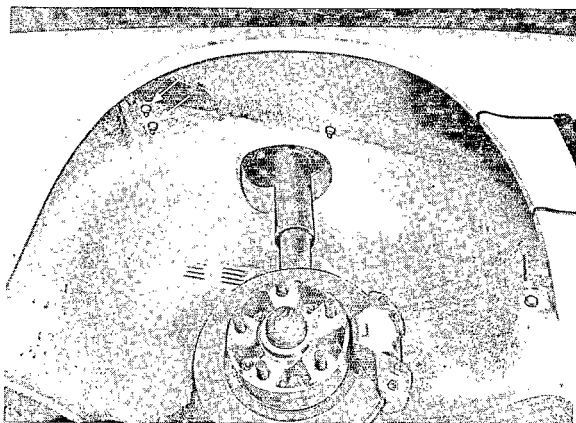


6. Grind down or saw present spacers (three plastic bushings) to a thickness of 5mm (3/16 in.)

7. Place rubber guards on oil lines.


8. Place both oil lines along rocker panel. The top line must rest on fender connector plate. Install spacers and mounting clips. Only tighten mounting screws slightly.

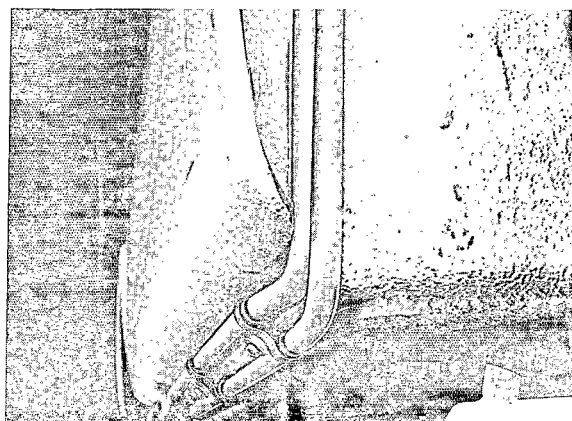


9. Connect pressure relief valve housing to oil lines.

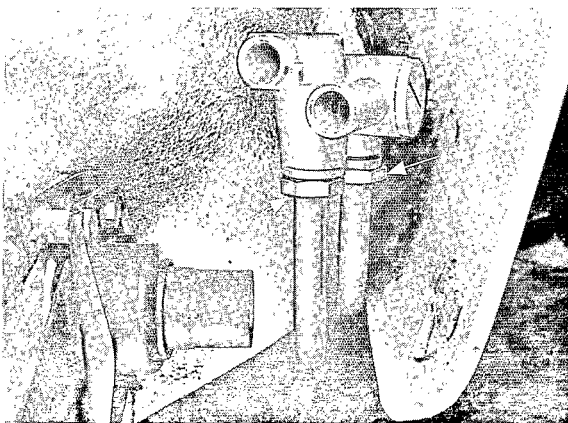

10. Slide in rocker panel cover between spacer and washer. Tighten cover.

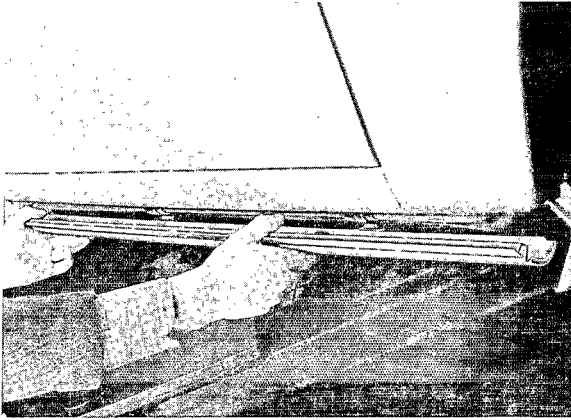


11. Place oil hoses along rear wheelhousing and connect. If necessary, cut threads on stud.

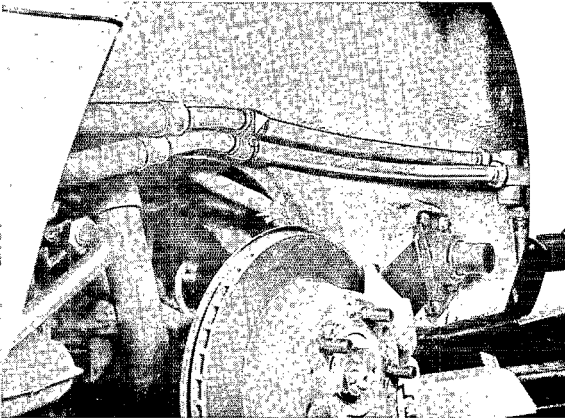

12. Connect cooling coil to oil lines.

13. Fasten cooling coil and lines to wheelhousing.

14. Tighten all oil line connections.

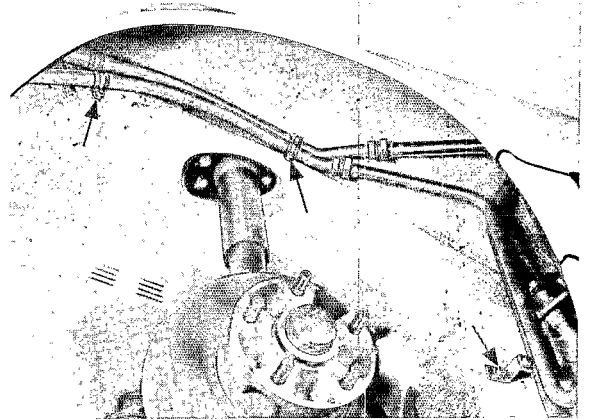


15. Check for leaks. This requires the engine oil temperature to be at least 83°C (182°F), so that the pressure relief valve will release the flow of oil to the cooling coil.


REPLACING OIL LINES TO FRONT OIL COOLER OR TO COOLING COIL

Installation of side turn signals from 1981 models on made it necessary to change the oil lines to the front oil cooler or cooling coil in the front wheel well area.

Only new version lines will be available from Parts after using up the former version oil lines. Changes made necessary when installing new lines in cars with old oil lines (without side turn signals) are described in the following instructions.

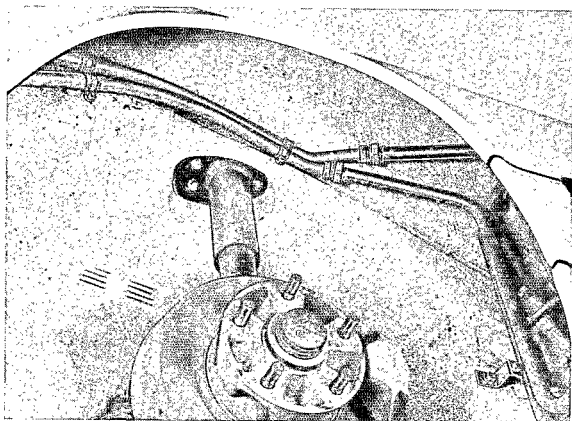

Old oil lines

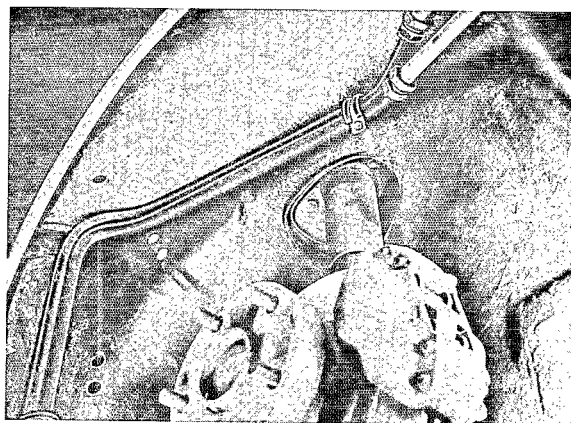


New oil lines

Removing


1. Lift car on platform hoist. Remove wheels on right side of car. Spray rust removing solution on oil line connections.

2. Remove rocker panel cover by
 - unscrewing end at front and rear,
 - pulling off rubber guard and removing cover for jack support,
 - removing metal screws at top and loosening metal screws at bottom.

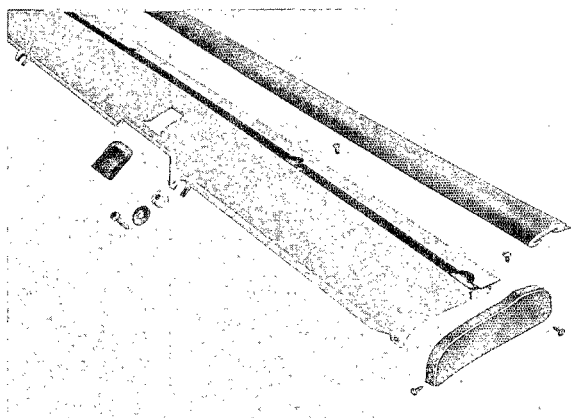


3. Disconnect wires of automatic antenna (optional extra equipment) inside of car. Unplug antenna wire on radio; removing right floor plate for this purpose. Pull both wires out of holes in wheel well.

4. Disconnect oil lines on pressure relief valve housing. Catch escaping oil.

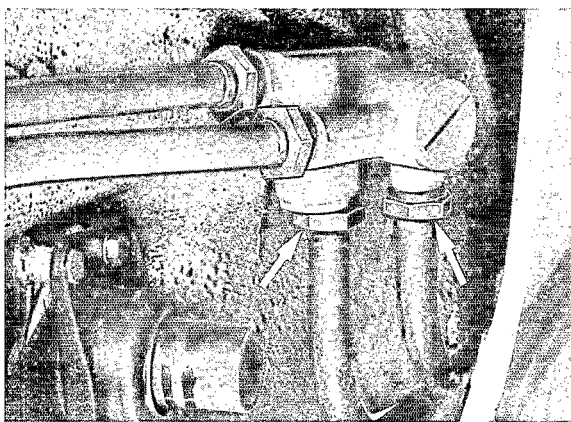

5. Disconnect oil lines on cooling coil or at oil hoses for cars with a front oil cooler. Counterhold with a second open-end wrench.

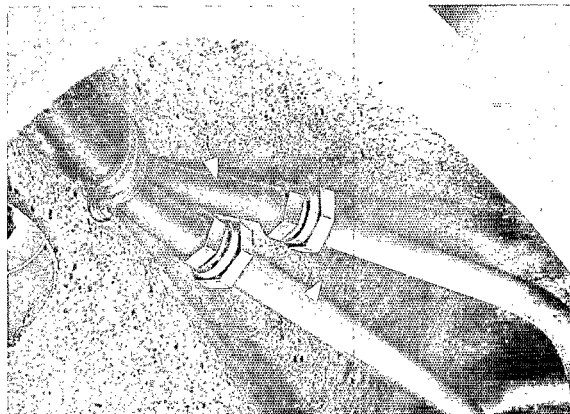


6. Unscrew mounting bracket and clamps. Remove oil lines.

Installing

1. When installing new lines in cars without side turn signals proceed as follows with the mounting points in the wheel well.


- | | |
|-----------|--|
| Point A | Is still applicable. |
| Point B+C | Not applicable; plug with 6 x 10 mm hex. head bolts used in conjunction with a body sealing compound. |
| Point D | New (drill a 5 mm dia. hole 255 mm/10 in. from wheel house/floor plate joint and 75 mm/3 in. from fender joint plate). |

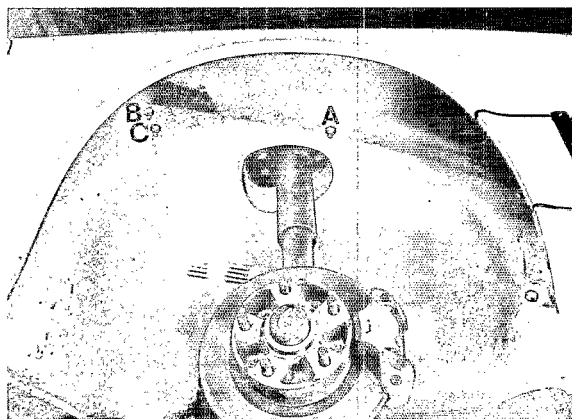



Note

Coat oil line connection threads with Optimoly HT or Molykote A prior to installing. Make sure cooling coil remains installed without stress. If necessary, change installed position so that wheel does not scrape on cooling coil when turned to full lock position.


5. Mount oil lines on wheel well. Use 6.3 x 19 mm hex, head metal screw at new mounting point when installing new oil lines in a car without side turn signals.

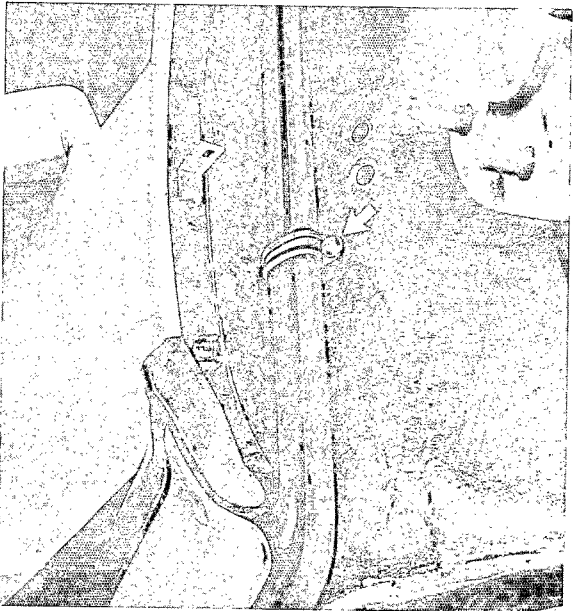


6. Reconnect automatic antenna wires. Check function of radio and antenna.
7. Push in rocker panel cover between spacer and washer.

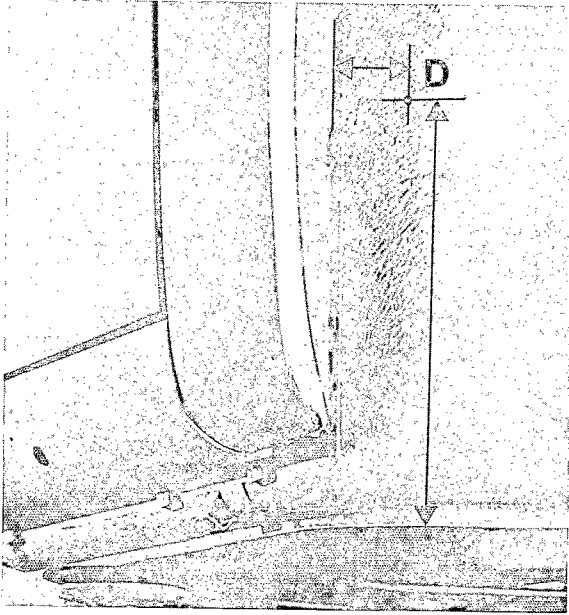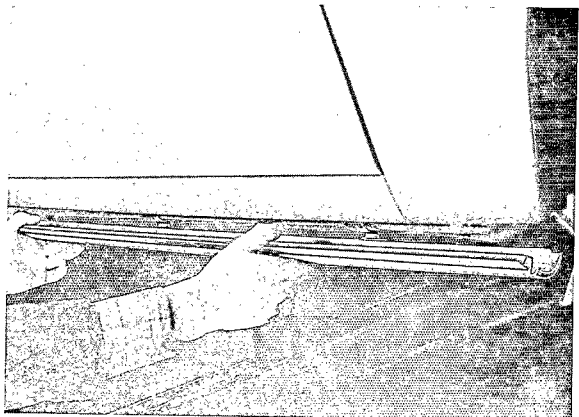

2. Install hoses on oil lines for protection.
3. Route both oil lines along side member trim. Upper line must be on fender joint plate. Install spacers and clamps. Tighten mounting bolts only finger tight.
4. Connect oil lines on pressure relief valve housing and cooling coil or oil hoses for cars with a front oil cooler.

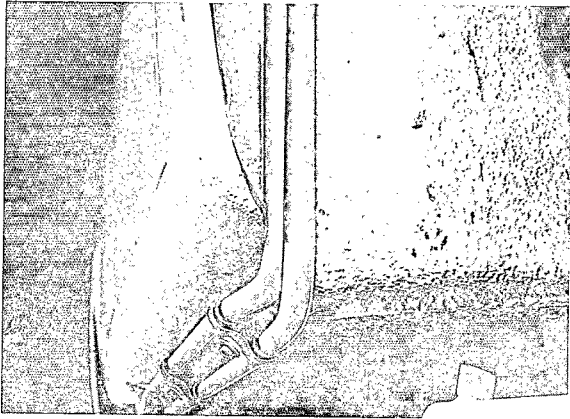

8. Finish installation of cover. Connect rubber guard on one end, bend back sharply and press on continuously. Lip must fit tightly on body at top. If necessary, realign.

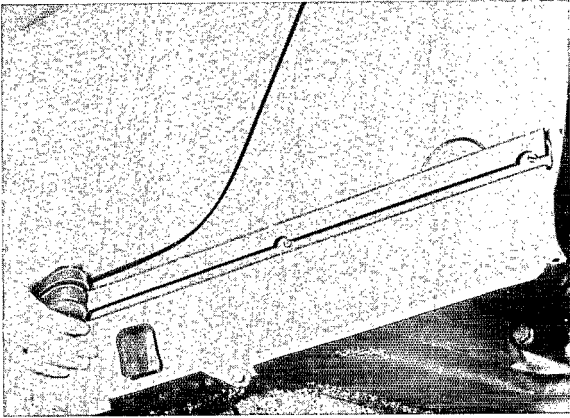

9. Check system for leaks. This requires that engine oil temperature be at least $83^{\circ}\text{C}/181^{\circ}\text{F}$ so that the governor can release flow to the cooling coil or front oil cooler. Correct oil level.
-


REMOVING AND INSTALLING FRONT OIL COOLER (1980 Model)

Removing


1. Remove right front wheel.
2. Disconnect oil hoses.

Note


Use a second wrench as a counterhold. Catch escaping oil.

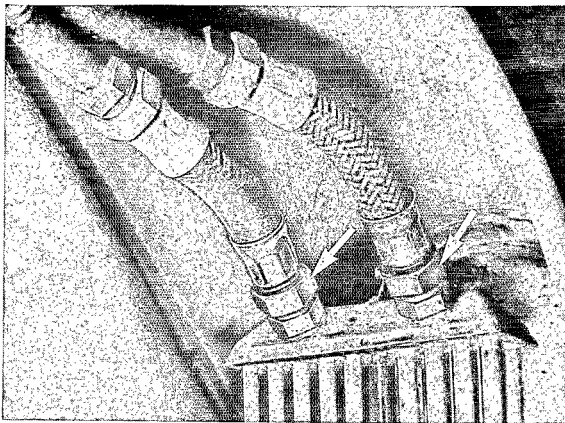

3. Loosen outer nut on upper rubber mount.

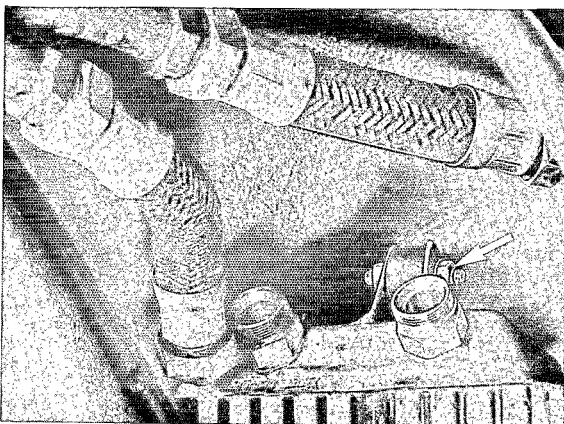


4. Loosen lower nuts and remove oil cooler upward.

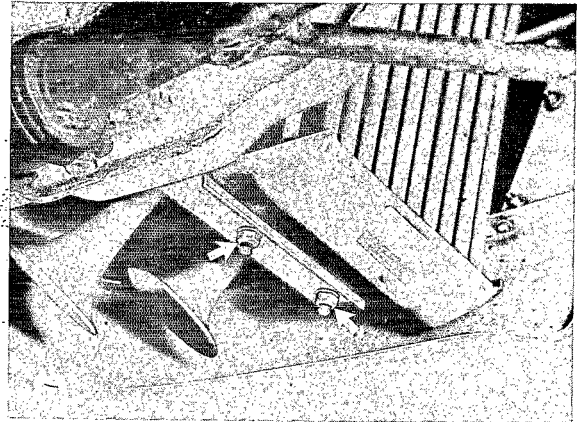

Installing

1. When installing counterhold at the cooler connections to prevent damage.
2. Coat connections with Optimoly HT.
3. Check connections for leaks. This requires that the regulator for the front oil cooler be open to have oil flowing through the cooler (engine oil temperature above 83° C/181° F).

SPRINGS FOR PRESSURE RELIEF AND SAFETY VALVES OF ENGINE OIL CIRCUIT

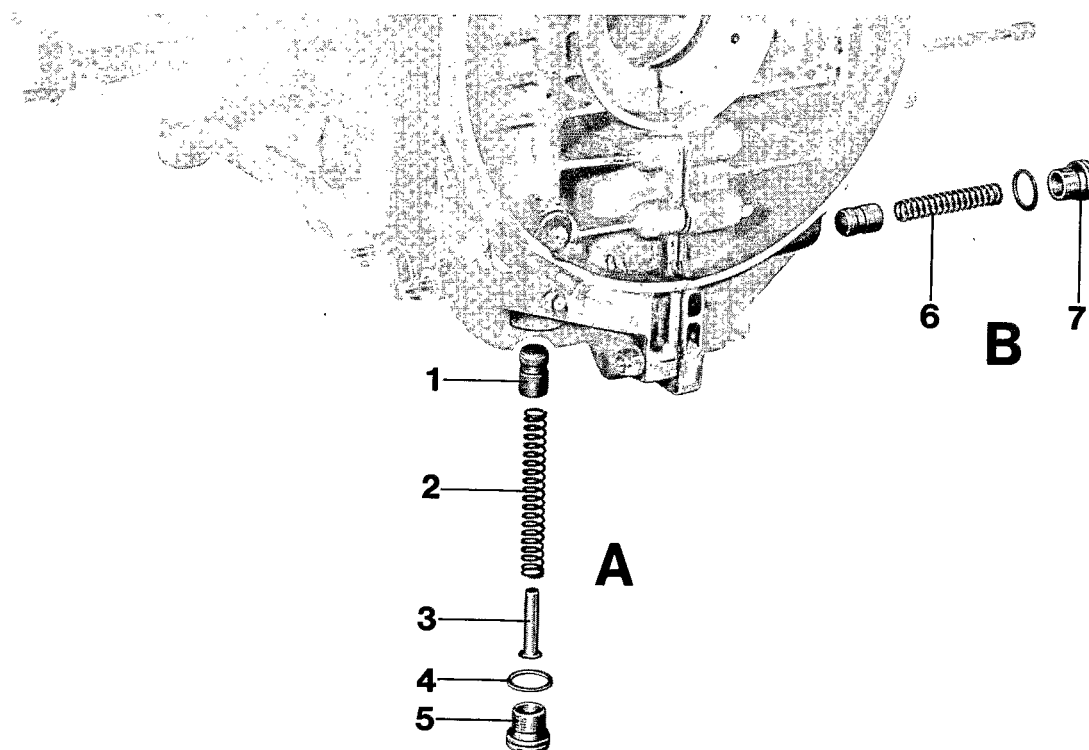

| No. | Description | Part No. | Pressure Relief Valve | | Safety Valve |
|-----|------------------------------|----------------|-----------------------|-----------|--------------|
| | | | to 1977 | from 1978 | |
| 1 | Piston pressure relief valve | 911.107.512.00 | X | X | |
| 2 | Spring - old - 70 mm long | 901.107.531.00 | X | | |
| 2 | Spring - new - 86 mm long | 930.107.531.01 | | X | |
| 3 | Spring guide | 930.107.533.00 | | X | |
| 4 | Gasket | 900.123.071.30 | X | X | X |
| 5 | Plug - old - without groove | 999.064.010.02 | X | | |
| 5 | Plug - new - with groove | 999.064.016.02 | | X | |
| 6 | Spring, safety valve | 901.107.531.00 | | | X |
| 7 | Plug - new - with groove | 999.064.016.02 | | | X |

Installation Note

The (86 mm long) spring for pressure relief valve may only be installed together with the spring guide.

REMOVING AND INSTALLING INJECTION TUBE IN CAMSHAFT HOUSING

Removing

1. Drill 9 mm deep hole in plug with a 4,8 to 5 mm dia. drill bit. Then cut M 6 threads with a bottoming tap. Pull out plug with an M 6 screw and spacer.



CAUTION Be careful not to damage sealing surface when removing plug.


2. Loosen centering screws and slide injection tube out.

Installing

1. Install injection tube, making sure that locating bore for plug is positioned correctly.


CAUTION Separate bores must face upward toward intake valve covers. Double bores, not shown in illustration, face cam bearing surface.

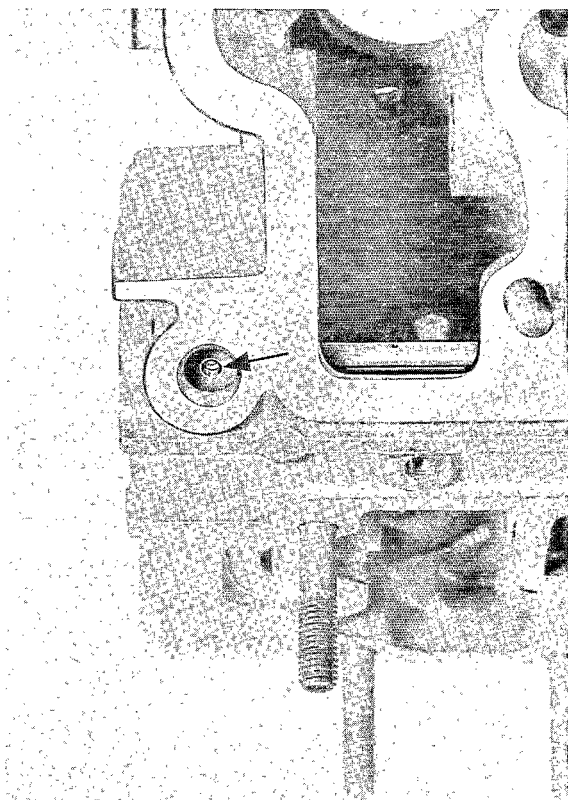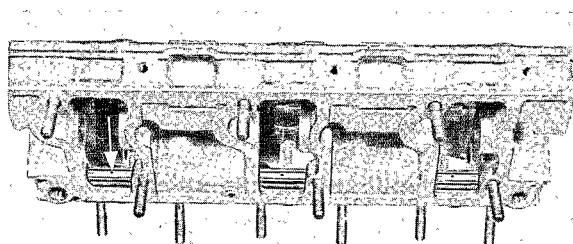

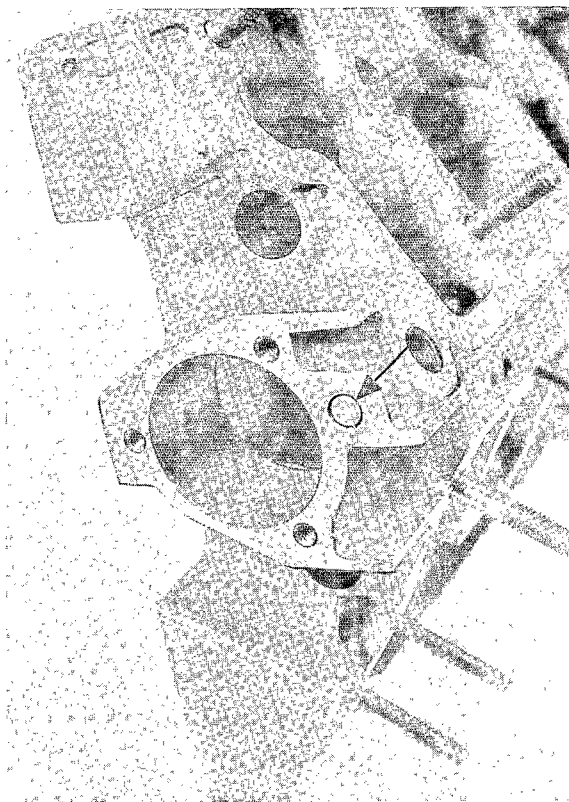


2. Lubricate new plug and hole, coat with a double component adhesive and install plug.

CAUTION Upset plug before installation if it does not fit tightly in housing.

- 
3. Plug is pressed in about 0.3 mm deeper than sealing surface.

OVERHAULING CHAIN TENSIONER

TOOLS

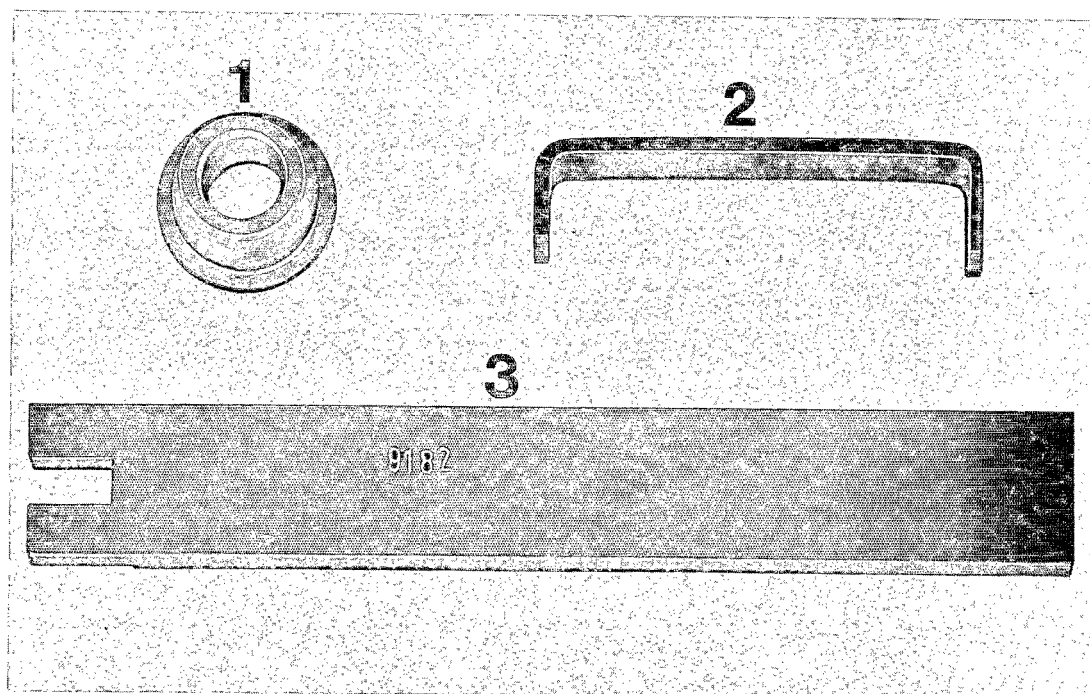

| No. | Description | Special Tool | Remarks |
|-----|----------------|--------------|------------------------------------|
| 1 | Adjusting ring | P 214 c | For chain tensioner 930 105 049 00 |
| 2 | Clamp | P 214 | |
| 3 | Assembly lever | 9182 | |

OVERHAULING NEW VERSION CHAIN TENSIONER



General Information


Only the chain tensioner having Part No. 930.105. 049.00 or the repair kit having Part No. 911.105. 901.01 with modified parts are available from parts.

Only the new version chain tensioners may be repaired.

New Version Identification:

- a) Chamfer on upper part of housing
- b) Total height: $78,2 \pm 0,2$ mm and Porsche trademark
- c) Mounting boss and housing have a stop

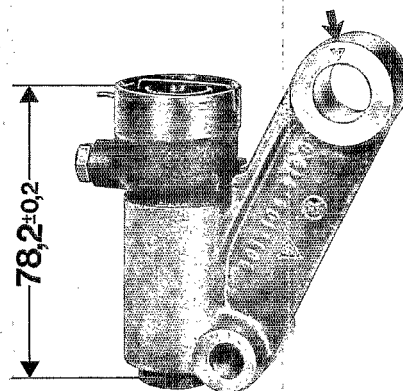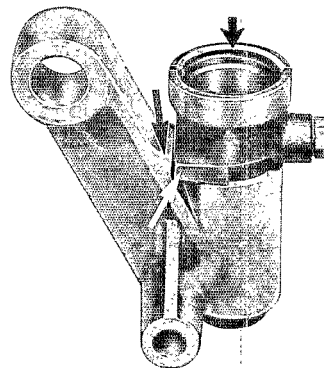

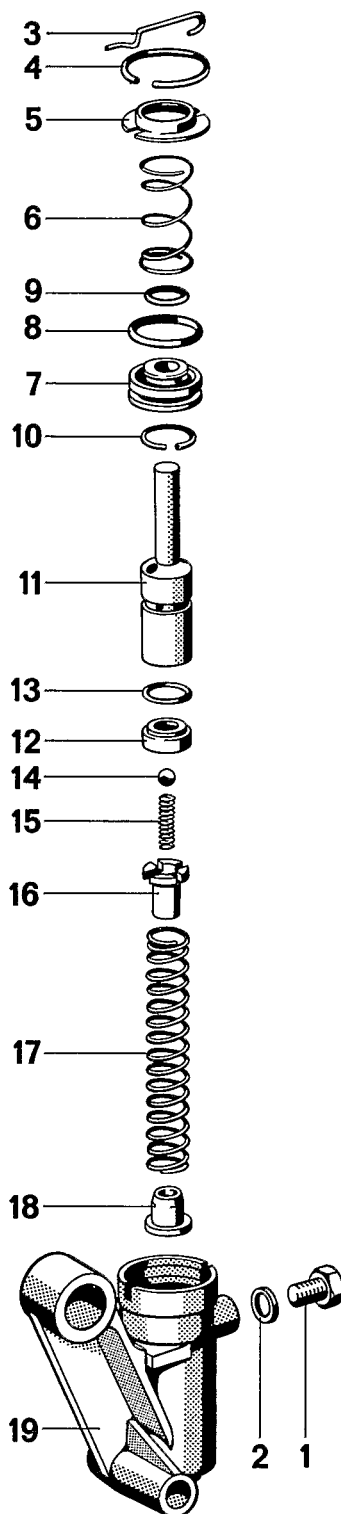

| No. | Description | Qty. | Note When: | | Special Instructions |
|-----|-------------------------|------|------------|------------|-----------------------------------|
| | | | Removing | Installing | |
| 1 | Bleed screw | 1 | | | Clamp only with complete new part |
| 2 | Sealing ring | 1 | | Replace | |
| 3 | Clamp | 1 | | | |
| 4 | Snap ring | 1 | | Replace | |
| 5 | Spring retainer | 1 | | | |
| 6 | Spring | 1 | | Replace | |
| 7 | Piston (alum.) | 1 | | | |
| 8 | O-ring | 1 | | Replace | |
| 9 | O-ring | 1 | | Replace | |
| 10 | Snap ring | 1 | | Replace | |
| 11 | Piston | 1 | | | |
| 12 | Intermediate piece | 1 | | Replace | |
| 13 | O-ring | 1 | | Replace | |
| 14 | Ball, 5 mm | 1 | | Replace | |
| 15 | Spring | 1 | | Replace | |
| 16 | Cage | 1 | | Replace | |
| 17 | Spring | 1 | | | |
| 18 | Spring guide | 1 | | Replace | |
| 19 | Chain tensioner housing | 1 | | | |

DISASSEMBLING AND ASSEMBLING CHAIN TENSIONER

Disassembling

1. Clamp chain tensioner in a vise and remove upper circlip.

Note

Spring retainer under pressure.

2. Remove spring retainer and spring.
3. Remove bleed screw and sealing ring.
4. Pull out aluminum piston carefully with a suitable tool.
5. Push lower snap ring out of groove with a small screwdriver inserted through bleed screw bore.
6. Remove piston, intermediate piece with O-ring valve ball (5 mm) with spring, cage for ball, spring and spring guide.

Note

The intermediate piece could be stuck in the piston. If so, remove intermediate piece by lightly tapping piston against piece of wood.

Assembling

1. Clean parts thoroughly, check for wear and replace if necessary.
Inspect piston spring for wear and deformation (bent), replacing if necessary.

2. Push chain tensioner piston with mounted aluminum piston, without O-rings, into chain tensioner housing. Both pistons must move easily. It is especially important that the chain tensioner piston moves easily in the lower piston position. Remove any pressure spots on the pistons with emery cloth.

3. Install spring guide, spring, cage, spring, ball, intermediate piece with O-ring as well as piston and secure with snap ring.

Note

When installing intermediate piece in the piston make sure O-ring fits properly in groove. Give O-ring a light coat of oil.

4. Fill chain tensioner to upper edge with 15 W/50 engine oil and bleed.
Bend the end of an approx. 1 mm dia. steel wire to make an inclined step and push it through the piston bore against the ball (see Workshop Manual 911, Volume 1, Page E 106).


Move piston up and down slowly within the stroke range until no more air bubbles escape at the bores.

5. Clean inner and outer grooves of aluminum piston. Install new, lubricated O-rings and make sure they are not twisted. Install aluminum piston until the O-ring seals with the housing. Now open the bleed screw slightly and push down with Special Tool P 214 c until the tool rests on the edge of the chain tensioner. Then tighten bleed screw again without delay.

Install spring, spring retainer and snap ring.

INSTRUCTIONS FOR INSTALLATION OF CHAIN TENSIONER

To prevent damage on the chain tensioner housing, it is not permitted to pre-load the timing chain with a screwdriver. Force from the screwdriver could deform the chain tensioner housing, which in turn would cause the the aluminum piston (7) to seize. Only use Special Tool 9182 for pre-loading.

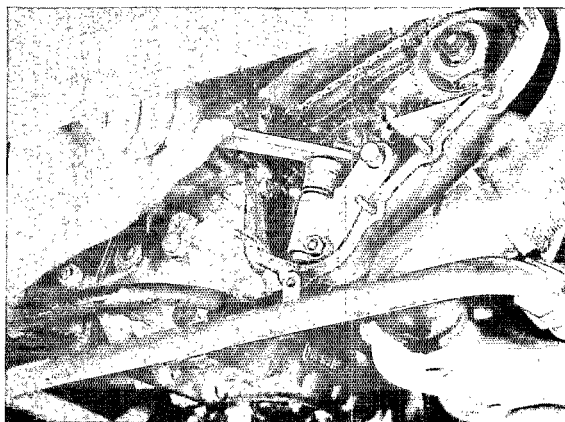

SEALING CYLINDER HEAD/CAMSHAFT HOUSING MATING SURFACES

Note

Only Loctite No. 573 (green color) should be used as a sealing compound.

Loctite No. 573 hardens only in conjunction with metal and exclusion of air. Not more than 10 minutes should elapse between application of sealing compound coat and assembly of parts, otherwise the sealing compound on metal would start to harden.

Removing Old Sealing Compound



During repairs the old sealing compound does not have to be removed. Only grease has to be removed from the surface. A new coat of sealing compound should be applied immediately after the cleaning solution has dried. The new Loctite will dissolve the old compound remaining in the surface finish and become hard again after assembly.

Should it be necessary to remove the old sealing compound, the use of a fine steel brush is recommended for this work.

Applying Sealing Compound


1. When applying the sealing compound by hand it is recommended to use a short-pile velour roller. In addition, a tray will be required for the sealing compound with a ribbed surface for scraping off the roller.

2. Apply a very thin coat of sealing compound on the mating surface of the camshaft housing.

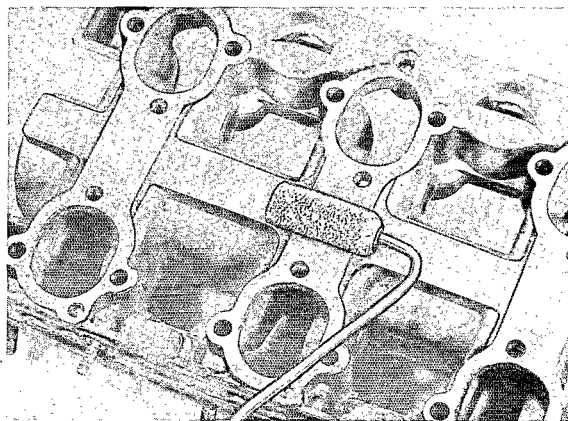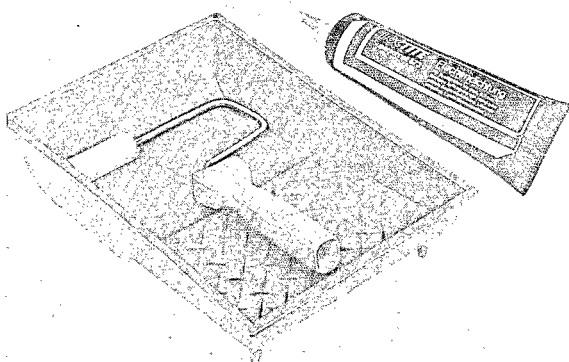

CHECKING INSTALLED LENGTH OF VALVE SPRINGS

Check distance A with Special Tool P 10 C. If necessary, correct by adding or removing chims.

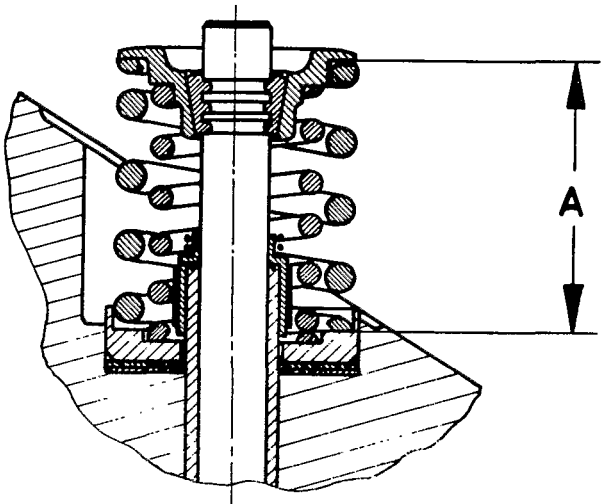

Note

Make sure spring retainer has perfect fit in special tool, machining special tool if necessary.

INSTALLED DIMENSIONS FOR 2.4 LITER ENGINE

| Vehicle Type | 911 T | 911 E | 911 S |
|---------------|-------------------------|-------------------------|---------------------------|
| Engine Type | 911/51 911/61 | 911/52 911/62 | 911/53 911/63 |
| Intake Valve | $35 \pm 0.3 \text{ mm}$ | $34 \pm 0.3 \text{ mm}$ | $35.5 \pm 0.3 \text{ mm}$ |
| Exhaust Valve | $35 \pm 0.3 \text{ mm}$ | $34 \pm 0.3 \text{ mm}$ | $34.5 \pm 0.3 \text{ mm}$ |

NOTE

The above values can also be applied to the 2.2 liter engines in the course of repair.

INSTALLED DIMENSIONS FOR 2.7 AND 3.0 LITER ENGINES

| | | |
|---------------|-------------------|-----------------|
| Vehicle Type | 911/911 S | 911 SC |
| Engine Type | 911 | 930 |
| Intake Valve | 35 ± 0.3 mm | $34.5 - 0.3$ mm |
| Exhaust Valve | 35.5 ± 0.3 mm | $34.5 - 0.3$ mm |


Note

The tolerances for cylinder heads of Carrera 3.0 and 911 SC models have been limited for manufacturing reasons. The distance of 34.5 mm must not be exceeded; the lower tolerance value would be ideal.

ADJUSTING TIMING

(Camshafts with Hexagon Head Mounting Bolts for Sprocket)

TOOLS

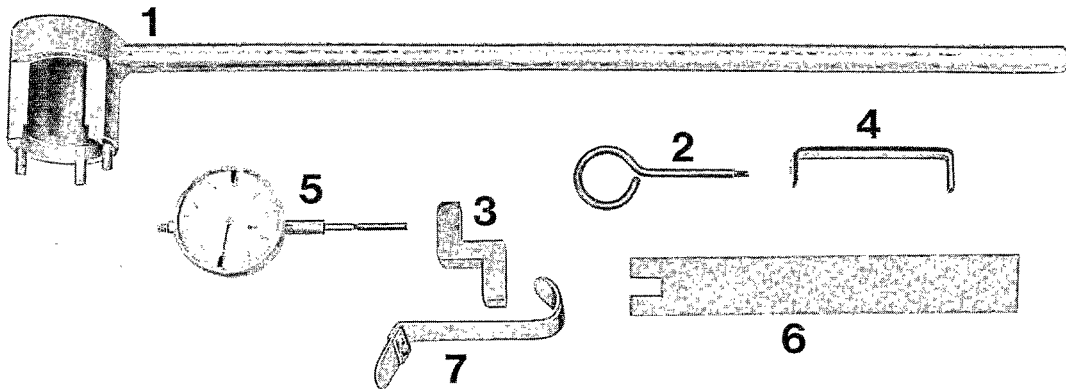


| No. | Description | Special Tool | Remarks |
|-----|------------------------------|--------------|---------------------------------------|
| 1 | Holding wrench for sprockets | 9191 | |
| 2 | Puller | P 212 | |
| 3 | Dial gauge holder | P 207 | |
| 4 | Clamp for chain tensioner | P 214 | |
| 5 | Dial gauge with tip | | Standard Tip length: approx. 40 mm |
| 6 | Assembly lever | 9182 | |
| 7 | Feeler gauge | P 213 | |

ADJUSTING TIMING

(Camshafts with Hexagon Head Mounting Bolts for Sprocket)


Basic Setting

1. Turn crankshaft until mark Z 1 on pulley is aligned with joint of crankcase or stripe on fan housing.

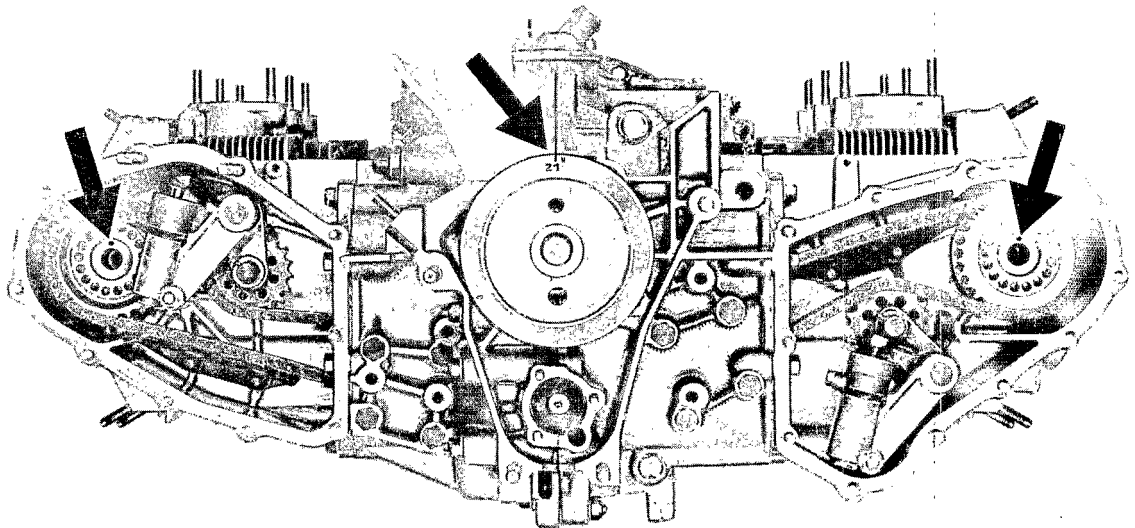


2. Position both camshafts so that punch marks face up. Engine has its basic setting (cylinder no. 1 = TDC and cylinder no. 4 = overlap) by adjusting mark Z 1 on pulley to joint and punch marks on camshafts to face up.

3. In the position described above on bore in the sprocket will be exactly aligned with a bore in the sprocket flange. Insert a locating pin in these exactly aligned bores.

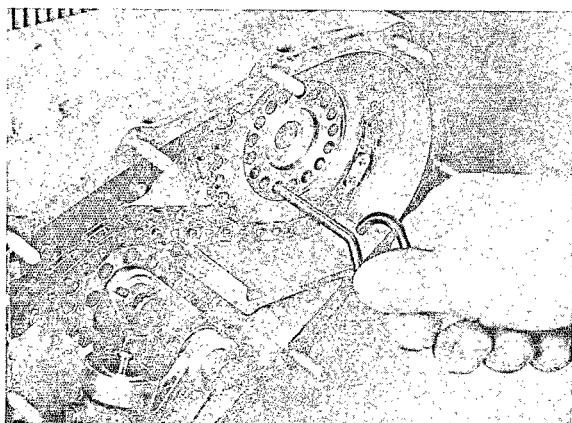

4. Tighten hexagon bolts for sprockets finger tight hold with Special Tool P 9191.

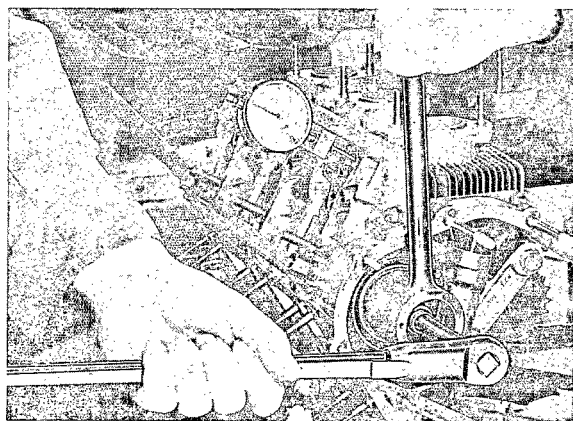


Note

Should one of the camshafts be turned out of basic setting position, proceed as follows. Remove locating pin from camshaft in basic setting position so that it cannot turn during the following adjustment. Turn mislocated camshaft to basic setting position (punch mark faces up) with Special Tool 9191. Then remove sprocket mounting bolt and locating pin, and turn crankshaft to mark Z 1 again.

Fine Adjustment


1. Check valve clearance and, if necessary, adjust exactly to 0.10 mm with Special Tool P 213. Exact valve clearance for intake valves of cylinders no. 1 and 4 is sufficient for timing adjustments.

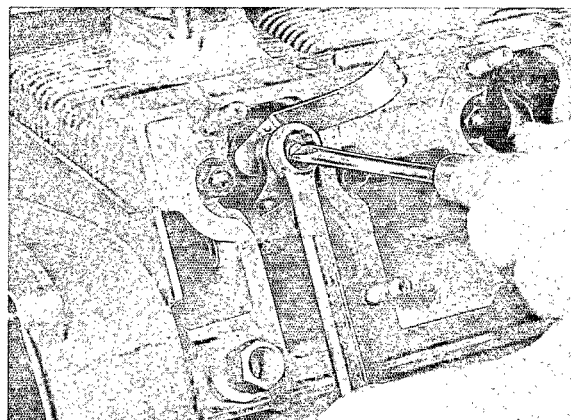

2. Pre-load timing chains.


Note

To avoid damage on chain tensioner housing, it is not permitted to pre-load timing chains with a screwdriver. Supporting the screwdriver on the chain tensioner housing could deform the latter and cause seizure of the aluminum piston. Only use Special Tool 9182 for pre-loading.

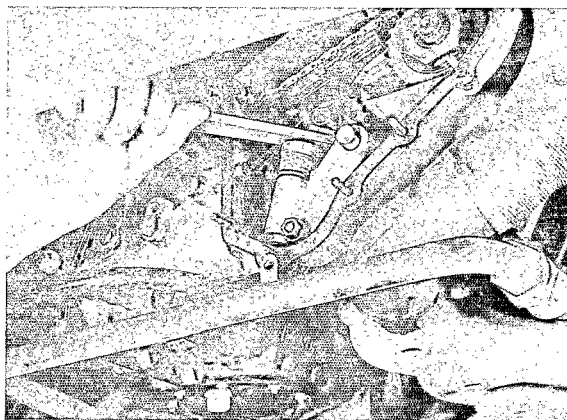

Left Camshaft Adjustment (Cylinder No. 1)

3. Mount dial gauge on stud of camshaft housing with Special Tool P 207. Set dial gauge to zero on spring retainer of intake valve for cyl. no. 1 with valve closed and approx. 10 mm pre-load.

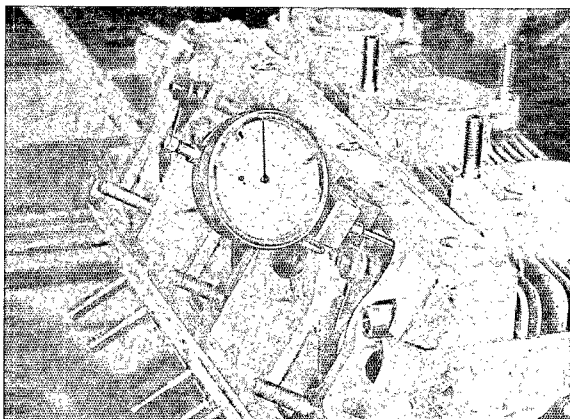

4. Now slowly turn crankshaft clockwise from Z 1 (TDC) by about 1 turn and observe dial gauge at same time.

Continue turning until the mean value of the adjusting tolerance, e. g. 0.10 mm valve lift (for 930/16 engine), is reached.

Adjusting Values

| | |
|---------------|--------------|
| Engine 930/16 | 1.4 - 1.7 mm |
| Ideal value | 1.55 mm |


5. Unscrew and remove mounting bolt on left sprocket and pull out locating pin with Special Tool P 212.

6. Turn crankshaft accordingly until mark Z 1 on pulley is exactly aligned with joint of crankcase or stripe on fan housing.

7. Install locating pin again and tighten bolt finger tight, while holding.

8. Turn crankshaft clockwise two turns (720°) and re-check setting. Indicated value should be within tolerances.

9. Tighten bolt of left camshaft to final torque of 120 Nm (86 ft lb), having a 2nd person hold with Special Tool P 9191.

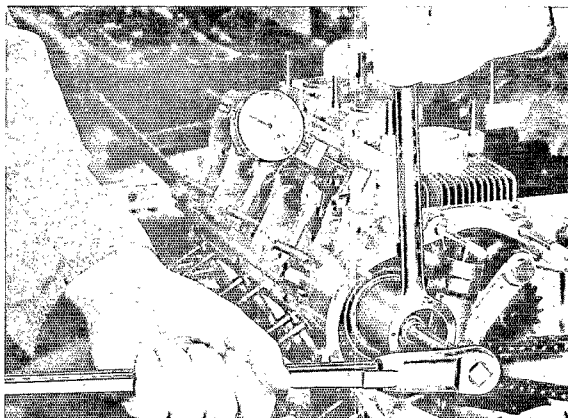

Right Camshaft Adjustment (Cylinder No. 4)

1. Set cylinder no. 4 to TDC (cyl. no. 1 overlaps).

2. Repeat adjusting procedures described in points 3 through 9 on cylinder no. 4.

PISTON CHANGES - BEGINNING WITH 1972 MODELS

1. New pistons with flatter piston tops to reduce compression ratio:

| | | |
|-------|---|---------|
| 911 T | = | 7.5 : 1 |
| 911 E | = | 8.0 : 1 |
| 911 S | = | 8.5 : 1 |


Required fuel octane rating = 91

2. Changed piston ring.
3. New table of dimensions for pistons and cylinders beginning with 1972 models.

PISTON AND CYLINDER DIMENSIONS Beginning with 1972 models

| | | |
|----------------------|-----------------------|------------------------|
| Cylinder markings | Cylinder bore dia. | Piston diameter D 1 |
|----------------------|-----------------------|------------------------|

Type 911 S Pistons

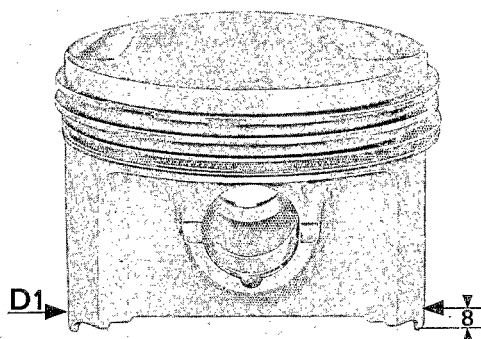


| Standard | | Tolerances ± 0.005 mm |
|---------------------|---------------|------------------------------|
| 0 | 84.000-84.010 | 83.950 |
| 1 | 84.010-84.020 | 83.960 |
| 2 | 84.020-84.030 | 83.970 |
| <u>1st oversize</u> | | |
| 0 KD 1 | 84.250-84.260 | 84.200 |
| 1 KD 1 | 84.260-84.270 | 84.210 |
| 2 KD 1 | 84.270-84.280 | 84.220 |
| <u>2nd oversize</u> | | |
| 0 KD 2 | 84.500-84.510 | 84.450 |
| 1 KD 2 | 84.510-84.520 | 84.460 |
| 2 KD 2 | 84.520-84.530 | 84.470 |

Cylinder/piston clearance: 0.045-0.065

Piston weight: 354 \pm 3 g

Type 911 E Pistons

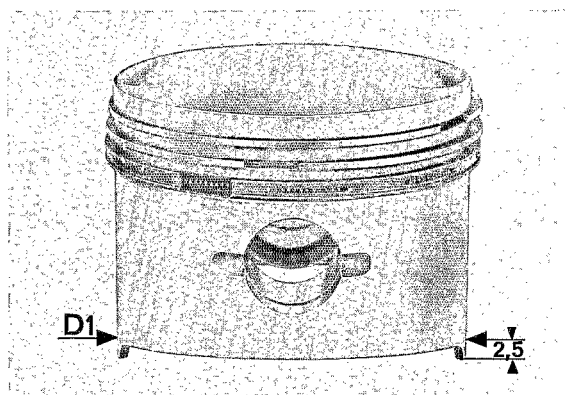


| Standard | | Tolerances ± 0.005 mm |
|---------------------|---------------|------------------------------|
| 0 | 84.000-84.010 | 83.970 |
| 1 | 84.010-84.020 | 83.980 |
| 2 | 84.020-84.030 | 83.990 |
| <u>1st oversize</u> | | |
| 0 KD 1 | 84.250-84.260 | 84.220 |
| 1 KD 1 | 84.260-84.270 | 84.230 |
| 2 KD 1 | 84.270-84.280 | 84.240 |
| <u>2nd oversize</u> | | |
| 0 KD 2 | 84.500-84.510 | 84.470 |
| 1 KD 2 | 84.510-84.520 | 84.480 |
| 2 KD 2 | 84.520-84.530 | 84.490 |

Cylinder/piston clearance: 0.025-0.045

Piston weight: 371 \pm 3 g

Type 911 T

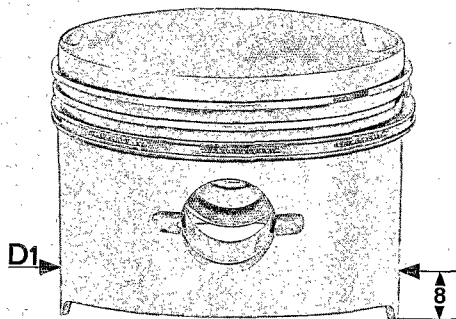


| | | |
|----------------------|-----------------------|---------------------------|
| Cylinder markings | Cylinder bore dia. | Piston diameter D 1 |
|----------------------|-----------------------|---------------------------|

| Standard (MAHLE) | | Tolerances ± 0.005 |
|---------------------|---------------|---------------------------|
| 0 | 84.000-84.010 | 83.970 |
| 1 | 84.010-84.020 | 83.980 |
| 2 | 84.020-84.030 | 83.990 |
| <u>1st oversize</u> | | |
| 0 KD 1 | 84.250-84.260 | 84.220 |
| 1 KD 1 | 84.260-84.270 | 84.230 |
| 2 KD 1 | 84.270-84.280 | 84.240 |
| <u>2nd oversize</u> | | |
| 0 KD 2 | 84.500-84.510 | 84.470 |
| 1 KD 2 | 84.510-84.520 | 84.480 |
| 2 KD 2 | 84.520-84.530 | 84.490 |

Cylinder/piston clearance: 0.025-0.045

Piston weight: 376 \pm 3g

Type 911 T

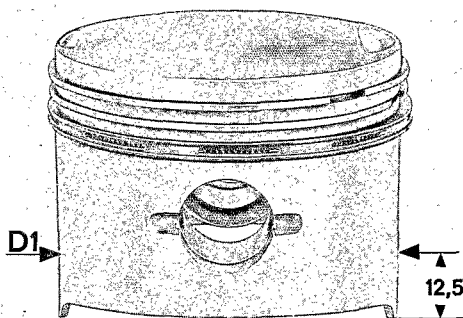
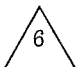


| Standard (SCHMIDT) | | Tolerances $+ 0.007$ $- 0.008$ |
|---------------------|---------------|--------------------------------------|
| 0 | 84.000-84.010 | 83.970 |
| 1 | 84.010-84.020 | 83.980 |
| 2 | 84.020-84.030 | 83.990 |
| <u>1st oversize</u> | | |
| 0 KD 1 | 84.250-84.260 | 84.220 |
| 1 KD 1 | 84.260-84.270 | 84.230 |
| 2 KD 1 | 84.270-84.280 | 84.240 |
| <u>2nd oversize</u> | | |
| 0 KD 2 | 84.500-84.510 | 84.470 |
| 1 KD 2 | 84.510-84.520 | 84.480 |
| 2 KD 2 | 84.520-84.530 | 84.490 |

Cylinder/piston clearance: 0.023-0.048

Piston weight: 375 \pm 4g

CYLINDER HEIGHT TOLERANCE GROUPS
1972-models, 2.4 liters

| Cylinder Installation Height | Code mark | |
|------------------------------------|---|-----------------|
| |  | 85.400 - 85.425 |
| |  | 85.425 - 85.450 |
| | R 5 | 85.150 - 85.175 |
| | R 6 | 85.175 - 85.200 |

Standard Cylinder
Height

Reconditioned
Cylinder Height

PISTON AND CYLINDER DIMENSIONS Beginning with 1973 models


| | | |
|----------------------|-----------------------|------------------------|
| Cylinder markings | Cylinder bore dia. | Piston diameter D 1 |
|----------------------|-----------------------|------------------------|

Type Carrera 2.7 Pistons


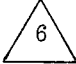
| Standard stamped | | Tolerances ± 0.005 |
|---------------------|---------------|---------------------------|
| 0 | 90.000-90.010 | 89.950 |
| 1 | 90.010-90.020 | 89.960 |
| 2 | 90.020-90.030 | 89.970 |

Cylinder/piston clearance: 0.025 - 0.045

Piston weight: 392 ± 3 kg

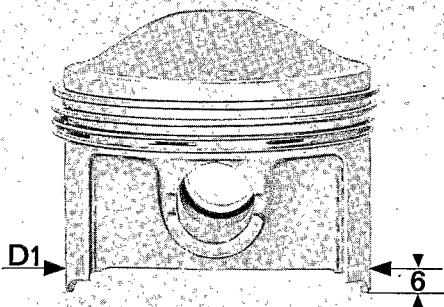


CYLINDER HEIGHT TOLERANCE OF 2.7 LITER ENGINES

| Cylinder Installation Height | Code | | Standard Cylinder Height |
|------------------------------------|---|-----------------|-----------------------------|
| |  | 85.400 - 85.425 | |
| |  | 85.425 - 85.450 | |

Oversize pistons and cylinders are not provided.

PISTONS AND CYLINDER DIMENSIONS - BEGINNING WITH 1974 MODELS

Type 911 and 911 S Pistons

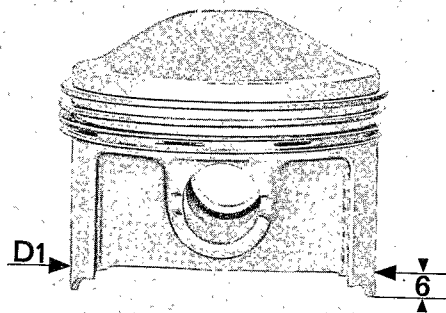Cylinder
markingsCylinder
bore dia.Piston
diameter
D 1Standard
stampedTolerances
 ± 0.0005

0

90.000-90.010

89.970

1

90.010-90.020

89.980

2


90.020-90.030

89.990

Cylinder/piston clearance: 0.025 - 0.045

PISTON AND CYLINDER DIMENSIONS "LS" Version

Type 911 Pistons

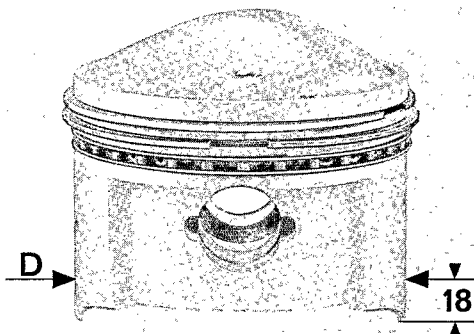Cylinder
markingsCylinder
bore diameterPiston
diameter D1Standard
stamped

0

90.000-90.010

89.952-
89.967

1

90.010-90.020

89.962-
89.977

2

90.020-90.030

89.972-
89.987

Permissible weight difference
in pistons of one set: 6 g max.

Cylinder/piston clearance: 0.035-0.060

INSTALLATION INSTRUCTIONS FOR "LS" CYLINDERS AND PISTONS

The ALUSIL cylinder (eutectic aluminum-silicon alloy) and FERROCOAT piston combination is known as "LS" Cylinders and Pistons.


In this system the surface coating is applied to the piston.

The assembly of the cylinder and piston must be made with particular care to avoid breaking the piston rings; the rings are chrome-plated and are thus harder and more brittle.

When resistance is met while tightening the piston ring compressor, it is an indication that the rings are not seating properly in the grooves. In such case remove the ring compressor, check the piston rings for location, and repeat the procedure, carefully pushing the cylinder onto the piston.

Installing Piston Rings

The piston rings can be installed in their grooves by hand and without the use of tools. When installing rings 1 and 2, make sure that the rings are placed in the sequence and position shown in the illustration.

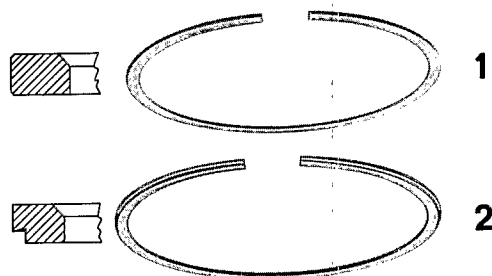

Installing Three-Part Oil Ring

The oil ring is made up of three parts, with each part installed separately. Install the expander first, then follow with the upper and lower rails.




After installation check visually if the expander ends meet.

Note

Install gaps of individual ring parts as follows:


Offset expander to rails by at least 45° .

Offset rails to each other by at least 90° .

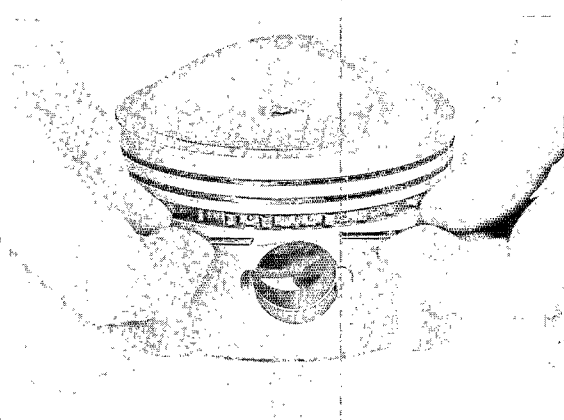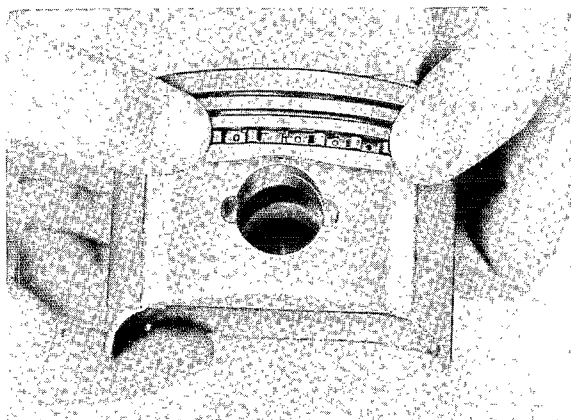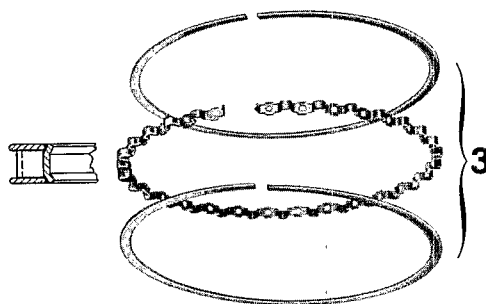

PISTON AND CYLINDER SIZES - "LS" MAHLE

Piston Type 911 S

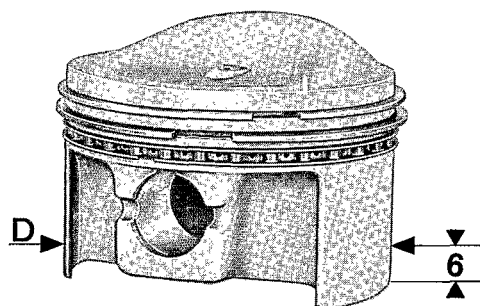Cylinder
CodeCylinder
DiameterPiston
diameter
D 1Standard Size
stamped

| | | |
|---|---------------|-------------------|
| 0 | 90.000-90.012 | 89.960- 89.972 |
| 1 | 90.012-90.024 | 89.972- 89.984 |
| 2 | 90.024-90.036 | 89.984- 89.996 |

Cylinder/piston clearance: 0.028 - 0.052 mm

GAP OF "LS" PISTON RINGS

| Make | Piston Ring | | Gap in mm | Gap wear limits in mm |
|--------------------|-------------|---|-------------|-----------------------|
| MAHLE + SCHMIDT | R ring | Top | 0.2 - 0.4 | 1.0 |
| | N ring | Center | 0.15 - 0.35 | 1.0 |
| | SS 50 ring | Bottom (3-piece consisting of expander and 2 rails) | 0.4 - 1.4 | 2.0 |



CHECKING PISTONS AND CYLINDERS

Cylinder

D1 Measuring point for wear and ovality

30 mm below top edge of cylinder

The cylinder is worn if this measurement is 0.08 mm more than the new size specifications. Ovality is checked by measuring in directions a and b. The difference between a and b may not be more than 0.04 mm.

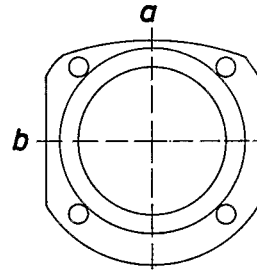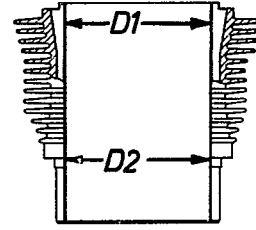


D2 = Measuring point for piston ring end gap clearance

Rings slid in to height of cylinder base gasket.

Piston

D = Measuring point for wear

At height of lower edge of piston pin bore.

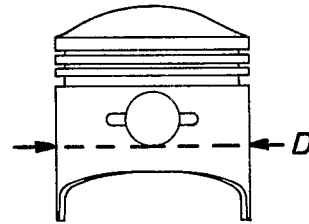

Caution

Replace pistons and cylinders if clearance exceeds 0.15 mm.

PISTON RING END GAP

| Piston Ring | End Gap mm (new size) | End Gap mm (wear limit) |
|---|--------------------------|----------------------------|
| Compression ring, I and II | 0.1 - 0.2 | 0.8 |
| Oil scraper ring, III | 0.15 - 0.3 | 1.0 |
| Oil scraper ring, III, 3-piece "LS" ring (see checkpoint "D 2") | 0.4 - 1.4 | 2.0 |

PISTON RING SIDE CLEARANCE

| Piston Ring | SIDE Clearance in mm (new size) | SIDE Clearance in mm (wear limit) |
|-----------------------|---------------------------------------|---|
| Compression ring, I | 0.070 - 0.102 | 0.2 |
| Compression ring, II | 0.040 - 0.072 | 0.2 |
| Oil scraper ring, III | 0.020 - 0.052 | 0.1 |

PISTON AND CYLINDER SIZES - 911 SC (from 1978 Model)
Mahle

| Cylinder marking | Cylinder bore diameter mm | Piston diameter D mm |
|-----------------------|---------------------------|----------------------|
| Standard size stamped | | |
| 0 | 95.000 - 95.007 | 94.965 - 94.975 |
| 1 | 95.007 - 95.014 | 94.972 - 94.982 |
| 2 | 95.014 - 95.021 | 94.979 - 94.989 |
| 3 | 95.021 - 95.028 | 94.986 - 94.996 |

Clearance between cylinder and piston: 0.025 - 0.042 mm

PISTON AND CYLINDER SIZES - 911 SC (from 1978 Model)
KS

| Cylinder marking | Cylinder bore diameter mm | Piston diameter D mm |
|-----------------------|---------------------------|----------------------|
| Standard size stamped | | |
| 0 | 95.000 - 95.007 | 94.963 - 94.977 |
| 1 | 95.007 - 95.014 | 94.970 - 94.984 |
| 2 | 95.014 - 95.021 | 94.977 - 94.991 |
| 3 | 95.021 - 95.028 | 94.984 - 94.998 |

Clearance between cylinder and piston: 0.023 - 0.044 mm

PISTON WEIGHT GROUPS - from 1980 Model

Installation Instructions:

1. Only pistons of one make and appropriate weight group may be used in one engine.
2. Piston pins must always remain with the corresponding pistons and should not be mixed up within an engine set. Watch this when disassembling and assembling an engine, marking parts if necessary.

Weight groups MAHLE Pistons

Pistons weighed with attachments (piston pins, piston rings, snap rings)

| | Total Piston Weight in g Weight group within a set | Marking |
|-------------------------------|--|--------------------|
| Engine type | 930/07 | |
| Standard production | 636 to 640 640 to 644 644 to 648 | - - - - + |
| Max. difference in weight 4 g | 648 to 652 | + + |
| For installation | 636 to 644 644 to 652 | -- or - + or ++ |
| Max. difference in weight 8 g | | |

PISTON WEIGHT CLASSES - 911 SC from 1981 Models

Weight Classes

MAHLE Pistons

Pistons weighed with attachments (piston pins, piston rings, snap rings)

| | Total Piston Weight in g Weight Class Within a Set | Code |
|-------------------------------|--|----------|
| Engine type | 930/16 (USA/Japan) | |
| Standard production | 636 to 640 | - - |
| | 640 to 644 | - |
| Max. difference in weight 4 g | 644 to 648 | + |
| | 648 to 652 | ++ |
| For Service Sector | 636 to 644 | - - or - |
| Max. difference in weight 8 g | 644 to 652 | + or ++ |

Weight Classes

KS Pistons

Pistons weighed with attachments (piston pins, piston rings, snap rings)

| | Total Piston Weight in g Weight Class Within a Set | Code |
|-------------------------------|--|----------|
| Engine Type | 930/16 | |
| Standard Production | 673 to 677 | - - |
| | 677 to 681 | - |
| Max. difference in weight 4 g | 681 to 685 | + |
| | 685 to 689 | ++ |
| For Service Sector | 673 to 681 | - - or - |
| Max. difference in weight 8 g | 681 to 689 | + or ++ |

MEASURING AND RECONDITIONING CRANKCASE

General

The main bearing bores must be measured whenever the crankcase is disassembled for repair. These instructions apply as well to all pre-1972 model engines.

Measuring

1. Attach crankcase half to bench mount and assemble both halves without the intermediate shaft.
Lightly tighten all crankcase studs and two M8 retaining nuts at Bearing 1.
2. Align both crankcase halves with the aid of a plastic mallet. The joint in Bearing 8 must not be offset in relation to each half.
3. Using the inside micrometer, cross-check bore of Bearing 8. Realign bore if necessary.


5. Measure all 8 main bearing bores with the inside micrometer.

If the bores are too tight, they should be reamed with the main bearing reamer to standard diameter of 62.000 mm.

Bore diameter for main bearings 1 - 8 is 62.000 to 62.019 mm.

If the bores are too large, they should be reamed to B-bearing oversize of 62.25 mm diameter.

Control dimension for the B-bearing is 62.25 mm to 62.269 mm diameter.

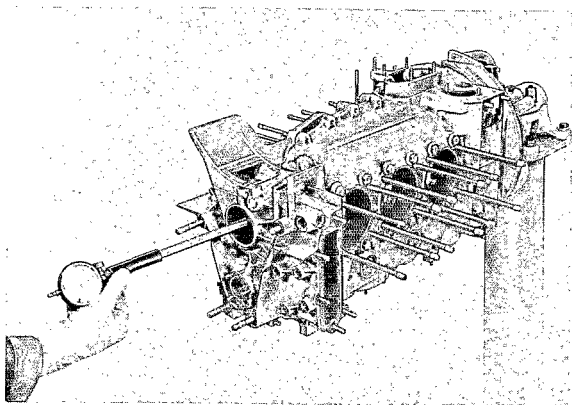

Reconditioning

General

This procedure requires special tools and should only be performed by qualified personnel.

Light-alloy (SILUMIN) crankcases must be reamed in two steps when reaming to the B-bearing size. Lubricate reamer with cutting oil during this procedure.

1. Step 1 = 62.15 mm diameter
2. Step 2 = 62.25 mm diameter (B-bearing installation dimension)

4. Tighten all crankcase studs and both M8 nuts to proper torque.


Pressure-cast crankcases can be cut in one step and without oil to 62.25 mm diameter.

Reaming


1. Attach self-made tool (see sketch below) to 4 oil screen attaching studs and fasten in bench vise.

Sketch for Self-Made Tool


T-bar 40 x 80 x 7 mm
All edges beveled

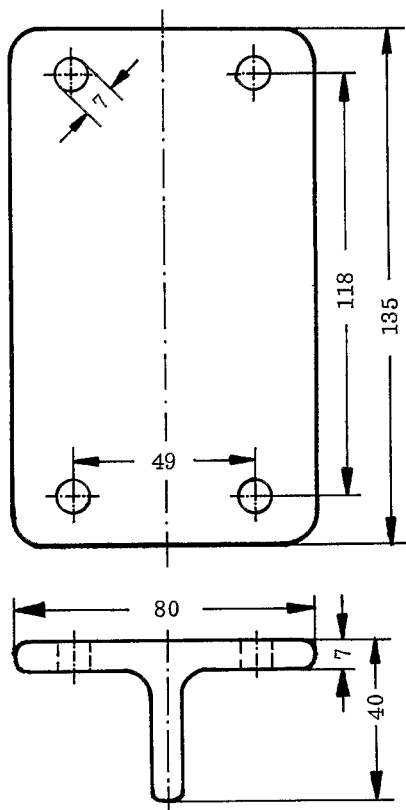


2. Insert end bearing bushing EL35 in bore of Bearing 8.

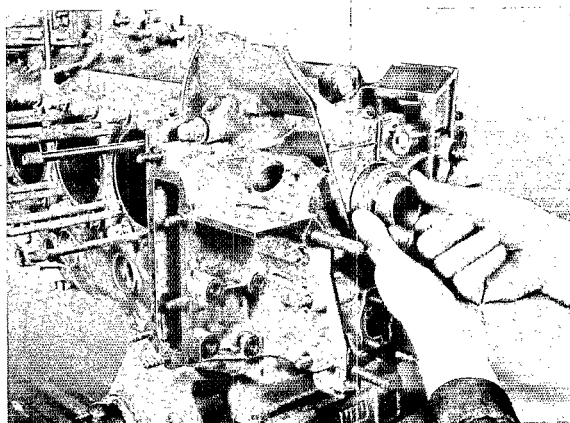

3. Insert rod (35 x 1200 mm) with main bearing reamer and ream Bearing 1 until Bearing 2 is guided (reamer centers automatically in bore of Bearing 1).

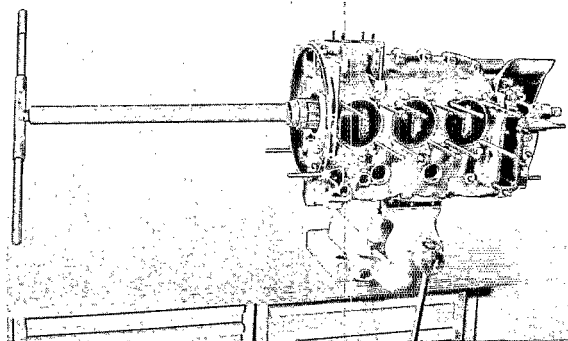


4. Insert end bearing bushing EL35 in bore of Bearing 1.
5. Ream all bearing bores until reamer reaches end bearing bushing of Bearing 8.

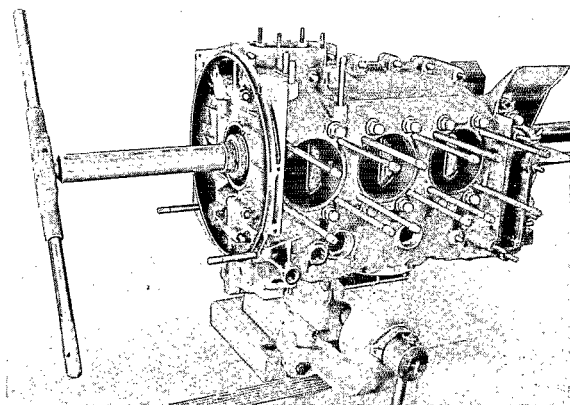


6. Remove-end-bearing bushing from bearing bore # 8 and fully ream Bearing 8.

MODIFIED FLYWHEEL INSTALLATION - 1978 MODELS

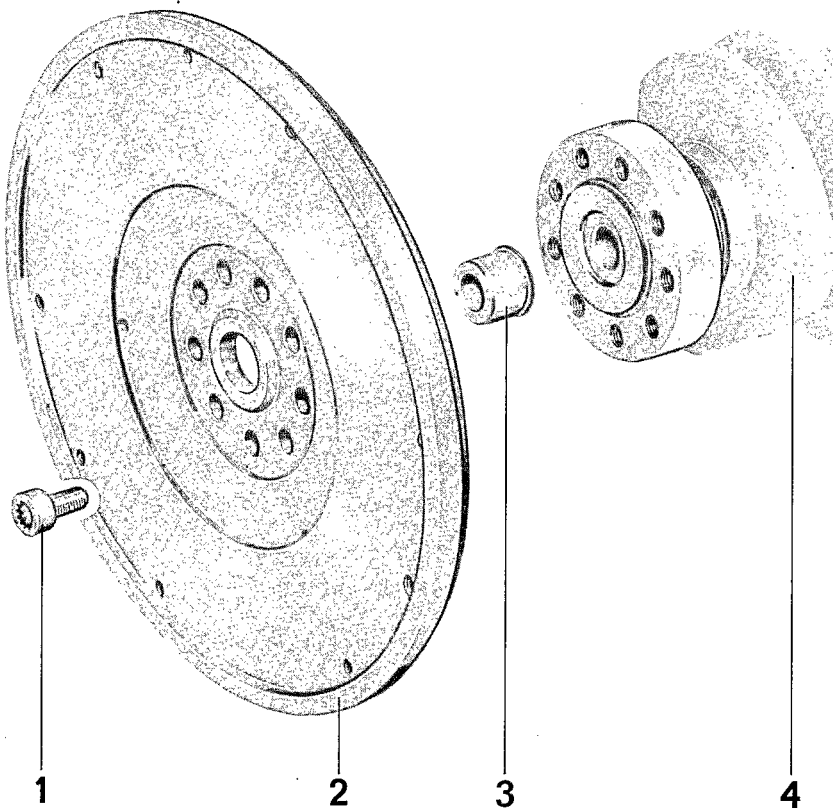


| No. | Description | Qty. | Note When | | Special Instructions |
|-----|-------------|------|-----------|--------------|----------------------|
| | | | Removing | Installing | |
| 1 | Socket head | 9 | | Torque 9 mkg | |
| 2 | Flywheel | 1 | | | |
| 3 | Bushing | 1 | | | |
| 4 | Crankshaft | 1 | | | |

FLYWHEEL WITH PILOT BEARING/BUSHING FOR INPUT SHAFT - from 1980 Model

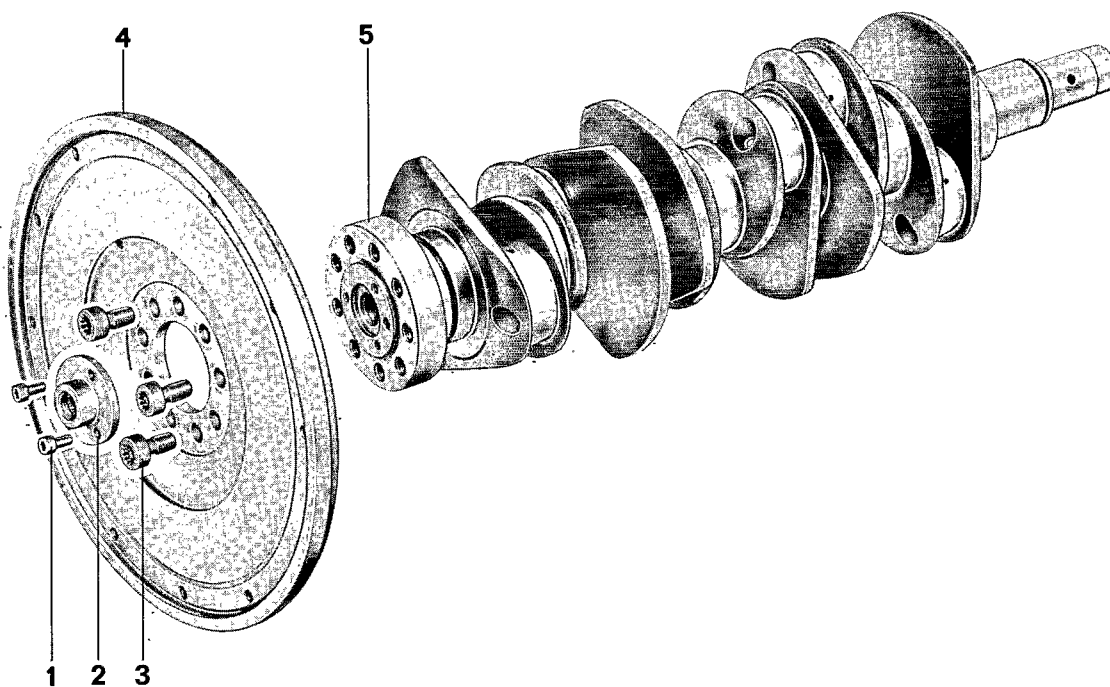

| No. | Description | Qty. | Note When | | Special Instructions |
|-----|-----------------------------|------|-----------|--|----------------------|
| | | | Removing | Installing | |
| 1 | Screw M 6x12 | 3 | | Tighten to specified torque, lock with Loctite 270 | |
| 2 | Bushing with needle bearing | 1 | | First secure flywheel, then bushing | |
| 3 | Bolt | 9 | | Tighten to specified torque | |
| 4 | Flywheel | 1 | | | |
| 5 | Crankshaft | 1 | | | |

REMOVING AND INSTALLING OIL FILTER SCREEN AND SUCTION PLATE

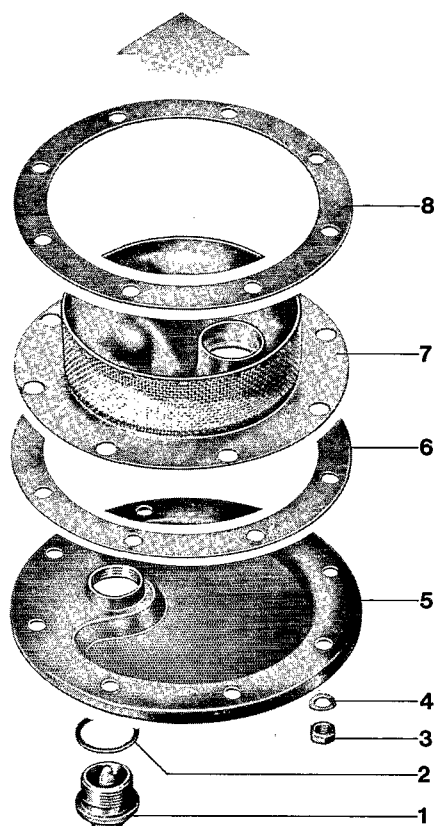

| No. | Description | Qty. | Note When | | Special Instructions |
|-----|---|------|-----------|---|----------------------|
| | | | Removing | Installing | |
| 1 | Oil drain plug | 1 | | | |
| 2 | Seal | 1 | | Replace | |
| 3 | Nut | 8 | | Tighten to about 10 Nm/ 7 ft lb | |
| 4 | Washer | 8 | | | |
| 5 | Cover for oil filter screen | 1 | | Check for deformation, replacing if necessary. Watch installed position; oil drain plug must face in recess of suction plate | |
| 6 | Gasket | 1 | | Replace | |
| 7 | Oil filter screen with suction plate | 1 | | | |
| 8 | Gasket | 1 | | Replace | |

ASSEMBLY INSTRUCTIONS

SEALING CRANKCASE MATING SURFACES

Note

Only use Loctite No. 573 (green color) as a sealing compound.

Loctite No. 573 hardens only in conjunction with metal and exclusion of air. Never wait longer than about 10 minutes between applying coat of sealing compound and assembling parts, since the sealing compound applied directly on the metal would begin to harden.

Removing Old Sealing Compound



During repairs the old compound need not be removed. It is only necessary to remove grease from the surface and to apply a coat of new sealing compound after the grease removing solution has dried. The new Loctite will dissolve the old compound in the surface finish and harden again after assembly.

Should it be absolutely necessary to remove the old sealing compound, a fine steel brush is recommended for this work.

Applying Sealing Compound


1. When applying sealing compound by hand use a short-pile velour roller. In addition, a tray with a ribbed surface for scraping off the roller will be required for the sealing compound.

2. Apply a very thin coat of sealing compound with the velour roller.

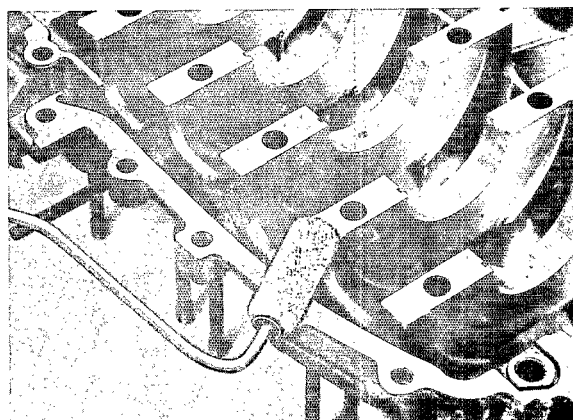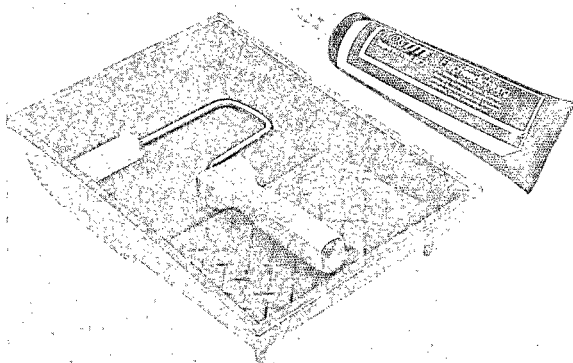

CRANKCASE CHANGES - BEGINNING WITH 1972 MODELS

Distributor mounting flange.

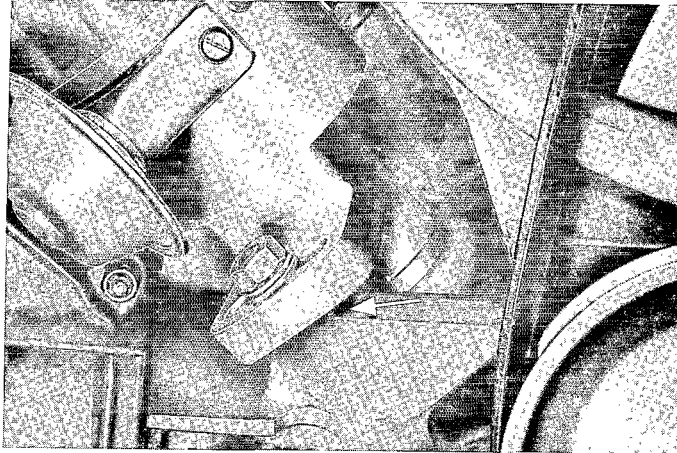

CHANGED CRANKSHAFT - BEGINNING WITH 1972 MODELS

Stroke = 70.4 mm

Crankpin diameter = 51.990 - 51.971


Crankpin width = 24 mm

Beginning with 1972 models, all crankshafts have counterweights.

See next page for crankshaft dimensions.

CRANKSHAFT DIMENSIONS - STANDARD AND RECONDITIONED


| Step | Crankshaft diameter Bearings 1-8 | All main bearings d 1 | Connecting rod bearings d 2 | Main bearing diameter d 3 on crankshaft Bearing 8 | Shoulder diameter d 4 | Timing gear seat diameter d 5 | Crankshaft pulley seat diameter d 6 | Thrust bearing Width A |
|----------|-------------------------------------|--------------------------|--------------------------------|---|--------------------------|----------------------------------|--|---------------------------|
| | | | | | | | | |
| Standard | Standard | mm | mm | mm | mm | mm | mm | mm |
| | 62.000- | 62.019 | 56.990-56.971 | 51.990-51.971 | 30.993-30.980 | 65.000-64.981 | 42.013-42.002 | 29.993-29.960 |
| | (2.4409- | 2.4417 in.) | (2.2437-2.2429) | (2.0468-2.0461) | (1.2202-1.2197) | (2.5591-2.5583) | (1.6541-1.6536) | (1.1808-1.1795) |
| | 2.4417 in.) | | | | | | | |
| | 2.4409- | 2.4417 in.) | 56.740-56.721 | 51.740-51.721 | 30.743-30.730 | | | |
| | (2.2389-2.2381) | | (2.0382-2.0363) | (1.2104-1.2098) | | | | |
| | 2.4417 in.) | | | | | | | |
| | 2.4409- | 2.4417 in.) | 56.490-56.471 | 51.490-51.471 | 30.493-30.480 | 64.500-64.310 | | |
| | (2.2240-2.2233) | | (2.0272-2.0264) | (1.2005-1.2000) | (2.5394-2.5319) | | | |
| | 2.4417 in.) | | | | | | | |
| | 2.4409- | 2.4417 in.) | 56.240-56.221 | 51.240-51.221 | 30.243-30.230 | | | |
| | (2.2142-2.2134) | | (2.0173-2.0166) | (1.1907-1.1902) | | | | |
| | 2.4417 in.) | | | | | | | |
| | 2.4508 in.) | | | | | | | |
| | 2.4508 in.) | | | | | | | |

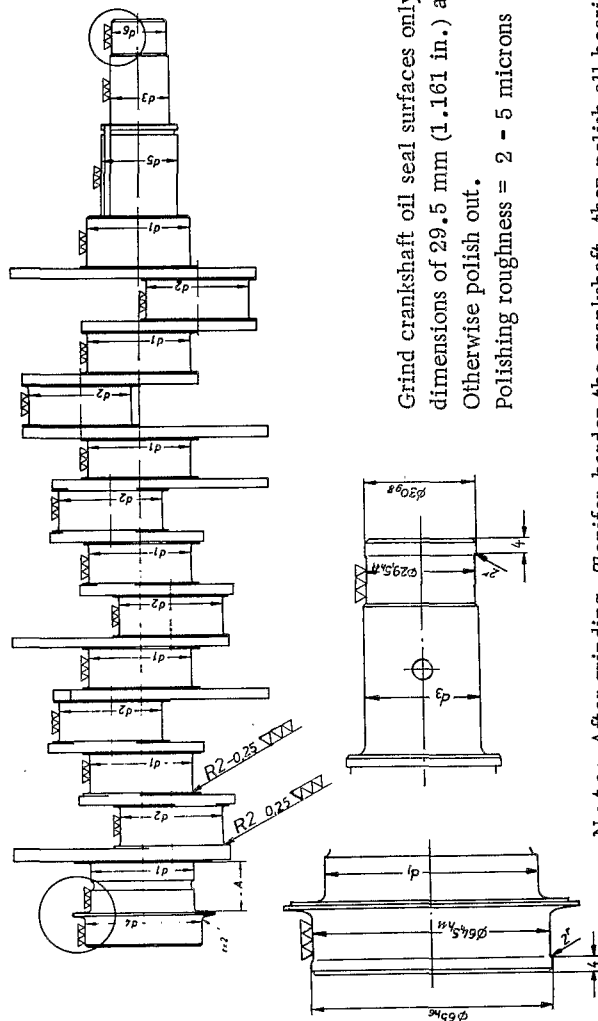

Grind crankshaft oil seal surfaces only when deeply scored. Grind to dimensions of 29.5 mm (1.161 in.) and 64.5 mm (2.539 in.) Otherwise polish out. Polishing roughness = 2 - 5 microns

Note: After grinding, Tenifer-harden the crankshaft, then polish all bearing journals and thrust surface A. Magnaflex to check for cracks. Maximum vertical runout = 0.04 mm (0.002 in.), measured at Bearing 1 and 8, with Bearing 1 and 7 on V-blocks. Maximum crankshaft unbalance = 10 cmg. Journal 3 and 5 must not be straightened after the Tenifer treatment.

CONNECTING ROD CHANGES - BEGINNING WITH 1972 MODELS

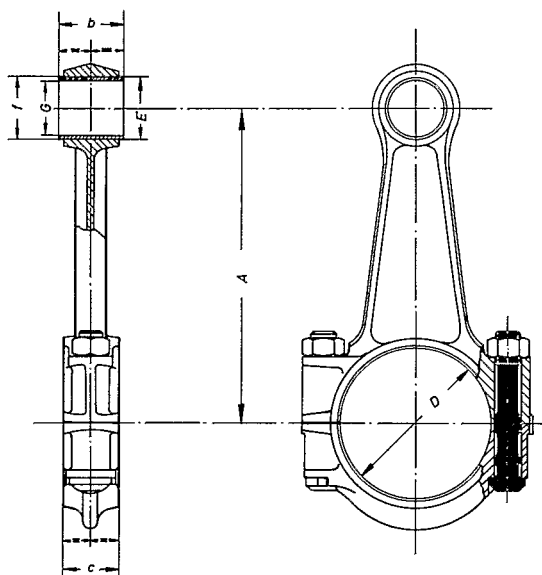

| | | |
|---|--|---|
| A | Distance between centers | 127.8 - 0.05 mm (5.03) - (0.002 in.) |
| b | Width of piston pin bushing | 26.0 - 0.2 mm (1.02) - (0.008 in.) |
| c | Big end width | 23.8 - 0.1 mm (0.9370) - (0.004 in.) |
| D | Big end diameter (without bearing insert) | 56.019 - 56.000 mm (2.2055) - (2.2047 in.) |
| E | Small end diameter | 25.021 - 25.000 mm (0.9851) - (0.9843 in.) |
| f | Piston pin bushing dia. (before installation) | 25.035 - 25.055 mm (0.9856) - (0.9864 in.) |
| | (Press-fit interference in rod) | 0.014 - 0.055 mm (0.0006) - (0.0022 in.) |
| G | Inside diameter of installed piston pin bushing (finished) | 22.033 - 22.020 mm (0.8674) - (0.8669 in.) |
| | Piston pin clearance in bushing | 0.020 - 0.039 mm (0.0008) - (0.0015 in.) |
| | Wear limit | 0.055 (.0022) |

CONNECTING ROD WEIGHT GROUPS

Connecting rods are assigned to weight groups.

The pertinent weight group can be identified in spare part end numbers.

The end number is stamped into connecting rods furnished as spare parts.

| Weight more than up to grams grams | | Weight group for KD | KD connecting rod spare part number | Identification in connecting rod |
|--|-----|---------------------------|--|-------------------------------------|
| 645 | 654 | 1 | 911.103.015.31 | 31 |
| 654 | 663 | 2 | 911.103.015.32 | 32 |
| 663 | 672 | 3 | 911.103.015.33 | 33 |
| 672 | 681 | 4 | 911.103.015.34 | 34 |
| 681 | 690 | 5 | 911.103.015.35 | 35 |
| 690 | 699 | 6 | 911.103.015.36 | 36 |
| 699 | 708 | 7 | 911.103.015.37 | 37 |
| 708 | 717 | 8 | 911.103.015.38 | 38 |
| 718 | 727 | 9 | 911.103.015.39 | 39 |

Weight variation between connecting rods in any engine may not exceed 9 g.

To determine weight group, weigh complete connecting rod without big end inserts.

CONNECTING ROD WEIGHT GROUPS - from 1978 Model

Connecting rods are in different weight groups.

The weight group is indicated by the final digit of the part number.

For connecting rods, which are supplied as spare parts, these final digits are stamped on the shank.

| Weight above g to g | | Weight group for installation | Service installation connecting rod Part No. | Connecting rod marking |
|--------------------------|-----|--|--|---------------------------|
| 633 | 642 | 1 | 930.103.015.51 | 51 |
| 642 | 651 | 2 | 930.103.015.52 | 52 |
| 651 | 660 | 3 | 930.103.015.53 | 53 |
| 660 | 669 | 4 | 930.103.015.54 | 54 |
| 669 | 678 | 5 | 930.103.015.55 | 55 |
| 678 | 687 | 6 | 930.103.015.56 | 56 |
| 687 | 696 | 7 | 930.103.015.57 | 57 |
| 696 | 705 | 8 | 930.103.015.58 | 58 |
| 705 | 714 | 9 | 930.103.015.59 | 59 |

Note


Only connecting rods, which do not differ in weight by more than 9 g. may be installed in one engine.
To determine a weight group, weigh the complete connecting rod (without bearing shells).

PISTONS FOR K - JETRONIC ENGINES


Pistons for K - Jetronic-equipped engines of Type 911/91 and 911/96 have a turbulence (whirl) cavity in the piston top. This provision ensures a particularly thorough blending of the fuel/air mixture.

Installation note:

The piston must always be installed so that the flat spot in the piston top faces upward (towards the intake valve).

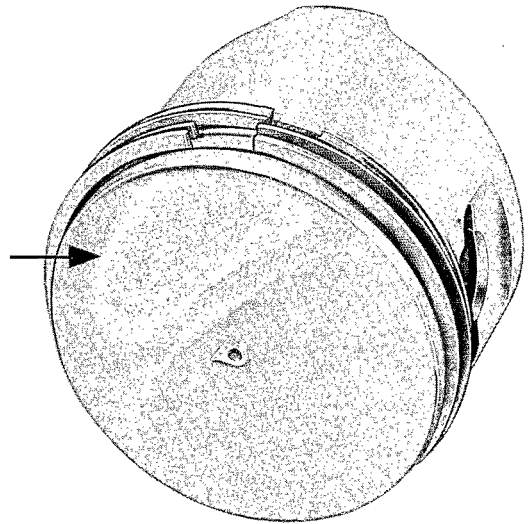


ASSEMBLY INSTRUCTIONS FOR PISTONS ON 911 SC (1981 Models)

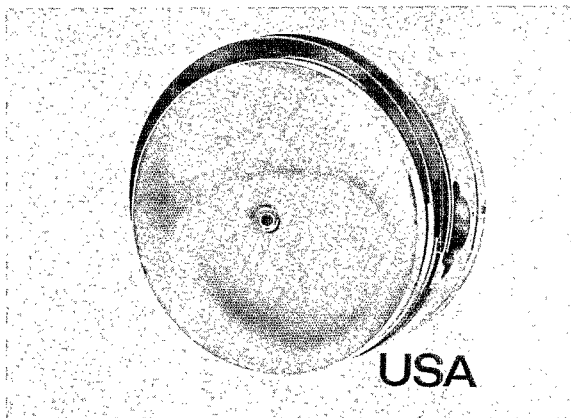

Domed surface on piston must face intake valve.


MODIFIED CRANKSHAFT DRIVE - 1978 MODELS

TOOLS

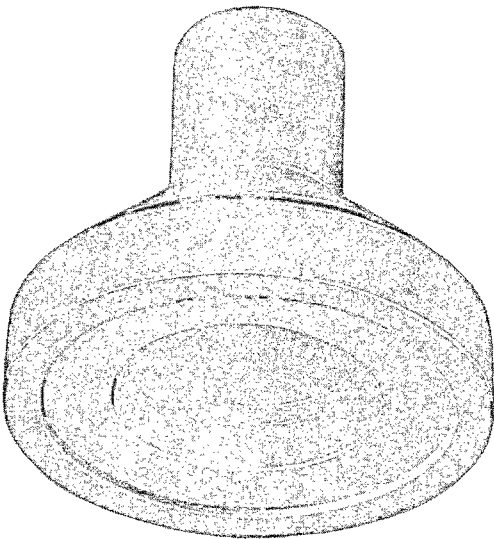

| No. | Description | Special Tool | Note |
|-----|-------------------------------|--------------|------|
| 1 | Installer for crankshaft seal | 9126 | |

MODIFIED CRANKSHAFT DRIVE - 1978 MODELS


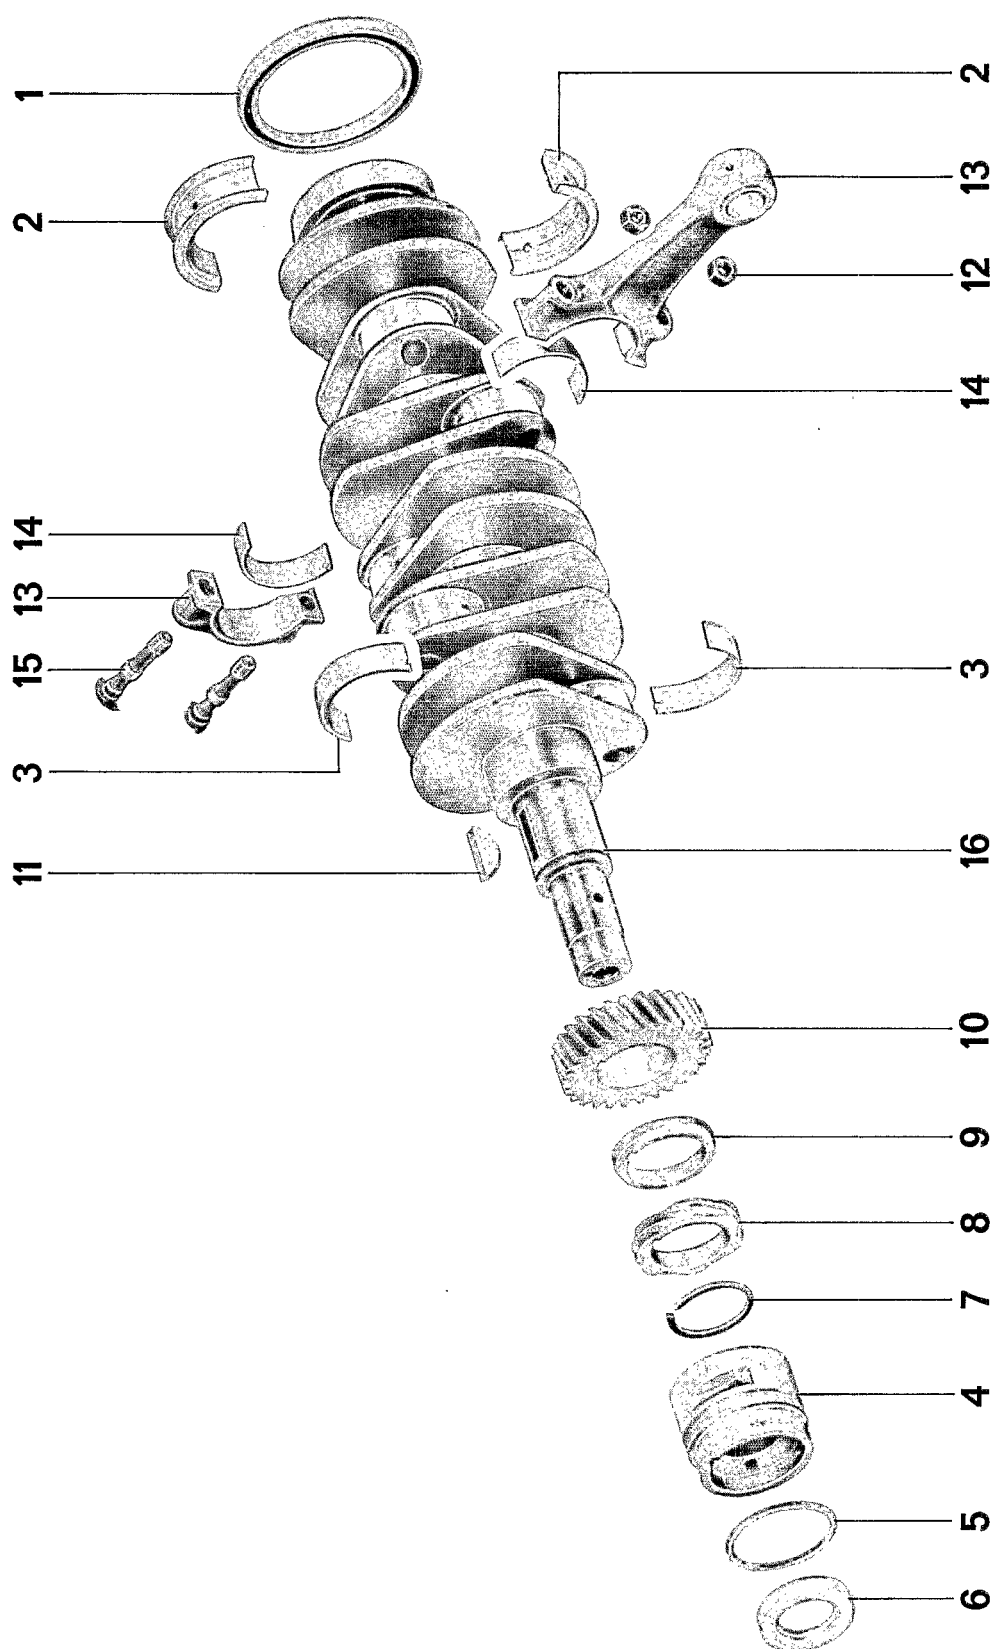


| No. | Description | Qty. | Note When | | Special Instructions |
|-----|------------------------------|------|----------------|---|----------------------|
| | | | Removing | Installing | |
| 1 | Oil seal | 1 | | Replace | |
| 2 | Thrust main bearing shells 1 | 2 | Check for wear | Lubricate | |
| 3 | Main bearing shells 2 - 7 | 12 | | Lubricate | |
| 4 | Bearing sleeve, bearing 8 | 1 | | Lubricate | |
| 5 | O-ring | 1 | | Replace | |
| 6 | Oil seal | 1 | | Replace | |
| 7 | Circlip | 1 | | | |
| 8 | Drive gear for distributor | 1 | | | |
| 9 | Spacer | 1 | | Note installed position | |
| 10 | Timing gear | 1 | | | |
| 11 | Woodruff key | 1 | | | |
| 12 | Connecting rod nut | 12 | | Tighten to specified torque. Lubricate bearing surface. | |
| 13 | Connecting rod | 6 | | Note installed position and weight | |
| 14 | Connecting rod bearing shell | 12 | Check for wear | Lubricate | |
| 15 | Connecting rod bolt | 12 | | | |
| 16 | Crankshaft | 1 | Check for wear | | |

INSTALLATION INSTRUCTIONS FOR MODIFIED CRANKSHAFT DRIVE - 1978 MODELS


Clamping Crankshaft

Special Tool P 209 a must be modified for new crankshaft.

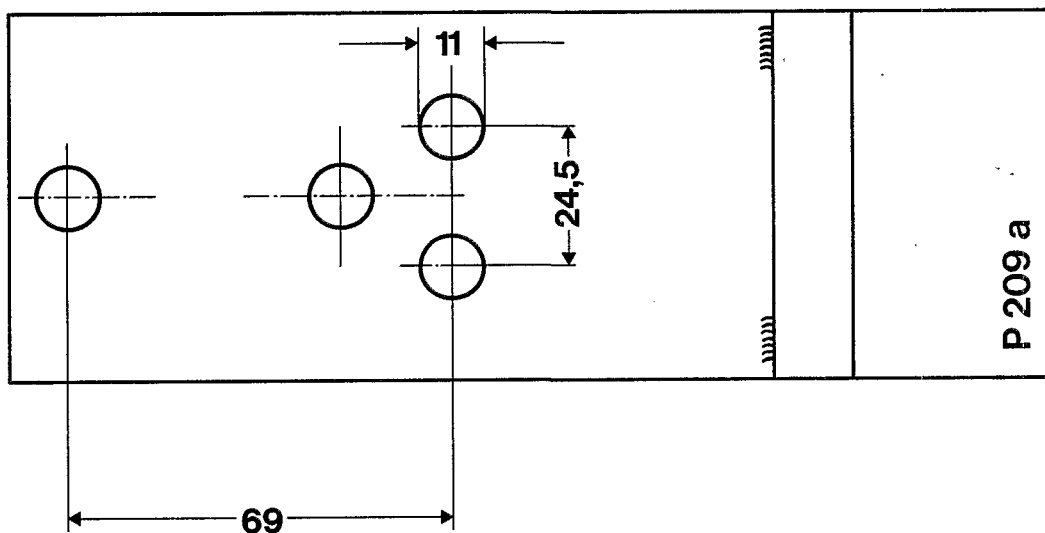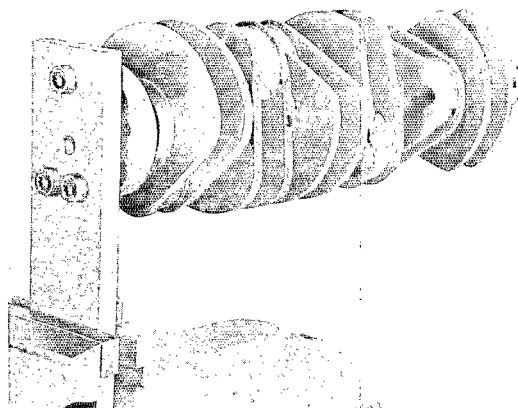

Installing Seal


Drive in seal with Special Tool 9126.

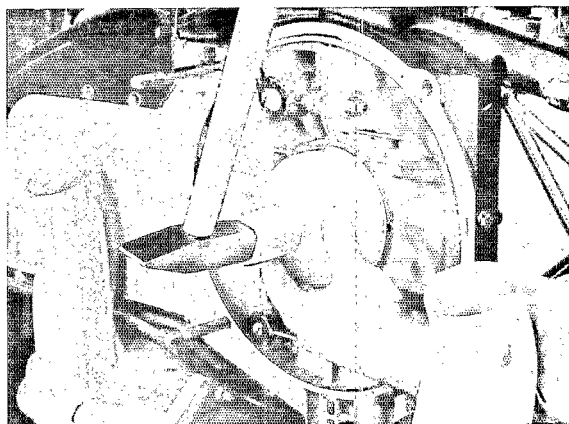


Installing Crankshaft Drive Gear for Counterclockwise Rotating Distributor

Note

As of the 1978 model year, the engines are equipped with a counterclockwise rotating distributor. Therefore a new crankshaft drive gear with modified teeth is required.

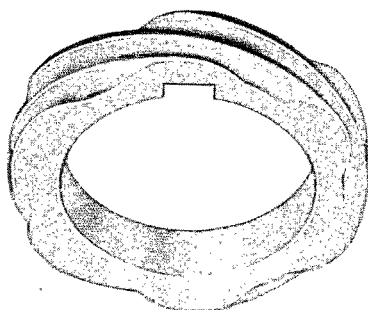

For counterclockwise
rotating distributor
(with Porsche emblem)

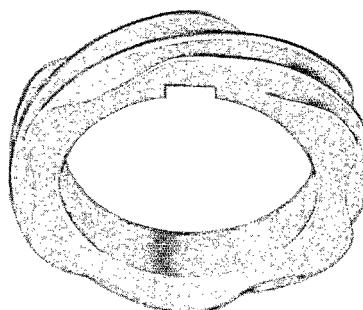

For clockwise rotating
distributor
(with VW emblem)


Installing Circlip on Crankshaft

Circlips are available in various thicknesses to take up axial play between distributor and drive gear.

The following circlips are available:


| Part No. | Thickness mm | Code |
|----------------|--------------|------|
| 901.102.148.00 | 2.4 | 0 |
| 901.102.148.01 | 2.3 | 1 |
| 901.102.148.02 | 2.2 | 2 |
| 901.102.148.03 | 2.1 | 3 |

Install timing gear, spacer and drive gear for counterclockwise rotating distributor on crankshaft up to stop. Select proper circlip by first inserting it to check its thickness. Circlip must take up play.

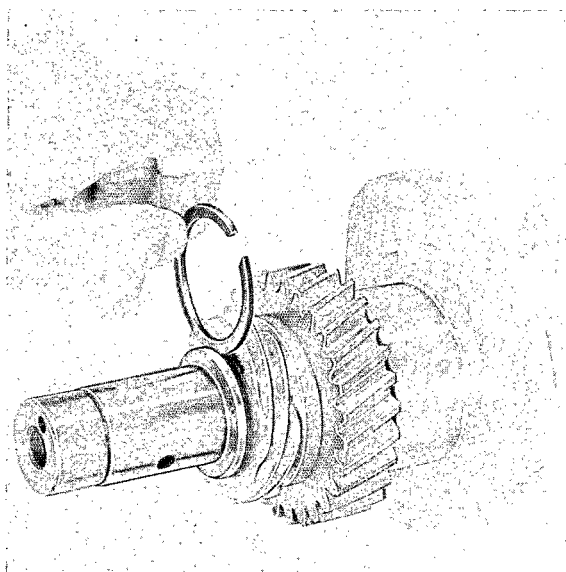

CRANKSHAFT - Standard and Undersizes
(1978 Models)

| Size mm | Crankcase bore dia. bearings 1-8 | All main bearing journals d 1 | Connecting rod bearing journals d 2 | Main bearing jour- nal d 3 of crank- shaft bearing 8 | Oil seal journal dia. d 4 | Seat for timing gear dia. d 5 | Crankshaft pulley seat dia. d 6 | Thrust bearing width A |
|------------|-------------------------------------|----------------------------------|---|--|------------------------------|----------------------------------|------------------------------------|---------------------------|
| Standard | | 59.971...59.990 | 52.971...52.990 | 30.980...30.993 | 89.780...90.000 | 42.002...42.013 | 29.960...29.993 | 28.000...28.060 |
| - 0.25 | Standard 65.000...65.019 | 59.721...59.740 | 52.721...52.740 | 30.730...30.743 | | | | |
| - 0.50 | Oversize 65.250...65.269 | 59.471...59.490 | 52.471...52.490 | 30.480...30.493 | 89.280...89.500 | | 29.370...29.500 | |
| - 0.75 | | 59.221...59.240 | 52.221...52.240 | 30.230...30.243 | | | | |
| - 1.00 | | 58.971...58.990 | 51.971...51.990 | 29.980...29.993 | | | | |

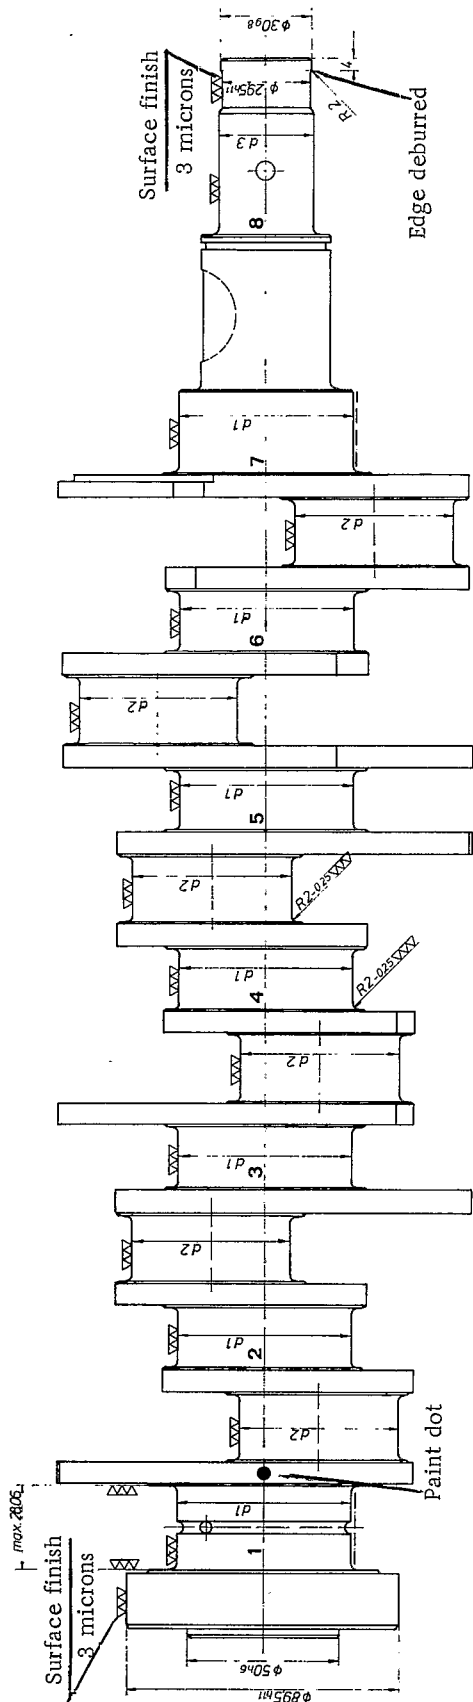

Grind crankshaft oil seal surfaces only when deeply scored. Grind to dimensions of 29, 5 mm and 89.5 mm respectively. Otherwise polish out to 3 microns.

After grinding, chamfer oil holes to 0, 5 mm radius. Break all sharp edges to 0.2 - 0.5 mm radius. Maximum radial runout measured at bearings 1 and 7 is 0, 04 mm.

Tenifer treat crankshaft after grinding. Magnaflux to check for cracks.

Do not straighten main bearing journals 3 and 5 after Tenifer treatment. All other main bearing journals can be straightened by applying pressure to the bearing journal webs.

Undersize color codes


- | | |
|---------------|------------------|
| 1st undersize | blue paint dot |
| 2nd undersize | green paint dot |
| 3rd undersize | yellow paint dot |
| 4th undersize | white paint dot |

CLUTCH CHANGES - BEGINNING WITH 1972 MODELS


1. Clutch operating system has been redesigned. The throw-out fork and clutch lever are mounted and secured with lock rings on a shaft which is splined on both ends and located in the transmission housing. The clutch lever is now pulled by the clutch cable instead of the cable housing.
2. Pressure of the pressure plate (MFZ 225 KL) has been increased to a range of 650-720 kp (1430-1584 lbs.)
3. Clutch disc splines have been changed from 24 to 20 (an SAE designation).

ADJUSTING CLUTCH


1. Turn self-locking adjusting nut until clutch pedal free travel is 20 - 25 mm (0.8 - 1.0 in.).

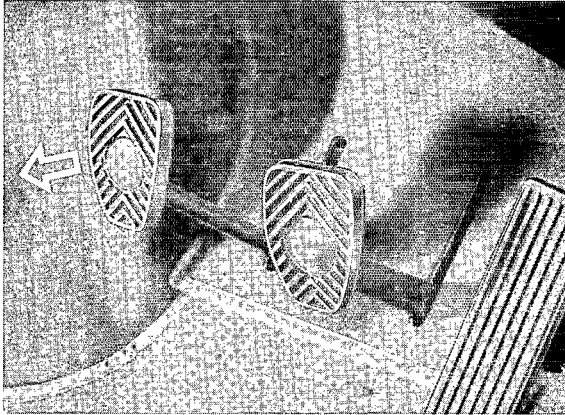

2. When checking, pull pedal in direction of arrow.

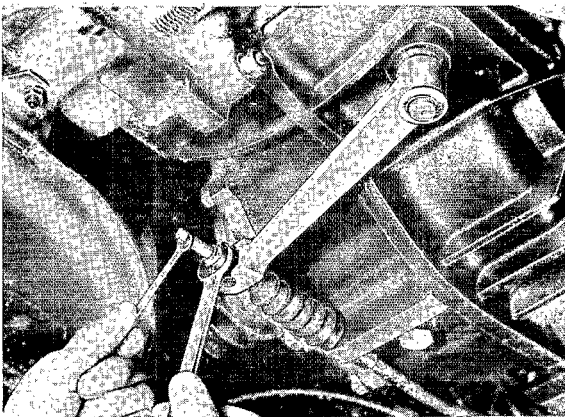

REMOVING AND INSTALLING THROWOUT BEARING

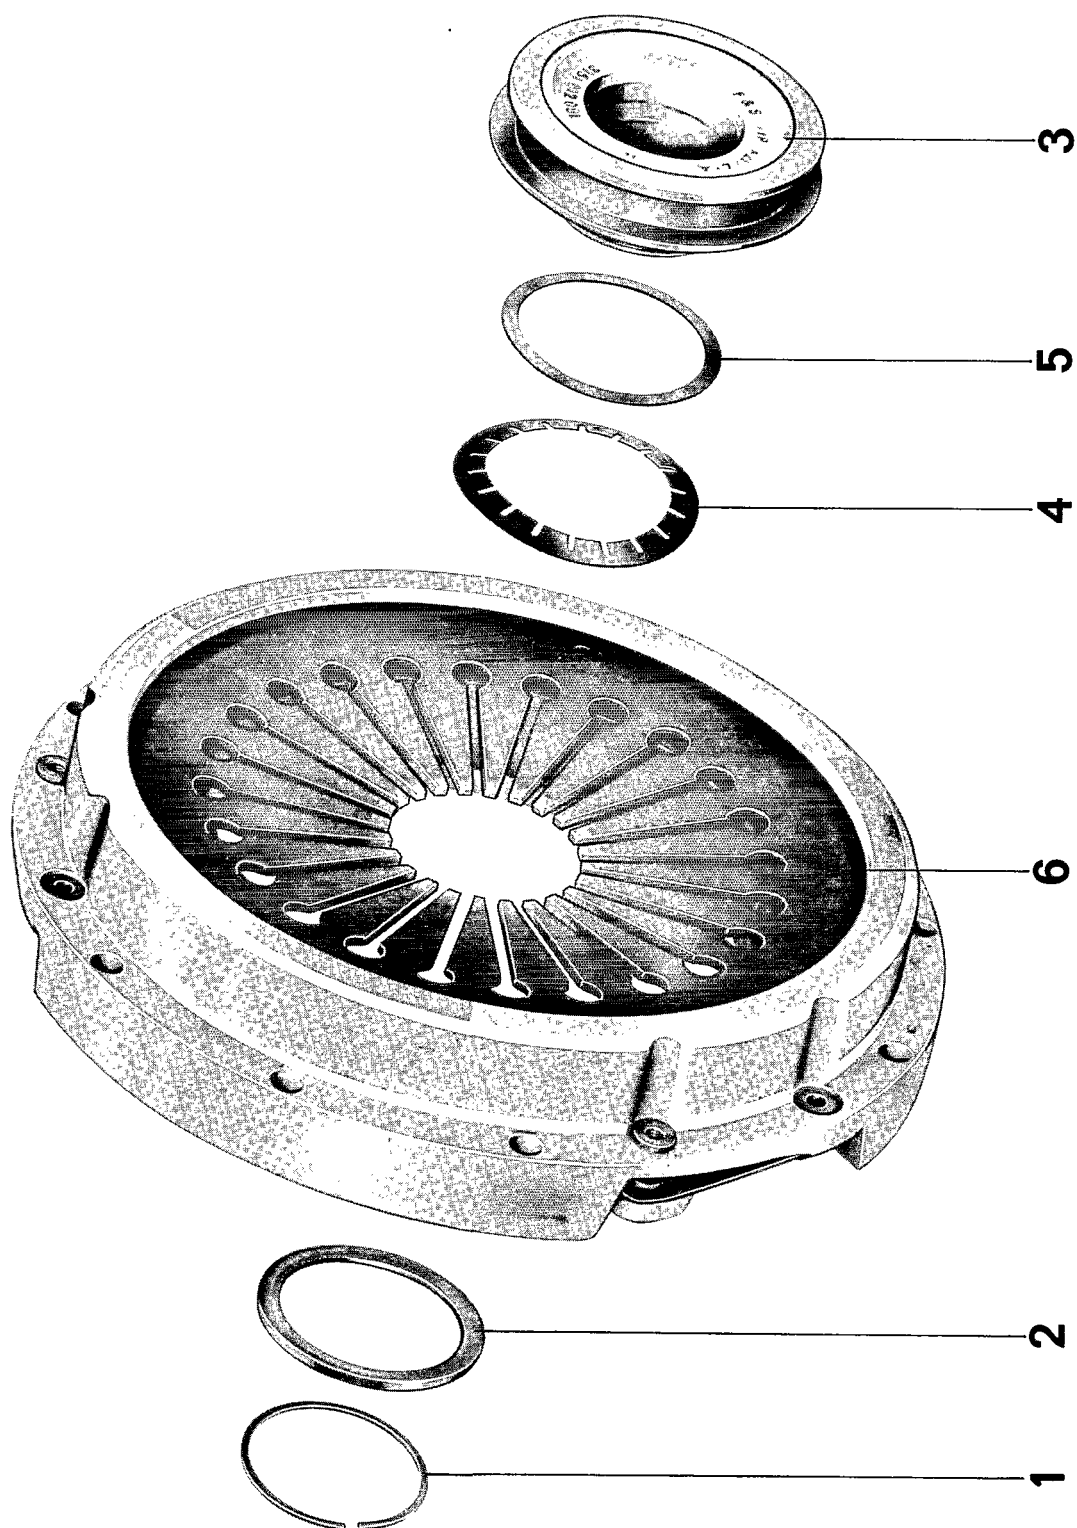


| No. | Description | Qty | Note when | | References |
|-----|------------------|-----|---|---|------------|
| | | | removing | installing | |
| 1 | Snap ring | 1 | Remove with snap ring pliers while pushing pressure plate down. | Check for proper seating. | 9.1-2/3 |
| 2 | Thrust washer | 1 | | Groove must face the snap ring. | 9.1-2/3 |
| 3 | Throwout bearing | 1 | | Should not be washed, only wiped with dry rag. Grease guide tube contacting surface with multi-purpose grease with MoS ₂ additive. | |
| 4 | Spring washer | 1 | | Install in correct position. | 9.1-2/3 |
| 5 | Spacer | 1 | | | |
| 6 | Pressure plate | 1 | | Check for wear and replace if necessary. | |

INSTRUCTIONS FOR REMOVAL AND INSTALLATION

Removal

1. Lay the pressure plate onto the throwout bearing and push down by pressing against the thrust washer so that the snap ring can be reached.

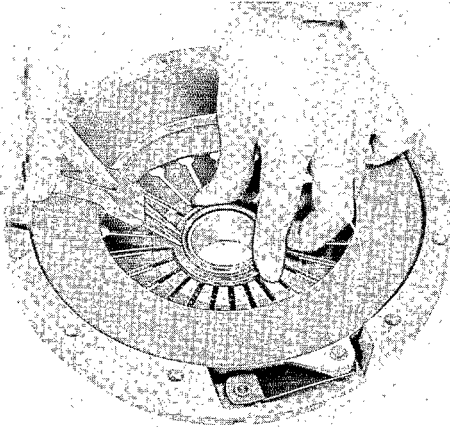


2. Remove snap ring with snap ring pliers and take the throwout bearing out together with the washers.

NOTE:


Throwout bearings are packed with special grease and therefore may not be washed.

Installation

1. Place spacer and spring washer on the throwout bearing in proper position.

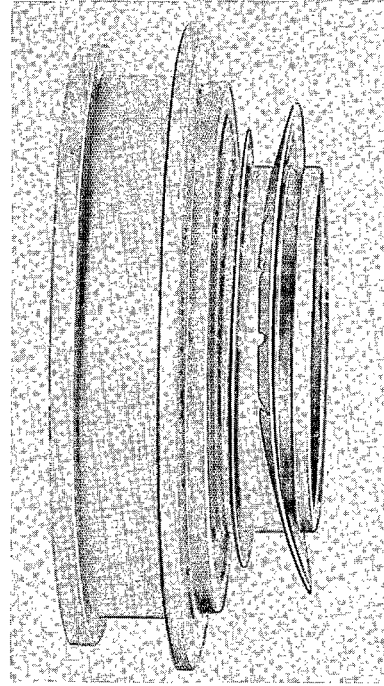


2. Insert the throwout bearing into the diaphragm spring of the pressure plate.
3. Install thrust washer with the groove facing the snap ring and install snap ring while pushing the pressure plate and thrust washer downward.

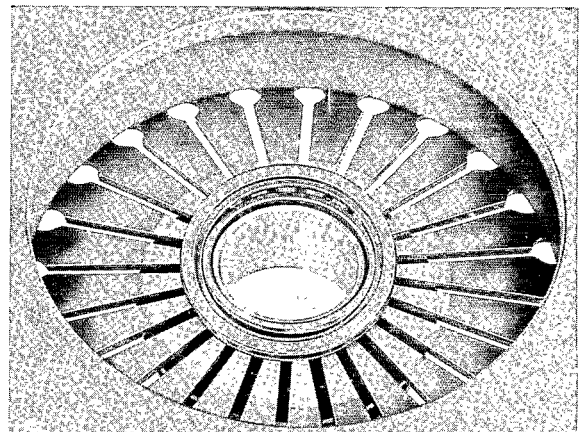

CLUTCH - 1975 MODELS

| | 911 S and Carrera |
|-----------------------|-------------------|
| <u>Pressure plate</u> | MFZ 225 KSph |
| Pressure | 714 - 785 kp |
| Spring No. | 3027 056 000 |
| Part No. | 915.116.001.14 |
| <u>Drive shell</u> | --- |
| Part No. | 915.116.011.013 |

CLUTCH MODIFICATIONS - 1978 MODELS

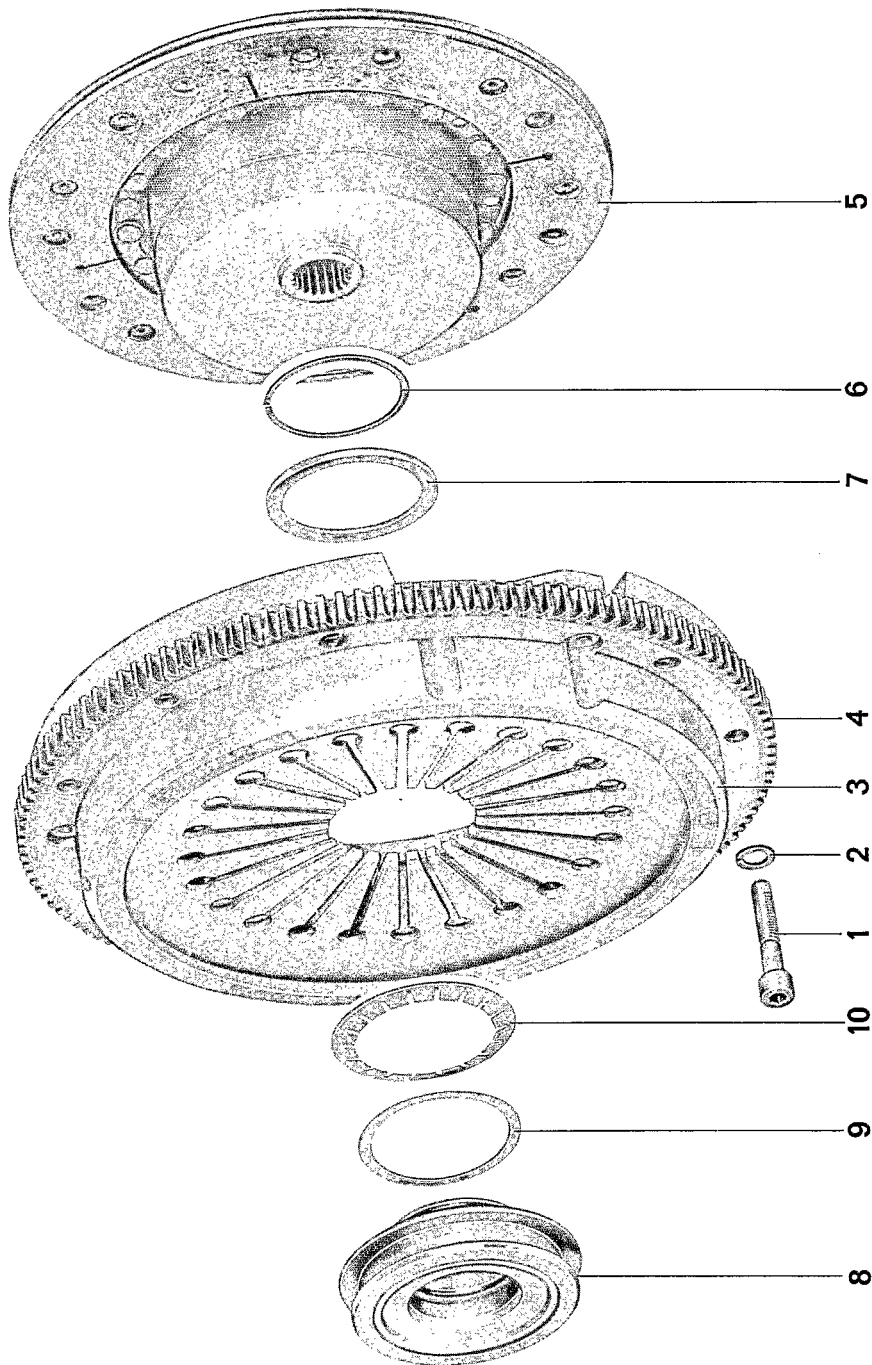

| No. | Description | Qty. | Note When | | Special Instructions |
|-----|-------------------|------|-----------|-----------------------------|----------------------|
| | | | Removing | Installing | |
| 1 | Socket head screw | 9 | | | |
| 2 | Lock washer | 9 | | Replace | |
| 3 | Pressure plate | 1 | | | |
| 4 | Starter gear ring | 1 | | | |
| 5 | Clutch disc | 1 | | | |
| 6 | Circlip | 1 | | | |
| 7 | Thrust washer | 1 | | | |
| 8 | Release bearing | 1 | Check | | |
| 9 | Washer | 1 | | | |
| 10 | Spring washer | 1 | | Install in correct position | |

Kraftstoffanlage
Fuel System
Système d'alimentation
Sistema d'alimentazione

2

2

2

2

2

2

2

2

2

2

CONTENTS

0 - INFORMATION, DESCRIPTION, TECHNICAL DATA

0.1 Description

| | |
|--|------------|
| Fuel system changes - 1972 model | 0.1 - 1/1 |
| Fuel injection pump changes - 1972 model | 0.1 - 1/1 |
| Throttle valve housing and intake manifold changes | 0.1 - 1/3 |
| Cold start enrichment system changes | 0.1 - 1/3 |
| Fuel injection system, schematic | 0.1 - 1/4 |
| Induction air preheating - 1972 model | 0.1 - 2/1 |
| Continuous injection system (CIS) | 0.1 - 3/1 |
| Engine cross section - 1974 model | 0.1 - 3/11 |
| Continuous injection system (CIS) - 1974 model | 0.1 - 4/1 |
| Fuel evaporative control system | 0.1 - 5/1 |

1 - SYSTEM CHECKOUT

1.1 Continuous injection system (CIS)

| | |
|--|--------------|
| General checkout procedure | 1.1 - 1/1 |
| Visual inspection | 1.1 - 1/2 |
| Initial checks | 1.1 - 1/4 |
| Pressure tests | 1.1 - 1/6 |
| Leakage checks | 1.1 - 1/10 |
| Injection valve, checking | 1.1 - 1/11 |
| Auxiliary air device, checking | 1.1 - 1/12 |
| CIS testing and adjustment specifications - 1974/75 models | 1.1 - 1/13 |
| CIS testing and adjusting specifications - 1976/77 models | 1.1 - 1/14 a |
| CIS testing and adjusting specifications - 1978/79 models | 1.1 - 1/14 c |
| CIS testing and adjusting specifications - 1980 model | 1.1 - 1/14 d |
| Testing and adjusting values - 911 SC (1981 models with Oxygen Sensor Control) | 1.1 - 1/14 e |
| Control pressure regulator (vacuum-controlled), checking | 1.1 - 1/15 |
| "Cold" control pressure (vacuum-controlled control pressure regulator), checking | 1.1 - 1/16 a |
| Auxiliary air valve, checking | 1.1 - 1/17 |
| Safety switch, checking | 1.1 - 1/18 |
| CIS problems and remedies | 1.1 - 2/1 |
| Automatic choke, troubleshooting - 1976 model | 1.1 - 2/3 |
| Thermostat, checking | 1.1 - 1/19 |
| Vacuum system layout - 1978 model | 1.1 - 3/1 |

| | |
|---|-------------|
| Vacuum hose layout - 1979 model | 1.1 - 4/1 |
| Fuel and vacuum lines layout - 1980 model | 1.1 - 4/3 |
| 2 - SERVICING | |
| 2.1 Servicing information | |
| Regulator housing, removing and installing | 2.1 - 1/1 |
| Induction air preheating system, checking | 2.1 - 1/1 |
| Fresh air flap, adjusting | 2.1 - 1/2 |
| Fresh air flap lever, replacing | 2.1 - 1/3 |
| Hose clamps for cold start enrichment, installing | 2.1 - 1/4 |
| Fuel injection nozzles, checking | 2.1 - 1/5 |
| 2.2 Servicing continuous injection system (CIS) | |
| CIS, disassembling and assembling | 2.2 - 1/1 |
| Mixture control unit, removing and installing | 2.2 - 1/7 |
| Throttle valve housing with control pressure regulator (throttle valve position), removing and installing | 2.2 - 1/8 |
| Control pressure regulator (warm running compensation), removing and installing | 2.2 - 1/9 |
| Start (enrichment) valve, removing and installing | 2.2 - 1/10 |
| Fuel filter, removing and installing | 2.2 - 1/11 |
| Fuel pressure accumulator, removing and installing | 2.2 - 1/12 |
| Injection valves, removing and installing | 2.2 - 1/13 |
| Plastic fuel lines, replacing | 2.2 - 1/15 |
| Fuel line system, bleeding | 2.2 - 1/17 |
| Mixture control unit, dismantling and assembling | 2.2 - 2/1 |
| Sensor plate, removing and installing | 2.2 - 2/4 |
| Air flow sensor housing, locating operating lever with follower | 2.2 - 2/6 |
| Mixture control screw basic adjustment after replacement of follower | 2.2 - 2/7 |
| Fuel distributor pressure relief valve piston seal, replacing | 2.2 - 2/8 |
| Vacuum controlled (warm-up) control pressure regulator, removing and installing | 2.2 - 2/9 |
| Auxiliary air valve, removing and installing | 2.2 - 3/1 |
| Mixture control unit, disassembling and assembling - modifications from April 1976 | 2.2 - 2/8 a |
| Therموvalve, removing and installing | 2.2 - 3/2 |
| Diverter valve, removing and installing | 2.2 - 3/3 |

2.3 Fuel tank

| | |
|--|-----------|
| Fuel tank plug with CIS filter, cleaning | 2.3 - 1/1 |
| Fuel tank (80 liter), removing and installing - 1974 model | 2.3 - 1/3 |

2.4 Fuel pump

| | |
|---|-----------|
| Fuel pump, removing and installing - 1976 model | 2.4 - 1/1 |
| Layout drawing of Check valves on fuel pumps | 2.4 - 1/3 |
| Replacing check valve | 2.4 - 1/4 |

2.5 Oxygen sensor

| | |
|---|-----------|
| Oxygen sensor, removing and installing | 2.5 - 1/1 |
| Oxygen sensor control unit, removing and installing | 2.5 - 1/3 |
| Frequency valve for oxygen sensor, checking | 2.5 - 1/4 |
| Throttle valve switch, checking and adjusting | 2.5 - 1/5 |
| Removing and installing microswitch for acceleration enrichment of Oxygen Sensor control (from 1981 models) | 2.5 - 1/7 |
| Correcting CO level setting on mixture control unit - (from 1981 models) with shear-off screw | 2.5 - 1/8 |

3 - ADJUSTMENT INSTRUCTIONS

3.1 Adjustment instructions for fuel injection system

| | |
|---|-----------|
| Fuel injection pump, adjusting with emission tester | 3.1 - 1/1 |
| Idle, adjusting | 3.1 - 1/2 |
| Microswitch, adjusting - 1972 model | 3.1 - 1/4 |

3.2 CIS adjustment instructions

| | |
|--|------------|
| Idle, adjusting | 3.2 - 1/1 |
| Full power position of throttle, adjusting | 3.2 - 1/3 |
| Microswitch, adjusting | 3.2 - 1/4 |
| Control pressure regulator (throttle valve position), checking and adjusting | 3.2 - 1/5 |
| Hand throttle, adjusting | 3.2 - 1/6 |
| Idle, adjusting - 1978 model | 3.2 - 1/7 |
| Idle, adjusting - 1980 model | 3.2 - 1/11 |
| Adjusting idle 911 SC - (from 1981 models) | 3.2 - 1/14 |

FUEL INJECTION PUMP CHANGES - BEGINNING WITH 1972 MODELS

The 2,4 liter engines are equipped with changed injection pumps. The changes consist of a wider contoured cam and modified centrifugal weights and springs.

Pump designation (BOSCH number on data plate):

911 T = 0408 126015

911 E = 0408 126014

911 S = 0408 126013

CHANGES IN THROTTLE VALVE HOUSINGS AND INTAKE MANIFOLDS

Beginning with the 1972 models, throttle valve stops in the throttle valve housing are relocated to the lever side. The new levers require the use of modified protractors, special tool P 228 c.


The protractor on the injection pump control lever has not been changed. The correlation checkout procedure remains same (see page SF 22).

The intake velocity stacks are made of plastic. They form a single unit together with the lower air assembly.

COLD START ENRICHMENT SYSTEM CHANGES

Fuel for cold start enrichment now is fed directly into each individual velocity stack. The discharge nozzles are bonded and can not be exchanged.

SCHEMATIC VIEW OF THE PORSCHE FUEL INJECTION SYSTEM

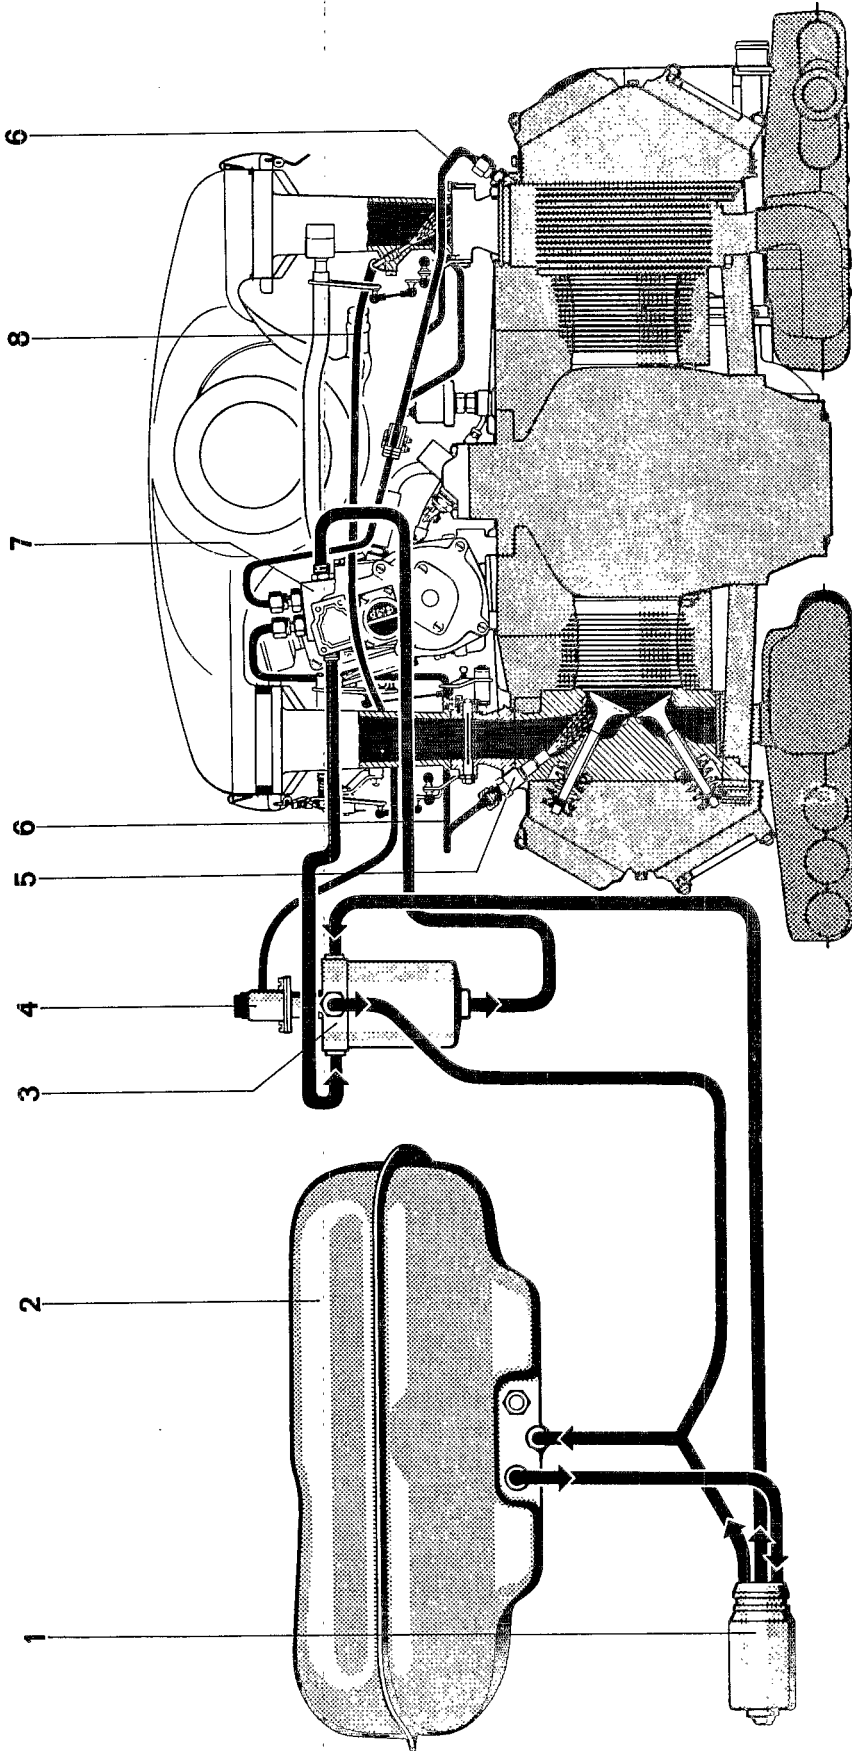

- 1 Fuel pump
2 Fuel tank
3 Fuel filter

- 4 Cold start enrichment solenoid
5 Injection valve(nozzle)
6 Injection line


- 7 Injection pump
8 Cold start enrichment hose

INDUCTION AIR PREHEATING - BEGINNING WITH 1972 MODELS

General Information

Beginning with the 1972 models, all 2.4 liter fuel injection engines are equipped with an induction air preheating system.

Induction air preheating provides even induction air temperatures in lower engine speed ranges resulting in improved performance, as well as lower exhaust emission values.

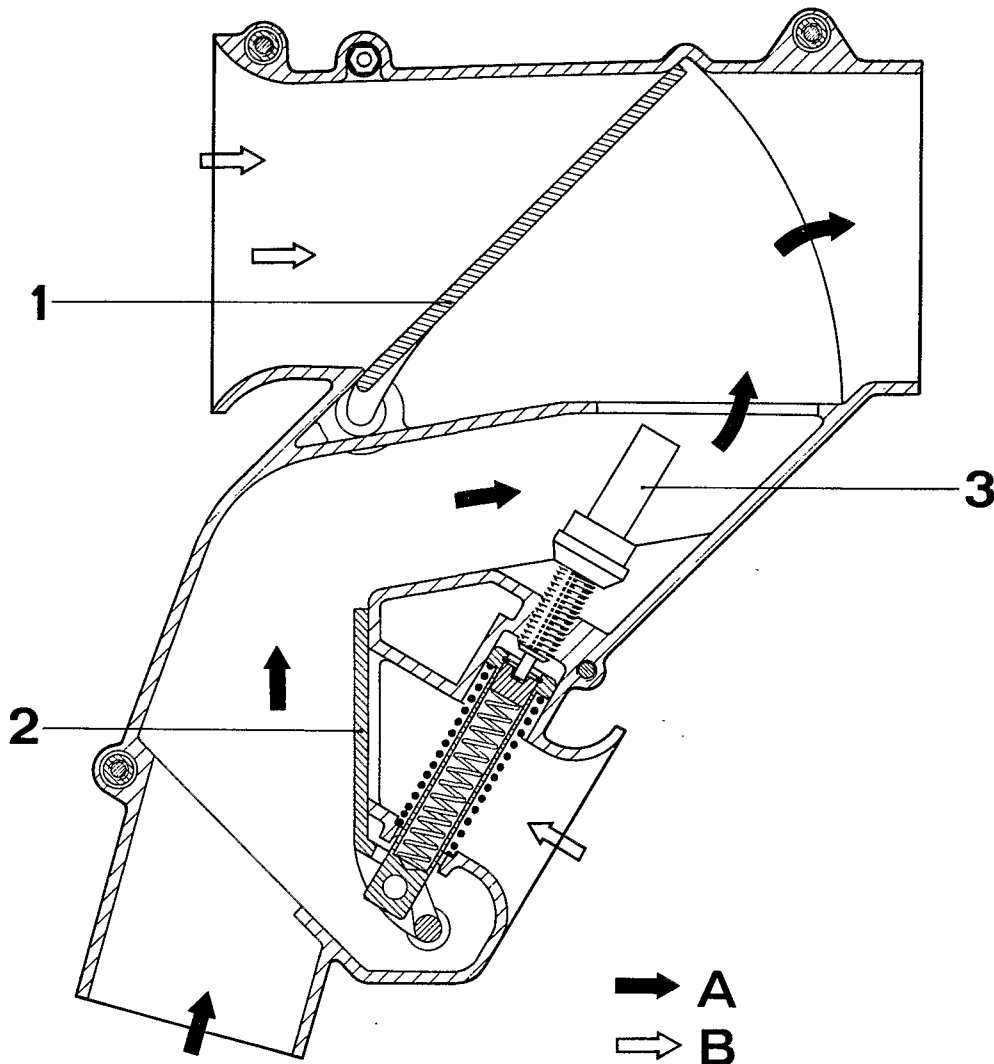

1 = Fresh air flap

2 = Hot air flap

3 = Thermostat

A = Hot air


B = Fresh air

Design The induction air preheating system consists of:

1. A regulator housing which is attached to the left velocity stack by three 6 mm bolts. It contains two flaps and a thermostat.

One of the flaps (the fresh air flap) is controlled by the throttle linkage. The other flap (hot air flap) is controlled by the thermostat.

2. A hose which feeds heated air from the left heat exchange.
3. A cam on the left throttle valve lever which controls the fresh air flap.

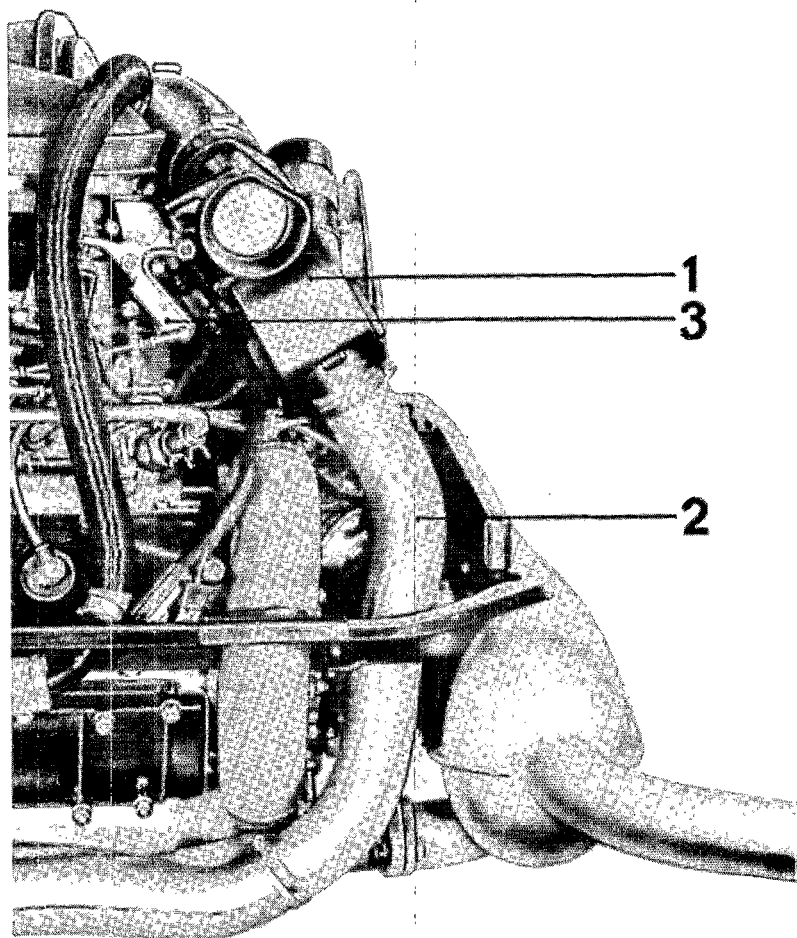

- 1 Control box
- 2 Hot air supply duct
- 3 Control lever

Function A thermostat-controlled hot air flap maintains induction air temperature at 45°C (112°F). A second flap stops the flow of hot air from throttle valve position of about 20° and engine draws only fresh outside air at wide open throttle.

Engine started, cold (below 45°C (112°F))

Throttle at idle position (fresh air flap closed)

Hot air flap open, engine draws hot air from heat exchanger.

Engine cold (below 45°C (112°F)) - throttle in partial load position

Hot air flap open. It opens according to position of cam. Fresh outside air is added.

Fresh air flap is fully open in full throttle position.


Air temperature rises to 45-50°C (112°F - 122°F)

Thermostat begins to close hot air flap at 45°C (112°F). It is fully closed at 50°C (122°F) and engine draws only fresh outside air.

A bypass duct, closed by the hot air flap when cold, feeds additional air with increasing temperatures.

CONTINUOUS INJECTION SYSTEM (CIS)


Beginning with the January 1973 production, Type 911 T vehicles are equipped with the continuous injection system (CIS).

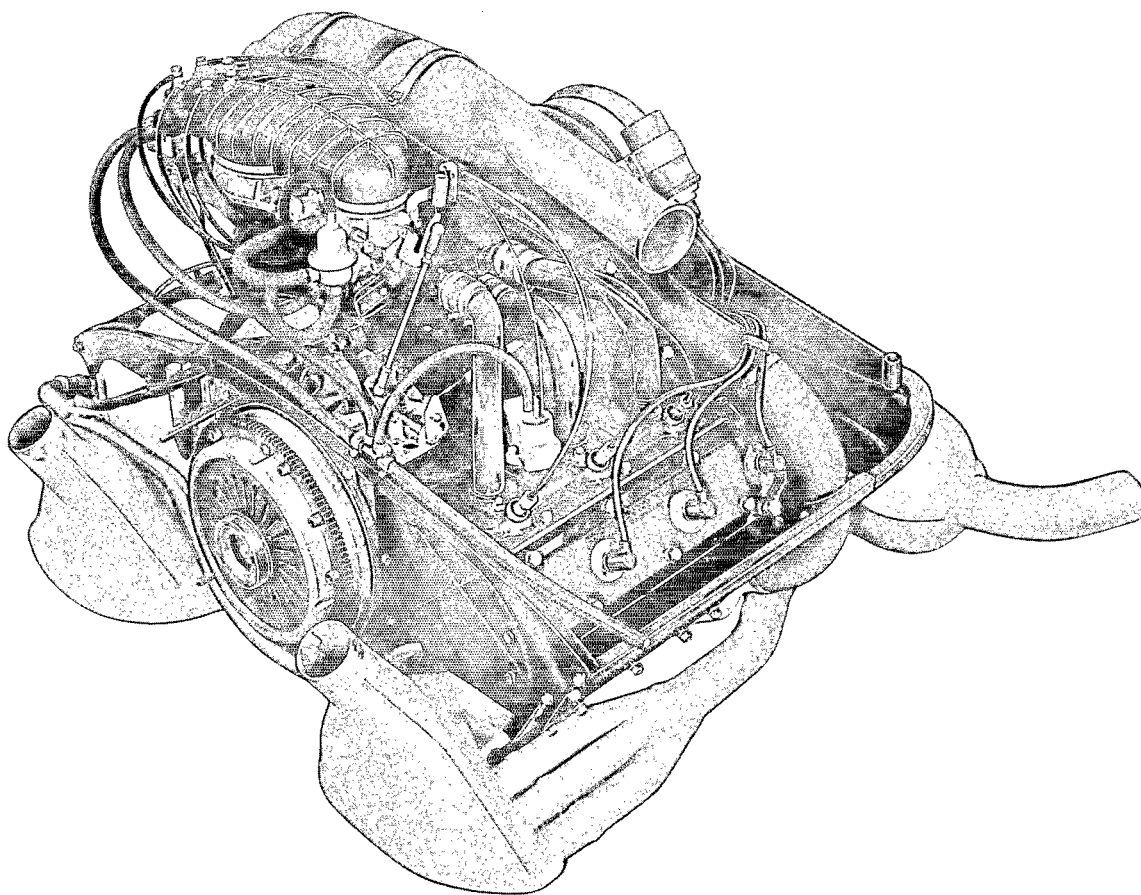

The working principle of this system depends on measuring the intake air flow rate to determine the amount of fuel to be injected.

The fuel distributor determines the quantity of fuel to be delivered depending on air flow rate and engine loading conditions.

ENGINE CROSS SECTION

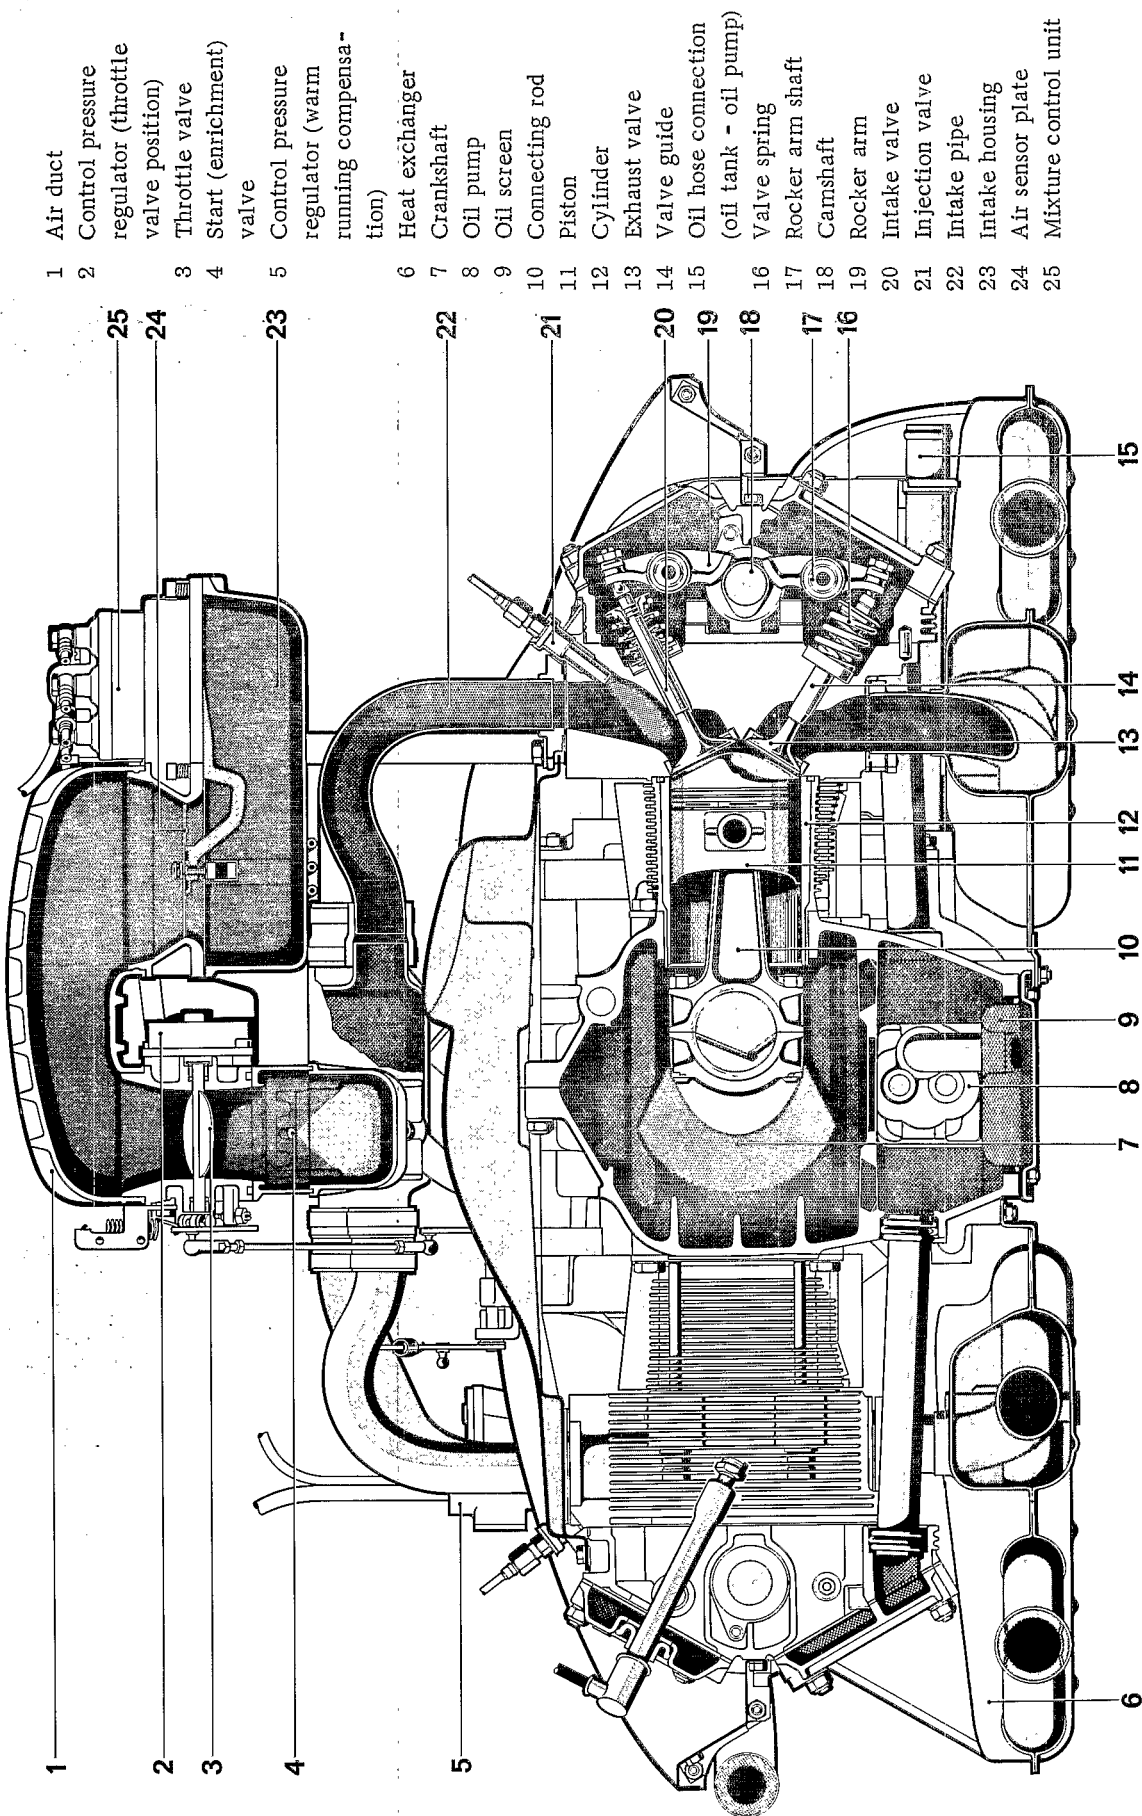


Mixture Control Unit

Air Flow Sensor and Fuel Distributor.

The air flow sensor consists of a venturi and a sensor plate which is attached to a lever.

The volume of intake air passing through the venturi determines the position of the sensor plate.

The control plunger and the slotted metering cylinder are located in the center of the fuel distributor. Machined into the metering cylinder are 6 rectangular slots which act as metering ports. They can be progressively opened by the control plunger.

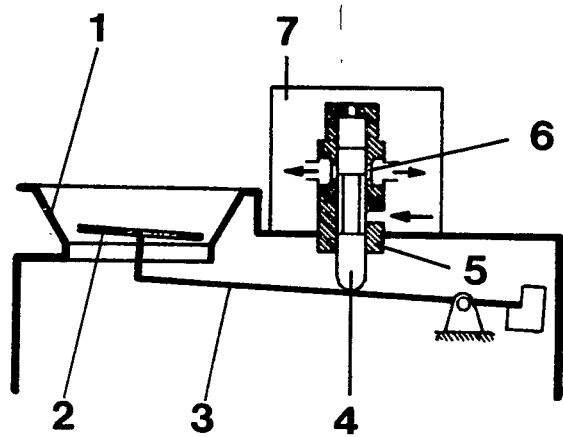


- 1 Venturi
- 2 Sensor plate
- 3 Lever
- 4 Control plunger
- 5 Slotted metering cylinder
- 6 Metering port
- 7 Fuel distributor


The metering ports open depending on the position of the sensor plate whose movement is transmitted to the control plunger through a lever.

Intake air which passes through the air flow sensor exerts a pneumatic force F_1 on the sensor plate.

The pneumatic force is countered in the fuel distributor by hydraulic force F_2 which is exerted against the control plunger through a port.

The sensor plate will yield until the pneumatic force and hydraulic force equalize.

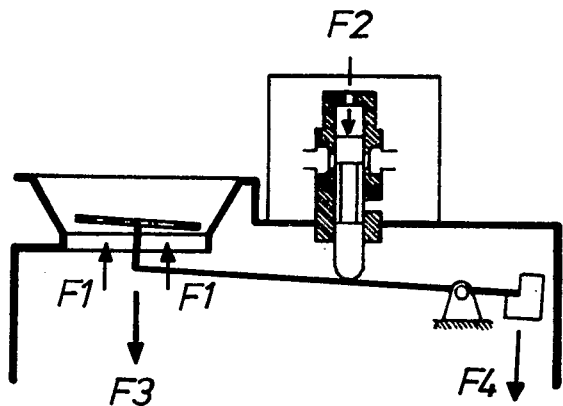

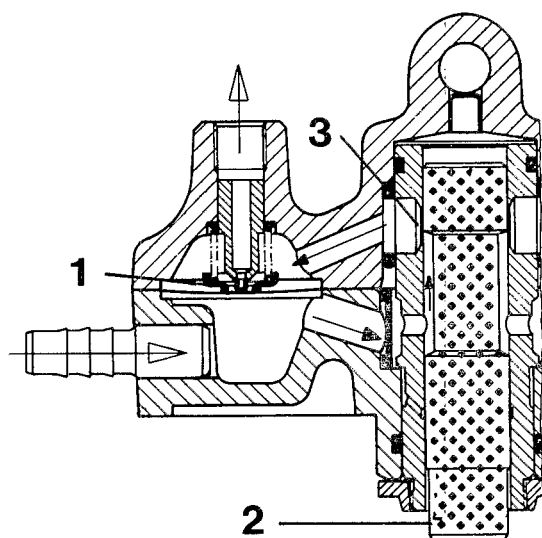

- 1 Pressure regulating valve
- 2 Control plunger
- 3 Metering port

The hydraulic pressure F2 will remain constant in a warm engine although it can be lowered through the reduction of control pressure, such as during warm-up or due to the given position of the throttle valve.

Weight of the sensor plate and lever F3 is equalized by the counter weight F4.

Each metering port in the fuel distributor is provided with a pressure regulating valve which keeps the pressure drop at the metering port constant (pressure difference = pressure ahead of the metering port less pressure after the metering port) independent of the fuel transfer rate, primary system fuel pressure, and injection valve opening pressure.

The pressure regulating valves are flat seat valves with a steel diaphragm acting as a valve plate.

By maintaining the pressure difference constant, it is possible to control the fuel flow rate by means of the size of the metering port cross-section alone.

The injection valves have no metering function.


Fuel Flow

The fuel flows from the electric fuel pump through an accumulator and filter to the mixture control unit.

A pressure regulator in the primary system maintains constant pressure in the system.

From the mixture control unit, injection lines carry the fuel to the injection valves. In addition, a separate line carries fuel to the start (enrichment) valve.

Control pressure can be varied by two (control) pressure regulators, one according to engine and outside temperatures, the other according to accelerator pedal movement.

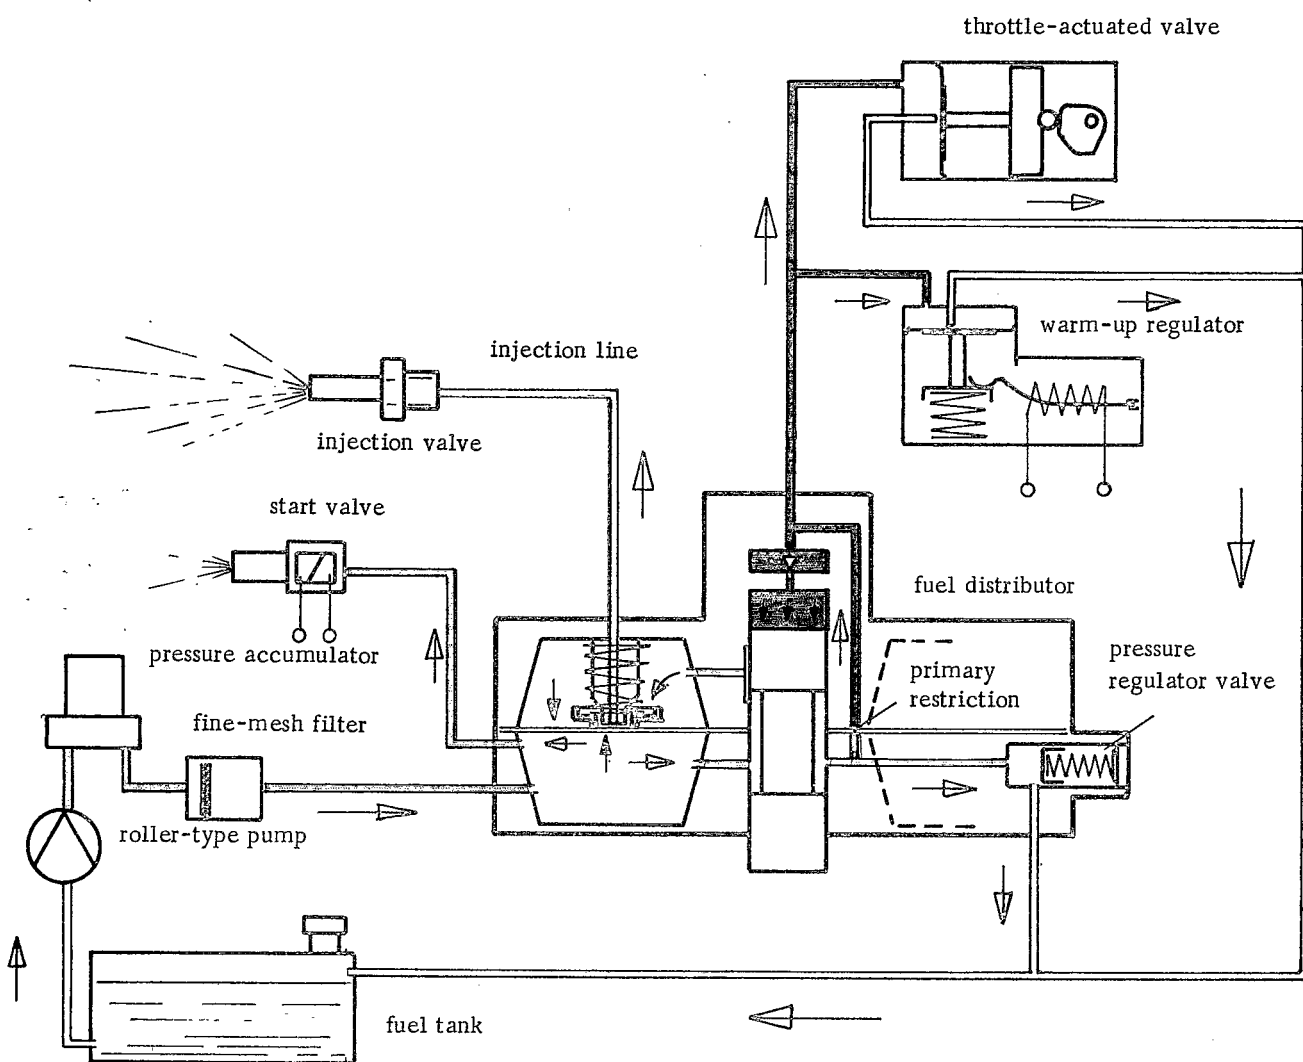


Primary system fuel pressure

Supplied fuel

Control pressure

Return flow


FUEL FLOW SCHEMATIC

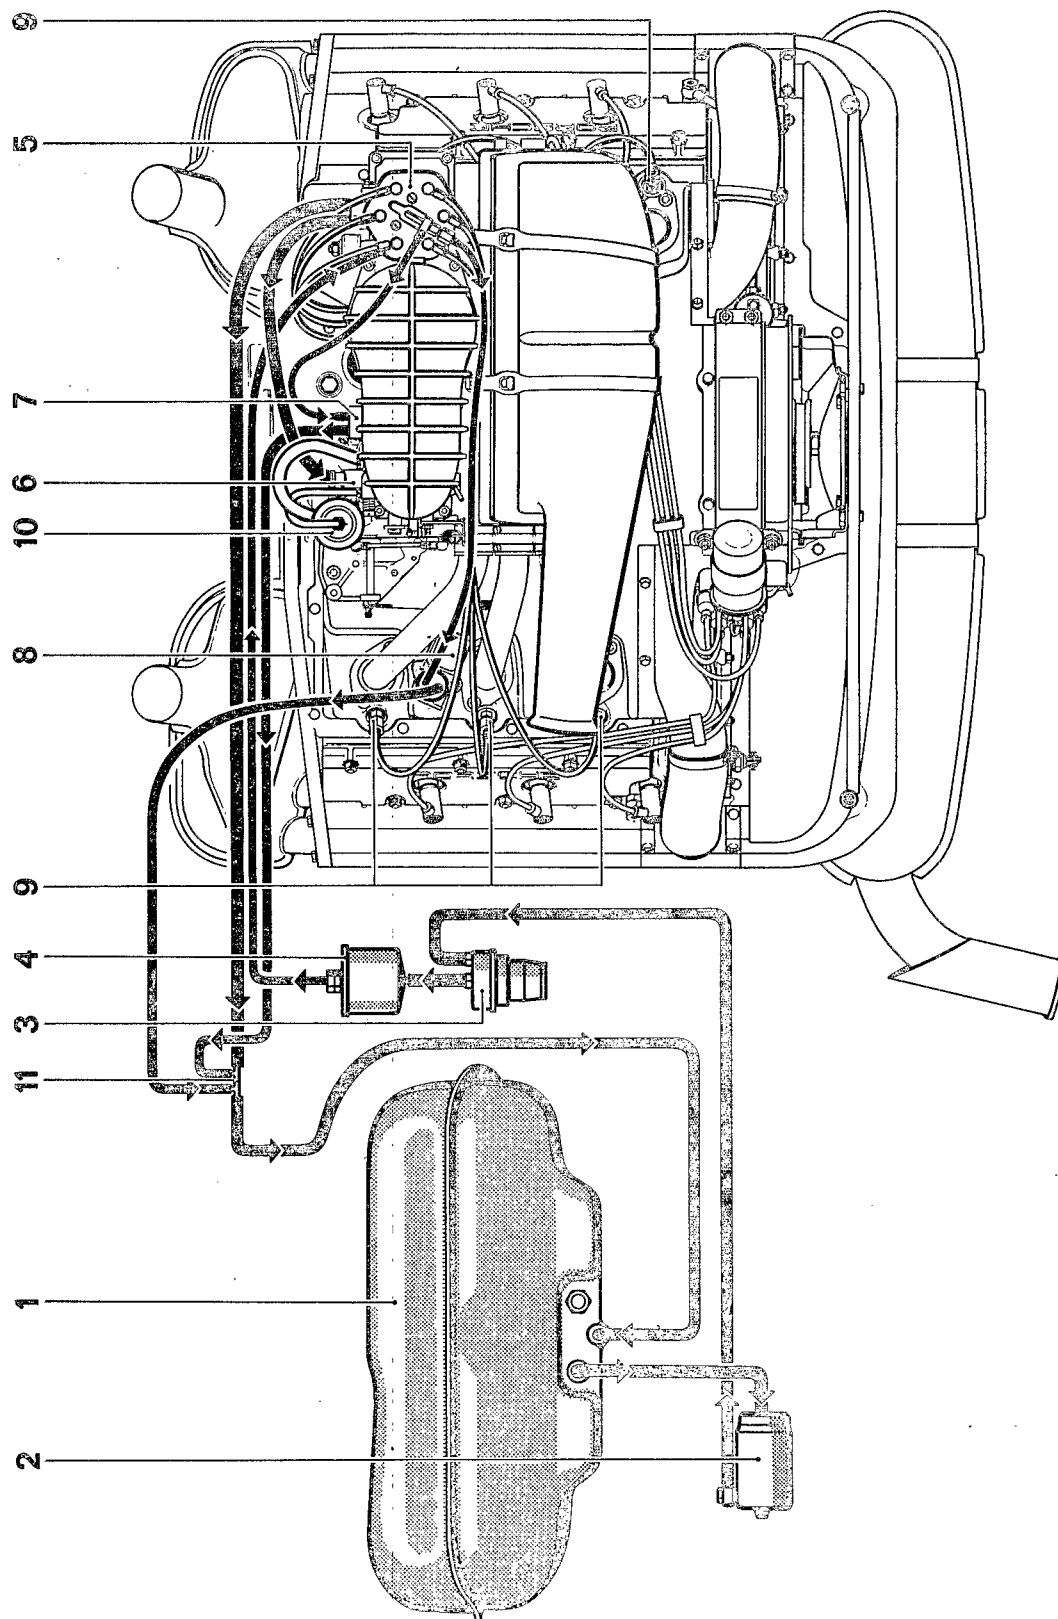

- | | | |
|-----------------------------|--|--|
| 1 Fuel tank | 5 Fuel distributor | 8 Control pressure regulator (warm running compensation) |
| 2 Fuel pump | 6 Start (enrichment) valve | 9 Injection valves |
| 3 Fuel pressure accumulator | 7 Control pressure regulator (throttle valve position) | 10 Auxiliary air device |
| 4 Fuel filter | | 11 Fuel return connection |


Electric Fuel Pump

A roller-type fuel pump is utilized.

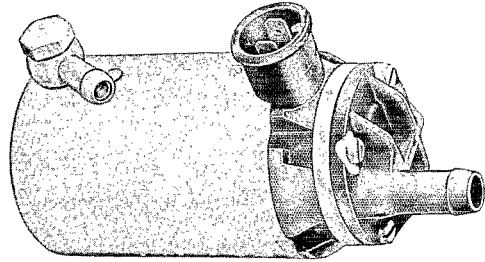

Fuel Pressure Accumulator


The fuel pressure accumulator is located in the primary circuit directly after the fuel pump. Its function is to delay the initial pressure surge when the pump starts. This delay is necessary to prevent the control plunger from being forced up before sufficient control pressure has been allowed to build up.

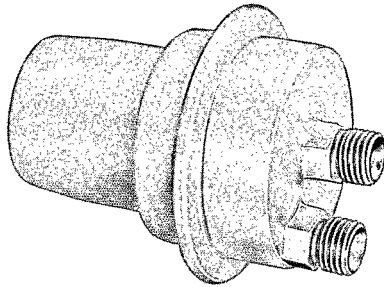


It also serves as a reservoir to keep the system under sufficient pressure for a short period of time when the engine is turned off.

Fuel Filter

An in-line filter with a paper cartridge is utilized.

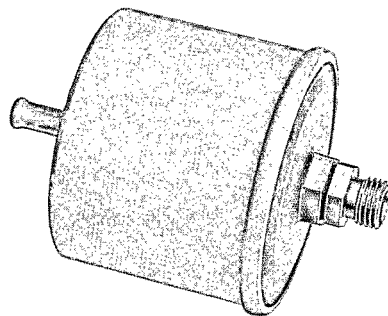


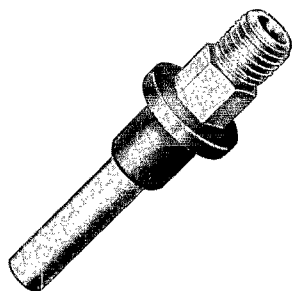

Injection Valves


Since the injection process is longer in a continuous injection system, the injection valves had to be designed for a smaller fuel transfer rate.

The injection valve permits fine atomization of fuel when small amounts are transferred. Opening pressure for the injection valves is approx. 3 bar.

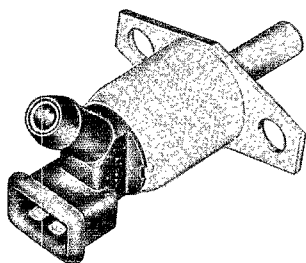

Start (Enrichment) Valve

The solenoid-operated start (enrichment) valve discharges supplemental fuel into the intake manifold when the engine is being started.

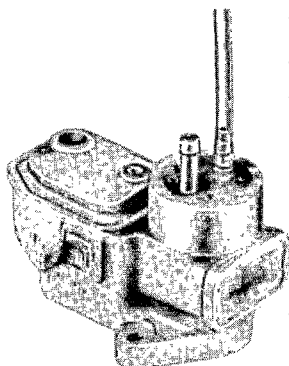


Control Pressure Regulator (Warm Running Compensation)

The control pressure regulator for warm running compensation contains a bimetallic spring acting on a spring-loaded diaphragm.

During engine warm-up, the bimetal spring presses against the valve spring causing the control pressure to drop. This results in a lower hydraulic pressure F2, greater travel of the air flow sensor plate with unchanged amount of intake air, and increased metering port cross-section, making a richer fuel/air mixture.

As the bimetal spring is heated, it gradually relaxes its pressure against the valve spring. Thus the control pressure normalizes again.

Idle speed can be increased during warm-up by opening the throttle manually (hand throttle).

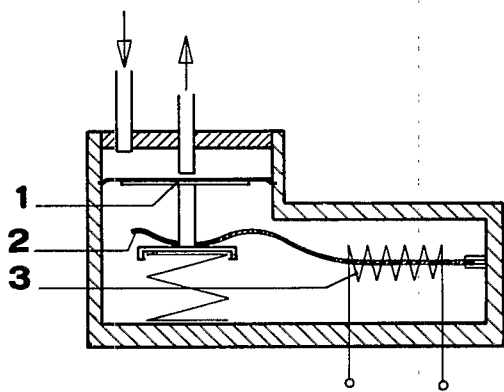



- 1 Pressure regulating valve
- 2 Bimetal spring
- 3 Heater coil

Control Pressure Regulator (Throttle Valve Position)

The control pressure regulator for throttle valve position is basically similar to the regulator for warm running compensation. It is attached to the throttle valve housing.


A cam plate is attached to the throttle valve shaft and rides along with it, compressing the regulator spring to a greater or lesser degree.

This changes the control pressure along with changed throttle valve position, adjusting the fuel/air mixture as required.

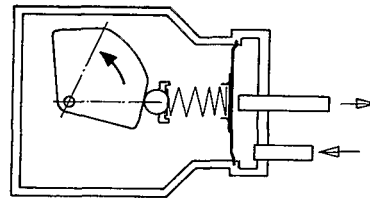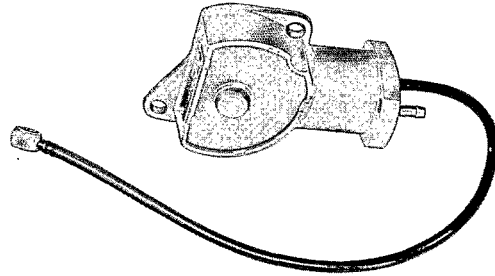

Auxiliary Air Device

When decelerating from high rpm with throttle closed, considerable vacuum builds up in the intake manifold. The vacuum is channeled to an auxiliary air device. As the device opens, additional air bypasses the throttle creating a combustible mixture.

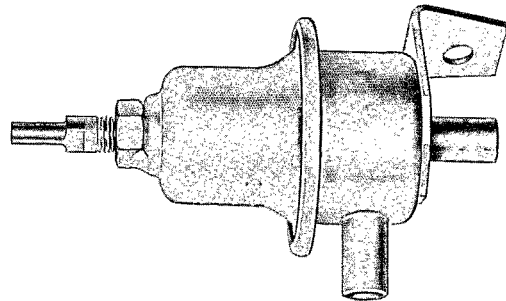


Idle Adjustment

The adjusting method is same as that for carburetors. The idle air mass passes through the air flow sensor where it is measured. The closed throttle is bypassed through a bypass bore.


The cross-section of this bore can be changed with the aid of an adjustment screw. A change in cross-section changes the engine speed without affecting the composition of the fuel/air mixture.

The fuel/air mixture can be adjusted within certain limits by means of a mixture adjusting screw to attain the required effect.

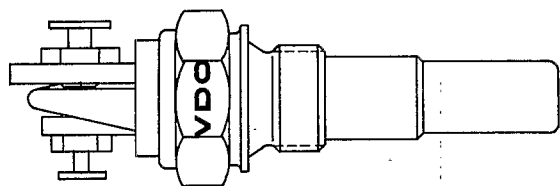

Thermoswitch

Beginning with 1974 models, engines equipped with the continuous injection system (K-Jetronic) are furnished with a thermoswitch which is connected to the cold start enrichment valve. The thermoswitch is located in the left chain housing cover. A microswitch is connected in series with it. The microswitch is activated by the hand throttle lever when the latter is moved to at least 5° of the throttle valve position. The thermoswitch is active up to engine temperature of approx. + 45° C (113° F) and prevents the injection of supplemental fuel by the cold start enrichment valve when starting a hot engine.

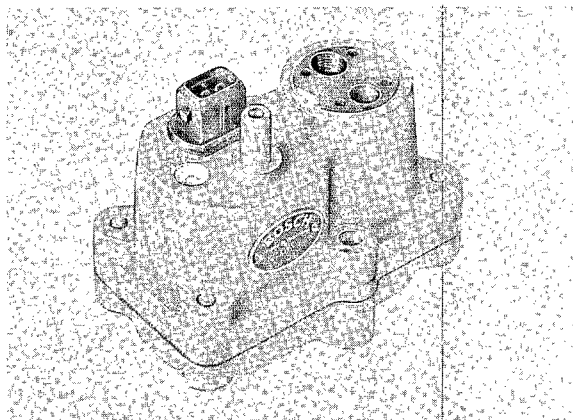


Vacuum controlled warm-up regulator

Control pressure changes of this warm-up regulator are made via intake manifold vacuum.

BEGINNING WITH 1974 MODELS

- 1 Air duct
- 2 Control pressure regulator (throttle valve position)
- 3 Throttle valve
- 4 Cold start enrichment valve
- 5 Control pressure regulator (warm running compensation)
- 6 Heat exchanger
- 7 Crankshaft
- 8 Oil pump
- 9 Oil screen
- 10 Connecting rod
- 11 Piston
- 12 Cylinder
- 13 Exhaust valve
- 14 Valve guide
- 15 Oil hose connection (oil tank - oil pump)
- 16 Valve spring
- 17 Rocker arm shaft
- 18 Camshaft
- 19 Rocker arm
- 20 Intake valve
- 21 Injection valve
- 22 Intake pipe
- 23 Intake housing
- 24 Air sensor plate
- 25 Mixture control unit

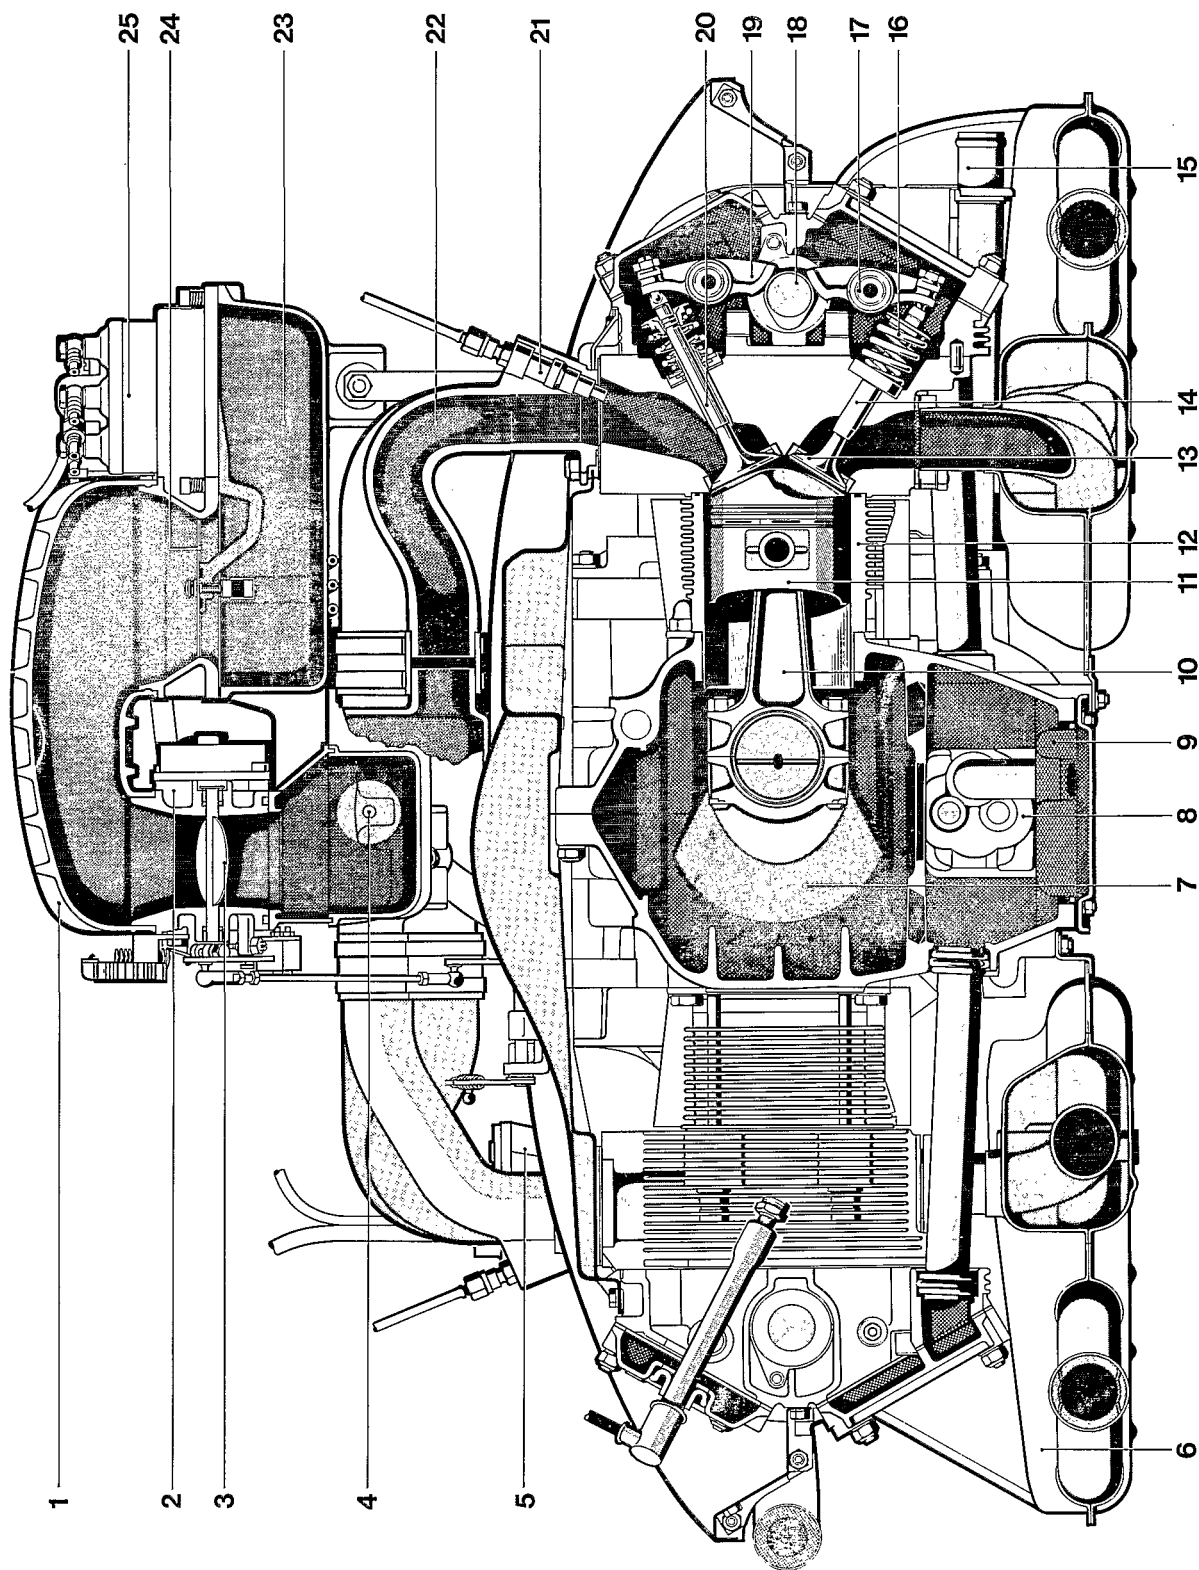

CONTINUOUS INJECTION SYSTEM (CIS)

Beginning with 1974 models, Type 911 and 911 S vehicles are equipped with the continuous injection system.

Changes Effective with 1974 Models


1. Cast intake pipes with mounting hole for injection valves.
2. Repositioning of the injection valves resulted in their being lengthened and injection lines shortened.
3. The diameter of intake pipes at the intake housing has been changed:

| | | |
|--------------------------|---|--------------|
| Intake pipe for Type 911 | = | 31 mm dia. |
| 911 S | = | 34.5 mm dia. |
4. Mixture control unit has been calibrated for 2.7 liter engines.
5. The pneumatic valve has been repositioned and also modified to the vacuum characteristics prevailing in the 2.7 liter CIS engines.
6. The cold start enrichment valve has been moved to the center of the intake housing to effect a better distribution of the fuel to the individual cylinders.
7. A thermoswitch has been mounted on the left chain housing cover to supplement the cold start enrichment valve.

FUEL EVAPORATIVE CONTROL SYSTEM

General

All vehicles are equipped with a sealed fuel tank venting system incorporating an activated charcoal filter. The closed system prevents fuel fumes from entering the atmosphere. The fumes are ducted into the activated charcoal filter with the aid of fresh air supplied by the engine cooling fan, and then to the engine air filter where they mix with the induction air and are burned with it.

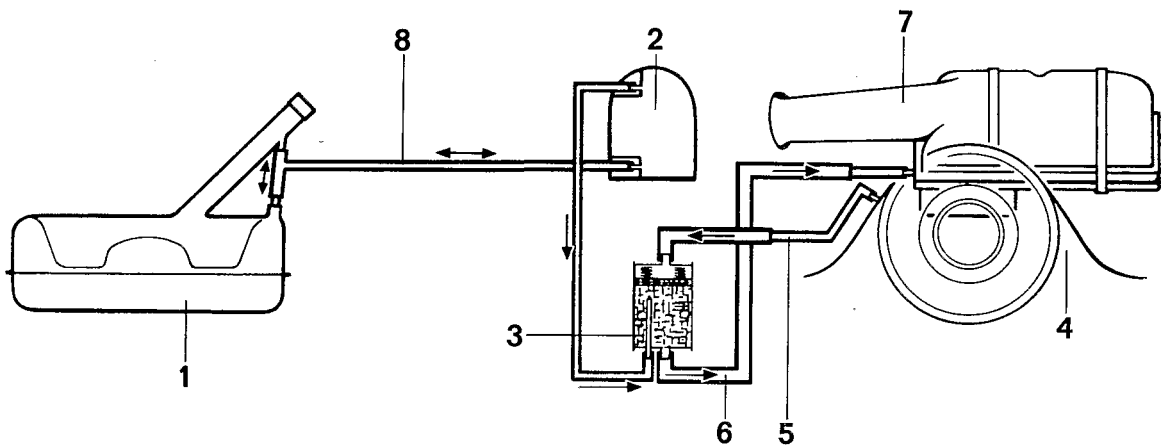

- | | |
|--|---|
| 1 Fuel tank | 5 Hose from cooling fan to activated charcoal filter |
| 2 Expansion chamber | 6 Hose from activated charcoal filter to engine air filter |
| 3 Activated charcoal filter | 7 Engine air filter |
| 4 Cooling fan upper shroud with hose connector | 8 Return hose connecting fuel tank with the expansion chamber |

CONTINUOUS INJECTION SYSTEM (CIS)

GENERAL CHECKOUT PROCEDURE

Prerequisite for the CIS checkout is a properly functioning ignition system and proper mechanical condition of the engine.

A complete CIS checkout should be carried out in the below given sequence.

However, specific problems can be analyzed by performing individual tests.

In addition, the following should be noted: Certain tests require that the engine is cold (check control pressure "cold"). For this test, the engine should be out of operation for several hours, or overnight. The checkout should be performed at the same location where the car was parked for several hours. Erroneous test results will be obtained if, for instance, the vehicle should be brought into a heated garage from a cold outside environment.

The remaining tests, with the exception of the idle adjustment, can be performed with the engine warm or cold.

The engine must be at warm operating temperature when idling is adjusted.

All tests, idle adjustment excepted, are accomplished with the engine turned off.

NOTE

Always install new gaskets whenever fuel lines are loosened or detached.

It is important to maintain the highest degree of cleanliness when servicing the CIS.

The outside of the fuel lines must be thoroughly cleaned before they are loosened.

VISUAL INSPECTION

The CIS should be visually inspected prior to the initiation of work.

Visual inspection for leaks:


1. Check all fuel line connections for leaks.
2. Check induction system (vacuum system) for leaks between the mixture control unit and engine (air duct between mixture control unit and throttle housing).
3. Check for leaks between intake manifold and start (enrichment) valve (O-ring).
4. Check for leaks between intake manifold and pipes.
Replace porous rubber boots.
5. Check hose connections for leaks at the intake manifold, vacuum hoses at the throttle housing, as well as the auxiliary air device.
6. Check proper seating of rubber covers at the injection valves.
7. Check attachment of intake pipes at cylinder heads.

Checking free movement of lever
in air flow sensor

1. Unhook rubber straps, remove air filter horn and withdraw cartridge.
2. Raise lever of air flow sensor by hand.

An even amount of resistance should be felt throughout the length of movement.


A quick downward movement of the lever will detach it from the sluggish control plunger at which time no resistance should be felt at the lever.

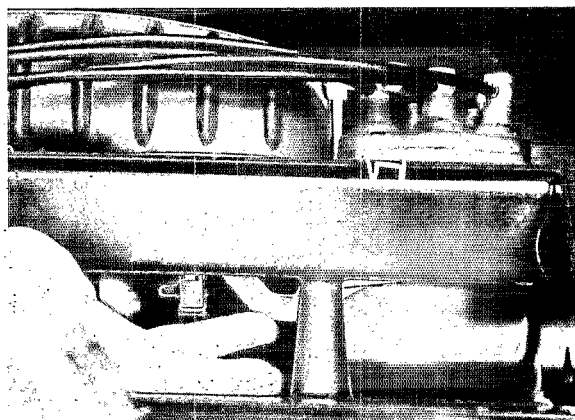


Inspection of the flexible sensor plate stop in the air flow (sensor plate in position of rest)

The fuel system must be depressurized when performing this check.


To relieve the remaining pressure, slightly loosen the pressure line connection at the control pressure regulator for warm running compensation. When loosening the line, wrap the connection with a rag to keep fuel from spilling.

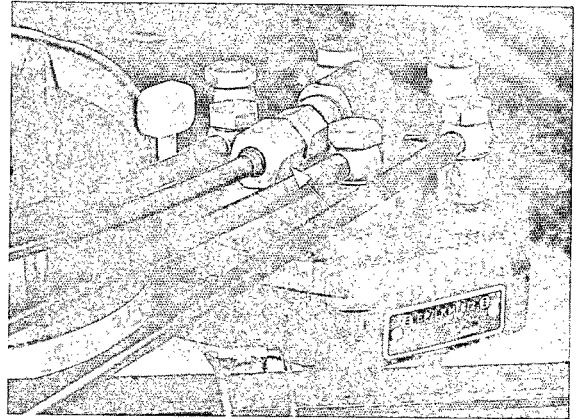


The upper edge of the sensor plate must now be flush with the root of the taper at a point shown in the illustration. A lower positioning of up to 0,5 mm is permissible.

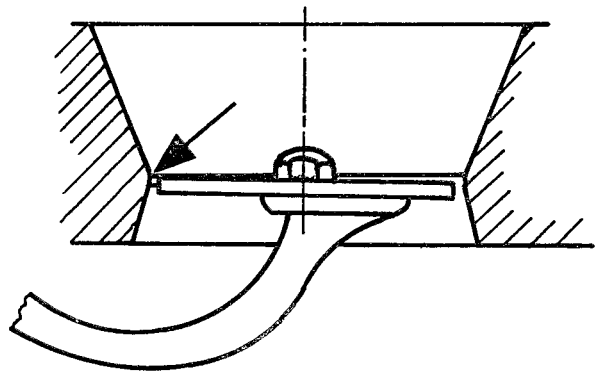

If required, adjustment of the flexible stop can be corrected by bending the wire bow.

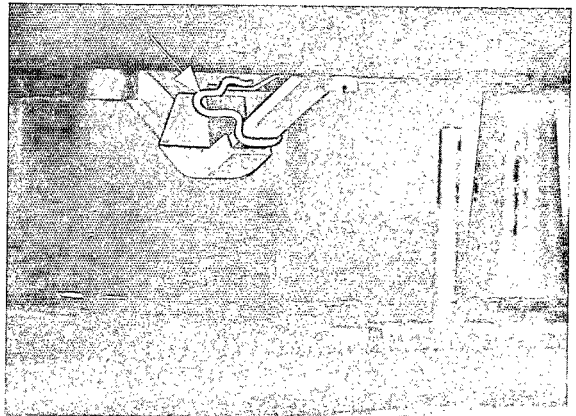


Since April of 1976 the spring-loaded stop of the sensor plate can be corrected with an adjusting screw.

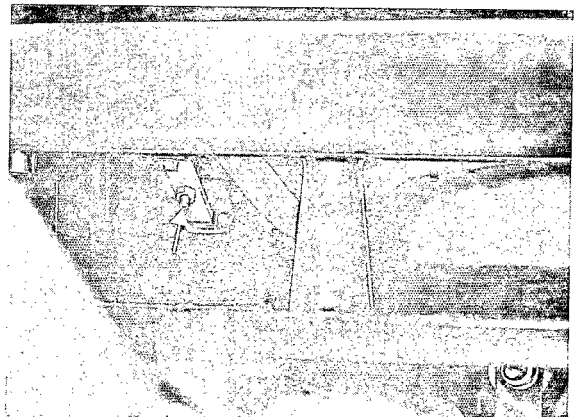

INITIAL CHECKS


The following tests are component tests. Final evaluation of individual parts is possible only upon completion of pressure checks.

When performing the tests outlined below, remove the middle fuse from the rear fuse box to keep the heater coil in the control pressure regulator for warm running compensation from heating up.

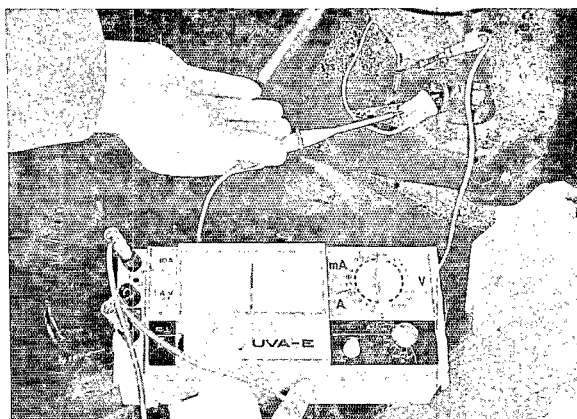


Checking electric fuel pump

1. Minimum voltage at the connecting terminal is 11.5 volts.
2. Current draw when running is 8.5 amps maximum.

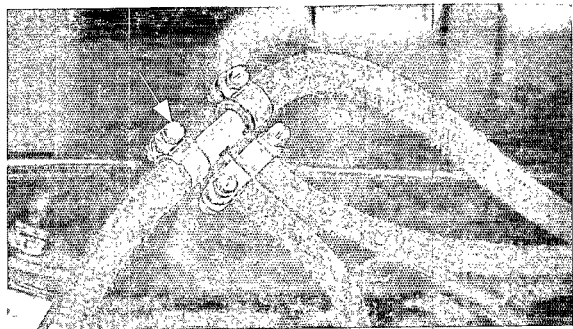

3. Check pump delivery rate:

Disconnect fuel return line at the connector. Push a section (about 50 cm long) of normal fuel hose onto the connector and hold in a measuring glass. Switch the ignition on for the duration of the measuring period. See page 1.1 - 1/13 for specifications.

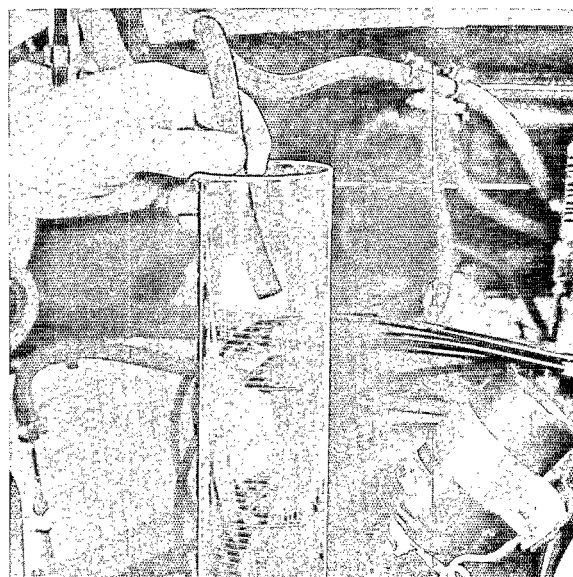


Modifications - 1976 Model

Terminals 30 and 87a of the relay (rear of luggage compartment) must be bridged to check the fuel pump delivery rate, due to a safety switch on the mixture control unit (also refer to page 1.1 - 1/17).


Checking Control Pressure Regulator (Warm Running Compensation)

1. Minimum voltage at the connecting terminal is 11.5 volts.
2. Check heater coil continuity with the aid of a test buzzer or ohmmeter. (Check between wire terminal at the control pressure regulator and the ground.) The connecting wire must be detached from the control pressure regulator. If the circuit is open, the control pressure regulator will have to be replaced.

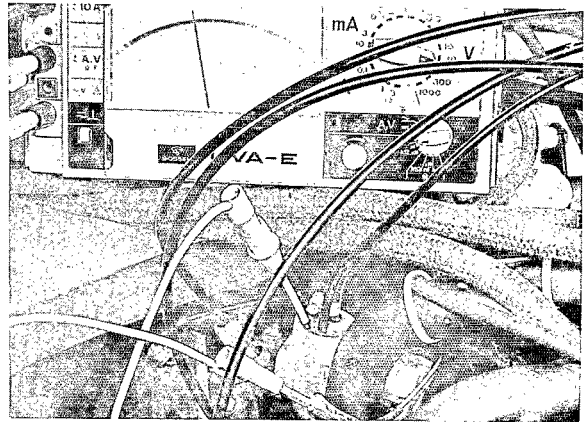


Checking Start (Enrichment) Valve

1. Remove start (enrichment) valve (see page 2.2 - 1/10); the fuel line remains connected.
2. Hold the start (enrichment) valve in a receptacle and connect to battery B+ (upper fuse in rear fuse box in engine compartment, left side) and to ground with a piece of jumper wire. Briefly switch the ignition on. The start (enrichment) valve must spray fuel in an even conical pattern.
3. Remove jumper wire and switch the ignition on. After waiting about 10 seconds, wipe nozzle of start (enrichment) valve dry; no fuel should come out.

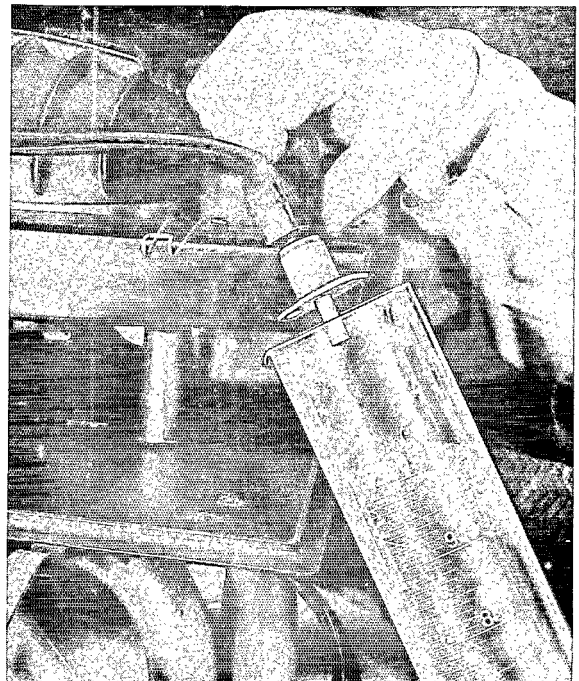

PRESSURE TESTS

TOOLS

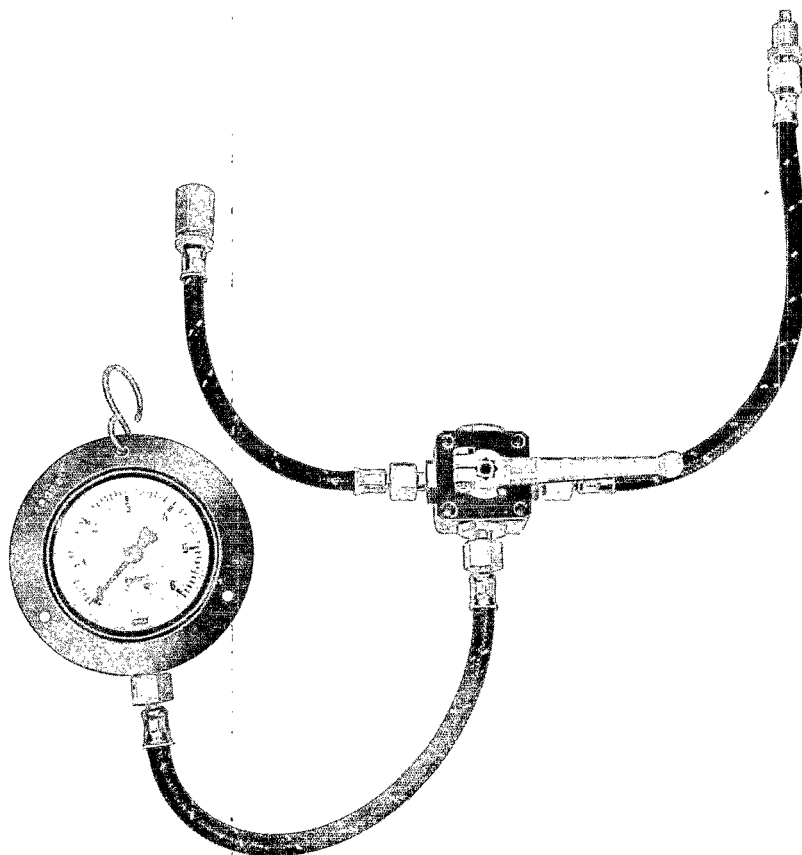

| No. | Description | Special Tool | Remarks |
|-----|-----------------|--------------|---------|
| 1 | Pressure tester | P 378 | |


General

The tester should be connected into the control pressure line at the mixture control unit.

The control pressure now is transmitted from the mixture control unit, through the three-way selector valve, to the control pressure regulators for warm running compensation or throttle valve position, respectively.


Thus, all pressure tests can be performed without reconnecting the lines.

For better clarity, connecting points and lever positions are referenced in the instructions given below according to numbers shown in the adjacent illustration.

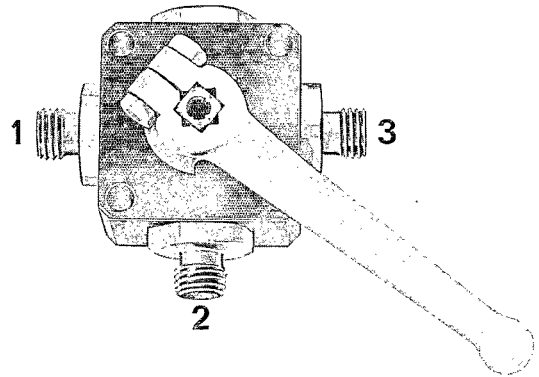



Connecting and Bleeding Pressure Tester

1. Detach pressure lines for control pressure regulators for warm running compensation and throttle valve position.

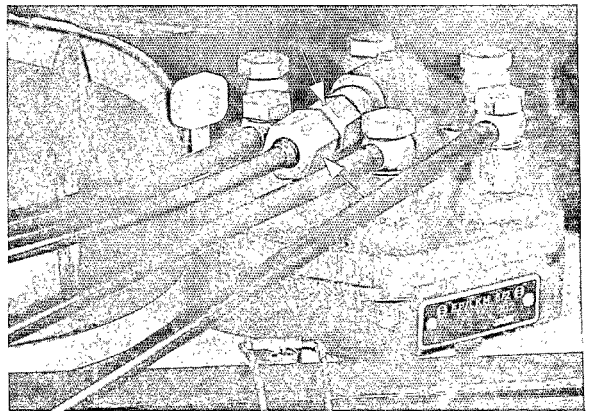


2. Insert a gasket in the special tool connector and screw into the control pressure connection of the mixture control unit in place of the banjo bolt.

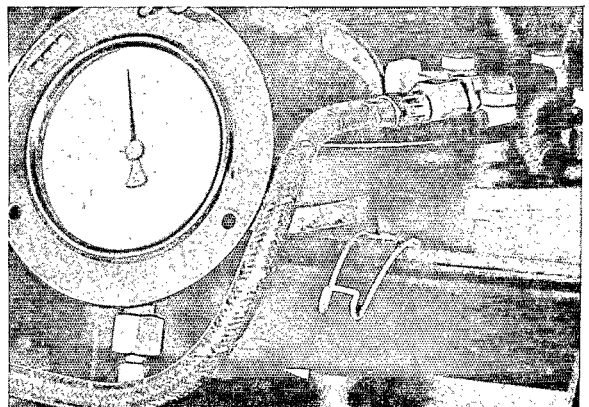

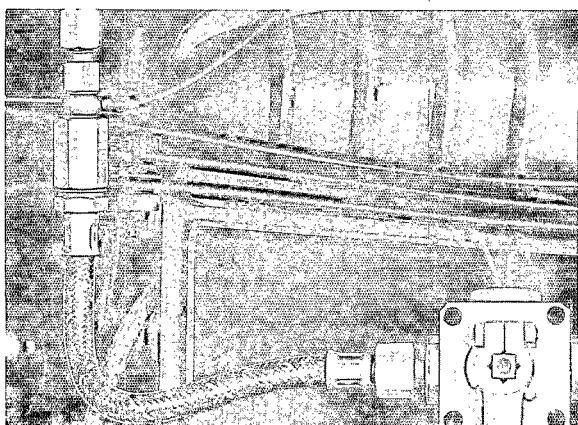


3. Connect pressure lines of control pressure regulators for warm running compensation and throttle valve position to second connector using original banjo bolt and gaskets.

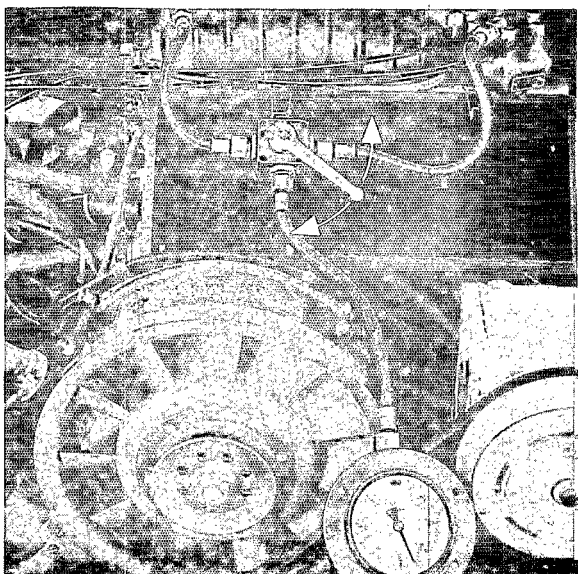

4. Turn selector valve to position \equiv 2. Allow pressure gauge to hang down (hose stretched) and switch the ignition on. Turn lever of three-way selector valve to position \equiv 3 about 5 times at 10-seconds intervals.

Checking "Cold" Control Pressure

This test can be performed on a cold engine only. It must definitely be performed when encountering starting or warm-up problems.

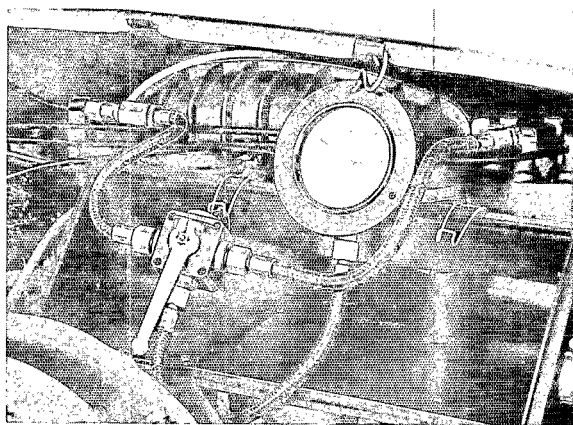


1. Turn selector valve to position \equiv 2. Switch the ignition on.
2. Pressure specifications for the given ambient air temperature are shown in the diagram on page 1.1 - 1/13, Testing and Adjustment Specifications.
3. Excessive deviations from the specified values are caused by a faulty control pressure regulator for warm running compensation which should be replaced in such cases.

Checking "Warm" Control Pressure


Refer to page 1.1 - 1/15 for engines with vacuum controlled control pressure regulator for warm running compensation.

This test can be performed on a warm or cold engine.

1. Detach connecting wire from control pressure regulator for warm running compensation. Connect the regulator to B+ by means of a jumper wire (fuse box in left side of engine compartment). Switch the ignition on. Make sure that the throttle plate is fully at the idle stop (hand throttle must be fully in).
2. The control pressure will rise slowly and must reach the idle value shown under testing and adjustment specifications, page 1.1 - 1/13.

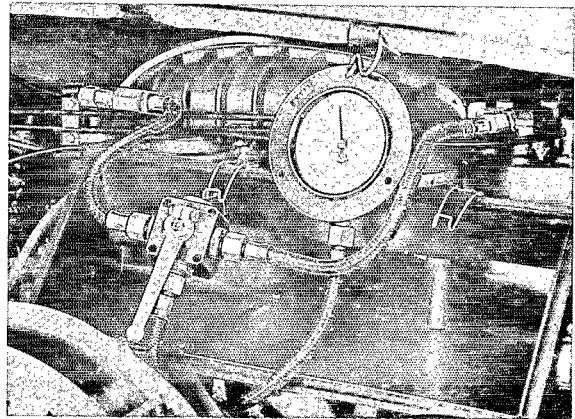


3. Open throttle about halfway by hand. The control pressure should now rise to the specified part-load value.
4. Open throttle fully (full power stop). The control pressure should now drop to the full-power value.

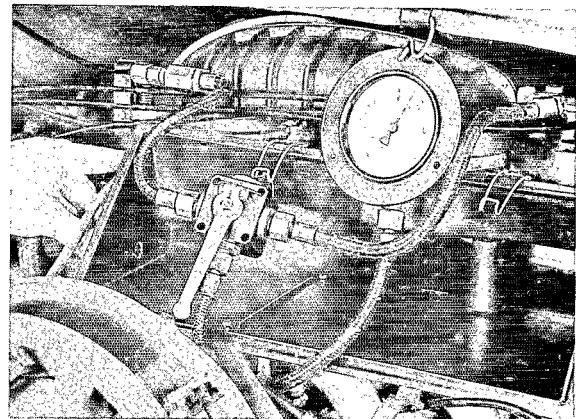


If excessive deviation is encountered, proceed as follows:

- a. Idle value: Idle value can be corrected within certain limits. Refer to instructions for checking or adjusting control pressure regulator for throttle valve position. If the required pressure cannot be obtained, replace control pressure regulator for throttle valve position.
- b. Part-load value: Replace control pressure regulator for warm running compensation.
- c. Full-power value: Replace control pressure regulator for throttle valve position.

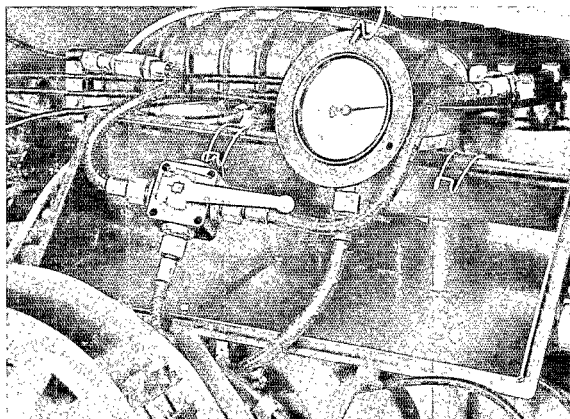

Checking System Pressure

1. Turn selector valve to position $\ddot{=}$ 3 and switch the ignition on.
2. The system's pressure must agree with specifications on page 1.1-1/13. If it deviates from specifications, correct position of pressure relief valve in fuel distributor with shims.

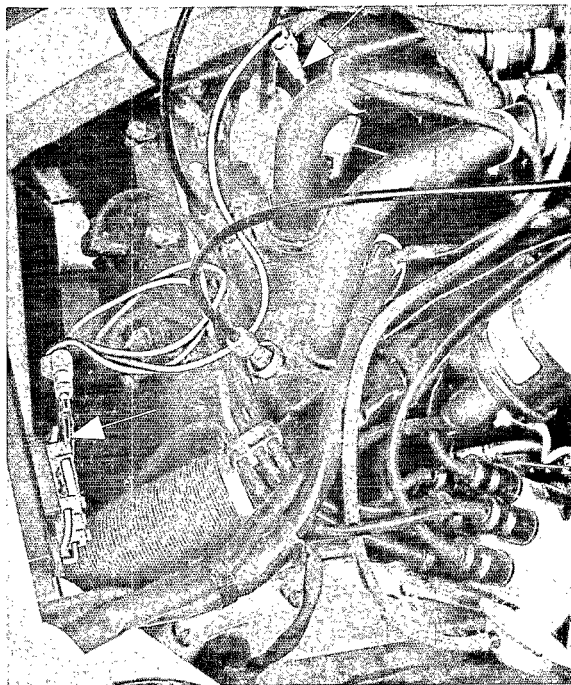

Checking for Leakage

1. Detach electrical wire from the control pressure regulator for warm running compensation. Using a jumper wire, connect the control pressure regulator for warm running compensation directly to B+ (fuse box on left side of engine compartment). Turn selector valve to position $\ddot{=}$ 2 and switch the ignition on.

Having attained the "warm" control pressure value (part-load value), switch the ignition off again and observe the pressure drop on pressure gauge (the pressure will drop considerably first). If the pressure continues to drop too rapidly (see testing and adjustment specifications), repeat check in position $\ddot{=}$ 3 of the selector valve to locate the problem. If the same results are obtained, four components can be responsible:

electric fuel pump

Fuel distributor


injection valves

start (enrichment) valve

Injection valves and start valve are judged in separate tests. Replace electric fuel pump and seal of pressure relief valve in fuel distributor one after other and repeat each test.

If leakage does not occur in $\ddot{=}$ 3 position of the selector valve, the problem can be in the control pressure regulators for warm running compensation or throttle valve position.

To locate the problem, switch the ignition on until control pressure has built up, then switch the ignition off again. Detach return hose from the control pressure regulator for warm running compensation. With the remaining pressure being 1.5 to 2.4 bar, no fuel should come out from the return connector of the control pressure regulator for warm running compensation.

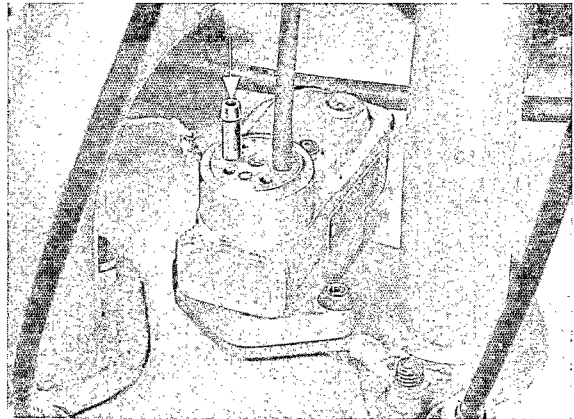

If some fuel should be coming out, it would indicate that the control pressure regulator for warm running compensation is leaking and should be replaced in such case.

If the leak is not in the control pressure regulator for warm running compensation, it will be found in the control pressure regulator for throttle valve position, in which case the control pressure regulator for throttle valve position will have to be replaced.

Checking Injection Valves

Injection valves must be removed for testing (see page 2.2 - 1/13).

Testing is accomplished with a Bosch jet tester EFEP 60 H, pressure gauge 0 to 6 bar, caliber 1.0, 100 mm dia., testing agent Ol 61 v 11.

See testing and adjustment specifications for opening pressure.

Tight: At a pressure of 0.5 bar less than opening pressure there must not be any drops falling within 15 sec..

See page 2.1 - 1/5 for testing procedure.

CHECKING AUXILIARY AIR DEVICE

1. Check idle rpm with control pressure regulator for throttle valve position connected (engine warm).

2. Stop engine.

3. Remove filter housing with filter cartridge and duct.



4. Disconnect hose leading to auxiliary air device above throttle valve at throttle valve housing and tightly seal the connector and hose.

5. Install duct.

6. Start engine and check idle rpm.

NOTE

If a change in rpm is noted, the auxiliary air device is leaking. If the valve leaks considerably, it will not be possible to adjust idle speed.

Replace auxiliary air device.

CIS TESTING AND ADJUSTING SPECIFICATIONS (1974/1975 Models)

| Test Step | Test Specification | References |
|--|--------------------------------------|-------------------------------------|
| Electric fuel pump, fuel delivery | min. 850 cm ³ /30 seconds | Page 1.1 - 1/4 |
| Control pressure "cold" (at corresponding ambient air temperature) | | Page 1.1 - 1/8 Page 1.1 - 1/16 a |

Diagram for Control Pressure
Regulator

Part No. 911. 110.927.00

(911.606.103.00)

Bosch No. 0438.140.001

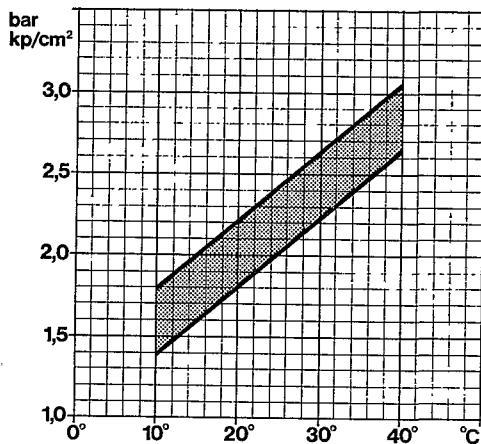


Diagram for Control Pressure
Regulator

Part No. 911.606.103.01

Bosch No. 0438.140.008

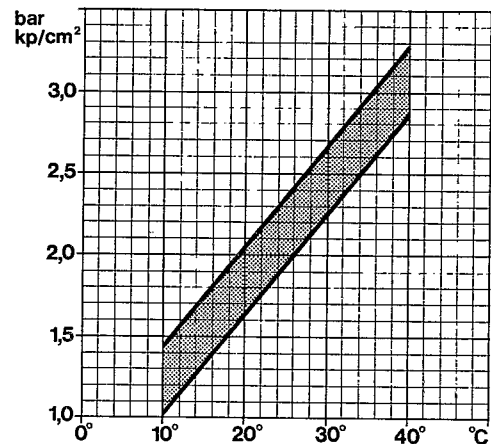



Diagram for Control Pressure Regulator *

Part No. 911.606.105.01

Bosch No. 0438.140.009

Test vacuum: 520 - 546 mbar


(390 - 410 mmHg)

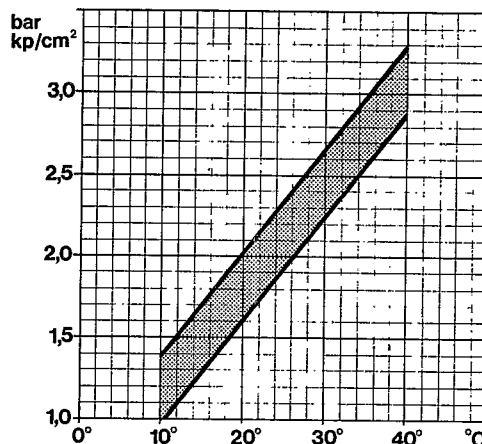

* only applicable for vacuum controlled control pressure regulator

| Test Step | Test Specification | References |
|--|--------------------|-----------------------------------|
| Control pressure "warm" | | Page 1.1 - 1/9 |
| Throttle position version | | |
| Throttle valve position: | | |
| Idle, test specification | 2.8 to 3.0 bar | |
| adjusting | | |
| specification | 2.85 to 2.95 bar | |
| Partial throttle | 3.4 to 3.8 bar | |
| Full throttle | 2.6 to 3.0 bar | |
| Vacuum controlled version | | |
| Testing at atmospheric pressure (no vacuum) | 2.7 to 3.1 bar | |
| To perform vacuum test, connect vacuum pump to control pressure regulator. Test pressure 520 - 546 mbar (390 - 410 mmHg) | 3.4 to 3.8 bar | |
| System pressure | | Page 1.1 - 1/10 |
| Test specification | 4.5 to 5.2 bar | |
| Adjusting specification | 4.7 to 4.9 bar | |
| Leak test (warm engine) | | Page 1.1 - 1/10 |
| Min. pressure after 10 minutes | 1.3 bar | |
| 20 minutes | 1.1 bar | |
| Fuel injectors opening pressure | 2.5 to 3.6 bar | Page 1.1 - 1/11 Page 2.1 - 1/5 |

CIS TESTING AND ADJUSTING SPECIFICATIONS (1976/1977 Models)
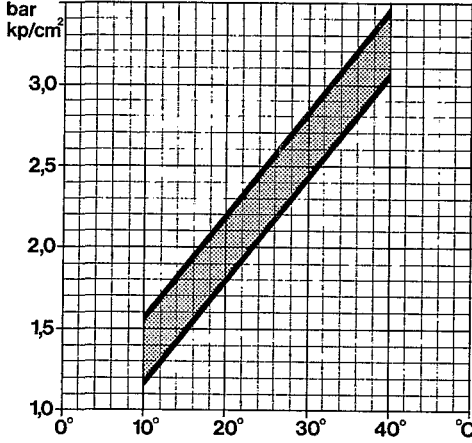
| Test Step | Test Specification | References |
|--|--|-------------------|
| Electric fuel pump, fuel delivery | min. 850 cm ³ /30 seconds | Page 1.1 - 1/4 |
| Control pressure "cold" (at corresponding ambient air temperature) | <p>Diagram for Control Pressure Regulator Part No. 911.606.105.03 and 911.606.105.04 Bosch No. 0438.140.017 and 0438.140.033 Test vacuum: 520 - 546 mbar (390 - 410 mmHg)</p>  | Page 1.1 - 1/16 a |
| Control pressure "warm" | | Page 1.1 - 1/9 |
| 1976 Model | | |
| Testing atmospheric pressure (no vacuum) | 2.7 to 3.1 bar | |
| To perform vacuum test, connect vacuum pump to control pressure regulator. Test pressure 520 - 546 mbar (390 - 410 mmHg) | 2.7 to 3.1 bar | |
| At high idle speed (approx. 1800 rpm) | 3.4 to 3.8 bar | |


| Test Step | Test Specification | References |
|--|--------------------|-----------------------------------|
| 1977 Model | | |
| Testing at atmospheric pressure (no vacuum) | 2.7 to 3.1 bar | |
| To perform vacuum test, connect vacuum pump to control pressure regulator, Test pressure 520 - 546 mbar (390 - 410 mmHg) | 3.4 to 3.8 bar | |
| System pressure | | Page 1.1 - 1/10 |
| Test specification | 4.5 to 5.2 bar | |
| Adjusting specification | 4.7 to 4.9 bar | |
| Leak test (engine warm) | | Page 1.1 - 1/10 |
| Min. pressure after 10 min | 1.3 bar | |
| 20 min | 1.1 bar | |
| Fuel injectors opening pressure | 2.5 to 3.6 bar | Page 1.1 - 1/11 Page 2.1 - 1/5 |

CIS TESTING AND ADJUSTING SPECIFICATIONS (1978/1979 Models)


| Test Step | Test Specification | References |
|---|---------------------------------------|-------------------|
| Electric fuel pump fuel delivery | min. 1000 cm ³ /30 seconds | Page 1.1 - 1/4 |
| Control pressure "cold" (at corresponding ambient air temp.) | | Page 1.1 - 1/16 a |

Diagram for Control Pressure Regulator

Part No. 911 606 105 05
 Bosch No. 0 438 140 045
 Test vacuum 460 - 600 mbar
 (350 - 450 mmHg)

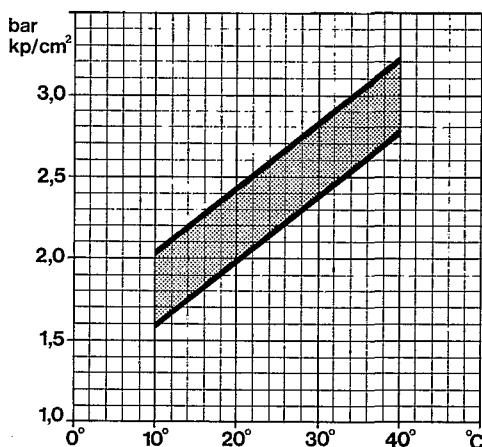
Diagram for Control Pressure Regulator
(from January 1979)

Part No. 911 606 105 06
 Bosch No. 0 438 140 069
 Test vacuum 450 - 550 mbar
 (340 - 420 mmHg)

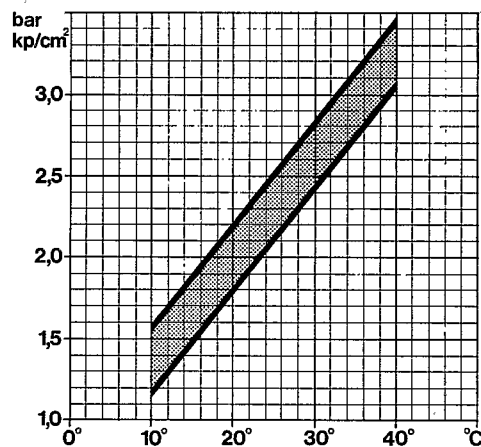


| | | |
|---|----------------|-----------------|
| Control pressure "warm" | | Page 1.1 - 1/9 |
| Testing at atmospheric pressure (no vacuum) | 2.7 to 3.1 bar | |
| To perform vacuum test, connect vacuum pump to control pressure regulator | 3.2 to 3.6 bar | |
| System pressure | | Page 1.1 - 1/10 |
| Test specification | 4.5 to 5.2 bar | |
| Adjusting specification | 4.7 to 4.9 bar | |
| Leak test (warm engine) | | Page 1.1 - 1/10 |
| Min. pressure after 10 min. | 1.3 bar | |
| 20 min. | 1.1 bar | |
| Fuel injectors | | Page 1.1 - 1/11 |
| opening pressure | 2.5 to 3.6 bar | Page 2.1 - 1/5 |

CIS TESTING AND ADJUSTING SPECIFICATIONS
(1980 Model with Oxygen Sensor)
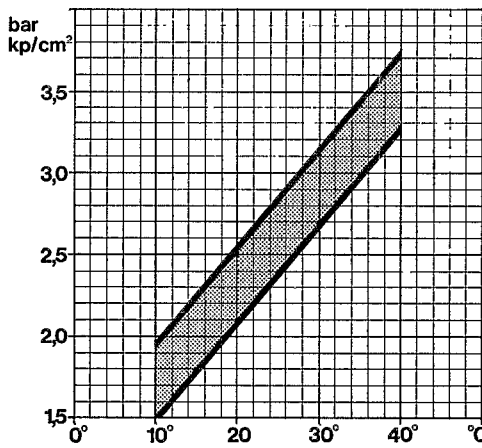
| Test Step | Test Specification | References |
|--|---|-----------------------------------|
| Electric fuel pump, fuel delivery | min. 1000 cm ³ /30 seconds | Page 1.1 - 1/4 |
| Control pressure "cold" (at corresponding ambient air temperature) | <p>Diagram for Warm-up Regulator Part No. 911.606.105.07 Bosch No. 0438 140 072</p>  | Page 1.1 - 1/8 |
| Control pressure "warm" | 3.4 to 3.8 bar | Page 1.1 - 1/9 |
| System pressure Test specification Adjusting specification | 4.5 to 5.2 bar 4.7 to 4.9 bar | Page 1.1 - 1/10 |
| Leak test (warm engine) Min. pressure after 10 min. 20 min. | 1.3 bar 1.1 bar | Page 1.1 - 1/10 |
| Fuel injectors opening pressure | 2.5 to 3.6 bar | Page 1.1 - 1/11 Page 2.1 - 1/5 |

TESTING AND ADJUSTING VALUES - 911 SC
(1981 Models with Oxygen Sensor Control)
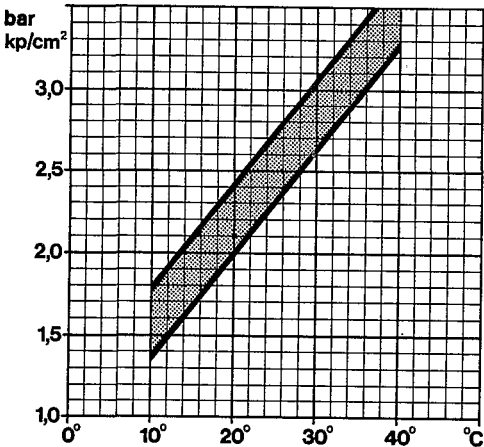
| Test Step | Testing/Adjusting Value | Special Instruction |
|--|--|---|
| Electric fuel pump Delivery rate | at least 1000 cc/30 sec. | Page 1.1 - 1/4 |
| Control pressure "cold" | <p>Diagram for warm-up control Part No. 911.606.105.08 Bosch No. 0438.140.090</p>  | Page 1.1 - 1/8 |
| Control pressure "warm" | 3.4 ... 3.8 bar | Page 1.1 - 1/9 |
| System pressure Test value Adjusting value | <p>4.5 ... 5.2 bar 4.7 ... 4.9 bar</p> | Page 1.1 - 1/10 |
| Leak test (engine warm) Min. Pressure after 10 min. after 20 min. | <p>1.3 bar 1.1 bar</p> | Page 1.1 - 1/10 |
| Fuel injectors Opening pressure | 2.5 ... 3.6 bar | <p>Page 1.1 - 1/11 Page 2.1 - 1/5</p> |

| Test Step | Testing and Adjusting Values | | |
|------------------|-------------------------------|----------------|-------------------------------------|
| Idle setting | | USA and Canada | California and High Altitude States |
| | Manual transm. to 1977 models | 900 \pm 50 | 900 \pm 50 |
| | Sportomatic to 1977 models | 950 \pm 50 | 950 \pm 50 |
| Idle speed (rpm) | 1977 models | 950 \pm 50 | 1000 \pm 50 |
| | 1978/79 models | 950 \pm 50 | 950 \pm 50 |
| | 1980 models | 900 \pm 50 | 900 \pm 50 |
| | 1981 models | 900 \pm 50 | 900 \pm 50 |
| | 1973 models (2.4 ltr.) | 1.5 to 2.0 | 1.5 to 2.0 |
| | 1974 models (2.7 ltr.) | 1.5 to 2.5 | 1.5 to 2.5 |
| | 1975 models | 1.7 to 2.0 | 1.5 to 2.0 |
| CO content (%) | 1976 models | 2.0 to 4.0 * | 2.0 to 4.0 * |
| | 1977 models | 1.5 to 3.0 * | 1.5 to 3.0 * |
| | 1978/79 models | 1.5 to 3.5 * | 1.5 to 3.5 * |
| | 1980 models | 0.4 to 0.8 * * | 0.4 to 0.8 * * |
| | 1981 models | 0.4 to 0.8 * * | 0.4 to 0.8 * * |
| | | | |

* Air pump disconnected.

* * Measured in front of catalytic converter and with oxygen sensor plug disconnected.

CHECKING CONTROL PRESSURE OF VACUUM-CONTROLLED CONTROL PRESSURE REGULATOR

Connect and bleed pressure gauge.


Refer to page 1.1 - 1/7.

Note

Connect pressure line (of control pressure regulator only) to second connector of pressure tester since the throttle valve control pressure regulator has been eliminated.

CHECKING "COLD" CONTROL PRESSURE

Refer to page 1.1 - 1/16 a.

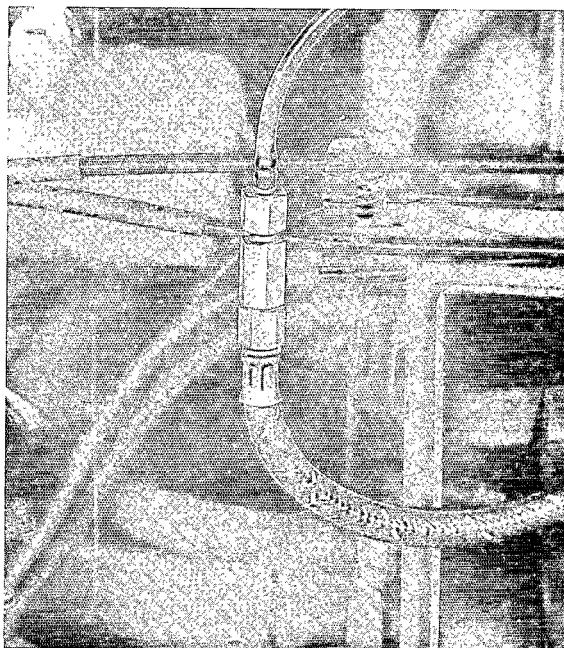

CHECKING "WARM" CONTROL PRESSURE

This test can be done on a cold or warm engine.

1. Remove mounting plate cover in engine compartment.
2. Remove standard relay at center of relay plate.



Note

The standard relay for the control pressure regulator of some vehicles is located to the rear, right side of the relay plate - and not as illustrated. Also refer to Group 9, Page 0.1 - 4/3.

CAUTION

With the 1976 Model the relay is in luggage compartment (rear relay as seen in driving direction).

3. Bridge terminals 87 a and 30 of a spare relay.
4. Place this modified relay in relay plate instead of the original relay.

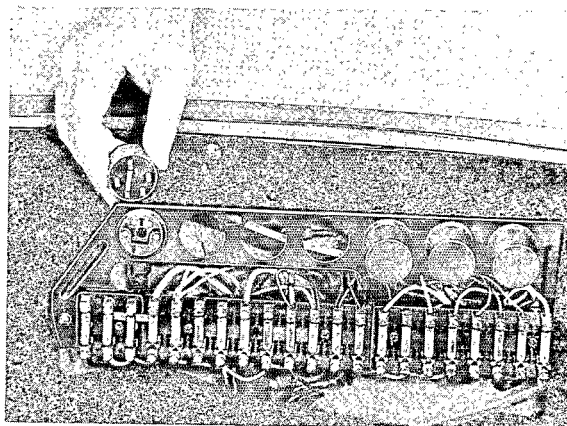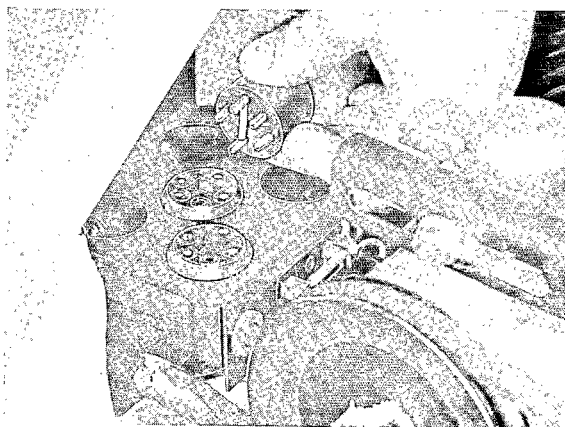

5. Turn on ignition (fuel pump runs).
6. The control pressure rises slowly and must stabilize at 2.9 ± 0.20 bar. The regulating time span varies with the ambient temperature. Replace control pressure regulator (for warm running compensation) if necessary.

CAUTION

Reinstall original relay after testing!

CHECKING "IDLE" CONTROL PRESSURE

Start engine.

Control pressure must be 3.6 ± 0.20 bar at idle speed of 900 ± 50 rpm.


1978 and later models: 3.4 ± 0.20 bar at idle speed of 900 ± 50 rpm.

CAUTION

Position selector valve at 2 for this control pressure test.

CHECKING "COLD" CONTROL PRESSURE
(vacuum controlled (warm-up) control pressure regulator)

TOOLS

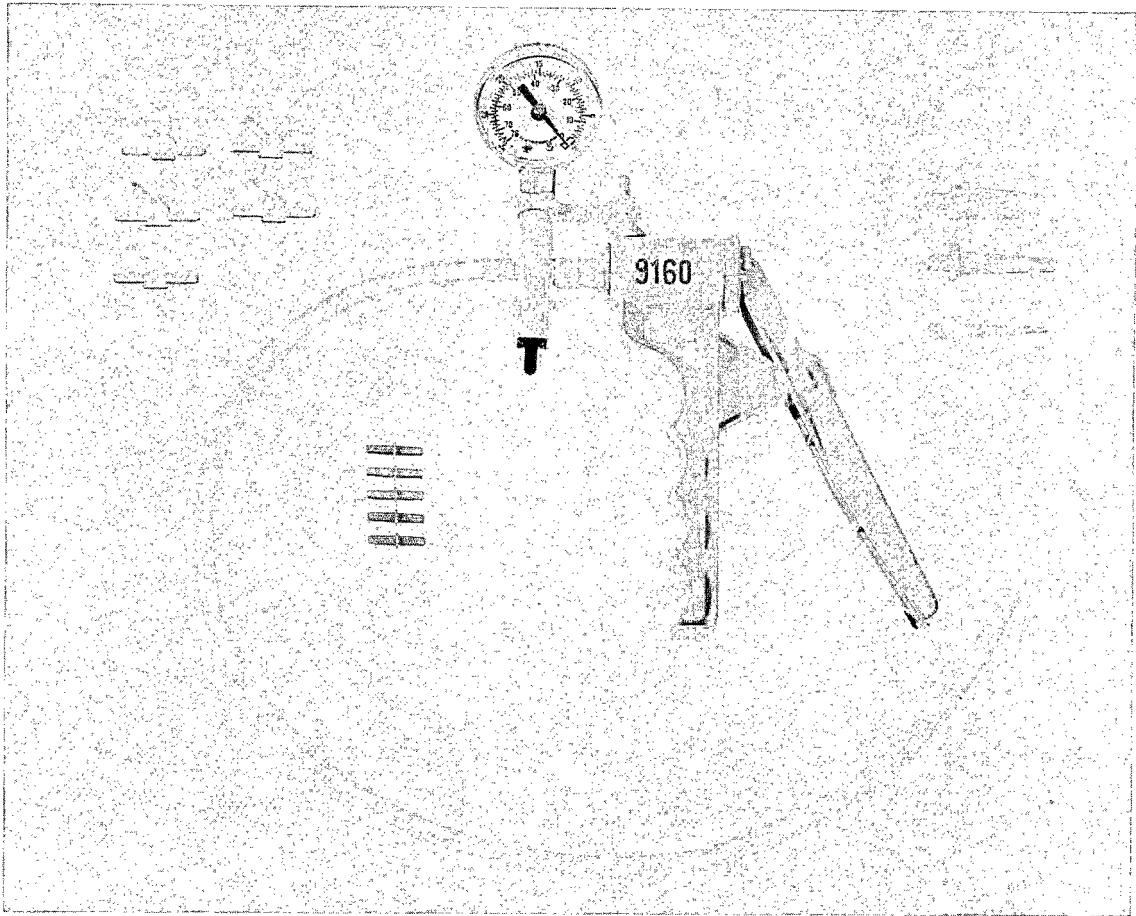

| No. | Description | Special Tool | Remarks |
|-----|------------------|--------------|---------|
| 1 | Hand vacuum pump | US 8026 | |


CHECKING "COLD" CONTROL PRESSURE (vacuum controlled (warm-up) control pressure regulator)

Note

Engine must be absolutely cold.


From 1975 models diagram values are only for the vacuum controlled testing method in the case of vacuum controlled (warm-up) control pressure regulator.

1. Connect and bleed pressure tester. Set valve to position 2.
2. Remove hose between heater blower and warm air neck.
3. Pull off vacuum hose from (warm-up) control pressure regulator and connect hose/manual vacuum pump (US 8026) to connection of (warm-up) control pressure regulator.

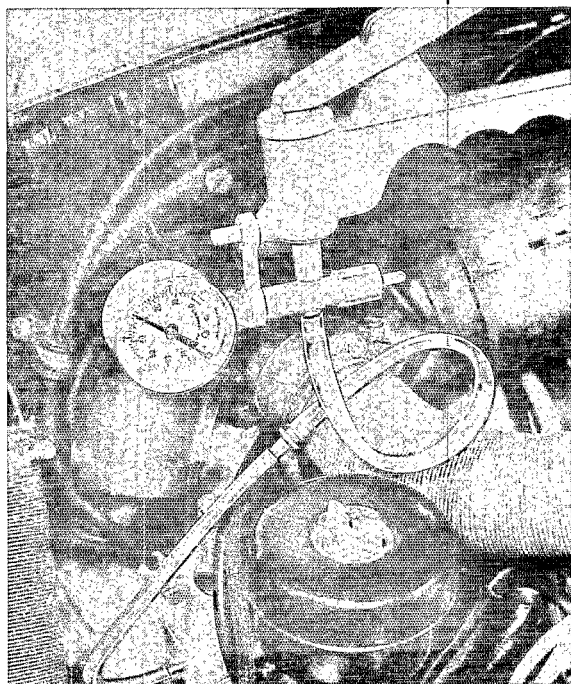

4. Pull off wire plug from (warm-up) control pressure regulator.


5. Bridge electric safety circuit, by pulling off standard relay in trunk (rear relay looking forward) and replacing with a relay of which terminals 87 a and 30 are bridged or by pulling off wire plugs on air flow sensor.

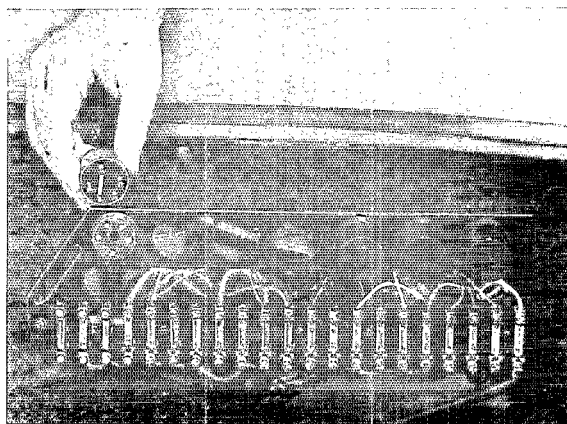


6. Turn on ignition (fuel pump should run).
7. Adjust vacuum to specified value with the manual vacuum pump (9160) - see page 1.1 - 1/13.
8. Refer to diagram below "Testing and Adjusting Specifications" on page 1.1 - 1/13 for specified pressure corresponding with actual outside temperature.

CHECKING AUXILIARY AIR REGULATOR

1. Remove auxiliary air regulator.
2. Connect ohmmeter to both terminals of auxiliary air regulator and check.
Specifications: approx 33 ohm

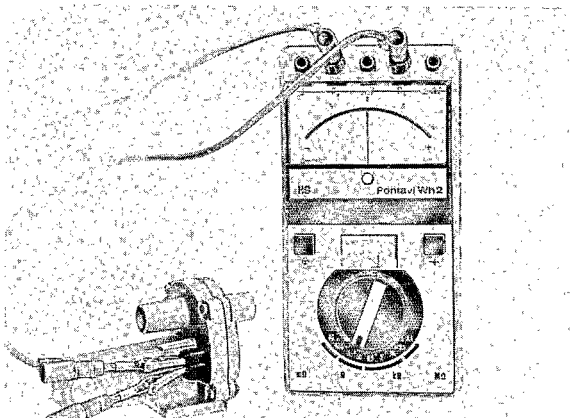

3. Check power supply of auxiliary air regulator.
 - a) Pull off standard relay in luggage compartment (rear relay as seen in driving direction).
 - b) Bridge terminals 30 and 87a, turn on ignition.
 - c) Connect test lamp to both auxiliary air regulator terminals from which the plugs have been pulled off.

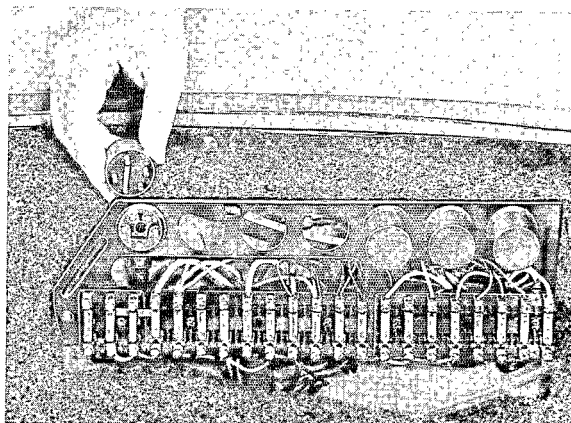


4. Refer to "Troubleshooting Automatic Choke" for other checks.

CHECKING AUXILIARY AIR VALVE

Refer to "Troubleshooting Automatic Choke".

CHECKING OPERATION OF SAFETY SWITCH


1. Disconnect rubber straps and remove air cleaner cover as well as the air cleaner cartridge.
2. Turn on ignition; fuel pump should not run.

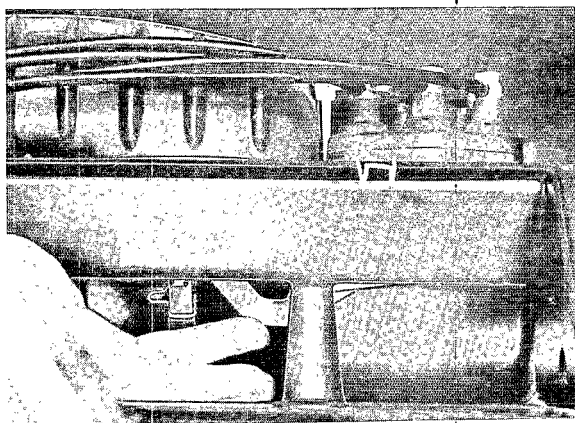

3. Lift sensor plate lever; slightest movement should start fuel pump.

CHECKING THERMOVALVE

1. Detach vacuum hose (1) at warm-up regulator.

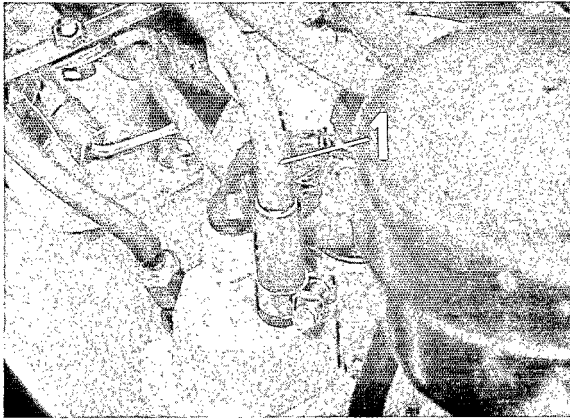


4. Blow into detached vacuum hose (from warm-up regulator) by mouth.

Valve must open after 10 to 30 seconds, if thermovalve's ambient temperature is 20 to 30 °C/68 to 86 °F.

Replace thermovalve, if necessary.

2. Bridge terminals 30 and 87a of fuel pump relay in luggage compartment (rear relay as seen in driving direction).

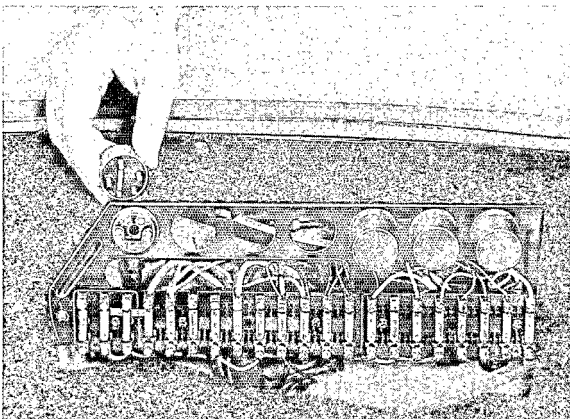

3. Turn on ignition and stop time until switched in.

| CIS PROBLEMS AND REMEDIES | | | | | | | |
|--|-------|---|---|---|--|---|-------------------|
| Problem | Cause | | | | Remedy | | |
| Engine does not start or is difficult to start when cold | • | • | | | Improper operation | Control pressure "cold" not within tolerances | Pressure test |
| Engine does not start or is difficult to start when warm | • | | | | Control pressure "warm" too high (beyond adjustment) | Control pressure "warm" too low (beyond adjustment) | Pressure test |
| Engine misses when car is driven | | | | • | System pressure not within tolerances | | Pressure test |
| Unsatisfactory engine performance | | | | | Vacuum system leaking | | Visual inspection |
| Excessive fuel consumption | | | | • | | | |
| Engine backfires into intake pipe | | | | | | | |
| Engine dieseling | | | | | | | |
| Rough idle during warmup | | • | | • | | | |
| Rough idle when warm | | | • | • | | | |
| Idle speed cannot be adjusted | | | | | | | |
| CO emissions too low at idle | | | • | | | | |
| CO emissions too high at idle | | | | • | | | |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|

TROUBLESHOOTING AUTOMATIC CHOKE - 1976 MODEL

Problem: Speed remains too high at high engine temperatures or no speed increase on cold engine.

Possible Cause: Auxiliary air regulator or auxiliary air valve defective.

Remedy: 1. Disconnect top control line at auxiliary air valve and plug.

Problem corrected: Replace auxiliary air valve.

Problem unchanged: Auxiliary air valve good.


2. Cold engine: If there is no increase in speed, auxiliary air regulator is defective.

Warm engine: Disconnect one hose at auxiliary air regulator and plug both openings.

Speed too high: auxiliary air valve defective

Speed drops: auxiliary air regulator defective

VACUUM SYSTEM LAYOUT (1978 Models)

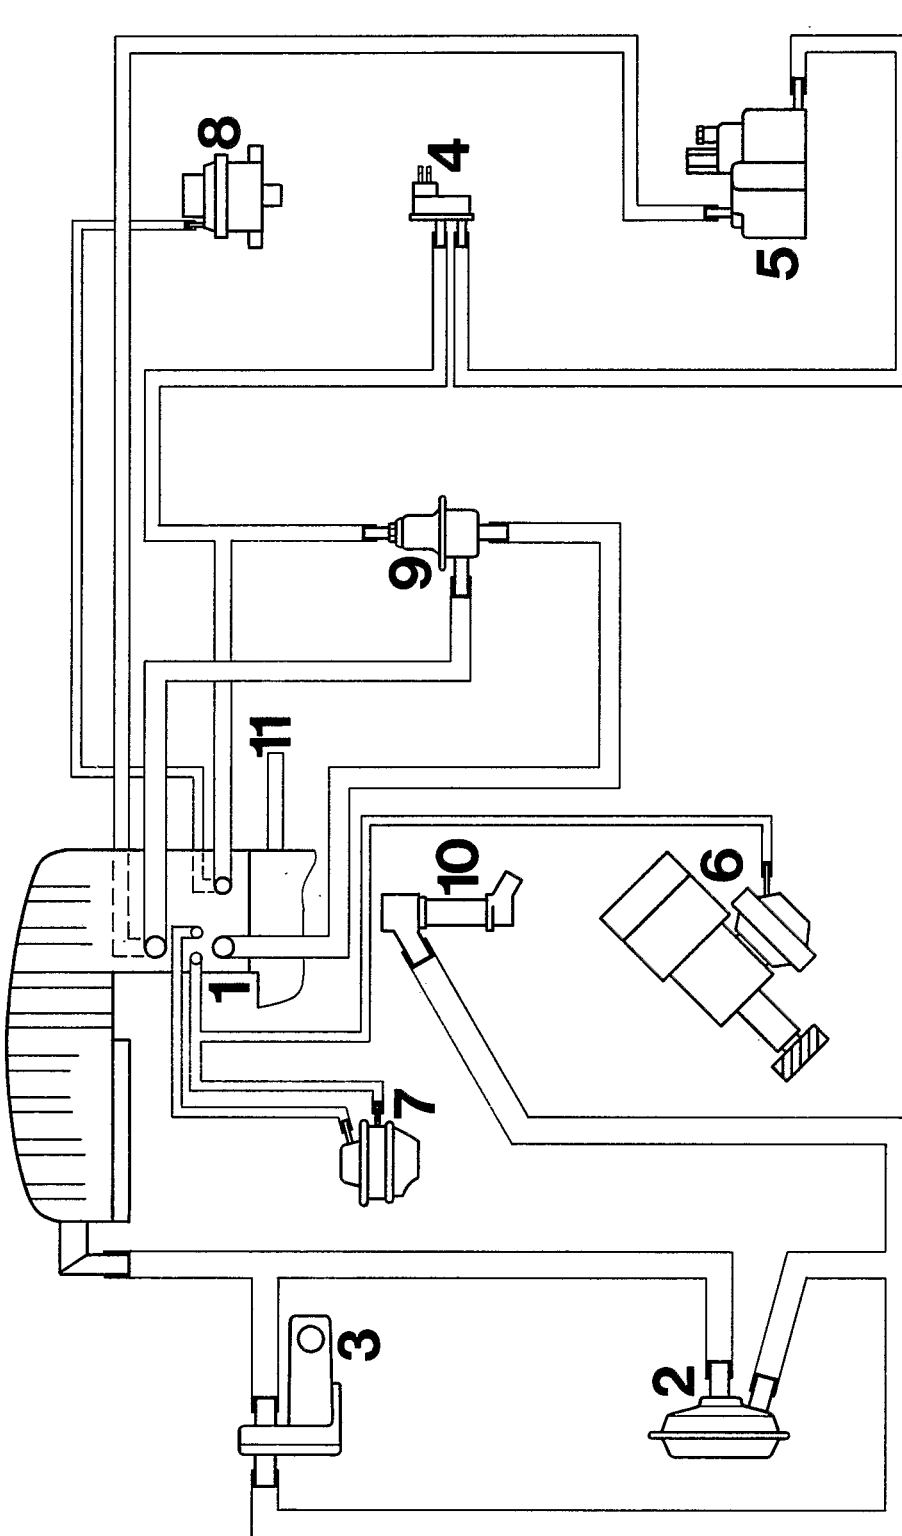


- 1 - Throttle housing
- 2 - Auxiliary air valve
- 3 - Auxiliary air regulator

- 4 - Thermo valve
- 5 - Control pressure regulator
- 6 - Distributor

- 7 - EGR valve (only California)
- 8 - Diverter valve


- 9 - Vacuum control
- 10 - Vacuum source for auxiliary air valve and auxiliary air regulator
- 11 - Vacuum source for power brakes

VACUUM SYSTEM LAYOUT (from 1979 Model)

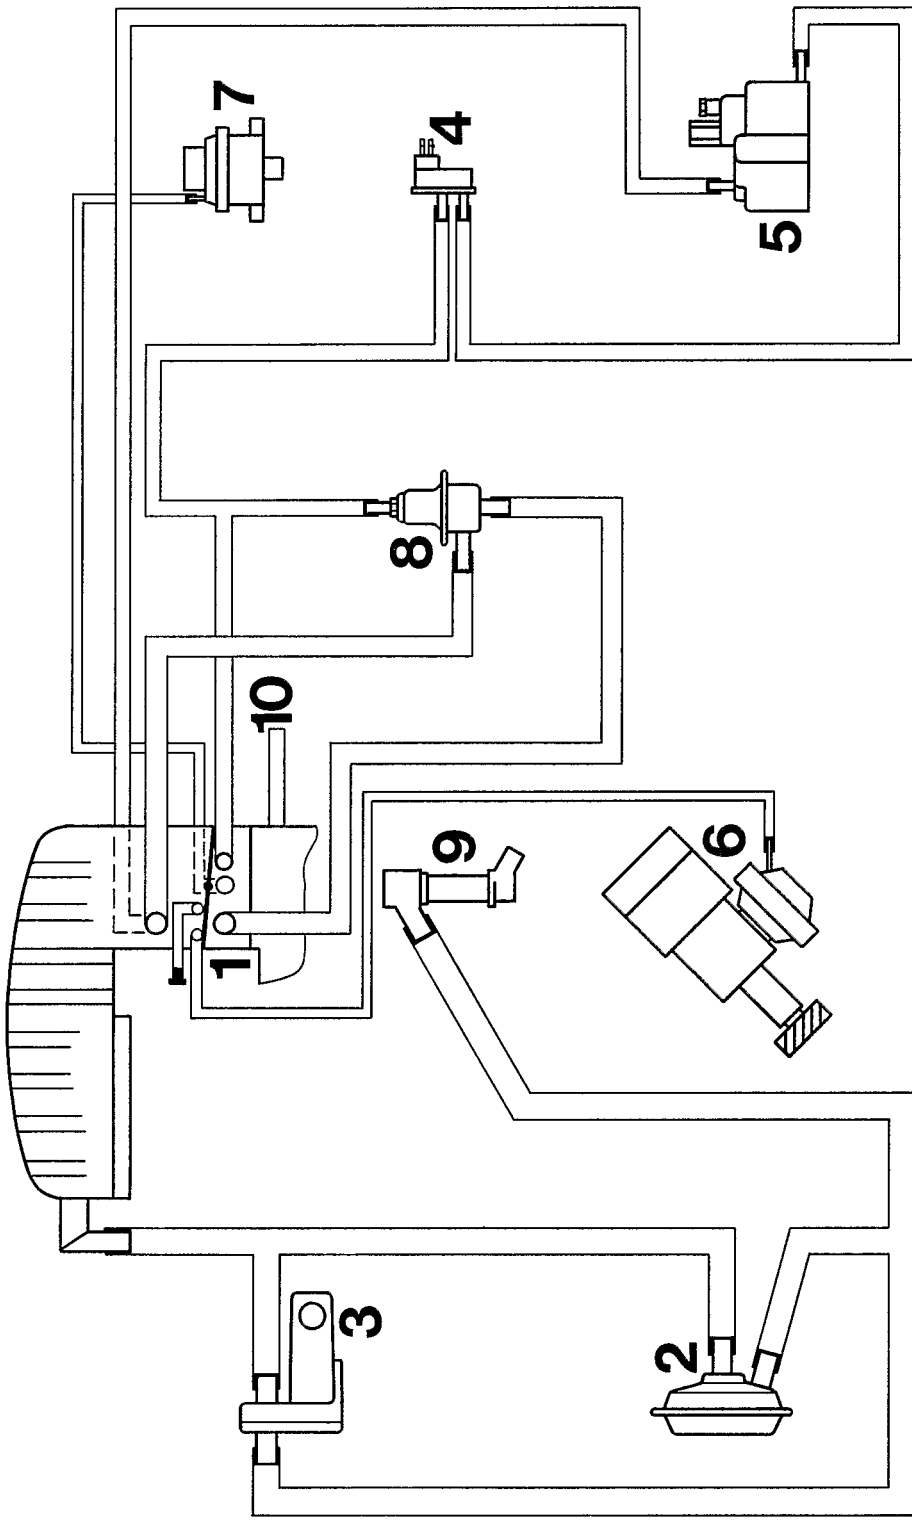

- | | |
|--|---|
| 1 - Throttle housing | 6 - Ignition distributor |
| 2 - Auxiliary air valve | 7 - Divertor valve |
| 3 - Auxiliary air regulator | 8 - Deceleration valve |
| 4 - Thermo valve | 9 - Vacuum source for auxiliary air valve and auxiliary air regulator |
| 5 - (Warm-up) control pressure regulator | 10 - Vacuum source for power brake |

LAYOUT OF FUEL AND VACUUM LINES - 911 SC (from 1980 Model)

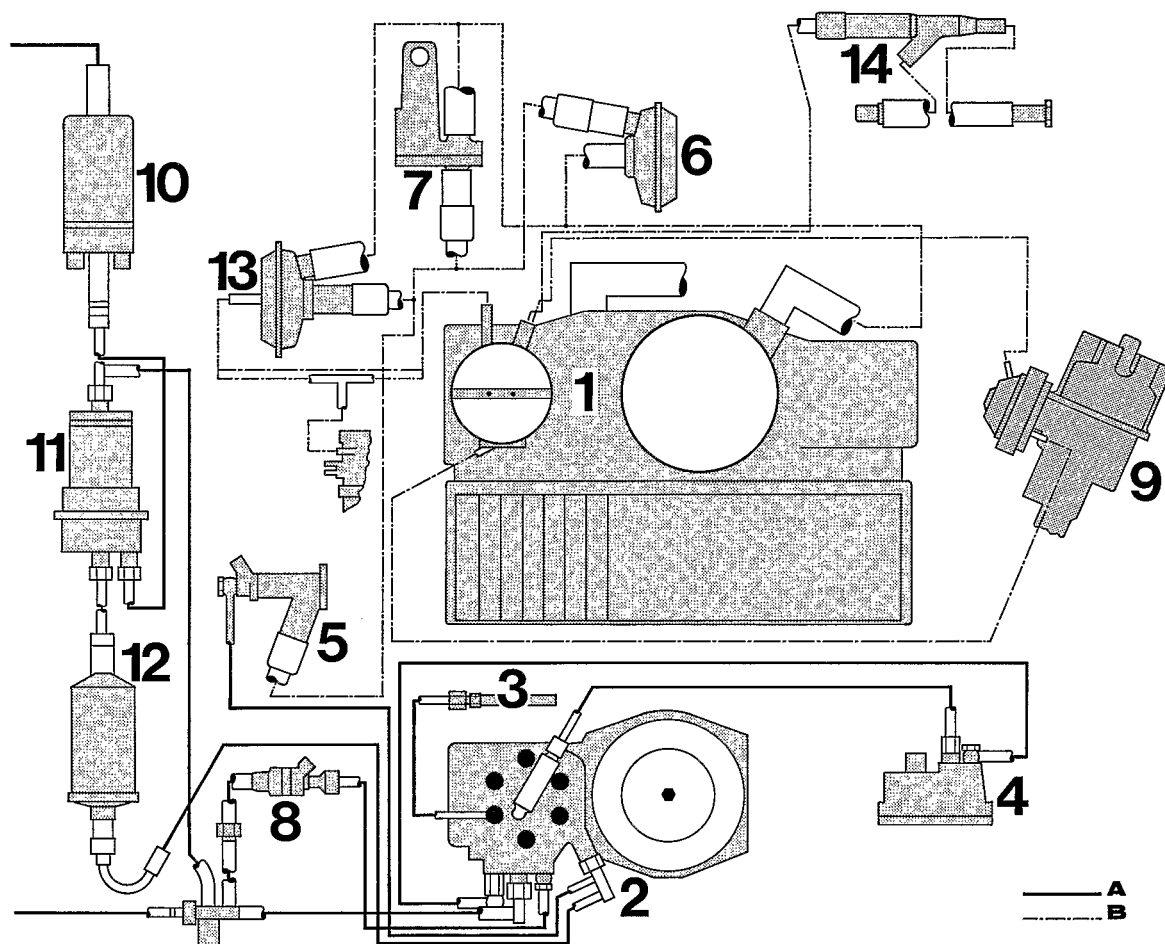

A - Fuel lines

B - Vacuum lines

1 - Throttle housing

2 - Mixture control unit

3 - Fuel injector

4 - (Warm-up) control pressure regulator

5 - Cold start valve

6 - Auxiliary air valve

7 - Auxiliary air regulator

8 - Frequency valve

9 - Ignition distributor

10 - Fuel pump

11 - Fuel reservoir

12 - Fuel filter



13 - Deceleration valve

14 - Vacuum booster

REMOVING AND INSTALLING REGULATOR HOUSING

Removing

1. Detach hot air hose between left heat exchanger and regulator housing, then remove hose between regulator housing and air cleaner intake.
2. Remove 3 retaining bolts from left velocity stack and remove regulator housing.

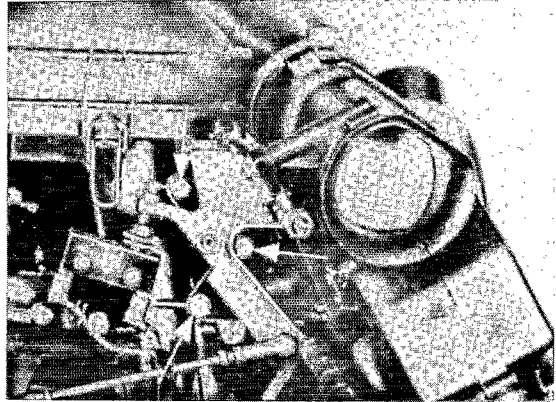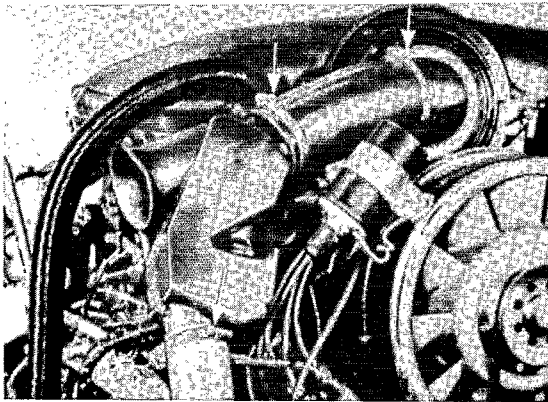


Installing

Adjust fresh air flap (see page 2.1-1/2).

CHECKING OPERATION OF INDUCTION AIR PREHEATING SYSTEM

1. Hot air flap must be open when engine is cold. This can be checked through the bypass hole in the regulator housing. The hot air flap closes the bypass duct and stays in place under spring tension.

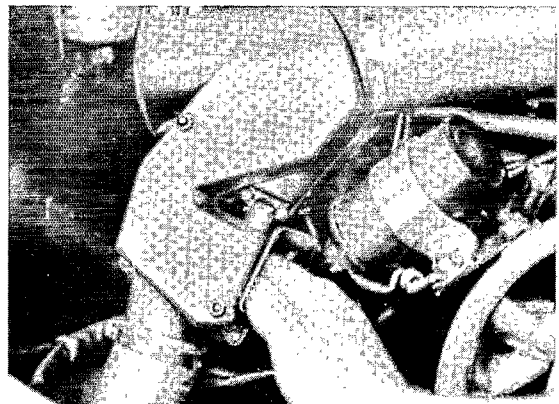

2. Warm up engine at about 2500 rpm. The hot air flap must close after about 3-4 minutes. Check flap position through bypass hole.

3. If the hot air flap, which is controlled by a thermostat, does not work, replace the regulator housing.


Note: The thermostat in the regulator housing can not be replaced. Replace the entire control box.

ADJUSTING FRESH AIR FLAP

1. Adjust fresh air flap with throttle valve linkage set in idle position.
2. Adjust roller for fresh air flap lever with both nuts so that the roller touches the control lever without play. Lock the nut.

Note:

After adjusting, check that the fresh air flap begins to open with throttle valves set at 20°.

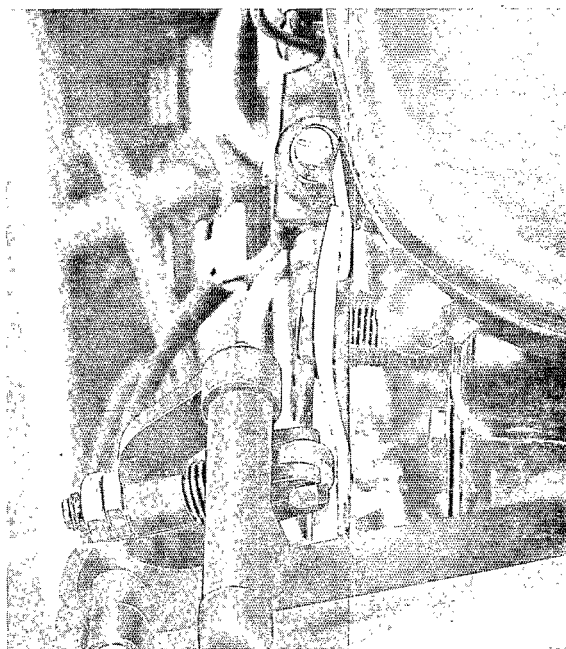

REPLACING FRESH AIR FLAP LEVER


Caution

Prevent nut from falling into regulator housing by holding nut of retaining bolt during removal.

1. Remove bolt and lever.

Note:

Hold lock nut with punch or scriber. The nut can fall into the control box.

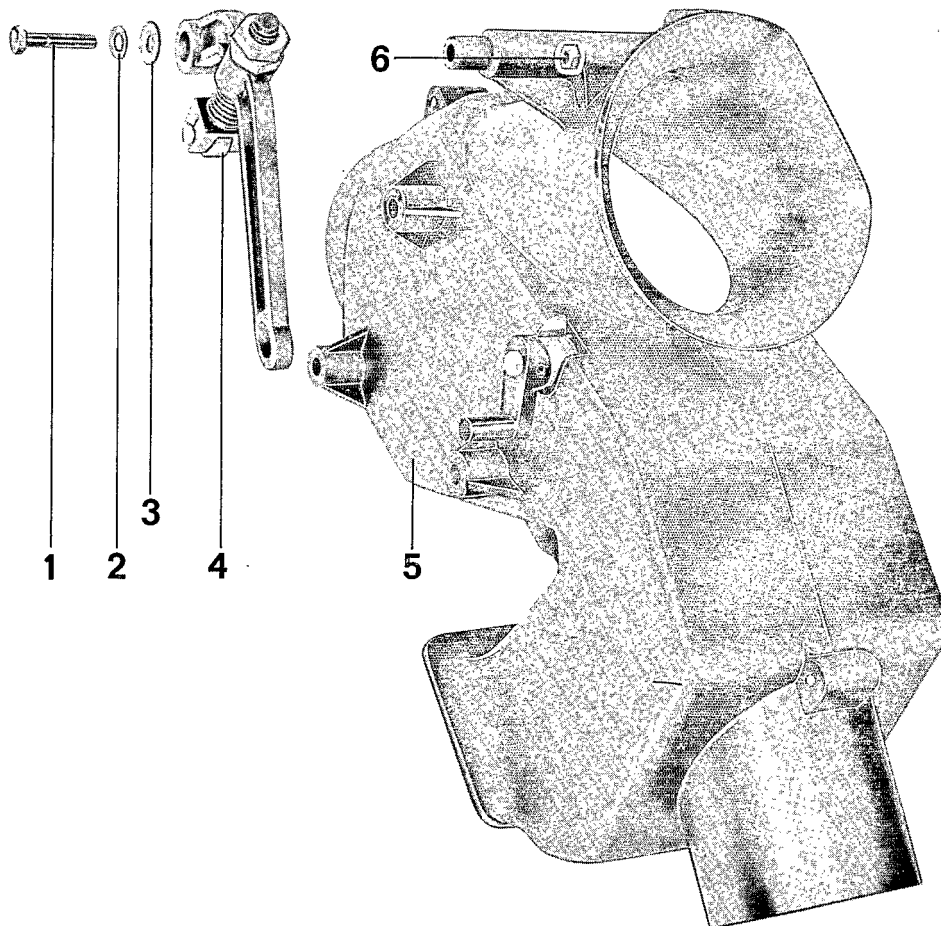


INSTALLING HOSE CLAMPS FOR COLD START ENRICHMENT

Tighten hose clamps with VW special tool
Nr. ASE 000 049.


Note:

The hose clamps can be used only once.

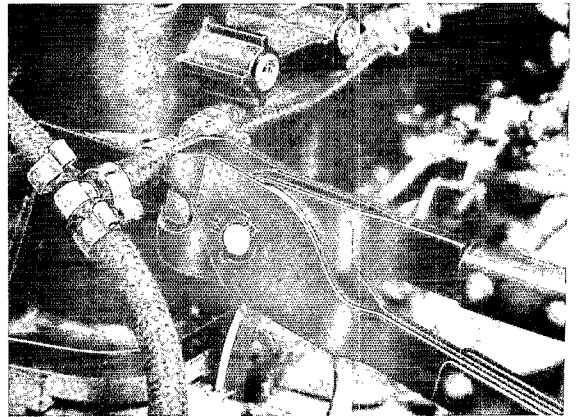

FUEL INJECTION

TOOLS

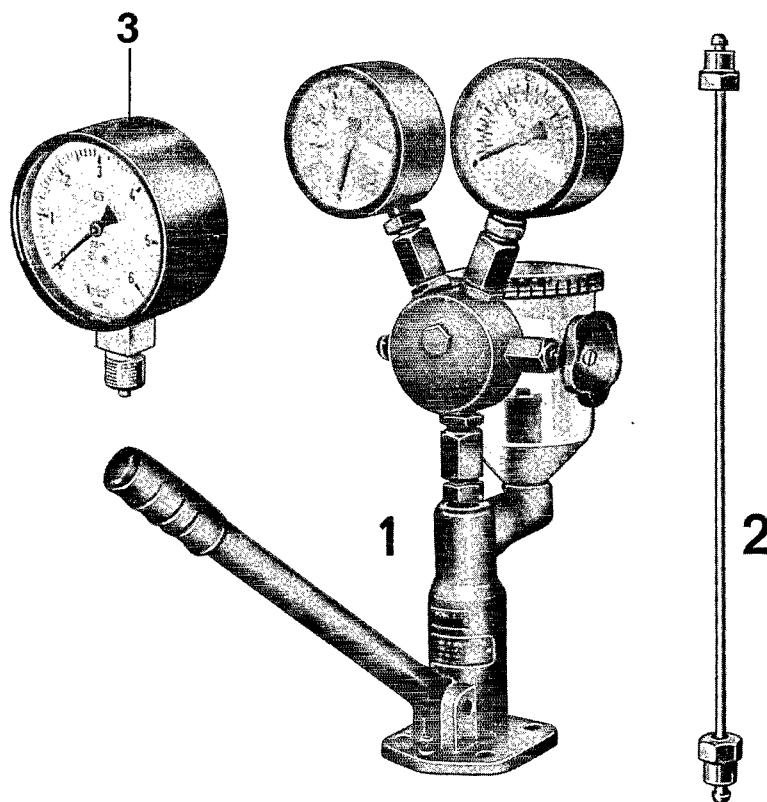

| No. | Description | Special Tool | Remarks |
|-----|---|--------------|---|
| 1 | Injection nozzle tester with two pressure gauges | | Use Bosch or similar injection nozzle tester. Pressure gauge range: 0-25 kg/cm ² (0-355 psi) |
| 2 | Line with fittings | | Use Bosch EF 8040/30 or similar |
| 3 | Pressure gauge 0-6 kp/cm ² Kl. 1.0 100 mm dia. | | For CIS |

CHECKING FUEL INJECTORS

General

Instructions for checking the injectors apply to vehicles equipped with either the mechanical or CIS fuel injection.

The injector tester is used for checking opening pressure, spray pattern, and leakage of injectors.

Fill container of the tester with testing oil and bleed tester prior to testing the injectors. Use only testing oil 01 61 v 11.


Under no circumstances should gasoline be used.

When testing injectors for the mechanical injection system, use pressure gauge EF 1687 231 000 0 - 25 bar. When testing CIS injectors use pressure gauge with calibrations 0 - 6 bar.

Bleeding the Tester

1. Open bleeder screw.

2. Open pressure gauge valve.

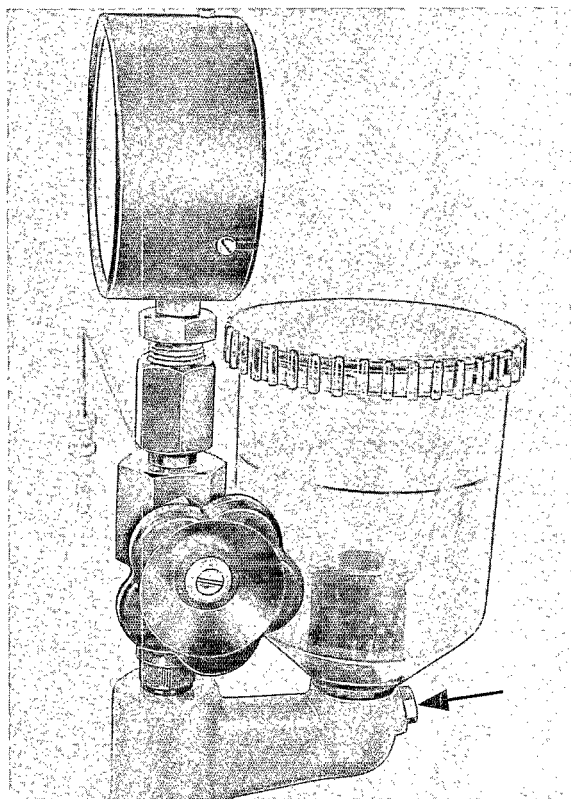


3. Actuate hand lever until testing oil comes out of the bleeder without air bubbles.

4. Tighten bleeder screw.

5. Connect injector to pressure line but do not tighten connection. Actuate hand lever until air bubbles cease to come out at the coupling nut.

6. Tighten injector to pressure line.

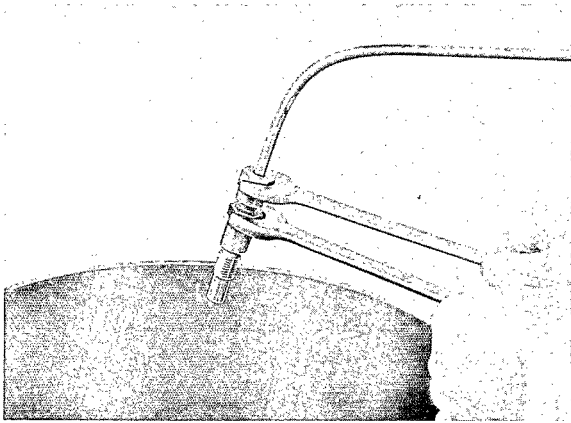

Checking Injectors

Note

The injectors of one engine can be replaced separately.

Defective injectors cannot be repaired, but must be replaced.

Checking

Operate hand lever slowly (about 2 sec./stroke) with the pressure gauge shut-off valve open. In this manner a valve leaking because of a large particle of dirt can be recognized (tight spray on valve, pressure built up to max. 1.5 bar).


Checking Opening Pressure

1. Flush injector with the pressure gauge shut-off valve closed by moving lever back and forth several times quickly.
2. Open pressure gauge shut-off valve and read opening pressure on pressure gauge while moving lever slowly (about 2 sec./stroke).

The opening pressure is:

- 15 to 18 bar (mechanical injection system)
- 2, 5 to 3, 6 bar (continuous fuel injection)

Replace injector, if opening pressure is outside of these tolerances.

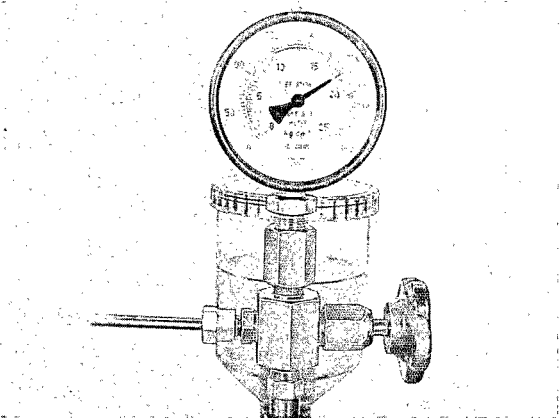

Caution

When pressure gauge shut-off valve is open increase pressure slowly to avoid damaging the pressure gauge.

Checking for Leaks

Mechanical Fuel Injection

1. Open shut-off valve on pressure gauge until the pressure on the pressure gauge has dropped below 15 bar.
2. Operate hand lever slowly until a pressure of 2.0 bar less than the measured opening pressure is reached.


No drops should form on the valve within 15 seconds when the pressure is 2 bar less than the opening pressure.

Continuous Fuel Injection

1. Close pressure gauge shut-off valve and flush injector by operating lever many times.
2. Open shut-off valve and increase pressure slowly to 0.5 bar less than the previously measured opening pressure (but not below 2, 3 bar), and hold.
No drops should form on injector within 15 seconds.


Humming Test/Checking Spray Pattern

1. Close pressure gauge shut-off valve and flush injector by operating lever many times (0.5 sec./stroke).

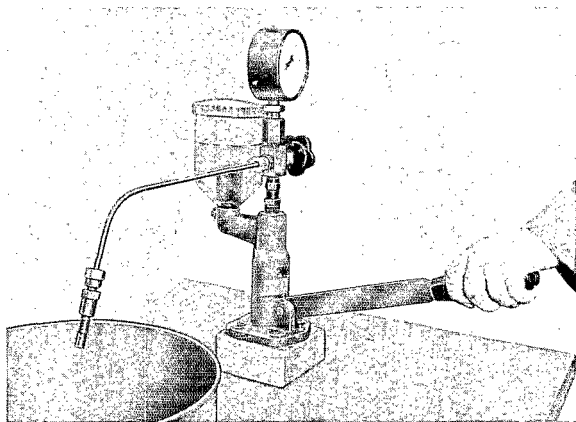

2. Then reduce lever movement to about 1 sec./stroke. This must cause injector to hum. No drops should form on injector. A tight spray pattern is not allowable. An atomized, one-sided spray pattern of about 35° is permissible.


DISASSEMBLING AND REASSEMBLING

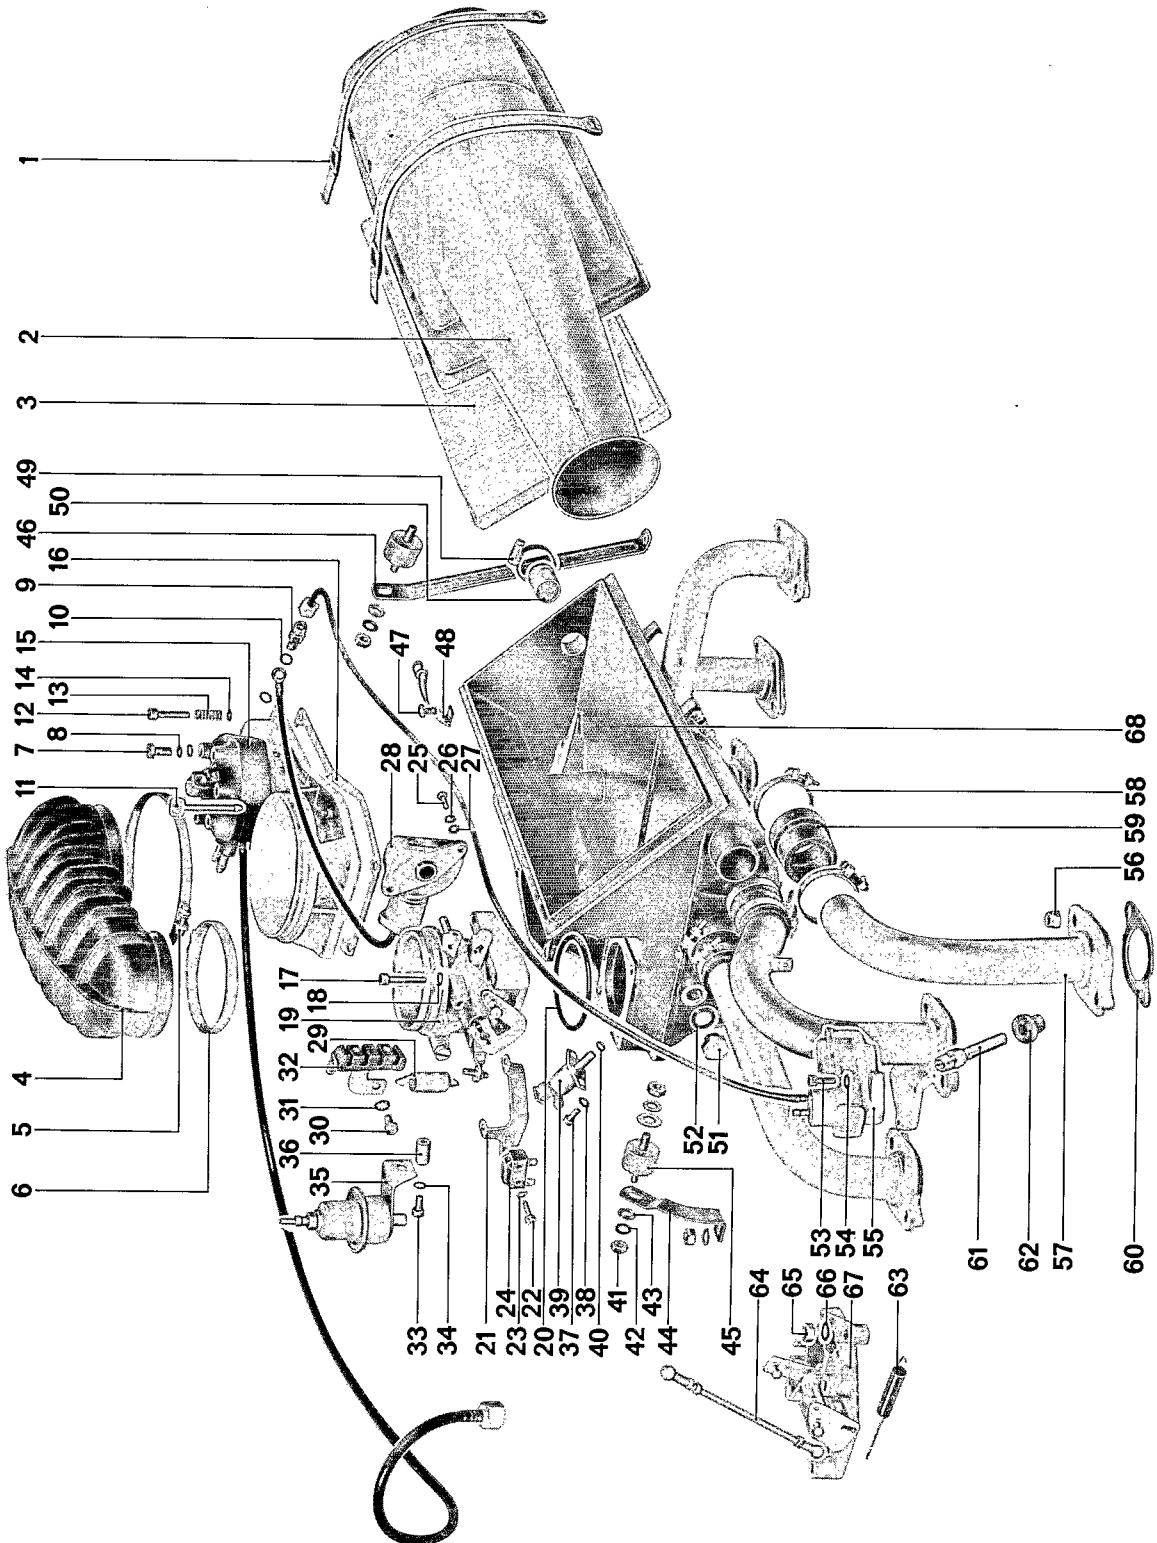

| No. | Description | Qty | removing | Note when installing | References |
|-----|------------------------|-----|----------|--|----------------|
| 1 | Rubber strap | 2 | | | |
| 2 | Intake horn | 1 | | | |
| 3 | Filter cartridge | 1 | | Replace if necessary | |
| 4 | Duct | 1 | | | |
| 5 | Hose clamp | 1 | | | |
| 6 | Hose clamp | 1 | | | |
| 7 | Banjo bolt | 6 | | | |
| 8 | Gasket | 12 | | Replace | |
| 9 | Stud | 1 | | | |
| 10 | Gasket | 2 | | Replace | |
| 11 | Plug | 1 | | | |
| 12 | Allen bolt | 6 | | Tighten lightly, then loosen by 1 turn | Page 2.2 - 1/7 |
| 13 | Spring | 6 | | | |
| 14 | Washer | 6 | | | |
| 15 | Mixture control unit | 1 | | | Page 2.2 - 1/7 |
| 16 | Gasket | 1 | | Replace | |
| 17 | Allen bolt | 4 | | | |
| 18 | Spring washer | 4 | | | |
| 19 | Throttle valve housing | 1 | | | Page 2.2 - 1/8 |
| 20 | O-ring | 1 | | Replace | |
| 21 | Holder | 1 | | | |
| 22 | Allen bolt | 2 | | | |
| 23 | Spring washer | 2 | | | |
| 24 | Microswitch | 1 | | | Page 3.2 - 1/4 |

| No | Description | Qty | Note when | | Reference |
|----|--|-----|-----------|------------|-----------------|
| | | | removing | installing | |
| 25 | Allen bolt | 2 | | | Page 2.2 - 1/8 |
| 26 | Lock washer | 2 | | Replace | |
| 27 | Washer | 2 | | | |
| 28 | Control pressure regula- tor for throttle valve position | 1 | | | |
| 29 | Spring | 1 | | | |
| 30 | Bolt | 1 | | | |
| 31 | Lock washer | 1 | | | |
| 32 | Terminal block | 1 | | | |
| 33 | Allen bolt | 1 | | | |
| 34 | Washer | 1 | | | |
| 35 | Auxiliary air device | 1 | | | Page 2.2 - 1/10 |
| 36 | Spacer sleeve | 1 | | | |
| 37 | Allen bolt | 2 | | | |
| 38 | Spring washer | 2 | | | |
| 39 | Start (enrichment) valve | 1 | | | |
| 40 | O-ring | 1 | | Replace | |
| 41 | Bolt | 4 | | | |
| 42 | Spring washer | 4 | | | |
| 43 | Washer | 3 | | | |
| 44 | Support | 1 | | | |
| 45 | Rubber/metal cushion | 2 | | | |

| No | Description | Qty | Note when removing installing | Reference |
|----|--|-----|----------------------------------|-----------------|
| 46 | Support | 1 | Replace | Page 2.2 - 1/9 |
| 47 | Sheet metal screw | 2 | | |
| 48 | Holder | 2 | | |
| 49 | Hose clamp | 1 | | |
| 50 | Flame trap cartridge | 1 | | |
| 51 | Plug | 1 | | |
| 52 | Gasket | 1 | | |
| 53 | Allen bolt | 2 | | |
| 54 | Spring washer | 2 | | |
| 55 | Control pressure regulator for warm running compensation | 1 | | |
| 56 | Nut | 12 | | |
| 57 | Intake pipe | 6 | | |
| 58 | Hose clamp | 12 | | |
| 59 | Rubber muff | 6 | | |
| 60 | Gasket | 6 | | |
| 61 | Injection valve | 6 | | Page 2.2 - 1/13 |
| 62 | Rubber bushing | 6 | | |
| 63 | Spring | 1 | | |
| 64 | Pull rod | 1 | | |
| 65 | Nut | 3 | | |
| 66 | Spring washer | 3 | | |
| 67 | Bracket | 1 | | |
| 68 | Intake manifold | 1 | | |

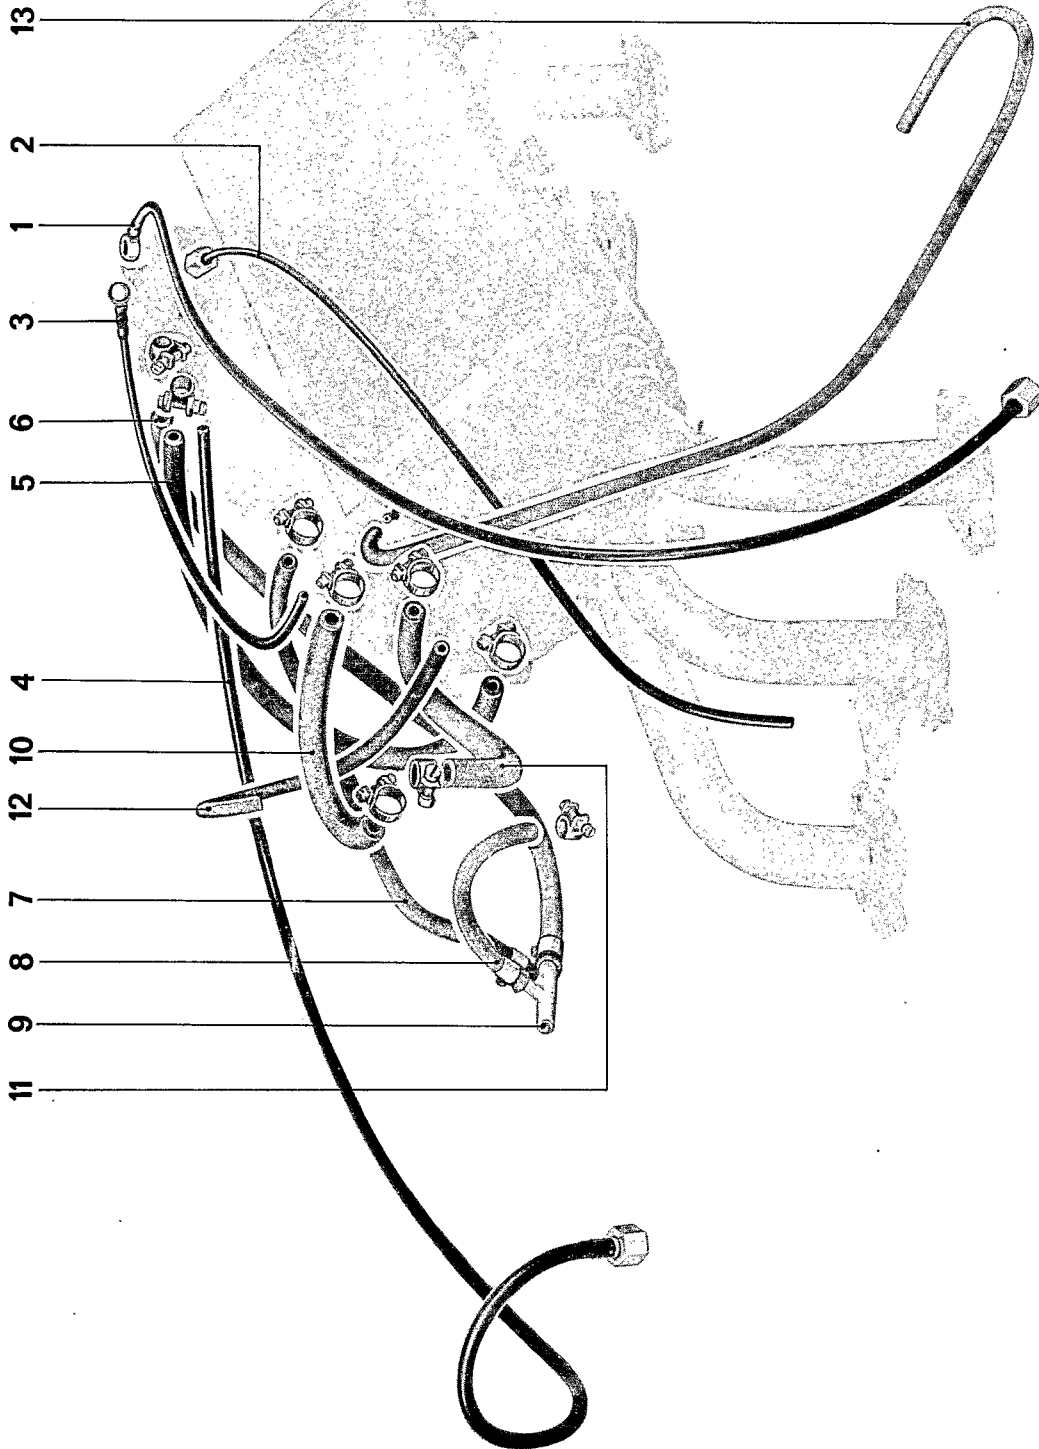

| No | Designation | Qty | Note when removing installing | References |
|----|--|-----|----------------------------------|-----------------|
| 1 | Injection line | 6 | | |
| 2 | Supply line to control pressure regulator for warm running compensation | 1 | | Page 2.2 - 1/15 |
| 3 | Supply line to control pressure regulator for throttle valve position | 1 | | Page 2.2 - 1/15 |
| 4 | Supply line from fuel filter to mixture control unit | 1 | Install in proper position | Page 2.2 - 1/15 |
| 5 | Supply line to start (enrichment) valve | 1 | | |
| 6 | Return line from mixture control unit to fuel tank | 1 | | |
| 7 | Return line from control pressure regulator for throttle valve position to fuel tank | 1 | | |
| 8 | Return line from control pressure regulator for warm running compensation to fuel tank | 1 | | |
| 9 | Connector for return flow hoses | 1 | | |
| 10 | Vacuum hose | 1 | | |
| 11 | Vacuum hose | 1 | | |
| 12 | Vacuum hose | 1 | | |
| 13 | Vacuum hose | 1 | | |


REMOVING AND INSTALLING MIXTURE CONTROL UNIT

Removal


1. Disconnect all fuel lines and hoses from the mixture control unit. Detach fuel supply line from fuel filter.

NOTE

Use rag to prevent fuel spillage.

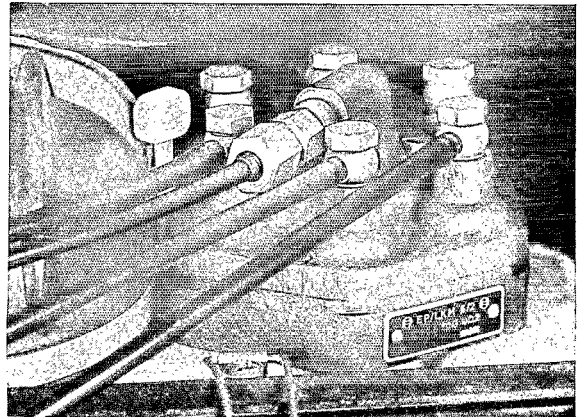


2. Unscrew 6 Allen bolts and remove with spring and plate.
3. Remove mixture control unit together with gasket.

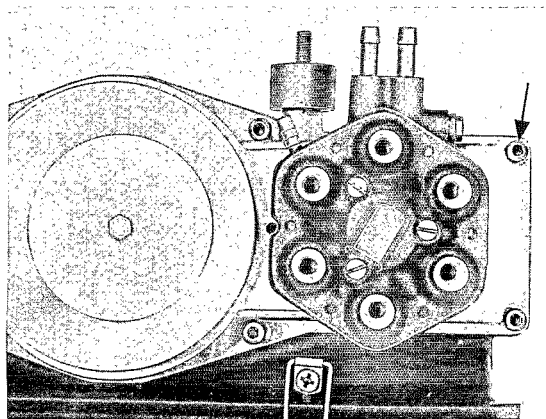

Installation


1. Watch proper location of gasket.
2. Tighten Allen bolts to bottom, then back off 1 complete turn.
3. Use new gaskets in fuel line connections.
4. Bleed fuel line system (see page 2.2 - 1/17).

REMOVING AND INSTALLING THROTTLE VALVE HOUSING AND CONTROL PRESSURE REGULATOR (THROTTLE VALVE POSITION)

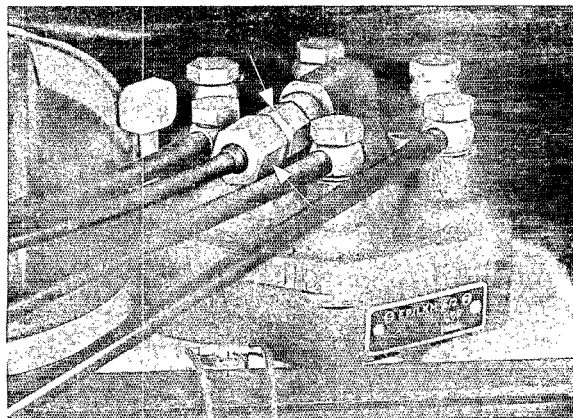

Removal

1. Disconnect fuel line, which connects mixture control unit with the control pressure regulator for throttle valve position, from the mixture control unit.
2. Disconnect fuel hose from regulator.

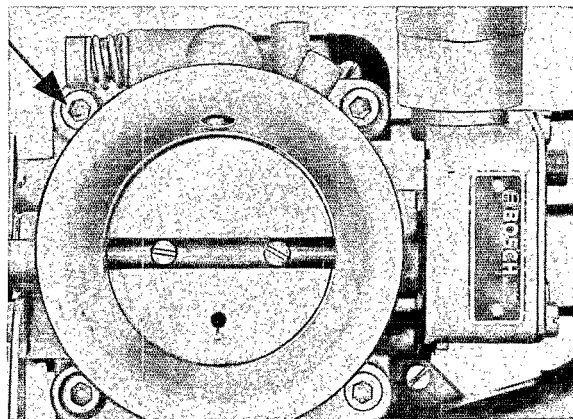

3. Remove 4 Allen bolts and withdraw throttle valve housing with control pressure regulator for throttle valve position.
4. Remove 2 Allen bolts and remove regulator from throttle valve housing.

Installation

1. Check proper positioning of the O-ring for the throttle valve housing.
2. Adjust control pressure regulator for throttle valve position (see page 3.2 - 1/5).
3. Bleed fuel line system (see page 2.2 - 1/17).


REMOVING AND INSTALLING CONTROL PRESSURE REGULATOR (WARM RUNNING COMPENSATION)

1. Disconnect ground strap from both batteries.

2. Detach electrical connections.

3. Disconnect fuel hose.

4. Remove Allen bolts.

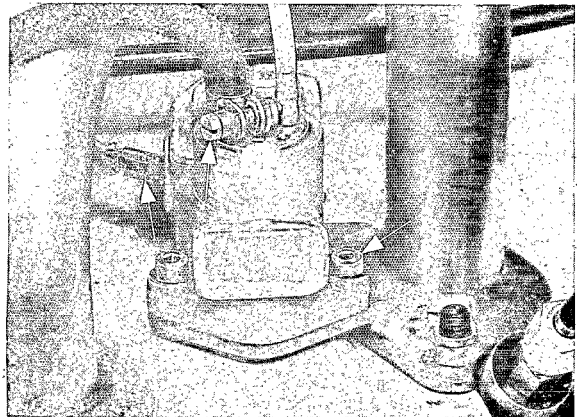


5. Remove fuel line which connects mixture control unit with the control pressure regulator for warm running compensation from the mixture control unit.

NOTE

Use rag to prevent fuel spillage.

6. Bleed fuel line system (see page 2.2 - 1/17).

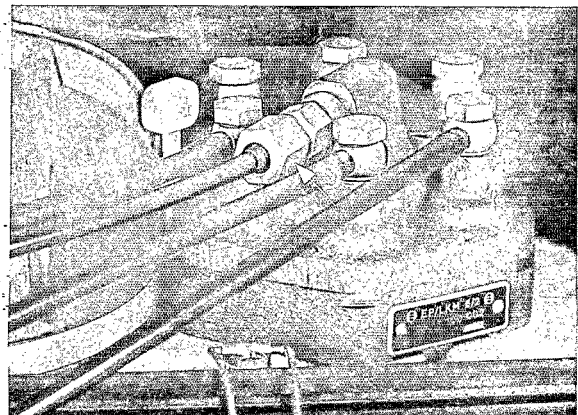


REMOVING AND INSTALLING START (ENRICHMENT) VALVE

Removal


1. Disconnect ground strap from both batteries.

2. Remove auxiliary air device from throttle valve housing.

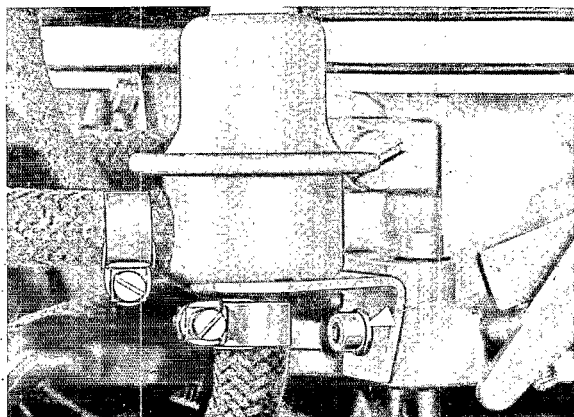


3. Detach twin electrical connector from the start (enrichment) valve.

4. Remove Allen bolts.

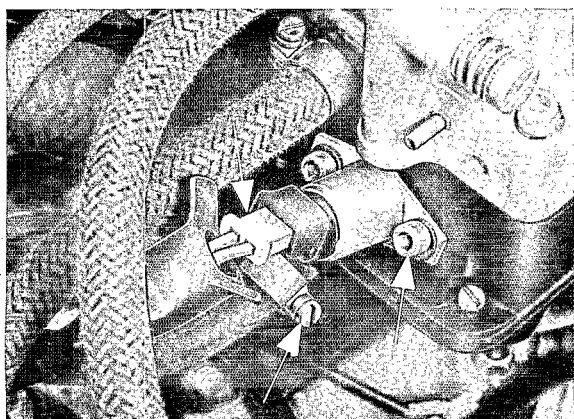

5. Loosen hose clamp and detach fuel line.

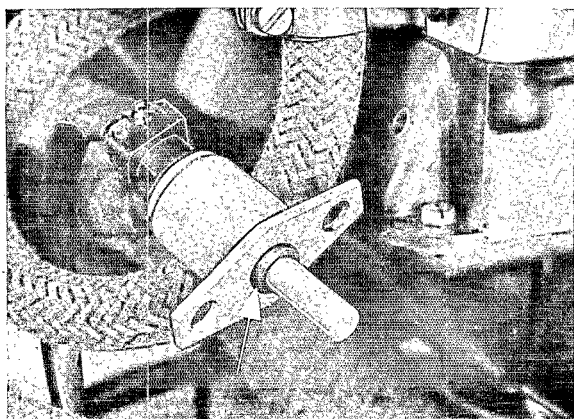

Installation

Be sure O-ring is positioned properly.

NOTE

Electrical connector must point upward.

Bleed fuel line system (see page 2.2 - 1/17).

REMOVING AND INSTALLING FUEL FILTER

1. Disconnect ground strap from both batteries.

2. Remove fuel line coupling nut.

NOTE


Use rag to prevent fuel spillage.

3. Remove retaining clamp and hose clamp and remove filter.

NOTE

Use an appropriate vessel to collect fuel which may be running out.


4. Do not overtighten the retaining strap since this could deform the filter assembly.

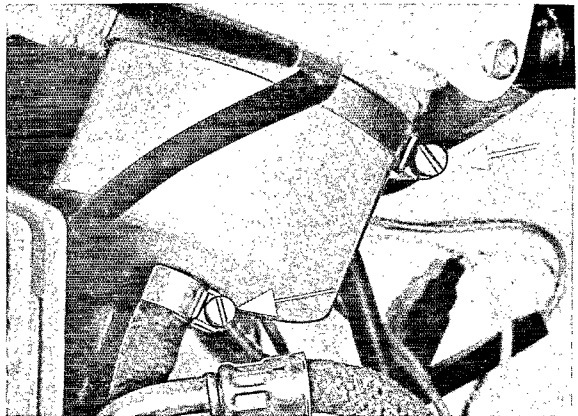

5. Check all connections for leaks.

6. Bleed fuel line system (see page 2.2 - 1/17).

REMOVING AND INSTALLING FUEL PRESSURE ACCUMULATOR

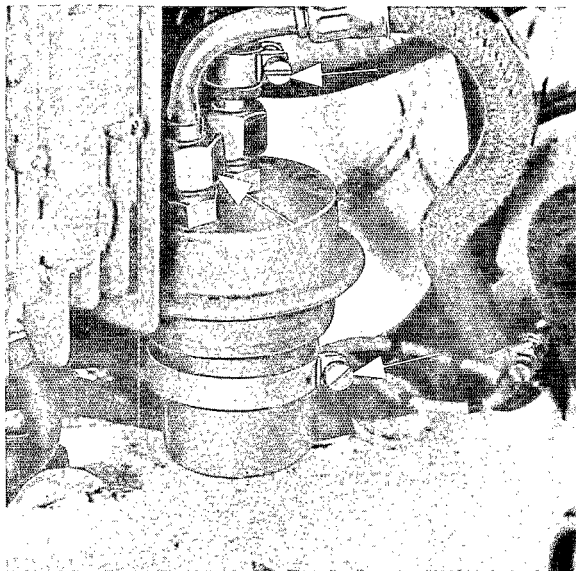


1. Unscrew coupling nut from fuel supply line at the fuel pressure accumulator.

NOTE

Use rags to prevent fuel spillage.

2. Remove attaching clamp.
3. Loosen hose clamp, withdraw fuel pressure accumulator and plug fuel hose with an appropriate plug.
4. Check all connections for leaks.


Arrangement from 1977 Models

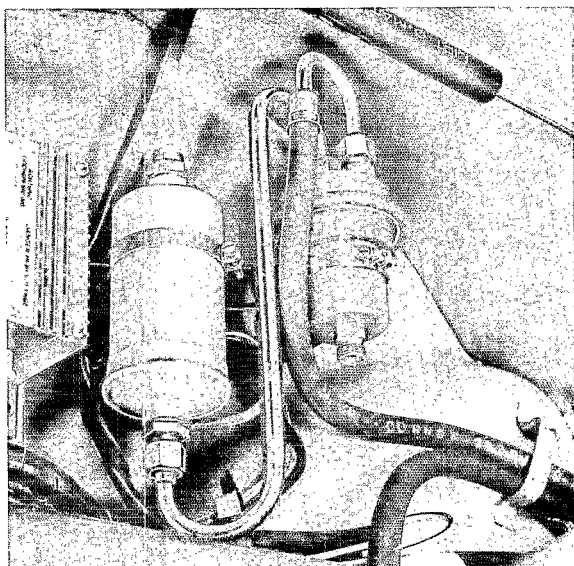


5. Bleed fuel line system (see page 2.2 - 1/17).

REMOVING AND INSTALLING INJECTION VALVES

TOOLS

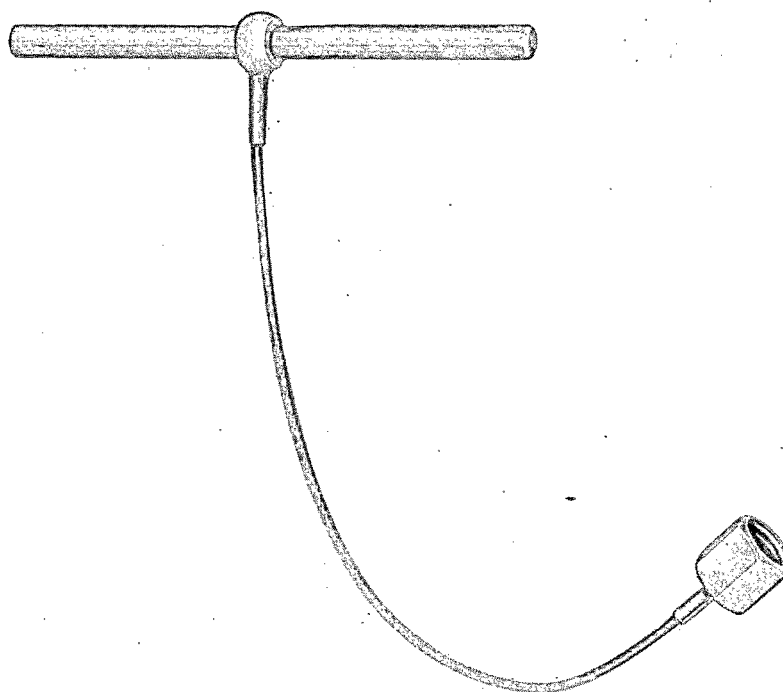


| No | Description | Special Tool | Remarks |
|----|-------------|--------------|---------|
| 1 | Remover | P 384 | |

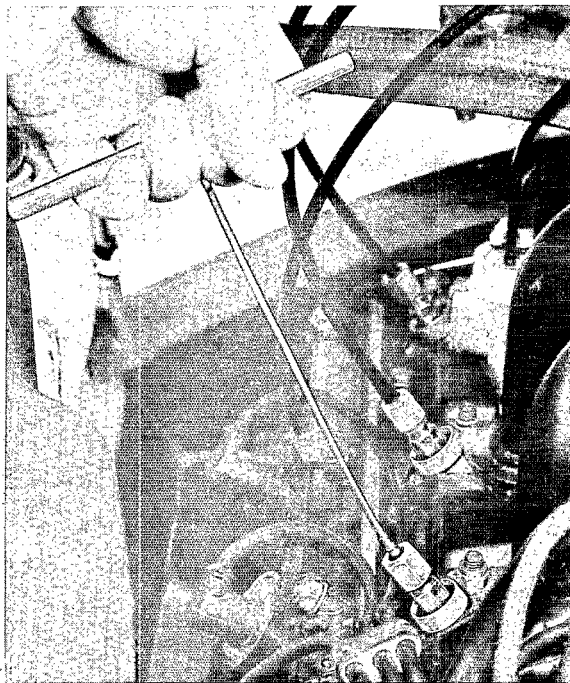

Removal

1. Unscrew coupling nut from the injection line at the injection valve.
2. Install special tool P 384 and pull injection valve out.

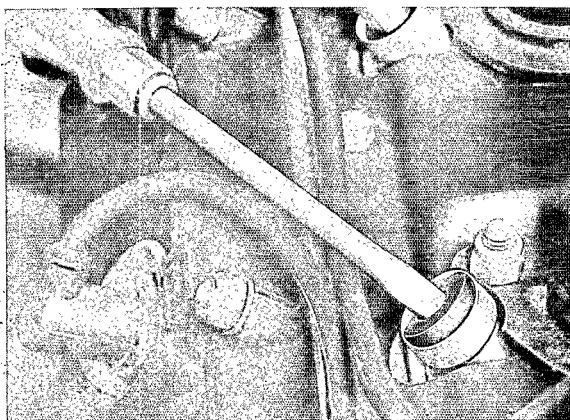

3. If rubber bushing remains in the support sleeve, take the bushing out with a screwdriver.

NOTE


Avoid damaging the supporting sleeve.

Installation

1. Inspect rubber bushing, replace if necessary.
2. Use a drop of engine oil when installing the bushing.
3. Press injection valve firmly into the supporting sleeve to stop.
The rubber bushing must be seated below the bulge in the supporting sleeve.
4. Check fuel lines for leaks.
5. Bleed fuel line system (see page 2.2 - 1/17).

REPLACING PLASTIC FUEL LINES


TOOLS

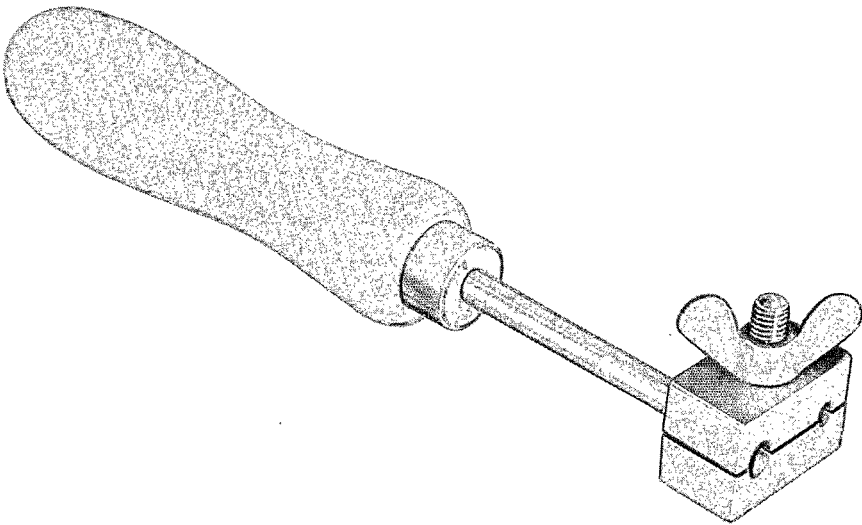

| No | Description | Special Tools | Remarks |
|----|-------------|---------------|---------|
| 1 | Installer | P 385 | |

The mixture control unit, control pressure regulator for throttle valve position and control pressure regulator for warm running compensation replacements are furnished with plastic fuel lines attached. Defective plastic fuel lines can be replaced individually.

1. Using a soldering iron, heat defective fuel line in the connector area and pull the line off.

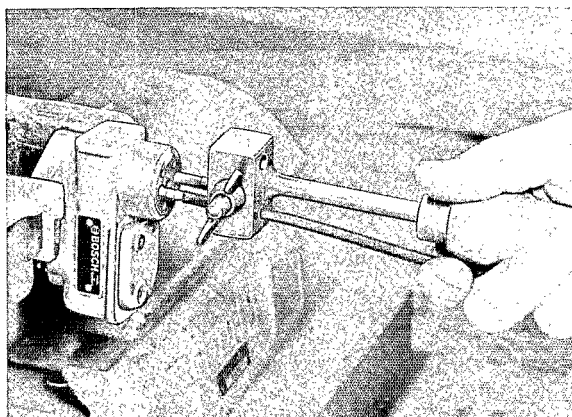

2. Mount replacement part in a vise with soft jaw protectors.
3. Mount fuel line in special tool P 385, allowing push-on section to protrude from the tool.
4. Push dry fuel line onto the connector.


NOTE

Make sure that line is properly positioned.


BLEEDING FUEL LINE SYSTEM

The fuel injection system must be bled (prior to starting) whenever a fuel line system component has been replaced.

1. Remove intake horn with filter cartridge.
2. Switch the ignition on.
3. Press diaphragm up by hand to stop (for 1 second to a maximum of 5 seconds) until the fuel lines are filled and the injection valves spray fuel audibly.

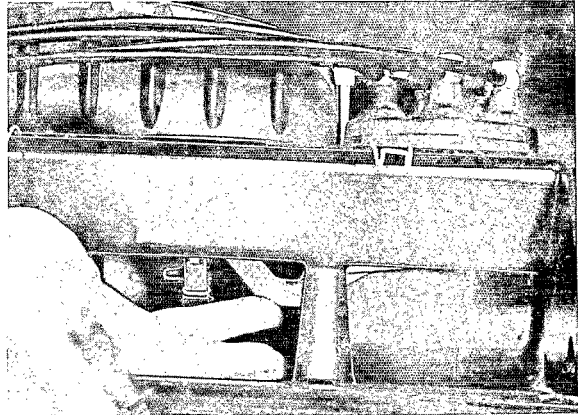

DISMANTLING AND ASSEMBLING MIXTURE CONTROL UNIT

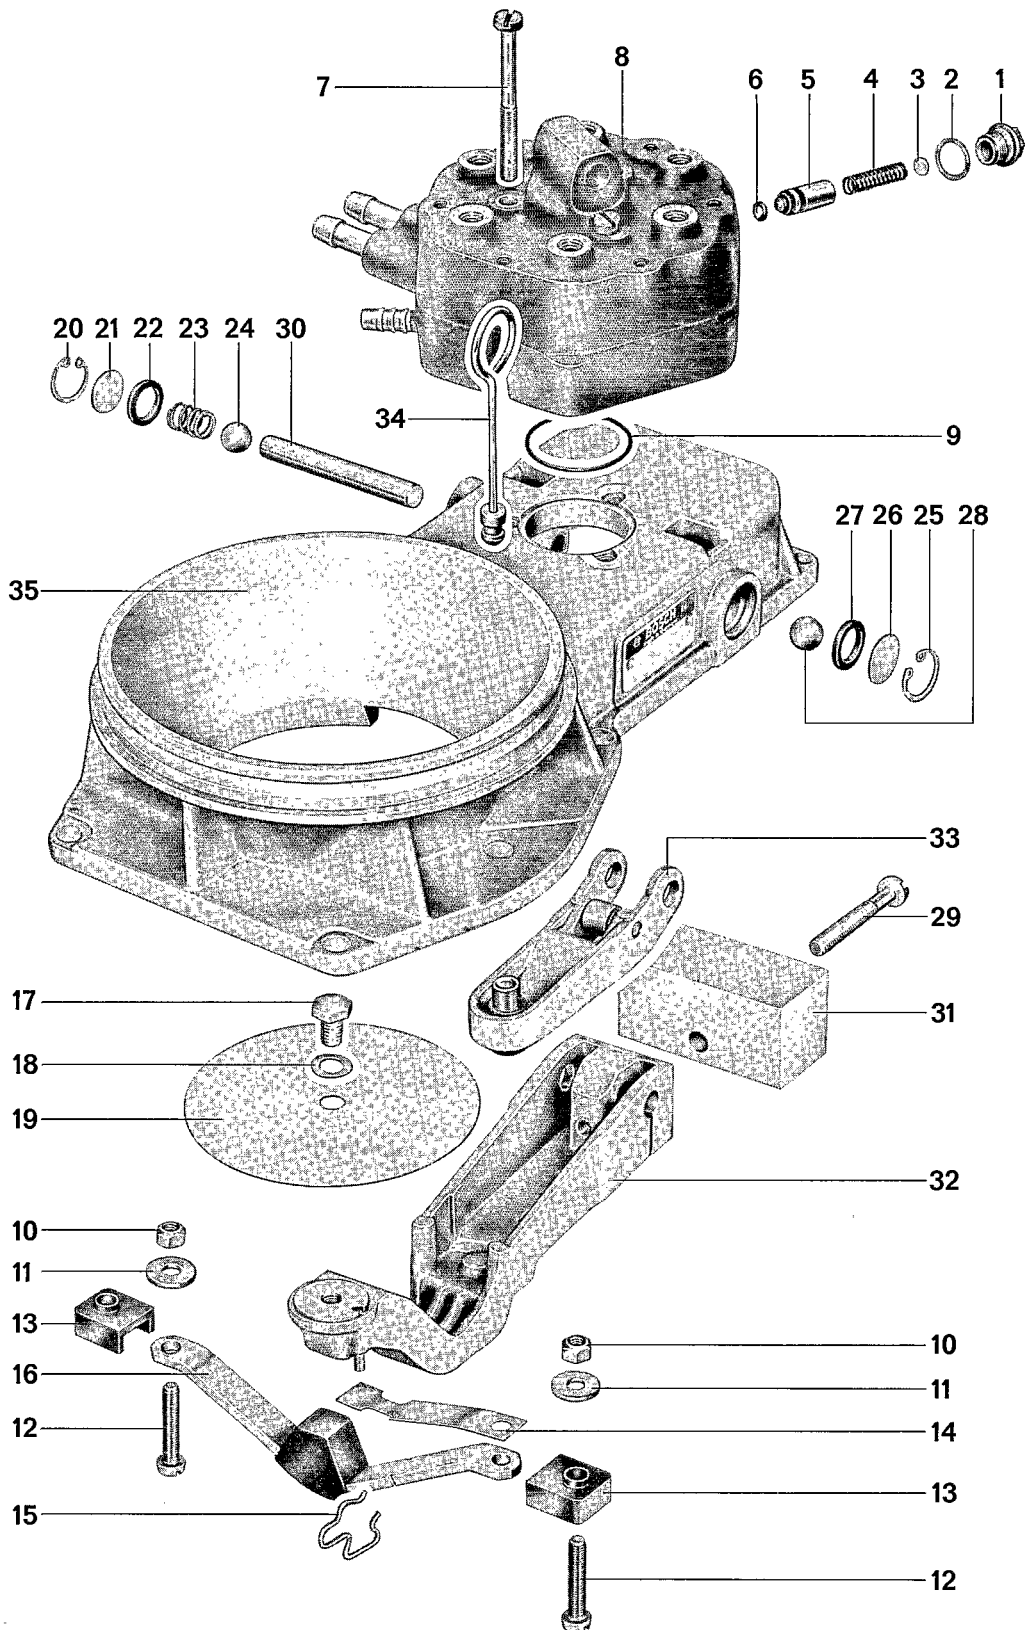


| No. | Description | Qty. | Note during: | | remarks |
|-----|-------------------|------|------------------------------------|---|------------------|
| | | | removal | installation | |
| 1 | Plug | 1 | | Torque to 1.3 to 1.5 mkg | |
| 2 | Seal A 10 x 13.51 | 1 | | Replace | |
| 3 | Shim | 1 | | | 2.2 - 2/8 |
| 4 | Spring | 1 | | | |
| 5 | Piston | 1 | Use conical wood peg to drive out | Replace fuel distributor if damaged | |
| 6 | Seal | 1 | | | |
| 7 | Capscrew M 5 x 50 | 3 | | Torque to 32 - 38 cmkg | |
| 8 | Fuel distributor | 1 | Don't let control plunger fall out | | do not dismantle |
| 9 | Seal | 1 | | Replace | |
| 10 | Nut | 2 | | | |
| 11 | Washer | 2 | | | |
| 12 | Capscrew | 2 | | Torque to 47 - 53 cmkg | |
| 13 | Insulator | 2 | | | |
| 14 | Spring | 1 | | Replace if necessary; install correctly | |
| 15 | Clip | 1 | | Replace if necessary; install correctly | |
| 16 | Stop | 1 | | Install correctly | |
| 17 | Hex head screw | 1 | | Torque to 50 - 55 cmkg and apply liquid thread locking compound | |
| 18 | Washer | 1 | | | |
| 19 | Sensor plate | 1 | | Check, replace if necessary | 2.2 - 2/4 |

| No. | Description | Qty. | Note during: | | remarks |
|-----|----------------------|------|---------------------------|---|-----------|
| | | | removal | installation | |
| 20 | Circlip | 1 | First remove this circlip | Install with sharp edge facing outward | |
| 21 | Cover | 1 | | | |
| 22 | Seal | 1 | | Replace | |
| 23 | Spring | 1 | | | |
| 24 | Ball | 1 | | Coat with silicone grease | |
| 25 | Circlip | 1 | | First install this circlip with sharp edge facing outward | |
| 26 | Cover | 1 | | | |
| 27 | Seal | 1 | | Replace | |
| 28 | Ball | 1 | | Coat with silicone grease | |
| 29 | Capscrew | 1 | | Torque to 47 - 53 cmkp an apply liquid thread locking compound | |
| 30 | Pin | 1 | | Check, replace if necessary | |
| 31 | Counterweight | 1 | | | |
| 32 | Operating lever | 1 | | Check | 2.2 - 2/6 |
| 33 | Follower | 1 | | Check if bearing play is too large, needle bearing is damaged, mixture control screw is damaged or rusted, replace parts if necessary | 2.2 - 2/7 |
| 34 | Plug | 1 | | | |
| 35 | Air flow sensor hsg. | 1 | | Coat bearing bores with silicone grease | |

INSTRUCTIONS FOR DISMANTLING AND ASSEMBLING MIXTURE CONTROL UNIT


REMOVING AND INSTALLING SENSOR PLATE

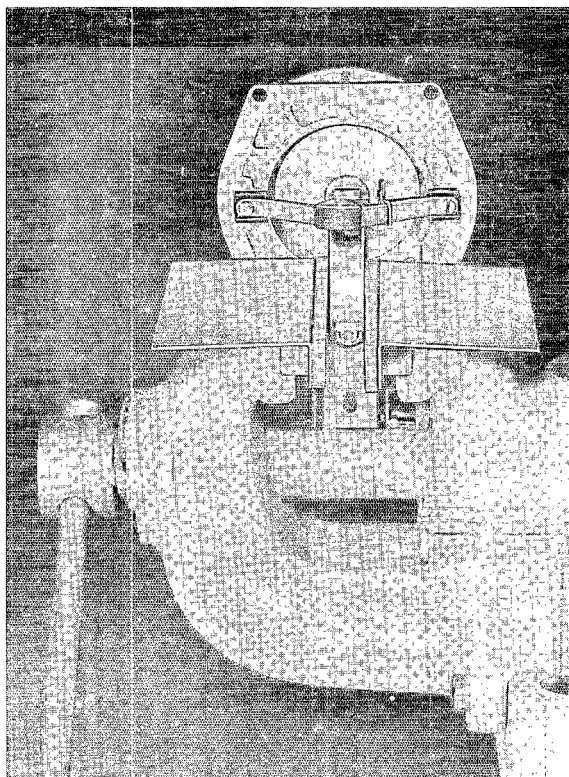


Removing

1. Remove fuel distributor.
2. Clamp mixture control unit vertically in vise with plastic guards on jaws. Clamp mixture control unit at bend in narrow section of operating lever.
3. Loosen sensor plate mounting screw and remove sensor plate.

Installing

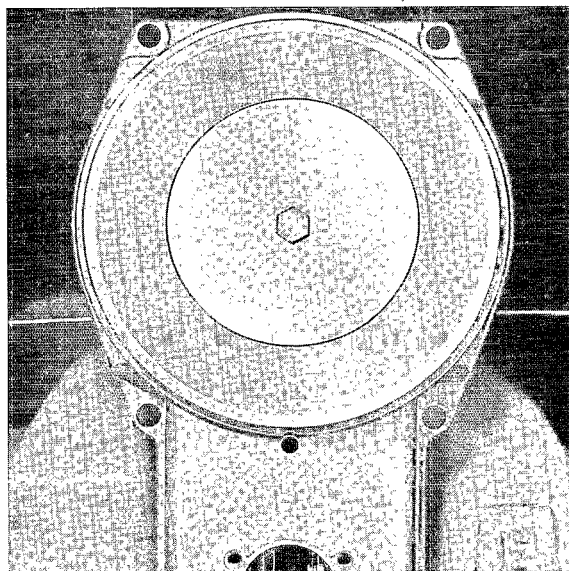


1. Clamp mixture control unit horizontally. Coat sensor plate mounting screw with "Loctite" or "Omnifit". Place new or old sensor plate in center of operating lever and slightly tighten screw by hand.
2. Measure gap between sensor plate and air venturi. A visible gap of about 0.10 mm should be seen all around the sensor plate.

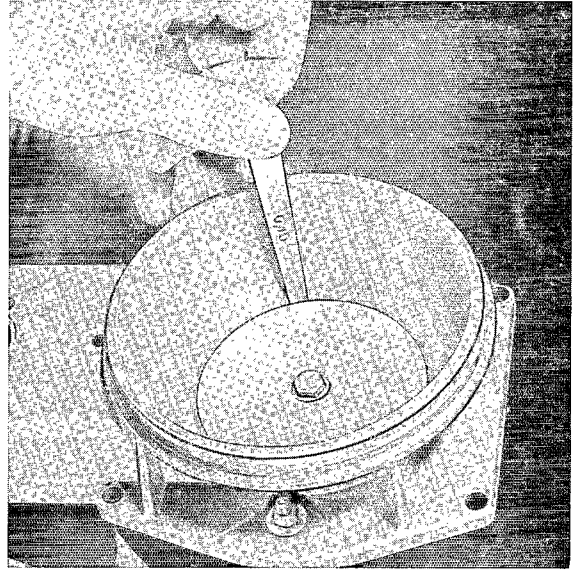

CAUTION

This test requires that the sensor plate be set at the correct height (rest position). The upper edge of the sensor plate must be flush with the lower edge of venturi.


The height position can be corrected by bending the wire clip (refer to page 1.1 - 1/3).

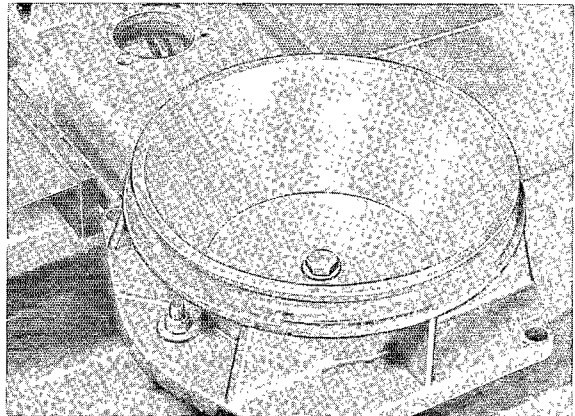

3. Clamp mixture control unit vertically in vise with plastic guards an jaws. Clamp mixture unit at bend in narrow section of operating lever (housing must be able to be moved toward vise).


Torque hex head screw to 50 - 55 cmkp.

4. Recheck sensor plate adjustment.

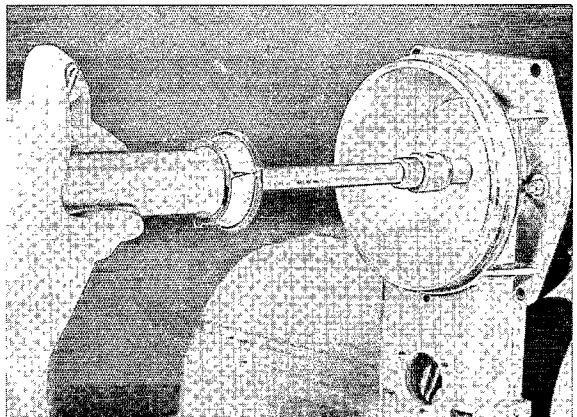


LOCATING OPERATING LEVER WITH FOLLOWER IN AIR FLOW SENSOR HOUSING

1. Apply "Loctite" or "Omnifit" to counterweight mounting screw and tighten screw slightly.

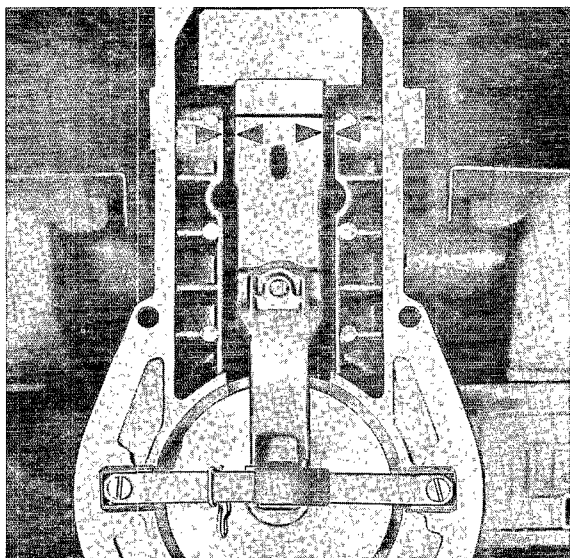

2. Adjust operating lever in air flow sensor housing.

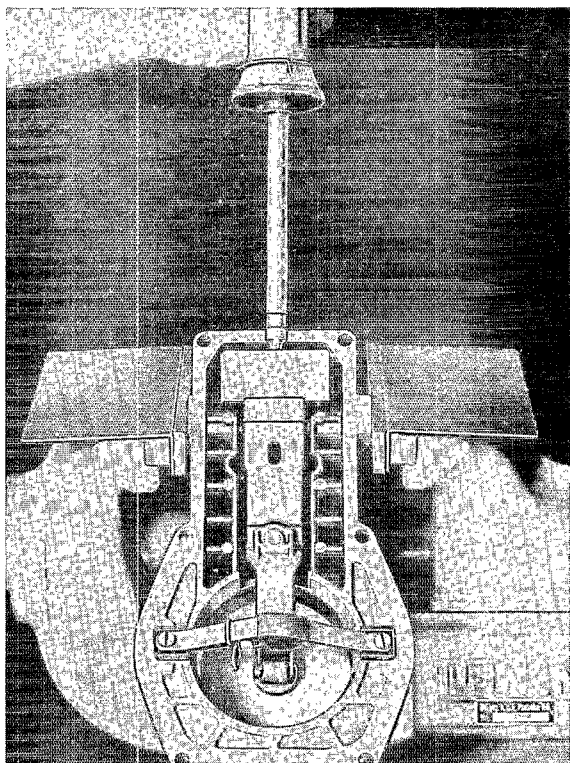

3. Tighten mounting screw to 47 - 53 cmkp.

BASIC ADJUSTMENT OF MIXTURE CONTROL SCREW AFTER REPLACEMENT OF OPERATING LEVER

Caution

This test requires that the sensor plate be positioned correctly (rest position).


Caution

Never apply downward pressure to adjusting wrench during adjustments, since this could change the injection timing.

1. Install mixture control unit.
2. Bleed fuel lines. (Disconnect injectors and hold in a container. Move sensor plate by hand many times).
3. Use adjusting wrench P 377 to initially turn the mixture control screw counterclockwise about 1 - 2 turns.
4. Turn on ignition, pull plugs off safety switch on air flow sensor or fuel pump relay.
5. Turn mixture control screw clockwise until the injectors just barely eject. From this point turn the mixture control screw back, i.e. counterclockwise, by one half turn.
6. Run engine to operating temperature (oil temperature 80° to 90° C) and adjust idle speed and CO level to their final specified values.

Install injectors.

REPLACING PISTON SEAL OF FUEL DISTRIBUTOR PRESSURE RELIEF VALVE

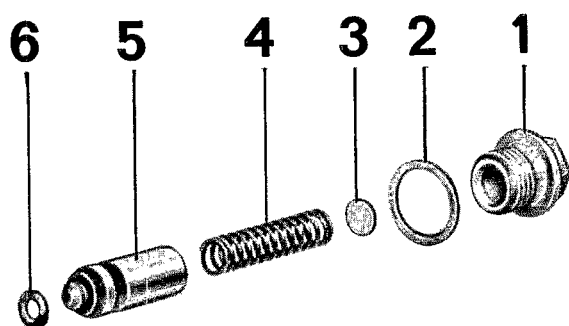

1. Plug
2. Seal
3. Shim
4. Spring
5. Piston
6. Seal

1. Clean fuel thoroughly.

2. Remove plug, being careful of shim in plug.

3. Remove spring and piston (if necessary, use conical wood peg).


4. Replace seal on conical section of piston, being careful not to damage new seal and piston.

5. Install plug with shim (as found while removing) and new seal. Torque screw to 1.3 - 1.5 mkp.

6. Check pressure of system (refer to page 1.1 - 1/10), correcting with shims if necessary.

DISASSEMBLING AND ASSEMBLING MIXTURE CONTROL UNIT

- MODIFICATIONS from April, 1976 -

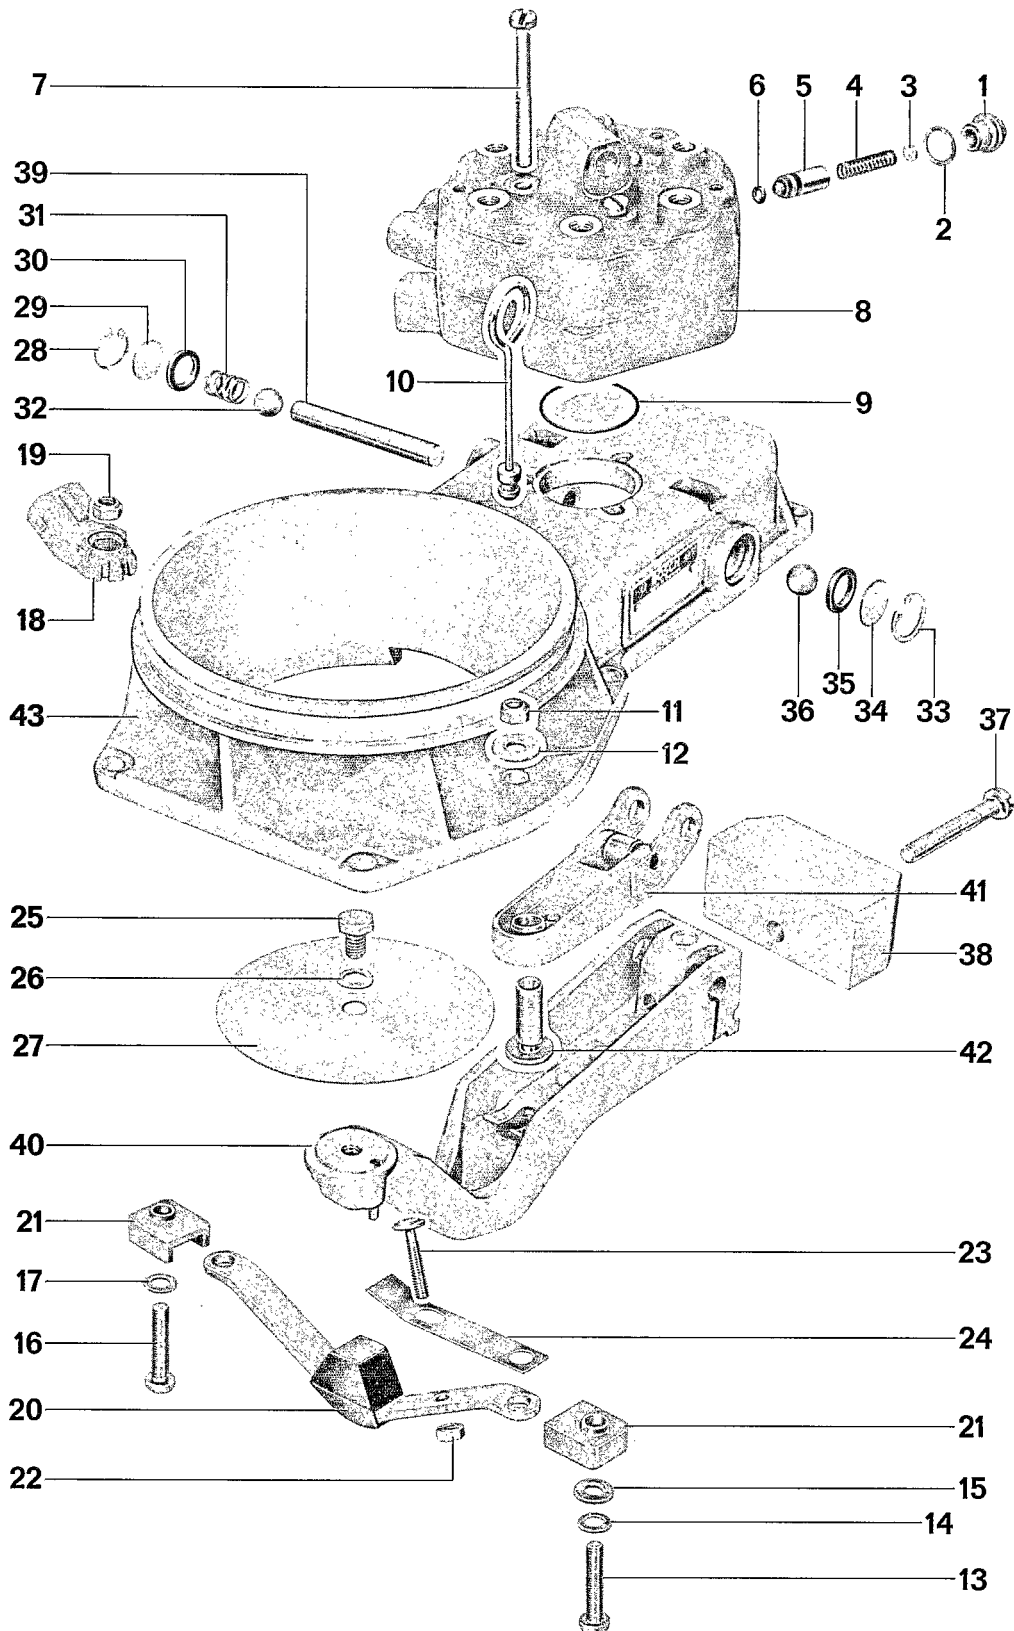


| No. | Description | Qty. | Note when removing | installing | Remarks |
|-----|--------------------------------------|------|---|---|-------------------------|
| 1 | Plug | 1 | | Torque to 13-15 Nm (1.3-1.5 kpm) | |
| 2 | Seal | 1 | | Replace | |
| 3 | Shim 0.1 mm thick 0.5 mm thick | X | | | Quantity as required |
| 4 | Spring | 1 | | | |
| 5 | Piston | 1 | Pull out with tapered wood dowel | Check, replace entire distributor if damaged (fitted part) | |
| 6 | O-ring | 1 | Be careful not to damage piston | Replace | |
| 7 | Fillister head cap screw | 3 | | Torque to 3.5 Nm (0.35 kpm) | |
| 8 | Fuel distributor | 1 | Be careful not to let control piston fall out | Check control piston, clean with gasoline, install with chamfer facing down. | Never disassemble |
| 9 | Seal | 1 | | Replace | |
| 10 | Plug | 1 | | | |
| 11 | Nut | 1 | | | |
| 12 | Washer | 1 | | | |
| 13 | Fillister head cap screw | 1 | | Torque to 4.7-5.3 Nm (0.47-0.53 kpm) | |
| 14 | Washer | 1 | | | |
| 15 | Insulator | 1 | | | |
| 16 | Fillister head cap screw | 1 | | Torque to 4.7-5.3 Nm (0.47-0.53 kpm) | |
| 17 | Washer | 1 | | | |
| 18 | Plug connector | 1 | | Install in correct position | |

| No. | Description | Qty. | Note when | | Remarks |
|-----|-----------------------------|------|-----------|--|---------|
| | | | removing | installing | |
| 19 | Nut | 1 | | | |
| 20 | Stop bracket | 1 | | | |
| 21 | Plastic insulator | 2 | | | |
| 22 | Nut | 1 | | | |
| 23 | Adjusting screw | 1 | | | |
| 24 | Leaf spring | 1 | | | |
| 25 | Bolt | 1 | | Torque to 5.0-5.5 Nm (0.50-0.55 kpm) and apply liquid locking agent | |
| 26 | Spring washer | 1 | | | |
| 27 | Sensor plate | 1 | | Check, replace if necessary | |
| 28 | Circlip | 1 | | Sharp side faces out | |
| 29 | End plate | 1 | | | |
| 30 | Seal | 1 | | | |
| 31 | Spring | 1 | | | |
| 32 | Ball | 1 | | Lubricate with (Bosch Ft 2 v 2) silicone grease | |
| 33 | Circlip | 1 | | | |
| 34 | End plate | 1 | | | |
| 35 | Seal | 1 | | | |
| 36 | Ball | 1 | | | |
| 37 | Fillister head cap screw | 1 | | Torque to 4.7-5.3 Nm (0.47-0.53 kpm) and apply liquid locking agent | |
| 38 | Counterweight | 1 | | | |

| No. | Description | Qty. | Note when | | Remarks |
|-----|-------------------------|------|-----------|--|---------|
| | | | removing | installing | |
| 39 | Pivot pin | 1 | | | |
| 40 | Operating lever | 1 | | | |
| 41 | Adjusting lever | 1 | | Check whether bearing play is excessive or needle bearing is damaged, replace if necessary | |
| 42 | Mixture control screw | 1 | | | |
| 43 | Air flow sensor housing | 1 | | Lubricate bearing bores with (Bosch Ft 2 v 2) silicone grease | |

DISASSEMBLING AND ASSEMBLING INSTRUCTIONS



Engage adjusting lever in spring holder by applying sufficient pressure.

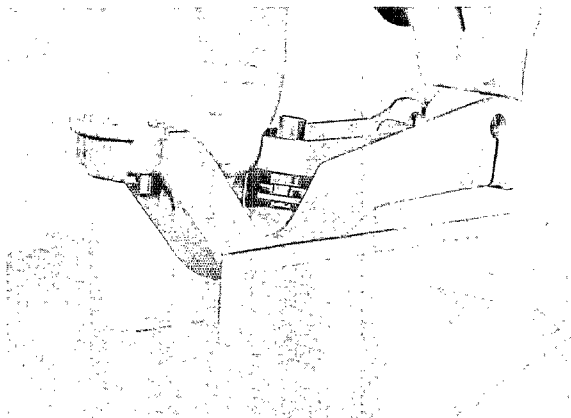


REMOVING AND INSTALLING VACUUM CONTROLLED WARM-UP REGULATOR

Removing

1. Disconnect battery.
2. Disconnect warm intake air connection.
3. Release fuel system pressure by loosening the warm-up regulator pressure line connection at the mixture control unit. Wrap a rag around this connection when loosening to catch escaping fuel. Retighten lines afterwards.
4. Remove air pump air filter.
5. Remove left and right heater hoses, loosen clamp at heater blower and swing heater blower upward.

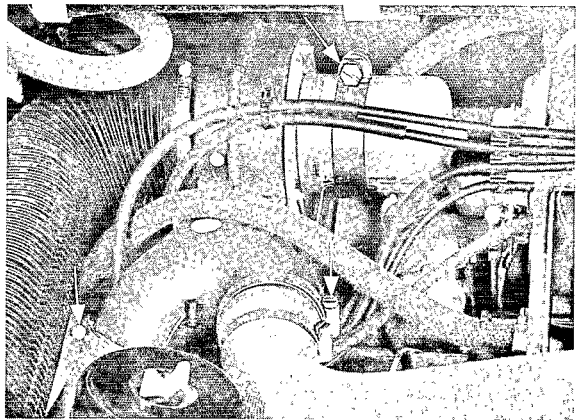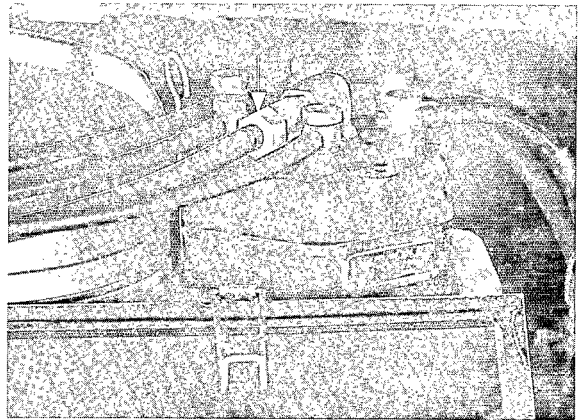


6. Loosen and remove clamp holding hoses and lines (1), vacuum hose clamp (2), plug connector (3), fuel return line (4) and fuel feed line (5).
7. Loosen two socket head capscrews and remove warm-up regulator.

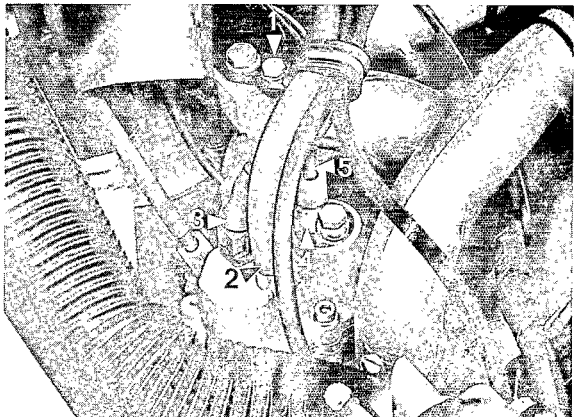

Installing

Torque fuel return line hollow bolt to 1.1 mkp.

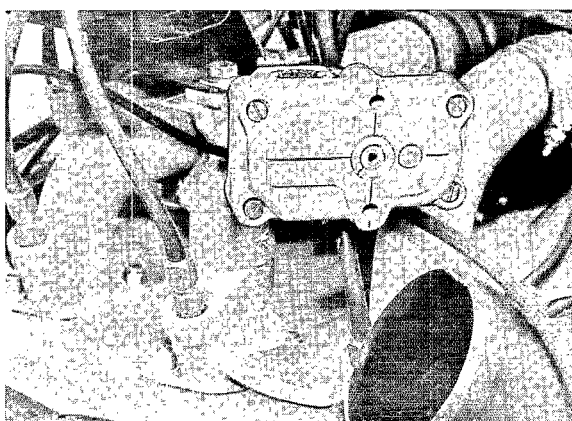


Note

The bottom of the warm-up regulator and the holding plate must be clean to assure proper ventilation for the warm-up regulator.


REMOVING AND INSTALLING AUXILIARY AIR REGULATOR

1. Pull wire plugs off of auxiliary air regulator.
2. Loosen hose clamps.
3. Loosen socket head cap screws and remove auxiliary air regulator.

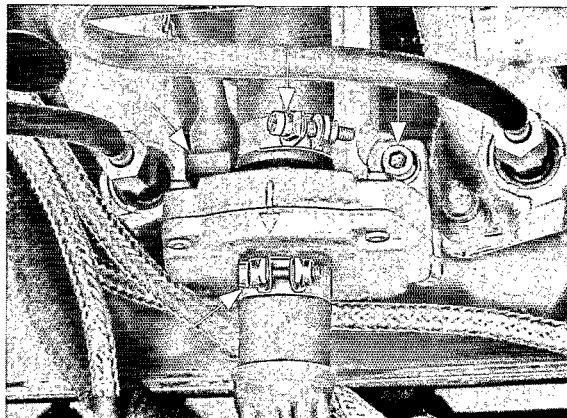

REMOVING AND INSTALLING AUXILIARY AIR VALVE


1. Loosen hose clamps and pull hoses off of auxiliary air valve.
2. Loosen mounting screws and remove valve.

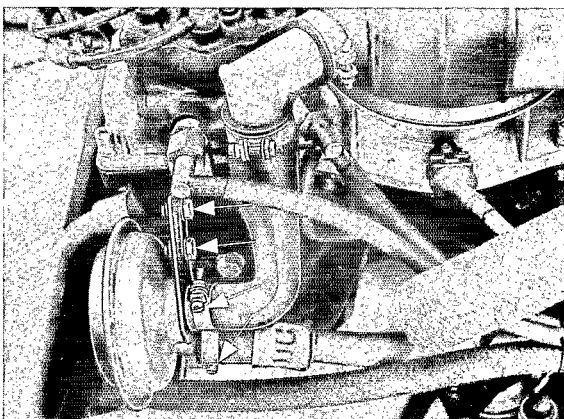


REMOVING AND INSTALLING THERMOVALVE

Removing

1. Remove formed hose, left heater hose and right heater hose. Disconnect electric wires, loosen clamp and remove heater blower.


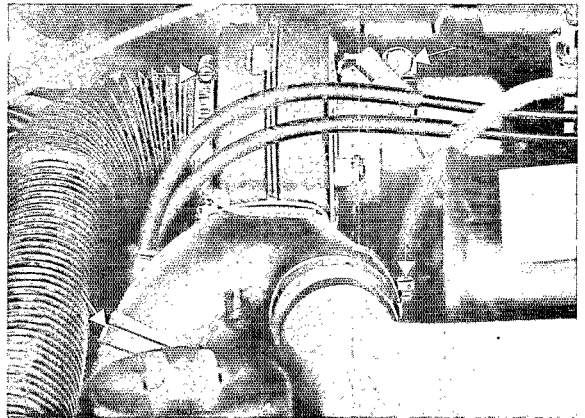


2. Disconnect electric plug at thermostatic valve. Detach hoses, unscrew bolt and remove thermostatic valve.

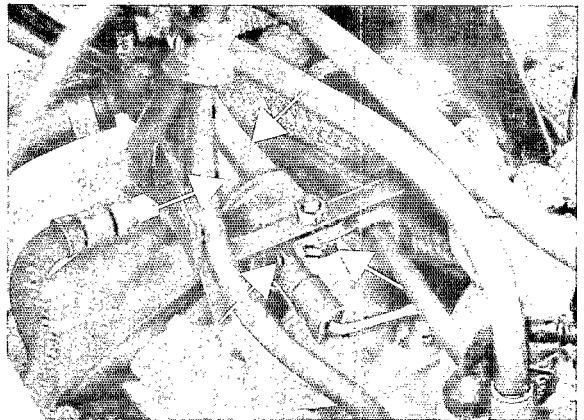


Installing

Connect vacuum hoses properly. Outer connection on thermostatic valve (1) to control pressure regulator connection (1), see photos below.

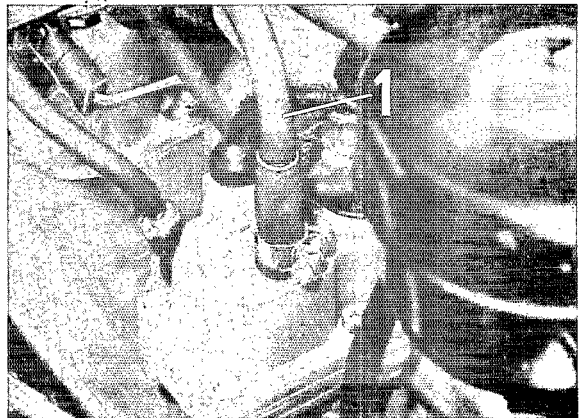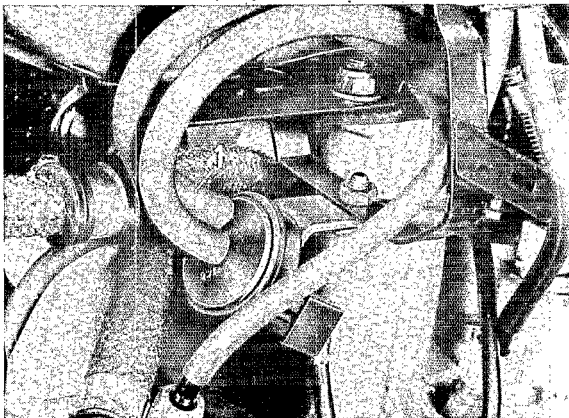

REMOVING AND INSTALLING DIVERTER VALVE

1. Loosen hose clamps and detach hose between diverter valve and check valve as well as hose between diverter valve and air pump.
2. Loosen nuts on air pump carrier and remove diverter valve with holder, pulling off vacuum hose at same time.

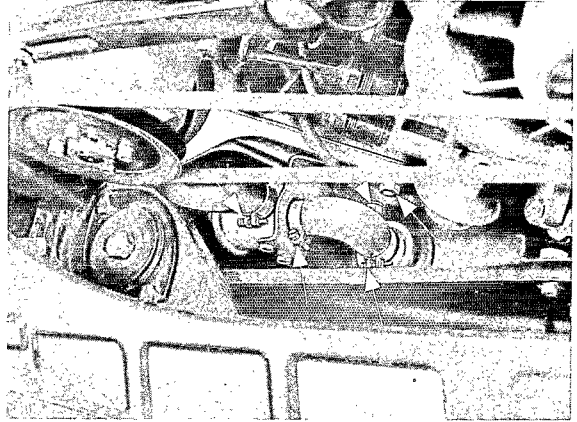


CLEANING FUEL TANK PLUG WITH BUILT-IN CIS FILTER

Fuel supply problems can be traced, among other things, to a dirty filter in the fuel tank plug.

Use new rubber gasket during reassembly.

Tank plug tightening torque is 0.8 - 0.9 mkp.

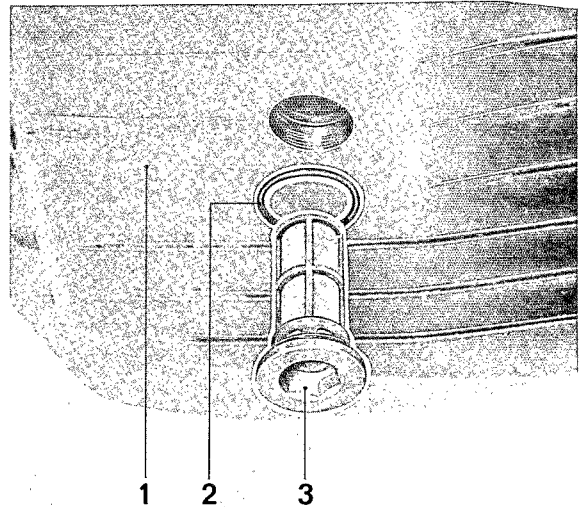

1. Fuel tank
2. Rubber gasket
3. Tank plug with filter


REMOVING AND INSTALLING FUEL TANK (80 Liter Steel Tank from 1974 Models)

Removing

1. Take off bottom guard.
2. Open plug and drain fuel. Then detach fuel lines at tank


Note

Observe safety regulations when draining fuel.

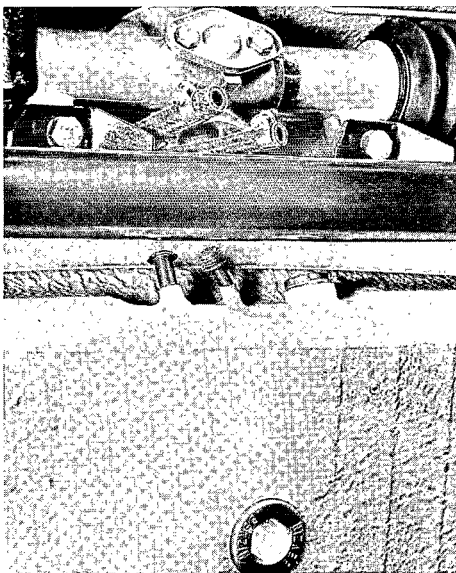

3. Pull off tank vent hose and fuel gauge wire plug (first unscrew cover on top of plug).
4. Remove holders for fuel tank. If necessary, loosen battery and push battery away.
5. Loosen hose clamp on connecting hose between filler neck and tank.

6. Pull off connecting hose and remove fuel tank from above.

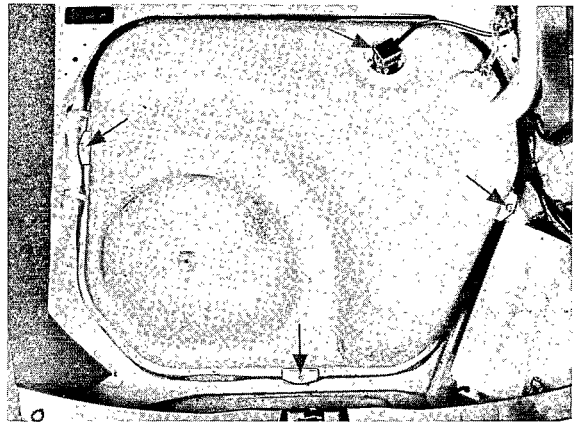

Installing

From 1980 models the tank vent neck as a 14 mm diameter (1974 to 1979 models: 9 mm diameter). After depletion of tanks with 9 mm neck, only new tanks with 14 mm neck will be available from parts. An adapter will be required between the connector (Y-piece) and tank when installing this tank in cars prior to 1980 model.

1. Paste new tank seal on tank. Install tank.
2. Clean filter screen on fuel drain plug. Use a new round cord seal and tighten drain plug to specified torque (see page 2.3 - 1/2).

Make sure hoses are connected correctly and tight.


REMOVING AND INSTALLING FUEL PUMP - 1976 MODEL

Removing


1. Remove guard.
2. Loosen strap and pull fuel pump down a little.



3. Clamp intake fuel hose shut with a pinch clamp. Pull off wire connectors, remove pressure fuel hose and catch escaping fuel.

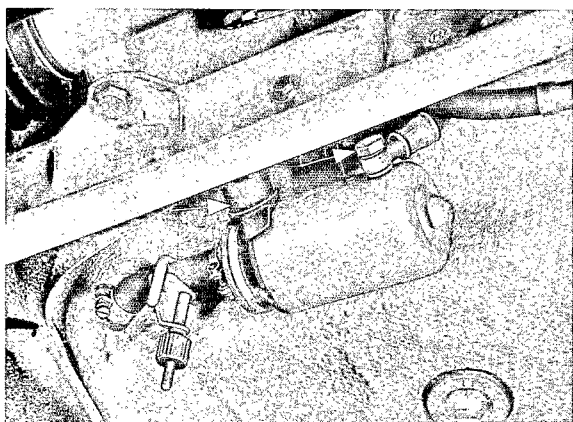

4. Loosen intake fuel hose clamp and remove fuel pump.

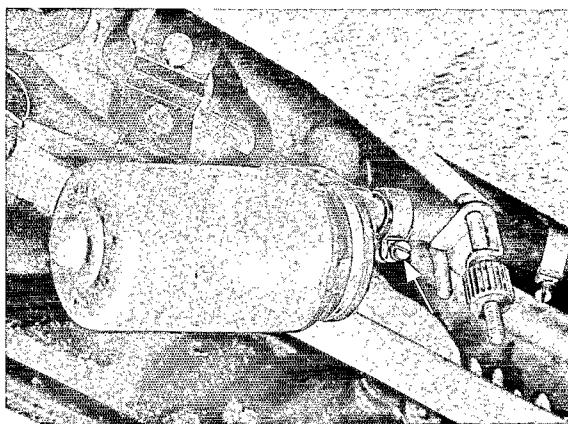

Installing

1. Install pressure fuel hose hollow bolt with new seals. Torque to 16 - 23 Nm/1.6 - 2.3 mkp.

Note

Hollow bolt seals have different thicknesses and must be installed correctly. Place thicker seal between coupling and pump body; thinner seal between coupling and head of hollow bolt.

2. Install wire connectors on to appropriate terminals.


3. Pull cover over wire connectors and position rubber ring for installation.

Note

To prevent corrosion, make sure that cover fits properly.

4. Slide intake fuel hose on pump nipple and secure with hose clamp.
 5. Remove pinch clamp from intake fuel hose.
 6. Position fuel pump for installation (top electrical terminal inclined back about 35°) and secure with strap.
 7. Check hose connections for leaks.
 8. Install guard.
-

LAYOUT DRAWING OF CHECK VALVES ON FUEL PUMPS

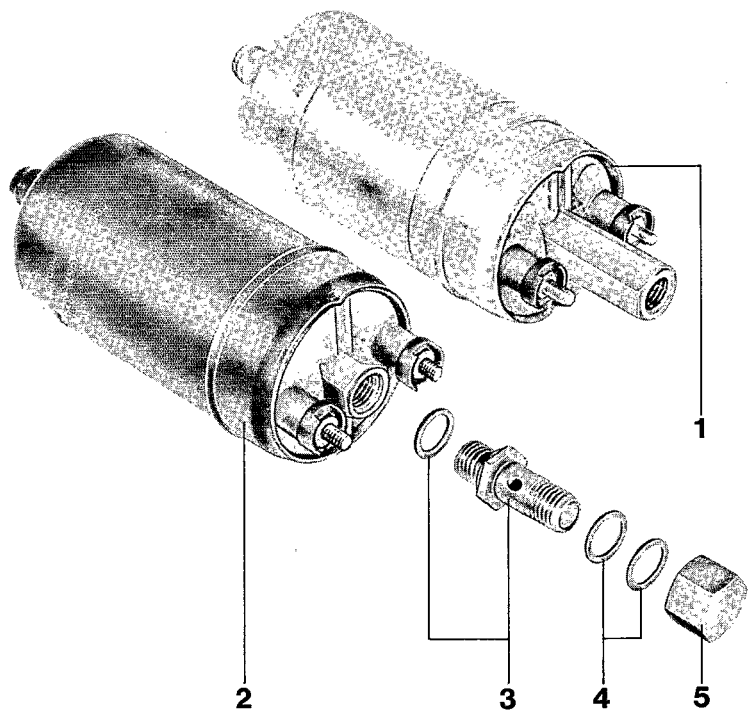


| No. | Description | Qty. | Note When: | | Special Instructions |
|-----|---|------|------------|---|----------------------|
| | | | Removing | Installing | |
| 1 | Fuel pump (long neck version with integrated check valve) | 1 | | | |
| 2 | Fuel pump | 1 | | | |
| 3 | Check valve with seal | 1 | | Always replace seal; tightening torque: 20 Nm | |
| 4 | Seal | 2 | | Always replace | |
| 5 | Cap nut | 1 | | Tightening torque: 20 Nm | |

REPLACING CHECK VALVE

Important: Observe safety pre-cautions for work on fuel systems!

1. Remove bottom guard.
2. Pinch fuel feed hose with a shut-off device and remove pressure hose end by unscrewing cap nut on fuel pump. Catch escaping fuel.

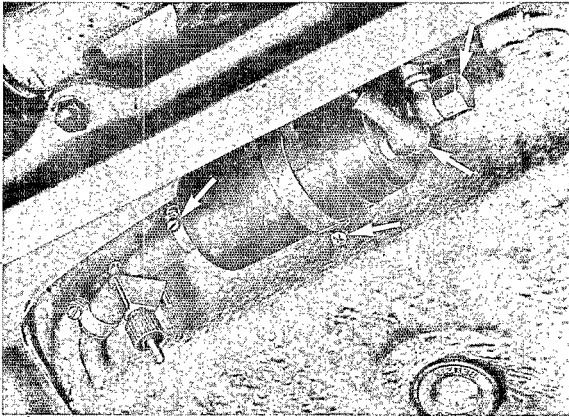

3. Screw in new check valve with a new seal. For long neck version fuel pumps this new check valve is installed in addition to the check valve integrated in the pump.
4. Install fuel line and new seals, and secure with cap nut.


Important: Make sure fuel hose is routed correctly and cannot rub before tightening cap nut.

5. Remove shut-off device and check for leaks. Install bottom guard again.
-


REMOVING AND INSTALLING OXYGEN SENSOR

Removing


1. Disconnect plug for oxygen sensor on left side of engine compartment. Push wire grommet and plug through engine panel downward.

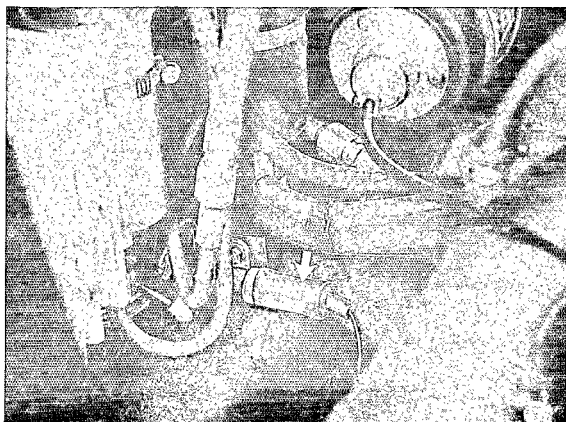

5. Pull off safety plug on oxygen sensor.

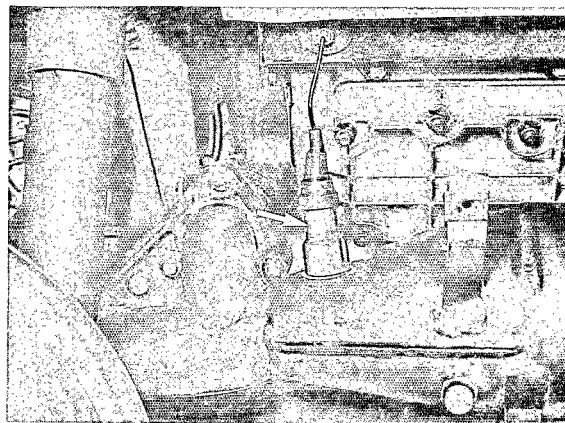


6. Remove oxygen sensor.

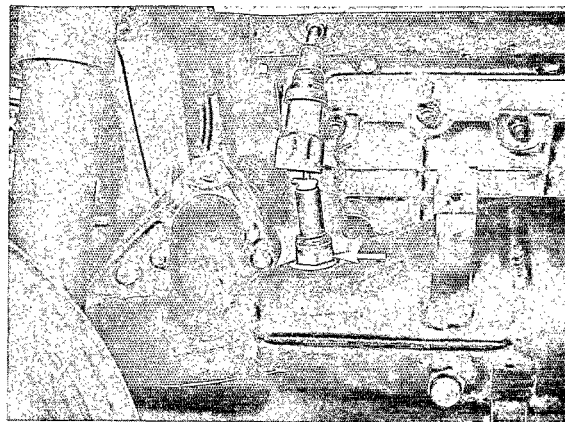

2. Lift car.

3. Take off left rear wheel.

4. Remove shield.

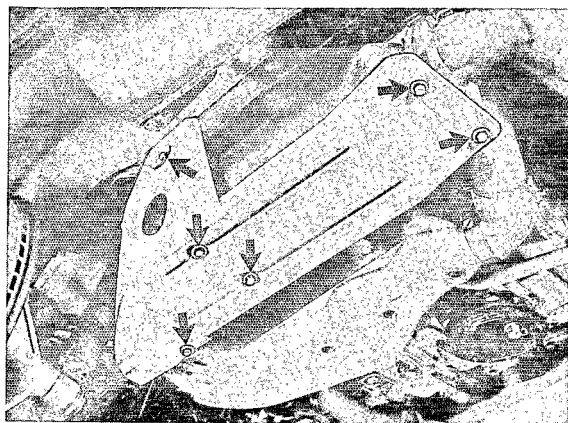

Installing

1. Coat threads of oxygen sensor with Bosch paste
VW 140 16 Ft.

Note


Never allow assembly paste to get into slot of sensor.

2. Tighten sensor to specified torque
Reference value: 50 - 60 Nm (36 - 43 ft lb).
-

RESETTING COUNTER


A counter is installed behind the fresh air blower to monitor the operation time. It will turn on the oxygen sensor indicator lamp after car has been driven 30,000 miles. The counter must be reset to zero each time the oxygen sensor is replaced.

1. Disconnect battery ground.
2. Remove speedometer.
3. Press in reset button on counter against stop with an approx. 3 mm thick piece of wire. Counter will return to zero position and oxygen sensor indicator light resumes its normal function.

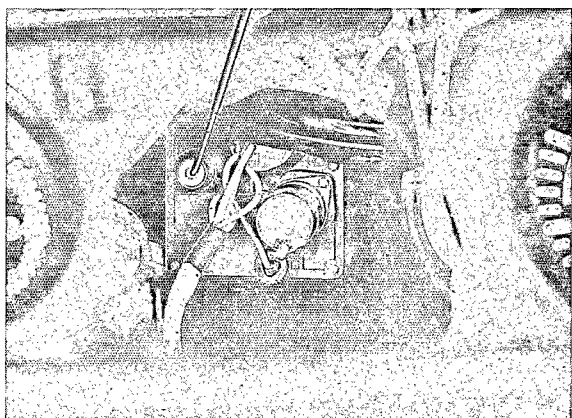

REMOVING AND INSTALLING OXYGEN SENSOR CONTROL UNIT


1. Remove right seat after loosening front and rear screws on seat rails.

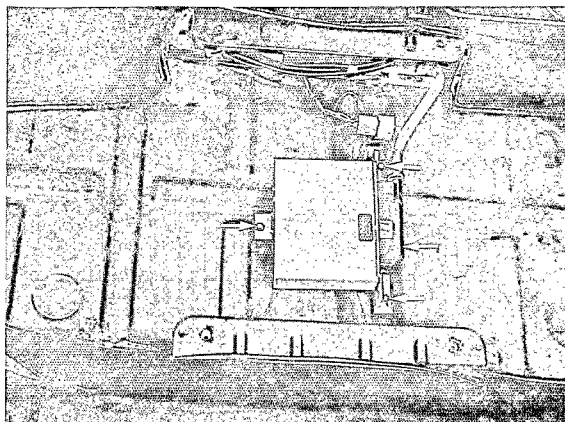

2. Loosen screws on control unit. Pull off plug and remove control unit.


REMOVING AND INSTALLING CONTROL UNIT FOR ACCELERATION ENRICHMENT OF OXYGEN SENSOR CONTROL

1. Remove right seat.
2. Pull off plugs, unscrew bolt and remove control unit.

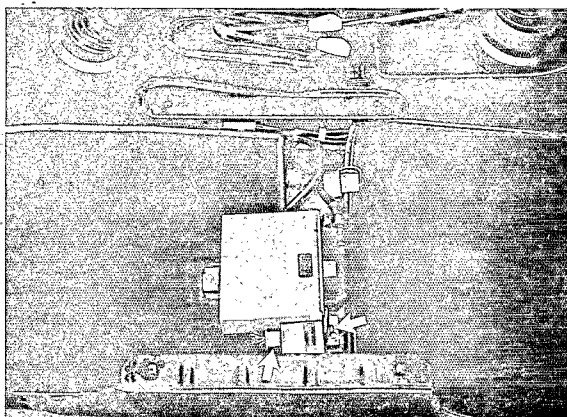

CHECKING FREQUENCY VALVE FOR OXYGEN SENSOR

1. Pull off wire plug.

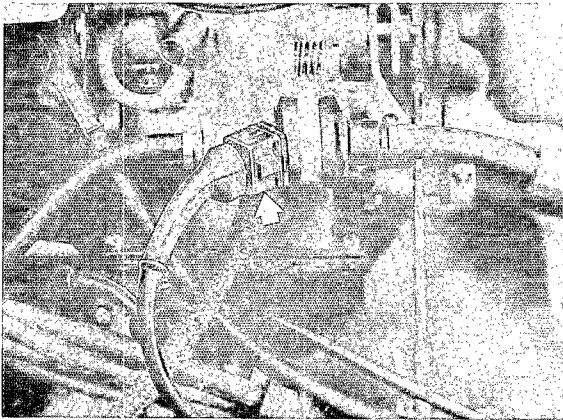


2. Connect ohmmeter on frequency valve.
Coil resistance: 2 to 3 ohms.
 3. If necessary, replace frequency valve.
-

REMOVING AND INSTALLING THROTTLE VALVE SWITCH

Removing

1. Remove air cleaner and cowl.
2. Disconnect holder for frequency valve, vacuum hoses for distributor, hose to vacuum booster and wire plug on throttle valve switch. Remove 4 socket head screws and remove throttle housing.

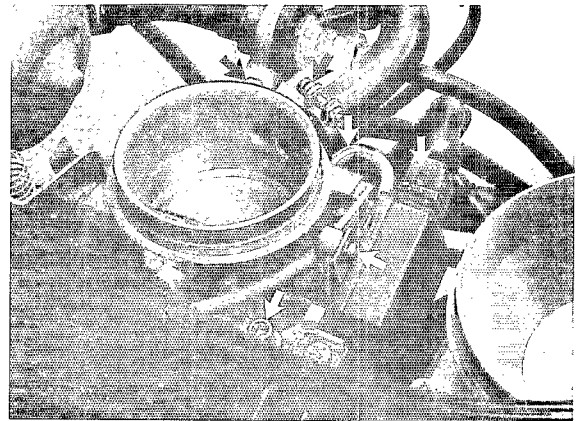


3. Remove mounting screws and remove switch.

Installing

Make sure O-ring is positioned properly on throttle housing.

CHECKING AND ADJUSTING THROTTLE VALVE SWITCH


TOOLS

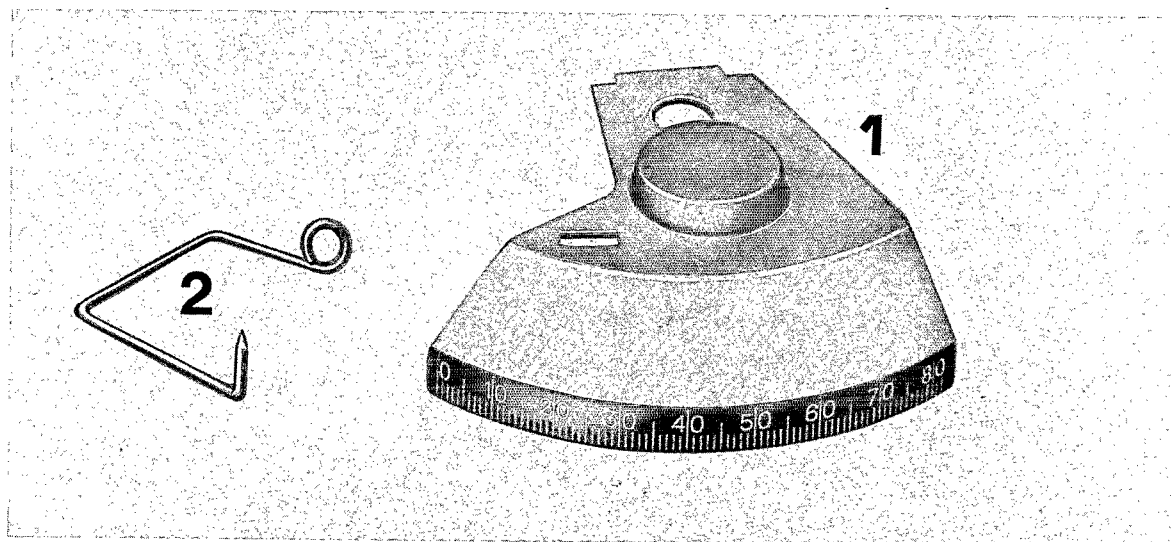

| No. | Description | Special Tool | Remarks |
|-----|-------------|--------------|---------|
| 1 | Dial scale | from P 228 b | |
| 2 | Pointer | from P 228 b | |

CHECKING AND ADJUSTING THROTTLE VALVE SWITCH


1. Remove throttle housing.
2. Mount dial scale from Special Tool P 228 b on throttle valve shaft.

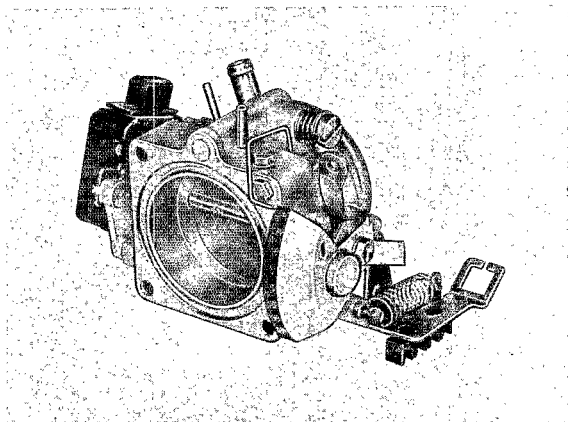

3. Set pointer (from Special Tool P 228 b) to 0°.
 4. Connect standard buzzer or continuity tester to terminals 18 and 2 (idle contact) of throttle valve switch.
 5. Operate throttle valve. Switching point should be between 2 and 3°. Adjust if necessary.
 6. Check full throttle contact. Connect tester on terminals 18 and 3 of throttle valve switch. The contact must be made between 30 and 35°. The full throttle contact is mounted with the idle contact on a base plate and therefore it cannot be adjusted separately.
-


REMOVING AND INSTALLING MICROSWITCH FOR ACCELERATION ENRICHMENT OF OXYGEN SENSOR CONTROL (from 1981 Models)

Pull off plugs and unscrew bolts.

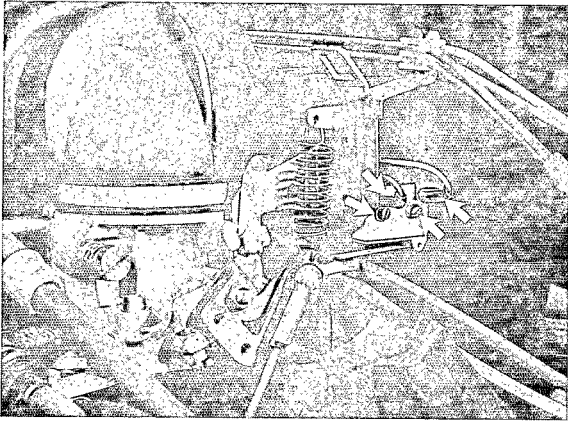


CHECKING AND ADJUSTING MICROSWITCH FOR ACCELERATION ENRICHMENT (from 1981 Models)

1. Connect standard buzzer on both contacts of microswitch (buzzer buzzes).
2. Operate throttle lever by hand. Microswitch should function before the throttle opens (buzzer not buzzing). Adjust if necessary.

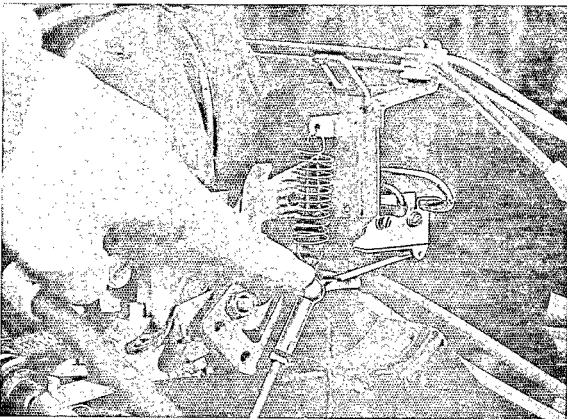

CORRECTING CO LEVEL SETTING ON MIXTURE CONTROL UNIT - (from 1981 Models) WITH SHEAR-OFF SCREW

1. Remove entire mixture control unit.
2. Unscrew fuel distributor on air flow sensor.
3. Drill threaded part of shear-off screw with a 2 mm/5/64 in. dia. drill bit (approx. 3.5 mm/9/64 in. deep).
4. Unscrew rest of shear-off screw with a suitable screw extractor.
5. Install mixture control unit.
6. After correction of CO level setting install a new shear-off screw in access bore and tighten until screw shears off.

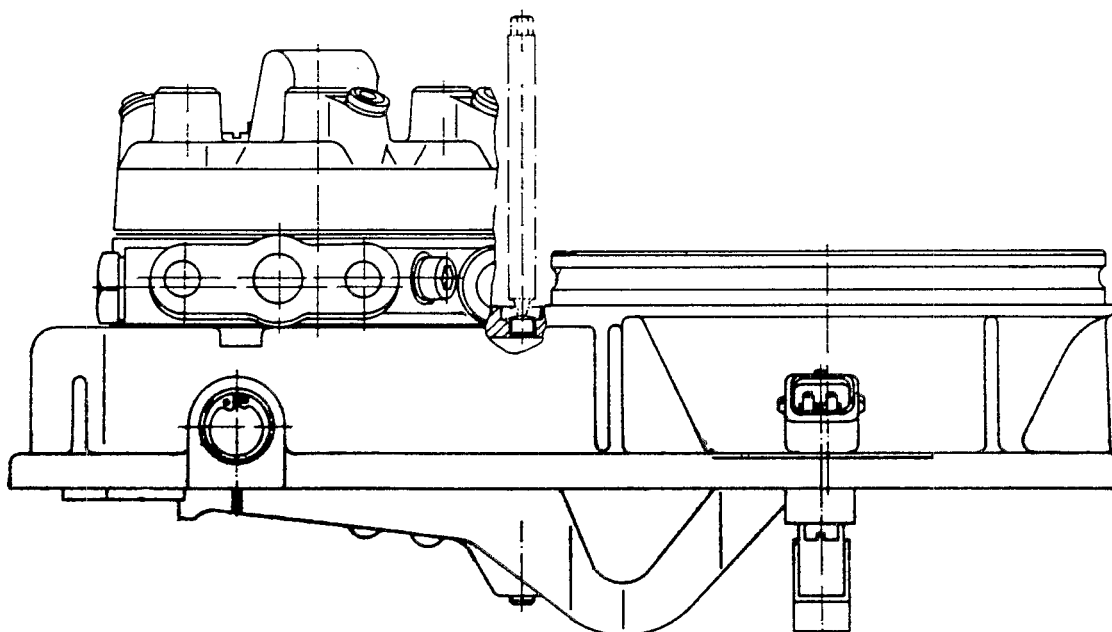

ADJUSTING FUEL INJECTION PUMP WITH EMISSION TESTER


Special Tools

P 228 c Protractors

1. Bring engine to operating temperature (about 80°C/175°F).
2. Connect emission tester according to the manufacturer's instructions.
3. Attach protractor, special tool P 228 c, to the right throttle valve housing (if equipped with air conditioner, attach to left throttle valve housing). Adjust pointer to 0°.

Note

Hand throttle lever must be all the way off.

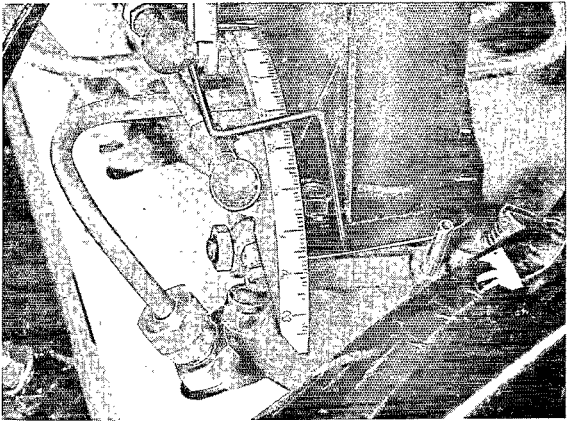

4. Using hand throttle or locally manufactured tool, open throttle 9°; actuate gas pedal a few times to take strain off linkage.

5. Determine exhaust emission by road test or dynamometer test. Under partial load the 2400 rpm with a 9° throttle opening the exhaust emissions (CO%) should be:


| | |
|-------------|---------------------------------|
| 911 T | 1.5 - 2.0 % CO |
| 911 E and S | 2.0 - 2.5 % CO (Europe 2.0-3.0) |
| Carrera 2.7 | 2.5 - 3.0 % CO |

For typical road test see page SF 35.

Adjustment instructions for injection pump are shown on page SF 36.

Note

The intake air preheating system eliminates the necessity for monitoring intake air temperature.

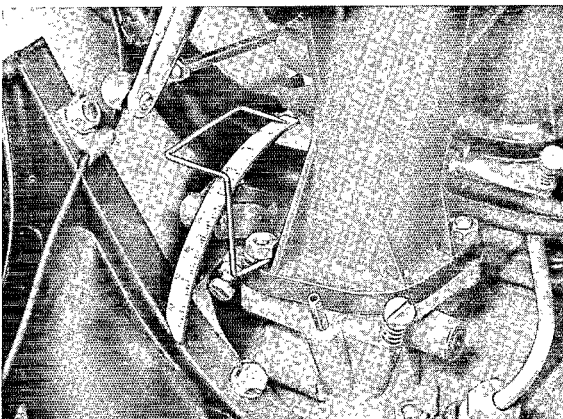


ADJUSTING ENGINE IDLE

Special Tools

P 230 c Socket (9 mm)

1. Bring engine to operating temperature.
2. Check idle speed. If idle speed is too high or low, readjust air correction screws on throttle valve housings as needed. Turning screws in, lowers idle. Turning out, increases idle. Check air flow of individual cylinders at 1600-2000 rpm synchronometer, special tool P 235. See page SF 40 for adjusting instructions.

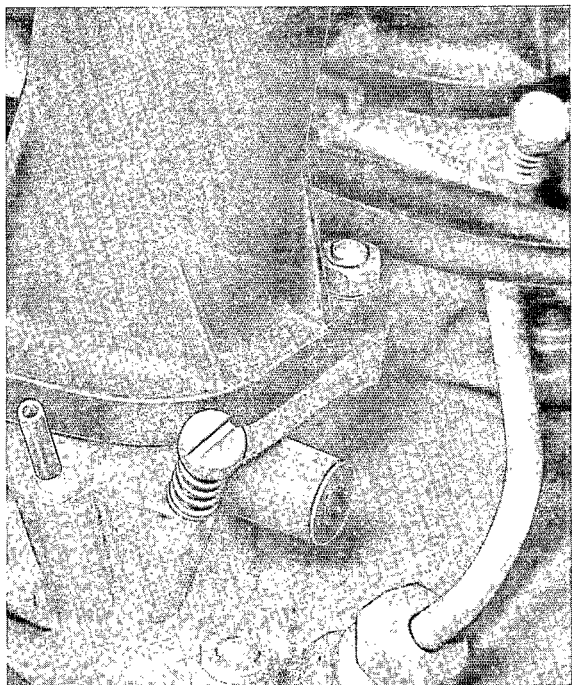

Note

If resetting the air correction screws shows no reaction on the synchronometer, then the idle passages in the throttle valve housings are carboned up and must be cleaned.

3. Connect emission tester and check CO emissions. If CO value is not within the prescribed limit, shut off engine and readjust idle speed injection quantity on pump.


Caution

Do not start engine while adjusting idle speed injection quantity.

4. The idle adjusting screw can be reached with special tool P 230 c through a hole which is covered by a plastic cap in the cooling air upper shroud.

5. Remove cap.

6. Depress the spring-loaded idle adjusting screw with special tool P 230 c until you can feel it engage with the slot of the centrifugal governor.

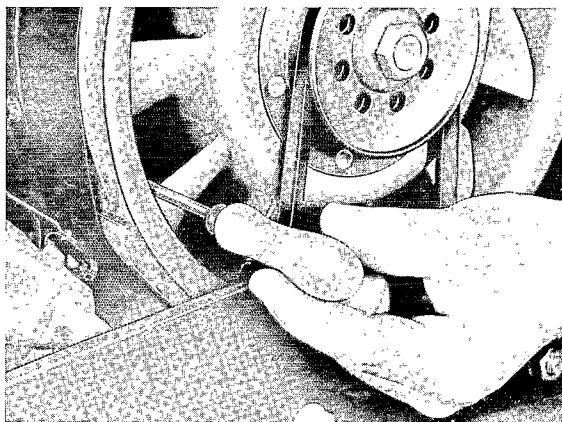

CO emissions

| | | |
|-------------|---|-------------|
| USA | = | 2 - 3 % |
| Europa | = | 2,5 - 3,5 % |
| Carrera 2,7 | = | 2 - 3 % |



lean



rich

8. Idle speed can change after CO emissions have been adjusted at idle speed (900 ± 50 rpm).


9. Adjust idle speed by turning the air correction screws. Recheck with synchrometer.

Note

Adjustments at idle speed and under partial load should be made as quick as possible so that the velocity stack area does not heat up. Drive the car a short distance or run engine slightly faster (about 3000 rpm) before making another CO test on road or dynamometer. This will cool off the velocity stack area.


7. Turn adjusting screw counter-clockwise for a leaner mixture and clockwise for a richer mixture.

Do not adjust by more than 1 notch at a time. A maximum of three notches is allowed to either the right or left of the basic adjustment.

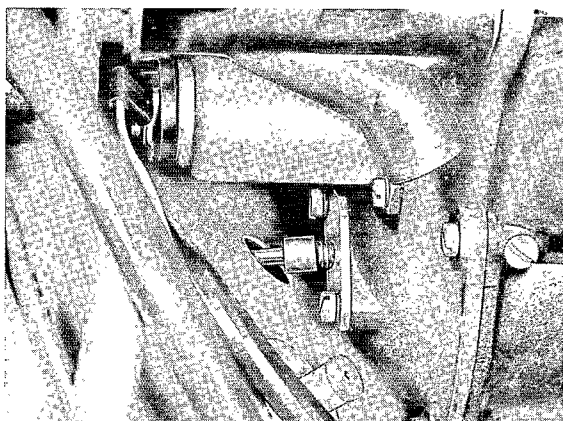

ADJUSTING MICRO SWITCH - BEGINNING WITH 1972 MODELS -

1. Loosen lock nut and back off adjusting screw until the micro switch is not closed in idle position.

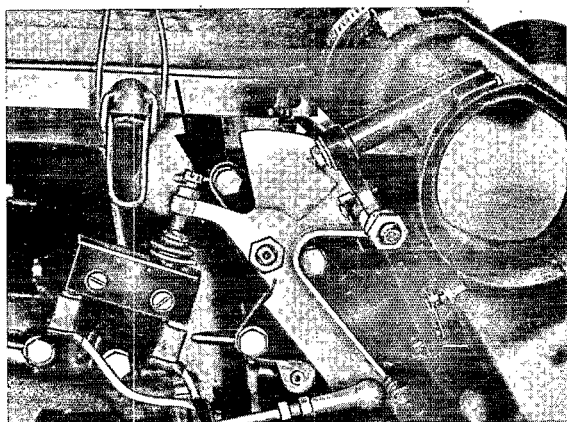

2. Turn the adjusting screw from this position until the micro switch closes (listen for click sound).


3. Turn adjusting screw 1/4 turn farther in. Tighten lock nut.

Note

The micro switch must be readjusted whenever the throttle valve linkage or injection pump linkage has been reset.


IDLE ADJUSTMENT

TOOLS

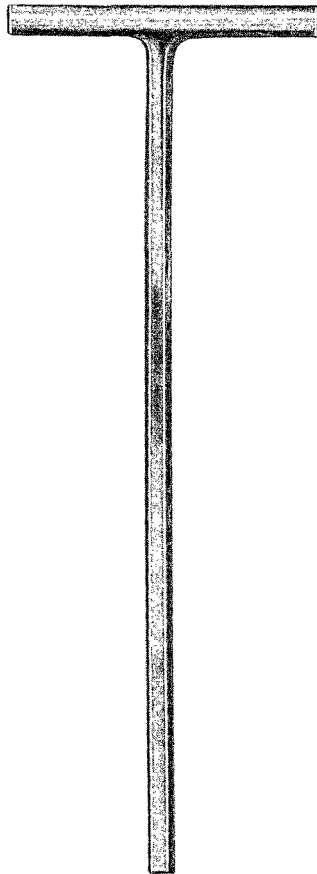

| No. | Description | Special Tool | Remarks |
|-----|------------------|--------------|---------|
| 1 | Adjusting wrench | P 377 | |


1. Run engine to operating temperature (approx. 80° C).
2. Make sure that hand throttle lever is pushed down to stop.
3. Connect CO-tester according to the manufacturer's instructions.
4. Turn adjusting screw, or bypass screw, resp. at the throttle housing until the specified engine speed has been attained. See page 1.1 - 1/14 e. for specifications.

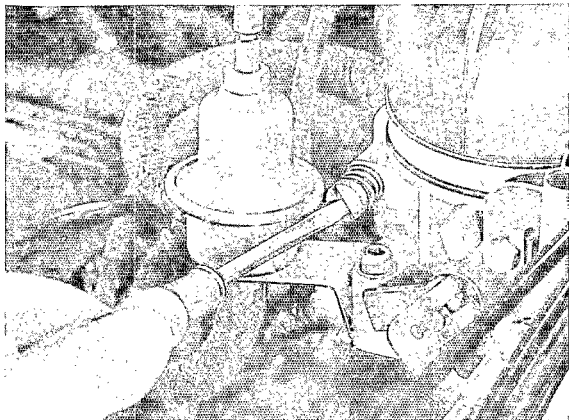

Note

Use an independent tachometer, such as that from the tester or similar.


5. Remove plug from mixture control unit between fuel distributor and venturi.
6. Insert adjusting wrench P 377.
7. Turning the wrench clockwise makes the mixture richer, and turning it counter-clockwise makes the mixture leaner.

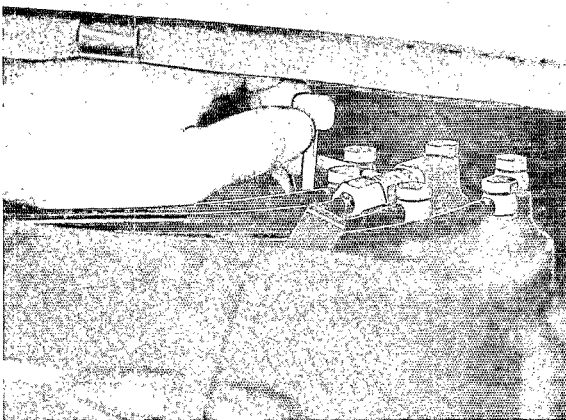

Note


The following points must be definitely noted:

- a) Always adjust CO from lean to rich.
Example: If mixture is too rich, first turn idle control screw counterclockwise further than necessary and then clockwise to specified position.
- b) Turn the adjusting screw very little because small adjustments result in considerable CO emission changes.
- c) The maximum permissible change at the mixture adjusting screw is one-half turn.

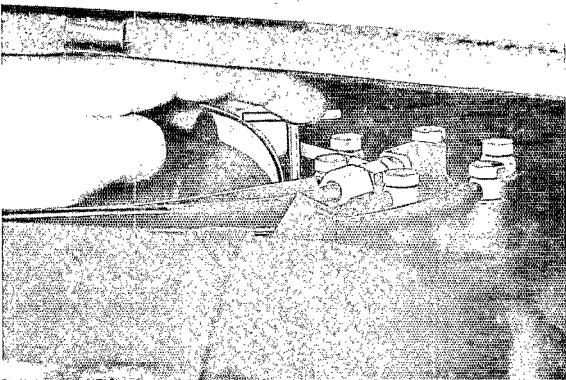

- d) The air pump of engines with air injection must be disconnected to adjust CO.


Disconnect pressure hose at pump and plug hose.

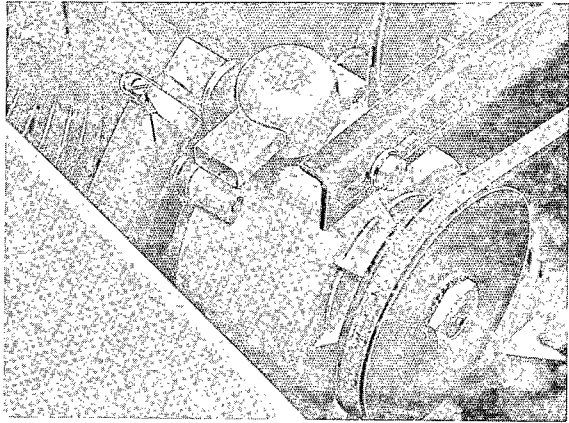


8. Take the wrench out.
9. Accelerate engine briefly.
10. Wait until the CO-tester has stabilized for idle speed reading.
Se page 1.1 - 1/14 e for specifications.
If necessary, repeat the procedure.
11. Recheck idle speed and correct, if necessary.
12. Replace plug upon completion of the adjusting procedure.

ADJUSTING FULL POWER POSITION OF THROTTLE

Throttle linkage must be so adjusted that there is at least 1 mm clearance at the throttle valve lever when the accelerator pedal is in the fully depressed position.

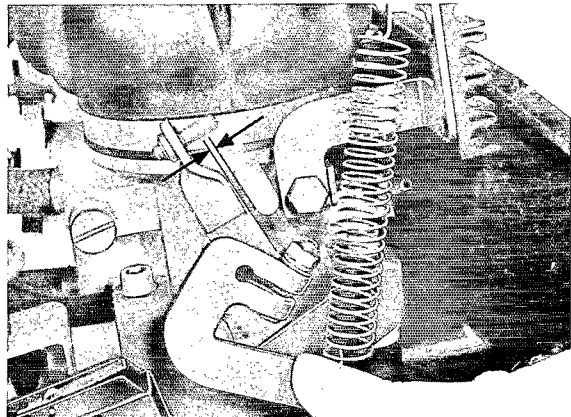

ADJUSTING MICROSWITCH

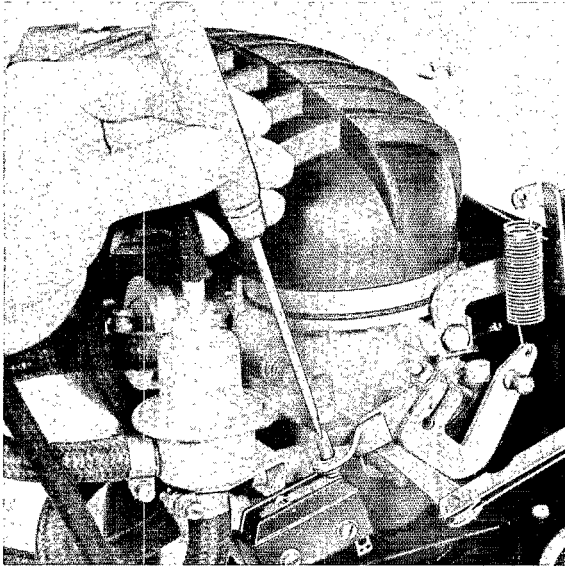

1. Disconnect electrical connections from microswitch.
2. Connect a standard buzzer to both contacts of the microswitch.
3. Prop up throttle. Place a 2 mm feeler gauge between idle stop screw and throttle valve lever.

Note

This distance must be measured exactly, sliding the feeler gauge in horizontally.

4. Turn adjusting screw at the throttle valve lever to a point beyond the switch-off position of the microswitch (buzzer is off).
5. Turn adjusting screw back to the switch-on position (buzzer is on).
6. Close throttle valve and check if the microswitch arm still has enough travel clearance in this position (at least 0.5 mm).




Note

Once the engine is installed in the car and hand throttle is adjusted, check if the microswitch is in the "on" position (buzzer on) with hand throttle fully on.

If necessary, check hand throttle adjustment.

CHECKING AND ADJUSTING CONTROL PRESSURE REGULATOR FOR THROTTLE VALVE POSITION

1. Connect and bleed P 378 pressure tester and switch valve to position \approx 2.
2. Detach electrical wire from control pressure regulator for warm running compensation. Using a jumper wire, connect control pressure regulator for warm running compensation directly to B+ (fuse box on left side of engine compartment). Switch ignition on. Make sure that throttle is fully closed (hand throttle must be pushed back all the way).
3. The control pressure will rise slowly and must reach the idle value shown under testing and adjustment specifications, page 1.1 - 1/13.
4. If the indicated value deviates, turn control pressure regulator for throttle valve position in the oval slots until the specified value is reached.
Control pressure regulator for throttle valve position in direction of vehicle travel = higher pressure.
Control pressure regulator for throttle valve position against the direction of vehicle travel = lower pressure.
5. If the specified pressure cannot be attained in this way, replace the control pressure regulator for throttle valve position.

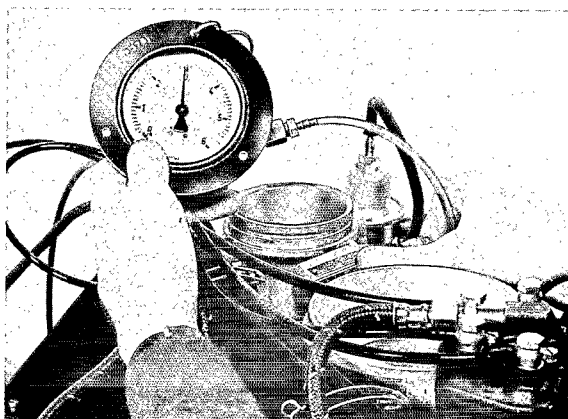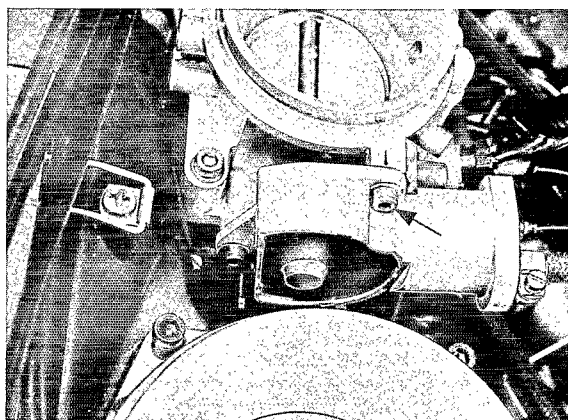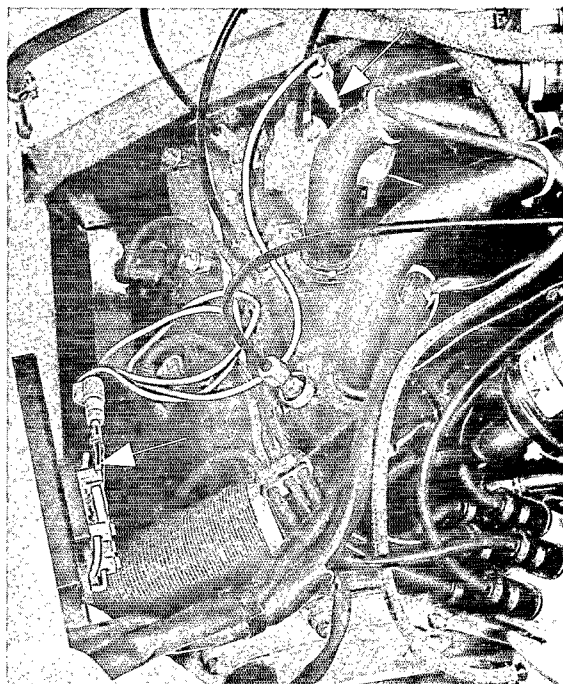


ADJUSTING HAND THROTTLE

1. Fold center tunnel cover forward at parking brake support.
2. When the engine is warm (80°C) and hand throttle completely pulled up, engine should be running at about 3500 - 3800 rpm.

NOTE


Take care not to overspeed the engine.

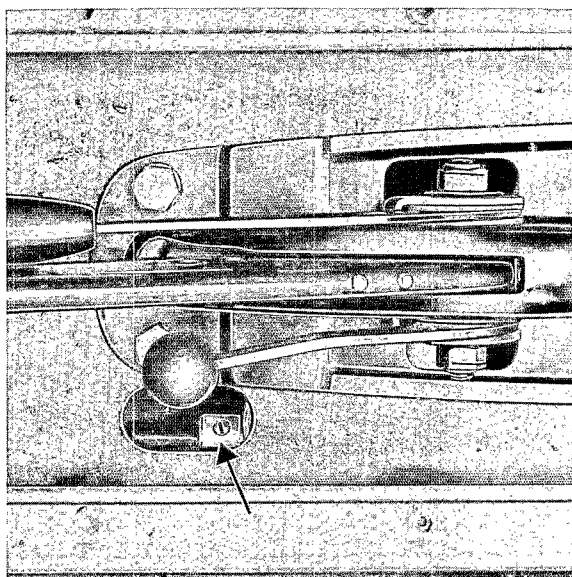

3. The hand throttle can be adjusted by repositioning the clamping piece on the throttle control rod in the center tunnel.

ADJUSTING IDLE, 911 SC - 1978 MODELS

TOOLS

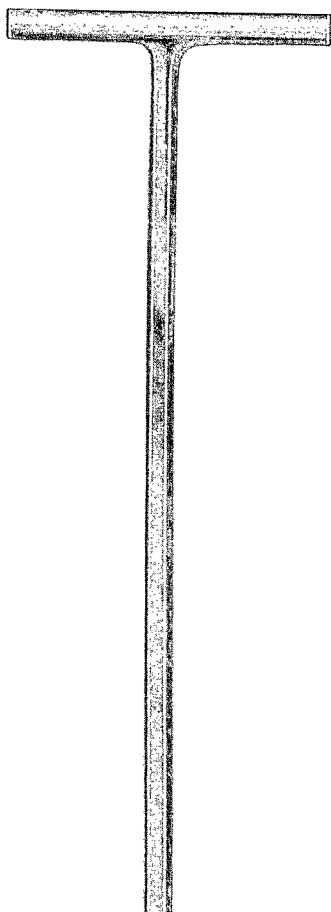



| No. | Description | Special Tool | Note |
|-----|------------------|--------------|------|
| 1 | Adjusting wrench | P 377 | |

Adjusting


Note


Before starting with the idle adjustments, make sure that oil tank cap fits properly and its seal is in good condition. Leaks at oil tank cap would result in incorrect readings.

1. Run engine to operating temperature (approx. $80^{\circ}\text{C}/176^{\circ}\text{F}$).
2. Connect CO tester according to instructions of the manufacturer.
3. Detach air hose at diverter valve (arrow) and insert an appropriate plug into hose.

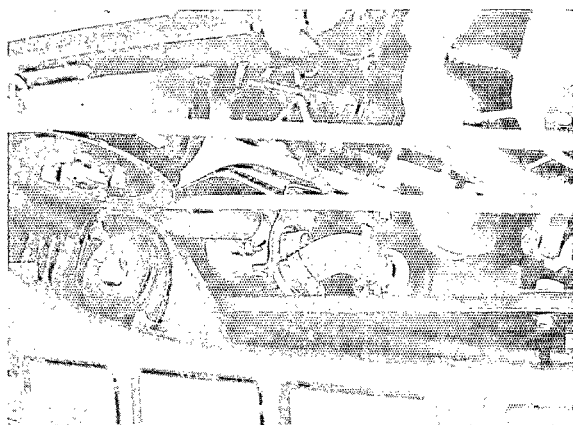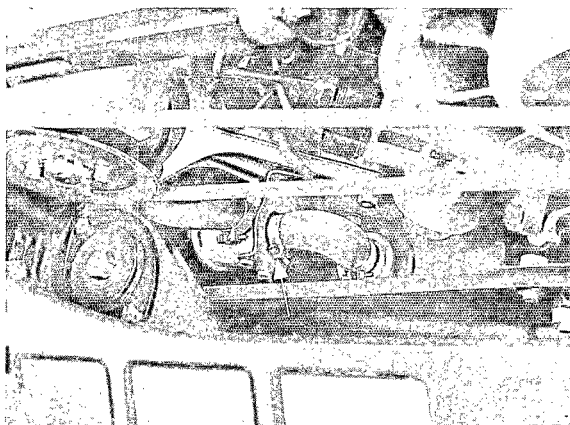

4. Connect exhaust gas source line to test connection of catalytic converter.

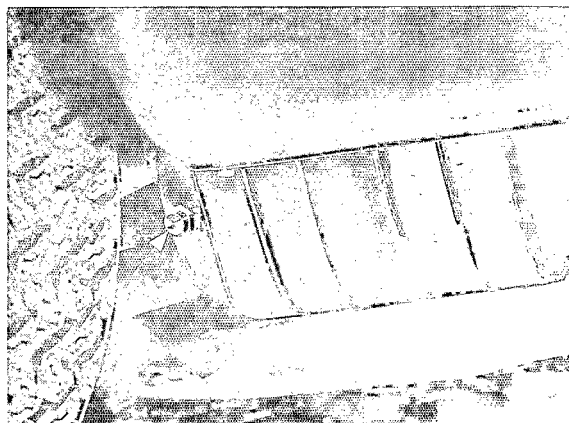


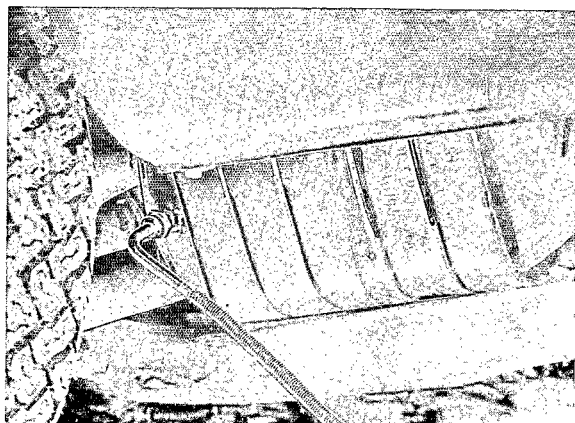

5. Turn idle speed screw or bypass screw on throttle housing, until specified speed is reached.
Test specifications, see page 1.1 - 1/14 e.


Note

Use separate tachometer of tester or similar instrument.

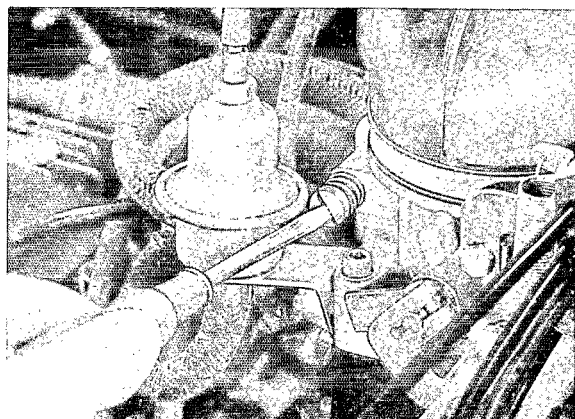

6. Remove plug in mixture control unit, between fuel distributor and air venturi.

7. Guide in adjusting wrench P 377.

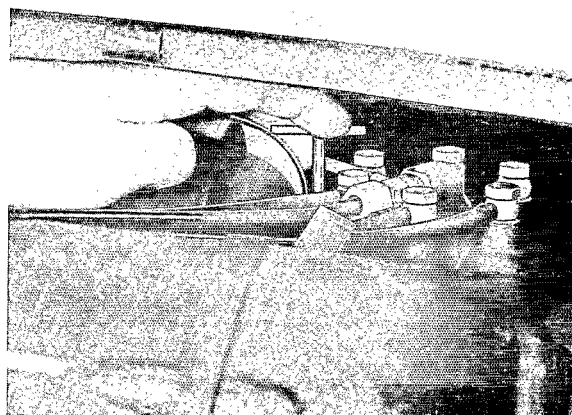

8. Turning clockwise = rich mixture
Turning counterclockwise = lean mixture

Note

- a) Always adjust CO level from lean to rich.
Example: When adjustment is too rich, first turn idle speed screw counterclockwise further than necessary and then clockwise to basic setting.
- b) Do not apply pressure on adjusting wrench during adjustments (engine would die).
- c) Turn idle speed screw very little because even small adjustments result in considerable CO emission changes.
9. Remove wrench.
10. Race engine briefly.

11. Wait until CO tester shows exhaust concentration at idle speed.

Test specifications, see page 1.1 - 1/14 e.


If necessary, repeat adjusting procedure.

12. Recheck idle speed and correct, if necessary.

13. After completion of adjustments, insert plug in mixture control unit and attach air injection hose.

ADJUSTING IDLE SPEED 911 SC - 1980 model

TOOLS

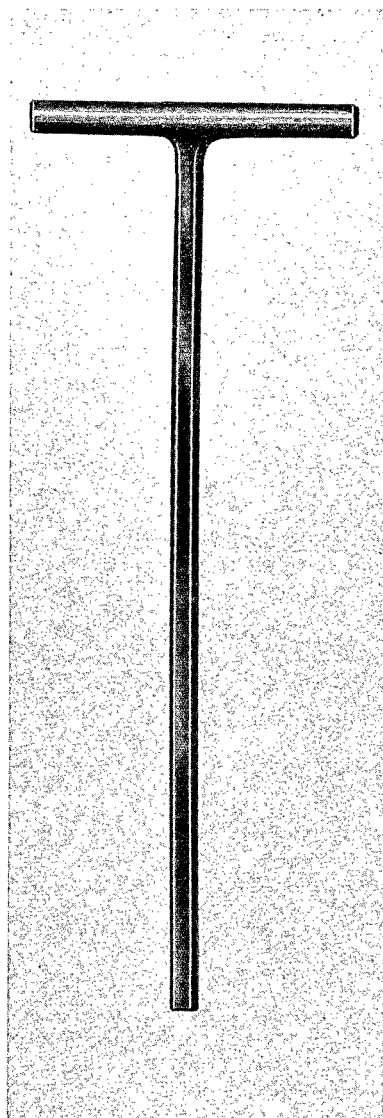

| No. | Description | Special Tool | Remarks |
|-----|------------------|--------------|---------|
| 1 | Adjusting wrench | P 377 | |

Adjusting


Note

Make sure that oil tank cap and seal fit properly prior to adjustment of the idle speed. Leaks at oil tank cap would cause incorrect measurement.

Requirements:

Engine in perfect mechanical condition and ignition timing adjusted correctly.


1. Connect exhaust pickup line on test connection of catalytic converter.

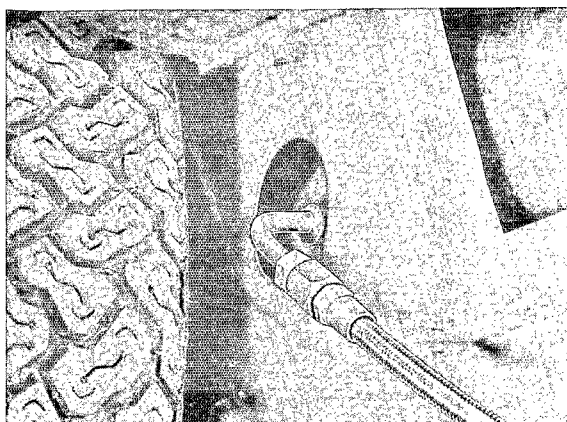

2. Run engine to operating temperature (oil temperature about 90° C. oil temperature gauge on upper end of range surrounded in white).

3. Connect CO tester according to instructions supplied with equipment.


4. Disconnect plug for oxygen sensor in engine compartment on left side.

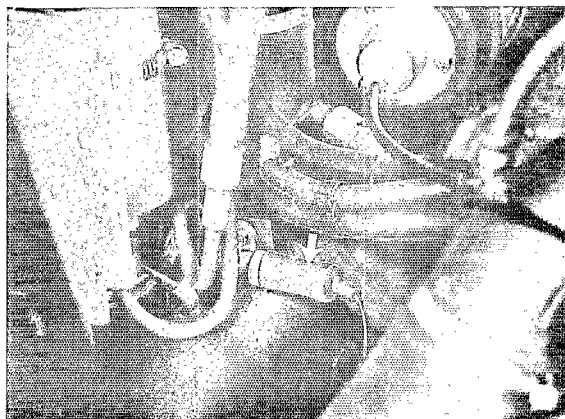

5. Turn control screw or bypass screw on throttle housing until specified speed is reached. Adjusting values on page 1.1 - 1/13.


Note

Use separate tachometer from tester or similar.

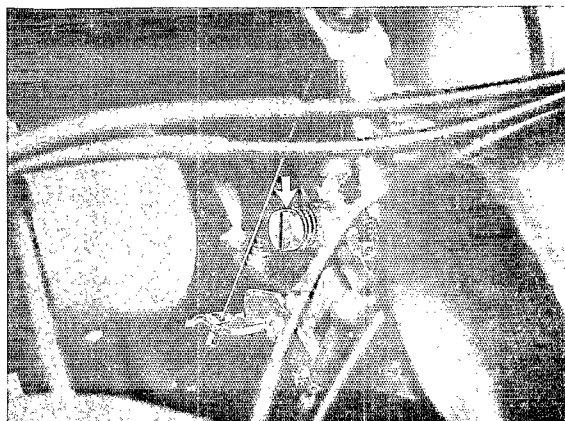

6. Remove plug in mixture control unit, between fuel distributor and venturi.

7. Insert adjusting tool P 377.

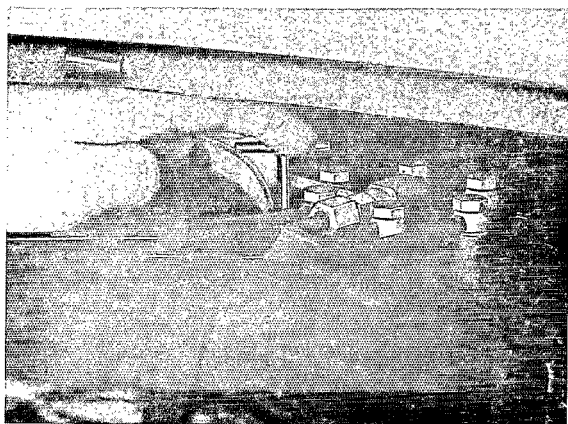

8. Turn clockwise = richer mixture.
Turn counterclockwise = leaner mixture.

10. Accelerate engine briefly.

11. Wait until CO tester shows CO concentration at idle speed. See page 1.1 - 1/14 f for adjusting values. If necessary, repeat adjusting procedures.

12. Recheck idle speed and correct, if necessary.

13. After completion of adjustments insert plug in mixture control unit and connect electric plug for oxygen sensor.

14. Coat threads of cap nut for testing connection on catalytic converter with Bosch assembly paste VS 140 16 Ft.

Note

Always conform with the following points.

a) Always adjust CO level from lean to rich.
Example: If mixture is too rich first turn idle control screw counterclockwise further than necessary and then clockwise to specification.

b) No force should be exerted on adjusting tool during adjustments (engine would die).

c) Turn control screw only minimal amount, since even a slight turn will change the CO level considerably.

9. Remove adjusting tool.

ADJUSTING IDLE 911 SC - (from 1981 Models)

Adjusting


Note

Make sure oil tank cap and seal fit properly before adjusting idle. Leaks through oil tank cap would cause incorrect readings.

Adjusting requirement:

Engine in perfect working condition and ignition timing set correctly.


1. Connect exhaust gas tap on test connection of catalytic converter.

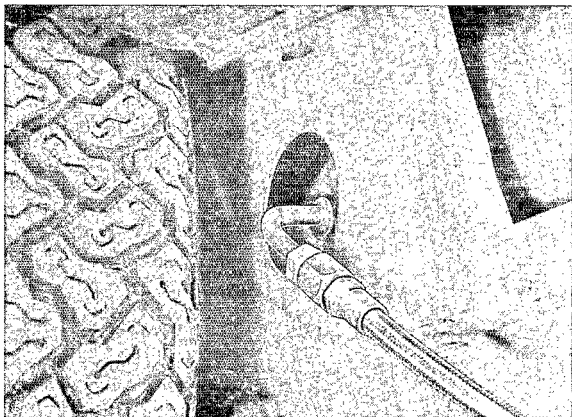

2. Run engine to operating temperature (oil temperature about 90° C/194° F; oil temperature gauge needle at upper end of field outlined in white).

3. Connect CO tester according to instructions supplied with equipment.


4. Disconnect oxygen sensor plug in engine compartment on left side.

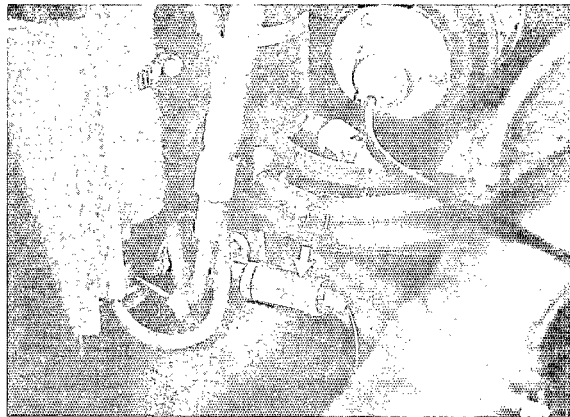

5. Turn control screw or bypass screw on throttle housing until specified engine speed is reached. See page 1.1 - 1/14 f for adjusting value.


Note

Use separate tachometer of tester or similar.

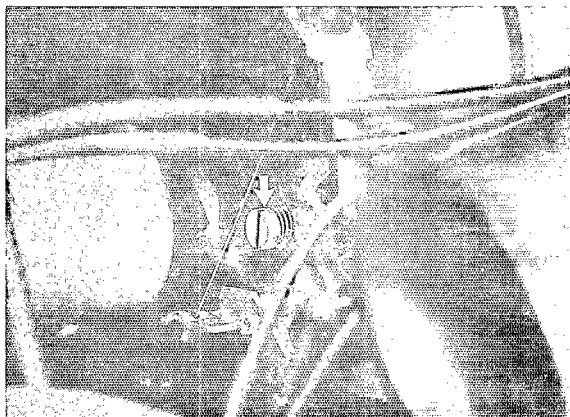

6. Check CO level. If CO level does not correspond with specified value, remove mixture control unit and remove threaded part of shear-off screw in access bore for mixture control screw (see page 2.5 - 1/8).

7. Guide in Special Tool P 377.

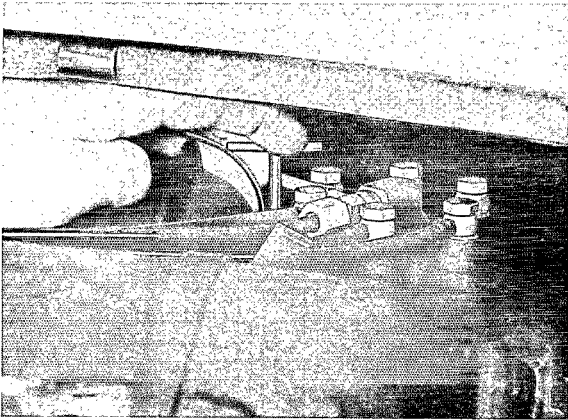

8. Turning tool clockwise = richer mixture.
Turning tool counterclockwise = leaner mixture.

Note

The following points are important.

- a) Always adjust CO level from lean to rich.
Example: If mixture is too rich, first turn idle control screw counterclockwise further than necessary and then clockwise to specified value.
 - b) Never exert force on special tool during adjustments (engine dies).
 - c) Turn control screw only very slightly, since even a slight turn will change CO content in exhaust gas considerably.
9. Remove special tool.

10. Accelerate engine briefly.

11. Wait until CO tester shows exhaust gas concentration at idle speed.
See page 1.1 - 1/14 f for adjusting value.
Repeat adjusting procedure, if necessary.

12. Recheck idle speed and, if necessary, correct.

13. After finishing adjustments screw a new shear-off screw in access bore and tighten until screw shears off. Reconnect oxygen sensor plug.

14. Coat threads of cap nut for test connection on catalytic converter with Bosch VS 140 16 Ft or Optimoly HT grease.

Getriebe
Transmission
Boîte de Vitesses
Cambio

3

3

3

3

3

3

3

3

3

3

CONTENTS

0 - INFORMATION, DESCRIPTION, TECHNICAL DATA

0.0 Information

Transmission, 4 and 5 Speeds

Sportomatic

0.1 Description


| | |
|---|------------|
| Transmission, 5 Speeds, Operation | 0.1 - 1/1 |
| Transmission, 5 Speeds, Power Transfer | 0.1 - 1/6 |
| Transmission with Oil Pump, Description | 0.1 - 1/7 |
| Transmission with Oil Pump, General Instruction | 0.1 - 1/9 |
| Typ 915, Transmission (1974 model) | 0.1 - 1/13 |
| Typ 915, Transmission (1975 model) | 0.1 - 1/14 |
| Typ 915, Transmission (1976 model) | 0.1 - 1/15 |
| Sportomatic, General | 0.1 - 2/1 |
| Sportomatic, Power Transfer | 0.1 - 2/7 |
| Typ 925, Sportomatic Transmission (1974 model) | 0.1 - 2/9 |
| Typ 925, Sportomatic Transmission (1975 model) | 0.1 - 2/11 |
| Typ 925, Sportomatic Transmission (1976 model) | 0.1 - 2/15 |
| Sportomatic 1977 Models - General Information | 0.1 - 2/16 |

0.2 Technical Data

| | |
|--|------------|
| Transmission Diagrams, Manual Transmission | 0.2 - 1/1 |
| Tightening Torques, Manual Transmission | 0.2 - 1/3 |
| Tightening Torque Values, Transmission | 0.2 - 1/4 |
| General Specifications, Transmission | 0.2 - 1/5 |
| Tolerances and Wear Limits | 0.2 - 1/7 |
| Transmission Diagrams, Manual Transmissions (1974 model) | 0.2 - 1/9 |
| General Specifications, Transmission (1974 model) | 0.2 - 1/11 |
| Transmission Diagrams, Manual Transmissions (1975 model) | 0.2 - 1/13 |
| General Specifications, Transmission (1975 model) | 0.2 - 1/15 |
| General Specifications, Transmission (1976 model) | 0.2 - 1/17 |
| Transmission Diagram 915/44 | 0.2 - 1/18 |
| Transmission Diagram 915/49 | 0.2 - 1/19 |
| Transmission Diagram, 925/01 Sportomatic Transmission | 0.2 - 2/1 |
| General Data - Sportomatic Transmission | 0.2 - 2/2 |
| Tightening Torques, Sportomatic Transmission | 0.2 - 2/3 |
| Transmission Diagram, 925/02 Sportomatic Transmission | 0.2 - 2/5 |

| | |
|---|------------|
| General Specifications, Sportomatic (1974 model) | 0.2 - 2/6 |
| Transmission Diagram, 3 Speed Sportomatic 925/10 (1975 model) | 0.2 - 2/7 |
| General Specifications, 3 Speed Sportomatic 925/10 (1975 model) | 0.2 - 2/8 |
| General Specifications, 3 Speed Sportomatic 925/09, 012, 013 | 0.2 - 2/9 |
| Transmission Diagram, 3 Speed Sportomatic (1976 model) | 0.2 - 2/10 |
| 0.3 Special Tools | |
| Special Tools, Sportomatic Transmission | 0.3 - 1/1 |
| 3 - TRANSMISSION, 5-SPEED MANUAL | |
| 3.1 Transmission, disassembling and assembling | |
| Transmission, removing and installing | 3.1 - 1/1 |
| Seal Ring for drive Shaft: dismantel and reinstall | 3.1 - 1/15 |
| Selector Forks, adjust | 3.1 - 2/1 |
| Transmission Front Cover, disassembling and assembling | 3.1 - 3/1 |
| Oil Pump in Front Cover, disassembling and assembling | 3.1 - 3/5 |
| Gear Housing, disassembling and assembling | 3.1 - 4/1 |
| Transmission Housing, disassembling and assembling | 3.1 - 5/1 |
| Oil Lines for Supplemental Lubrication System, remove and install | 3.1 - 5/9 |
| Transmission Housing with Guide Tube for Throwout Bearing | 3.1 - 5/11 |
| Transmission Case with Bolted Guide Tube for Release Bearing | 3.1 - 5/19 |
| Disassembling and assembling Transmission Case with Servo Clutch (1977 model) | 3.1 - 5/25 |
| Input Shaft, disassembling and assembling | 3.1 - 6/1 |
| Pinion Shaft, disassembling and assembling | 3.1 - 7/1 |
| Synchronization, disassembling and assembling | 3.1 - 8/1 |
| Disassembling and Assembling Synchronization (1977 Models) | 3.1 - 8/5 |
| 4 - TRANSMISSION, SPORTOMATIC | |
| 4.1 Transmission, disassembling and assembling | |
| Torque Converter Housing, disassembling and assembling | 4.1 - 1/1 |
| Transmission, removing and installing | 4.1 - 2/1 |
| Transmission Front Cover, disassembling and assembling | 4.1 - 3/1 |
| Intermediate Plate, disassembling and assembling | 4.1 - 4/1 |
| Input Shaft (3 Speed Sportomatic) disassembling and assembling | 4.1 - 5/1 |
| Pinion Shaft (3 Speed Sportomatic) disassembling and assembling | 4.1 - 6/1 |
| Checking Clutch Play (1976 model) | 4.2 - 1/1 |
| Checking Control Valve Adjustment (1976 model) | 4.2 - 2/1 |
| 5 - DIFFERENTIAL | |
| 5.1 Differential, with manual transmission | |
| Differential, removing and installing | 5.1 - 1/1 |
| Differential, disassembling and assembling | 5.1 - 2/1 |
| Differential with electronical speedometer | 5.1 - 2/6 |
| Tools | 5.1 - 2/7 |
| Disassembling and Assembling Instructions | 5.1 - 2/10 |
| Ring and Pinion Gear, adjusting - General Information | 5.1 - 4/1 |
| Ring and Pinion Gear, adjusting | 5.1 - 5/1 |
| Pinion Shaft, adjust with universal Setting Gage VW 385 | 5.1 - 5/11 |
| 5.2 Differential, with Sportomatic Transmission | |
| Ring and Pinion Gear, adjusting - General Information | 5.2 - 1/1 |
| Ring and Pinion Gear, adjusting | 5.2 - 2/1 |


FOUR AND FIVE SPEED TRANSMISSION (TYPE 915)

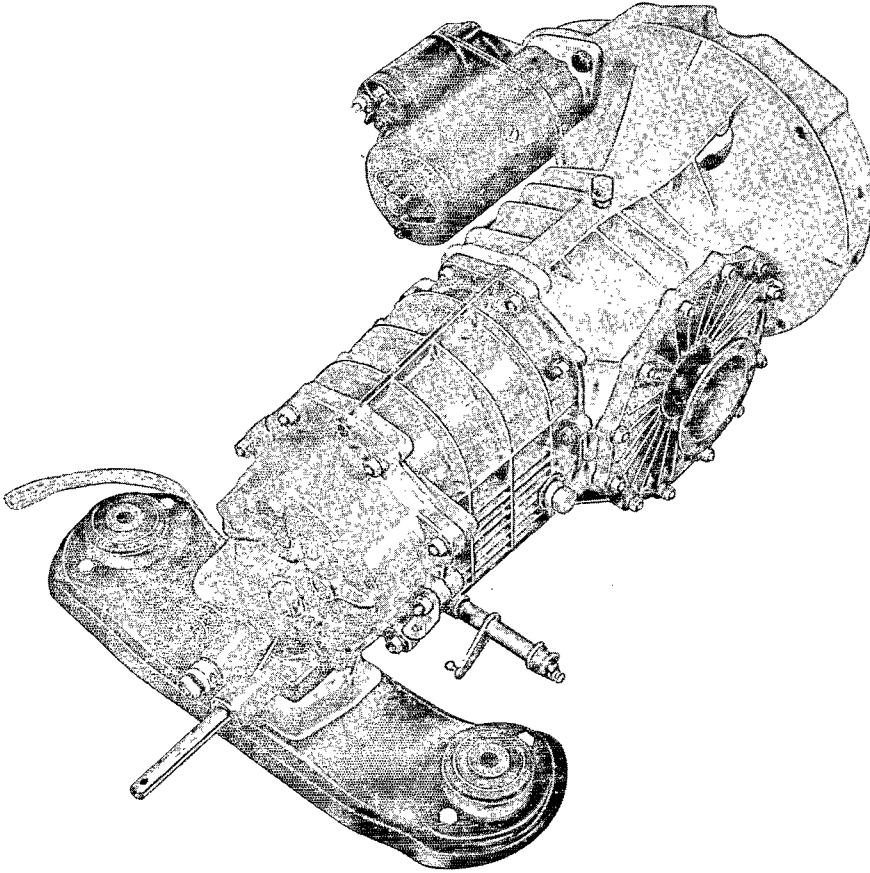

Beginning with 1972 models, all Type 911 vehicles are equipped with the new, reinforced 4-speed transmission. The 5-speed transmission is optional.

DESIGN AND FUNCTION

The five forward speeds and reverse are arranged in a double "H" shift pattern.

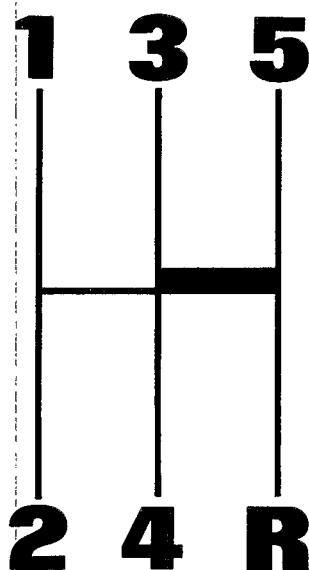

1st speed: left forward

2nd speed: left back


3rd speed: straight forward

4th speed: straight back

5th speed: press right overcoming spring detent, then straight forward

Reverse: press right overcoming spring detent, then straight back

Clutch pedal must be fully depressed and selected gear fully engaged.

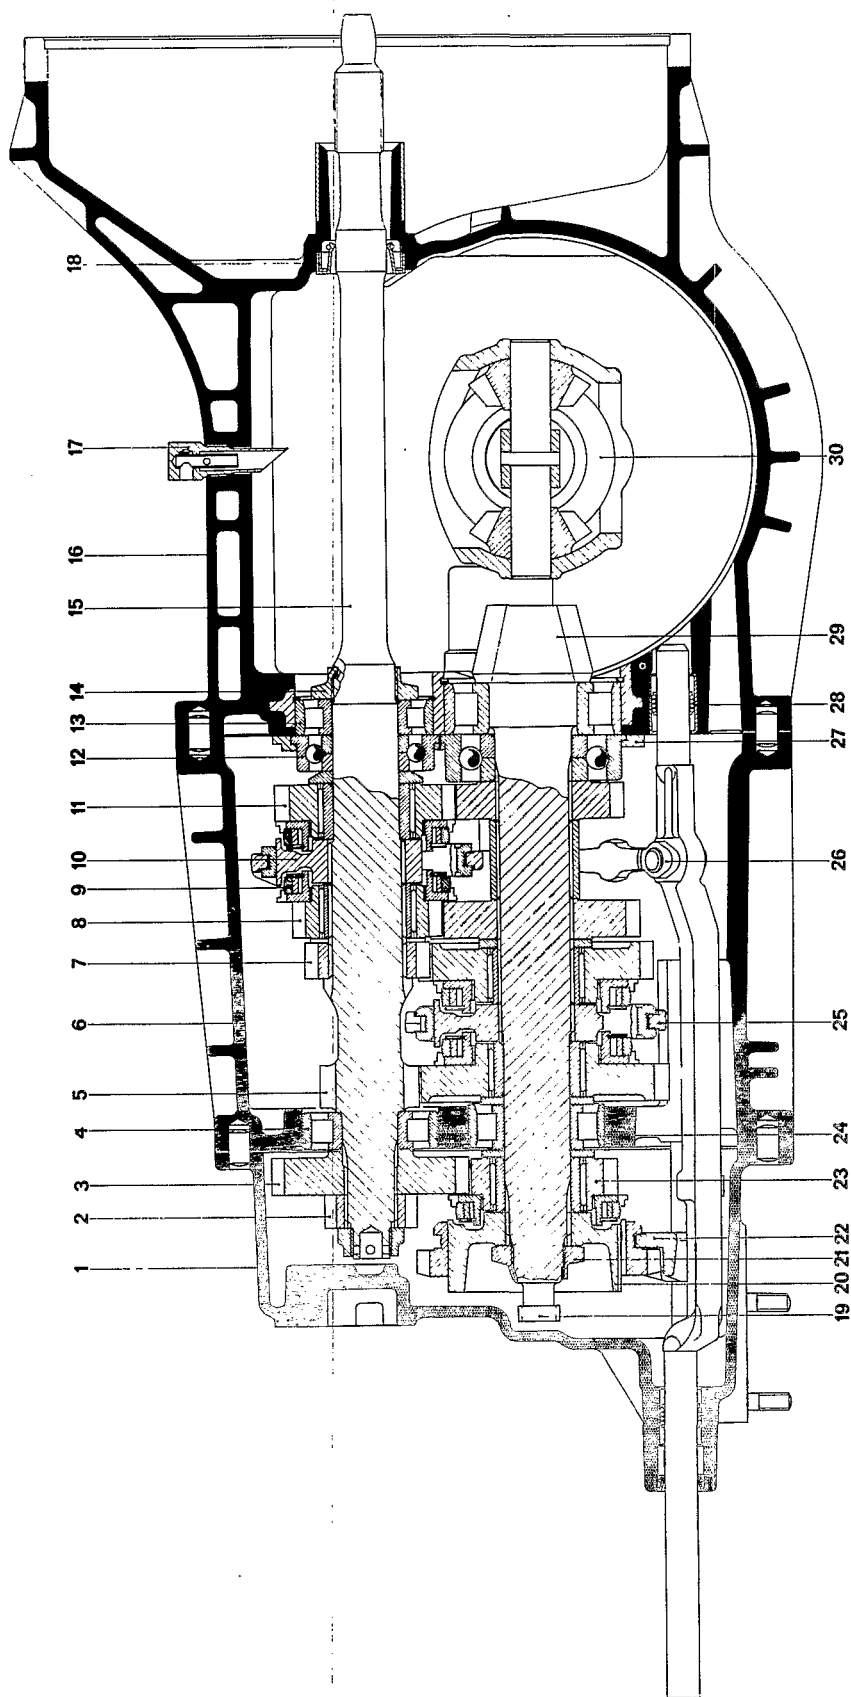


- | | |
|--------------------------------|---|
| 1 - Transmission front cover | 16 - Transmission housing |
| 2 - Reverse, Gear I | 17 - Breather |
| 3 - 5th speed, Gear I, fixed | 18 - Seal |
| 4 - Roller bearing | 19 - Speedometer drive, Gear I |
| 5 - 1st speed, Gear I, fixed | 20 - Spider, 5th and reverse speeds |
| 6 - Gear housing | 21 - Flange nut |
| 7 - 2nd speed, Gear I, fixed | 22 - Shift fork, 5th and reverse speeds |
| 8 - 3rd speed, Gear I, free | 23 - 5th speed, Gear II, free |
| 9 - Synchronizing ring | 24 - Roller bearing |
| 10 - Spider (Synchro hub) | 25 - Shift fork, 1st and 2nd speeds |
| 11 - 4th speed, Gear I, free | 26 - Selector shaft |
| 12 - Pinion shaft ball bearing | 27 - Bearing retaining plate |
| 13 - Roller bearing | 28 - Ball sleeve |
| 14 - Flange nut | 29 - Pinion shaft |
| 15 - Input shaft | 30 - Differential |

POWER FLOW


In all gears, power flow is from the input shaft to the pinion shaft through the respectively engaged gear pair. The engaging and synchronizing parts for 1st, 2nd, and 5th gears are on the pinion shaft, and those for the 3rd and 4th gear are on the input shaft.

Torque transfer occurs only through the respective gear pair. Engagement of the 1st, 2nd, and 5th gears is made by repositioning the shifting sleeve or sliding gear located on the pinion shaft, and that of 3rd and 4th gears by one located on the input shaft.

Power flow in reverse gear is from the input shaft through the reverse idler gear, the sliding gear, to the pinion shaft.

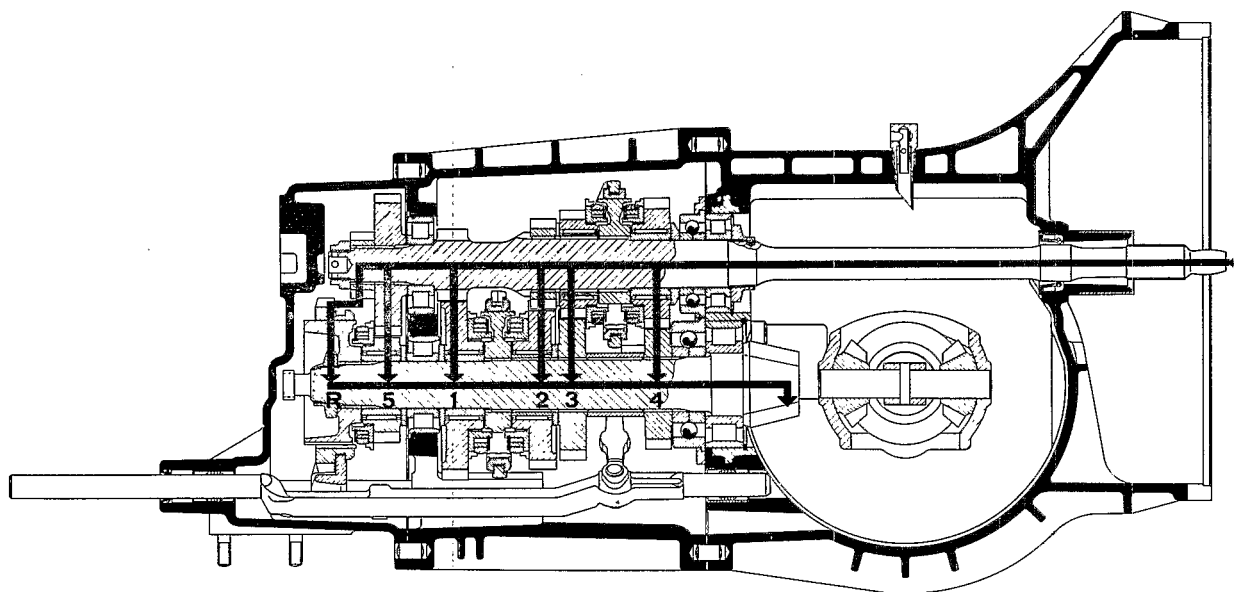

TYPE 915 TRANSMISSION WITH OIL PUMP

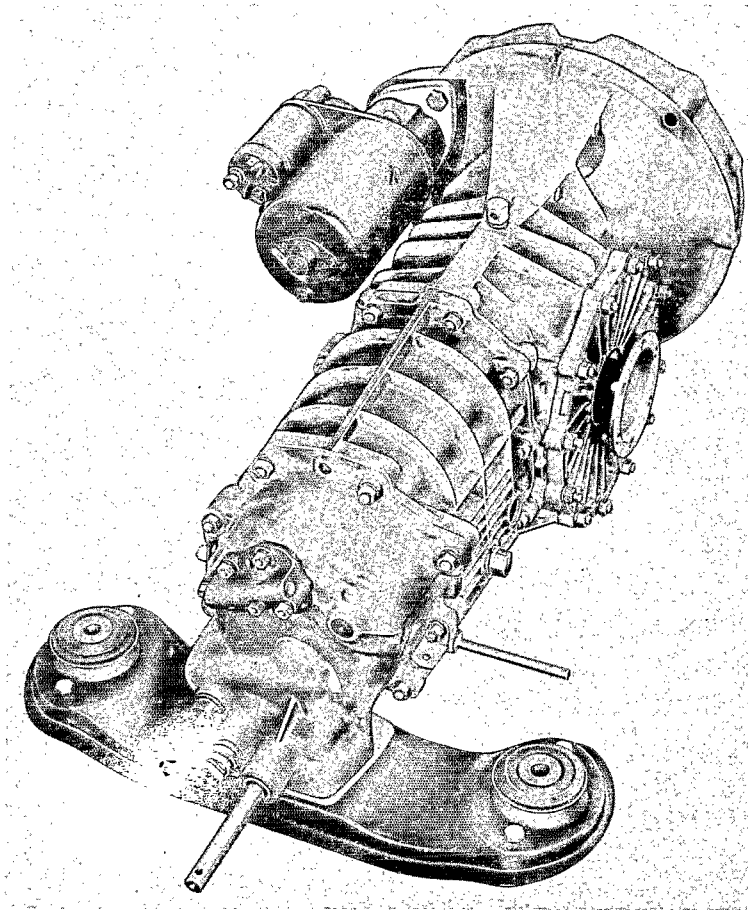

Carrera 2.7 vehicles are equipped with Type 915/08 and 915/18 transmissions.

These transmissions are identical in design and servicing to transmissions used in 1972 models. However, due to the increased power and torque of the 2.7 liter engines, they are equipped with an oil pump lubrication system.


DESCRIPTION OF THE OIL PUMP LUBRICATION SYSTEM

When the car is started, the input shaft sets the oil pump in motion. The pump draws oil from the transmission oil sump through a pickup tube and forces it through the passages in the pump cover and into the pressure lines.

Pressure created by the oil pump forces the transmission oil to pass through discharge nozzles which direct the oil spray to the lubrication points. Oil not used for lubrication cools the working parts and drains back into the transmission oil sump.

A pressure relief valve opens at a pressure of about 3, 4 atmospheres if a malfunction should occur in the oil supply system, such as a plugged pressure line. The oil then drains into the transmission oil sump.

The constant circulation of the transmission oil and spraying of the bearings and gears results in improved cooling and lubrication.

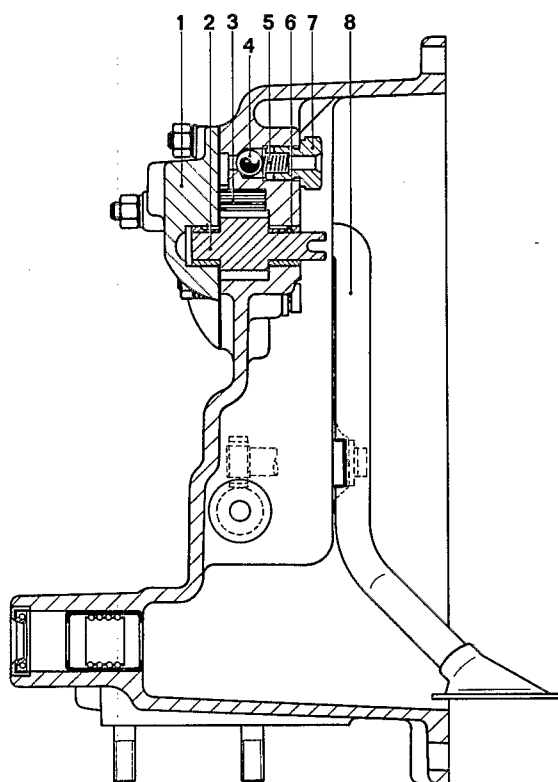


- 1 - Oil pump cover
- 2 - Oil pump gear I
- 3 - Oil pump II
- 4 - Ball for pressure relief valve

- 5 - Spring for pressure relief valve
- 6 - Bushing
- 7 - Plug for pressure relief valve
- 8 - Pickup tube


GENERAL INSTRUCTIONS FOR DISASSEMBLING AND REASSEMBLING OF TRANSMISSION WITH OIL PUMP

1. Disassembly and reassembly of a transmission with oil pump is the same as that of a unit without the pump because the pressure line connections are of the slip-on type.
2. Oil the O-rings lightly when installing the pickup tube and pressure lines since otherwise damage may occur.
3. The gear housing should be assembled with the pressure line bolted in place. The pressure line must pass through the hole in shift fork for 3rd and 4th speed.
4. When installing the transmission front cover make sure that the coupling pin in the input shaft engages the coupling slot in oil pump gear I. If necessary, turn the input shaft slightly and push cover into place.
5. Work procedures differing from those applicable to transmissions in 1972 models, such as disassembly and reassembly of the oil pump, are described on pages that follow.

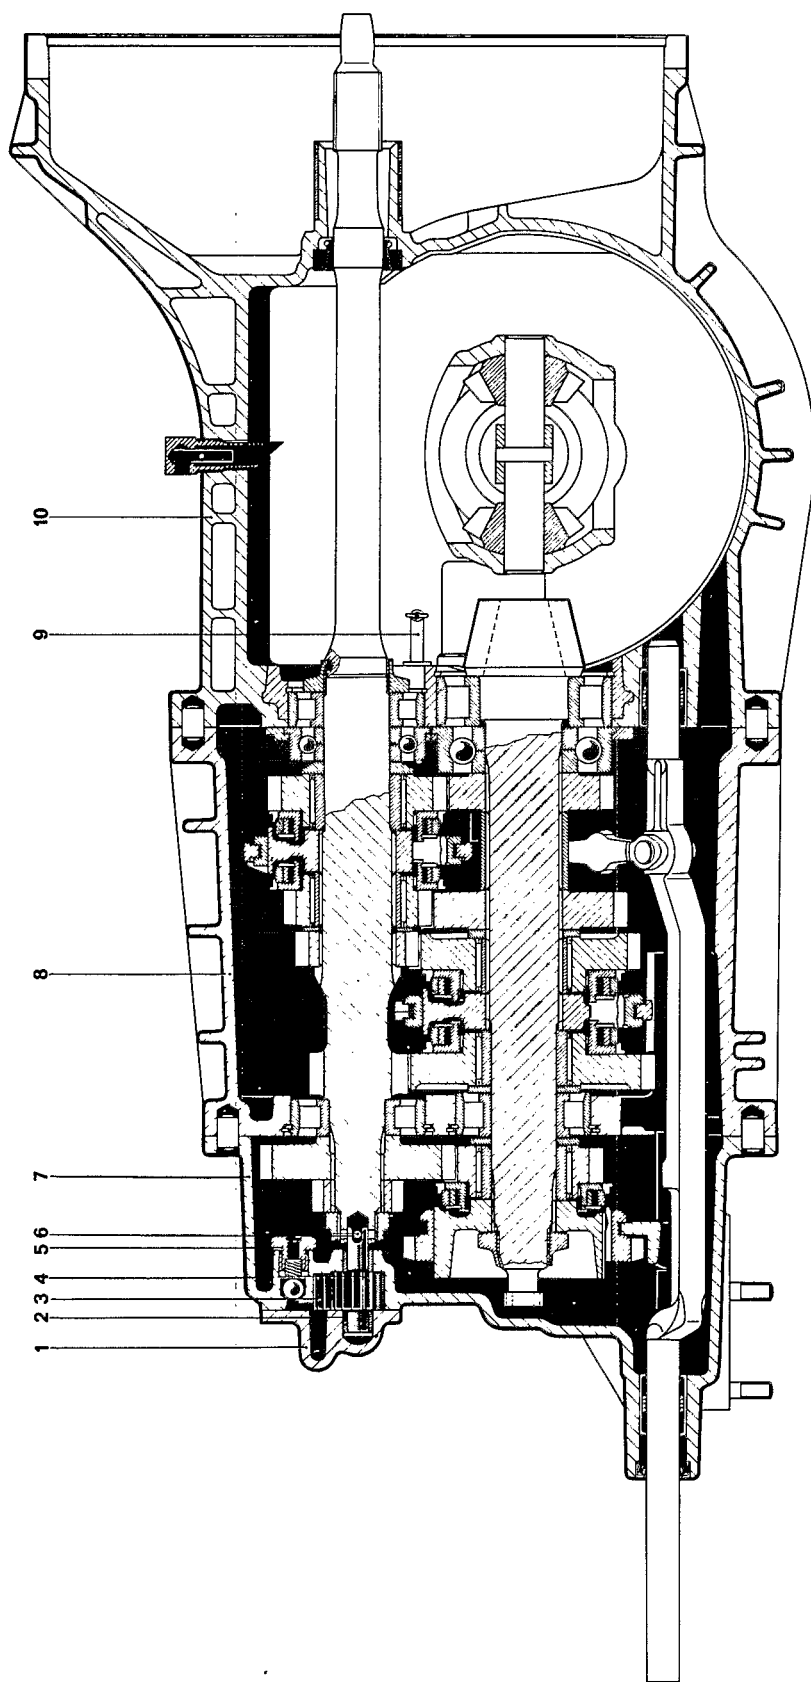

-
- 1 - Oil pump cover
 - 2 - Bushing
 - 3 - Oil pump gear II
 - 4 - Oil pump gear I
 - 5 - Plug for pressure relief valve
 - 6 - Oil pump coupling pin
 - 7 - Transmission front cover
 - 8 - Gear housing
 - 9 - Pressure line
 - 10 - Differential housing

TYPE 915 TRANSMISSION (1974 MODEL)

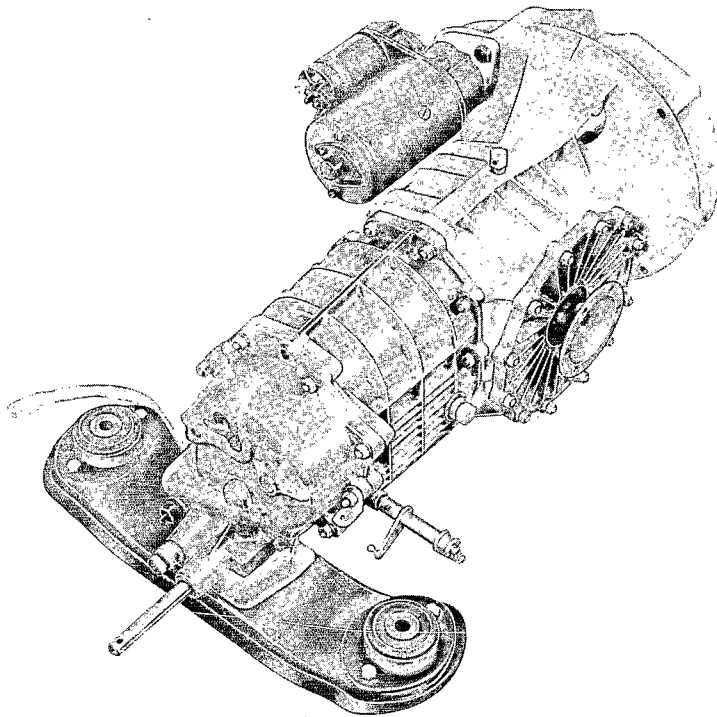

The following transmission versions are installed from 1974 models on:

4-speed transmission, 915/16 = S

5-speed transmission, 915/06 = SW

S = standard equipment

SW = special order

These transmission versions differ from those used in 1973 models only in the aspect of gear ratios (see Technical Data, page 0.2 - 1/11).

Manual transmission 915 (1975 Models)


The following transmissions are installed.

| Transmission Type | No. of Gears | Application |
|-------------------|--------------|----------------|
| 915/40 | 5 | 911 S, Carrera |
| 915/45 | 4 | 911 S, Carrera |

All transmission types are based on those of 1974 models and only differ slightly from each other.

The 3rd and 4th or 4th and 5th gears as well as the rear axle ratios have been changed on the types 915/45 and 915/40 (refer to technical data on page 0.2 - 1/15). The shift and guide sleeves have also been reinforced, and the clutch release lever modified.

MANUAL TRANSMISSION 915 (1976 MODEL)

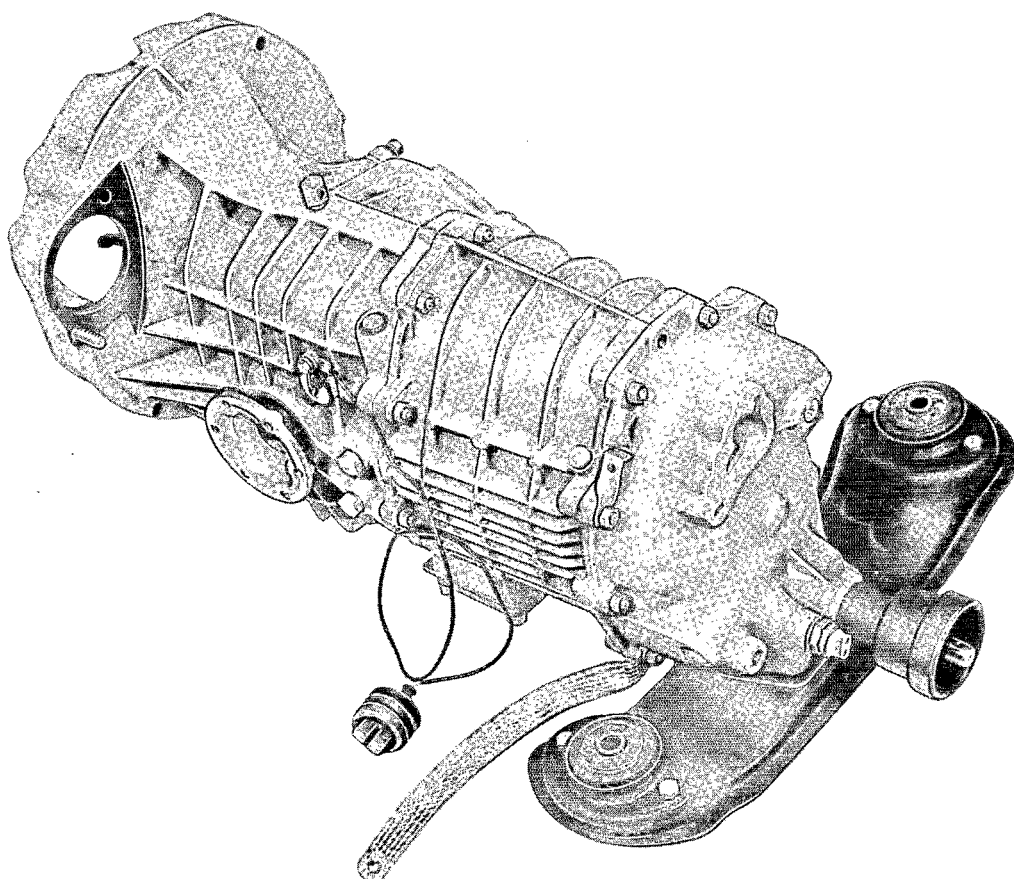

The following transmission is available for the 1976 Model.

5-speed transmission 915/44

This transmission model differs from the 1975 model by a new guide tube for the clutch release bearing, an easy to remove drive shaft seal and an electronic speedometer transmitter.

MANUAL TRANSMISSION 915 (1976 MODEL)

The following transmission is available for the 1976 Model.

| Transmission | No. of Speeds | For Model |
|--------------|---------------|-----------|
| 915/44 | 5 | 911 S |

MANUAL TRANSMISSION 915 (1977 Model)

For 1977 Models the following transmission type is installed.

5-speed transmission 915/61 with auxiliary clutch spring

This transmission differs from the 1976 Model with modified synchronizers for 1st and 2nd gears, an asymmetric tooth profile of the clutch body for 1st gear and a modified operating and guide sleeve for 1st/2nd gear.

MANUAL TRANSMISSION 915 (1978/79 Models)

For the 1978/79 models the

5-speed transmission 915/61

has a silumin case and a modified clutch release lever.


MANUAL TRANSMISSION 915 (1980/81 Models)

The following transmission type is installed in the 1980/81 models:

5-speed transmission 915/63

This transmission differs from those in 1978/1979 models only in the modified 2nd gear ratio.

SPORTOMATIC 925

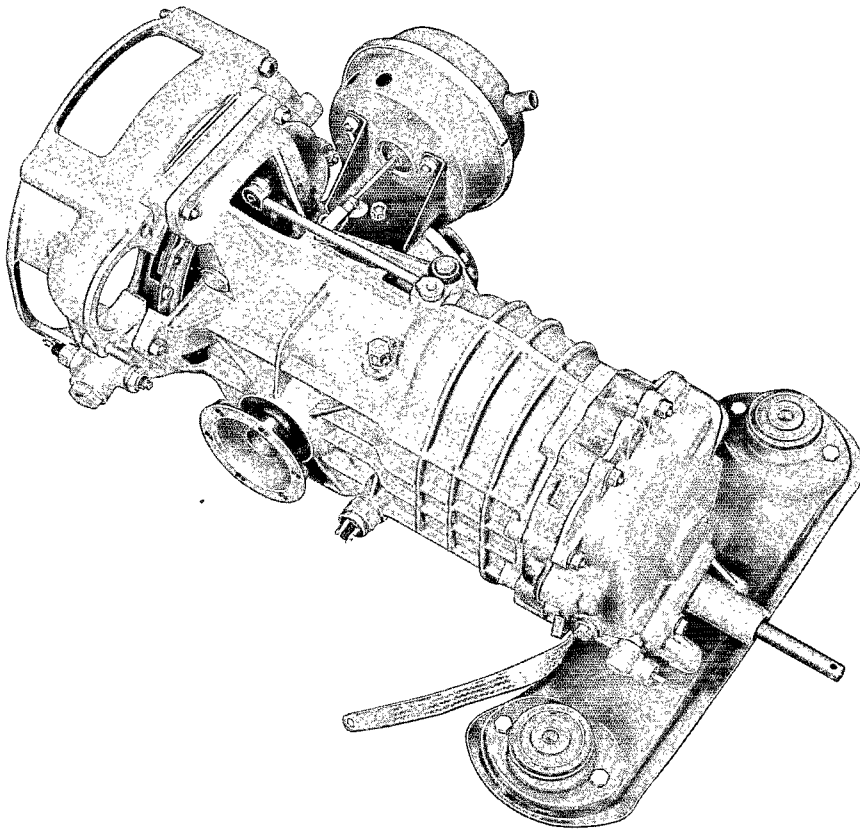


Beginning with Sept. 24, 1971 production, the Sportomatic transmission for 911 vehicles have been modified. The modified transmission have the following designations:


| | |
|-------------|----------|
| 911 T and E | 925/ 00 |
| 911 S | 925/ 01. |

Repair procedures for these transmission differ only slightly for those contained in the 911 Workshop Manual, Volume I which applied to models thru 1971.

Only those repair procedures and service information which differ are included in this volume of the workshop manual.

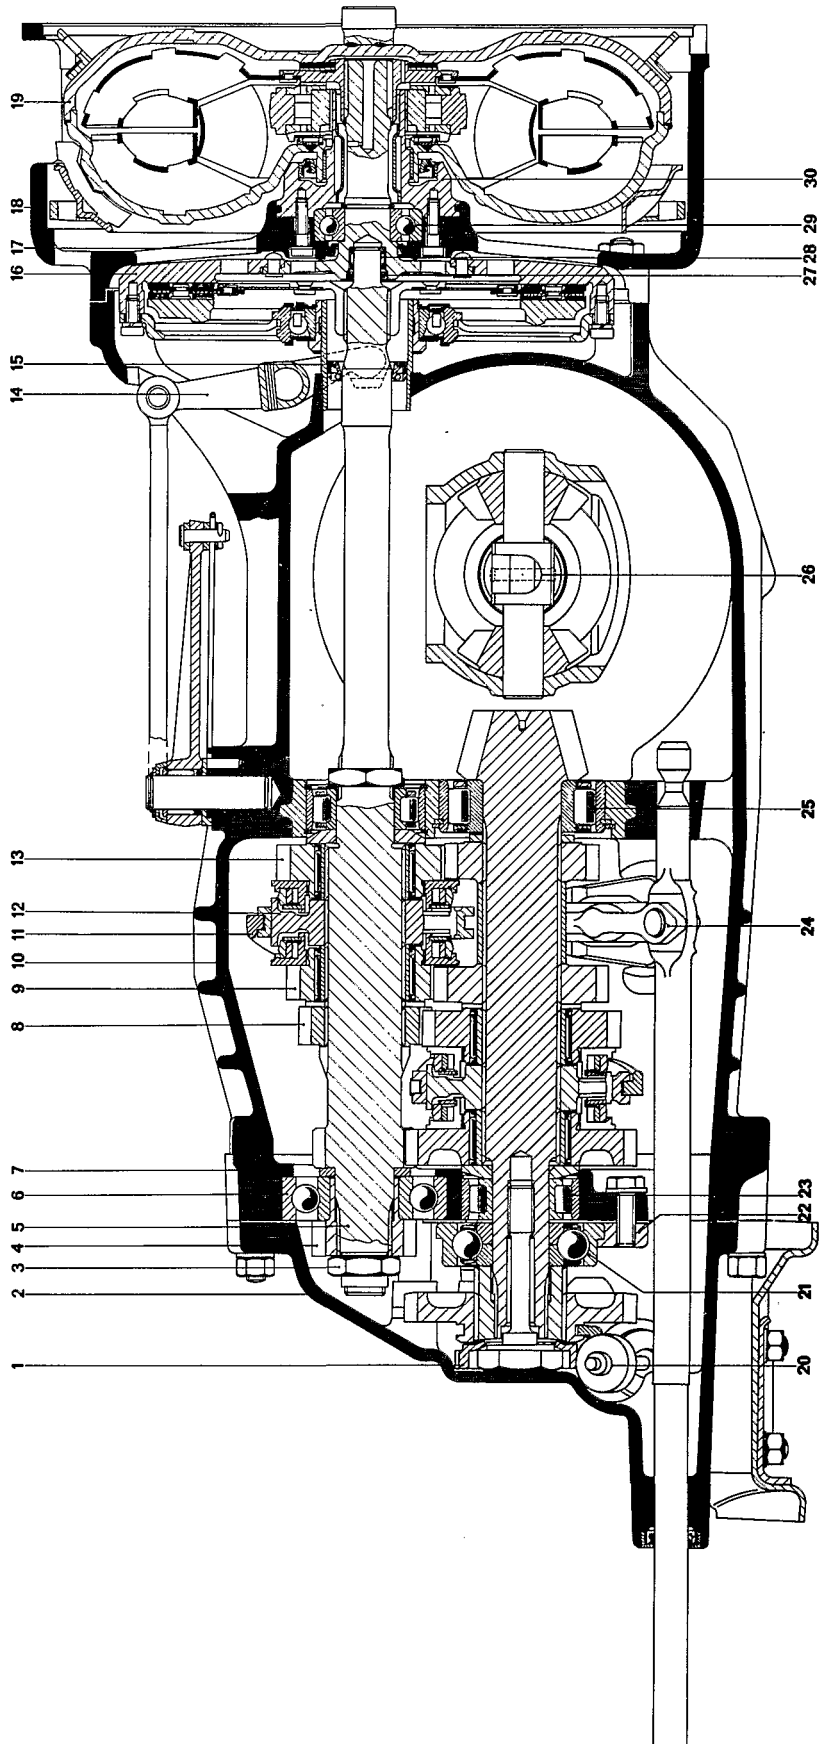

- | | | | |
|------|--------------------------------|------|------------------------------|
| 1 - | Speedometer drive | 16 - | Clutch plate / turbine shaft |
| 2 - | Front cover | 17 - | Oil seal |
| 3 - | Flange nut | 18 - | Torque converter housing |
| 4 - | Gear I, reverse gear | 19 - | Torque converter |
| 5 - | Input shaft | 20 - | Speedometer gear shaft |
| 6 - | Ball bearing race | 21 - | Four point ball bearing |
| 7 - | Intermediate plate | 22 - | Clamping plate |
| 8 - | Gear I, 2nd gear | 23 - | Roller bearing |
| 9 - | Gear I, 3rd gear | 24 - | Selector shaft |
| 10 - | Transmission housing | 25 - | Roller bearing |
| 11 - | Shift fork, 3rd and 4th gear | 26 - | Anchor block |
| 12 - | Shift sleeve, 3rd and 4th gear | 27 - | Oil seal |
| 13 - | Gear I, 4th gear | 28 - | Needle bearing sleeve |
| 14 - | Throwout fork | 29 - | Ball bearing |
| 15 - | Oil seal | 30 - | Stator support |

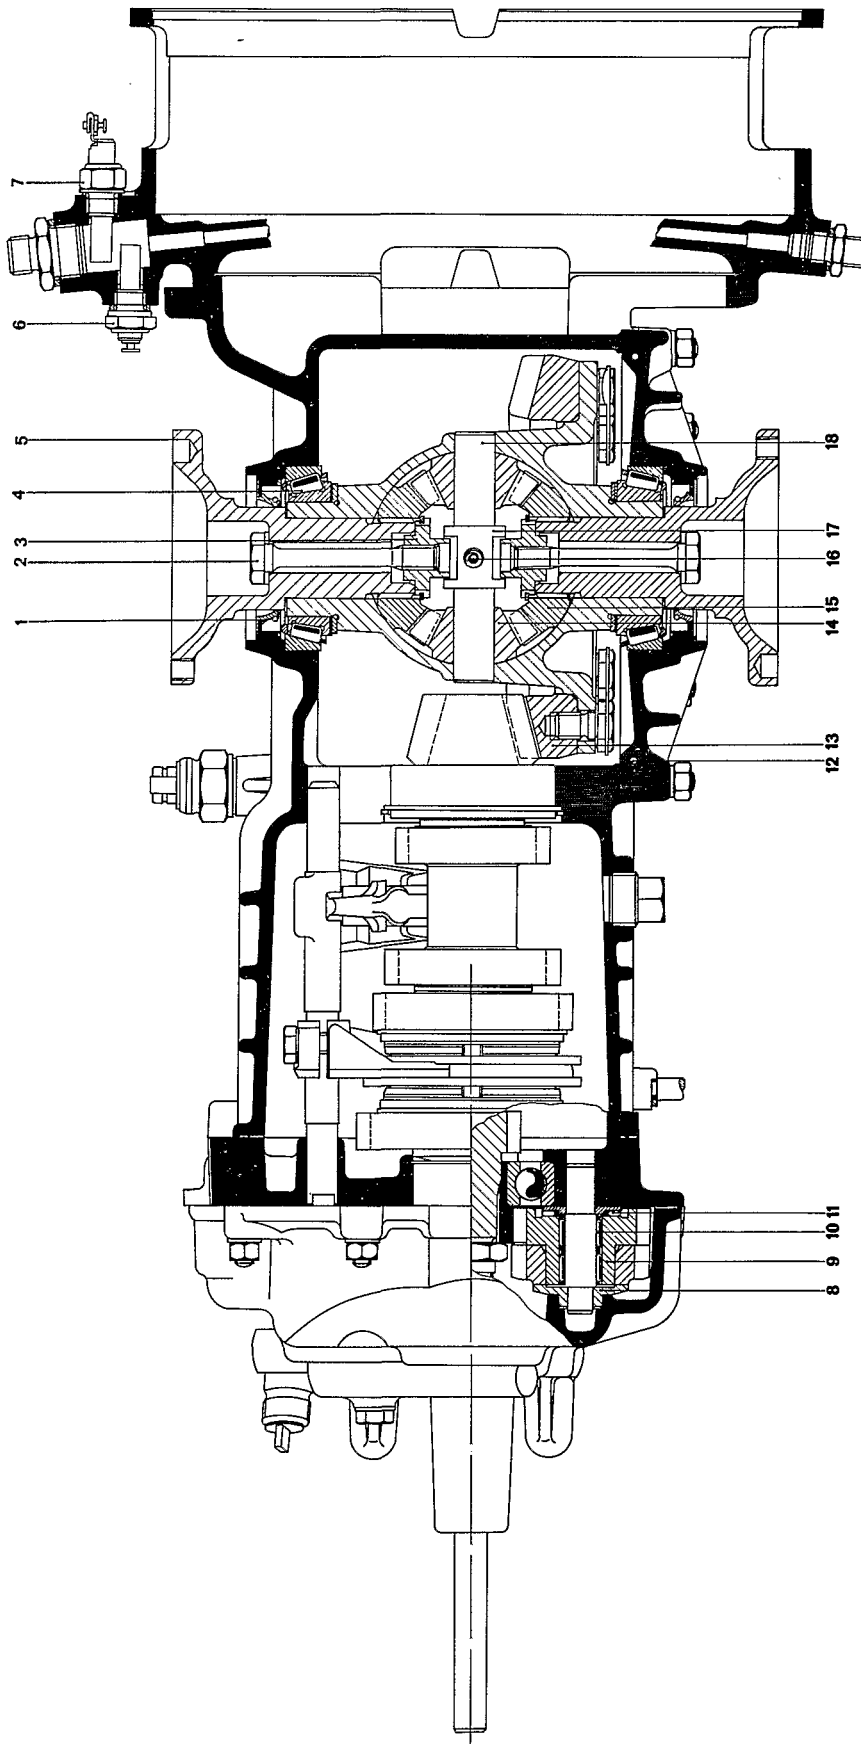


- | | |
|------------------------------|--------------------------------|
| 1 - Oil seal | 10 - Needle bearing cage |
| 2 - Expansion bolt | 11 - Axial needle bearing cage |
| 3 - Threaded stud | 12 - O-ring |
| 4 - Tapered roller bearing | 13 - Ring gear |
| 5 - Axle flange | 14 - Differential spider gear |
| 6 - Temperature sending unit | 15 - Differential side gear |
| 7 - Temperature switch | 16 - Roll pin |
| 8 - Thrust washer | 17 - Anchor piece |
| 9 - Reverse idler gear | 18 - Shaft |

Power Transfer


Power transfer from the engine through the torque converter and mechanical clutch is same in all driving ranges.

In ranges L and D, the power is transferred from the fixed gears on the input shaft, through the synchronization components and free-wheeling gears on the pinion shaft, to the pinion shaft. In ranges D3 and D4, the power transfers from the input shaft, through the synchronization components and free-wheeling gears, to the fixed gears on the pinion shaft. Reduction is accomplished by gears engaged in given driving range.

Reverse gear reduction is over two stages. The power flows from the input shaft, through the intermediate shaft, to the pinion.

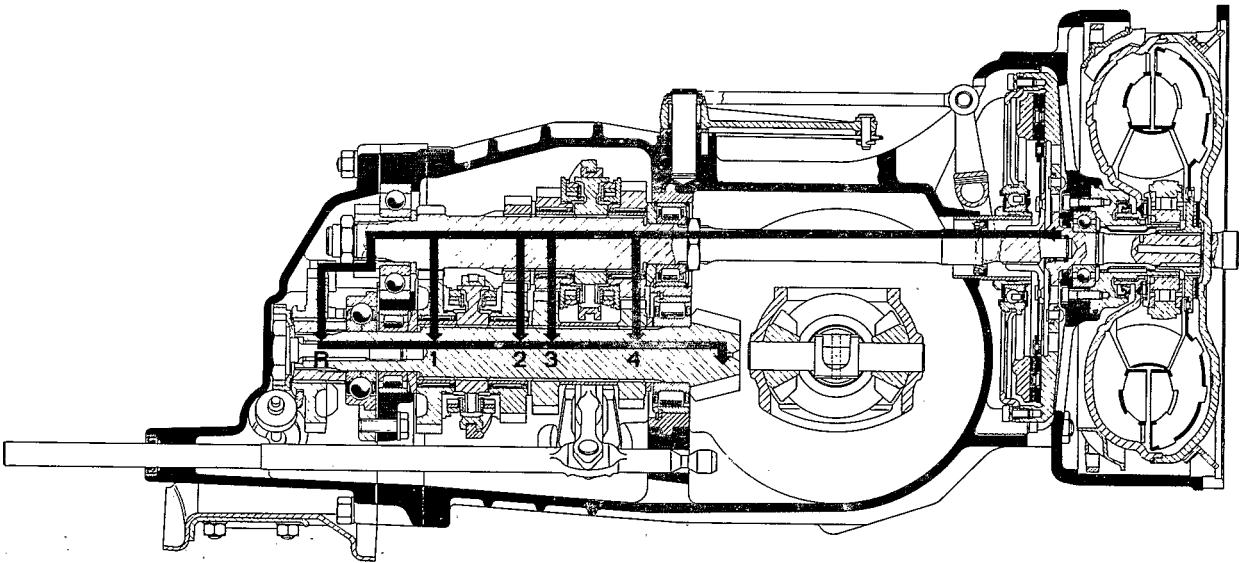


TYPE 925 SPORTOMATIC TRANSMISSION (1974 MODEL)

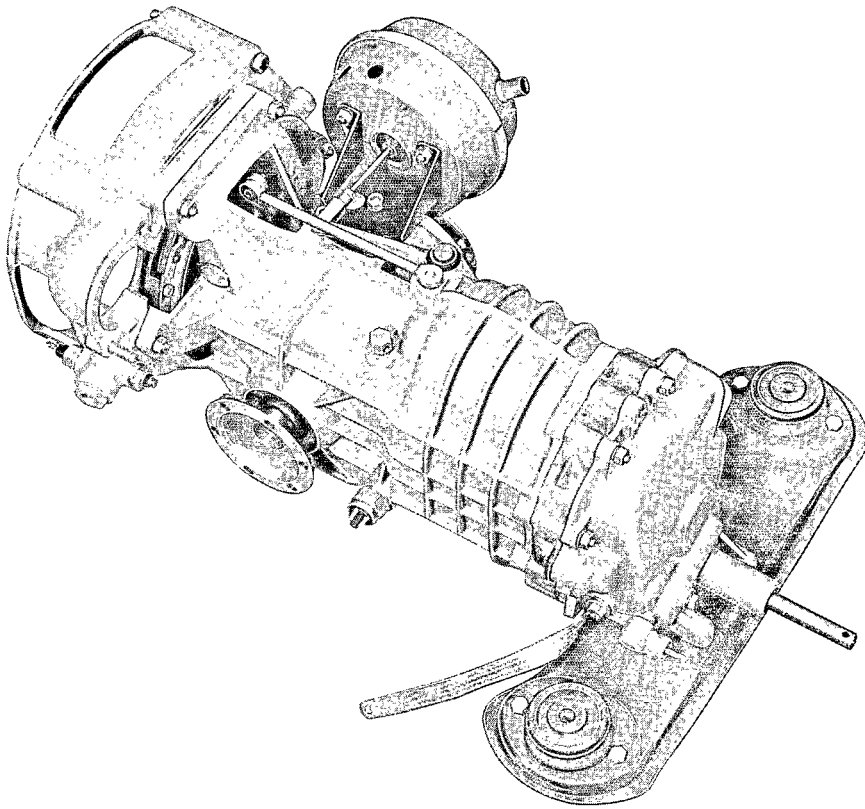


Beginning with 1974 models, Type 911 and 911 S vehicles can optionally be equipped with the Type 925/02 transmission.

This transmission version differs from that used in 1973 models only in the aspect of changed torque converter ratio (see Technical Data, page 0.2 - 2/6).

SPORTOMATIC 925 (1975 Models)

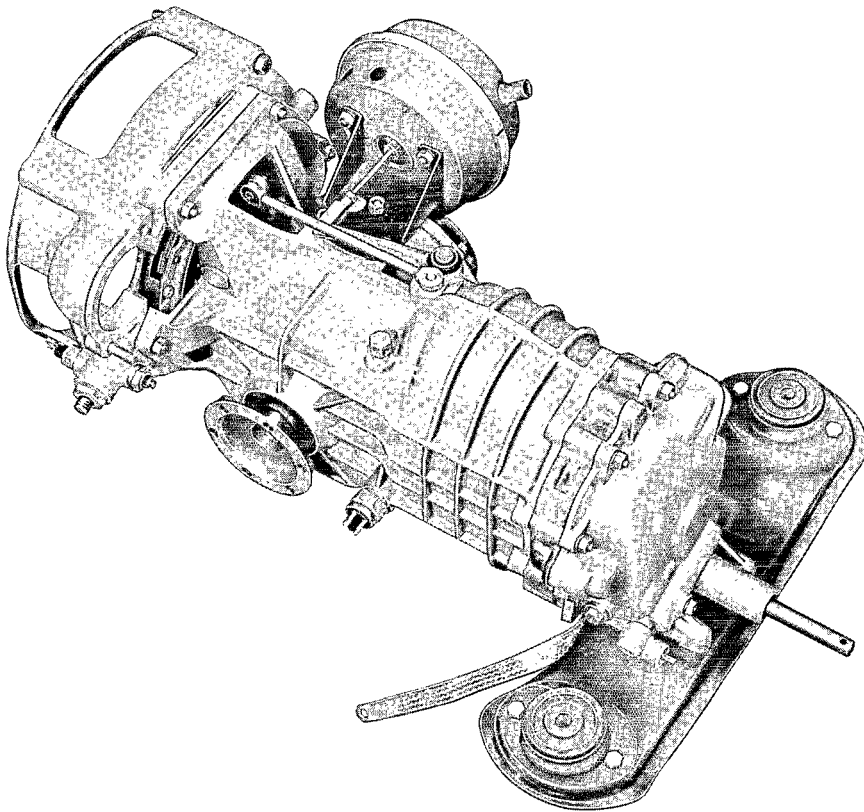


All 1975 models are available with a 3-speed sportomatic transmission (type 925/10) as optional extra equipment.

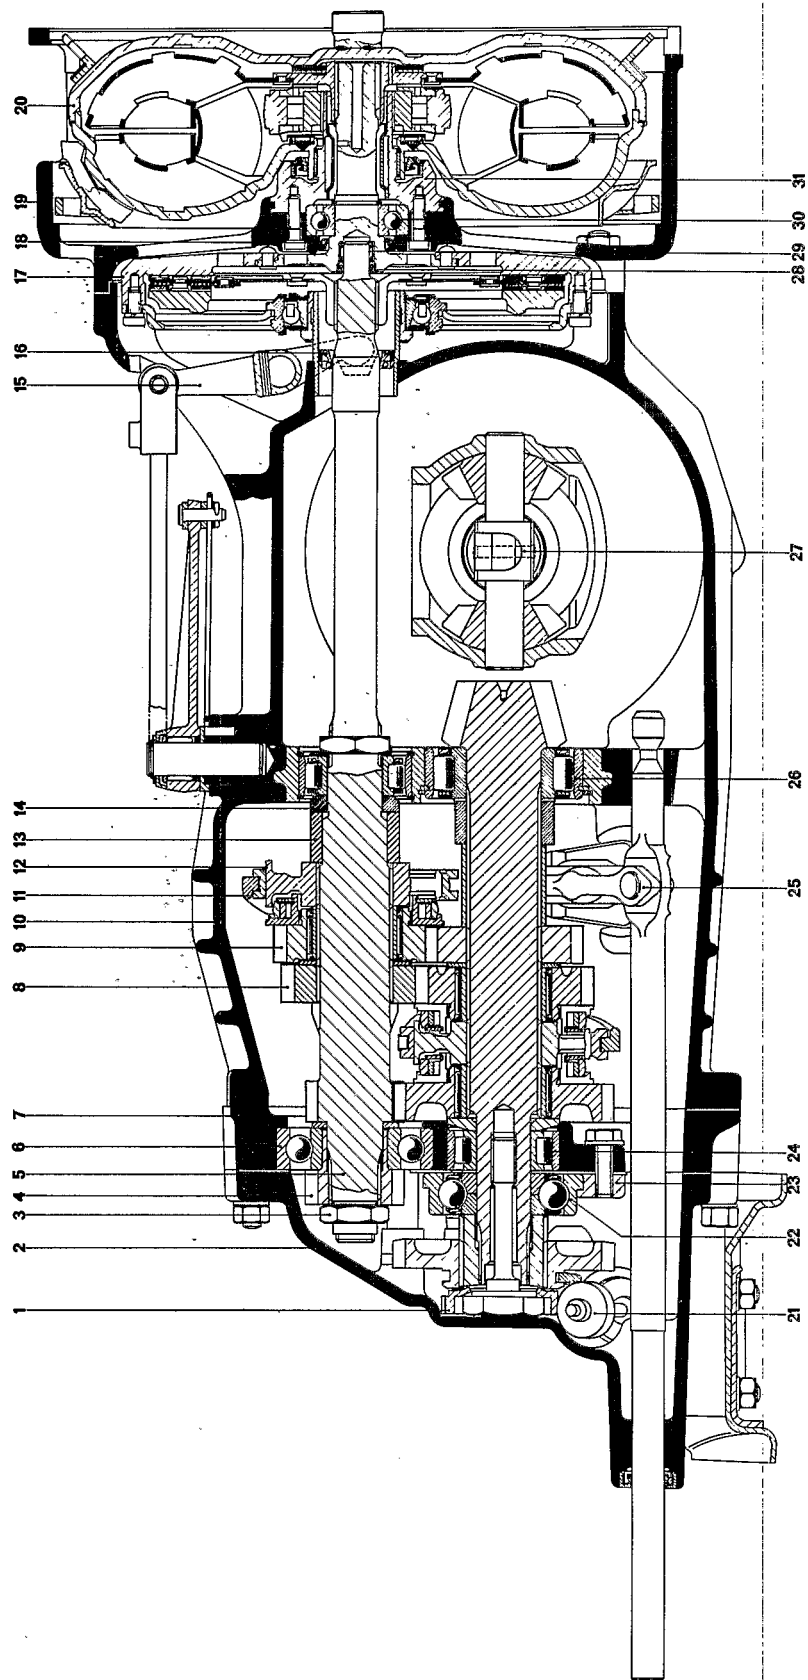

- | | | | |
|------|-----------------------------|------|--------------------------|
| 1 - | Speedometer drive gear | 17 - | Turbine shaft |
| 2 - | Front transmission cover | 18 - | Oil seal |
| 3 - | Flanged nut | 19 - | Torque converter housing |
| 4 - | Reverse gear | 20 - | Torque converter |
| 5 - | Main shaft | 21 - | Speedometer drive shaft |
| 6 - | Ball bearing | 22 - | Four-point ball bearing |
| 7 - | Intermediate plate | 23 - | Clamping plate |
| 8 - | 2nd gear (22:29 M) | 24 - | Roller bearing |
| 9 - | 3rd gear (27:25 V) | 25 - | Inner shift lever |
| 10 - | Transmission case | 26 - | Roller bearing |
| 11 - | 3rd gear shift fork | 27 - | Anchor block |
| 12 - | 3rd gear shift sleeve guide | 28 - | O-ring |
| 13 - | Spacer | 29 - | Needle bearing |
| 14 - | Washer | 30 - | Ball bearing |
| 15 - | Release lever | 31 - | Stator support |
| 16 - | Oil seal | | |

SPORTOMATIC 925 (1976 MODEL)

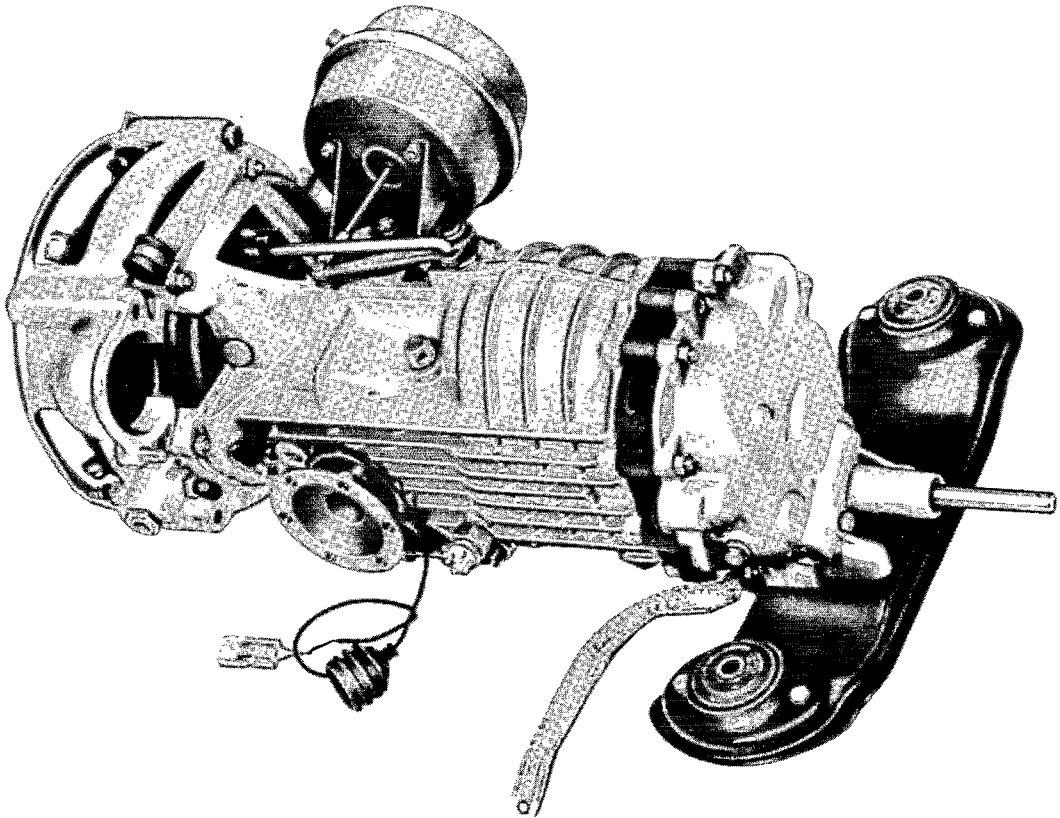

From 1976 models all cars can be delivered with a 3-speed sportomatic transmission as optional extra equipment. For engines with a swept volume of 2.7 liters transmission 925/09 (mechanical speedometer drive) and 925/12 (electronic speedometer transmitter) are installed.

The 3 liter Carrera engine requires a more powerful servo motor with a modified clutch linkage (Type 925/13). The torque converter has 4 additional drive shells.

SPORTOMATIC TRANSMISSION 925 (1976 MODEL)

The following transmissions are available from 1976 Models.

| Transmission | No. of Speeds | For Model |
|-----------------------------------|---------------|-------------------|
| 925/09 (mech. speedometer) | 3 | 911 |
| 925/12 (electronic speedometer) | 3 | 911 and 911 S USA |
| 925/13 (stronger converter drive) | 3 | Carrera 3.0 |


SPORTOMATIC TRANSMISSION 925 (1977 Models)

From 1977 Models the following transmission types are installed.

| Transmission Type | No. of Gears | Installed in |
|-------------------|--------------|---------------------------|
| 925/15 | 3 | 911 |
| 925/16 | 3 | Carrera 3.0 |
| 925/17 | 3 | 911 S USA and 911 S Japan |


5-speed-transmission

Transmission Diagram

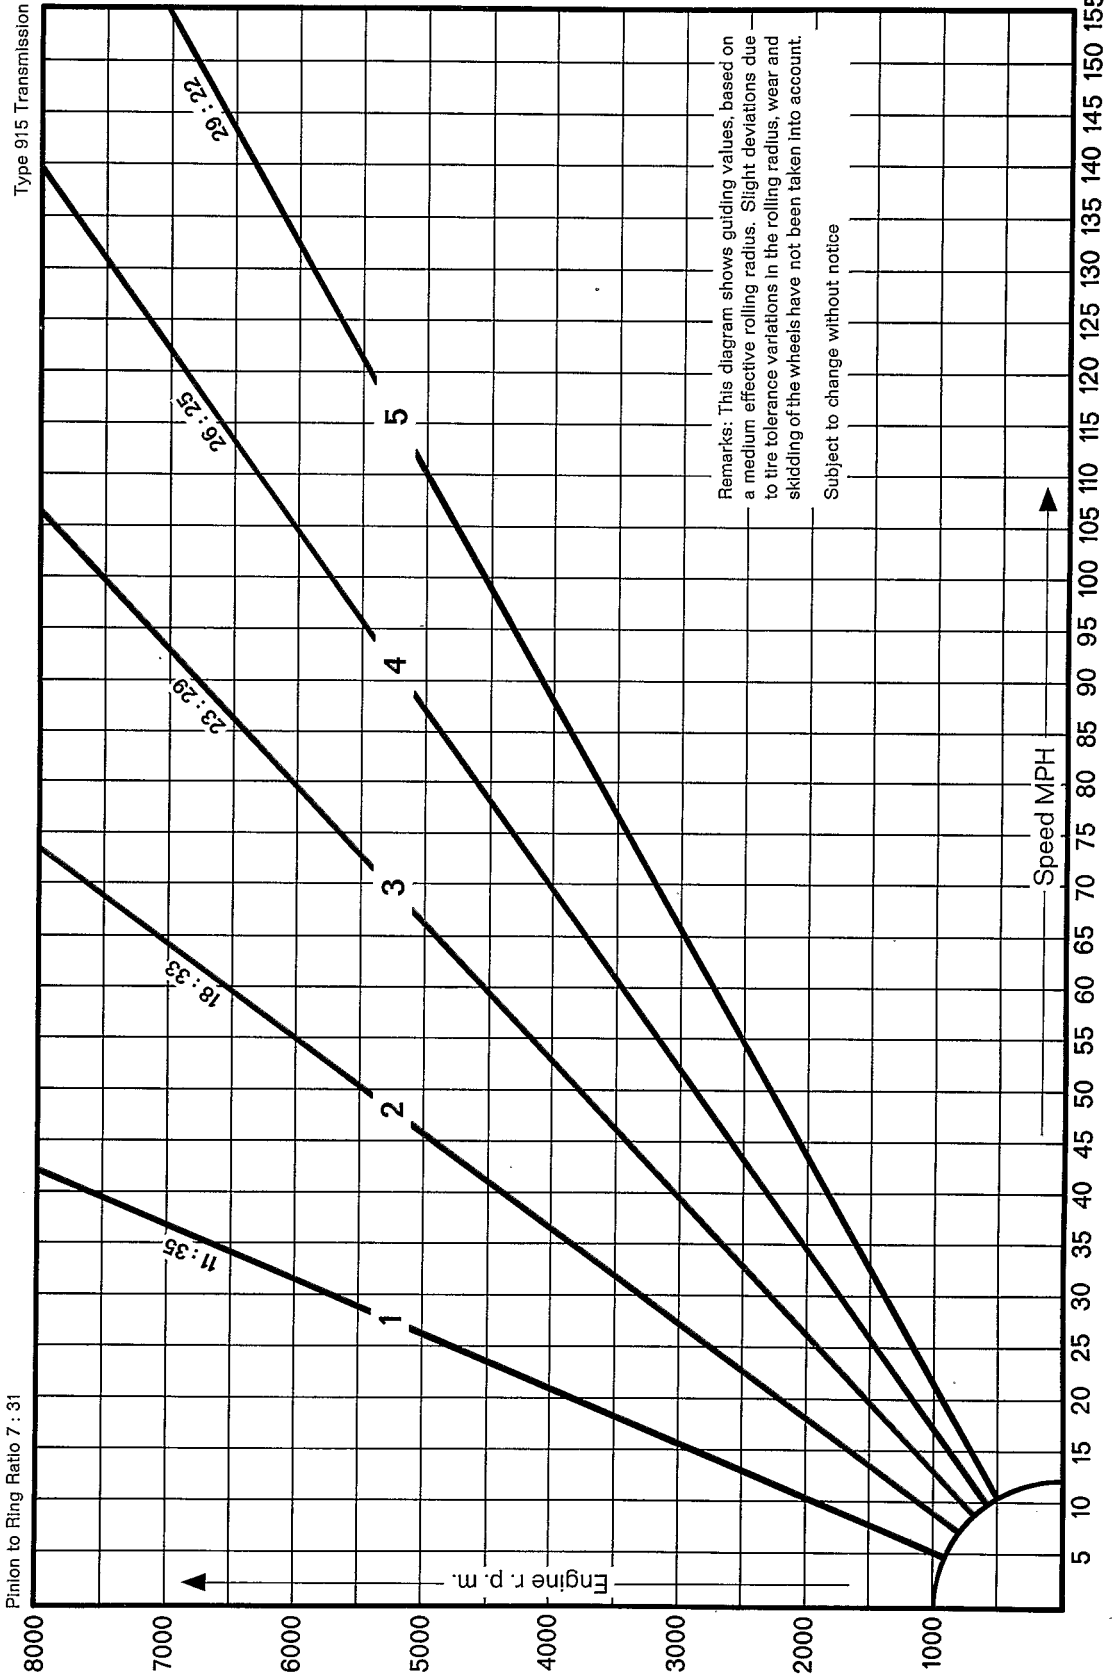


Transmission Diagram

4-speed-transmission

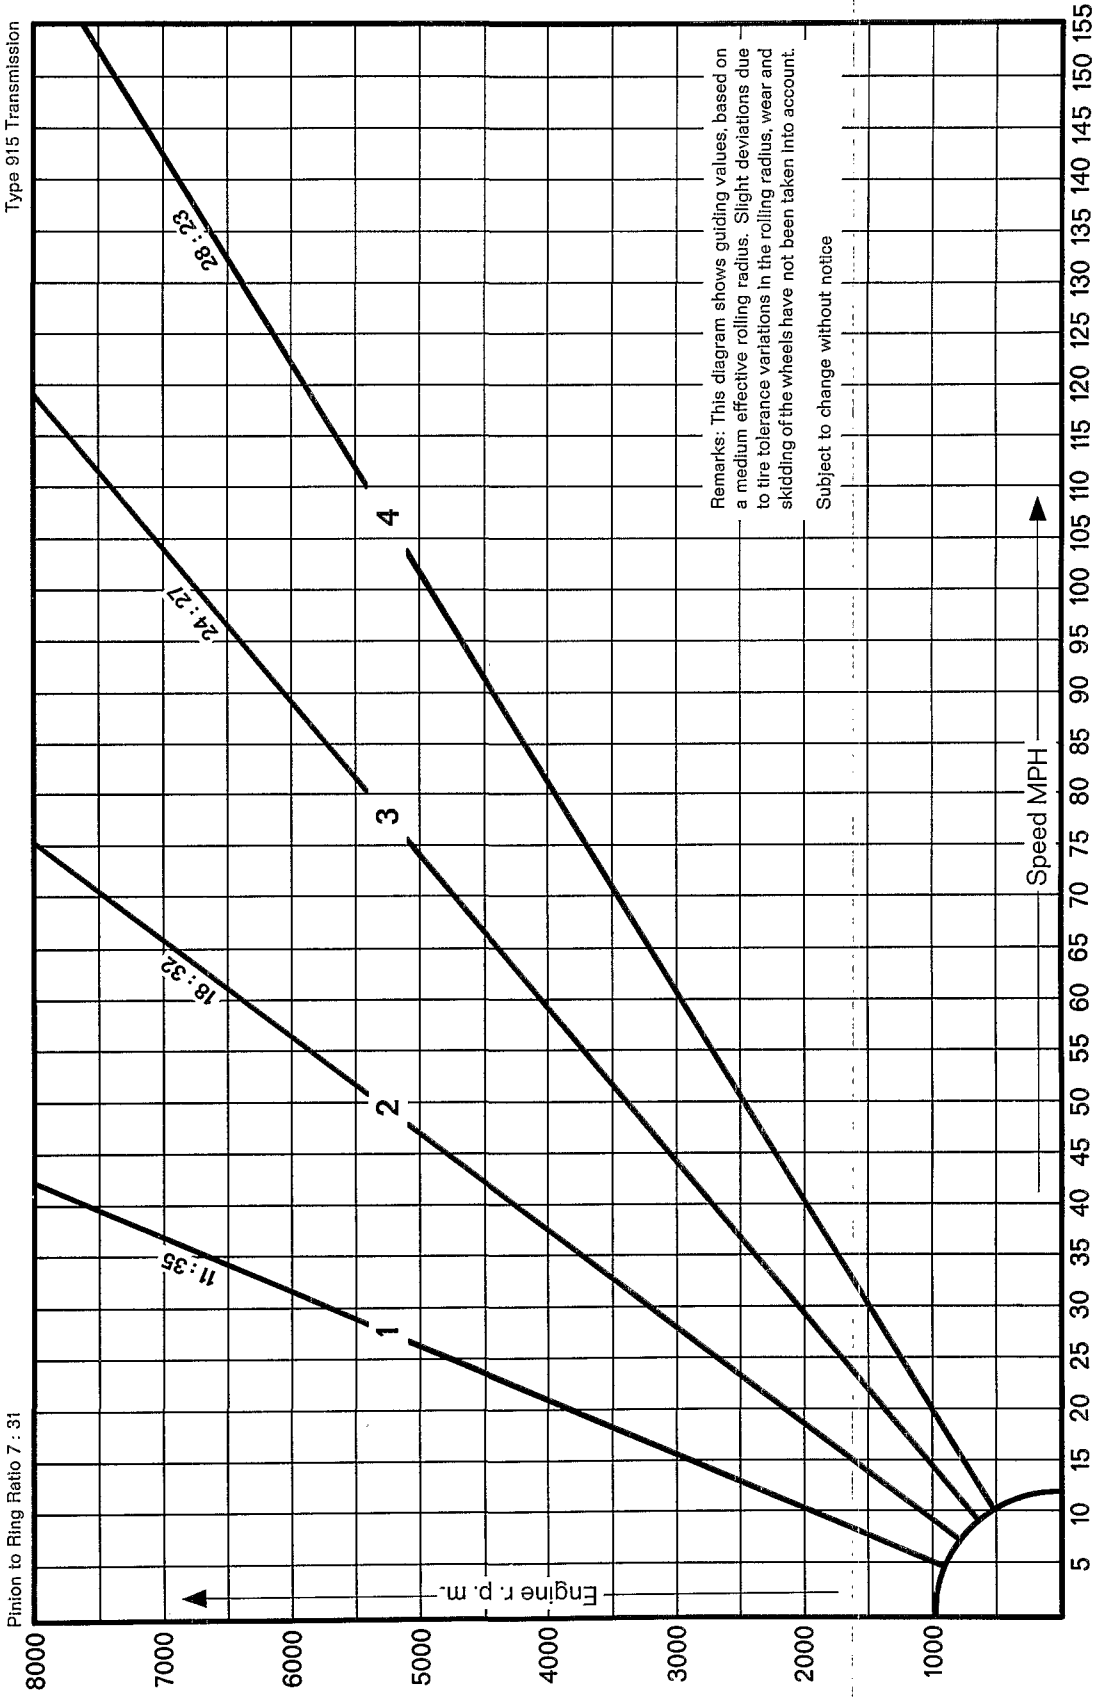

DISASSEMBLING AND ASSEMBLING TRANSMISSION HOUSING

TOOLS

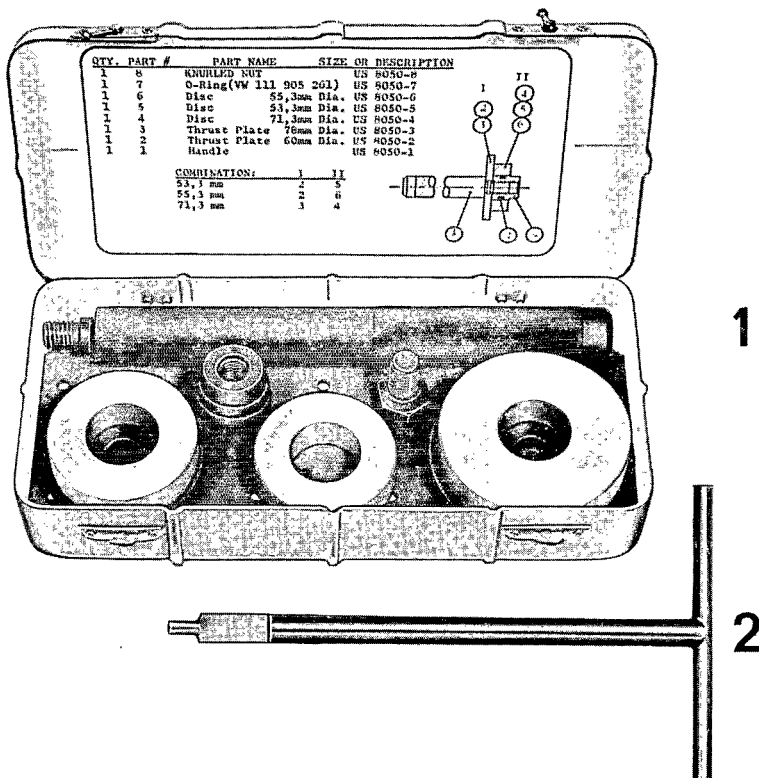

| Nr. | Description | Special Tool | Remarks |
|-----|-------------|--------------|---------|
| 1 | Driver Set | US 8050 | |
| 2 | T-handle | P 366 | |





TIGHTENING TORQUES




| Location | Description | Thread | Grade | Nm | ft lbs |
|---|--------------------------------|--------------|----------------|------------------------|-----------------------------|
| Transmission housing (Oil drain) | Magnetic plug | M24 Tapered | St 37 | 20 - 25 | 14.5 - 18.1 |
| Transmission housing (oil filler) | Oil filler plug | M 24 Tapered | St 37 | 20 - 25 | 14.5 - 18.1 |
| Transmission housing - side and front cover, guide fork cover | Nut, center lock type | M 8 x 1.25 | x 12 CrNi 18-8 | 22 - 25 | 15.9 - 18.1 |
| Front cover | Backup light switch | M 18 x 1.5 | Ms | 25 - 35 | 18.1 - 25.3 |
| Input shaft | Flange nut | M 30 x 1.5 | 8.8 | 160 - 180 | 115.7 - 130.2 |
| Input shaft | Castellated nut | M 18 x 1.5 | 6.8 | 120 - 140 | 86.8 - 101.3 |
| Retaining plate and transmission support attachment | Nut | M 8 x 1.25 | 8 | 21 - 23 | 15.2 - 16.6 |
| Pinion shaft | Flange nut | M 24 x 1.5 | 8 | 240 - 260 | 173.6-188.1 |
| Guide fork, shifting | Nut | M 6 x 1.0 | 8 | 8 - 9 | 5.8 - 6.5 |
| Shift detent, transmission housing | Nut | M 10 x 1.5 | 8.8 | 15 - 18 | 10.8 - 13.0 |
| Transmission housing | Breather | M 16 x 1.5 | 9 S 20 K | 20 - 30 | 14.5 - 21.7 |
| Shift forks | Nut | M 8 x 1.25 | 8.8 | 24 - 26 | 17.4 - 18.8 |
| Ring gear (differential) | Bolt | M 12 x 1.25 | 11.9 | 115 - 120 | 83.2 - 86.8 |
| Ring gear (self-locking differential) | | | 11.9 12.9 | 140 - 150 150 - 160 | 101.3-108.5 108.5-115.7 |
| Axle flange | Expansion bolt/Bolt | M 10 x 1.5 | 8.8 | 26 - 30/ 39 - 46 | 18.8 - 21.7/ 28.2 - 33.3 |
| Starter | Nut | M 10 x 1.5 | 8 | 46 - 48 | 33.3 - 34.7 |
| Pressure line (input shaft) | Bolt, M 6x35 | M 6 x 1.0 | 8.8 | 8 - 9 | 5.8 - 6.5 |
| Front cover | Plug for pressure relief valve | M 12 x 1.5 | 9 S 20 K | 22 - 25 | 15.9 - 18.1 |
| Oil pump cover | Self-locking nut | M 6 x 1.0 | x 12 CrNi 18.8 | 9 - 10 | 6.5 - 7.2 |
| Pickup tube | Allen bolt M 6 x 15 | M 6 x 1.0 | 8.8 | 8 - 9 | 5.8 - 6.5 |
| Pressure line | Bolt, M 6 x 12 | M 6 x 1.0 | 8.8 | 8 - 9 | 5.8 - 6.5 |
| Guide tube release bearing | Phillips head ctsk. screw | M6x1.0 | 8.8 | 8 - 9 | 5.8 - 6.5 |

| General Specifications | Type 915 Transmission | | | |
|---|-----------------------|------------------------|--------|------------------------|
| | 911 T | 911 E | 911 S | Carrera 2.7 |
| <u>Gear Ratios</u> | | | | |
| 1st gear | | 11/35 = 3.182 | | 11/35 = 3.182 |
| 2nd gear | | 18/32 = 1.778 | | 20/32 = 1.600 |
| 3rd gear | | 24/27 = 1.125 | | 25/26 = 1.040 |
| 4th gear | | 28/23 = 0.821 | | 29/22 = 0.759 |
| Reverse | | 12/21 = 3.325 20/38 | | 12/21 = 3.325 20/38 |
| 1st gear | | 11/35 = 3.182 | | 11/35 = 3.182 |
| 2nd gear | | 18/33 = 1.834 | | 18/33 = 1.834 |
| 3rd gear | | 23/29 = 1.261 | | 23/29 = 1.261 |
| 4th gear | | 26/25 = 0.962 | | 27/25 = 0.925 |
| 5th gear | | 29/22 = 0.759 | | 29/21 = 0.724 |
| Reverse | | 12/21 = 3.325 20/38 | | 12/21 = 3.325 20/38 |
| <u>Climbing Ability</u> (calculated) Vehicle Weight: empty according to DIN + 1/2 load | | | | |
| 1st gear | 84 % | 92 % | 100 % | > 100 % |
| 2nd gear | 37 % | 39 % | 41 % | 43.5 % |
| 3rd gear | 20 % | 20.5 % | 21.5 % | 23 % |
| 4th gear | 12 % | 12 % | 12 % | 12.5 % |
| 1st gear | 84 % | 92 % | 100 % | > 100 % |
| 2nd gear | 38.5 % | 41 % | 43 % | 52.5 % |
| 3rd gear | 23.5 % | 24.5 % | 26 % | 30.5 % |
| 4th gear | 16 % | 16 % | 17 % | 20 % |
| 5th gear | 10.5 % | 10.5 % | 10.5 % | 12.5 % |

| General Specifications | Type 915 Transmission | | | |
|-------------------------------|--|-------|-------|-------------|
| | 911 T | 911 E | 911 S | Carrera 2.7 |
| | Spiral bevel gears, differential | | | |
| | 7/31 = 4.429 | | | |
| | double-joint drive shafts, to rear wheels | | | |
| Rear Axle Drive | | | | |
| Final drive ratio | | | | |
| Power transfer | | | | |
| <u>Transaxle Weight</u> | | | | |
| 4-speed transmission | 54 kg, ready with oil and starter | | | |
| 5-speed transmission | 56 kg, ready with oil and starter | | | |
| <u>Filling Capacities</u> | | | | |
| Transmission and differential | approx. 3 ltr. (6.3 US pints) SAE 90 transmission oil, MIL-L 2105 B or MIL-L 2105 specification | | | |


Table of Tolerances for Type 915 Transmission
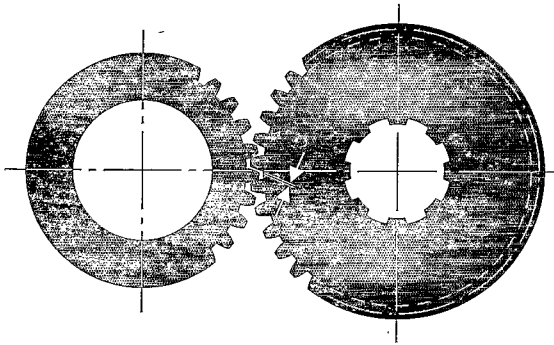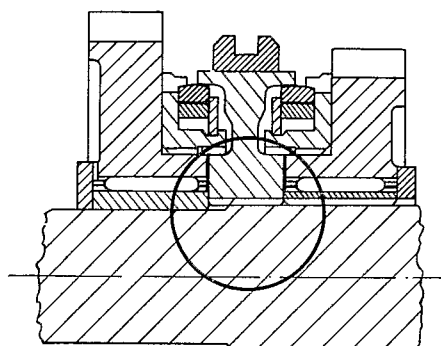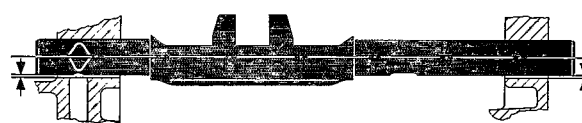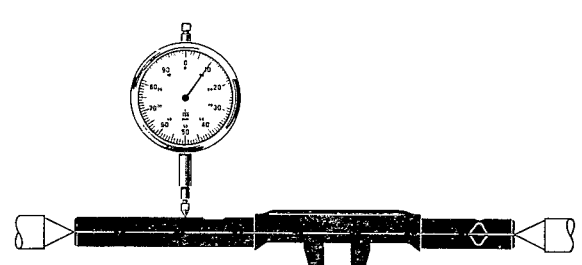
| Measuring point | Installed tolerances (new) mm | Wear Limit mm | |
|---|--|--|--|
| <p>1. Backlash between Gear I and II</p> <p>1st gear 2nd gear 3rd gear 4th gear 5th gear</p> | 0.06-0.12 | 0.22 |  |
| <p>2. Free gears on pinion and input shafts</p> <p>1st gear 2nd gear 3rd gear 4th gear 5th gear</p> | <p>0.3-0.4 0.2-0.3 0.2-0.3 0.2-0.3 0.2-0.3</p> | <p>0.5 0.4 0.4 0.4 0.4</p> |  |
| <p>3. Shift rods</p> <p>a. Side play in bushings</p> | 0.195 - 0.236 | 0.4 |  |
| <p>b. Runout</p> | -- | 0.10 |  |
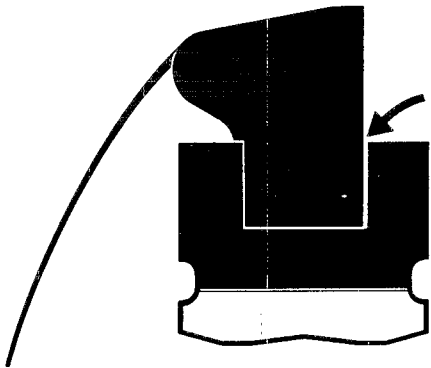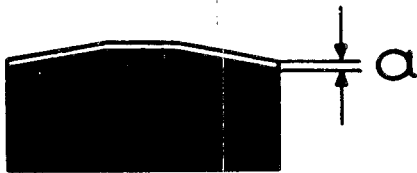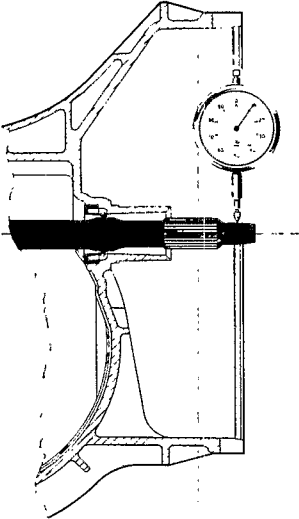
| Measuring point | Installed tolerances (new) mm | Wear Limit mm | |
|--|---|--|--|
| <p>4. Side-play between shift fork and shift sleeve:</p> <p>5th and reverse gear</p> <p>1st and 2nd gear</p> <p>3rd and 4th gear</p> | <p>0.1-0.3</p> <p>0.1-0.3</p> <p>0.1-0.3</p> | <p>0.5</p> <p>0.5</p> <p>0.5</p> |  |
| <p>5. Outside diameter of synchronizing rings: (installed)</p> <p>1st gear</p> <p>2nd gear</p> <p>3rd gear</p> <p>4th gear</p> <p>5th gear</p> | <p>86.37 ± 0.17</p> <p>86.37 ± 0.17</p> <p>76.3 ± 0.18</p> <p>76.3 ± 0.18</p> <p>76.3 ± 0.18</p> | <p>When molybdenum coat (a) is worn off at any point</p> |  |
| <p>6. Input shaft</p> <p>a. Runout at the pilot journal</p> | 0.1 max. | 0.1 max. (straighten) |  |

4-speed-transmission

Transmission Diagram

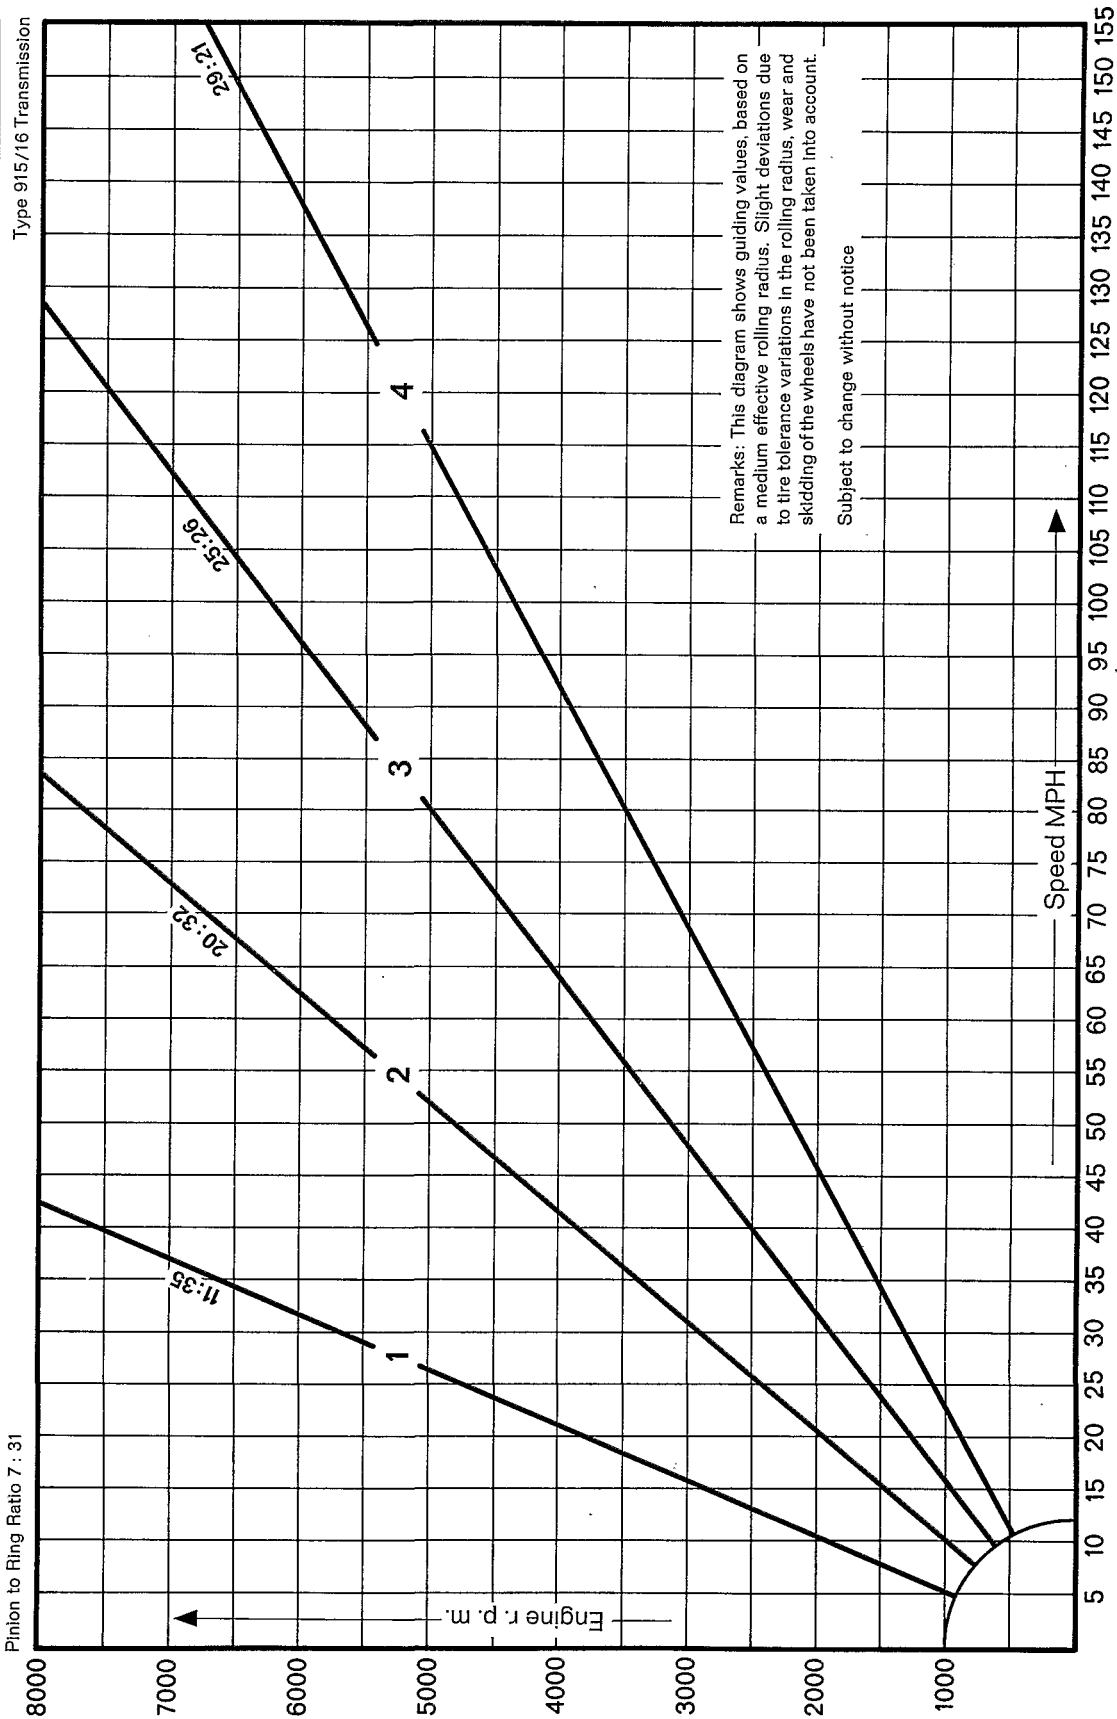


5-speed-transmission

Transmission Diagram

Type 915/06 Transmission


Pinion to Ring Ratio 7 : 31

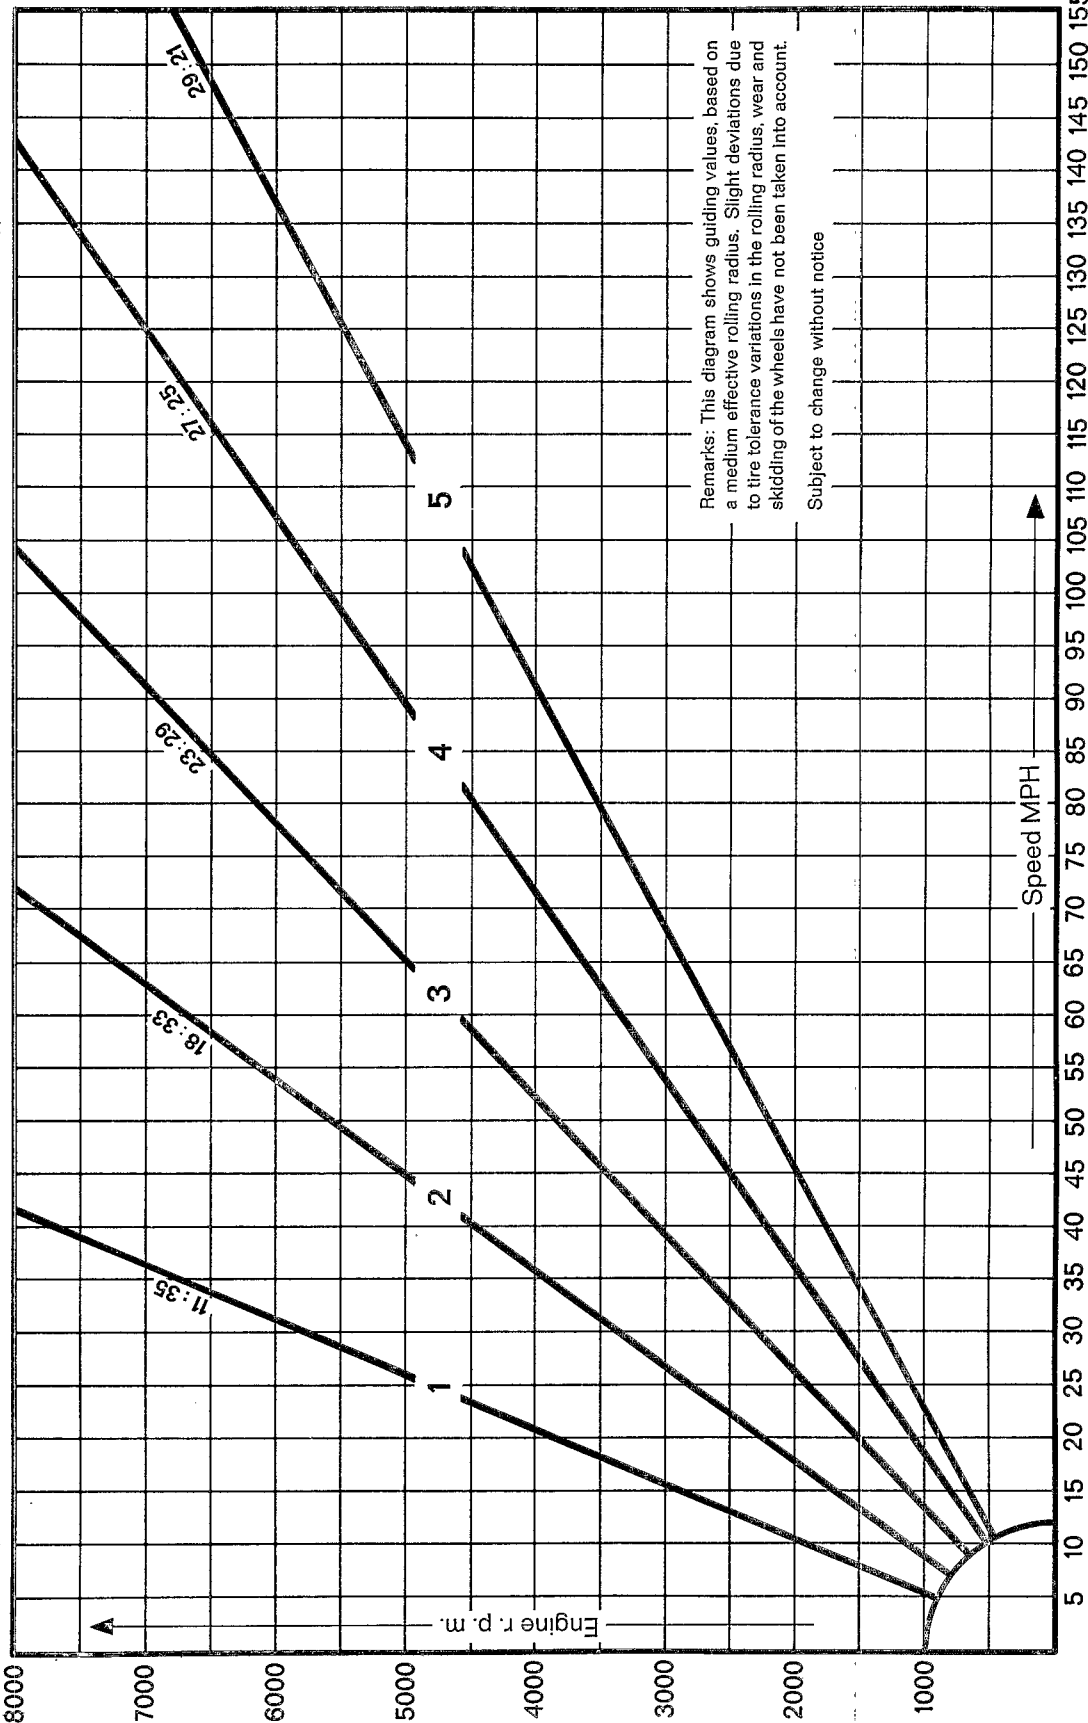


| General Data | Type 915 Transmission (1974 model) | | |
|--|--|---|--|
| <u>Gear Ratios</u> | 911 | 911 S | Carrera |
| Type 915/16 transmission: 1st gear 2nd gear 3rd gear 4th gear Reverse gear | | 11/35 = 3.182 20/32 = 1.600 25/26 = 1.040 29/21 = 0.724 12/21 = 3.325 20/38 | |
| Type 915/06 transmission: 1st gear 2nd gear 3rd gear 4th gear 5th gear Reverse gear | | 11/35 = 3.182 18/33 = 1.834 23/29 = 1.261 27/25 = 0.926 29/21 = 0.724 12/21 = 3.325 20/38 | |
| <u>Climbing Ability</u> (calculated) Vehicle Weight: empty according to DIN + 1/2 load 1st gear 2nd gear 3rd gear 4th gear 1st gear 2nd gear 3rd gear 4th gear 5th gear | >100 % 40 % 22 % 12 % | >100 % 39 % 22 % 11 % | >100 % 43 % 23 % 11 % |
| | >100 % 48 % 29 % 19 % 12 % | >100 % 47 % 29 % 18 % 11 % | >100 % 52 % 30 % 19 % 11 % |

| General Data | Type 915 Transmission (1974 model) | | |
|---|--|-------|---------|
| | 911 | 911 S | Carrera |
| Rear axle drive Final drive ratio Power transfer | spiral bevel gears, differential $7/31 = 4.429$ double-joint half-axes, to rear wheels | | |
| <u>Transaxle Weight</u> 4-speed transmission 5-speed transmission | 54 kg (119 lb), ready with oil and starter 55 kg (121 lb), ready with oil and starter | | |
| <u>Filling Capacities</u> Transmission and differential | approx. 3 ltr. (3.17 US gts.) SAE 90 transmission oil, MIL-L 2105 or MIL-L 2105 B specification | | |
| Transmission and differential, limited slip | approx. 3 ltr. (3.17 US gts.) SAE 90 transmission oil, M 2 C 119 A | | |

Transmission Diagram 911 S 4-speed-transmission

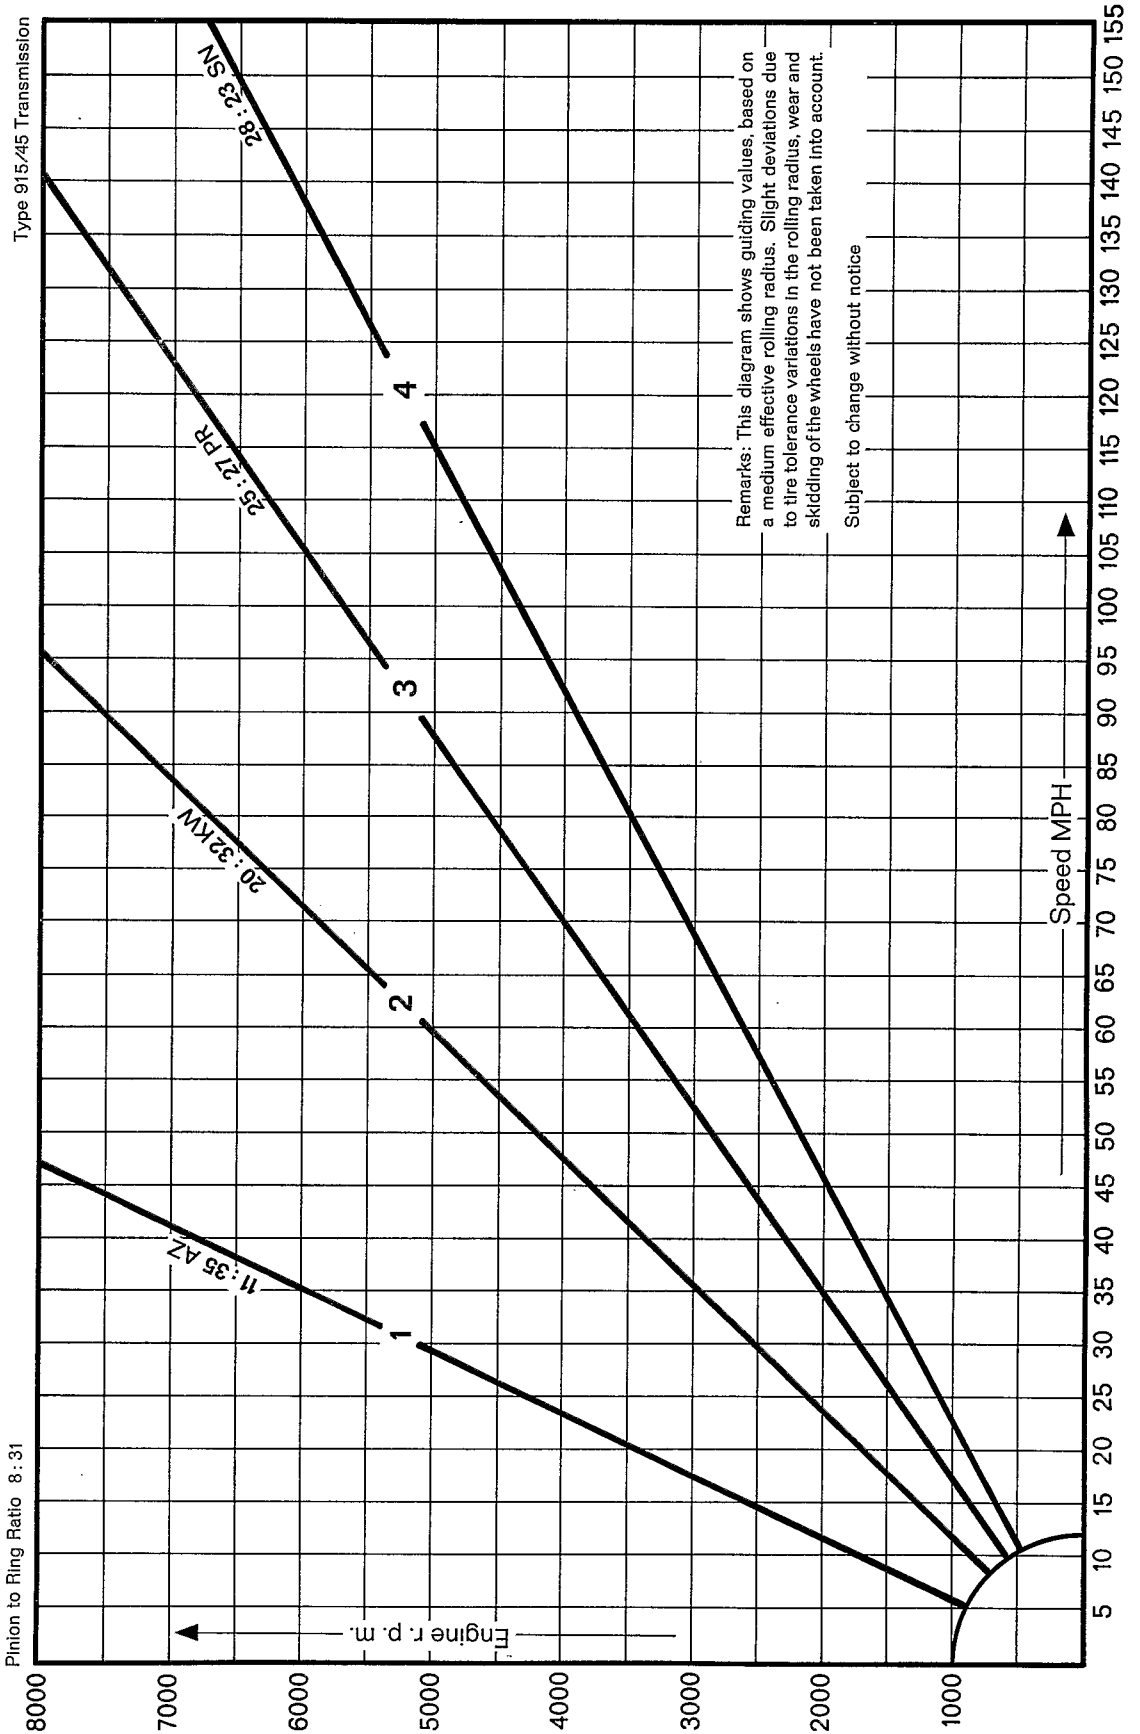

Transmission Diagram 911 S 5-speed-transmission

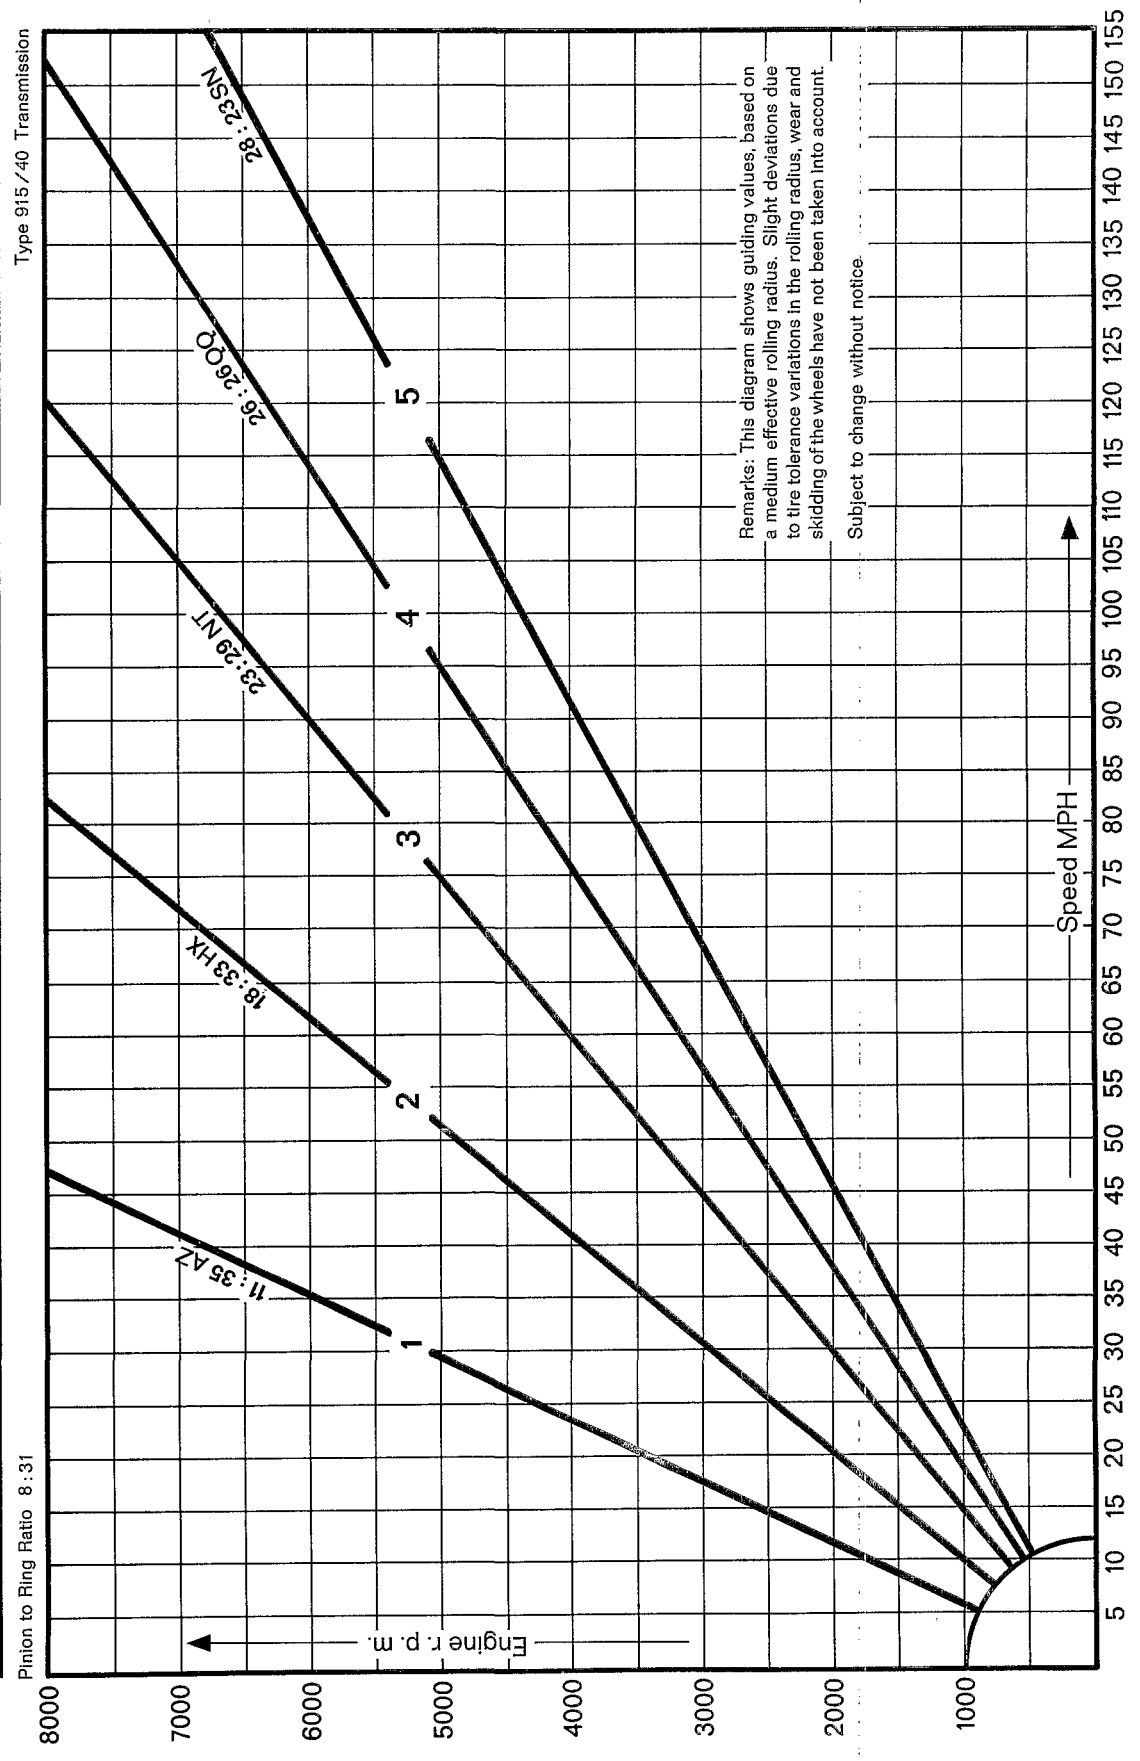


| General Data | Manual Transmission 915 (1975 Models) |
|-------------------------------|---|
| | 911 S, Carrera |
| <u>Ratios</u> | |
| 1st gear | AZ 11/35 = 3.181 |
| 2nd gear | KW 20/32 = 1.600 |
| 3rd gear | PR 25/27 = 1.080 |
| 4th gear | SN 28/23 = 0.821 |
| Reverse | 12/21 = 3.325 20/38 |
| 1st gear | AZ 11/35 = 3.181 |
| 2nd gear | HX 18/33 = 1.833 |
| 3rd gear | NT 23/29 = 1.261 |
| 4th gear | QQ 26/26 = 1.000 |
| 5th gear | SN 28/23 = 0.821 |
| Reverse | 12/21 = 3.325 20/38 |
| Final drive | 8/31 = 3.875 |
| <u>Capacities</u> | |
| Transmission and differential | Approx. 3 liters (3.17 US qt.) of SAE 90 transmission oil meeting Specifications MIL-L-2105 or MIL-L-2105 B |

| | |
|---------------------|---|
| General data | Manual transmission 915 - 1976, 1977, 1978 and 1979 models |
| Ratios | 915/44 915/61 |
| 1st gear | AZ 11 : 35 = 3.181 |
| 2nd gear | HX 18 : 33 = 1.833 |
| 3rd gear | NT 23 : 29 = 1.261 |
| 4th gear | QQ 26 : 26 = 1.000 |
| 5th gear | SN 28 : 23 = 0.821 |
| Reverse | 12 : 21 x 20 : 38 = 3.325 |
| Final drive ratio | 8 : 31 = 3.875 |
| Capacity | approx. 3 ltr. /3.15 US qt of SAE 90 transmission oil meeting API Classification GL 5 (or MIL-L 2105 B) |
| Transmission weight | 56 kg/123 lb ready for installation with oil and starter |

| | |
|---------------------|---|
| General data | Manual transmission 915 - 1980 model and 1981 models |
| Ratios | 915/63 |
| 1st gear | 11 : 35 = 3.181 |
| 2nd gear | 18 : 32 = 1.778 |
| 3rd gear | 23 : 29 = 1.261 |
| 4th gear | 26 : 26 = 1.000 |
| 5th gear | 28 : 23 = 0.821 |
| Reverse | 12 : 21 x 20 : 38 = 3.325 |
| Final drive ratio | 8 : 31 = 3.875 |
| Capacity | approx. 3 ltr. /3.15 US qt of SAE 90 transmission oil meeting API Classification GL 5 (or MIL-L 2105 B) |
| Transmission weight | 56 kg/123 lb ready for installation with oil and starter |


5-speed-transmission

Transmission Diagram

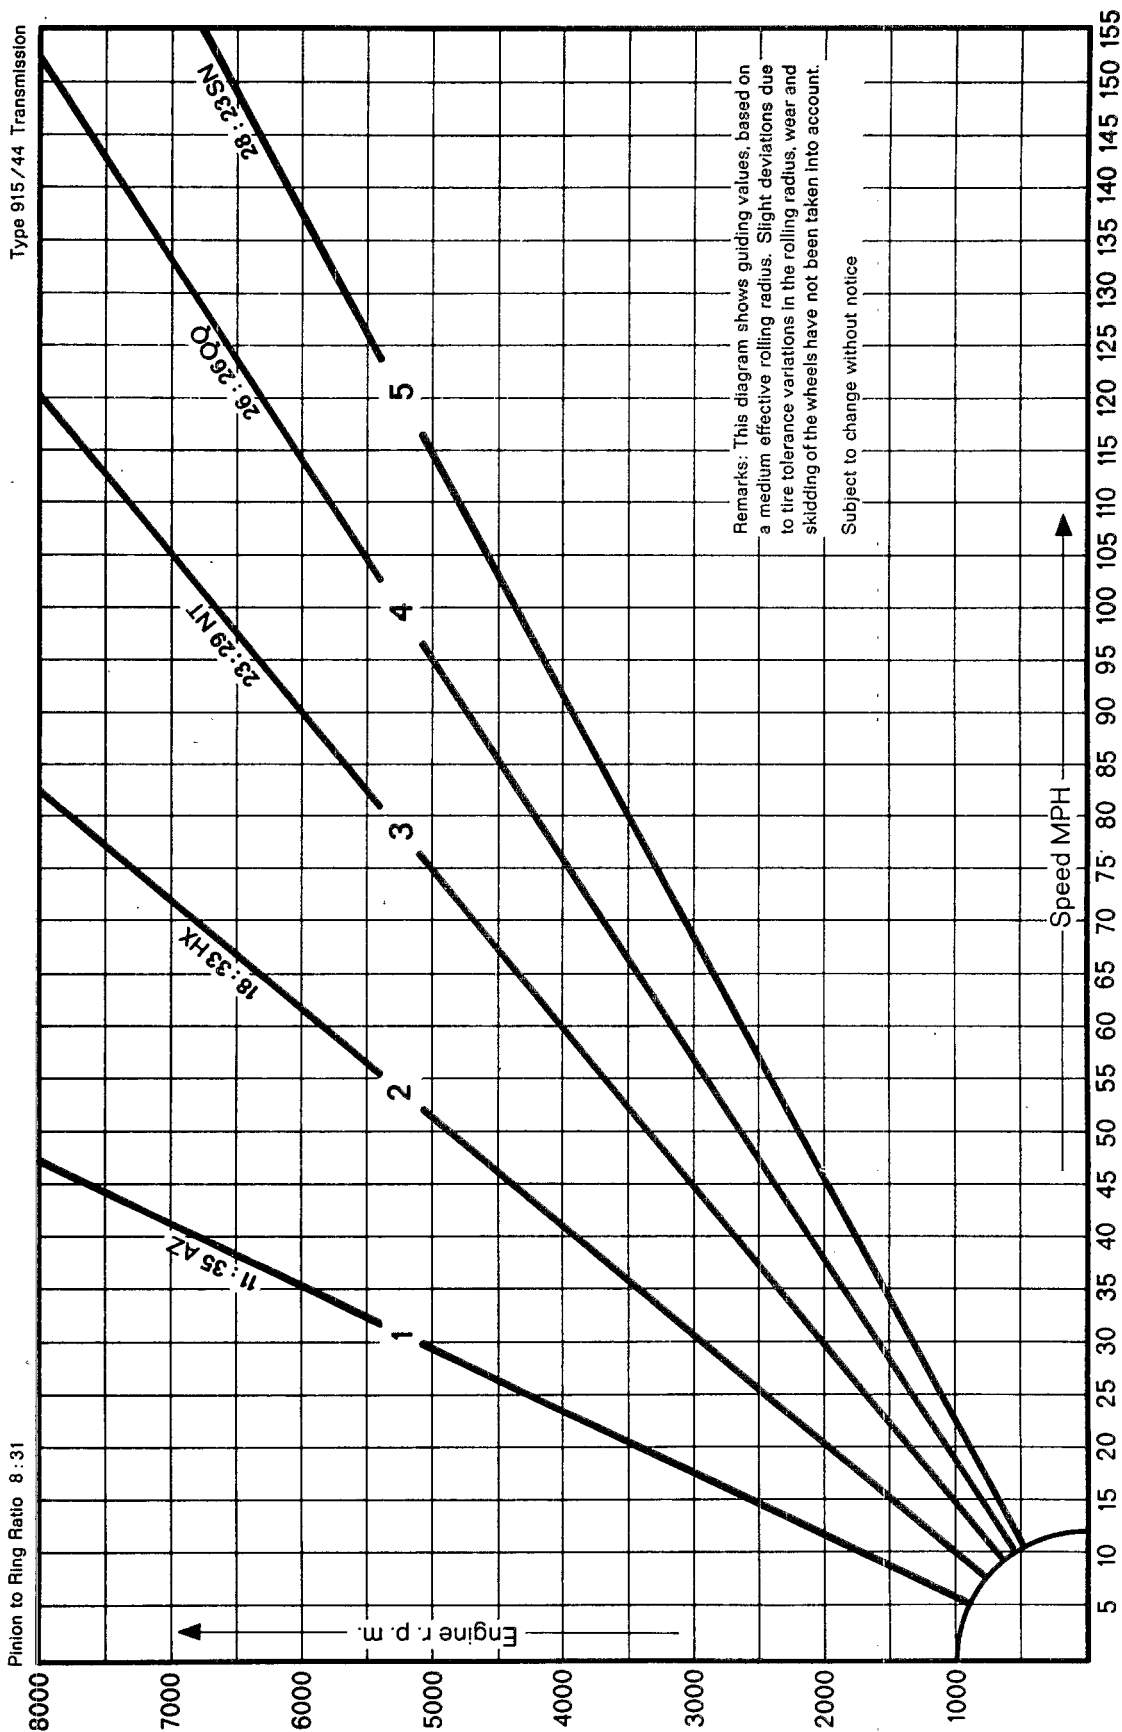

Transmission Diagram

4-speed-transmission

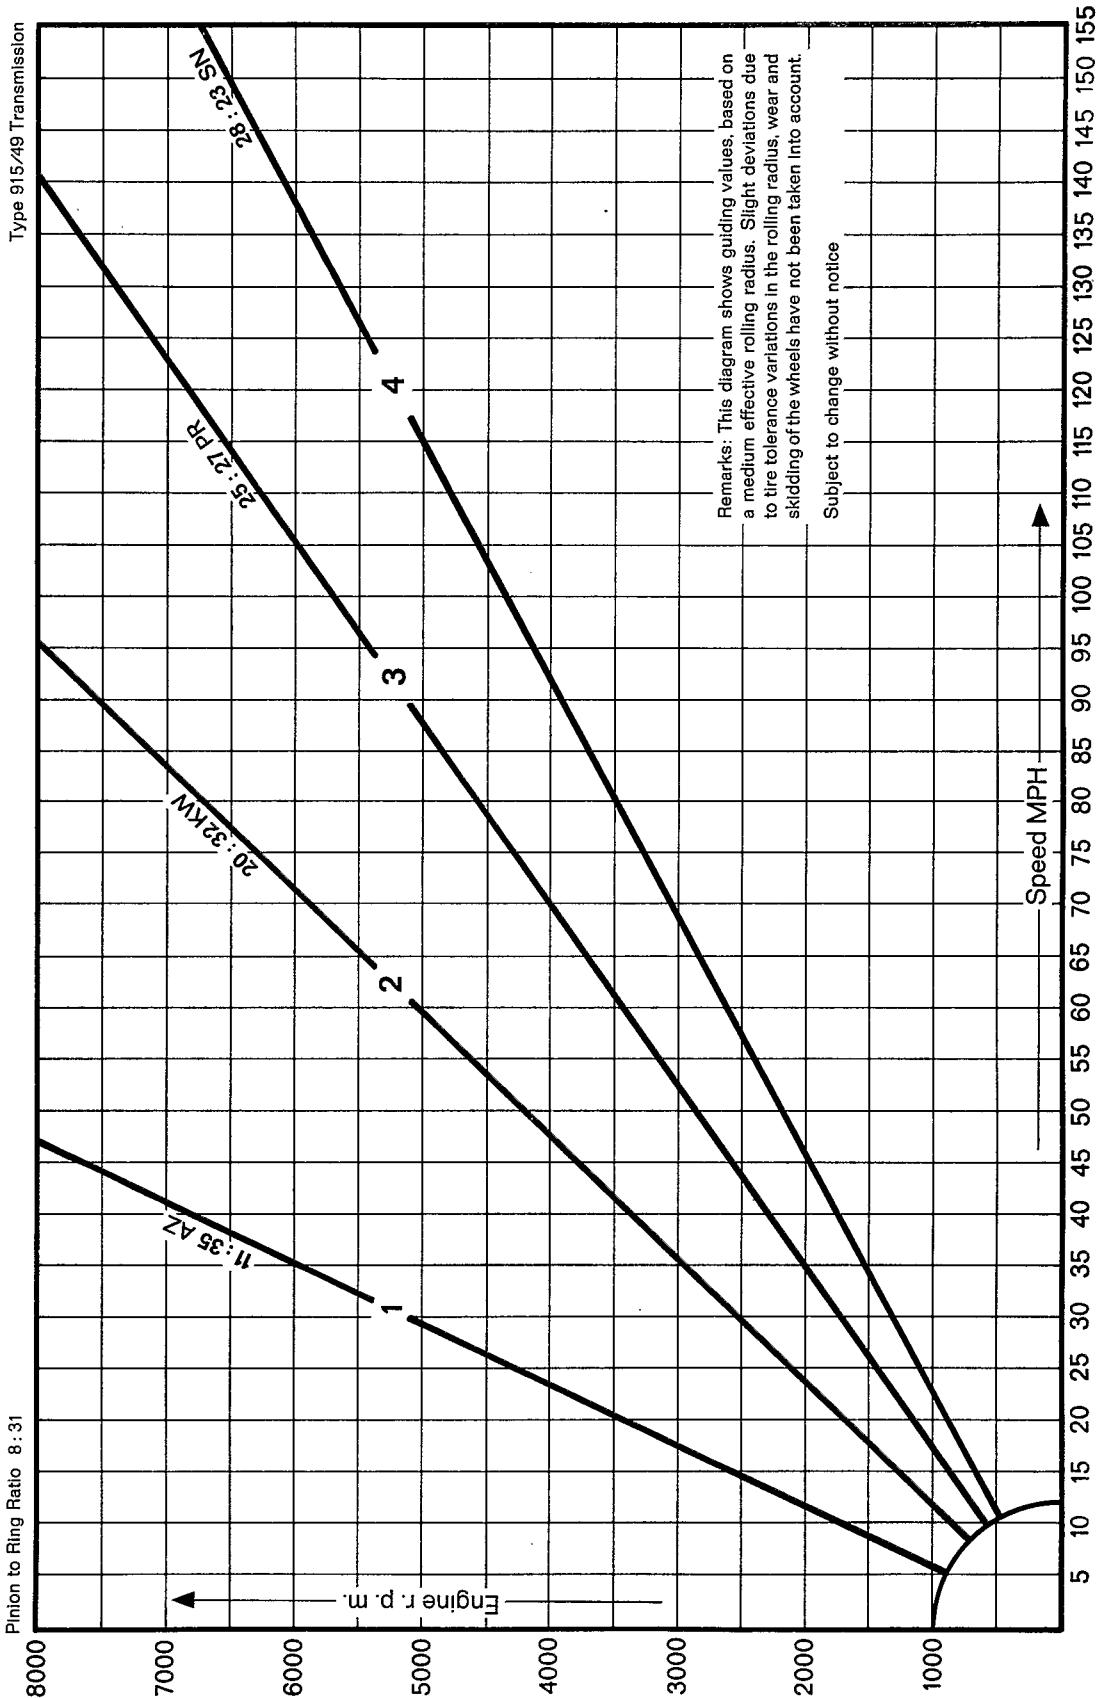


Sportomatic

Transmission Diagram

Type 925/01 Transmission

Pinion to Ring Ratio 7 : 27

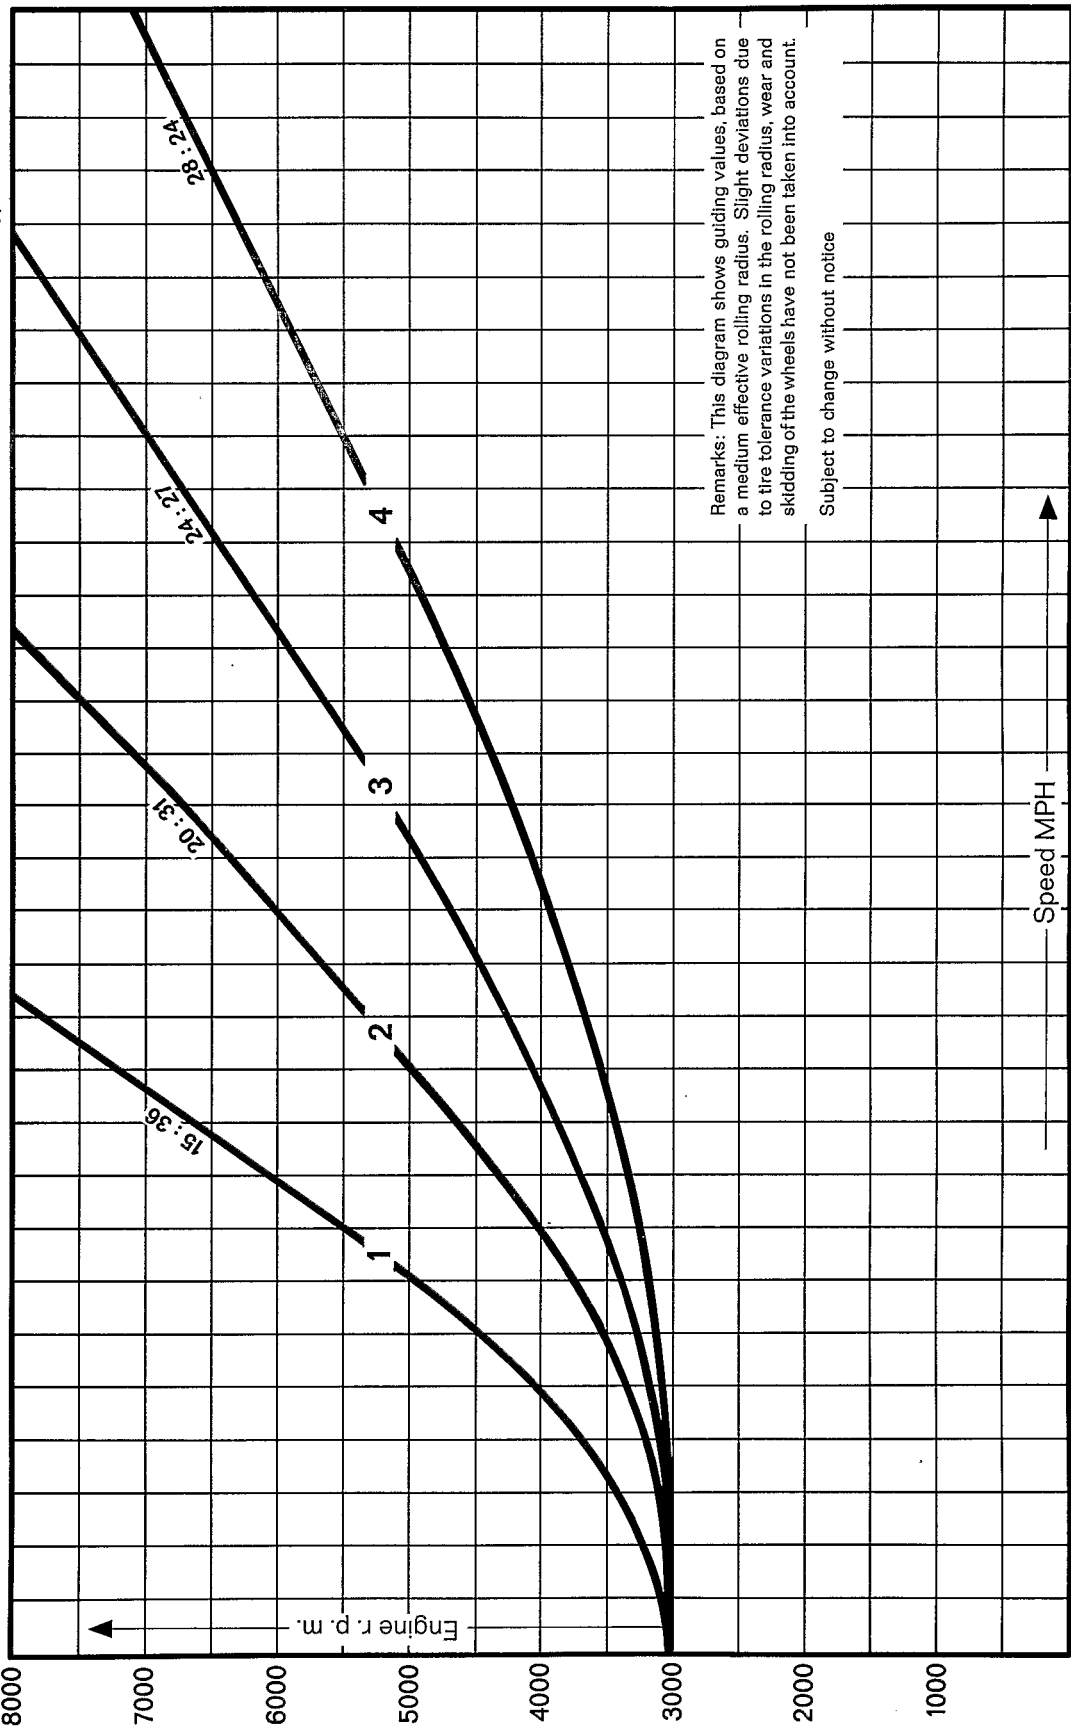

Remarks: This diagram shows guiding values, based on a medium effective rolling radius. Slight deviations due to tire tolerance variations in the rolling radius, wear and skidding of the wheels have not been taken into account.

Subject to change without notice

Speed MPH

Engine r.p.m.

| General Data | 925/00 911 T | 925/00 911 E | 925/01 911 S |
|-------------------------------|--|-----------------|---|
| Gear ratios * | | | |
| 1st gear | (15/36) = 2.400 : 1 | | |
| 2nd gear | (20/31) = 1.550 : 1 | | |
| 3rd gear | (24/27) = 1.125 : 1 | | |
| 4th gear | (28/24) = 0.858 : 1 | | |
| Reverse gear | (15/21 - 21/38) = 2.533 : 1 | | |
| Torque converter ratio | 2.19 : 1 | | 2.1 : 1 |
| Final drive ratio * | (7/27) = 3.857 : 1 | | |
| Filling Capacities | Approx. 3.0 ltr (3.17 US qts) | | |
| Transmission and differential | SAE 90 transmission oil, specification Mil-L 2105 or Mil-L 2105B | | |
| Engine | approx. 10 ltr. (10.5 US qts) | | approx. 11 ltr (11.6 US qts) w/oil cooler |
| Two-start speed in L-range | approx. 35 kmh (22 mph) | | |
| Stallspeed | 2500 - 2700 rpm | | 2900 - 3100 rpm |

* In parenthesis; number of teeth


TIGHTENING TORQUES - SPORTOMATIC 925

| Location | Description | Thread | Grade | mkp | ft. lbs. |
|---|---------------------|---------------------------|------------------|---------|-----------|
| Transmission housing (at stud for side and front cover, and fork piece) | Nut | M8 x 1.25 | 6.8 | 2.1-2.3 | 15.2-16.6 |
| | Mid grip nut | M8 x 1.25 | x12 CrNi 18.8 | 2.2-2.5 | 15.9-18.1 |
| Transmission housing (oil filler plug) | Plug | M24 x 1.5 (1:16 taper) | St 37 | 2.0-2.5 | 14.5-18.1 |
| Transmission housing (oil drain plug) | Plug with magnet | M24 x 1.5 (1:16 taper) | St 37 | 2.0-2.5 | 14.5-18.1 |
| Transmission housing (breather) | Breather | M14x1.5 (1:16 taper) | 9S 20K | 2.0-3.0 | 14.5-21.7 |
| Transmission housing | Backup light switch | M18x1.5 | Ms | 3.5-4.0 | 25.3-28.9 |
| Transmission housing | Bypass switch | M18x1.5 | Ms | 3.5-4.0 | 25.3-28.9 |
| Transmission housing (starter attachment) | Nut | M10x1.5 | 8.8 | 4.6-4.8 | 33.3-34.7 |
| Transmission housing (vacuum servo unit carrier and attachment) | Nut | M8x1.25 | 6.8 | 2.1-2.3 | 15.2-16.6 |
| Torque converter housing (attachment to transmission housing) | Nut | M8x1.25 | 6.8 | 2.1-2.3 | 15.2-16.6 |
| | Nut | M10x1.5 | 8.8 (SW15) | 4.6-4.8 | 33.3-34.7 |
| Torque converter housing (attachment of freewheeling support) | Allen-head bolt | M6x1.0 | 10.9 | 1.2-1.4 | 8.7-10.1 |
| Torque converter housing | Threaded coupling | M24x1.5 | 6 S | 3.0-3.5 | 21.7-25.3 |
| Torque converter housing | Temperature sensor | M14x1.5 | Ms | 2.5-3.0 | 18.1-21.7 |
| Torque converter housing | Temperature switch | M14x1.5 | Ms | 2.5-3.0 | 18.1-21.7 |
| Torque converter housing (clutch pressure plate) | Allen-head bolt | M6x1.0 | 10.9 | 1.2-1.4 | 8.7-10.1 |
| Torque converter coupling plate | 2-point bolt | M8x1.25 | 8.8 | 2.4-2.6 | 17.4-18.8 |

| Location | Description | Thread | Grade | mkp | ft. lbs. |
|--|-----------------|----------|----------|---------|-----------|
| Intermediate plate (clamping plate) | Bolt | M8x1.25 | 8.8 | 2.1-2.3 | 15.2-16.6 |
| Intermediate plate | Bellcrank shaft | M8x1.25 | 9 S 20 K | 2.1-2.3 | 15.2-16.6 |
| Intermediate plate (shift detent) | Cover plug | M14x1.5 | 4.6 | 2.2-2.5 | 15.9-18.1 |
| Transmission front cover (speedometer drive retainer) | Bolt | M8x1.25 | 8.8 | 1.6-1.8 | 11.6-13.0 |
| Transmission front cover (9 mm dia ball - parking lock) | Cover plug | M12x1.5 | 5.8 | 3.0-3.5 | 21.7-25.3 |
| Angular drive in retaining bushing | Hollow bolt | M24x1.5 | 6.8 | 2.2-2.4 | 15.9-17.4 |
| Input shaft | Nut | M24x1.5 | 6.9 | 10-12 | 72.3-86.8 |
| Input shaft | Flanged nut | M18x1.5 | 5.8 | 11-13 | 79.6-94.0 |
| Pinion shaft | Stretch bolt | M12x1.5 | 10.9 | 11-12 | 79.6-86.8 |
| Selector forks | Bolts | M8x1.25 | 8.8 | 2.2-2.6 | 15.9-18.8 |
| Differential (ring gear attachment) | Bolt | M12x1.25 | 11.9 | 11.5-12 | 83.2-86.8 |
| U-joint flange (in differential) | Stretch bolt | M10x1.5 | 8.8 | 3.5-4.0 | 25.3-28.9 |
| Transmission front cover (transmission carrier attachment) | Nut | M8x1.25 | 6.8 | 2.1-2.3 | 15.2-16.6 |

Sportomatic


Transmission Diagram

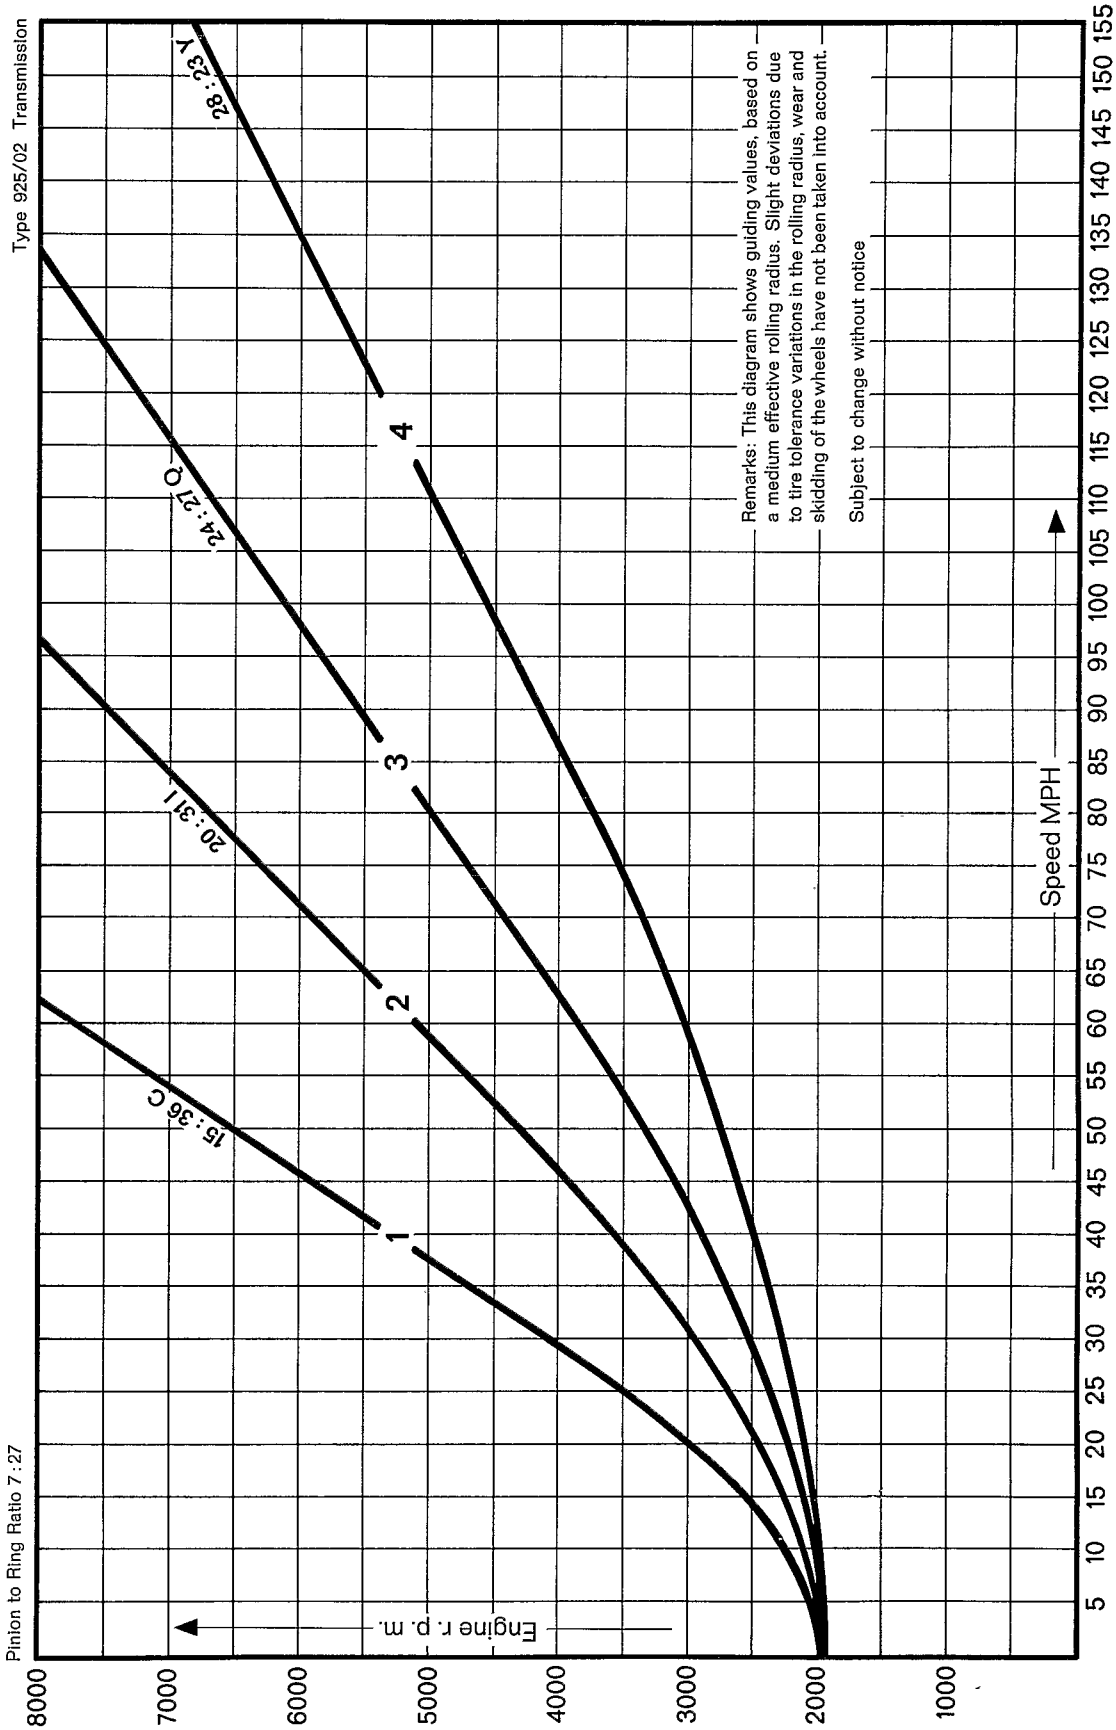

| General Data | Sportomatic (1974 model) | |
|-----------------------------------|---|----------------|
| <u>Climbing ability - percent</u> | 925/02 | |
| | 911 | 911 S |
| 1st gear | 57 (73) | 56 (67) |
| 2nd gear | 32 (40) | 32 (39) |
| 3rd gear | 21 (28) | 20 (27) |
| 4th gear | 12 (19) | 11 (19) |
| | () in parentheses: brief climbing ability | |
| <u>Gear Ratios</u> | | |
| 1st gear | 15/36 = 2.400 | |
| 2nd gear | 20/31 = 1.550 | |
| 3rd gear | 24/27 = 1.125 | |
| 4th gear | 12/21 = 0.821 | |
| Reverse gear | 12/21 21/38 = 2.534 | |
| Torque converter ratio | 1.7 - 1.9 | |
| Final drive ratio | 7/27 = 3.857 | |
| <u>Filling Capacities:</u> | | |
| Transaxle | approx. 2.5 ltr. (2.6 US gts.) SAE 90 transmission oil MIL-L 2105 or MIL-L 2105 B | |
| Engine | approx. 13 ltr. (13.7 US gts.) | |
| Tow-start speed in "L" (Low) | approx. 35 kmh (22 mph) | |
| Stall speed | 1850 - 2250 | 1750 - 2150 |
| Clutch speed (at full power) | 3250 \pm 200 | 3080 \pm 200 |

Sportomatic

Transmission Diagram

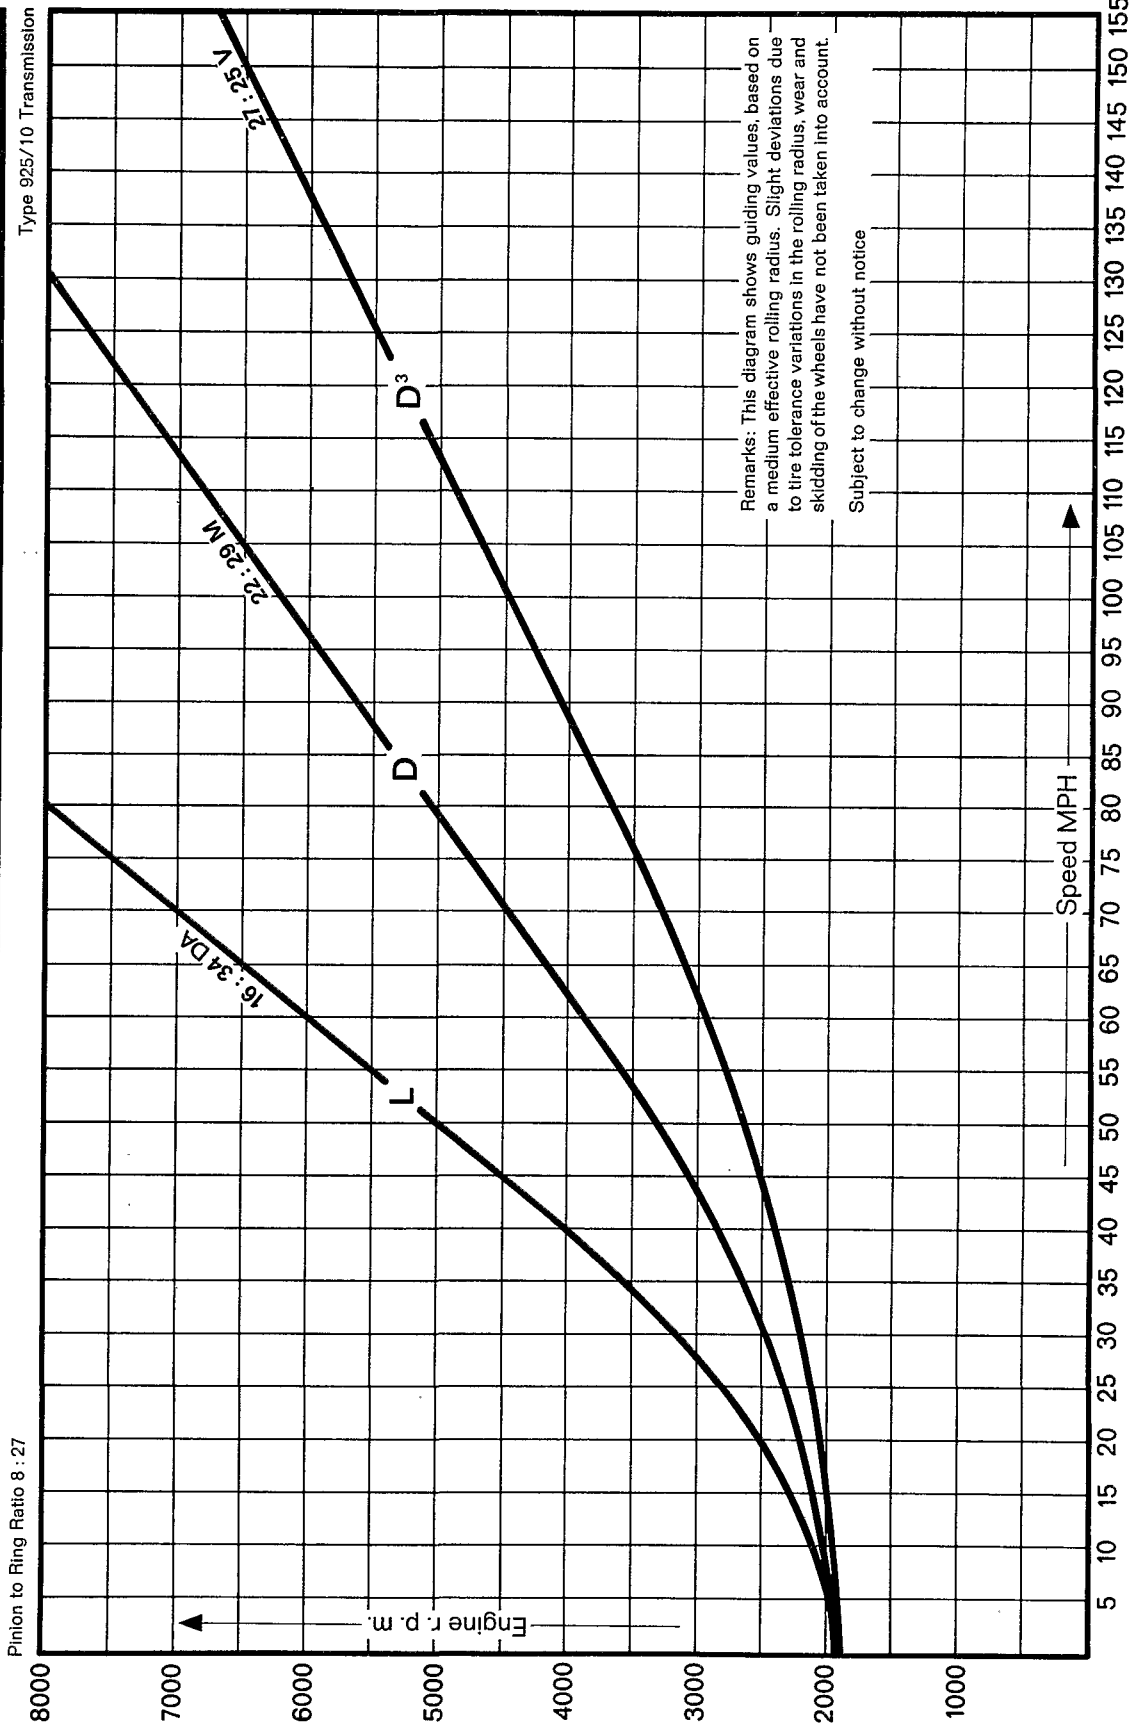

| General Data | Sportomatic 925 (1975 Models) | |
|------------------------------------|--|------------------------------|
| Ratios | 925/10 | |
| 1st gear | DA | $16/34 = 2.125$ |
| 2nd gear | M | $22/29 = 1.318$ |
| 3rd gear | V | $27/25 = 0.926$ |
| Reverse | $15/21$ $21/38 = 2.534$ | |
| Converter | 1.7 - 1.9 | |
| Final drive | $8/27 = 3.375$ | |
| Capacities | | |
| Transmission with final drive | Approx. 2.5 liters (2.65 US qt.) of SAE 90 transmission oil meeting Specifications of MIL-L-2105 or 2105 B | |
| Towing speed in range "L" to start | Approx. 22 mph | |
| Stall speed (rpm) | 1900 ± 200 | California 1850 ± 200 |
| Clutch speed (rpm) | 3100 ± 200 | 3000 ± 200 |


| General Data | Sportomatic 925 1976 and 1977 Models | |
|--|--|---------------------------------|
| Ratios | 925/12 1976 Mod. | 925/17 1977 Mod. |
| 1st speed | C 15 : 36 = 2.400 | |
| 2nd speed | K 21 : 30 = 1.429 | |
| 3rd speed | V 27 : 25 = 0.926 | |
| Reverse | 15 : 21 x 21 : 38 = 2.534 | |
| Final Drive Ratio | 8 : 27 = 3.375 | |
| Gearbox and Final Drive Capacity | about 2, 5 ltr. / 2, 6 U.S. qt of SAE 90 Gear Lube meeting Specifications MIL-L 2105 or MIL-L 2105 B | |
| Speedometer | Electronic | |
| Converter Ratio | 1, 9 | |
| Tow-Start Speed in Range "L" | about 25 mph | |
| Stall Speed (rpm) | 1900 \pm 200 | |
| Transmission Weight (ready for installation with converter, starter and oil) | about 71 kg/156 lb | |
| Contact Pressure of Pressure Plate | 7845 - 8630 N (800 - 880 kp) | 6400 - 7100 N (652 - 724 kp) |

Sportomatic

Transmission Diagram

Type 925/09/12 /13 Transmission

Pinion to Ring Ratio 8 : 27

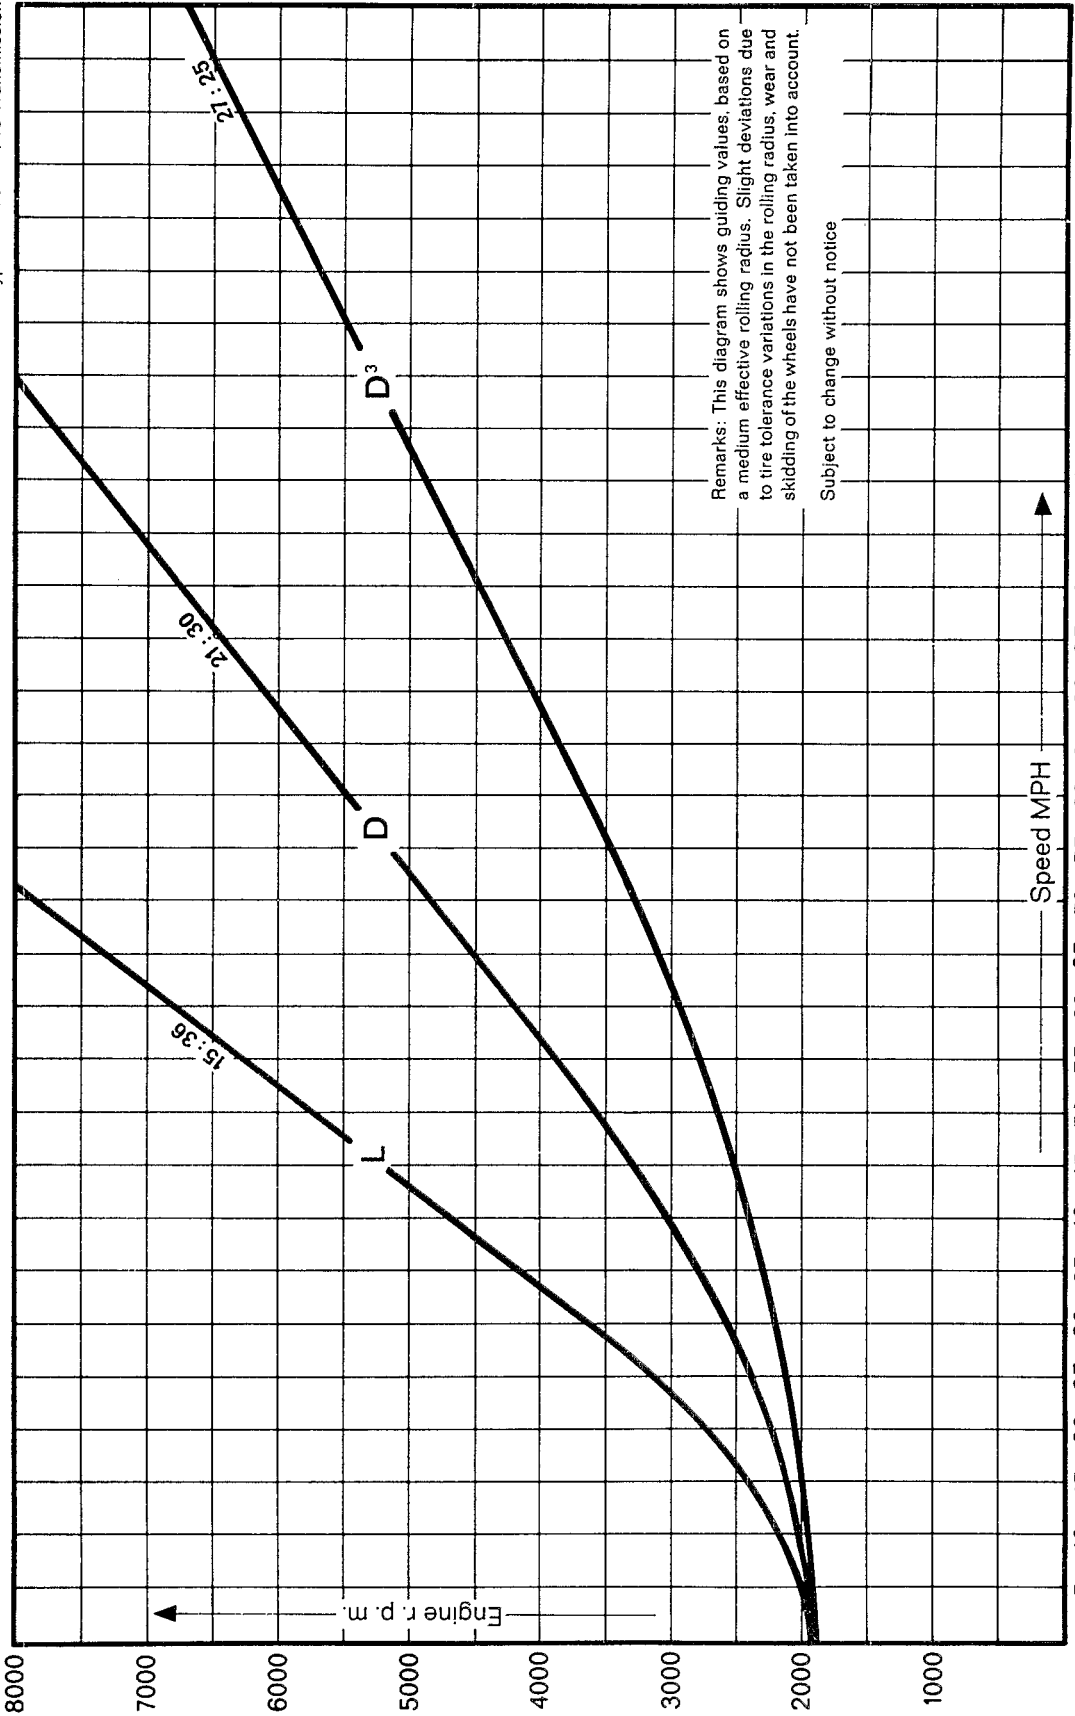

Remarks: This diagram shows guiding values, based on a medium effective rolling radius. Slight deviations due to tire tolerance variations in the rolling radius, wear and skidding of the wheels have not been taken into account.


Subject to change without notice

SPECIAL TOOLS - SPORTOMATIC

| | |
|---------|--|
| P 361 | Mandrel |
| P 362 | Mandrel |
| P 358 a | Installer |
| P 370 | Centering mandrel |
| P 359 | Installer |
| P 351 | Assembly plate |
| P 37 | Input shaft holder |
| P 353 a | Remover |
| P 260 | Support plate |
| P 218 | Mandrel |
| P 262 | Pilot mandrel |
| P 371 | Thrust piece |
| P 372 | Centering mandrel |
| P 360 | Installer |
| P 364 | Assembly sleeve |
| P 254 | Puller and installer |
| P 256 a | Input shaft lock |
| P 252 | Socket, 32 mm |
| P 255 | Guide sleeve |
| P 265 b | Thrust piece |
| P 263 | Thrust piece |
| P 264 b | Installer |
| P 258 | Mandrel |
| P 258 b | Bushing |
| P 258 c | Gauge block |
| P 357 a | Holder |
| P 357 | Dial gauge holder, spacer, feeler tip (w/o clamping adapter) |
| VW 401 | Press plate |
| VW 402 | Press plate |
| VW 412 | Thrust piece |
| VW 426 | Thrust sleeve |
| VW 405 | V-block |
| VW 407 | Thrust piece |
| = | New special tools |


TRANSMISSION

TOOLS

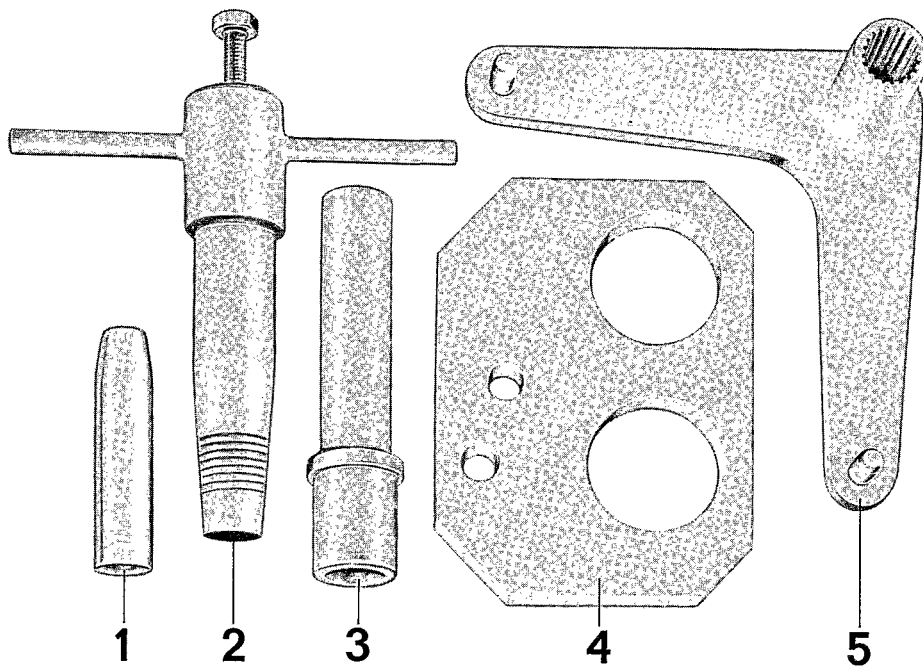

| No. | Description | Special Tool | Remarks |
|-----|--------------------|--------------|---------|
| 1 | Sleeve | P 382 | |
| 2 | Puller | P 386 | |
| 3 | Driver | P 381 | |
| 4 | Shift rod holder | P 260 a | |
| 5 | Input shaft holder | P 37 a | |

Disassembling and Assembling Manual Transmission

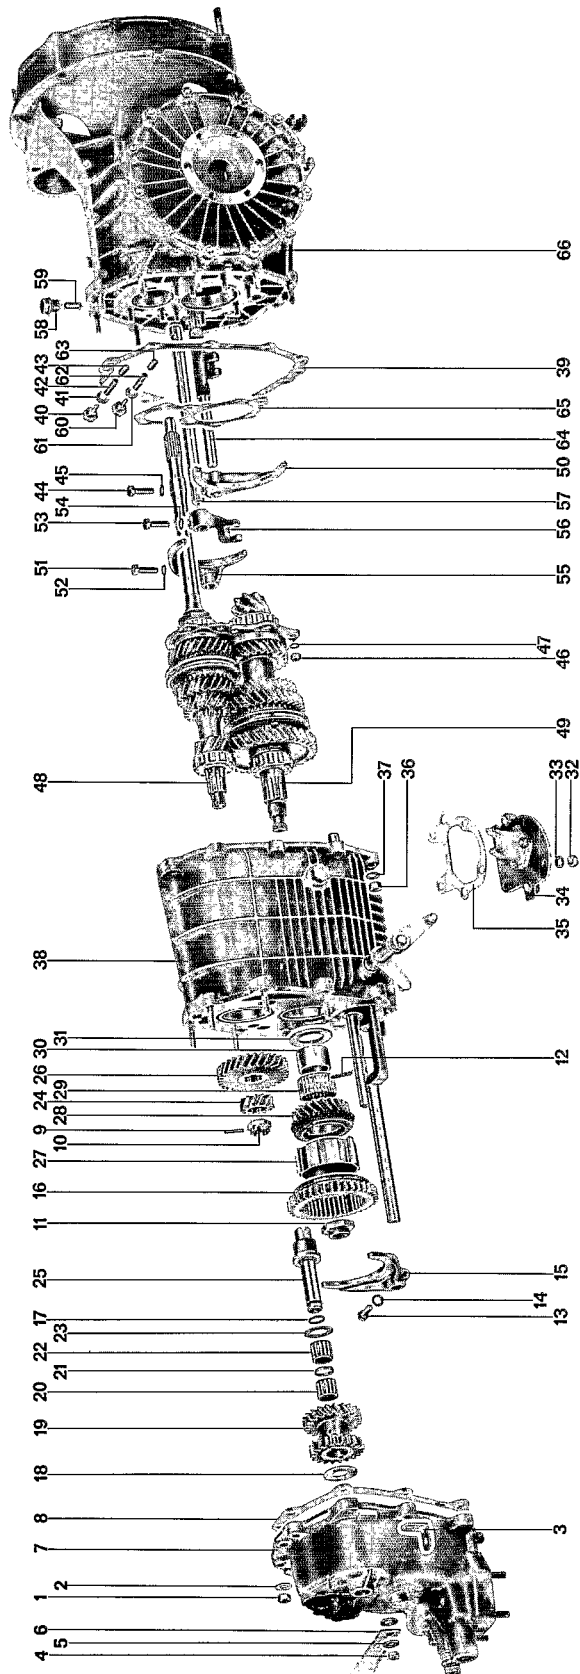

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|----------------------------------|-----|------------|--|--------------------------|
| | | | Removing | Installing | |
| 1 | Self-locking nut | 8 | | Replace if necessary, torque to specification. | |
| 2 | Washer | 7 | | | |
| 3 | Clutch cable bracket | 1 | | | |
| 4 | Self-locking nut | 1 | | Replace if necessary, torque to specification. | |
| 5 | Washer | 2 | | Place one on each side of ground strap. | |
| 6 | Ground strap | 1 | | | |
| 7 | Front transmission cover | 1 | | | |
| 8 | Gear housing gasket | 1 | | Replace. | |
| 9 | Roll pin | 1 | Drive out. | Replace if necessary. | |
| 10 | Castellated nut | 1 | | Torque to specification. | 3.1-1/13 |
| 11 | Flange nut | 1 | | Replace, torque to specification. | 3.1-1/13 |
| 12 | Roll pin | 1 | Drive out. | Replace if necessary. | |
| 13 | Bolt | 1 | | Torque to specification. | |
| 14 | Spring washer | 1 | | Replace if necessary. | |
| 15 | Shift fork, 5th and reverse gear | 1 | | Readjust. | 3.1-2/2 |

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|--------------------------------------|-----|---|---|-----------------------------|
| | | | Removing | Installing | |
| 16 | Sliding gear, 5th and reverse gear | 1 | | Check for wear. | |
| 17 | O-ring | 1 | | Replace, oil lightly. | |
| 18 | Thrust washer | 1 | | | |
| 19 | 5th and Reverse idler gear | 1 | | Check for wear. | |
| 20 | Needle bearing cage | 1 | | Check for wear. | |
| 21 | Intermediate ring | 1 | | | |
| 22 | Needle bearing cage | 1 | | Check for wear. | |
| 23 | Thrust needle bearing cage | 1 | | Check for wear. | |
| 24 | Reverse speed, Gear I | 1 | | Replace in pairs only. | |
| 25 | Shaft for 5th and Reverse idler gear | 1 | Remove together with fixed Gear I of 5th speed. | Install together with fixed Gear I of 5th speed. | |
| 26 | Gear I, fixed, 5th speed | 1 | | Small flange faces gear housing. Replace in pairs only. | |
| 27 | Guide sleeve | 1 | | Check for wear. | |
| 28 | Gear II, free, 5th speed | 1 | | Check synchronization. Replace in pairs only. | 3.1-8/4 |
| 29 | Needle bearing cage | 1 | Mark position for installation. | Install with same gear. | |
| 30 | Bushing | 1 | Mark position for installation. | Install with same gear. | |

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|-----------------------|-----|---|--|--------------------------|
| | | | Removing | Installing | |
| 31 | Thrust washer | 1 | | | |
| 32 | Self-locking nut | 4 | | Replace if necessary, torque to specification. | |
| 33 | Washer | 4 | | | |
| 34 | Cover with guide fork | 1 | | | |
| 35 | Gasket | 1 | | Replace. | |
| 36 | Self-locking nut | 10 | | Replace if necessary, torque to specification. | |
| 37 | Washer | 10 | | | |
| 38 | Gear housing | 1 | Move selector fork rod for 5th speed and reverse into neutral and remove. | | |
| 39 | Gasket | 1 | | Replace. | |
| 40 | Nut | 1 | | Torque to specification. | |
| 41 | Seal | 1 | | Replace. | |
| 42 | Spring | 1 | | | |
| 43 | Short detent | 1 | | Check for free movement. | |
| 44 | Nut | 1 | | Torque to specification. | |
| 45 | Spring washer | 1 | | Replace if necessary. | |
| 46 | Nut | 10 | | Torque to specification. | |
| 47 | Lock washer | 10 | | Replace. | |


| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|---------------------------------|-----|---|---------------------------|--------------------------|
| | | | Removing | Installing | |
| 48 | Input shaft | 1 | Remove together with pinion shaft, 1st and 2nd speed selector fork, and complete 3rd and 4th speed shift rod. | | 3.1-1/10 |
| 49 | Pinion shaft | 1 | | | |
| 50 | 1st and 2nd speed selector fork | 1 | | Check for wear, readjust. | 3.1-2/1 |
| 51 | Bolt | 1 | | Torque to specification. | |
| 52 | Spring washer | 1 | | Replace if necessary. | |
| 53 | Bolt | 1 | | Torque to specification. | |
| 54 | Spring washer | 1 | | Replace if necessary. | |
| 55 | 3rd and 4th speed selector fork | 1 | | Check for wear, readjust. | |
| 56 | Shift guide | 1 | | Check for wear, readjust. | |
| 57 | 3rd and 4th speed shift rod | 1 | | | |
| 58 | Plug | 1 | | Torque to specification. | |
| 59 | Short detent | 1 | | Check for free movement. | |
| 60 | Bolt | 1 | | Torque to specification. | |

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|-------------------------------------|-----|-------------------------------|-------------------------|-----------------------------|
| | | | Removing | Installing | |
| 61 | Seal | 1 | Replace. | | |
| 62 | Spring | 1 | | | |
| 63 | Short detent | 1 | Check for free movement. | | |
| 64 | 1st and 2nd speed selector fork rod | 1 | | | |
| 65 | Shim | X | Note thickness and quantity . | Recompute if necessary. | |
| 66 | Transmission housing | 1 | | | |


DISASSEMBLING AND ASSEMBLING MANUAL TRANSMISSION

Disassembling


1. Block input shaft with special tool P 37a, engage 5th gear.

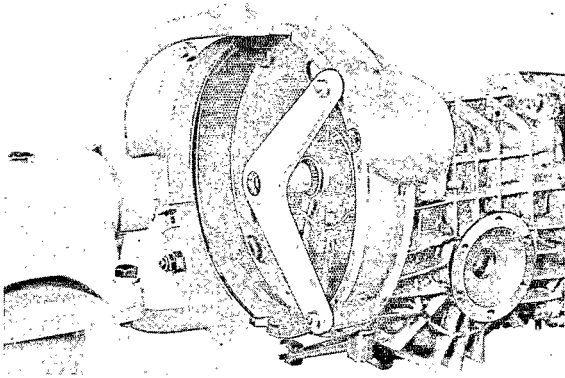

2. Remove castellated nut from input shaft, and flange nut from pinion shaft.

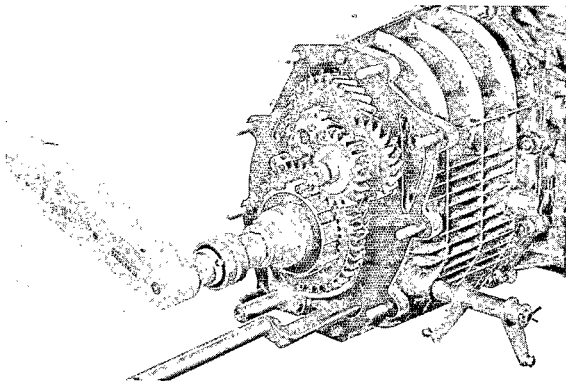

4. Remove guide fork cover with gasket.

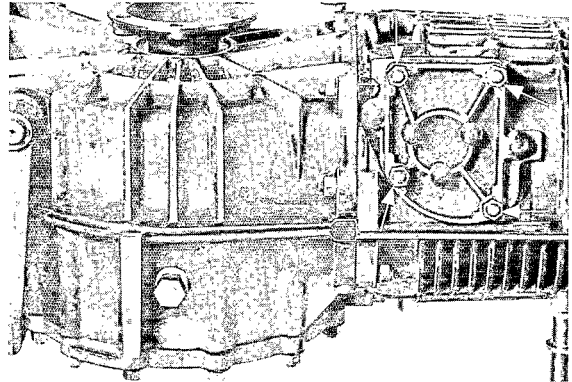


5. Remove nuts from gear housing. Pull housing and selector fork rod (5th and reverse speed), and selector fork rod with selector shaft off the studs (tap lightly with a plastic mallet, if necessary).

Note

Selector fork rod for 5th and reverse speed must be in neutral. Otherwise the gear housing will bind against the rod and cannot be removed.

3. Mark needle bearing of 5th speed free gear; it must be reassembled with same gear.

6. Remove shift detent plug (3rd and 4th gear).
Take out spring and detent.
7. Remove bolt from selector fork of 1st and 2nd gear, gently spread clamping piece with screwdriver.
8. Remove retaining plates for input and pinion shafts.
9. Take input and pinion shafts with complete selector fork rod (3rd and 4th speed) and selector fork (1st and 2nd gear) out of their seats.
10. Remove detent.
11. Remove plug from shift detent (1st and 2nd gear) and take out spring and detent.
12. Take out selector fork rod 1st and 2nd gear.
13. Note the number and thickness of shims between transmission housing and retaining plates for reinstallation.

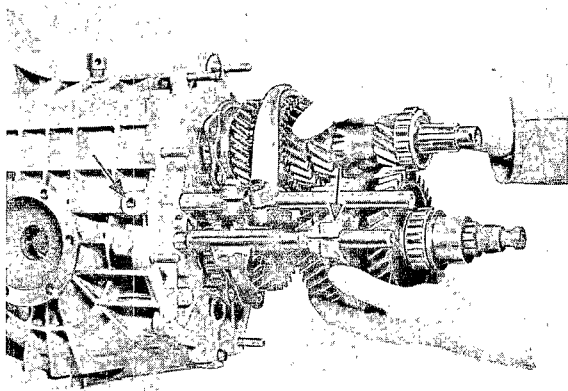



Assembling

1. Place the same number and thickness of shims on the transmission housing studs as noted during disassembly or as determined while adjusting the pinion.
2. Insert 1st and 2nd speed selector fork rod.
3. Insert 1st and 2nd speed shift detent and spring.
4. Torque bolt to specification.
5. Insert pinion shaft with 1st and 2nd speed selector fork so that the pinion comes barely to rest in the bearing race of the transmission housing.

Note


To keep the selector fork from binding on the selector fork rod, slightly open the selector fork clamping piece with a screwdriver.

6. Insert input shaft and push into place together with the pinion shaft.
7. Torque clamping plate nuts to specification.
8. Lightly tighten selector fork bolt (1st and 2nd speed).
9. Insert detent from the top.
10. Unscrew bolts for 3rd and 4th speed selector fork and fork clamping piece. Push fork and clamping plate back so that the selector fork and rod can be installed.

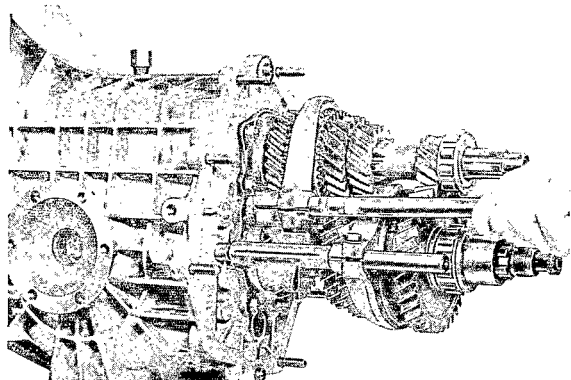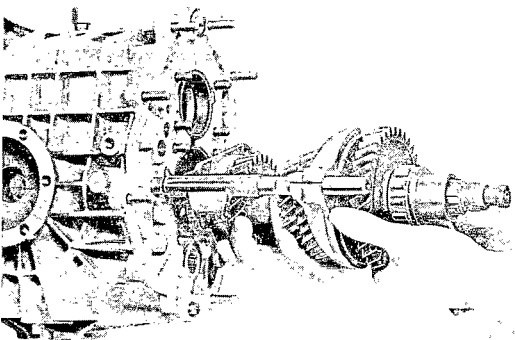

11. Lightly tighten selector fork and fork piece bolts.
12. Insert shift detent and spring, torque plug to specification.
13. Adjust selector forks (see 3.1-2/1).
14. Place transmission housing gasket on the studs.
15. Install gear housing together with selector fork rod (5th speed and reverse) and selector shaft. Tighten to correct torque.
16. Push selector fork rod in the ball sleeve, and selector shaft into the shift pawl guides.
17. Install guide fork cover and gasket. Tighten to correct torque.
18. Install idler gear shaft turning the shaft until the pin in the gear housing prevents it from turning.
19. Install reverse speed Gear I and start castellated nut on threads.
20. Install thrust washer for 5th speed free gear.
21. Install needle bearing with 5th speed free gear.
22. Install guide sleeve for 5th and reverse speed, start flange nut on threads.
23. Install thrust needle bearing cage, idler gear with needle bearing cages and intermediate piece and thrust washer on the idler shaft.
24. Slide 5th speed and reverse sliding gear with selector fork on guide sleeve and selector fork rod. Slightly open the selector fork clamping piece for easier assembly.
25. Lightly tighten selector fork bolt.
26. Apply light coat of oil to the O-ring and install.

27. Block input shaft with special tool P 37a, and engage 5th gear. Tighten input shaft castellated nut and pinion shaft flange nut to correct torque.

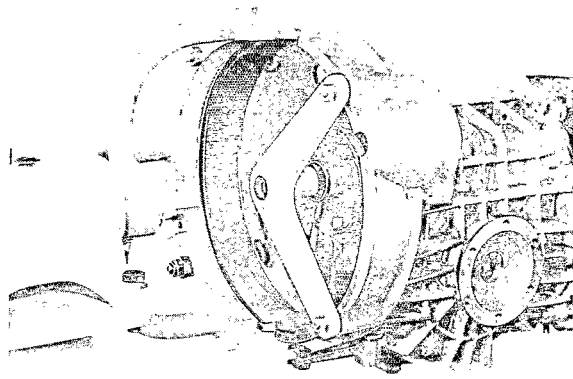

28. Adjust 5th and reverse speed selector fork (see page 3.1-2/2).
29. Secure castellated nut with roll pin; and flange nut by notching.
30. Insert actuating pin for backup light switch with recessed end toward switch.
31. Place gear housing gasket on studs. Install front transmission cover, and tighten nuts to correct torque.

Effective with the listed transmission numbers, the input shaft oil seal can be replaced without the need for disassembling the transmission.

Transmission Type


915/02
915/12
915/08
Special transmissions

from transmission No.


733 7375
723 0507
783 0838
793 1031

Removal

1. Remove transaxle and detach transmission from engine.
2. Screw puller P 386 firmly into the oil seal.

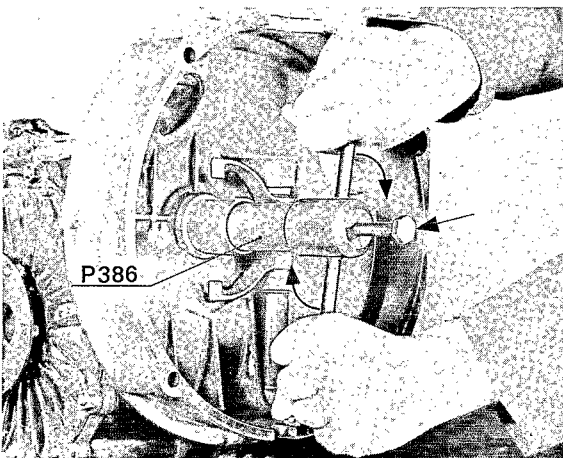

3. Pull oil seal out by turning the hex. bolt in the puller.


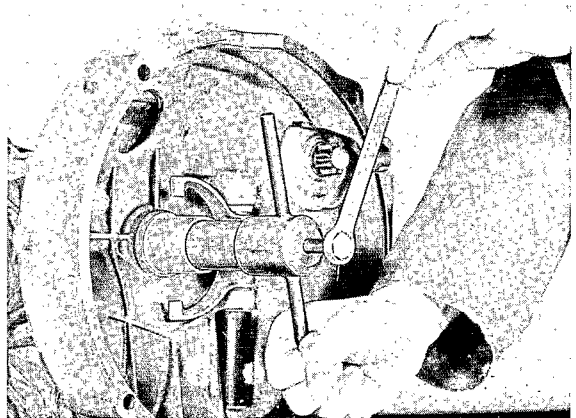


NOTE:


If the (garter) spring should slide off during removal of the seal, pull it off the input shaft with the aid of a wire hook.

Installation

1. Push installation sleeve P 382 onto the input shaft splines.
3. Drive oil seal into its seat with the aid of driver P 381.

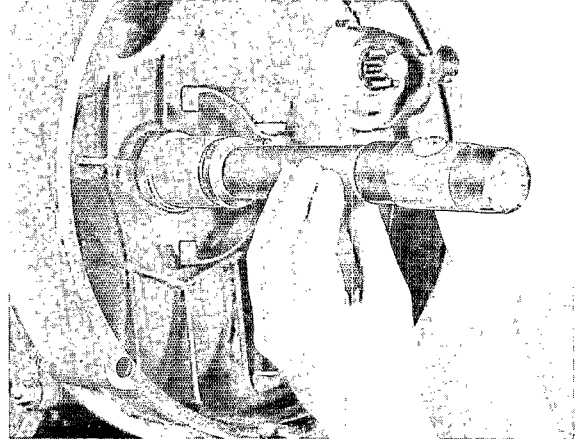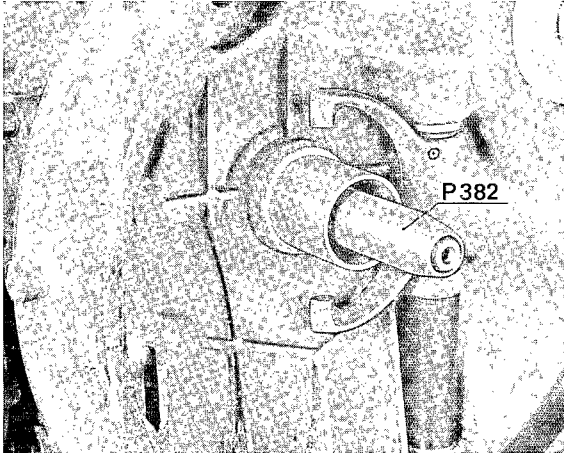

2. Lightly oil the sealing lip of the oil seal and push the seal onto the installation sleeve.

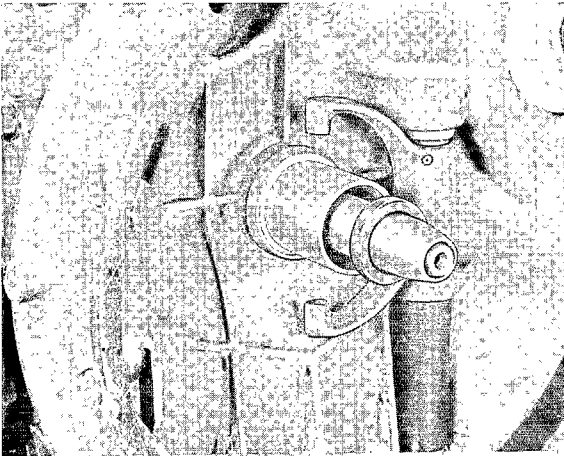


ADJUSTING SELECTOR FORKS

Note

Tighten input shaft flange nut to correct torque before adjusting selector forks.

1. Install mounting plate P 260a. Install 5th speed synchro hub and 5th and reverse speed sliding gear.

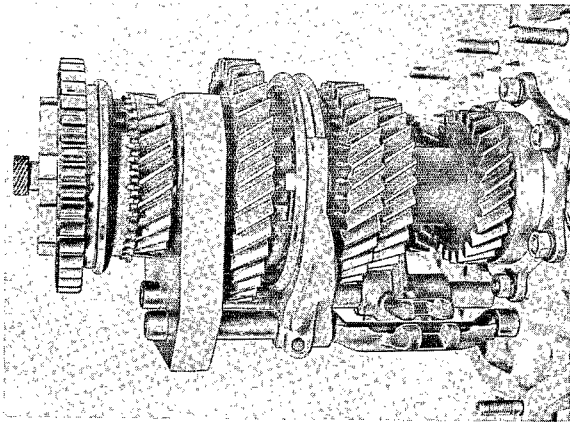


2. Block input shaft with P 37a and engage 5th speed. Tighten input shaft flange nut to correct torque.

3. Turn selector fork rod of 1st and 2nd speed left (in driving direction) to stop, then turn slightly back until the unmachined flat inner surface is almost vertical.

4. Position the 1st and 2nd speed selector fork so that the shift sleeve is exactly in the middle between the synchronizing rings. Tighten bolt to correct torque.

5. Adjust 3rd and 4th speed selector fork in the same way as 1st and 2nd speed. Tighten bolt to correct torque.

6. Position 3rd and 4th speed shift guide flush with the selector fork. Make sure there is 2-3 mm (0.8-0.12 in.) clearance between the 3rd and 4th speed shift guide and the 1st and 2nd speed shift guide. They must not touch. (see illustration).

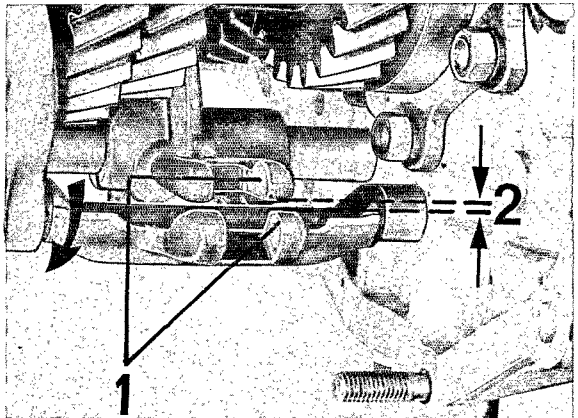

1 - Install aligned

2 - 2 to 3 mm play


Note

Do not turn it back beyond the middle point or all the way to the right stop.

7. To ensure proper synchronization, check ease of shifting. Readjust if necessary.

Adjusting 5th and Reverse Speed Selector Fork

1. Push the idler gear on shaft against fixed gear I of 5th speed. Adjust clearance between idler gear and sliding gear in neutral position. Clearance should be 1 mm (0.04 in.).

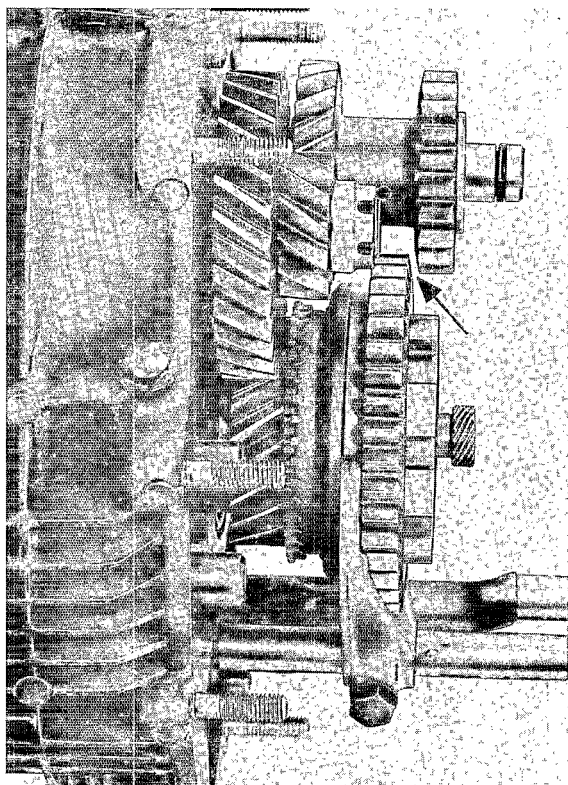


Caution

Push the idler gear gently in direction of travel; there should be no play between the shift fork and the sliding gear groove. This eliminates the possibility of the sliding gear hitting the idler gear in cases of tolerance build-up.

2. Tighten selector fork bolt to correct torque.
-


DISASSEMBLING AND ASSEMBLING FRONT COVER

TOOLS

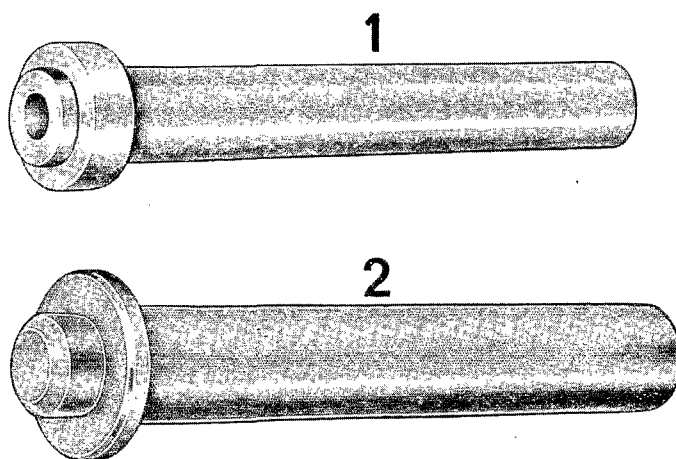

| Nr. | Description | Special Tool | Remarks |
|-----|-------------|--------------|---------|
| 1 | Mandrel | P 374 | |
| 2 | Mandrel | P 369 | |

Disassembling and Assembling Front Cover

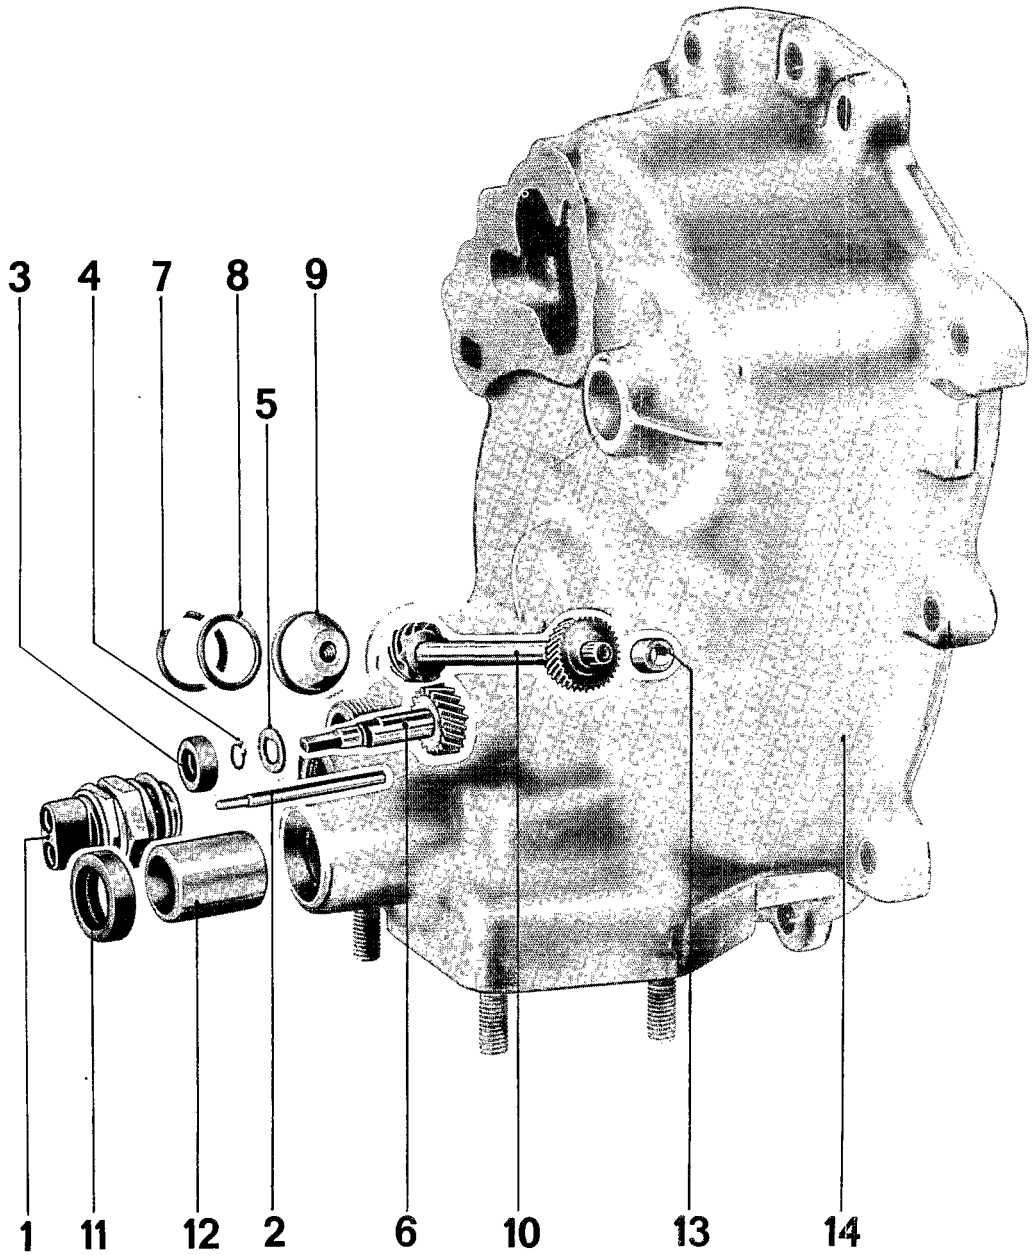


| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|--------------------------|-----|---|---|--------------------------|
| | | | Removing | Installing | |
| 1 | Backup light switch | 1 | | Torque to specification. | |
| 2 | Actuating pin | 1 | | Position properly. | 3.1-1/13 |
| 3 | Seal | 1 | Press out with small screwdriver. | Drive fully into seat with P 374. | 3.1-3/4 |
| 4 | Retainer | 1 | | Replace if necessary. | |
| 5 | Thrust washer | 1 | | | |
| 6 | Speedometer drive | 1 | | | |
| 7 | Retainer | 1 | | Seat properly. | |
| 8 | O-ring | 1 | | Oil lightly. | |
| 9 | Positioning piece | 1 | | | |
| 10 | Worm shaft | 1 | | | |
| 11 | Seal | 1 | Pry out with screwdriver. | Drive in with P 369 until fully seated. | 3.1-3/4 |
| 12 | Shift rod bushing | 1 | | Replace. | |
| 13 | Bushing | 1 | Heat the cover to approx. 120°C (250°F) on hot plate then pull out; drill out if necessary. | Heat the cover to approx. 120°C (250°F) on hot plate. Drive on with suitable mandrel. | |
| 14 | Transmission front cover | 1 | | | |

DISASSEMBLING AND ASSEMBLING

Disassembling


1. Heat transmission cover to approximately 120°C (250°F) and pull speedometer gear shaft bushing out; drill out, if necessary.

3. Drive on seal for speedometer drive with special tool P 374.

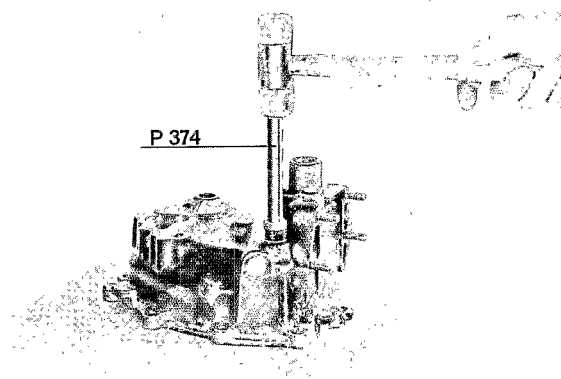


Assembling

1. Heat transmission cover to approximately 120°C (250°F) and drive gear shaft bushing in with a suitable mandrel.
2. Drive on seal for shift rod with special tool P 369.

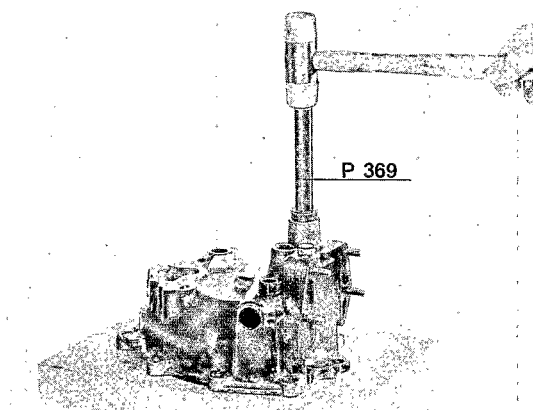


DISASSEMBLING AND REASSEMBLING OIL PUMP

TOOLS

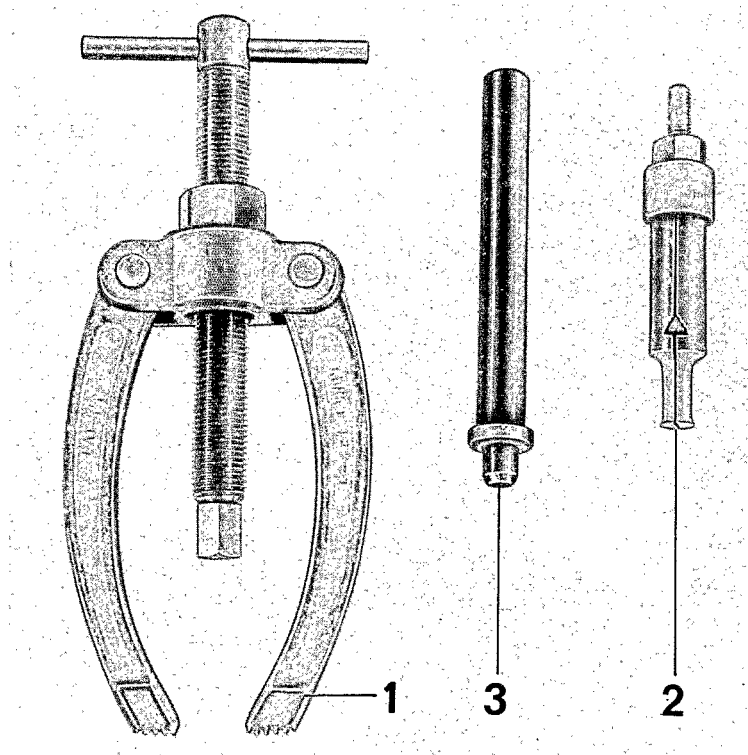

| No. | Description | Special Tool | Remarks |
|-----|---------------|--------------|-----------------------------|
| 1 | Support | - | Commercial, KUKKO Nr. 22-1 |
| 2 | Inside puller | - | Commercial, KUKKO Nr. 21-02 |
| 3 | Drift | P 368 | |

Disassembly and Reassembly

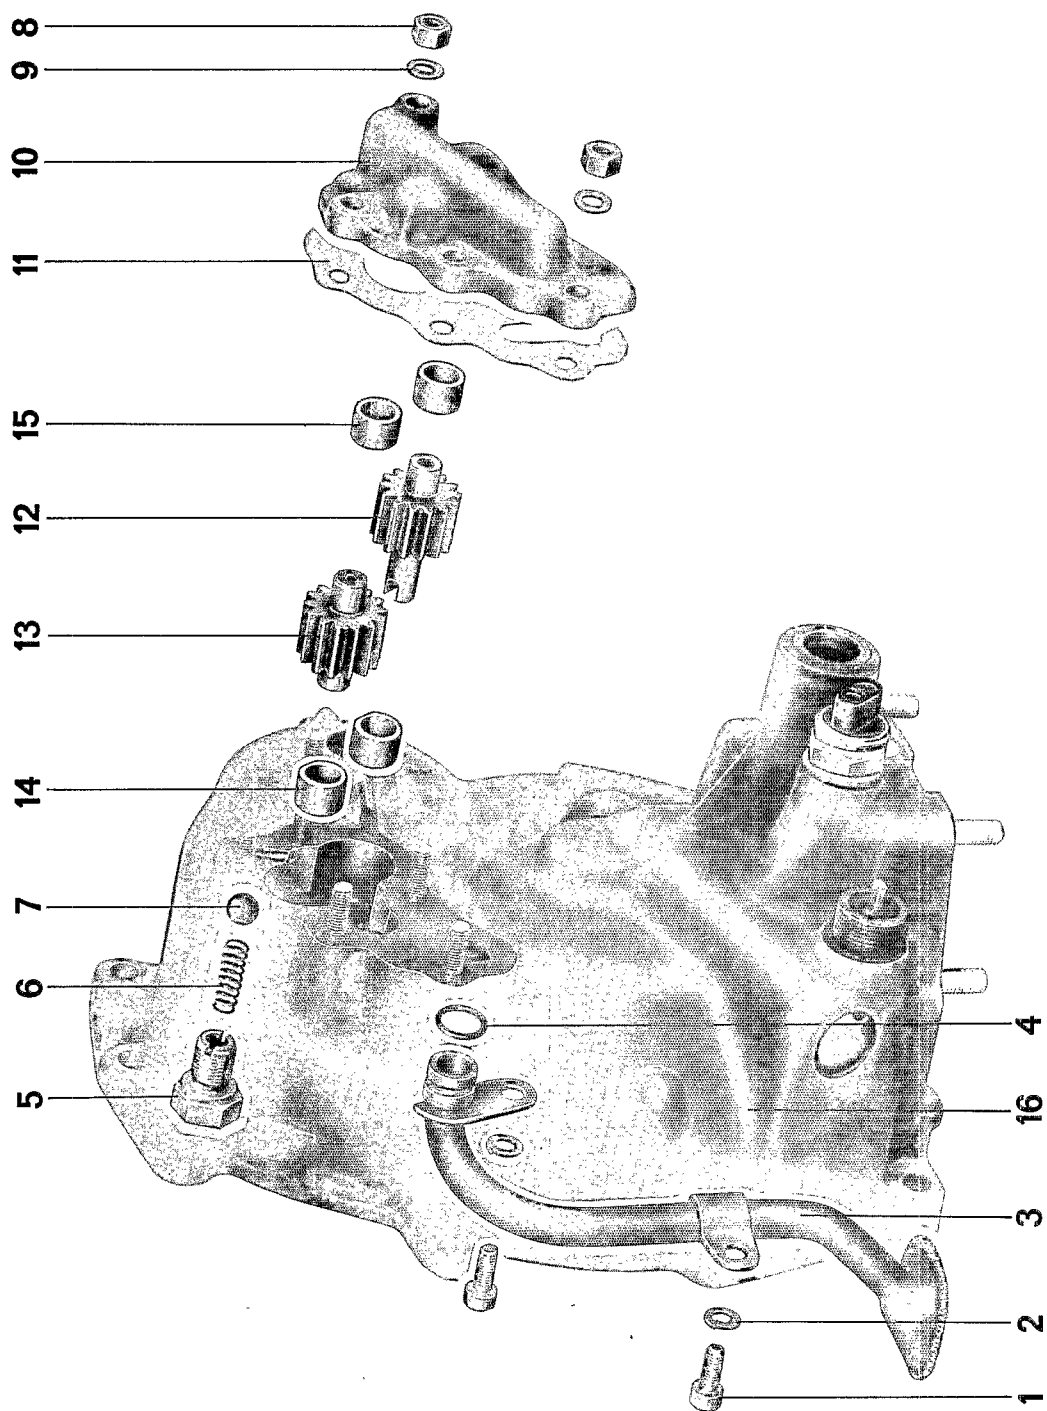


| No. | Description | Qty | Note when removing installing | | Special instructions see |
|-----|--------------------------------|-----|---|---|-----------------------------|
| 1 | Allen bolt | 2 | | Torque to specification. | |
| 2 | Lock washer | 2 | | Replace. | |
| 3 | Pickup tube | 1 | | | |
| 4 | O-ring | 1 | | Replace. Oil lightly. | |
| 5 | Plug for pressure relief valve | 1 | Ball and spring can fall out. | Torque to specification. | |
| 6 | Spring | 1 | | | |
| 7 | Ball | 1 | | | |
| 8 | Self-locking nut | 5 | | Tighten cross-wise to specified torque. Check oil pump gears for free movement. | 3.1 - 3/9 |
| 9 | Washer | 5 | | | |
| 10 | Oil pump cover | 1 | | | |
| 11 | Gasket | X | Note number and thickness for reassembly. | Recalculate thickness, if necessary. | 3.1 - 3/9 |
| 12 | Oil pump gear I | 1 | | Check freedom of movement. End play approx. 0.05 mm. | |
| 13 | Oil pump gear II | 1 | | Check freedom of movement. End play approx. 0.05 mm. | |
| 14 | Bushing | 2 | Drive out with proper punch. | Drive in, properly oriented, with P 368. | 3.1 - 3/9 |
| 15 | Bushing | 2 | Pull out with KUKKO inside puller. | Drive in, properly oriented, with P 368. | 3.1 - 3/8 |
| 16 | Transmission front cover | 1 | | | |

INSTRUCTIONS FOR DISASSEMBLY AND REASSEMBLY


Disassembly

1. Note the thickness and number of gaskets when removing the oil pump cover to simplify reassembly.
2. Note proper orientation of the bushings. Mark lubricating hole.
3. Use a KUKKO inside puller to remove bushings of oil pump gears from oil pump cover. Place a protector between the puller and the cover to avoid damage to the sealing surface.

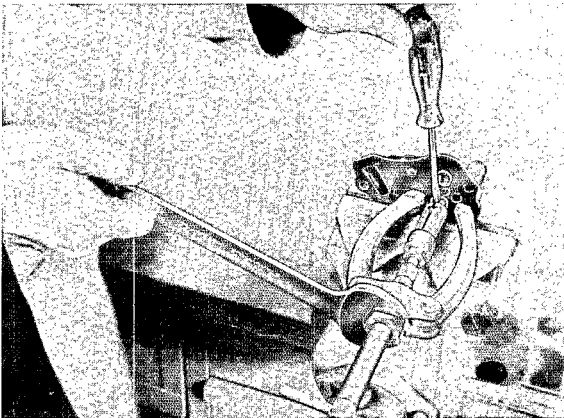


Reassembly


1. Drive bushings into oil pump cover with special tool P 368, making sure that they are properly positioned and fully in. The milled ends of the oil pockets must point towards the pressure chamber or oil pump gears, respectively.

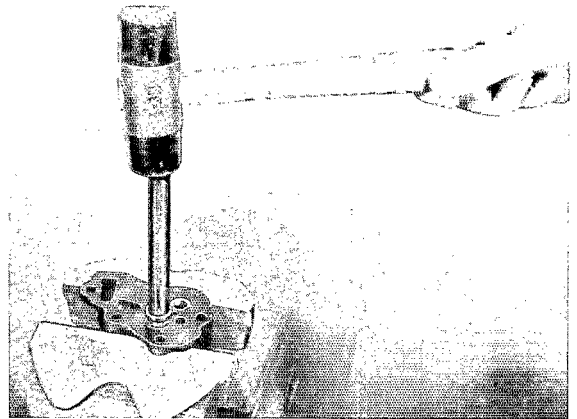


See sketch for exact location.

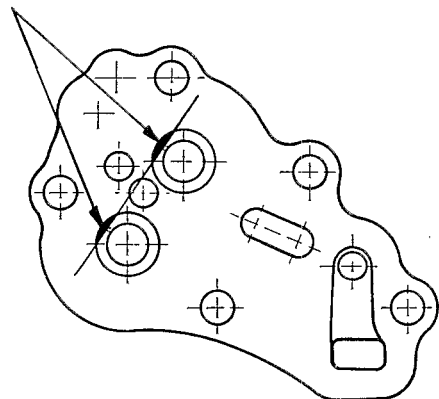

2. Drive bushings into transmission front cover with special tool P 368, making sure that they are properly positioned and fully in. The milled ends of the oil pockets must point towards the pressure chamber or oil pump gears, respectively.

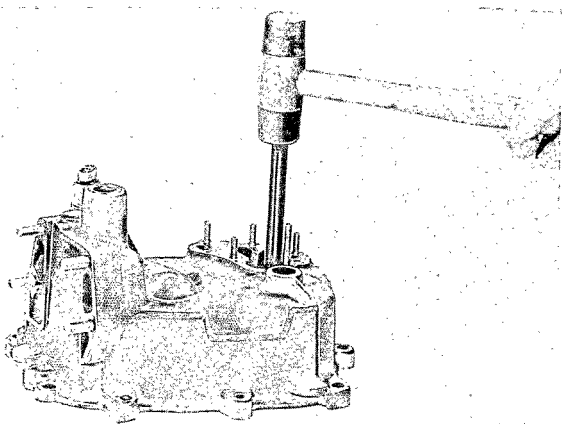

See illustration for exact location.

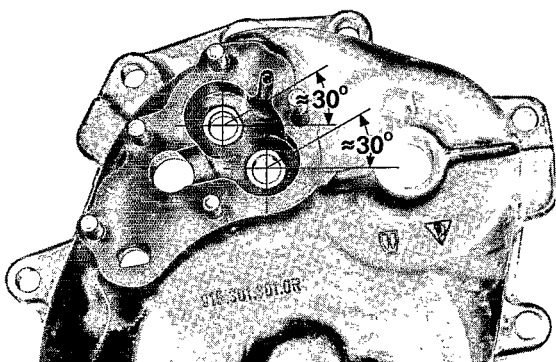

3. Install gaskets in same thickness as noted during disassembly.

4. Install oil pump cover and tighten self-locking nuts cross-wise to specified torque. Keep checking if the pump gears remain free. If necessary, remove cover again and insert gaskets as appropriate.


NOTE

End play of oil pump gears should be 0.05 mm.

5. Tighten plug of pressure relief valve to specified torque.

6. Lightly oil the O-ring for pickup tube.


7. Install Allen bolts for pickup tube, using new lock washers, and tighten to specified torque.

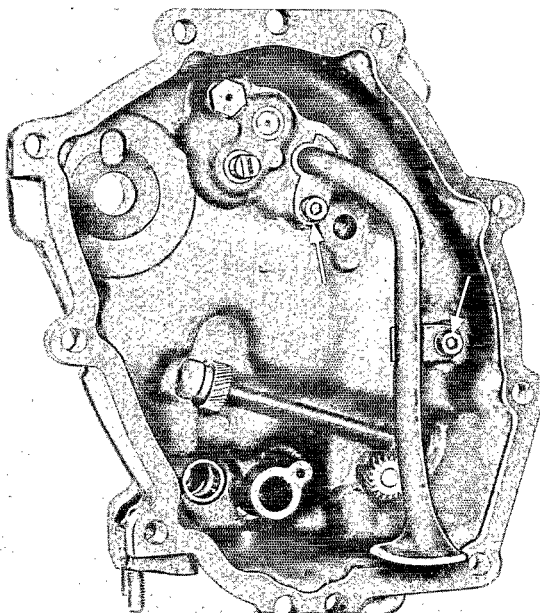

3. Install gaskets in same thickness as noted during disassembly.


DISASSEMBLING AND ASSEMBLING TRANSMISSION HOUSING

TOOLS

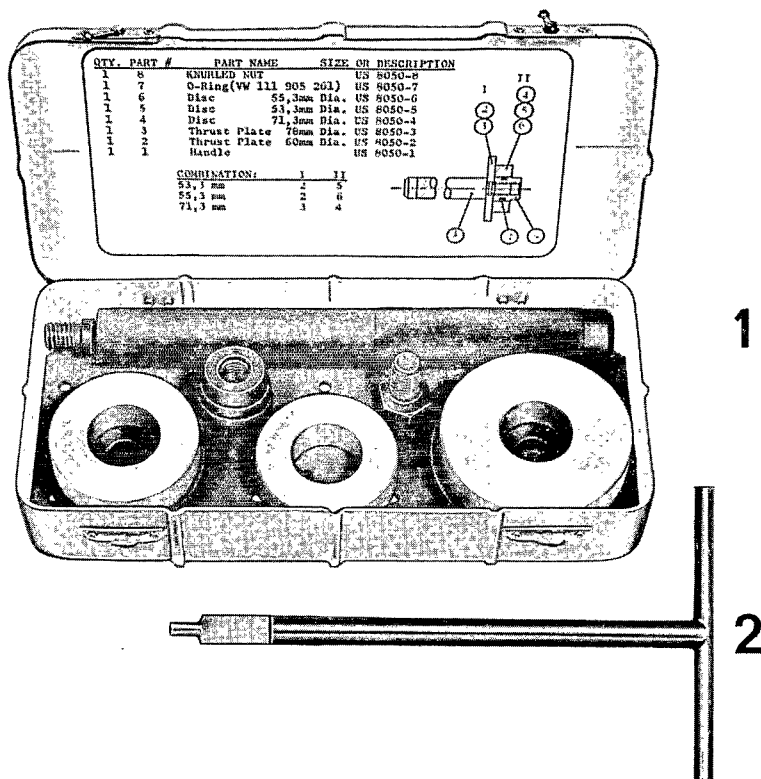

| Nr. | Description | Special Tool | Remarks |
|-----|-------------|--------------|---------|
| 1 | Driver Set | US 8050 | |
| 2 | T-handle | P 366 | |

Disassembling and Assembling Transmission Housing

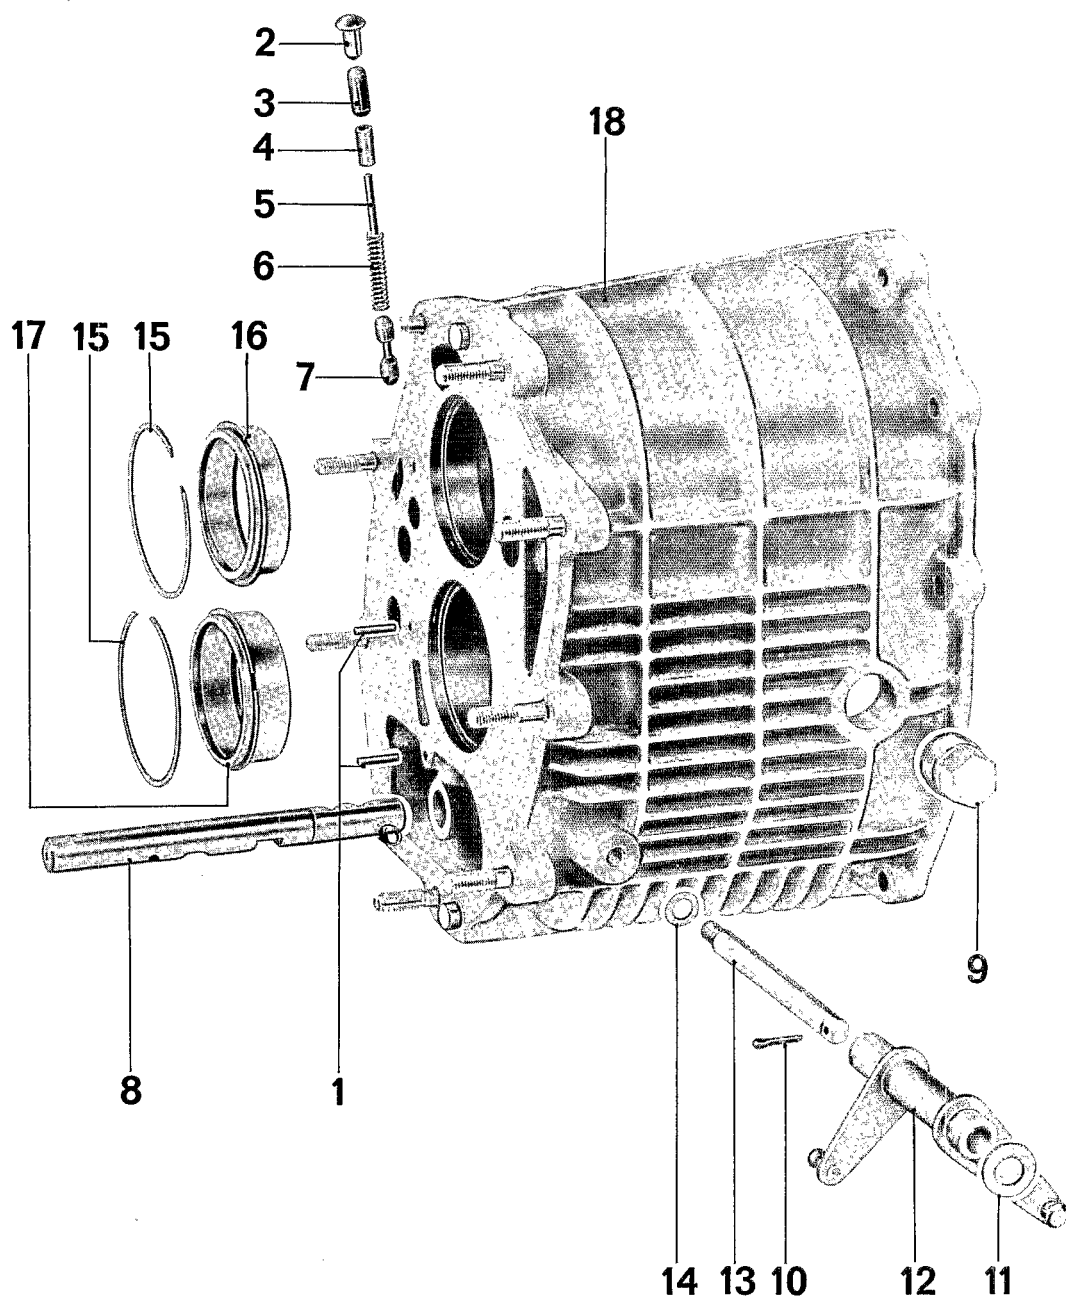

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|--|-----|---|--|--------------------------|
| | | | Removing | Installing | |
| 1 | Roll pin | 2 | Drive out. | Tension spring with P 366 and drive in. | 3.1-4/5 |
| 2 | Plug | 1 | Drive out with flat chisel. | Replace if necessary. | |
| 3 | Short detent | 1 | | | 3.1-4/5 |
| 4 | Sleeve | 1 | | | |
| 5 | Pin | 1 | | | |
| 6 | Spring | 1 | | | |
| 7 | Long detent | 1 | | | |
| 8 | 5th and reverse speed selector (shift) rod | 1 | | | |
| 9 | Plug | 1 | | Torque to specification. | |
| 10 | Cotter pin | 1 | | Replace. | |
| 11 | Washer | 1 | | | |
| 12 | Bellcrank for accelerator linkage | 1 | | | |
| 13 | Shaft | 1 | | | |
| 14 | Washer | 1 | | | |
| 15 | Retainer ring | 2 | Take out with small screwdriver. | | |
| 16 | Bearing outer race | 1 | Heat gear housing to approx. 120°C (250°F) and drive out with special tool US 8050. | Heat gear housing to approx. 120°C (250°F) and drive in with special tool US 8050. | |
| 17 | Bearing outer race | 1 | Heat gear housing to approx. 120°C (250°F) and drive out with special tool US 8050 | Heat gear housing to approx. 120°C (250°F) and drive in with special tool US 8050 | |
| 18 | Gear housing | 1 | | | |

DISASSEMBLING AND ASSEMBLING

Disassembling


1. Drive shift detent securing roll pins out.

2. Drive half-round dowel pin out.

Note


Detent components are under spring tension. Therefore, always remove the roll pin first, then the half-round dowel pin.

3. Heat gear housing to approximately 120°C (250°F) and drive bearing outer races out using special tool US 8050.

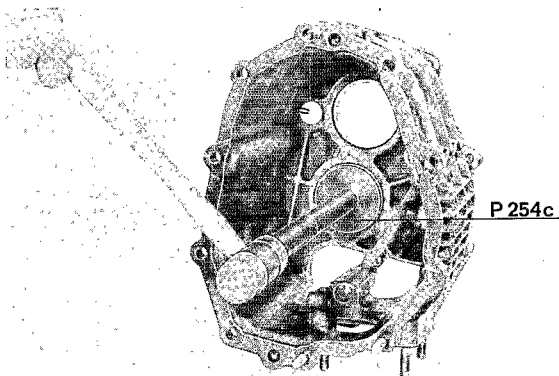

Assembling

1. Heat housing to approximately 120°C (250°F) and drive bearing outer races in with special tool US 8050.

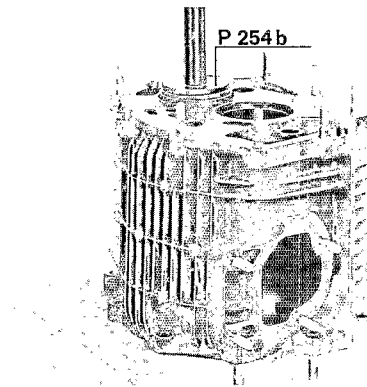


Caution

The bearing outer races differ in inside diameter. The race with the larger inside diameter belongs to the pinion shaft (lower shaft).

2. Install 5th and reverse speed shift rod.


3. Insert long detent and drive roll pin in.

4. Install spring and sleeve, tension both with special tool P 366, and drive roll pin in.

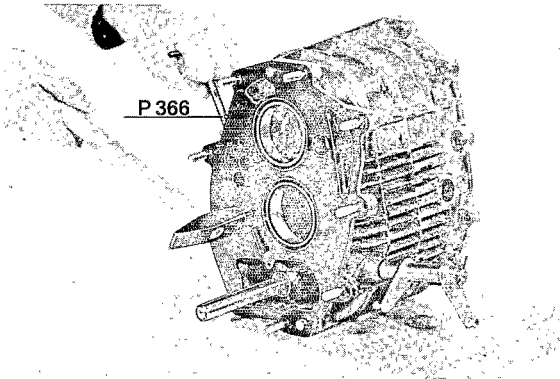


- 1 - Gear housing
- 2 - Half-round dowel pin
- 3 - 3rd and 4th speed selector fork(shift) rod
- 4 - Short detent
- 5 - Roll pin
- 6 - Pin
- 7 - Sleeve
- 8 - Spring
- 9 - Long detent
- 10 - Roll pin
- 11 - 5th and reverse speed selector fork (shift) rod

5. Insert pin and detent (short), then drive the plug in.

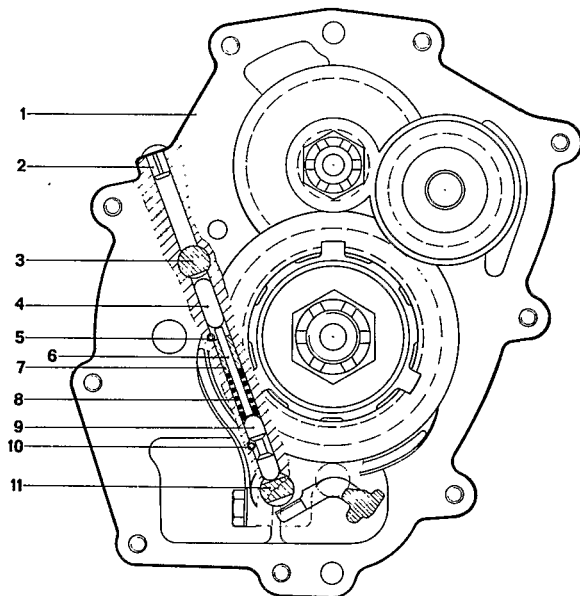


FINAL DRIVE HOUSING

TOOLS

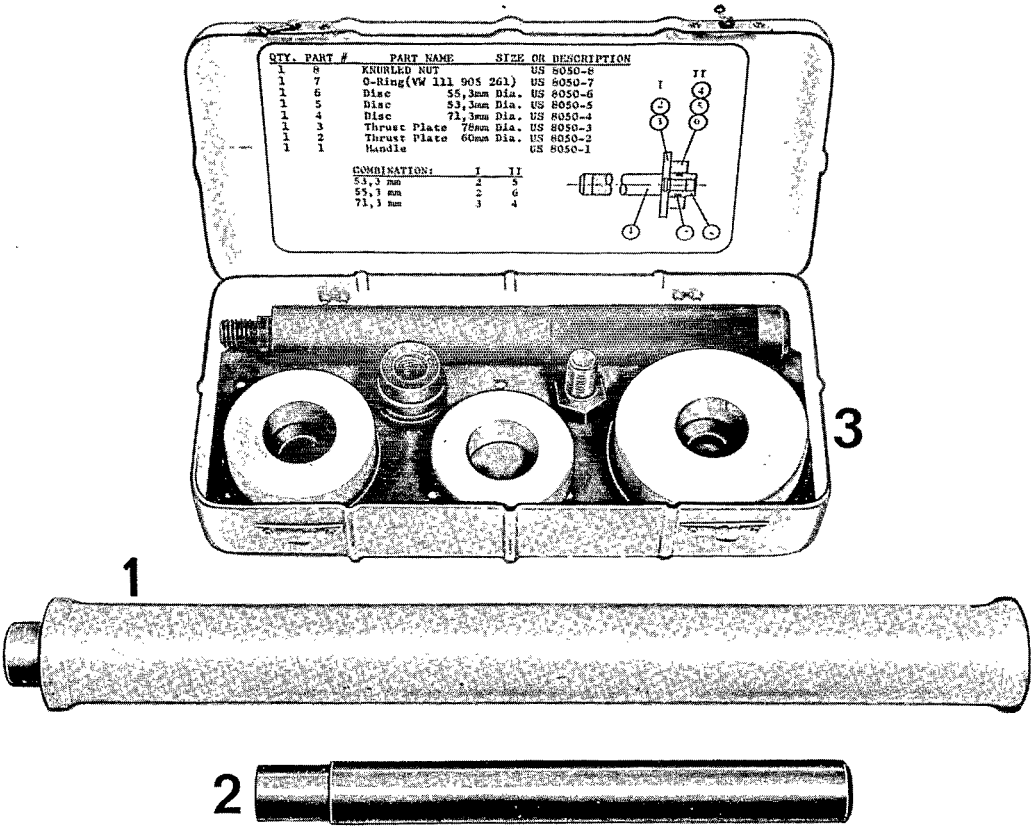

| Nr. | Description | Special Tool | Remarks |
|-----|-------------|--------------|---------|
| 1 | Mandrel | P 360a | |
| 2 | Mandrel | P 375 | |
| 3 | Driver Set | US 8050 | |

Disassembling and Assembling Final Drive Housing

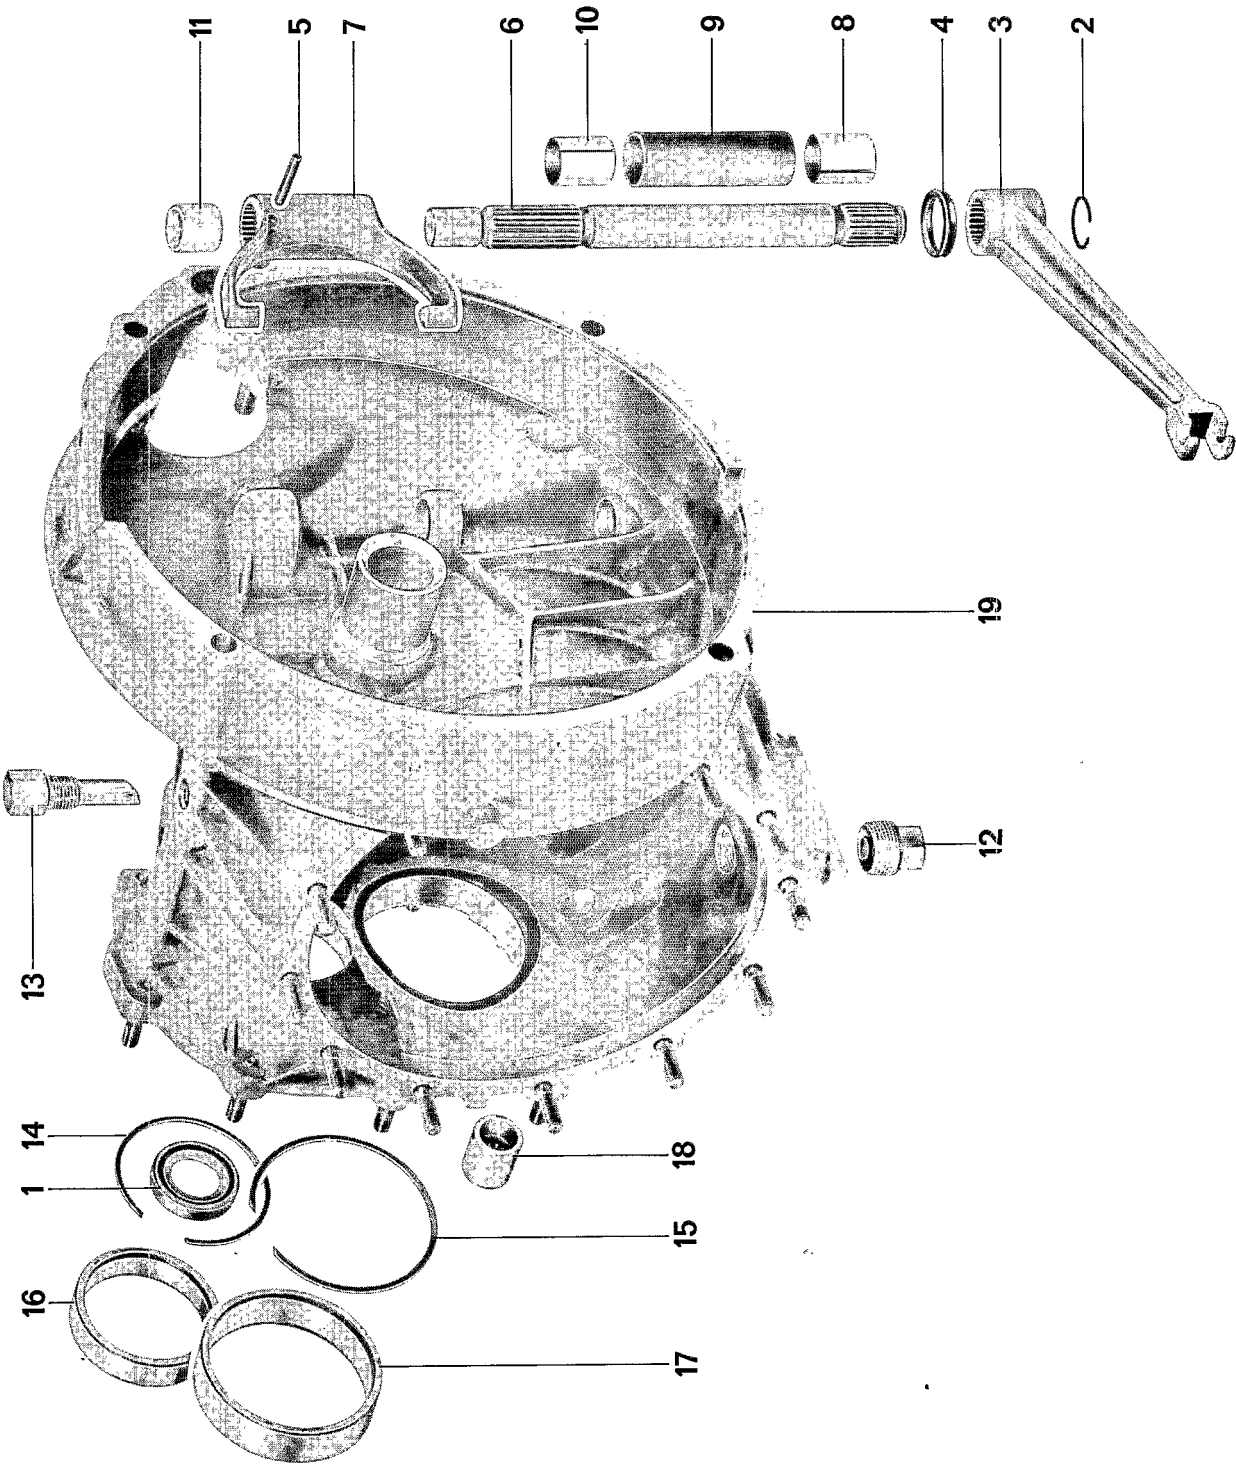


| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|----------------------|-----|---|--|--------------------------|
| | | | Removing | Installing | |
| 1 | Input shaft oil seal | 1 | Drive out in direction of bell housing with an appropriate punch. | Install with P 360a. Sealing lip faces bell housing. | 3.1-5/7 |
| 2 | Snap ring | 1 | | Replace. | |
| 3 | Throwout lever | 1 | Mark lever position on shaft to ensure proper reinstallation. | Readjust if necessary. | 3.1-5/7 |
| 4 | Seal | 1 | | Replace if necessary. | |
| 5 | Roll pin | 1 | Drive out. | Replace if necessary. | |
| 6 | Lever shaft | 1 | | | |
| 7 | Throwout fork | 1 | | Readjust. | |
| 8 | Bushing | 1 | Drive out with P 375. | Drive in with P 375. | 3.1-5/7 |
| 9 | Cover tube | 1 | | | |
| 10 | Bushing | 1 | Drive out with P 375. | Drive in with P 375. | |
| 11 | Bushing | 1 | | | |
| 12 | Plug | 1 | | Clean and torque to specification. | |
| 13 | Breather | 1 | | Position properly, torque to specification. | 3.1-5/6 |
| 14 | Snap ring | 1 | | Make sure it is properly seated. | |

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|----------------------------|-----|--|---|-----------------------------|
| | | | Removing | Installing | |
| 15 | Snap ring | 1 | Note proper seating. | | 3.1-5/6 |
| 16 | Bearing outer race | 1 | Heat transmission housing to 120°C (250°F) on a hotplate and drive out with US 8050. | Heat transmission housing to 120°C (250°F) on hotplate and drive in with US 8050. | |
| 17 | Bearing outer race | 1 | Heat transmission housing to 120°C (250°F) on hotplate and drive out with US 8050. | Heat transmission housing to 120°C (250°F) on hotplate and drive in with US 8050. | |
| 18 | Needle bearing/ bushing | 1 | Drive out with appropriate mandrel. | Drive in with appropriate mandrel. | |
| 19 | Transmission housing | 1 | | | |

DISASSEMBLING AND ASSEMBLING FINAL DRIVE HOUSING

Disassembling


1. Drive out input shaft seal in direction of bell housing with an appropriate mandrel.
2. Drive roll pin out.

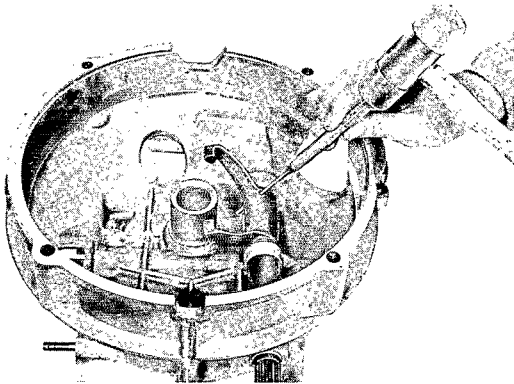

Caution

Mark throwout lever and shaft to ensure proper position when installing.

3. Drive out lever shaft bushings with special tool P 375.

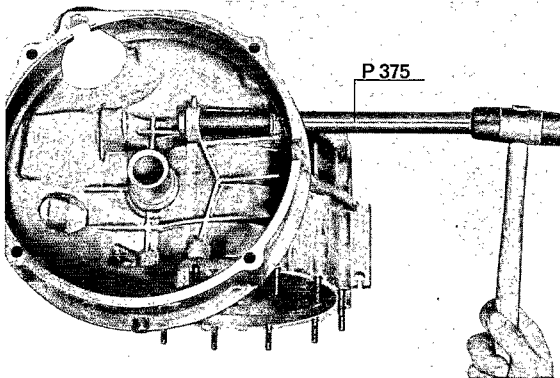


4. Remove bushing.

5. Using a small screwdriver, remove both snap rings from the housing for input shaft and pinion shaft bearings.

Note

The retaining rings are pressed against the housing by the bearing outer races. For this reason, first loosen the bearing racer from the snap rings with a punch.

6. Heat housing to approximately 120°C (250°F) on a hotplate and drive out both bearing outer races with special tool US 8050.

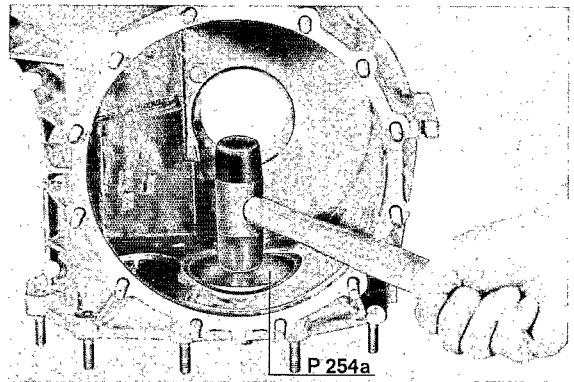

7. Drive out shift rod needle bearing/bushing from inside of housing using an appropriate mandrel.

Assembling

Caution

When cleaning the final drive housing, do not use corrosive cleaning materials as they will damage the magnesium alloy.


1. Clean housing and check for wear, external damage, and cracks. If repair is due to broken pinion shaft of ring gear, check for damage in center web bearing bores. Replace the housing if necessary.

2. Install bearing outer race snap rings in housing grooves.


Note

Position the large snap ring so that its gap will rest in the groove in the housing. In no case should the snap ring gap appear at the sides where the groove is interrupted by a machined cut.

3. Heat housing to approximately 120°C (250°F) on a hotplate and drive both bearing outer races in with special tool US 8050.

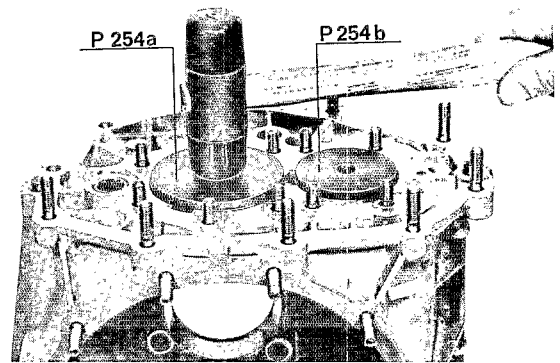


4. Install breather and torque to specification.

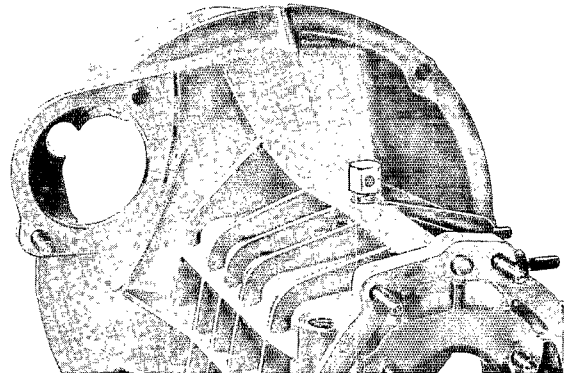


Note

The opening in the hex part of the breather must face forward in direction of travel (toward transmission front cover).

5. Install input shaft seal with P 360a. Sealing lip faces bell housing.

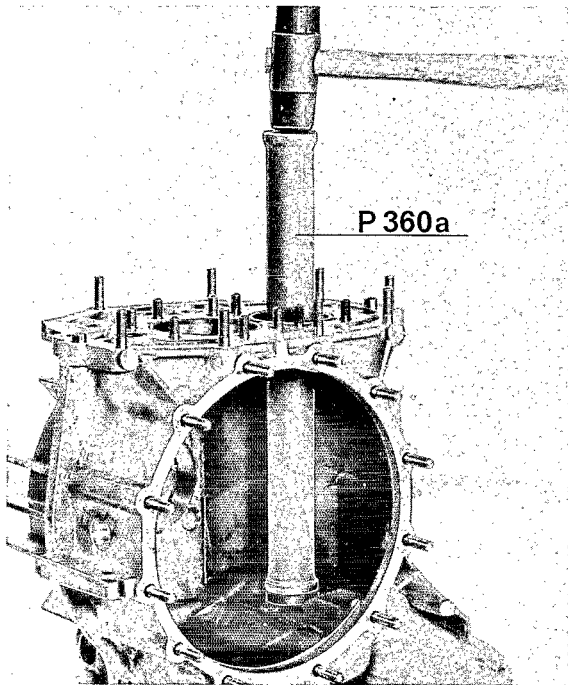

6. Drive in bushings for lever shaft with Special Tool P 375 (see drawing) and coat with grease having a lithium or silicone base.

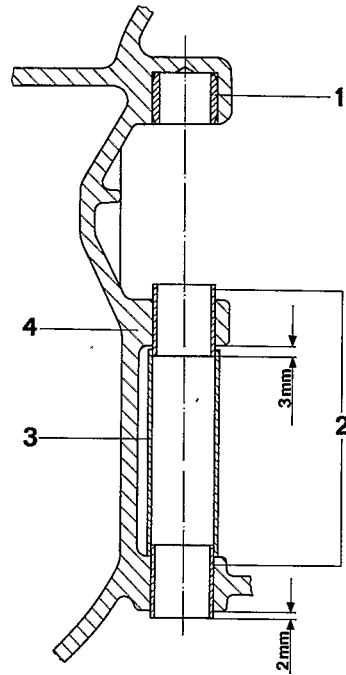

- 1 - Bushing
- 2 - Lever shaft bushing
- 3 - Cover tube
- 4 - Transmission housing

7. Assemble clutch controls.

Note


Throwout fork and throwout lever must be adjusted on the lever shaft splines in order to attain proper lever travel.

Important


8. After making repairs to transmission, apply new protective undercoating to the entire outside of the housing.

The adjustment dimensions are:

From top edge of the bell housing to the tip of the throwout fork = 70 mm

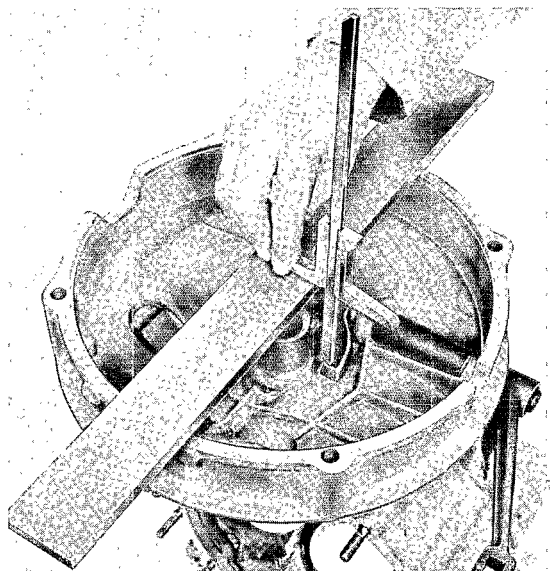

From top edge of bell housing to the bottom throwout lever cut-out = 79 mm

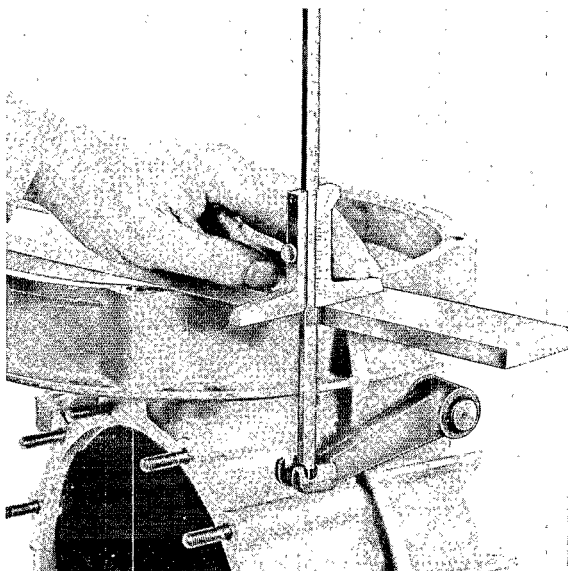

Modified Clutch Release Lever - 1975 Models

The shape of the clutch release lever for transmission types 915/40/45 has been modified due to the location of the pipes of the new exhaust system. This makes it impossible to detach or attach the transmission without first removing the release lever.

After attaching the engine and transmission together, the new release lever must be installed so that it runs parallel to the clutch cable sleeve flange.


Adjustment of the release fork and release lever as in the past is omitted.

NOTE



Due to the simple attachment of the pressure lines, they can be replaced without removal of the gears.

Removal

1. Remove pressure line retaining bolt from gear housing and pull pressure line out.

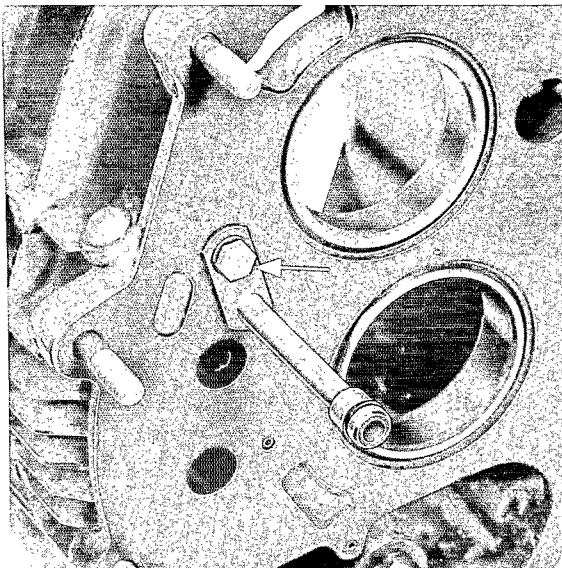


2. Remove retaining bolt of pressure line (spray nozzle for ring and pinion gears) from differential housing and pull the pressure line out.

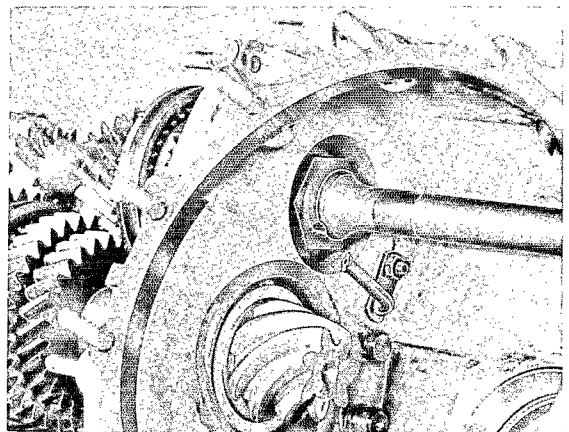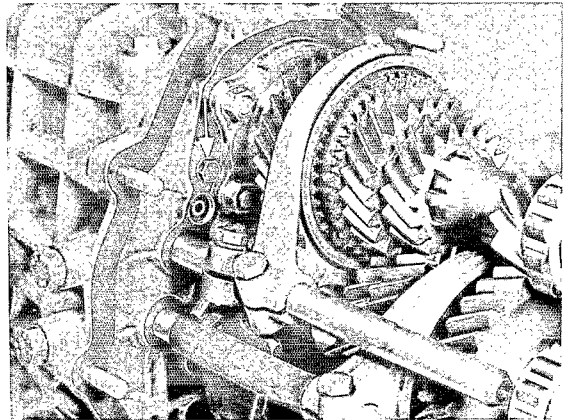**Installation**

1. Install new O-rings and oil lightly.
2. Tighten retaining bolts to specified torque.


TRANSMISSION HOUSING WITH GUIDE TUBE FOR THROWOUT BEARING

TOOLS

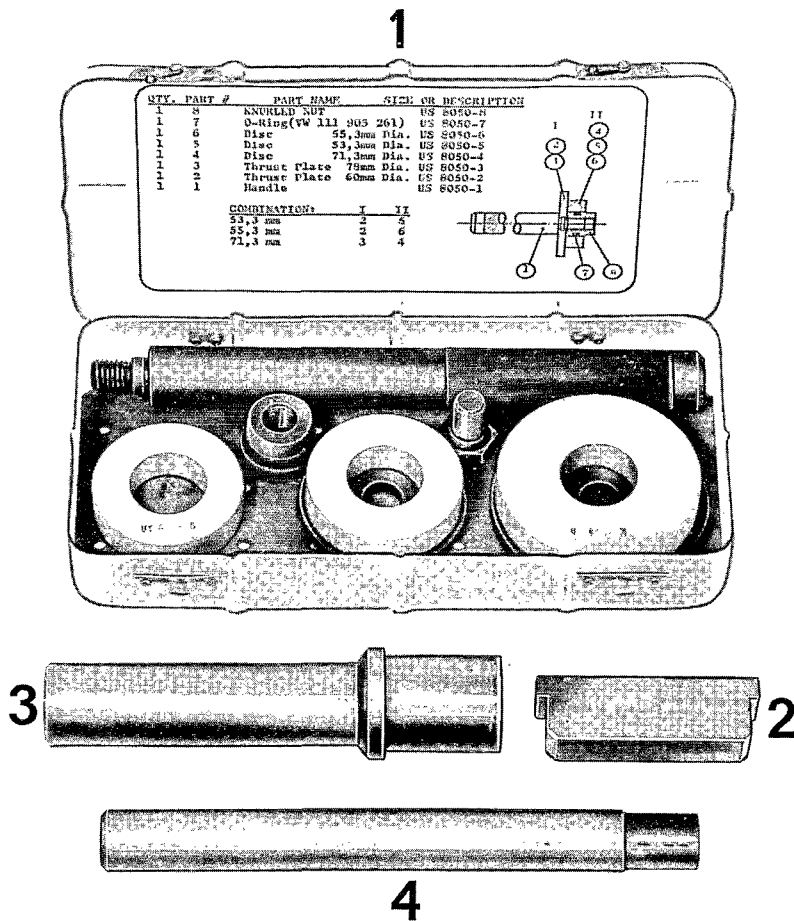

| No. | Description | Special Tool | Remarks |
|-----|--------------|--------------|---------|
| 1 | Driver Set | US 8050 | |
| 2 | Thrust piece | P 254 d | |
| 3 | Sleeve | P 381 | |
| 4 | Mandrel | P 375 | |

Disassembling and Reassembling Differential Housing

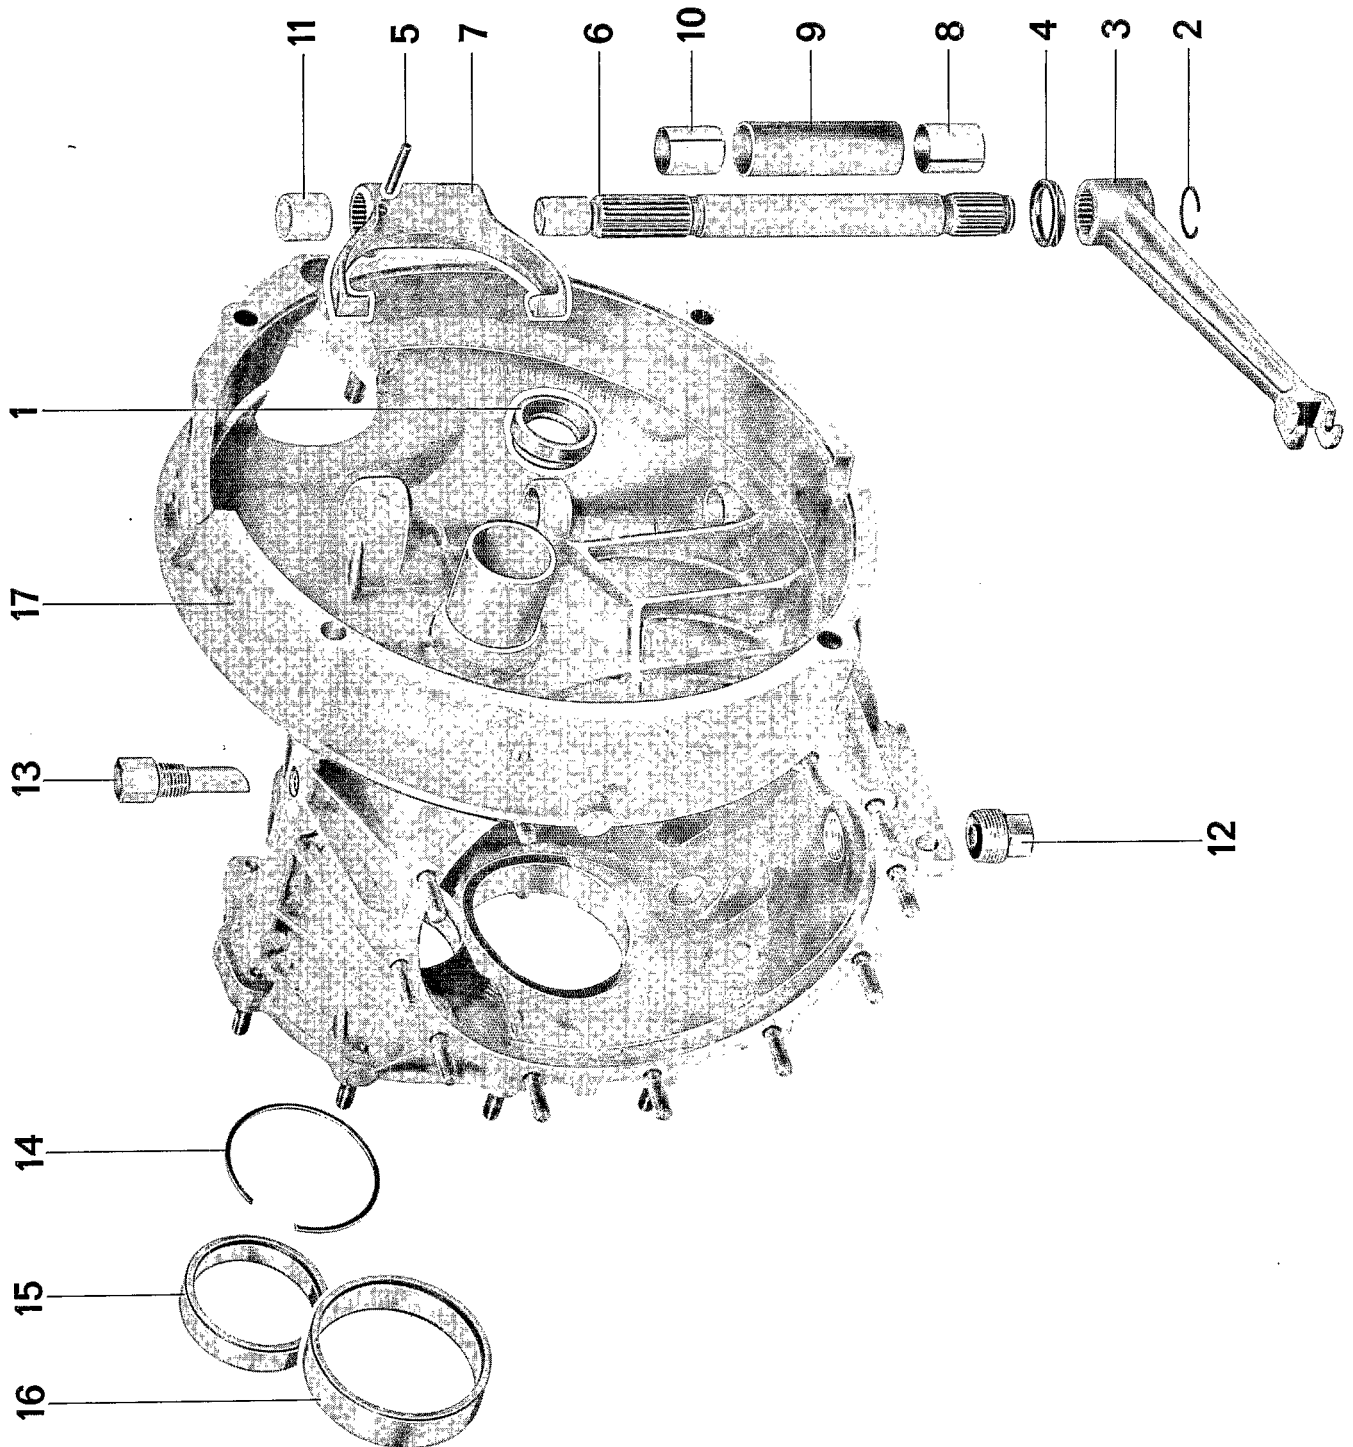


| No. | Description | Qty | Note when: | | Remarks |
|-----|----------------------|-----|---|--|------------|
| | | | removing | installing | |
| 1 | Input shaft oil seal | 1 | Drive out inward with fitting pipe piece | Drive into seat with P 381 | |
| 2 | Snap ring | 1 | | Replace if necessary | |
| 3 | Throwout lever | 1 | Mark lever position on shaft for reassembly | Readjust if necessary | 3.1 - 5/18 |
| 4 | Seal | 1 | | Replace if necessary | |
| 5 | Roll pin | 1 | Drive out with proper punch | Replace if necessary | |
| 6 | Lever shaft | 1 | | | |
| 7 | Throwout fork | 1 | Mark fork position on shaft for reassembly | Readjust if necessary | 3.1 - 5/17 |
| 8 | Bushing | 1 | Drive out with P 375 | Drive in with P 375 in proper position | 3.1 - 5/17 |
| 9 | Cover tube | 1 | | | |
| 10 | Bushing | 1 | Drive out with P 375 | Drive in with P 375 in proper position | 3.1 - 5/17 |
| 11 | Bushing (DELRIN) | 1 | Pry out with angular screwdriver by pressing around sides | Replace if necessary | |
| 12 | Drain plug | 1 | | Clean, torque to specification | |

| No. | Description | Qty | Note when: | | Remarks |
|-----|----------------------|-----|--|---|--------------------------|
| | | | removing | installing | |
| 13 | Breather | 1 | | Position properly and torque to specification | 3.1 - 5/16 |
| 14 | Snap ring | 1 | Remove with small screwdriver | Make sure it is properly seated | |
| 15 | Bearing outer race | 1 | Heat differential housing to approx. 120° C (248° F) and drive race out with US 8050 | Heat differential housing to approx. 120° C (248° F) and drive race in with US 8050 | 3.1 - 5/16 |
| 16 | Bearing outer race | 1 | Heat differential housing to approx. 120° C (248° F) and drive race out with US 8050 | Heat differential housing to approx. 120° C (248° F) and drive race in with US 8050 | 3.1 - 5/15 3.1 - 5/16 |
| 17 | Differential housing | 1 | | | |


DISASSEMBLING AND REASSEMBLING DIFFERENTIAL HOUSING

Disassembly

1. Drive input shaft oil seal inward with the aid of a fitting pipe section.
2. Drive roll pin out with an appropriate punch.

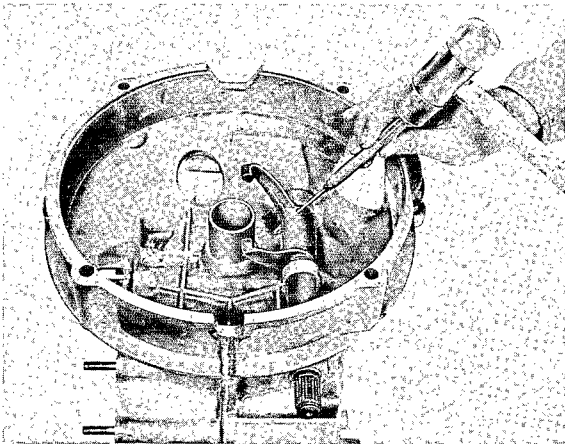

3. Drive out lever shaft bushings with P 375.

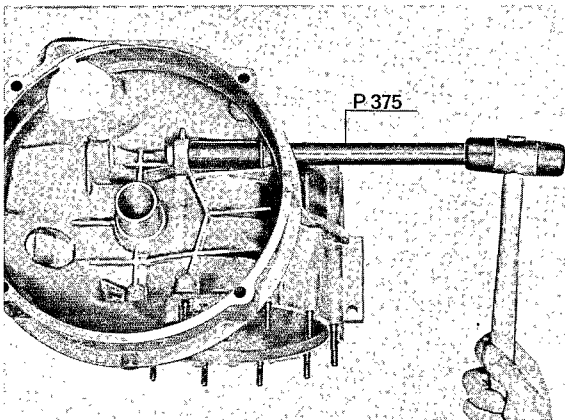


4. Using a small screwdriver, remove snap ring of input shaft bearing race.

NOTE:

The snap ring is pressed against the housing by the bearing race. It is necessary to first drive the bearing race away from the snap ring with the aid of a punch.

5. Heat differential housing to approx. 120° C (248° F) and drive both bearing races out with thrust pieces US 8050 and P 254 d.

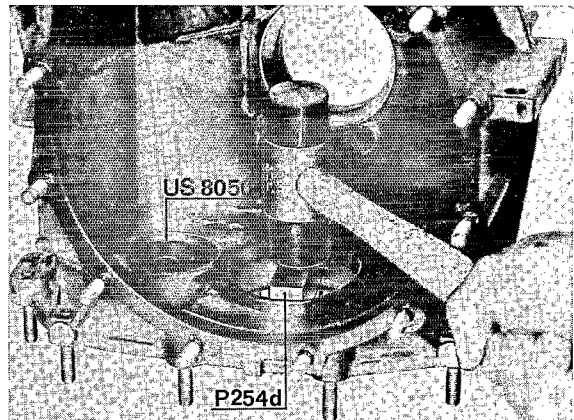

Reassembly


1. Clean differential housing and check for wear, external damage, and cracks. If the repair is due to a damaged pinion shaft or ring gear (such as metal fracturing), check for possible damage to center web bearing bores. Replace the housing if necessary.

NOTE


Pressure-cast housings must not be cleaned with corrosive liquids since these damage magnesium alloys. In addition, cleaned pressure castings must be treated with seasonal corrosion preservatives of bitumen or wax base, such as TECTYL, following transmission repairs to restore the corrosion proofing.

2. Install snap ring securing the input shaft bearing race in the groove in housing.

3. Heat differential housing to approx. 120° C (248° F) and drive both bearing outer races into place with the aid of US 8050.

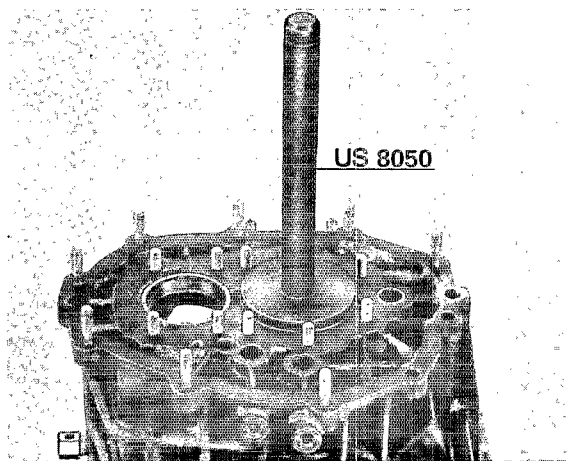

4. Install breather in proper position and torque to specification.

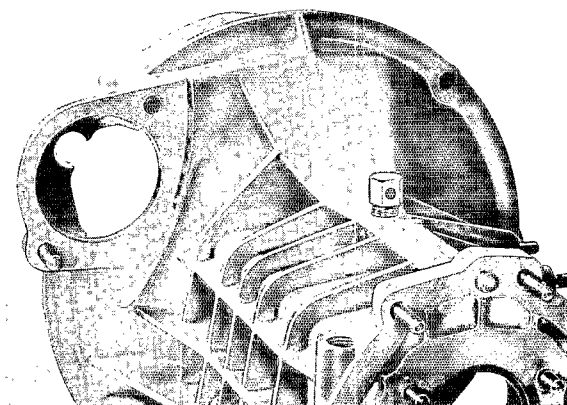

NOTE

The hole in the hex. head of the breather must face forward in direction of travel (toward transmission front cover).


5. Drive input shaft oil seal into place with P 381.

7. Install clutch controls.

6. Drive in bushings for lever shaft with Special Tool P 375 (see drawing) and coat with grease having a lithium or silicone base.


NOTE

Throwout fork and throwout lever must be adjusted on the lever shaft splines to attain proper clutch lever travel.

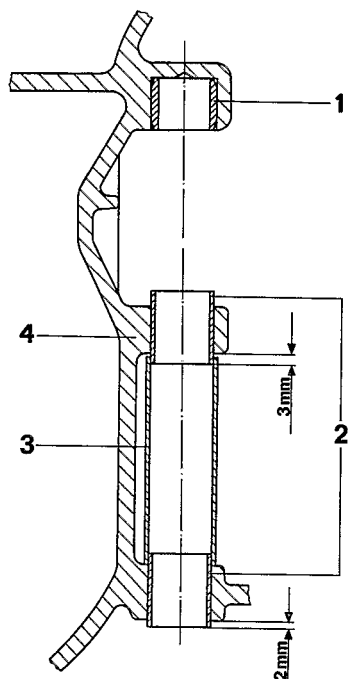


The dimensions are:

From top edge of bell housing to the tip of the throwout fork = 70 mm.

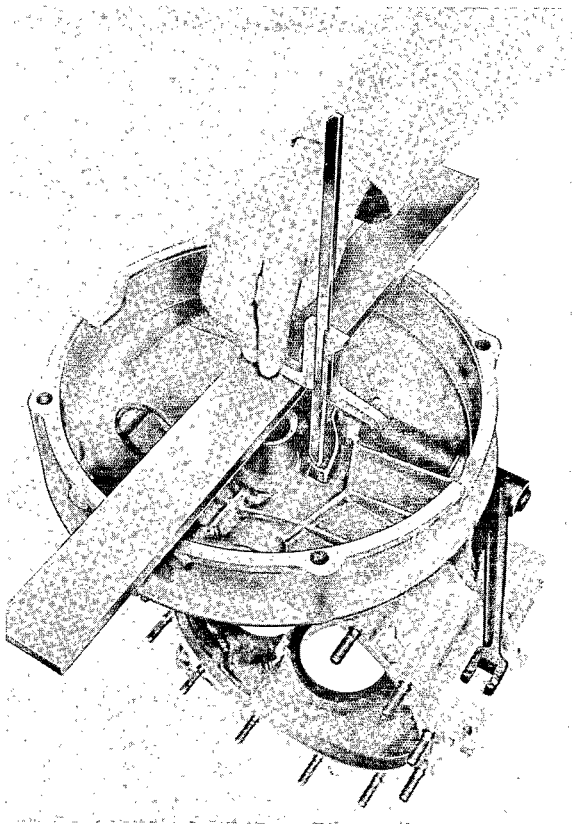

- 1 - Bushing
- 2 - Lever shaft bushing
- 3 - Cover tube
- 4 - Differential housing

From top edge of the bell housing to the root of the claw in the throwout lever = 79 mm.

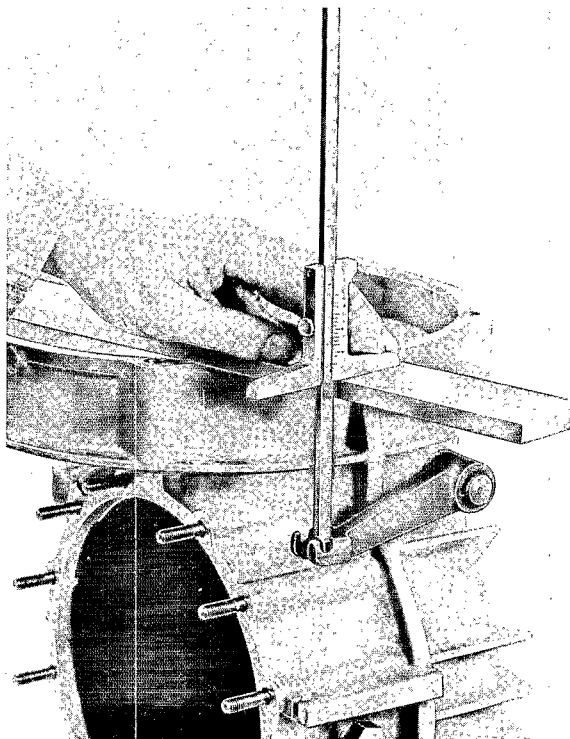

8. Coat guide tube for throwout bearing with MoS₂ multipurpose grease.

Modified Clutch Release Lever - 1975 Models


The shape of the clutch release lever for transmission types 915/40/45 has been modified due to the location of the pipes of the new exhaust system. This makes it impossible to detach or attach the transmission without first removing the release lever.

After attaching the engine and transmission together, the new release lever must be installed so that it runs parallel to the clutch cable sleeve flange.


Adjustment of the release fork and release lever as in the past is omitted.

TRANSMISSION CASE WITH BOLTED GUIDE TUBE FOR RELEASE BEARING

TOOLS

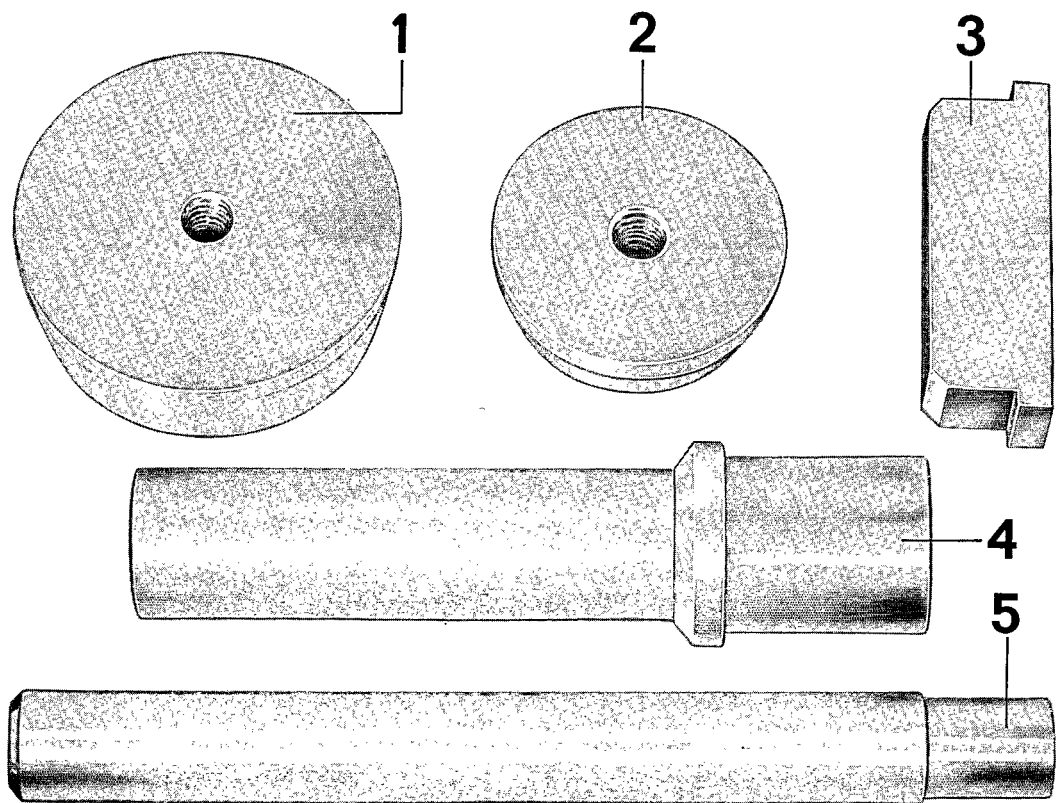

| No. | Description | Special Tool | Remarks |
|-----|--------------|--------------|---------|
| 1 | Thrust plate | US 8050 | |
| 2 | Thrust plate | US 8050 | |
| 3 | Thrust plate | US 8050 | |
| 4 | Mandrel | P 381 | |
| 5 | Mandrel | P 375 | |

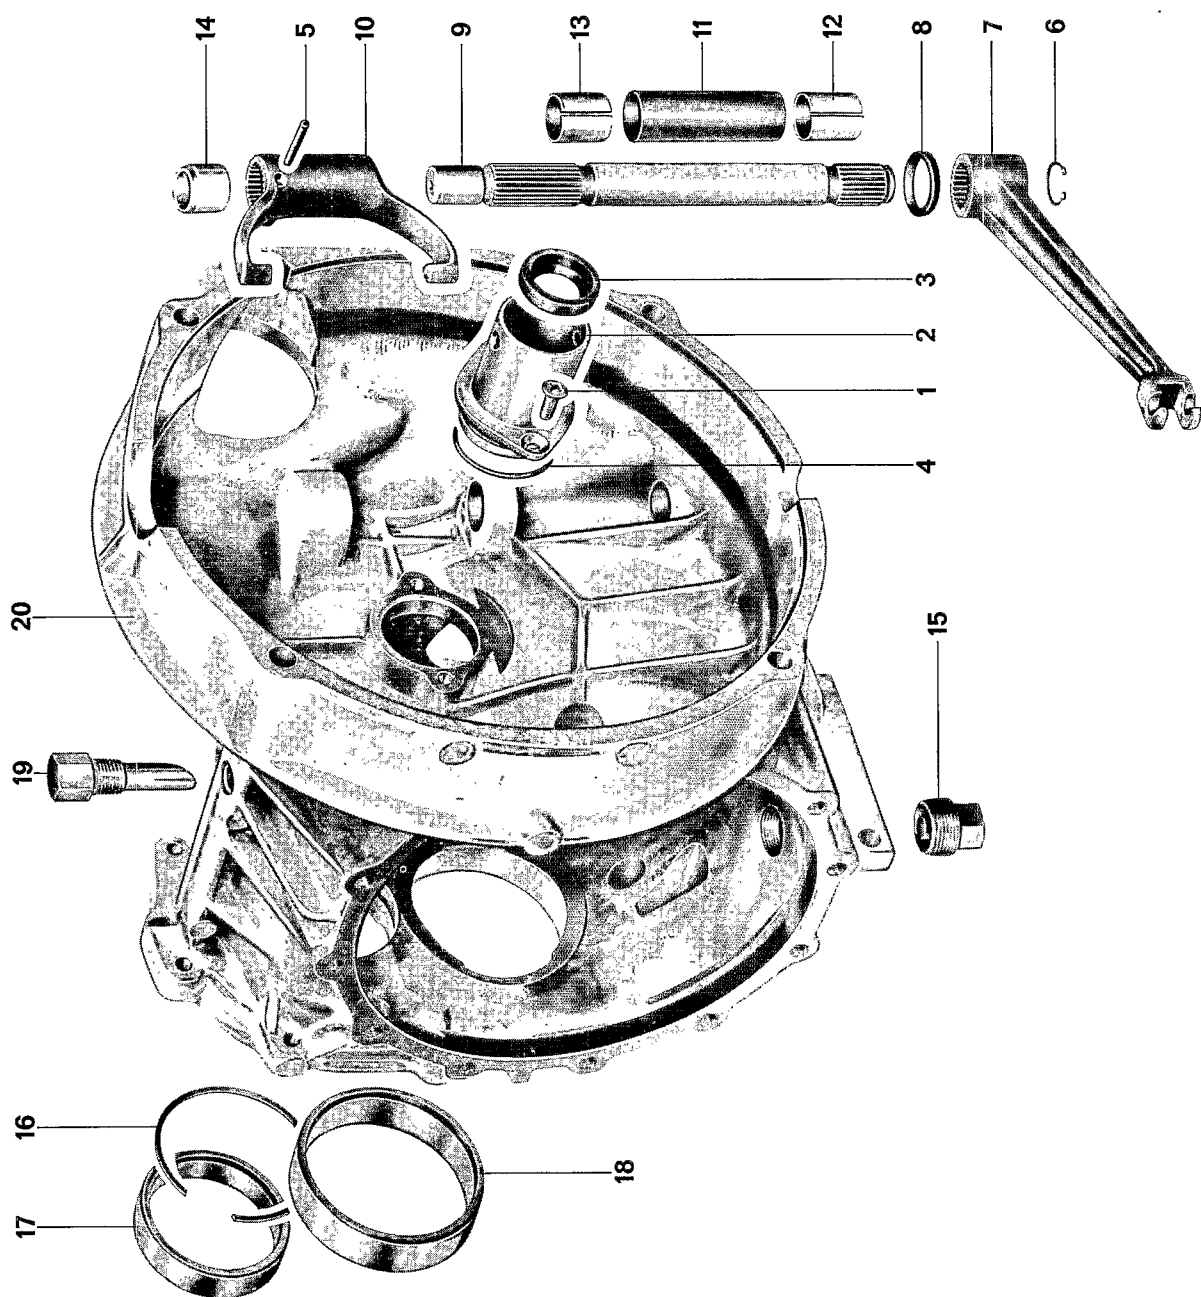

| No. | Description | Qty. | Note when | | Special instructions see |
|-----|----------------------|------|---|--------------------------------------|--------------------------|
| | | | Removing | Installing | |
| 1 | Phillips ctsk. screw | 2 | | Torque to specifications | |
| 2 | Guide tube | 1 | Use hook to remove | Install with MoS2 additive lubricant | |
| 3 | Seal, drive shaft | 1 | Drive out with P 381 | Press in with P 381 | |
| 4 | O-ring | 1 | | Replace, lubricate | |
| 5 | Pin | 1 | Drive out with appropriate drift | Replace if necessary | |
| 6 | Circlip | 1 | | Replace if necessary | |
| 7 | Release lever | 1 | Mark for reinstalling with lever shaft | Adjust, if necessary | |
| 8 | Seal | 1 | | Replace if necessary | |
| 9 | Lever shaft | 1 | | | |
| 10 | Release fork | 1 | Mark for reinstalling with lever shaft | Replace if necessary | |
| 11 | Cover tube | 1 | | | |
| 12 | Bushing | 1 | Drive out with P 375 | Drive in with P 375 | |
| 13 | Bushing | 1 | Drive out with P 375 | Drive in with P 375 | |
| 14 | Bushing (Delrin) | 1 | Use angled screwdriver on both sides to pry out | Replace, if necessary | |
| 15 | Plug | 1 | | Clean and torque to specifications | |
| 16 | Snap ring | 1 | Remove with small screwdriver | Install correctly | |

| No. | Description | Qty. | Note when | | Special instructions see |
|-----|--------------------|------|--|---|--------------------------|
| | | | Removing | Installing | |
| 17 | Bearing outer race | 1 | Heat case to approx 120°C / 248°F and drive out with US 8050 | Heat case to approx 120°C / 248°F and drive in with US 8050 | |
| 18 | Bearing outer race | 1 | Heat case to approx 120°C / 248°F and drive out with US 8050 | Heat case to approx 120°C / 248°F and drive in with US 8050 | |
| 19 | Breather | 1 | | Position correctly and torque to specifications | |
| 20 | Transmission case | 1 | | Check for damage | |

DISASSEMBLING AND ASSEMBLING INSTRUCTIONS


On the 1976 model manual transmission 915 the clutch release lever can be preassembled and adjusted.

Assembling Clutch Release Components


To assure perfect clutch operation, release fork and release lever must be matched with each other on the lever shaft splines.

Specifications are:

Approx. 71 mm from clutch bell housing flange surface to upper edge of release bearing surface on fork.

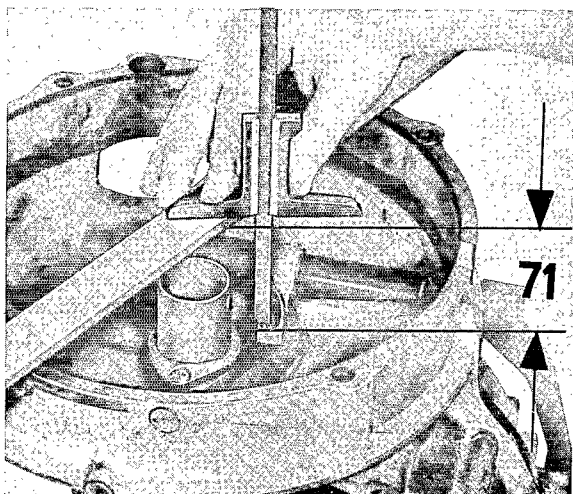

Approx. 91 mm from clutch bell housing flange surface to depression in lever.

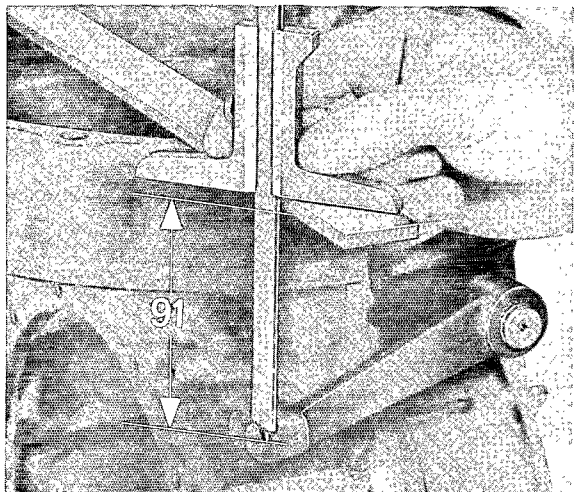


REMOVING AND INSTALLING DRIVE SHAFT SEAL - 1976 MODEL


The drive shaft seal of 1976 model manual transmission 915 can be replaced without having to disassemble the transmission.

Removing

1. Remove engine/transmission assembly and separate transmission from engine.
2. Remove both Phillips countersunk bolts on guide tube. Pull out guide tube for drive shaft seal with a locally manufactured hock.

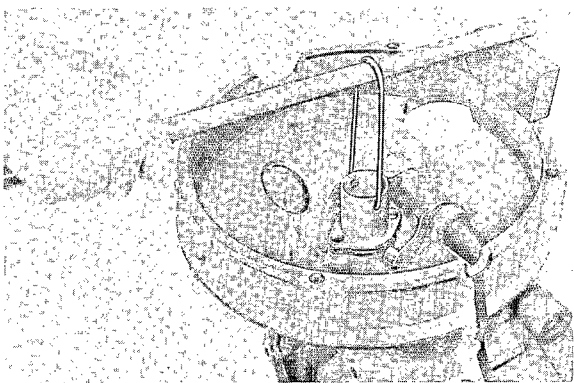


3. Remove seal with an appropriate mandrel or screwdriver. Special tool P 381 can be applied.

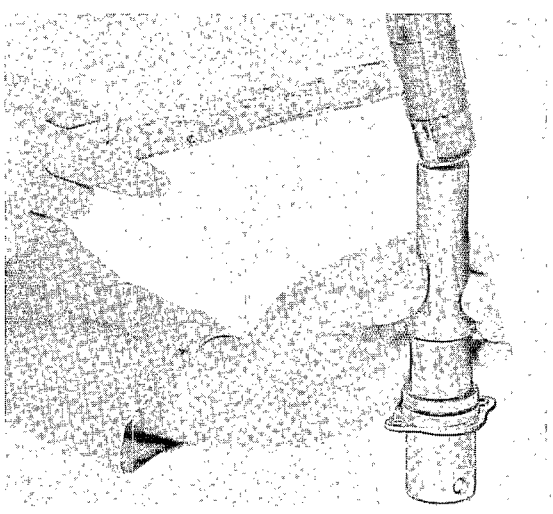


Installing

1. Drive new seal in guide tube with special tool P 381.
2. Place new rubber O-ring on neck of guide tube.

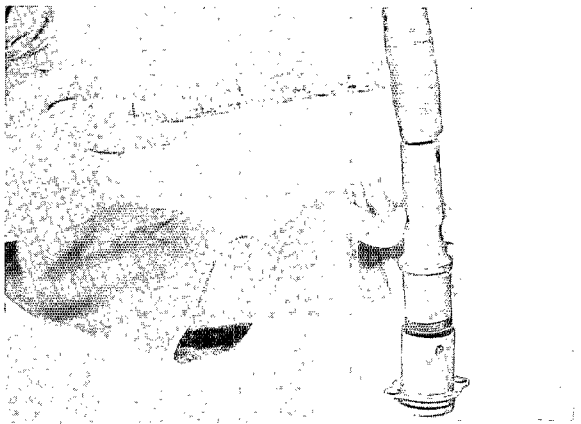


3. Slide special tool P 382 over splines of drive shaft.
4. Apply a light coat of lubricant to sealing lip of seal in guide tube and rubber O-ring on guide tube neck.
5. Drive in guide tube until positioned correctly.

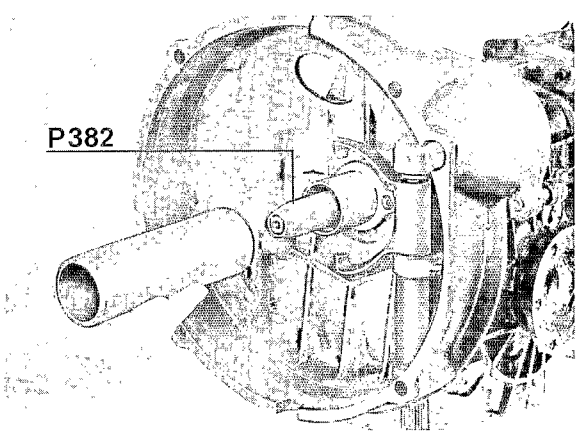

6. Install mounting bolts and torque to specifications.
7. Coat release bearing guide tube with MoS2 paste.

TRANSMISSION CASE WITH AUXILIARY CLUTCH SPRING (1977 MODELS)

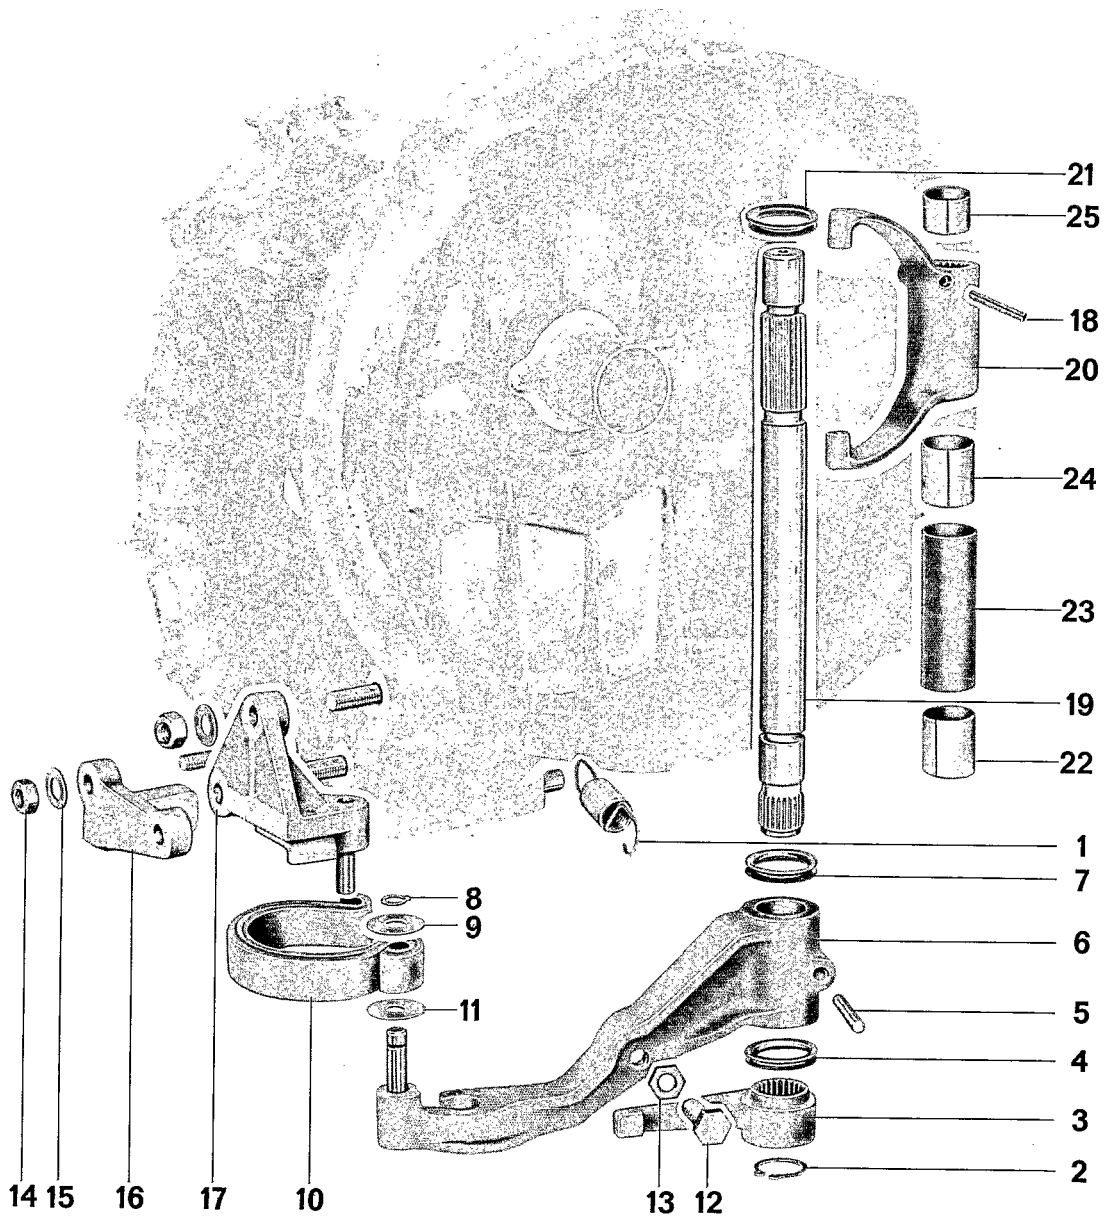

| No. | Description | Qty. | Note when | | Remarks |
|-----|----------------------|------|-----------|---|-----------------------------|
| | | | removing | installing | |
| 1 | Spring | 1 | | | omitted from March, 1979 |
| 2 | Circlip | 1 | | Replace, if necessary | |
| 3 | Adjusting lever | 1 | | Adjust | |
| 4 | Seal | 1 | | Replace, if necessary | |
| 5 | Round pin | 1 | | | |
| 6 | Clutch release lever | 1 | | Coat pin for spring with all-purpose lube containing MoS ₂ | |
| 7 | Seal | 1 | | Replace, if necessary | |
| 8 | Circlip | 1 | | Replace, if necessary | |
| 9 | Washer | 1 | | | |
| 10 | Auxiliary spring | 1 | | | |
| 11 | Washer | 1 | | | |
| 12 | Adjusting bolt | 1 | | | |
| 13 | Nut | 1 | | Torque to specifica- tions | |
| 14 | Nut | 4 | | Torque to specifica- tions | |
| 15 | Washer | 4 | | Replace, if necessary | |
| 16 | Holder | 1 | | | |
| 17 | Base | 1 | | Coat pin for spring with all-purpose lube containing MoS ₂ | |
| 18 | Spring pin | 1 | | Replace, if necessary | |
| 19 | Lever shaft | 1 | | | |

| No. | Description | Qty. | Note when | | Remarks |
|-----|--------------|------|----------------------|--|------------|
| | | | removing | installing | |
| 20 | Release fork | 1 | | | |
| 21 | Seal | 1 | | Replace, if necessary | |
| 22 | Bushing | 1 | Drive out with P 375 | Drive in with P 375 until positioned correctly | 3.1 - 5/28 |
| 23 | Cover tube | 1 | | | |
| 24 | Bushing | 1 | Drive out with P 375 | Drive in with P 375 until positioned correctly | 3.1 - 5/28 |
| 25 | Bushing | 1 | | Replace, drive in | |

DISASSEMBLING AND ASSEMBLING INSTRUCTIONS

Disassembling


1. Disengage spring for adjusting lever and remove circlip.

2. Pull adjusting lever off of lever shaft.

3. Release auxiliary spring. This requires pressing clutch release lever toward front transmission cover with an appropriate tool.


Note

When reaching the "dead point" the auxiliary spring will snap forward on its own.

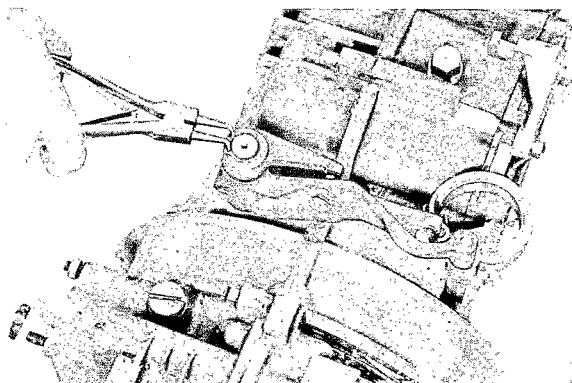


Assembling

1. Drive in bushings for lever shaft with Special Tool P 375 (see drawing) and coat with grease having a lithium or silicone base.

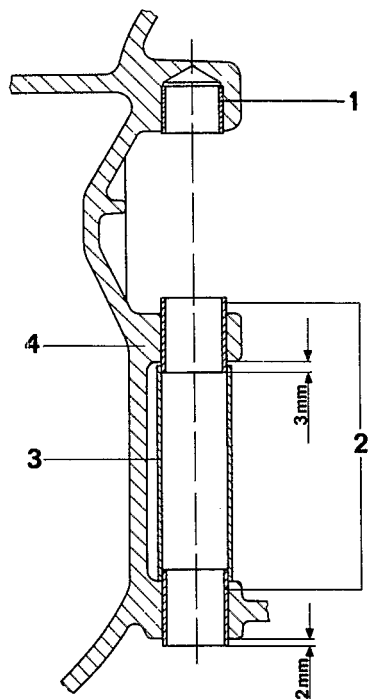


- 1 - Bushing
- 2 - Bushing, lever shaft
- 3 - Cover tube
- 4 - Transmission case

2. Install clutch release lever with spring and adjusting screw on splines of lever shaft.

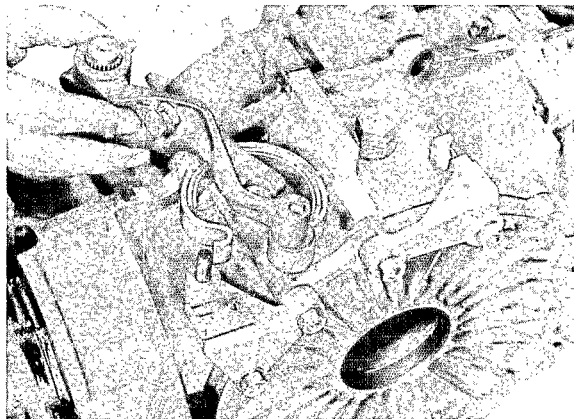

3. Locate clutch release lever with a round pin.

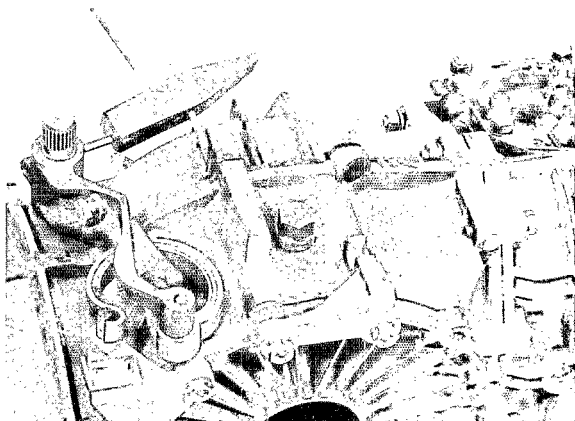


4. Tension auxiliary spring (must snap past the dead point to stop pin).



Note

Only install adjusting lever after engine/transmission lever is installed in car.

RELEASE LEVER - 1978 MODELS

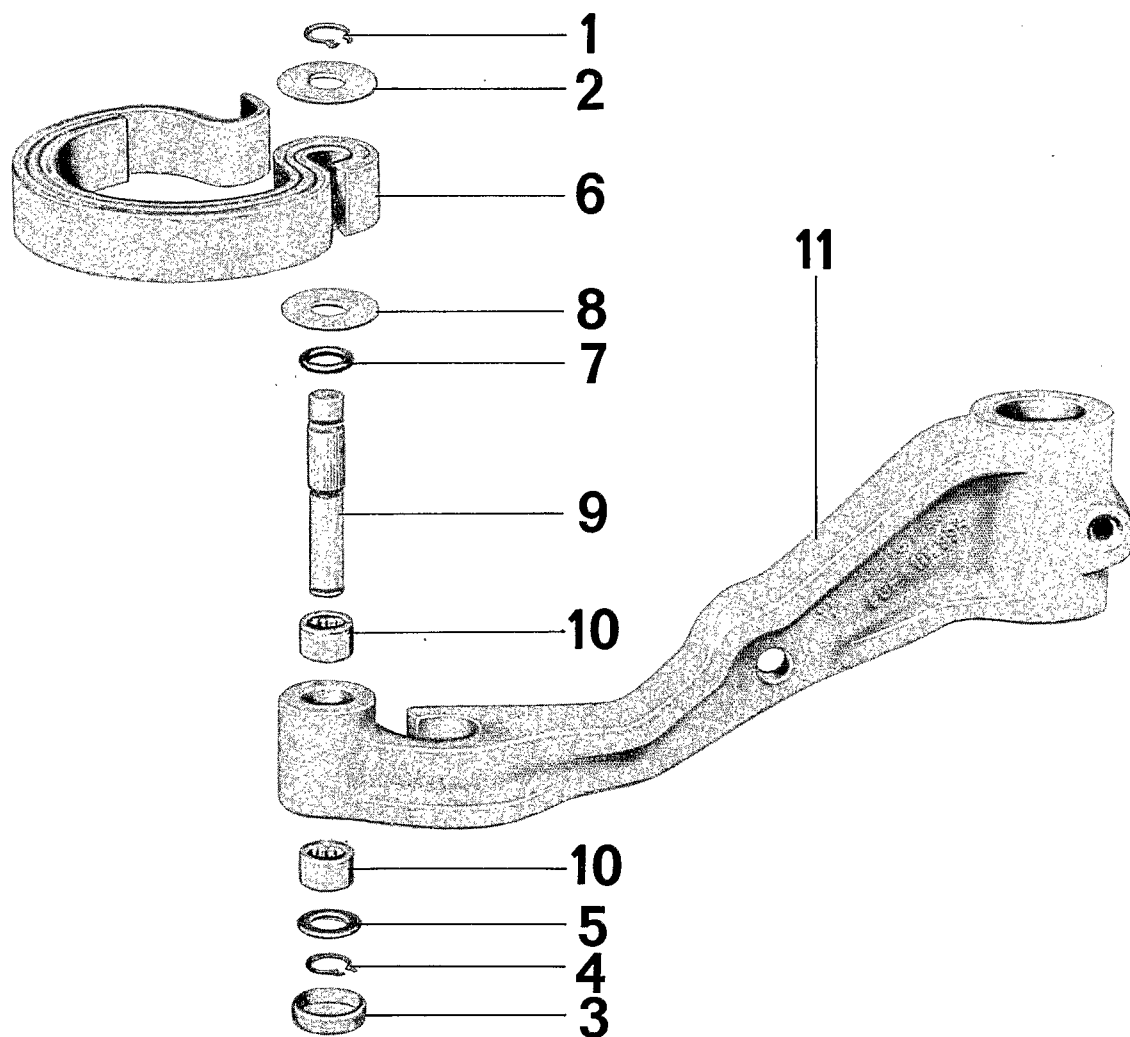

| No. | Description | Qty. | Note When | | Special Instructions |
|-----|------------------|------|------------------------------|---|----------------------|
| | | | Removing | Installing | |
| 1 | Circlip | 1 | | Replace, if necessary | 3.1 - 5/31 |
| 2 | Washer | 1 | | | |
| 3 | Cover | 1 | | Replace | |
| 4 | Circlip | 1 | | Replace, if necessary | |
| 5 | Washer | 1 | | | |
| 6 | Auxiliary spring | 1 | | | |
| 7 | O-ring | 1 | | Replace | |
| 8 | Washer | 1 | | Replace | |
| 9 | Pin | 1 | | | |
| 10 | Needle bushing | 2 | Drive out with Tool No. 9153 | Drive in to correct position with Tool No. 9153 | |
| 11 | Release lever | 1 | | | |


DISASSEMBLING AND ASSEMBLING INSTRUCTIONS

Disassembling

1. Remove upper circlip and drive pin down until cover falls out.


Note

This will deform the washer (item 8).

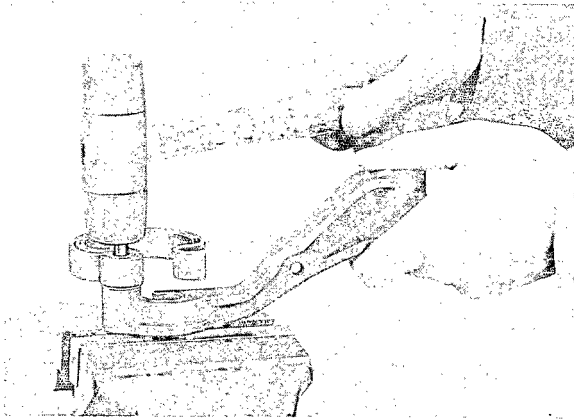

Assembling

1. Drive pin into spring so that washer and circlip can just be installed.

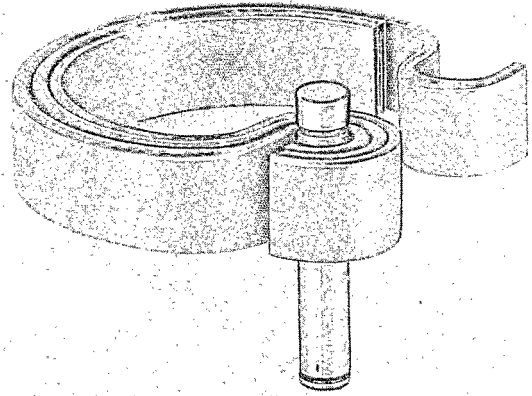



2. Drive in needle bearings to correct position with Special Tool No. 9153.

Note

Lubricate needle bearings and bore of release lever with a waterproof lubricant (silicone or lithium-based) before installation.

2. Remove lower circlip and pull out pin with spring.


3. Drive out needle bearings with Special Tool No. 9153.

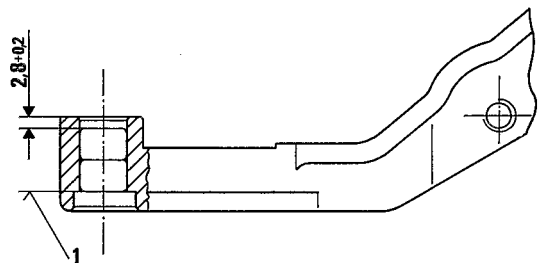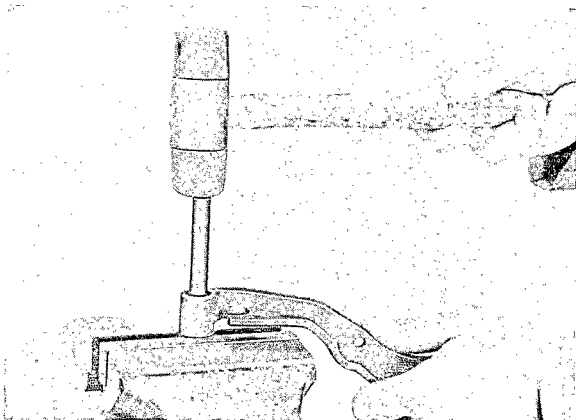

1 - Flush


DISASSEMBLING AND ASSEMBLING INPUT SHAFT

TOOLS

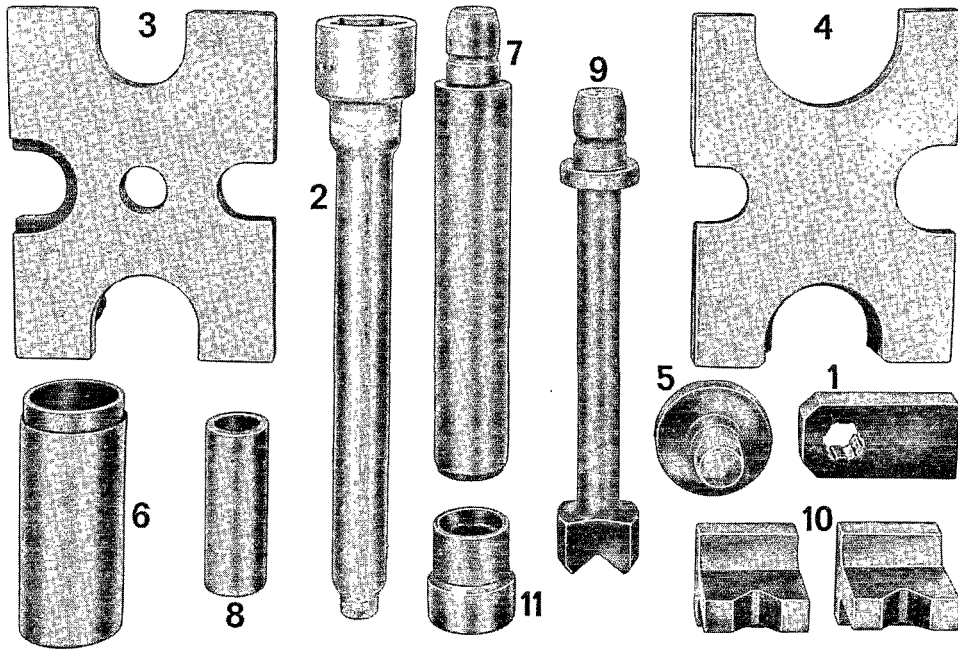

| Nr. | Description | Special Tool | Remarks |
|-----|---------------|--------------|----------|
| 1 | Support plate | P 355a | |
| 2 | Socket | P 252a | |
| 3 | Thrust plate | VW 401 | |
| 4 | Thrust plate | VW 402 | |
| 5 | Thrust disc | VW 412 | |
| 6 | Thrust tube | VW 415a | |
| 7 | Press punch | VW 407 | |
| 8 | Thrust tube | VW 416b | |
| 9 | Press punch | VW 405 | |
| 10 | V-blocks | VW 406 | Two each |
| 11 | Thrust tube | VW 454 | |

Disassembling and Assembling Input Shaft

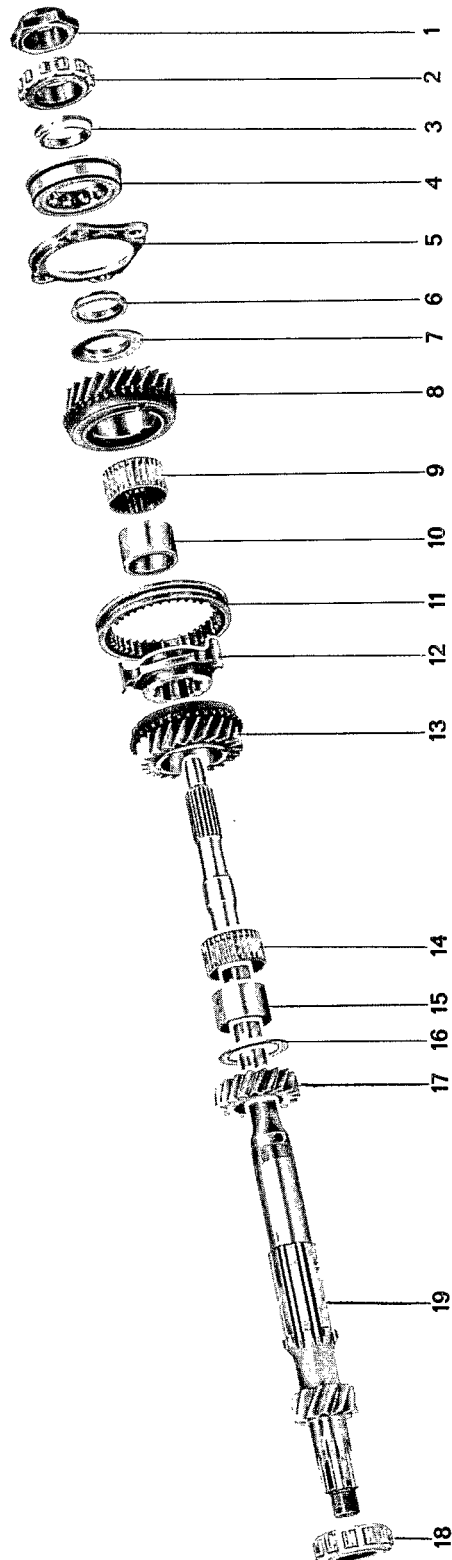


| Nr. | Description | Qty. | Note when | | Special instructions see |
|-----|------------------------|------|---|--|--------------------------|
| | | | Removing | Installing | |
| 1 | Flange nut | 1 | Remove with P 252a | Torque to specification, secure with center punch. | 3.1-6/6 |
| 2 | Roller bearing | 1 | Press off with VW 401, VW 402, and VW 412. | Press in with VW 401, VW 454, and VW 407. | |
| 3 | Bearing inner race | 1 | Keep together with bearing to ensure correct installation position. | Install as a matched set only. Heat to approx. 120°C (250°F) and drive on. | |
| 4 | Four-point bearing | 1 | | | |
| 5 | Bearing clamping plate | 1 | | | |
| 6 | Bearing inner race | 1 | | Install as a matched set only. Heat to approx. 120°C (250°F) and drive on. | |
| 7 | Thrust washer | 1 | | | |
| 8 | 4th speed | 1 | | Check synchronization. Replace in pairs only. | 3.1-8/4 |
| 9 | Needle bearing | 1 | Fasten to respective gear and race with mechanic's wire. | Make sure bearings have not been interchanged. | |
| 10 | Needle bearing race | 1 | Fasten to respective gear and bearing with mechanic's wire. | Make sure races have not be interchanged. | |
| 11 | Shifting sleeve | 1 | | Check for wear. | |
| 12 | Spider | 1 | | Check for wear. | |
| 13 | 3rd speed | 1 | | Check synchronization. Replace in pairs only. | 3.1-8/4 |

| Nr. | Description | Qty. | Note when | | Special instructions see |
|-----|---------------------|------|---|--|-----------------------------|
| | | | Removing | Installing | |
| 14 | Needle bearing | 1 | Fasten to respective gear and race with mechanic's wire. | Make sure bearings have not been interchanged. | |
| 15 | Needle bearing race | 1 | Fasten to respective gear and bearing with mechanic's wire. | Make sure races have not been interchanged. | |
| 16 | Thrust washer | 1 | | | |
| 17 | 2nd speed | 1 | | Check for wear. Replace in pairs only. | |
| 18 | Roller bearing | 1 | Press off with VW 415a and VW 407 | Press on with VW 416b and VW 412 | |
| 19 | Input shaft | 1 | | Check for runout. | 3.1-6/7 |


DISASSEMBLING AND ASSEMBLING INPUT SHAFT

Disassembling

1. Mount support plate P 355a in a vise. Insert input shaft and remove flange nut with special tool P 252a.

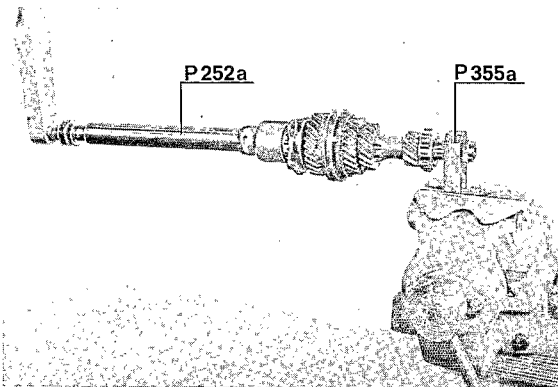


2. Press roller bearing off input shaft with thrust plates VW 401 and VW 402, and thrust disc VW 412.

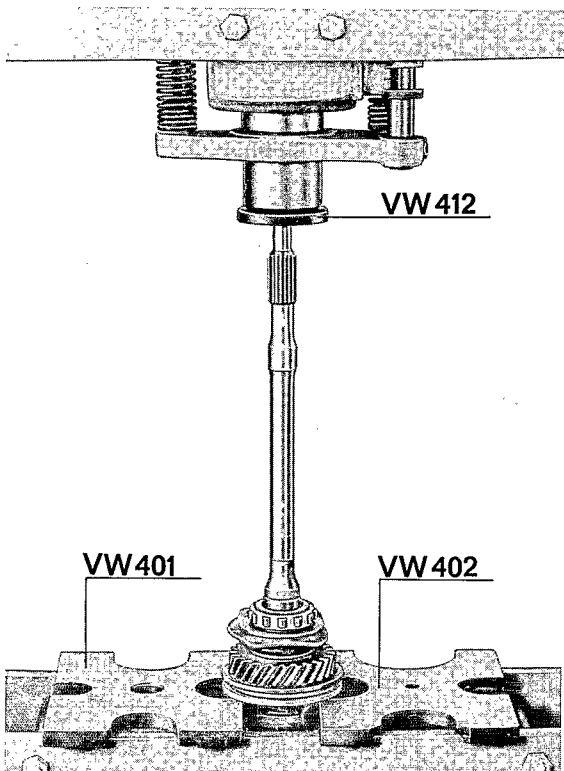

3. When removing other parts, wire needle bearings races, and respective gears together for correct reinstallation.

4. Press roller bearing off input shaft with thrust tube VW 415a and press punch VW 407.

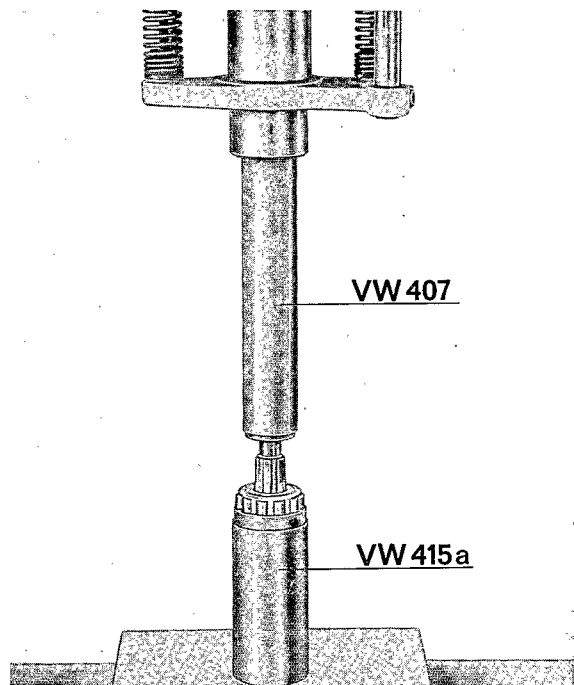


Assembling


Caution

Assemble all input shaft parts dry. Make sure oil does not enter between the contact surfaces.

1. Press roller bearing on with thrust disc VW 412 and press thrust tube VW 416b.

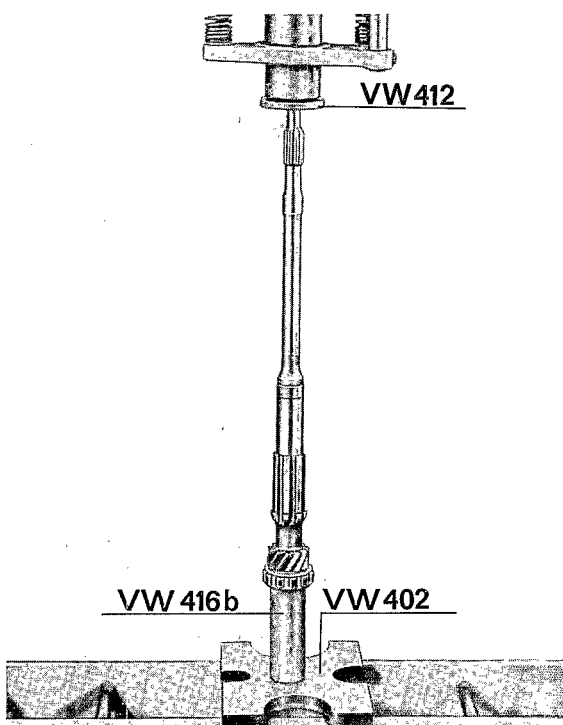

2. Press roller bearing on with thrust plate VW 401 and thrust tube VW 454 and press punch VW 407.

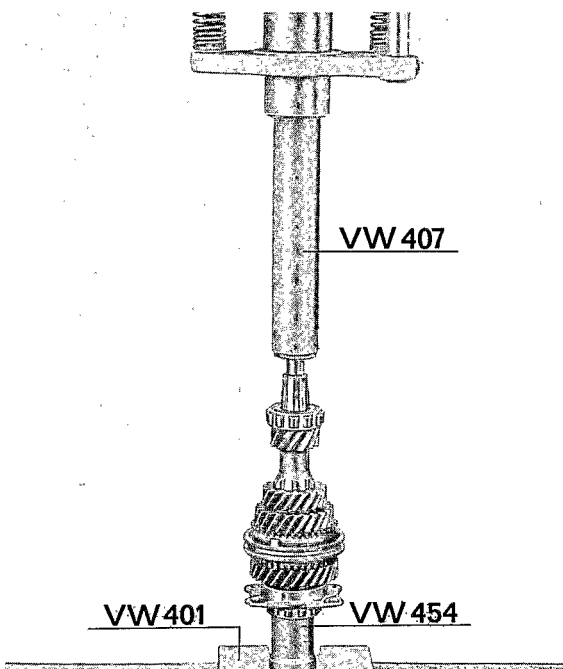


Caution

When reinstalling needle bearings and races, make sure they are not interchanged with those of another gear.


3. Torque flange nut to specification with special tool P 355a and P 252a.

4. Rock flange nut in place with center punch.

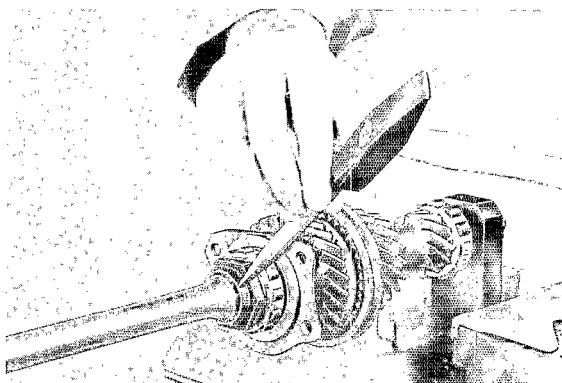

Always check input shaft for runout when it is fully assembled and the flange nut torqued to proper specification.


1. Remove the input shaft outer bearing races from the transmission and final drive housings and place them on the pinion shaft (substitute bearings can be used).

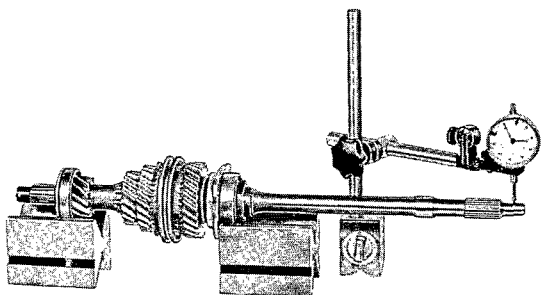

2. Place assembled pinion shaft with bearing outer races on V-blocks VW 406. Check for runout as shown in illustration. Maximum runout = 0.1 mm (0.004 in.).
3. The input shaft can be straightened while cold if the runout does not exceed 0.3 mm (0.012 in.). Use press with V-blocks VW 406 and press punch VW 405.


DISASSEMBLING AND ASSEMBLING PINION SHAFT

TOOLS

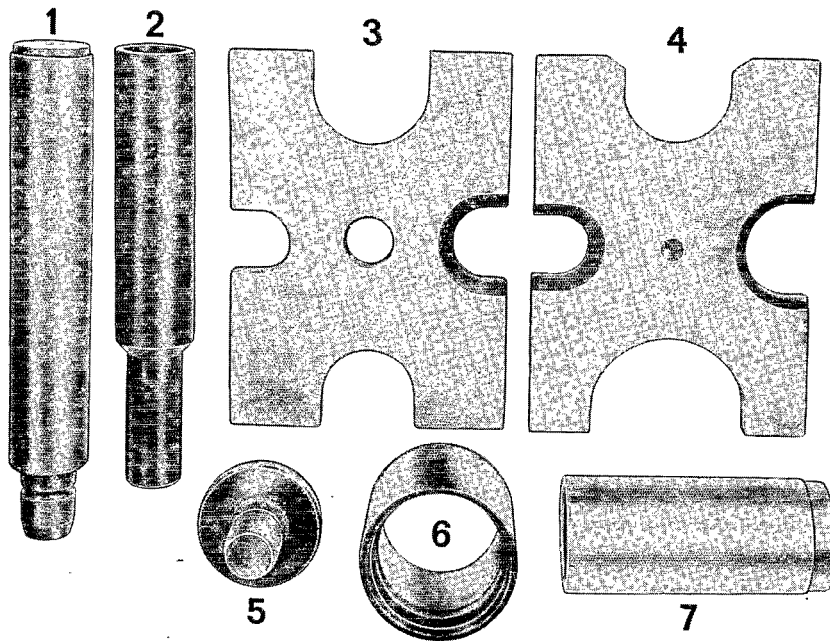

| Nr. | Description | Special Tool | Remarks |
|-----|---------------|--------------|---------|
| 1 | Press punch | VW 407 | |
| 2 | Thrust sleeve | VW 244b | |
| 3 | Thrust plate | VW 401 | |
| 4 | Thrust plate | VW 402 | |
| 5 | Thrust disc | VW 412 | |
| 6 | Thrust tube | P 255a | |
| 7 | Thrust tube | VW 415a | |

Disassembling and Assembling Pinion Shaft

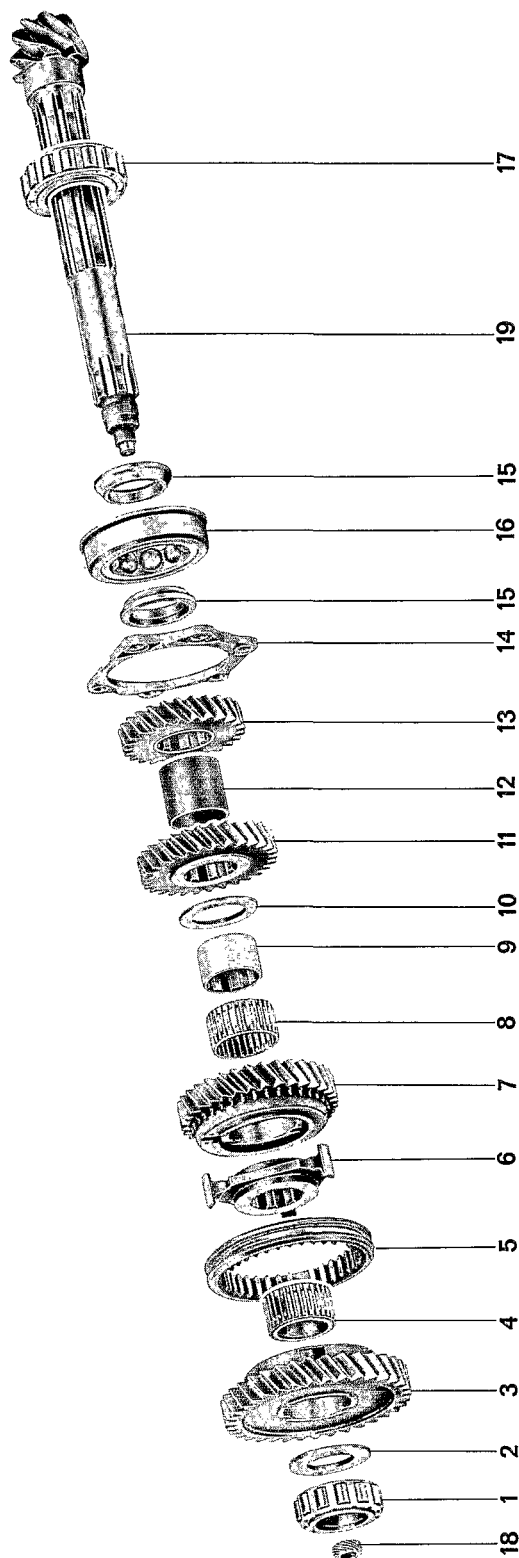


| Nr. | Description | Qty. | Note when | | Special instructions see |
|-----|---------------------|------|---|--|---|
| | | | Removing | Installing | |
| 1 | Roller bearing | 1 | Press off pinionshaft with VW 401, VW 412, and P 255 a. | Press on with VW 407 and VW 415 a. | |
| 2 | Thrust washer | 1 | | | |
| 3 | 1st speed | 1 | | Check synchronization. Replace only in pairs. | |
| 4 | Needle bearing | 1 | Fasten to respective gear with mechanic's wire. | Make sure bearings have not been interchanged. | |
| 5 | Shift sleeve | 1 | | Check for wear.. | From 1977 Models with asymmetric tooth point of 1st gear. Note direction of installation (see Page 3.1-7/6) |
| 6 | Synchro hub | 1 | | Check for wear. | From 1977 Models reinforced |
| 7 | 2nd speed | 1 | | Check synchronization. Replace only in pairs. | 3.1 - 8/4 |
| 8 | Needle bearing | 1 | Fasten to respective gear and race with mechanic's wire. | Make sure bearings have not been interchanged. | |
| 9 | Needle bearing race | 1 | Fasten to respective gear and bearing with mechanic's wire. | Make sure races have not been interchanged. | |
| 10 | Thrust washer | 1 | | | |
| 11 | 3rd speed | 1 | | Large, smooth surface must face thrust washer. Replace only in pairs. | |
| 12 | Spacer bushing | 1 | | | |

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|---------------------------|-----|--|---|--------------------------|
| | | | Removing | Installing | |
| 13 | 4th speed | 1 | | Large, smoothly ground surface faces four-point bearing. Replace only in pairs. | |
| 14 | Clamping plate | 1 | | | |
| 15 | Bearing inner race | 2 | Press off with VW 401, VW 412, and P 255a. | Heat to approx. 120°C (250°F) and drive on. | |
| 16 | Four-point bearing | 1 | | Check for wear. | |
| 17 | Roller bearing | 1 | Press off with VW 401, VW 412, and P 255a. | Press on with VW 407 and VW 415a. | 3.1-7/5 |
| 18 | Speedometer drive, Gear I | 1 | Remove with puller. | Heat to approx. 120°C (250°F) and drive on. | 3.1-7/5 |
| 19 | Pinion shaft | 1 | | Readjust if necessary. | 5.1-4/1 |

DISASSEMBLING AND ASSEMBLING PINION SHAFT


Disassembling

1. Press roller bearing off pinion shaft with thrust plate VW 401, disc VW 412, and tube P 255a.

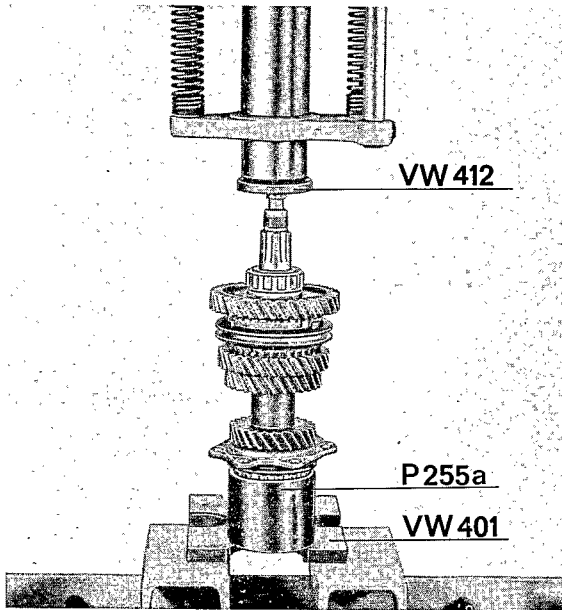

2. Remove components from pinion shaft. Wire needle bearings and races to respective gears to prevent interchanging of parts during re-assembly.


3. Remove speedometer drive Gear I.

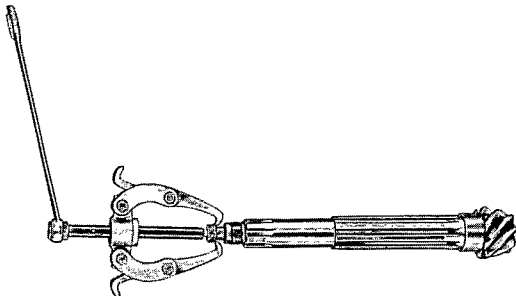

Assembling


Assemble all pinion shaft parts dry. Make sure that no oil enters between the contact surfaces. Pinion shaft and ring gear are marked with paired numbers. Check that these numbers match before assembling.

1. Press roller bearing on with press punch VW 407 and tube 415a.

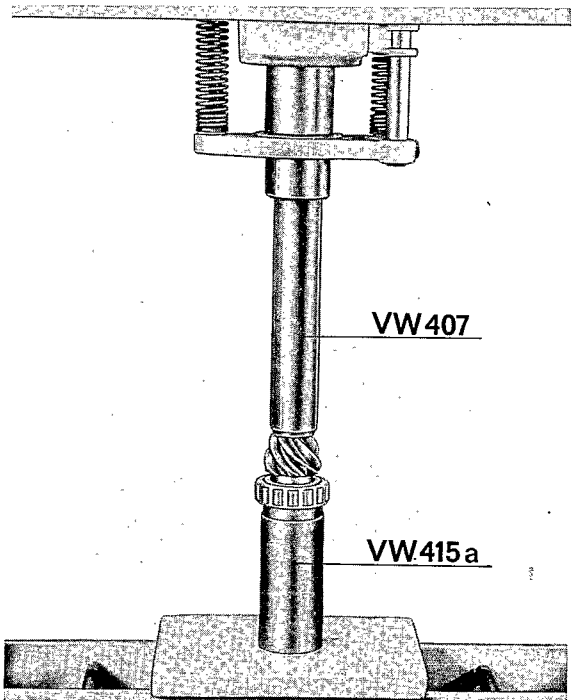


Note

Install bearing so that the ring of the two part roller cage faces the gears.

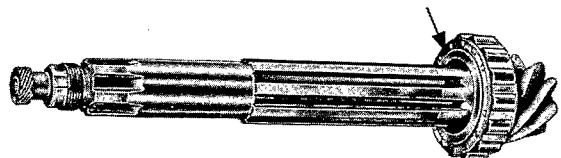


2. Press small roller bearing on pinion shaft using thrust disc VW 412 and thrust sleeve VW 244b.

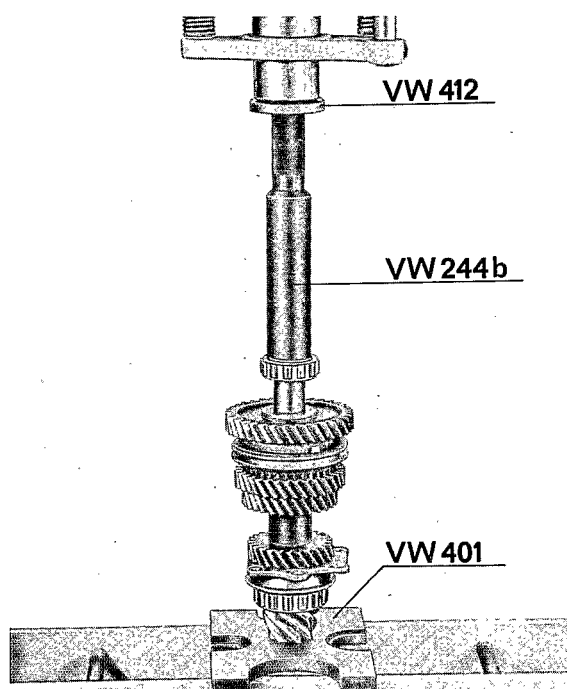

3. Heat speedometer drive gear I to 120°C (250°F) and drive on.


Modifications from 1977 Models

The asymmetrical pointed teeth of 1st/2nd gear operating sleeve must face toward 1st gear wheel.

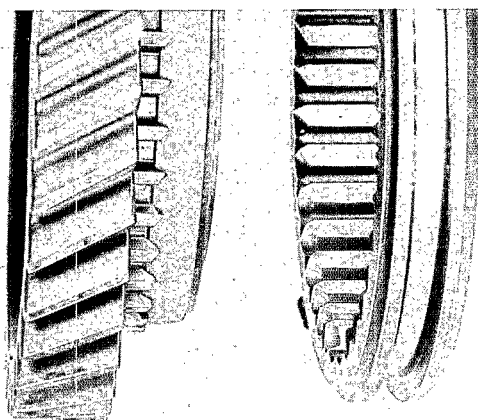



DISASSEMBLING AND ASSEMBLING SYNCHRONIZERS

TOOLS

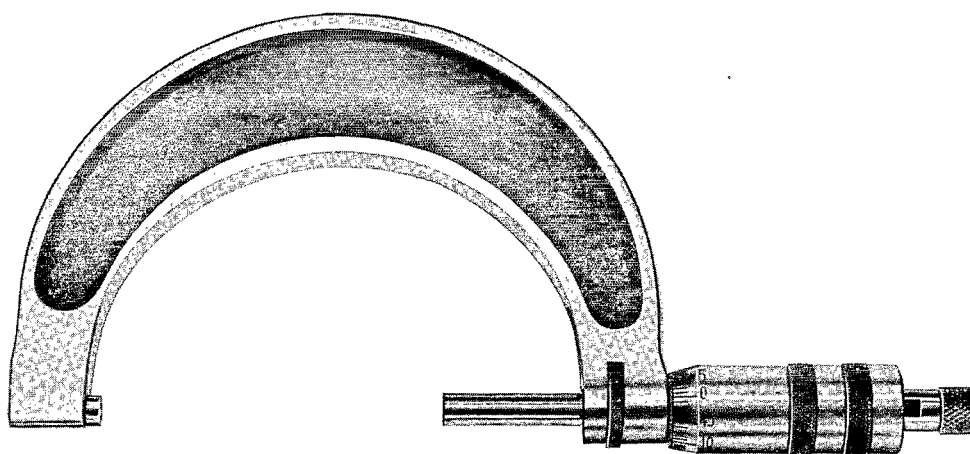

| Nr. | Description | Special Tool | Remarks |
|-----|-------------|--------------|-----------------|
| | Micrometer | - | Size: 75-100 mm |

Disassembling and Assembling Synchronizers

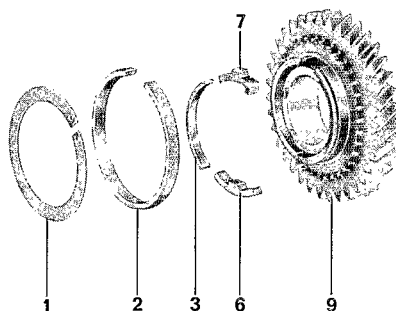
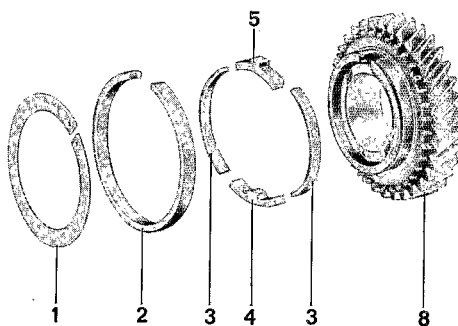


| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|------------------------------------|-----|---------------------|------------------------------------|--------------------------|
| | | | Removing | Installing | |
| 1 | Circlip | 1 | Remove with pliers. | Install with pliers. | |
| 2 | Synchronizing ring | 1 | | Check for wear. | |
| 3 | Brake band, only 1 for 1st speed | 2 | | Place on proper side in 1st speed. | 3.1-8/3 |
| 4 | Brake band anchor block, 2nd speed | 1 | | | |
| 5 | Thrust block, 2nd speed | 1 | | | |
| 6 | Brake band anchor block, 1st speed | 1 | | Position properly. | 3.1-8/3 |
| 7 | Thrust block, 1 st speed | 1 | | Position properly. | 3.1-8/3 |
| 8 | Gear, 2nd speed | 1 | | | |
| 9 | Gear, 1st speed | 1 | | | |

DISASSEMBLING AND ASSEMBLING SYNCHRONIZERS


Disassembling

1. Remove the circlip from the gear. Check all parts for wear and damage and replace as necessary.
2. When assembling the 1st gear synchronizer, make sure to install only one brake band (see illustration).

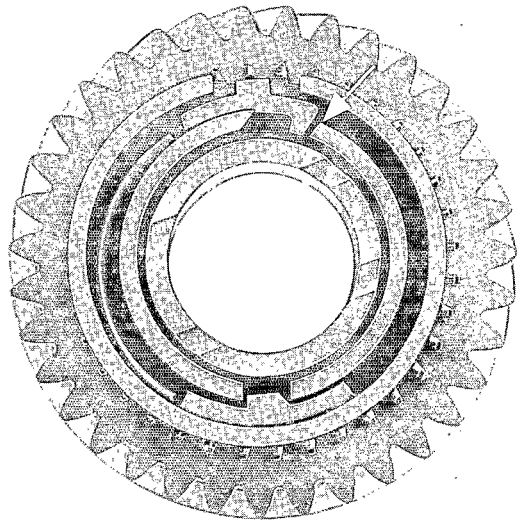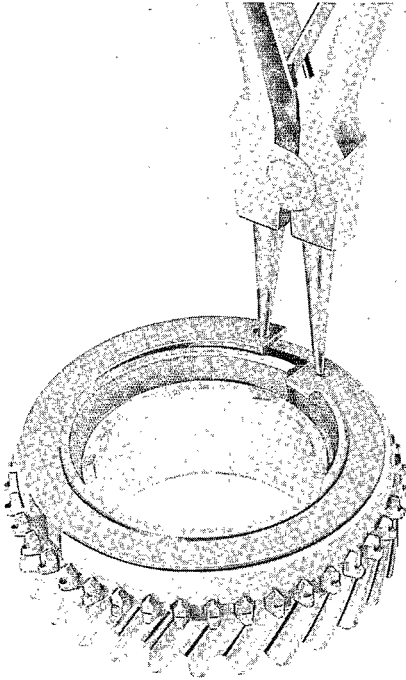

Assembling

1. Place synchronizing ring on clutch carrier. Make sure rough ring surface faces the shift sleeve. Insert thrust block, anchor block, and brake band(s).

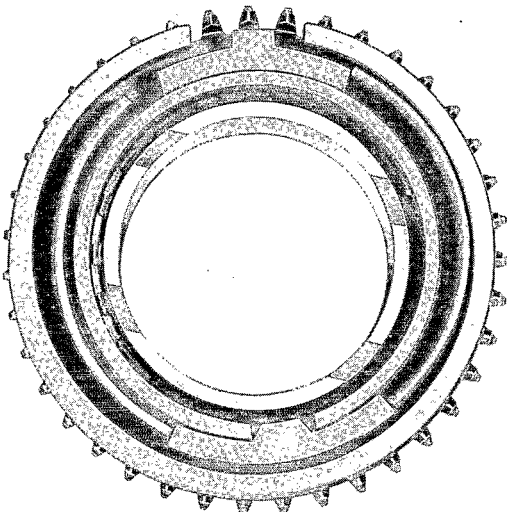


Note

Clutch carrier and brake band energizer have matching contour and must be installed in such positions (see arrow).


3. Install retaining ring with retaining ring plier.

Checking

1. Using a micrometer, check diameter of installed synchronizing ring. Place micrometer at the highest point of the synchronizing ring.

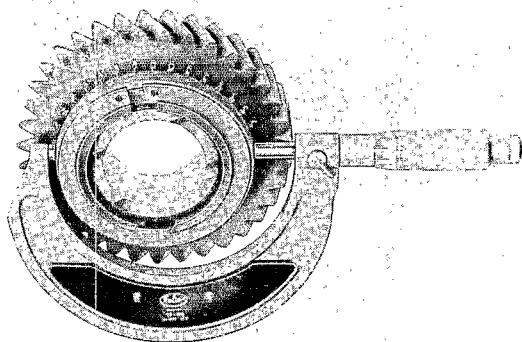

2. Maximum clearance between selector fork and shifting sleeve of 1st through 5th speed:
Dimension $a = 0.5 \text{ mm (0.02 in.)}$.

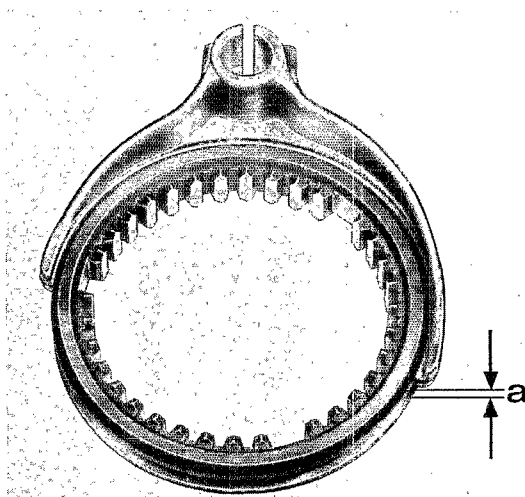


Diameter:

- 3rd, 4th, and 5th speed = $76.3 \pm 0.18 \text{ mm}$
1st and 2nd speed = $86.37 \pm 0.17 \text{ mm}$


MODIFICATIONS - 1977 MODELS

The synchronization for 1st and 2nd gears has been modified on the 1977 Models.

1. 1st gear synchronizing parts.

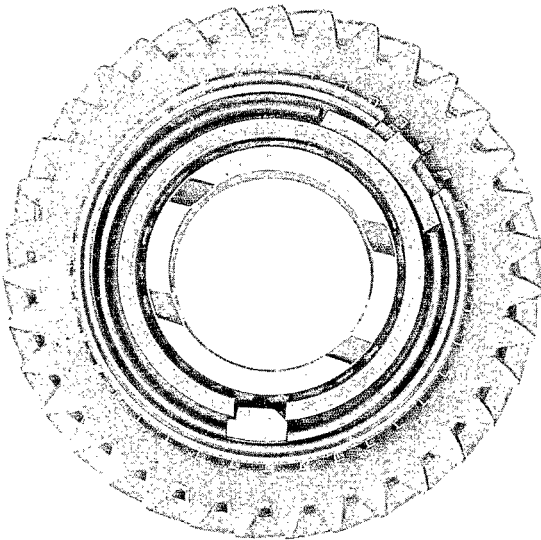


2. 2nd gear synchronizing parts.

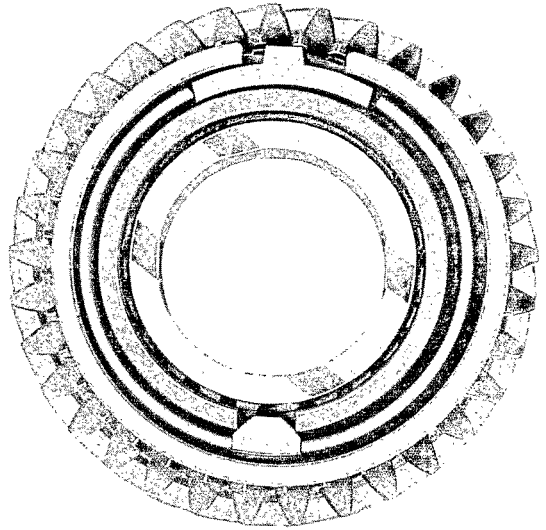

3. The installation diameter of the synchronizing rings has not been changed (see Page 3.1 - 8/4).


Note

An altered anchor block (see photo) will be introduced later for 1st gear.

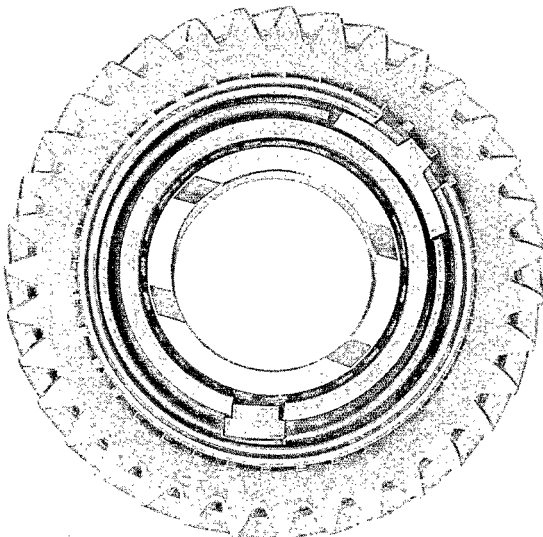


DISASSEMBLING AND ASSEMBLING TORQUE CONVERTER HOUSING

TOOLS

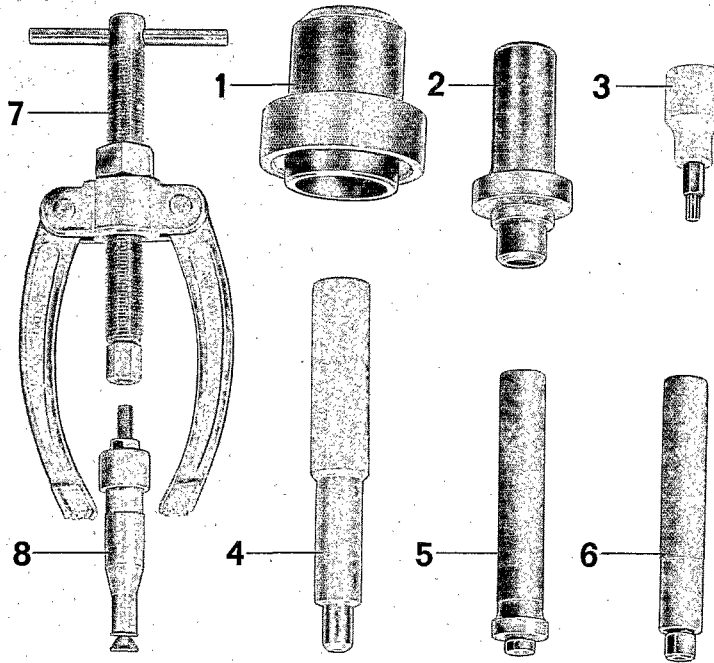

| Nr. | Description | Special Tool | Remarks |
|-----|------------------------|--------------|---------------------|
| 1 | Installer | P 358 a | |
| 2 | Installer | P 359 | |
| 3 | Socket, 6 mm, 12-point | US 103 C | |
| 4 | Centering mandrel | P 370 | |
| 5 | Mandrel | P 362 | |
| 6 | Mandrel | P 361 | |
| 7 | Support | --- | Local purchase item |
| 8 | Internal puller | --- | Local purchase item |

Disassembling and Assembling Torque Converter Housing

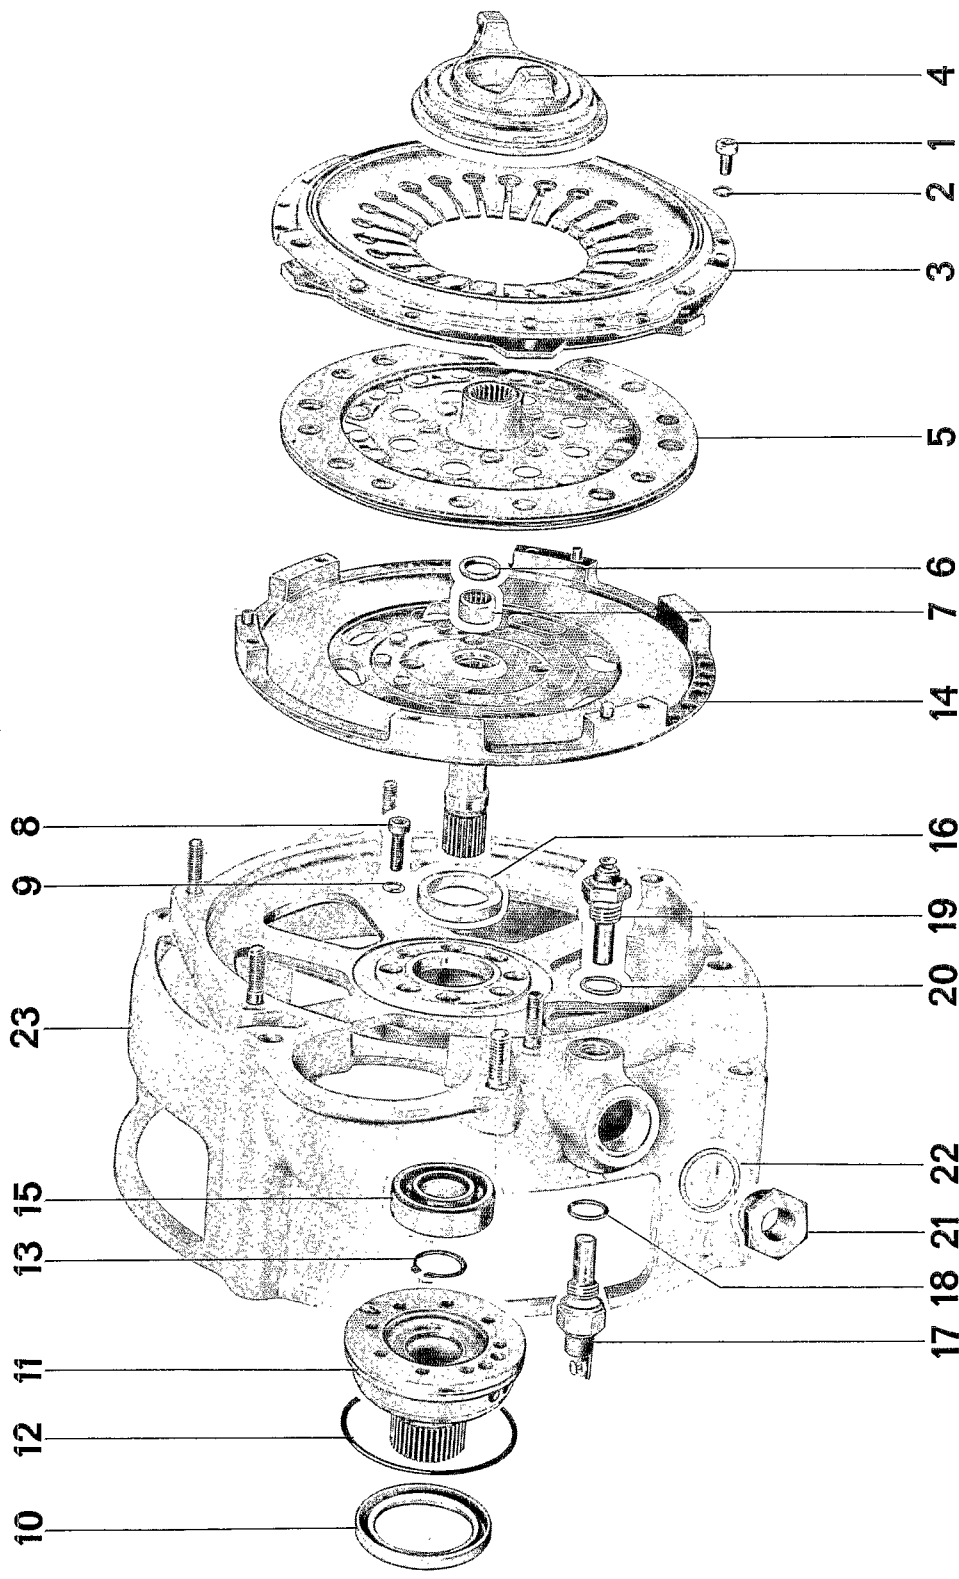


| Nr. | Description | Qty. | Note when | | Special instructions see |
|-----|------------------|------|--|---|--------------------------|
| | | | removing | installing | |
| 1 | Socket-head bolt | 6 | loosen evenly in criss-cross pattern | Tighten evenly in criss-cross pattern to specified torque. | |
| 2 | Lock washer | 6 | | Replace if necessary. | |
| 3 | Pressure plate | 1 | | Check wear. | |
| 4 | Throwout bearing | 1 | | Do not wash in solvents, only dry wipe. | |
| 5 | Clutch disc | 1 | | Check wear, check free movement on splines between clutch plate and input shaft. | |
| 6 | Oil seal | 1 | Remove with puller | Install with P 362. | |
| 7 | Needle bearing | 1 | Remove with puller | Install with P 362, lubricate with a mixture of multi-purpose grease and Molykote type lubricant. | |
| 8 | Socket-head bolt | 8 | | Tighten evenly to specified torque. | |
| 9 | Oil seal | 8 | | Replace. | |
| 10 | Oil seal | 1 | Remove together with freewheeling support | Oil torque converter seating surface, drive in with P 358a. | |
| 11 | Stator support | 1 | | Using two (6x60) bolts, drive out with alternating forces applied from turbine shaft side. | |
| 12 | O-ring | 1 | | Oil lightly | |
| 13 | Snap ring | 1 | | Replace. Check seating. | |
| 14 | Turbine shaft | 1 | Drive out. Assure firm support under torque converter housing. | Check wear. | |
| 15 | Ball bearing | 1 | Drive out with punch. | Heat torque converter housing to 120°C, drive in with P 359. | |

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|--------------------------|-----|-----------------------------|--|--------------------------|
| | | | removing | installing | |
| 16 | Oil seal | 1 | Push out with screw-driver. | Oil torque converter seating surface, drive in with P 359. | |
| 17 | Temperature switch | 1 | | Tighten to correct torque. | |
| 18 | Oil seal | 1 | | Replace | |
| 19 | Temperature sender | 1 | | Tighten to correct torque. | |
| 20 | Oil seal | 1 | | Replace | |
| 21 | Threaded coupling | 1 | | Tighten to correct torque. | |
| 22 | Oil seal | 1 | | Replace | |
| 23 | Torque converter housing | 1 | | | |


DISASSEMBLING AND ASSEMBLING TRANSMISSION

TOOLS

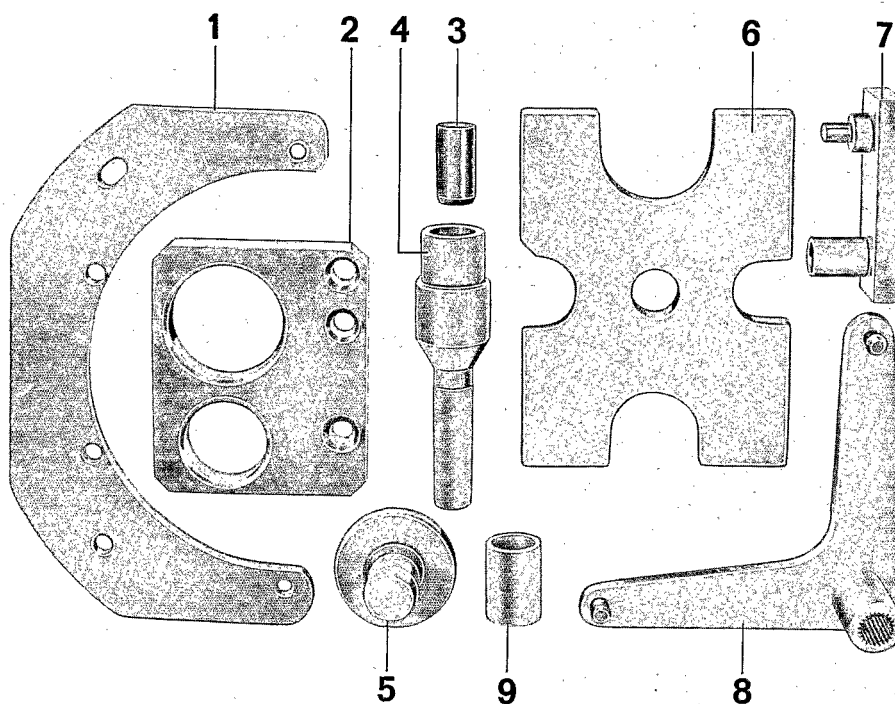

| Nr. | Description | Special Tool | Remarks |
|-----|--------------------|--------------|---------|
| 1 | Assembly plate | P 351 | |
| 2 | Holding plate | P 260 | |
| 3 | Sleeve | P 364 | |
| 4 | Installer | P 360 | |
| 5 | Thrust piece | VW 412 | |
| 6 | Press plate | VW 401 | |
| 7 | Remover | P 353a | |
| 8 | Input shaft holder | P 37 | |
| 9 | Thrust sleeve | VW 426 | |

Disassembling and Assembling Transmission

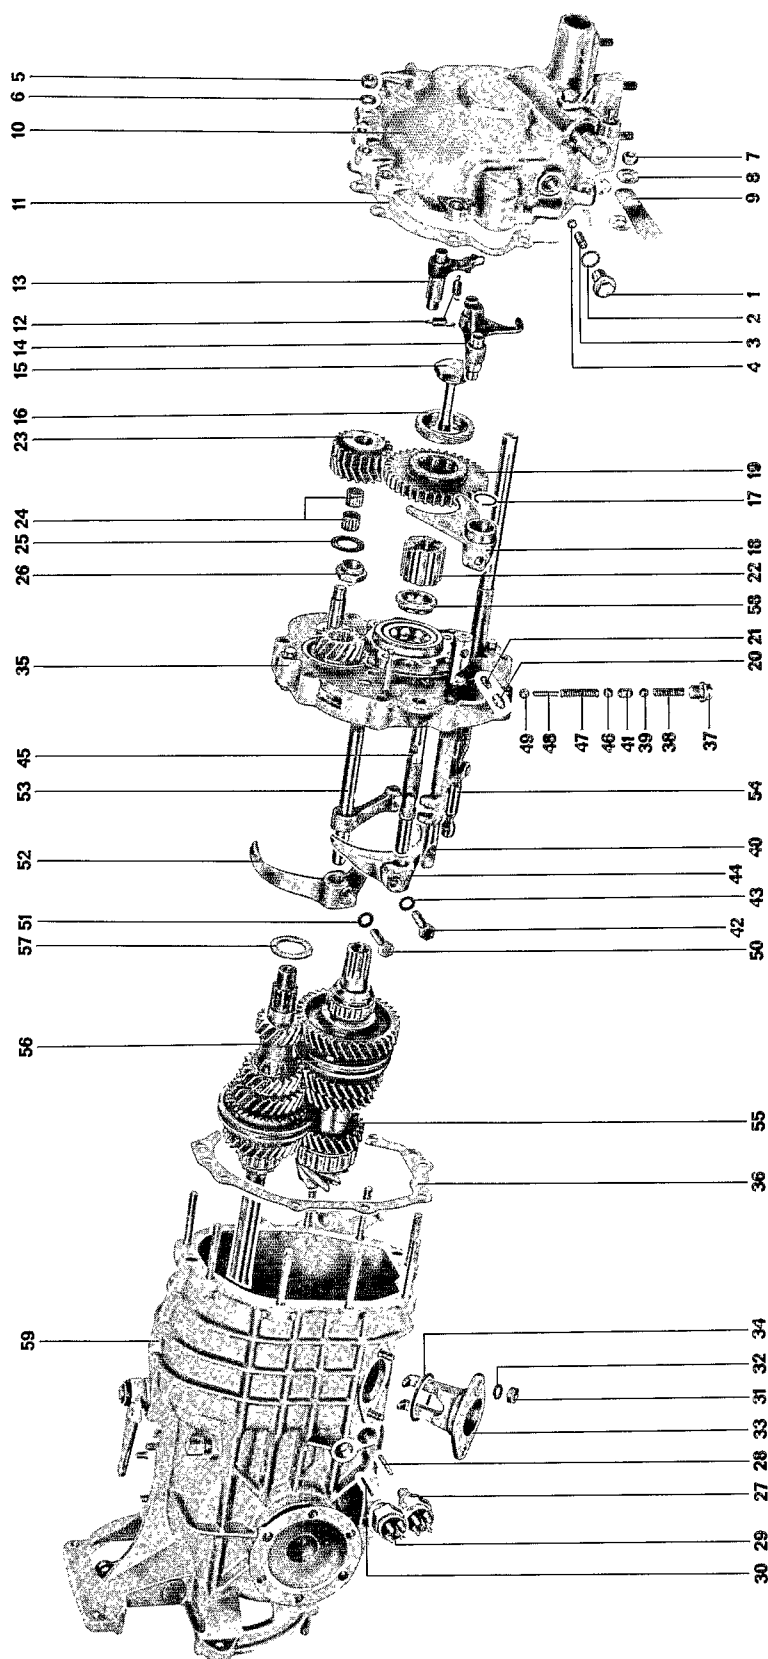

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|--------------------------|-----|---|---|--------------------------|
| | | | removing | installing | |
| 1 | Cap screw | 1 | | Tighten to correct torque. | |
| 2 | Oil seal | 1 | | Replace | |
| 3 | Spring | 1 | | | |
| 4 | Ball, 9 mm | 1 | | | |
| 5 | Lock nut | 9 | | Replace if necessary. Tighten to correct torque. | |
| 6 | Washer | 9 | | | |
| 7 | Lock nut | 2 | | Replace if necessary. Tighten to correct torque. | |
| 8 | Washer | 2 | | Place on ahead and one behind the ground strap. | |
| 9 | Ground strap | 1 | | | |
| 10 | Transmission front cover | 1 | | | |
| 11 | Gasket | 1 | | Replace | |
| 12 | Spring | 2 | | | |
| 13 | Parking lock lever | 1 | | | |
| 14 | Parking lock pawl | 1 | | | |
| 15 | Expansion bolt | 1 | Engage 4th gear, block input shaft with P 37. | Oil contact surface. Tighten to correct torque. Ensure correct seating of speedometer drive gear. | 4.1 - 2/9 |
| 16 | Speedometer drive gear | 1 | | Must still have clearance after expansion bolt has been tightened. | |
| 17 | Lock ring | 1 | | Replace | |

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|-----------------------------|-----|--|--|--------------------------|
| | | | removing | installing | |
| 18 | Shift fork for reverse gear | 1 | Push detent pin in. Remove with selector gear. | Check wear. | 4.1 - 2/9 |
| 19 | Reverse selector | 1 | | Check wear. | |
| 20 | Detent pin | 1 | | Small end faces out. | |
| 21 | Spring | 1 | | | |
| 22 | Splined bushing | 1 | | Speedometer drive groove faces expansion bolt head. | |
| 23 | Reverse idler gear assembly | 1 | | Check wear. | |
| 24 | Needle bearing cage | 2 | | Check wear. | |
| 25 | Thrust needle bearing | 1 | | Check wear. | |
| 26 | Flange nut | 1 | | Tighten to correct torque, secure with center punch. | |
| 27 | Bypass bridging | 1 | | Tighten to correct torque. | |
| 28 | Plunger | 1 | | | |
| 29 | Backup light switch | 1 | | Tighten to correct torque. | |
| 30 | Plunger | 1 | | | |
| 31 | Nut | 2 | | Tighten to correct torque. | |
| 32 | Spring washer | 2 | | Replace. | |
| 33 | Fork piece | 1 | | Insert only when no gear is engaged. | |
| 34 | O-ring | 1 | | Oil lightly. | |
| 35 | Immediate plate | 1 | Pull off studs with components in items 37-58. | | |


| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|-----------------------------------|-----|------------------------------|--|--------------------------|
| | | | removing | installing | |
| 36 | Gasket | X | Note quantity and thickness. | Recalculate if necessary. | |
| 37 | Plug | 1 | | Tighten to correct torque. | |
| 38 | Spring | 1 | | | |
| 39 | Ball, 9 mm | 3 | | | |
| 40 | Reverse gear shift rod | 1 | | | |
| 41 | Detent | 1 | | | |
| 42 | Bolt | 2 | | Tighten to correct torque | |
| 43 | Spring washer | 2 | | Replace. | |
| 44 | Shift fork, 1st and 2nd gear | 1 | Mark for reassembly | Check wear. | |
| 45 | Shift rod, 1st and 2nd gear | 1 | | Adjust. | |
| 46 | Ball, 9 mm | 3 | | | |
| 47 | Spring | 1 | | Insert large detent with some grease, install spring and pin together with spring. | |
| 48 | Detent (large) | 1 | | | |
| 49 | Ball, 9 mm | 3 | | | |
| 50 | Bolt | 2 | | Tighten to correct torque. | |
| 51 | Spring washer | 1 | | Replace. | |
| 52 | Shift fork, 3rd and 4th gear | 1 | Mark for reassembly. | Check wear, readjust. | |
| 53 | Shift rod, 3rd and 4th gear | 1 | | Adjust. | |
| 54 | Shift fork rod and selector lever | 1 | | Insert before installing intermediate plate. | |

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|-------------------------|-----|--|------------------------------------|-----------------------------|
| | | | removing | installing | |
| 55 | Pinion shaft | 1 | Press out of intermediate plate with P 353a. | | |
| 56 | Input shaft | 1 | | | |
| 57 | Spacer | 1 | | | |
| 58 | Bearing inner race half | 1 | | Press in with VW 401, 412 and 426. | 4.1 - 2/8 |
| 59 | Transmission housing | 1 | | | |


DISASSEMBLING AND ASSEMBLING TRANSMISSION

Disassembling

1. Engage 4th gear (turn shift rod to the right and pull outward).

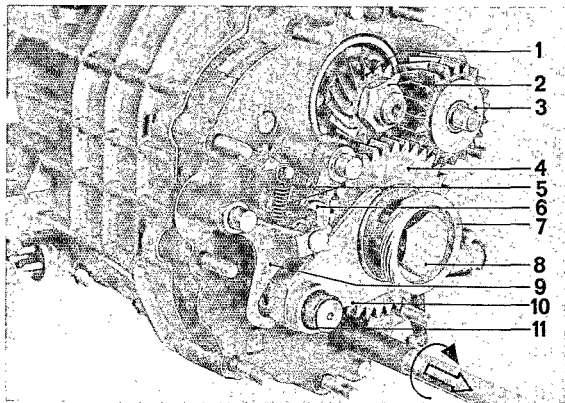


3. Lock input shaft with P 37 holder. Loosen pinion shaft expansion bolt and remove together with speedometer drive gear.

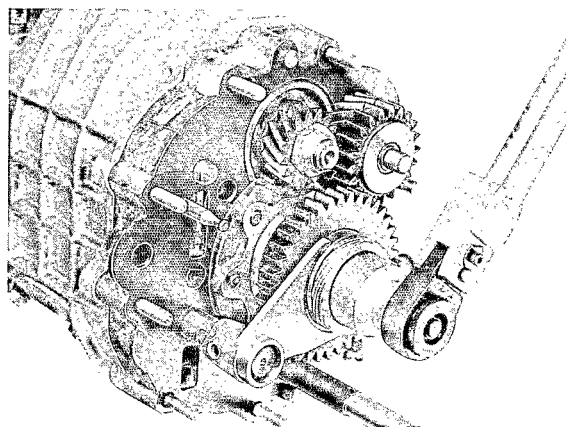

4. Remove snap ring from reserve gear shift rod and parking lock.

1. Gear I, reverse gear
2. Flanged nut
3. Reverse idler gear assembly
4. Reverse selector gear
5. Parking lock springs
6. Speedometer drive gear
7. Speedometer drive gear
8. Expansion bolt
9. Parking lock lever
10. Shift fork, reverse gear
11. Snap ring

2. Detach parking lock springs, remove pawl and lever.

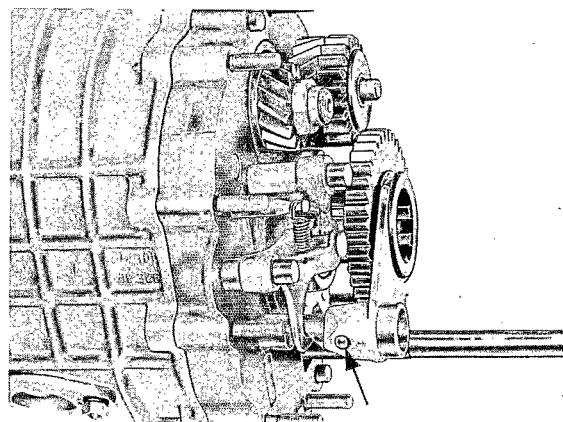

5. Remove selector gear and shift rod for reverse gear; this requires pushing the detent pin in.

6. Remove splined bushing.
7. Remove reverse idler gear assembly together with needle bearing cages and thrust needle bearing cage.
8. Remove input shaft flanged nut.
9. Remove bypass (bridging) switch and backup light switch. Pull out both contact plungers.
10. Withdraw gear assembly and intermediate plate from transmission housing.


Caution

Note the quantity and thickness of gaskets for proper reassembly.

11. Using special tool P 353a, press pinion and input shafts out of the intermediate plate at the same time.

Assembling

1. Insert input shaft spacer, slide pinion and input shafts into the bearings of the intermediate plate and splines of Reverse Gear I respectively.
2. Hand tighten input shaft flanged nut.
3. Press bearing inner race half of the four-point bearing into position using special tool VW 401, VW 412 and VW 426.

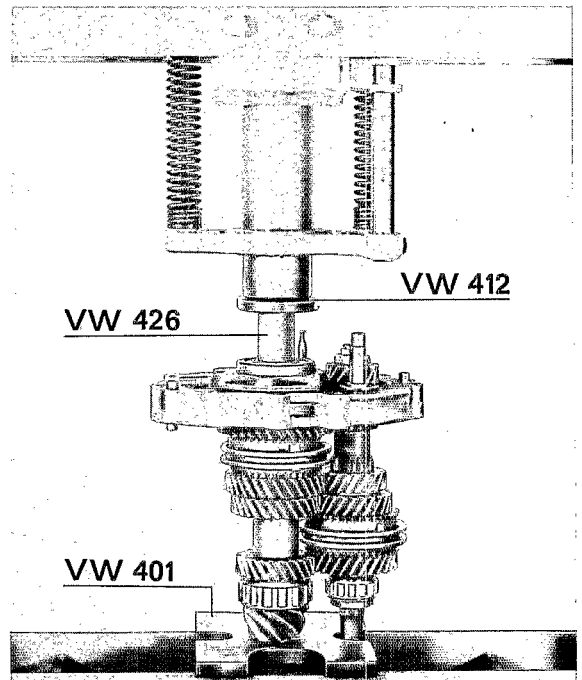


4. Engage 4th speed.

5. Slide intermediate plate and gear assembly into transmission housing. Then using four spacer bushings on four of the studs, tighten intermediate plate in a criss-cross pattern.
9. Install reverse selector gear and shift fork. Detent pin in shaft rod for reverse gear and parking lock must be pushed in.

6. Block input shaft with P 37 holder, slide splined bushing into place, and tighten expansion bolt (without speedometer drive gear) to correct torque.

Note


The expansion bolt is later removed when installing selector gear and shift forks.

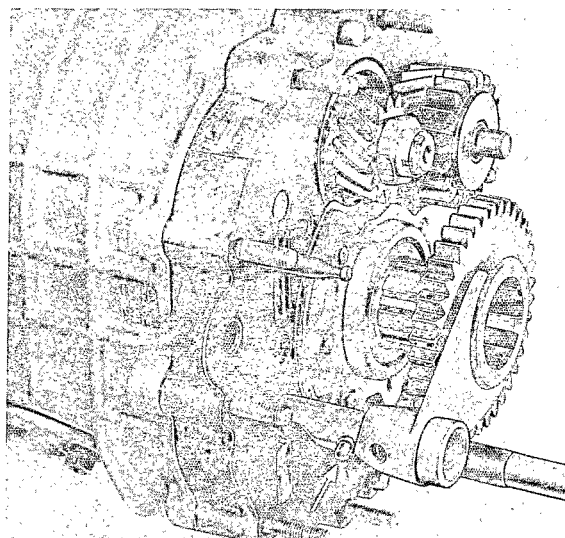

7. Remove intermediate plate with the assembled gears in order to install and adjust shift forks.
10. Remove pinion shaft expansion bolt and oil bolt head contact surface. Install bolt together with the speedometer drive gear. Make sure that the speedometer drive gear is properly seated on the end of the splined bushing.
8. Assemble selector lever. Tapered hole in the shift rod must point in same direction as the selector lever.
11. Lightly coat the O-ring for the selector lever guide fork with oil.
12. Place special tool P 364 on the input shaft. Position the oil seal so the sealing lip is toward the transmission. Then drive the seal in place with special tool P 360 until the tool bottoms.


DISASSEMBLING AND ASSEMBLING TRANSMISSION FRONT COVER

TOOLS

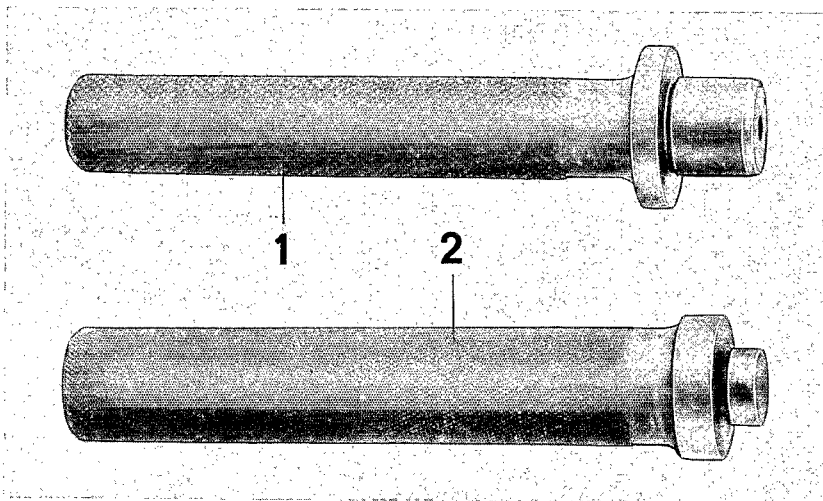

| Nr. | Description | Special Tool | Remarks |
|-----|-------------|--------------|---------|
| 1 | Mandrel | P 218 | |
| 2 | Mandrel | P 362 | |

Disassembling and Assembling Transmission Front Cover

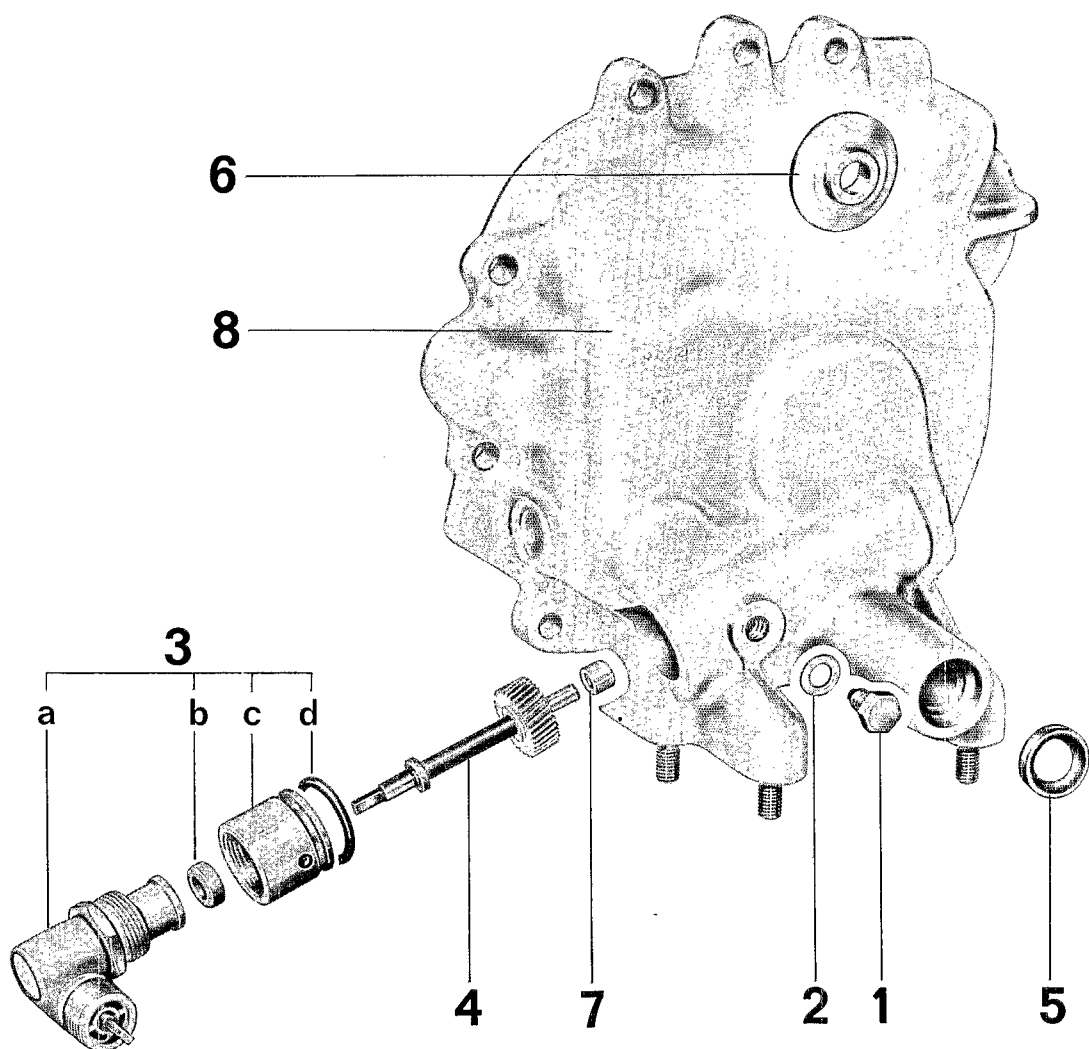


| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|----------------------------------|-----|--|---|-----------------------------|
| | | | removing | installing | |
| 1 | Speedometer drive retaining bolt | 1 | | Tighten to specified torque. | |
| 2 | Washer | 1 | | | |
| 3 | Speedometer drive (complete) | 1 | | Blind hole in guide bushing lines up with hole in cover. | |
| 3a | Elbow adapter | 1 | | | |
| 3b | Seal | 1 | | Replace if necessary. | |
| 3c | Guide bushing | 1 | | | |
| 3d | O-ring | 1 | | Oil lightly. | |
| 4 | Gear shaft | 1 | | | |
| 5 | Seal | 1 | | Drive in with P 218. | 4.1 - 3/5 |
| 6 | Thrust washer | 1 | Heat cover to approx. 120° C (250° F) on a hot plate and pry out. | Drive in to bottom with P 362. | |
| 7 | Bushing | 1 | Heat cover to approx. 120° C (250° F) on a hot plate and pull out. Drill out if necessary. | Heat cover to approx. 120° C (250° F) and drive in with an appropriate mandrel. | |
| 8 | Transmission front cover | 1 | | | |


DISASSEMBLING AND ASSEMBLING

Disassembling

1. Remove speedometer drive retaining bolt, pull out elbow adapter and gear shaft.

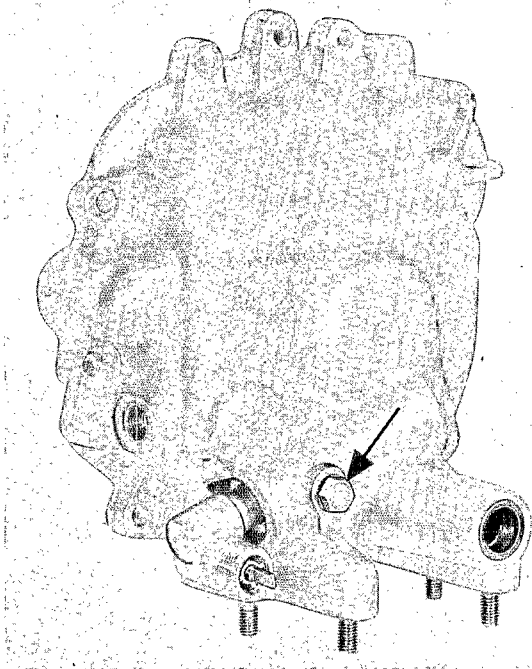


2. Pry out thrust washer for reverse idler gear assembly by prying on both sides.

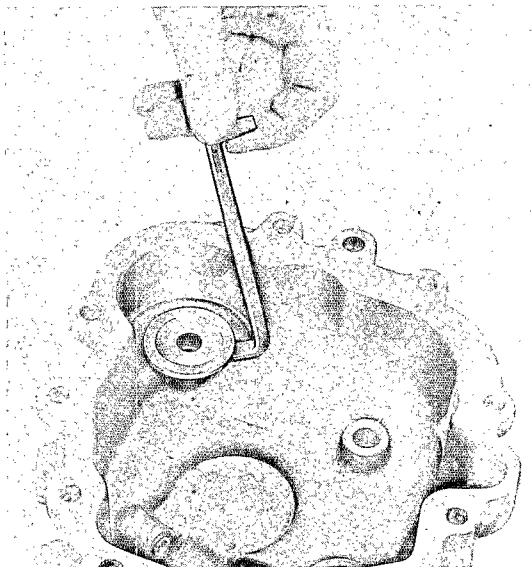

3. Heat transmission cover to approx. 120° C (250° F) on a hot plate. Pull out or drill out the gear shaft bushing.


Assembling

1. Heat transmission cover to approx. 120° C (250° F) on a hot plate, drive gear shaft bushing in.
2. Drive the thrust washer for reverse idler gear in to bottom with special tool P 362.

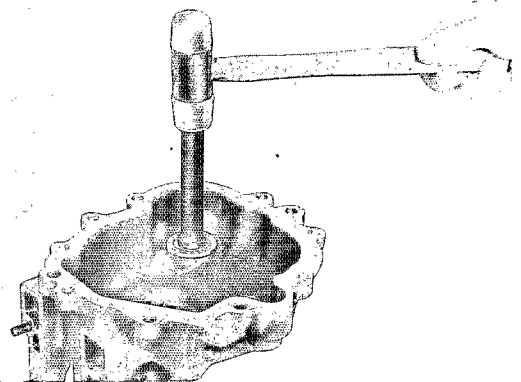


3. Insert elbow adapter. Blind hole in guide bushing must line up with hole in cover.

4. Install shift rod seal with special tool P 218.

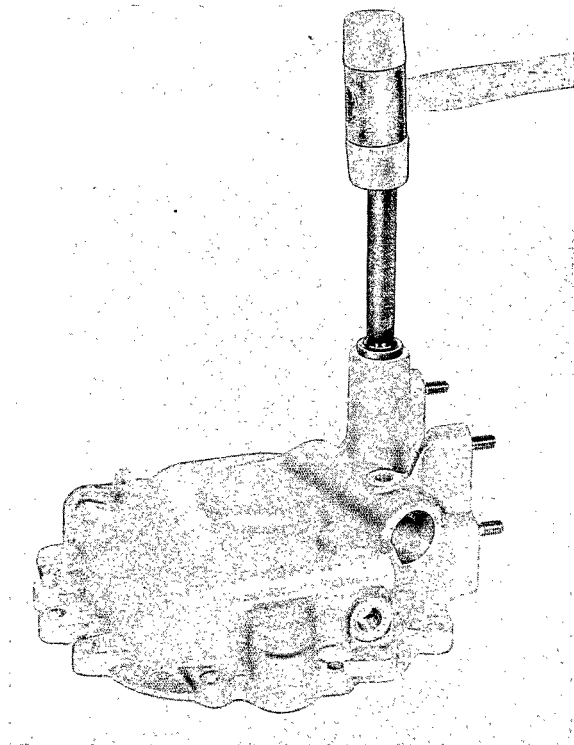


DISASSEMBLING AND ASSEMBLING INTERMEDIATE PLATE

TOOLS

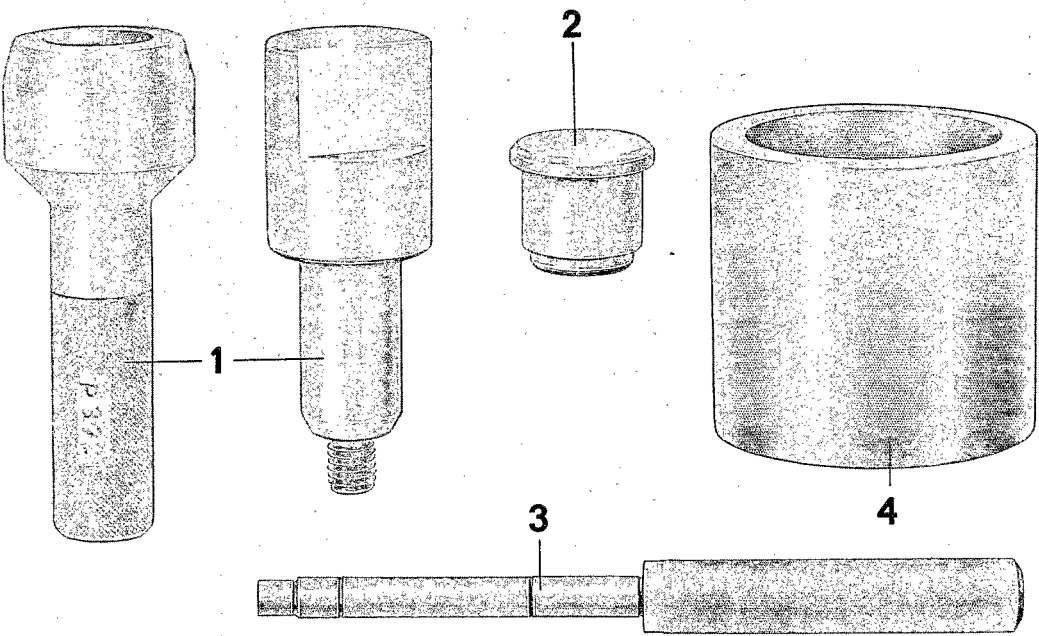

| Nr. | Description | Special Tool | Remarks |
|-----|--------------------|--------------|-------------|
| 1 | Centering mandrel | P 372 | In 2 parts. |
| 2 | Thrust piece | P 371 | |
| 3 | Installation arbor | P 262 | |
| 4 | Guide sleeve | P 255 | |

Disassembling and Assembling Intermediate Plate

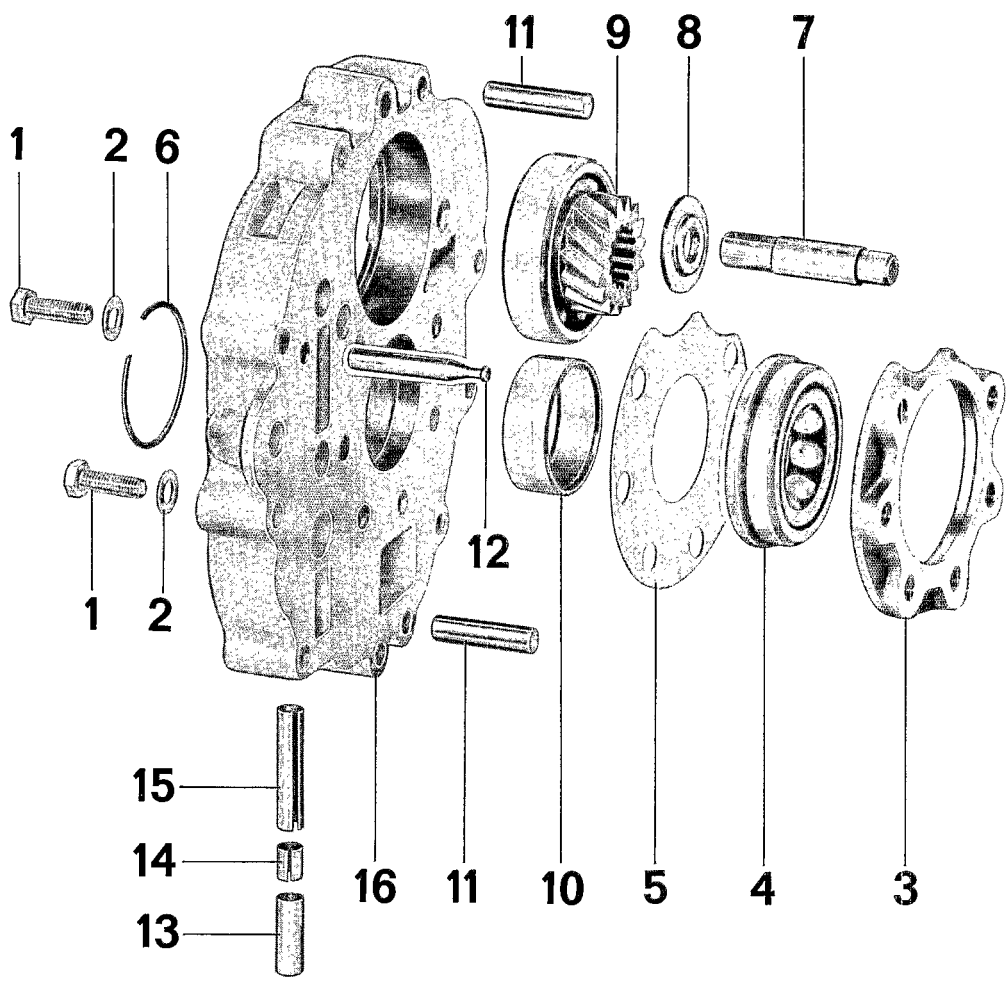


| Nr. | Description | Qty. | Note when | | Special instructions see |
|-----|---|------|---|---|--------------------------|
| | | | removing | installing | |
| 1 | Bolt | 6 | | Tighten to specified torque. | |
| 2 | Washer | 6 | | | |
| 3 | Clamping plate | 1 | | Check helicoil inserts. | |
| 4 | Four-point ball bearing | 1 | | Check wear. Align center with P 372. | 4.1 - 4/6 4.1 - 4/7 |
| 5 | Support plate | 1 | | Position properly when installing. | |
| 6 | Snap ring | 1 | Remove with small screwdriver. | | 4.1 - 4/5 |
| 7 | Shaft for reverse idler gear assembly | 1 | Heat intermediate plate to approx. 120° C (250° F) and press out. | Heat intermediate plate to approx. 120° C (250° F) and press in shaft. Make sure it is properly seated. | |
| 8 | Thrust washer | 1 | | Stepdown side faces front cover. | |
| 9 | Grooved ball bearing with Gear I for reverse gear | 1 | Heat intermediate plate to approx. 120° C (250° F) and drive out with appropriate pipe section. | Heat intermediate plate to approx. 120° C (250° F) and drive in with appropriate pipe section. | |
| 10 | Roller bearing outer race | 1 | Heat intermediate plate to approx. 120° C (250° F) and drive out with appropriate pipe section. | Heat intermediate plate to approx. 120° C (250° F) and drive in with appropriate pipe section. | |
| 11 | Dowel | 2 | Heat intermediate plate to approx. 120° C (250° F) and press out. | Heat intermediate plate to approx. 120° C (250° F) and press in. | 4,1 - 4/6 |
| 12 | Spring anchor stud | 1 | | | |

| Nr. | Description | Qty. | Note when | | Special instructions see |
|-----|--------------------|------|-----------|----------------------|--------------------------|
| | | | removing | installing | |
| 13 | Bushing | 1 | | Drive in with P 262. | 4.1 - 4/6 |
| 14 | Bushing | 1 | | Drive in with P 262. | 4.1 - 4/6 |
| 15 | Bushing | 1 | | Drive in with P 262. | 4.1 - 4/6 |
| 16 | Intermediate plate | 1 | | | |

DISASSEMBLING AND ASSEMBLING INTERMEDIATE PLATE

Disassembling

1. Remove clamping plate retaining bolts (arrows).
4. Using special tools P 371 and P 255, press Gear I for reverse gear off grooved ball bearing.

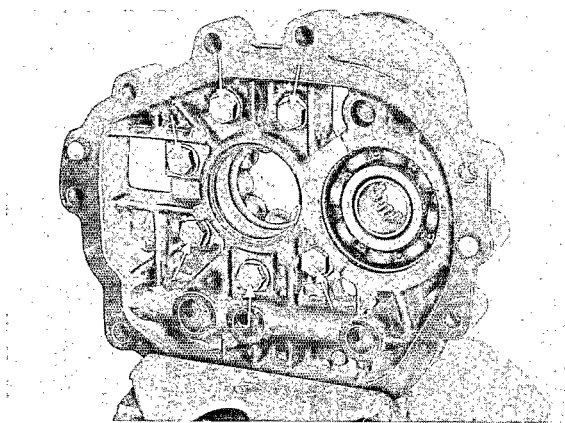


2. Using a small screwdriver, remove snap ring which retains roller bearing outer race.

Note


The snap ring may bind in the groove. Therefore, relieve binding pressure by tapping the bearing outer race away from the snap ring.

3. Heat intermediate plate to approx. 120° C (250° F) and press or drive the parts out.

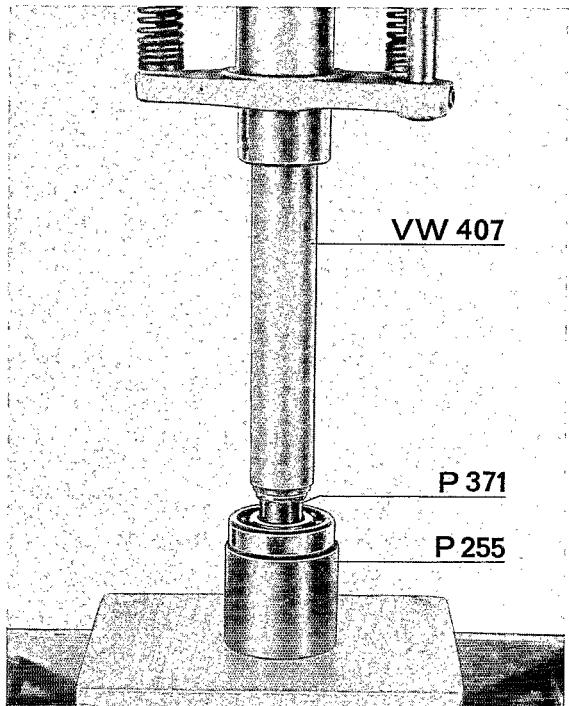

Assembling

1. Using special tools VW 407 and P 255, press Gear I for reverse gear into grooved ball bearing.

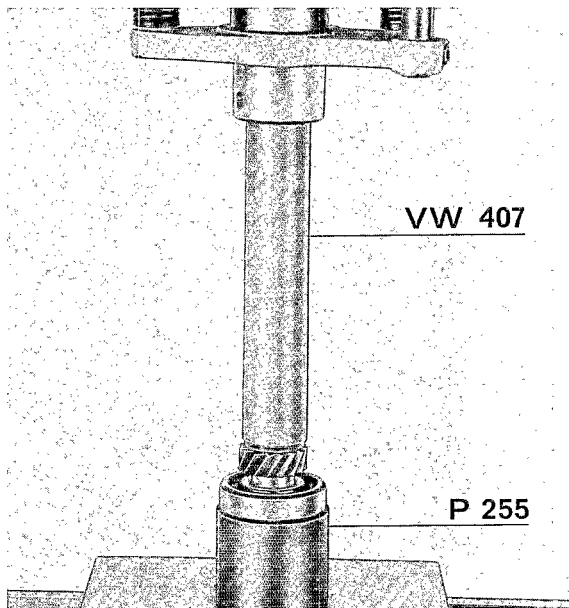

Note

When installing the bushings, make sure, the bushings do not protrude into the guide bores of shift rods.


2. Using special tool P 262, drive bushings for shift detents in.
 - a) Drive long bushing in until mandrel bottoms.
 - b) Drive short bushing in to the second mark on the mandrel.
 - c) Drive the medium size bushing in to the first mark on the mandrel.

3. Heat intermediate plate to approx. 120° C (250° F) and press or drive the parts in.

4. Press dowel pins in. They must protrude approx. 5.5 mm (0.22 in.) on each side of the intermediate plate.

5. Install clamping plate together with four-point bearing and support plate.


6. Mount receptacle from special tool P 372 in vise and place bearing inner race of four-point bearing on it.

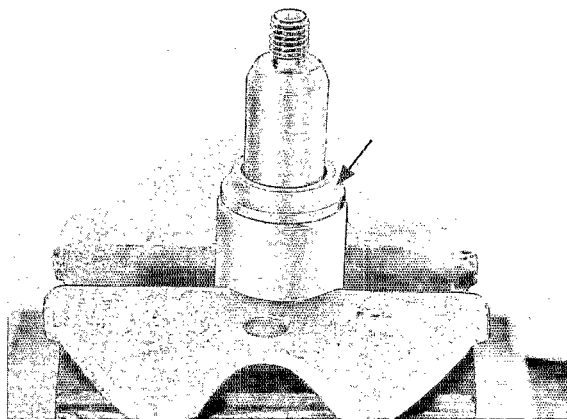

Note

To center the bearing, use bearing inner race of the four-point bearing which should be pressed off the pinion shaft. A spare bearing inner race can be used for this purpose.


7. Place intermediate plate on top, insert second bearing inner race, and center four-point bearing with P 372.

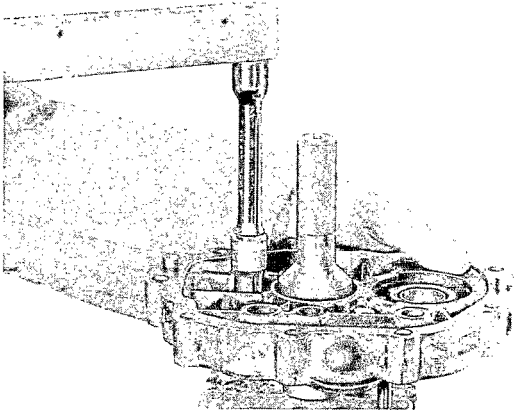

8. Tighten bolts to correct torque.


MAIN SHAFT

TOOLS

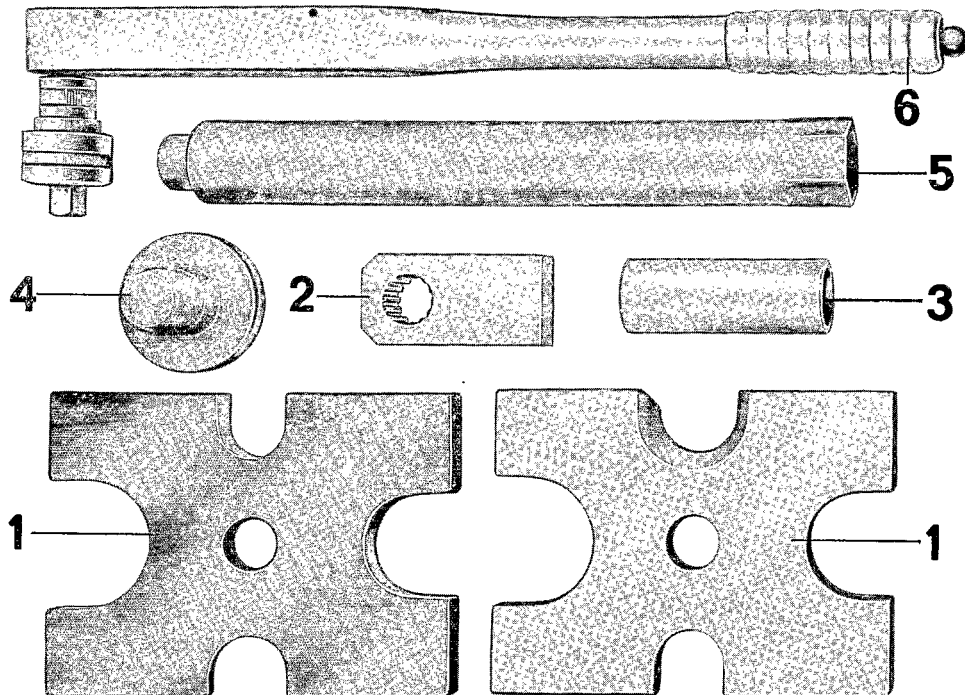

| No. | Description | Special Tool | Remarks |
|-----|---------------|--------------|----------------|
| 1 | Plate | VW 401 | |
| 2 | Holder | P 376 | |
| 3 | Thrust tube | VW 416 b | |
| 4 | Thrust disc | VW 412 | |
| 5 | Socket wrench | P 252 | |
| 6 | Torque wrench | - | Local purchase |

DISMANTLING AND ASSEMBLING

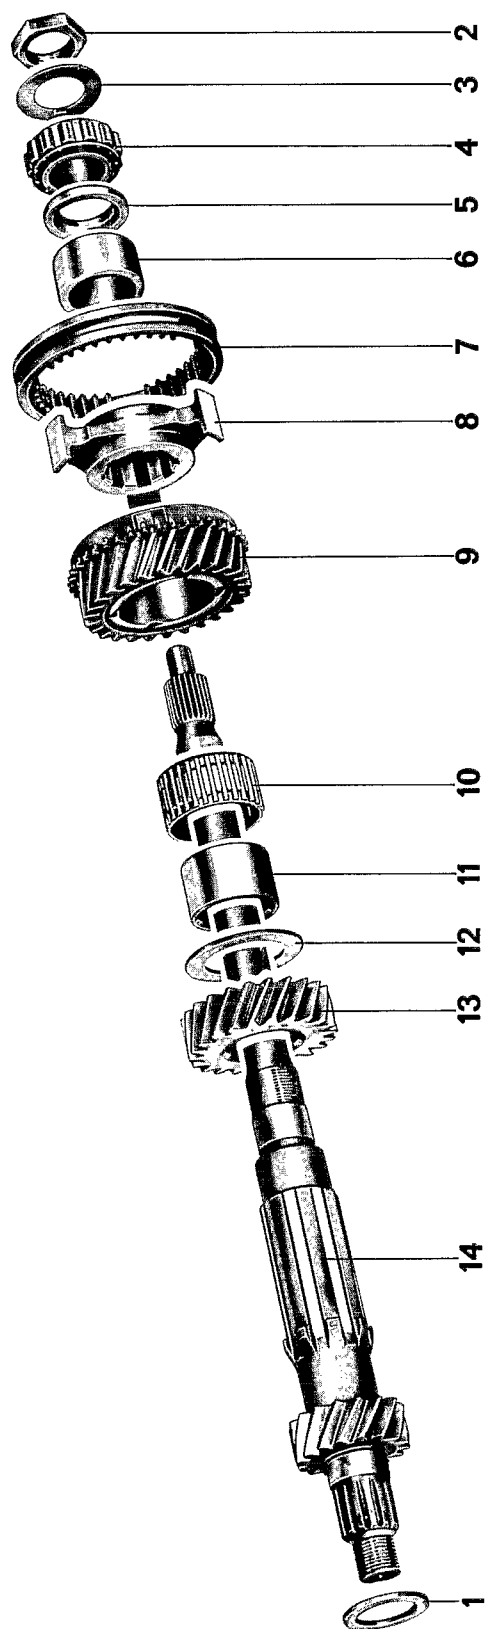


| No. | Description | Qty. | Notes | | Remarks |
|-----|--------------------------------------|------|---------------------------------|--|---------|
| | | | Removal | Installation | |
| 1 | Spacer (2.6 mm thick) | 1 | | | |
| 2 | Nut | 1 | Unlock and loosen with P 252 | Torque to specifications | |
| 3 | Lockplate | 1 | | Replace | |
| 4 | Roller bearing | 1 | Press off VW 401 and VW 412 | Install with VW 412, VW 416 b and VW 401 | |
| 5 | Washer | 1 | | Install correctly, bevel faces roller bearing | |
| 6 | Spacer | 1 | | | |
| 7 | Shift sleeve | 1 | | Check for wear | |
| 8 | Shift sleeve guide | 1 | | Check for wear | |
| 9 | 3rd gear 27:25 V | 1 | | Check synchroniza- tion; replace in pairs only | |
| 10 | Needle bearing | 1 | Mark for installation | Install with same gear | |
| 11 | Race, needle bearing | 1 | Mark for installation | Install with same gear | |
| 12 | Thrust washer (2 mm thick) | 1 | | | |
| 13 | 2nd gear 22:29 M | 1 | | Check for wear; replace in pairs only | |
| 14 | Main shaft with 1st gear 16:34 DA | 1 | | Check runout, replace if necessary | |


DISMANTLING AND ASSEMBLING INSTRUCTIONS

Dismantling

1. Clamp holder P 376 in a vise, install shaft and unlock nut.

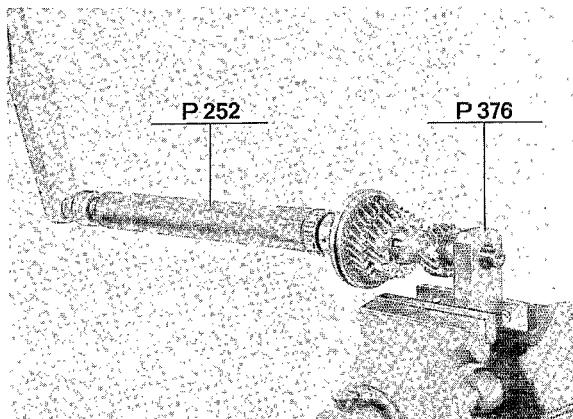

2. Loosen nut with special tool P 252.
3. Remove roller bearing from shaft with special tools VW 401 and VW 412.

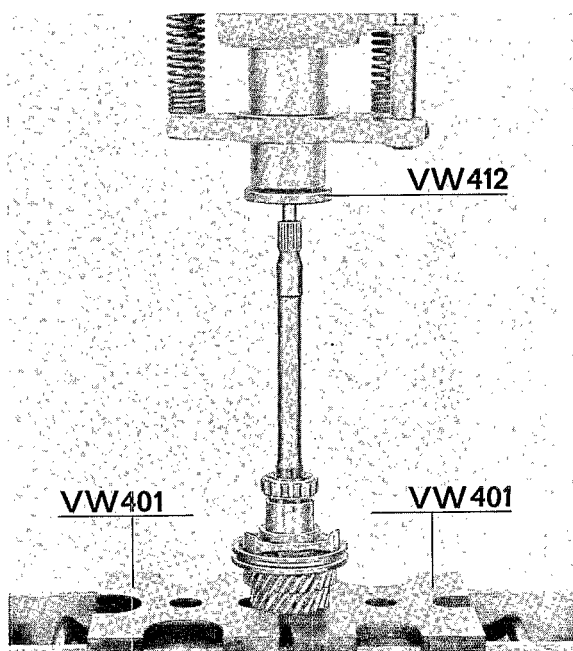


Assembling

Note


Before assembling, clean all shaft parts and dry.

1. Install roller bearing with special tools VW 412, VW 416 b and VW 401.

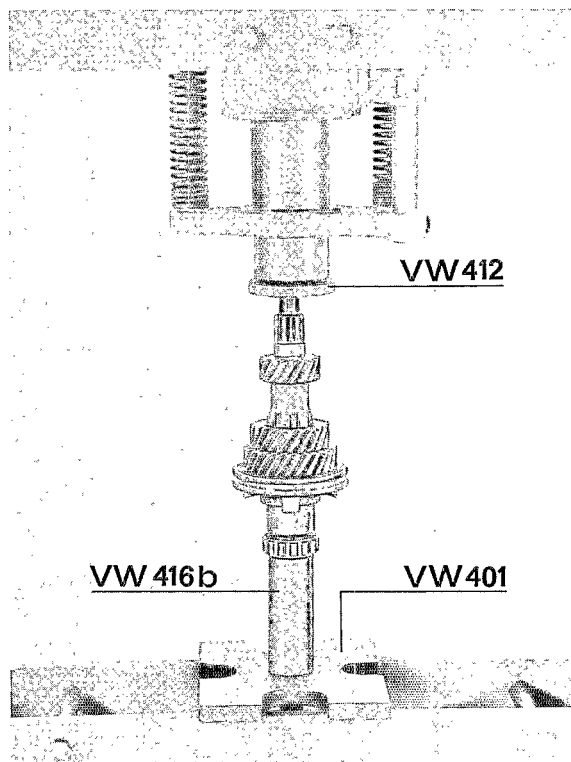


PINION SHAFT

TOOLS

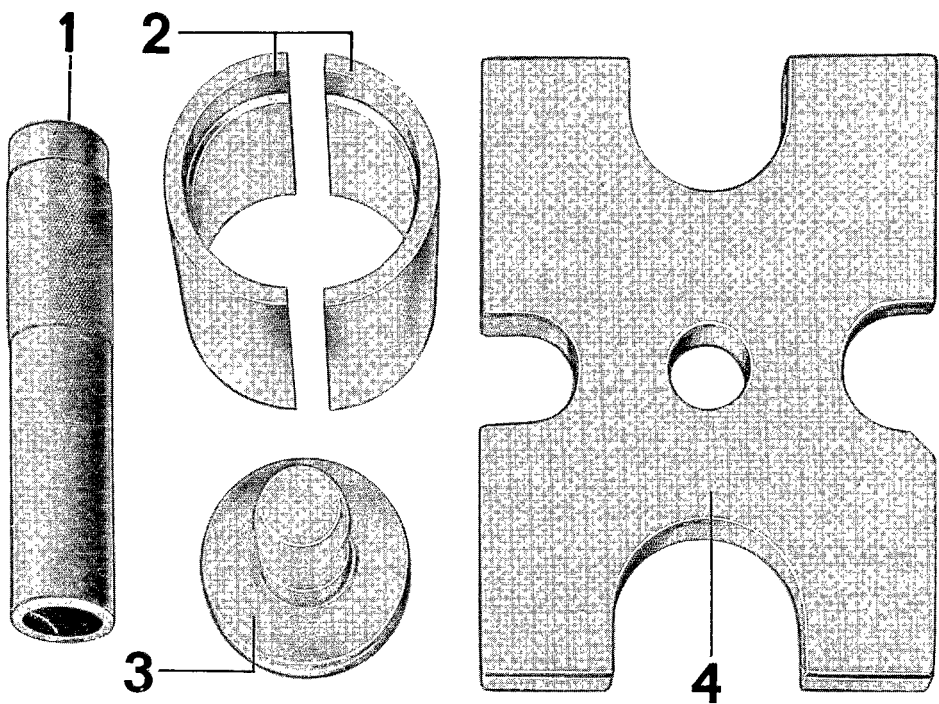

| No. | Description | Special Tool | Remarks |
|-----|--------------|--------------|----------------------|
| 1 | Drive sleeve | VW 244 | |
| 2 | Guide | No. 9100 | Consists of 2 pieces |
| 3 | Thrust disc | VW 412 | |
| 4 | Plate | VW 401 | |

DISMANTLING AND ASSEMBLING

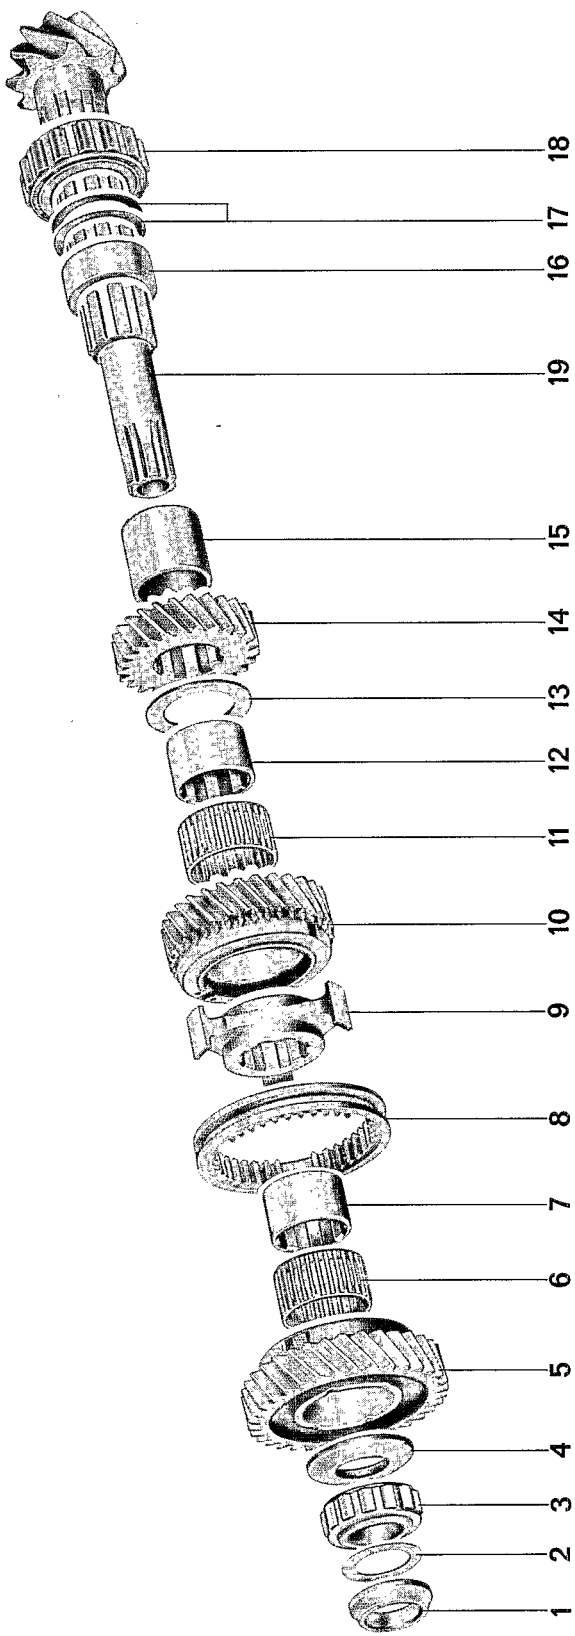


| No. | Description | Qty. | Notes | | Remarks |
|-----|----------------------------|------|---|--|--|
| | | | Removal | Installation | |
| 1 | Bearing inner race | 1 | | Install with correct adapter | |
| 2 | Spacer (1 mm thick) | 1 | | | |
| 3 | Roller bearing | 1 | Remove from pinion shaft with VW 412 and 9100 | Install with VW 412, VW 244 and VW 401 | |
| 4 | Thrust washer | 1 | | Flat side faces needle bearing | |
| 5 | 1st gear 16:34 DA | 1 | | Check synchronization; replace in pairs only | From 1977 Models with asymmetrical pointed teeth of clutch body |
| 6 | Needle | 2 | Mark for installation | Install with same gear | |
| 7 | Race, needle bearing | 2 | Mark for installation | Install with same gear | |
| 8 | Shift sleeve | 1 | | Check for wear | From 1977 Models with asymmetrical pointed teeth for 1st gear. Note direction of installation (see Page 3.1-7/6) |
| 9 | Shift sleeve guide | 1 | | Check for wear | |
| 10 | 2nd gear 22:29 M | 1 | | Check synchronization; replace in pairs only | |
| 11 | Needle bearing | 2 | Mark for installation | Install with same gear | |
| 12 | Race, needle bearing | 2 | Mark for installation | Install with same gear | |
| 13 | Thrust washer (2 mm thick) | 1 | | | |
| 14 | 3rd gear 27:25 V | 1 | | Check for wear; replace in pairs only | |
| 15 | Spacer | 1 | | | |

| No. | Description | Qty. | Notes | | Remarks |
|-----|----------------|------|---|---|---------|
| | | | Removal | Installation | |
| 16 | Spacer | 1 | | | |
| 17 | Shim | X | Note number and thickness for installation | Recalculate if necessary | |
| 18 | Roller bearing | 1 | Remove from pinion shaft with VW 412 and 9100 | Install with correct adapter | |
| 19 | Pinion shaft | 1 | | Check for wear; measure thickness of shims again if necessary | |


DISMANTLING AND ASSEMBLING INSTRUCTIONS

Dismantling


1. Remove roller bearing from pinion shaft with special tools VW 412 and 9100.

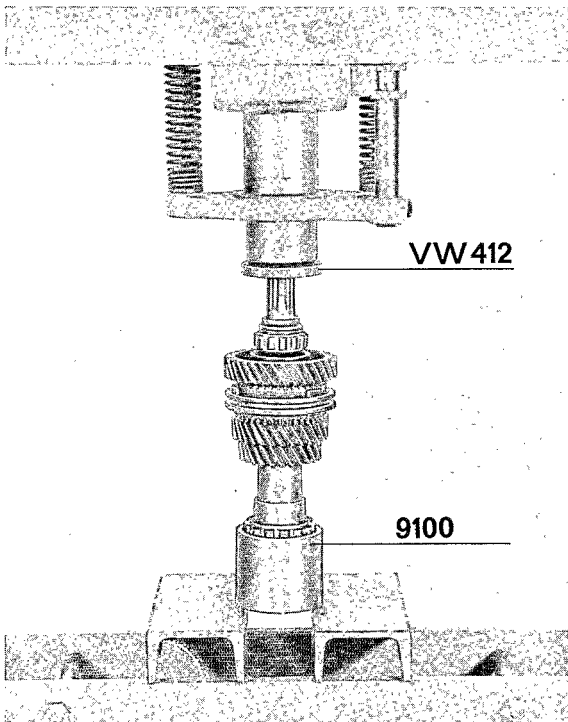

1. Install roller bearing on pinion shaft with appropriate adapter. The two-part roller cage with ring faces the gears.

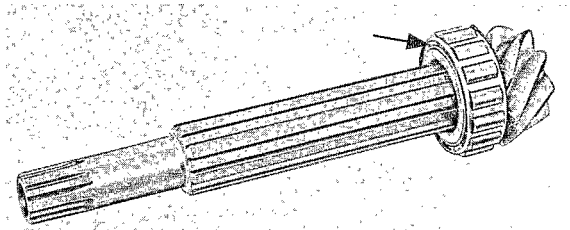

2. Install small roller bearing with special tools VW 412, VW 244 and VW 401.

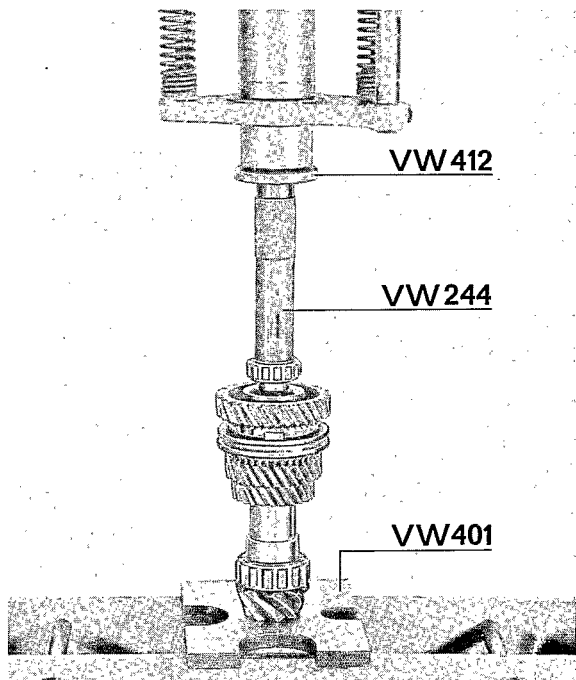

Assembling

Pinions and ring gears are matched. Pair numbers must agree with each other when installing.

Note

Before installing, clean all pinion shaft parts and dry.


CHECKING CLUTCH PLAY

Engine/transmission assembly installed

1. Raise car.
2. Press accelerator linkage operating lever on transmission toward full throttle (bleeds servo). Use left hand to press clutch intermediate lever toward right rear wheel. Travel of about 5 to 7 mm must be felt on the clutch intermediate lever. If there is not enough travel, remove engine/transmission assembly and adjust clutch (basic adjustment 12 to 15 mm).

Engine/transmission assembly removed

1. Remove engine/transmission assembly.
2. Remove cotter pin from clevis pin for actuating rod and intermediate lever and pull out clevis pin.
3. Pull out actuating rod mounted on servo up to stop and at the same time press intermediate lever toward servo to stop. In this position the actuating rod clevis must be located so that its bore is 12 to 15 mm above the intermediate lever bore.

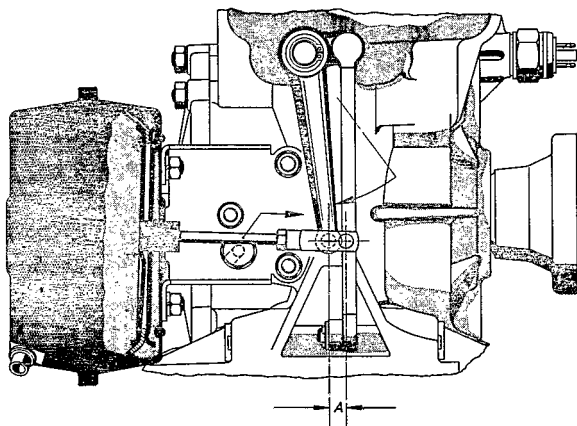

CHECKING CONTROL VALVE ADJUSTMENT


This requires that the throttle operating linkage and engine idle speed are adjusted correctly.

Full throttle position
(upshifting on acceleration)

To check the control valve adjustment and make changes if necessary, it will be necessary to remove various parts of the CIS (continuous fuel injection) equipment.



- a) Disconnect battery.
- b) Remove air cleaner cover.
- c) Remove heater blower.
- d) Remove holder.
- e) Detach No. 3 cylinder injection line at injector.
- f) Remove No. 3 cylinder intake pipe.

2. Place a strip of 4 mm thick metal between the stop and idle limit screw (this opens throttle partially).

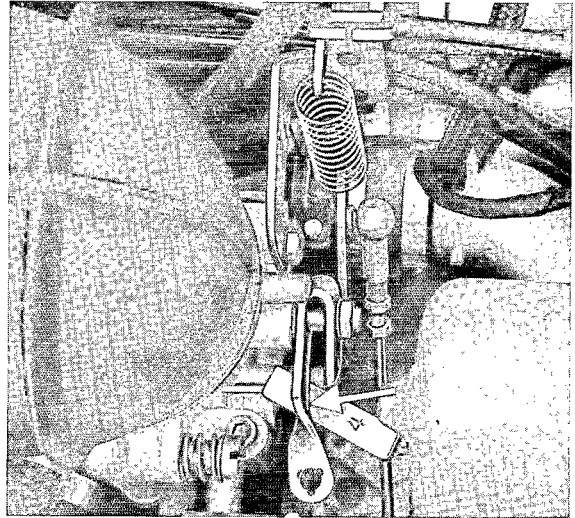

1. There must be a play of 1.5 mm between the control valve plunger and the throttle linkage cam in idle position. Use feeler gauge, lock plunger with lock nut. Make sure that the cam on the operating lever for the linkage is set back all the way.

Using a 3 mm socket wrench loosen the cam clamping screw and turn the cam until the control valve plunger just barely touches the cam surface. Tighten cam clamping screw.

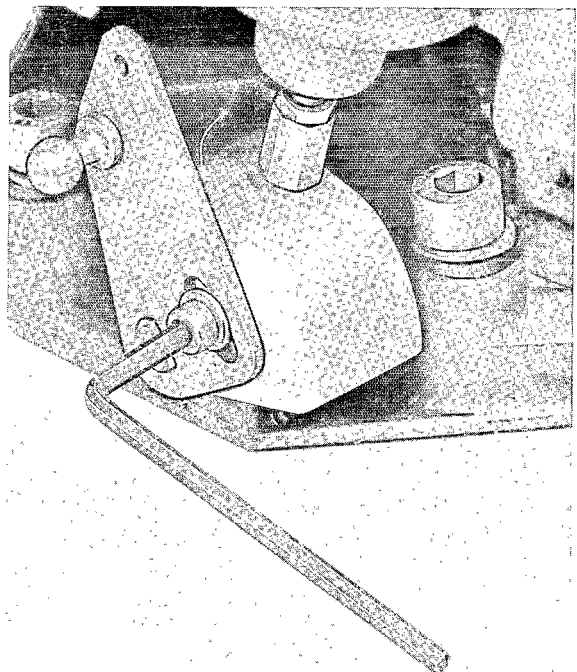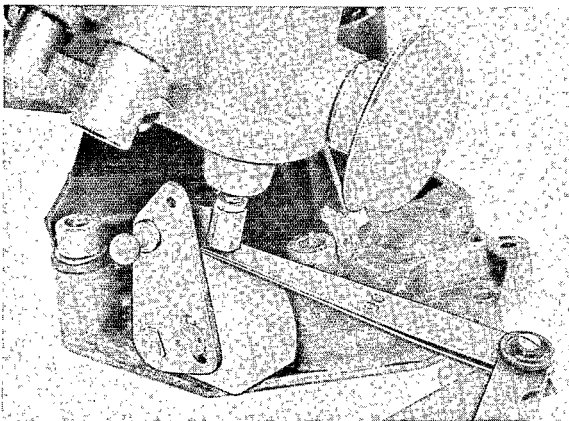

Remove strip of metal at idle limit screw. The idle play set at 1.5 mm at the beginning could change because of cam movement, but there must be at least 1 mm of play.

Closed throttle position (downshifting on deceleration)

The closed throttle position can be adjusted at the self-locking control screw with a screwdriver, without removing engine parts.

Basic adjustment

The closed throttle position can only be checked for correct adjustment by downshifting a car on the road or possibly on a roller test stand. The following information can be used as a reference point for adjustments on a stationary car.

- a) Start engine and allow to idle.
- b) Apply parking brakes.
- c) Move lever to driving range.

There should be 0.3 to 0.5 seconds from the moment the shift lever is released to the time the clutch engages.

Road test

Drive in range "D" at 4500 rpm and shift back to range "L". Clutching should take place without delay, yet the rear wheels should not lock. The adjustment can be altered to suit the customer.


- a) Tighten control screw (turn clockwise) to provide a softer, delayed clutch engagement.
- b) Loosen control screw (turn counterclockwise) to provide a firmer, quicker clutch engagement.

Caution

Only turn control screw 1/4 to 1/2 turn at a time in either direction, because this will be sufficient to alter the engagement considerably.


REMOVING AND INSTALLING FINAL DRIVE

TOOLS

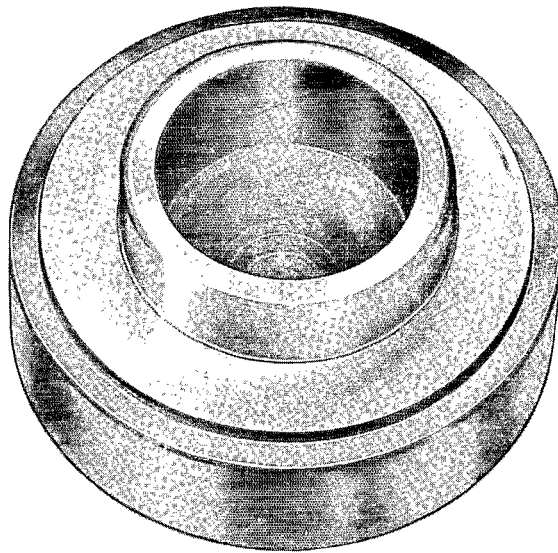

| Nr. | Description | Special Tool | Remarks |
|-----|--------------|--------------|---------|
| | Thrust piece | P 265c | |

Removing and Installing Final Drive

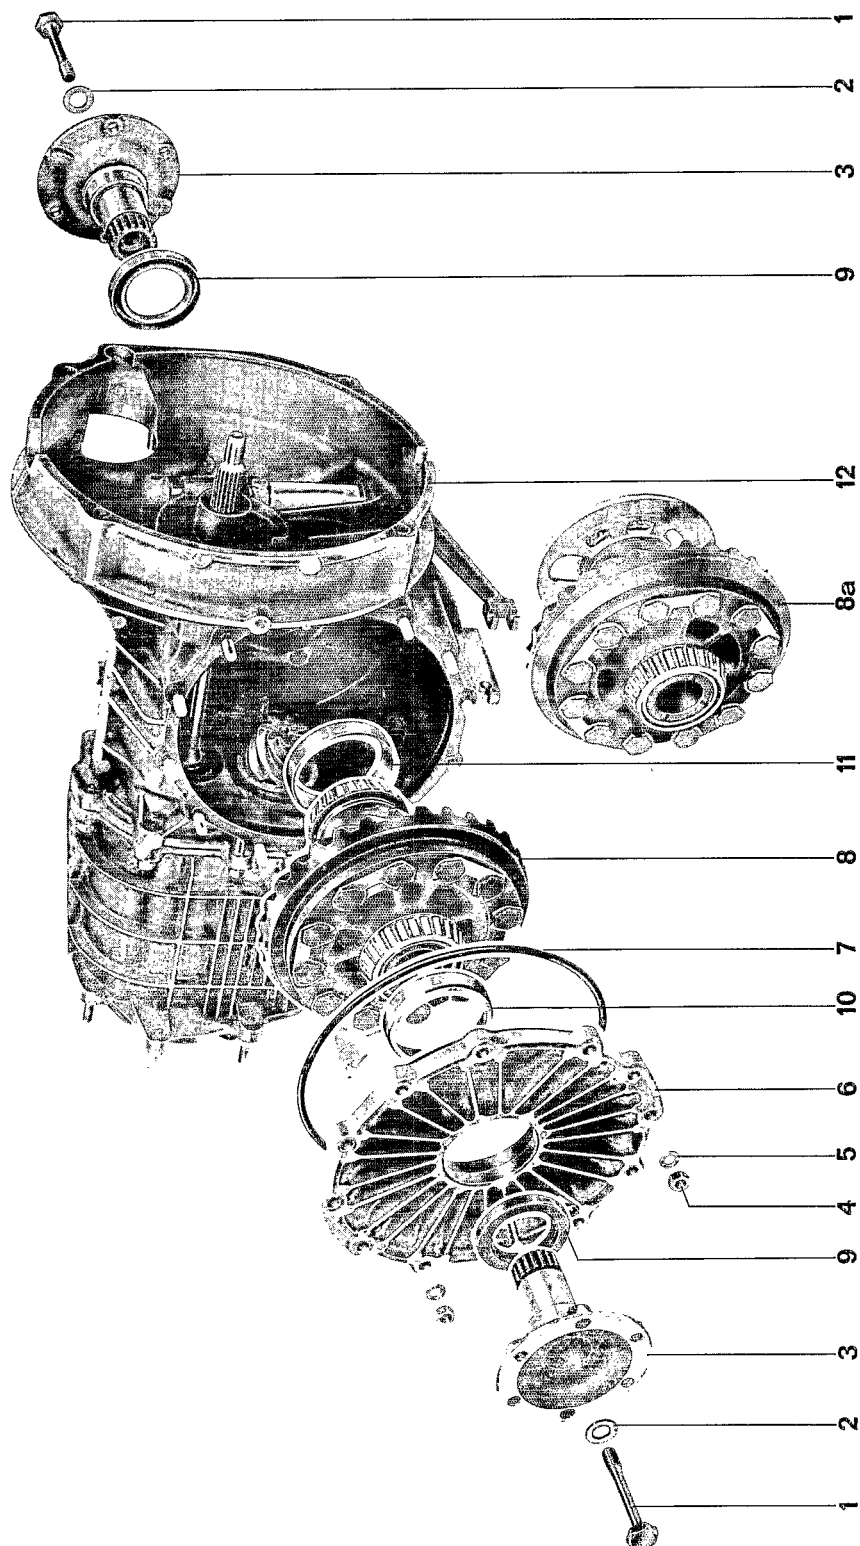


| Nr. | Description | Qty | Note when | | Special Instructions see |
|-----|---|-----|-----------------------|---|--------------------------|
| | | | Removing | Installing | |
| 1 | Expansion bolt | 2 | | Tighten to correct torque. | 5.1-1/4 |
| 2 | Washer | 2 | | | 5.1-1/4 |
| 3 | Flange shaft | 2 | | | |
| 4 | Self-locking nut | 12 | | Tighten to correct torque. | |
| 5 | Washer | 12 | | | |
| 6 | Final drive side cover | 1 | | | |
| 7 | O-ring | 1 | | Replace if necessary. Oil lightly. | |
| 8 | Differential | 1 | | Readjust if necessary. | 5.1-5/5 |
| 8a | Differential with magnetic carrier disc | 1 | | Adjust, if necessary. No adjusting necessary when replacing magnetic carrier disc | |
| 9 | Seal | 2 | Knock out with drift. | Install with P 265c | |
| 10 | Bearing outer race | 1 | Knock out with drift. | Heat transmission cover to approx. 120°C (250°F) and install with appropriate tubing. | |
| 11 | Bearing outer race | 1 | Knock out with drift. | Heat transmission cover to approx. 120°C (250°F) and install with appropriate tubing. | |
| 12 | Final drive housing | 1 | | | |


REMOVING AND INSTALLING

Removing

1. Unscrew joint flange mounting bolt and remove joint flange.

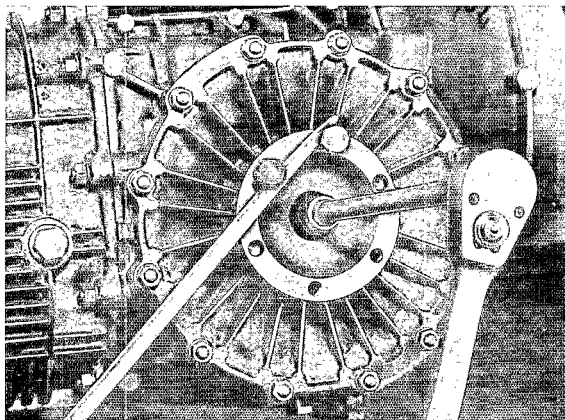

2. Apply light coat of oil to side cover seal.

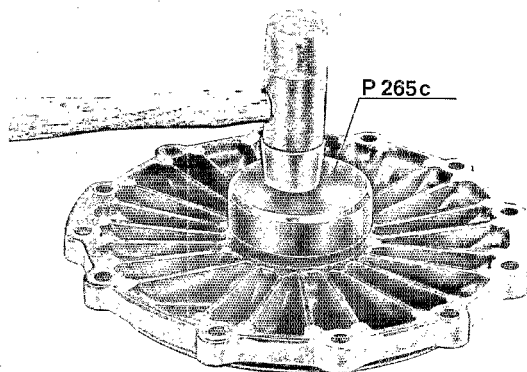


2. Drive seals and bearing outer races out of final drive housing and side cover with an appropriate drift.

3. Install seal in side cover with special tool P 265c.

Installing

1. Install seal in final drive housing with special tool P 256c.

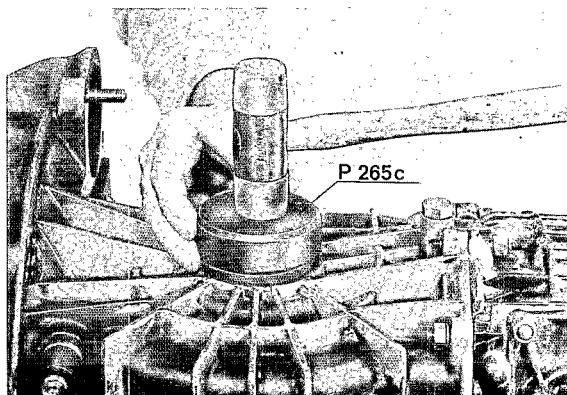


MODIFICATION ON DIFFERENTIAL

The joint flanges and mounting bolts were also changed with introduction on the new differential (similar to 928). A M 10 x 80 hexagon head bolt without washer is used on these transmissions to mount the joint flanges instead of the expansion bolt with washer.

Tightening torque value is different (see page 0.2-1/4).


DISASSEMBLING AND ASSEMBLING DIFFERENTIAL

TOOLS

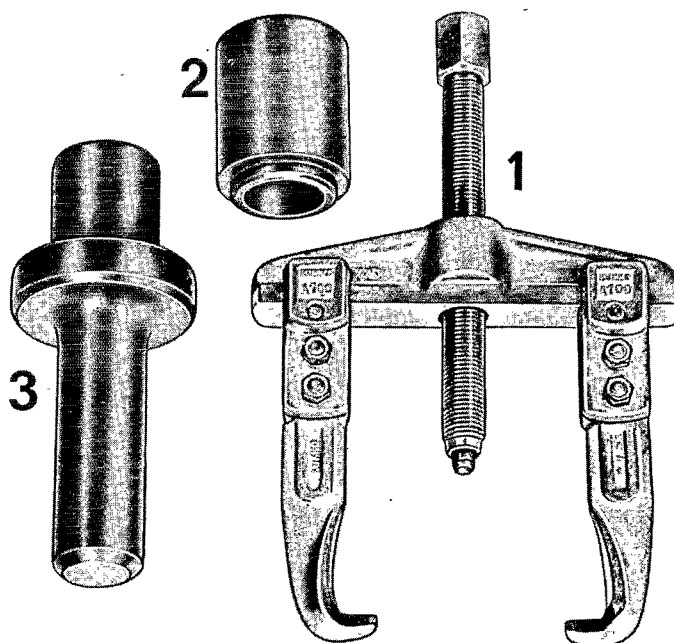

| Nr. | Description | Special Tool | Remarks |
|-----|--------------|----------------|------------|
| 1 | Puller | 40 - 19 (AUDI) | or similar |
| 2 | Thrust piece | P 263 | |
| 3 | Thrust piece | P 264b | |

Disassembling and Assembling Differential

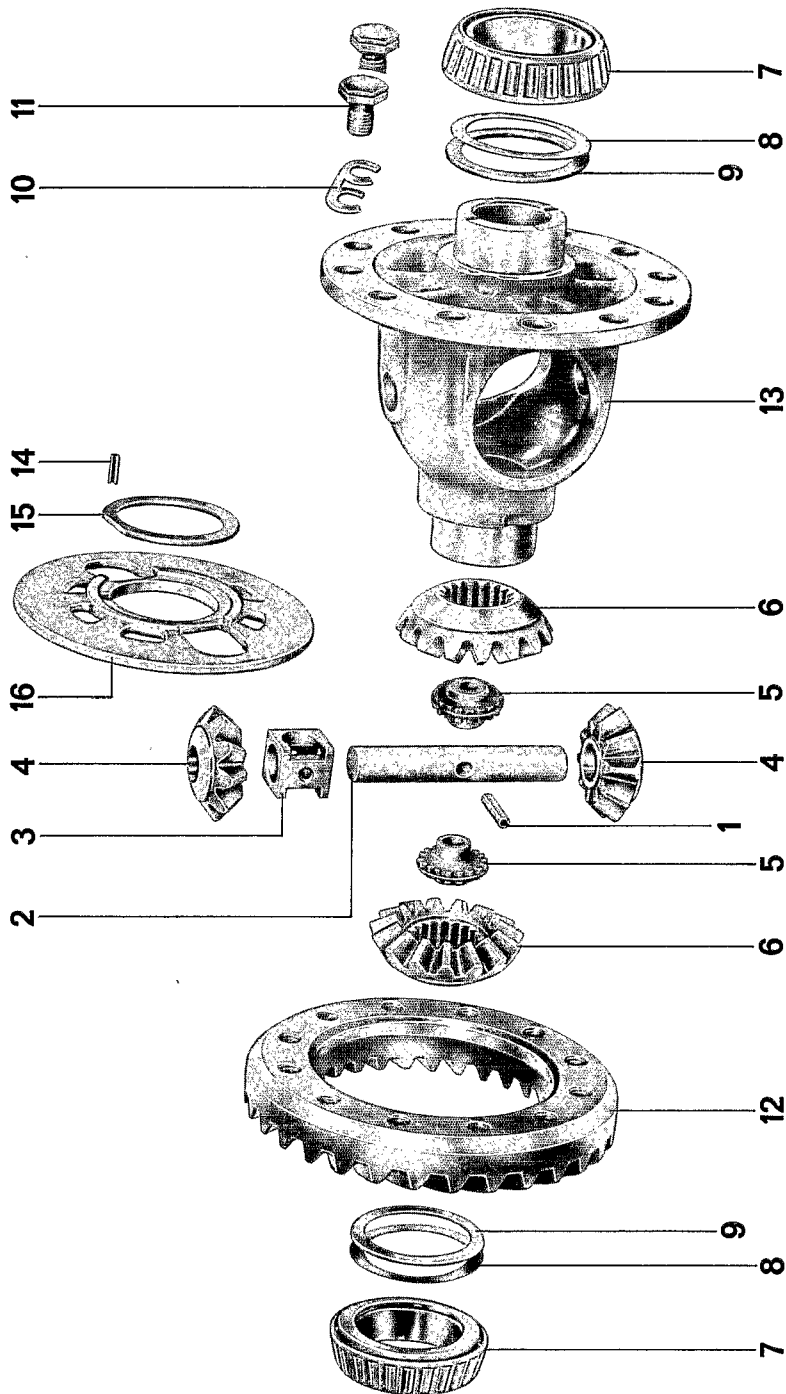


| Nr. | Description | Qty | Note when | | Special instruc. see |
|-----|--|-----|--|---|----------------------------|
| | | | Removing | Installing | |
| 1 | Roll pin | 1 | Drive out. | Replace if necessary | |
| 2 | Shaft | 1 | Drive out. | Note location of roll pin bore. | |
| 3 | Anchor piece | 1 | | | |
| 4 | Small differential pinion (spider gear) | 1 | | Coat thrust areas with Molykote or similar lubricant. | 3.1-2/4 |
| 5 | Threaded retainer | 2 | | Position properly. | 3.1-2/5 |
| 6 | Large differential pinion (side gear) | 2 | | Coat thrust areas with Molykote or similar lubricant. | |
| 7 | Tapered roller bearing | 2 | Remove with puller No. 40-19 and P 263 | Drive on with P 264b | 3.1-2/4 |
| 8 | Shim | 2 | Keep together with mechanic's wire for reassembly. | If necessary, re- calculate thickness | 5.1-5/5 |
| 9 | Spacer washer | 2 | Keep together with mechanic's wire for reassembly. | If necessary, re- calculate thickness | 5.1-5/5 |
| 10 | Lock plate | 6 | | Replace | |
| 11 | Bolt | 12 | | Torque to specify | |
| 12 | Ring gear | 1 | Check for wear | Make sure ring gear and pinion have matching pair num- bers. | 5.1-4/1 |
| 13 | Differential housing | 1 | | | |
| 14 | Pin | 1 | | | * |
| 15 | Spacer | 1 | Mark for re- installation | Determine thickness again if necessary | 5.1 - 5/5 * |
| 16 | Magnetic carrier disc | 1 | | Determine thickness again if necessary | 5.1 - 5/5 * |

* Parts only in conjunction with electronic speedometer


DISASSEMBLING AND ASSEMBLING DIFFERENTIAL

Disassembling

1. Drive out differential pinion shaft roll pin.

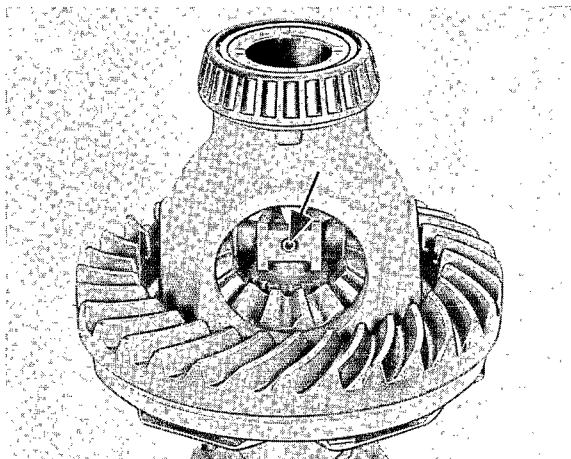

2. Drive out differential pinion shaft with a mandrel and remove anchor piece.
3. Remove tapered roller bearing with a puller and thrust piece P 263.

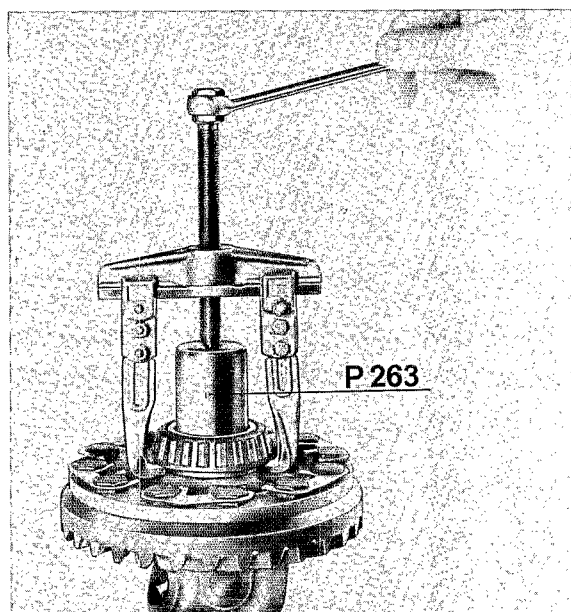

Caution


Do not interchange spacer washers and shims. Attach tags to prevent mixing up right side with left and vice versa.

4. Remove lock plates from ring gear retaining bolts. Remove bolts and take off ring gear.

Assembling

1. Slide lock plates into grooves in bolt heads. Close open ends with pliers to firmly attach the plates to bolt heads. Secure bolts by bending the plates down on one side of the hex surface.
2. Coat thrust surfaces of the differential pinions in the differential housing with Molykote or similar lubricant. Insert large differential pinion (side gears) through oval opening in the housing. Center the pinions by inserting the flange shafts.
3. Insert small differential pinions through the opening in the housing and position them opposite each other so that bores align with the bores in the housing.


4. Insert threaded retainers with lock rings into the large differential pinions (side gears) and slide the anchor piece between the threaded retainers (see illustration).

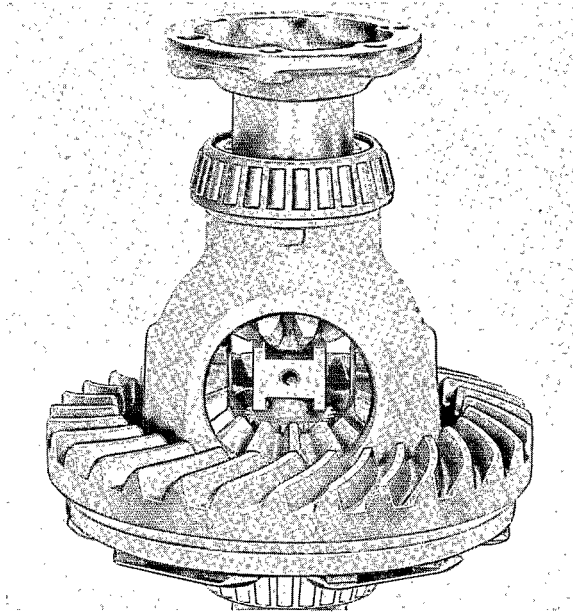

Caution

Position the locating hole of the differential pinion shaft so it aligns with the hole of the anchor piece.

5. Hold the anchor piece in place (so prevent binding) and drive in the differential pinion shaft.


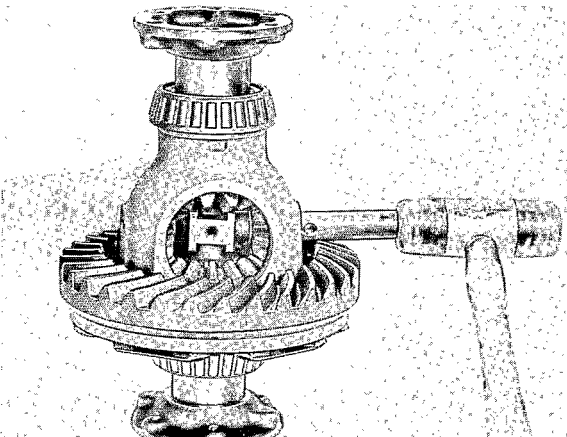


6. Place marked or measured bearing shims and spacer washers on the differential housing. Install tapered roller bearing using thrust piece P 264.
7. Re-adjust ring and pinion gears if necessary. See "Adjusting Ring Gear and Pinion".


Note

With the 1976 Model the tapered roller bearing is pulled off through openings in the magnetic carrier disc with an extractor and special tool P 263.

When replacing the magnetic carrier disc the tapered roller bearing preload does not have to be checked if the same shims are used again.

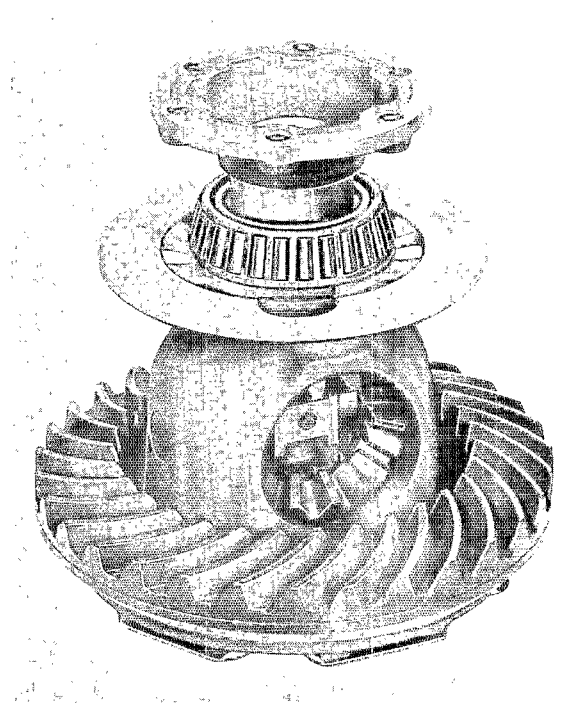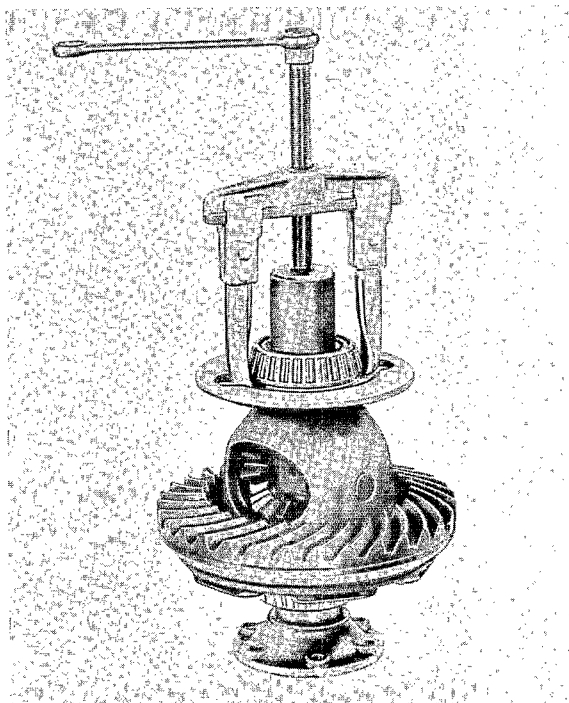

TOOLS

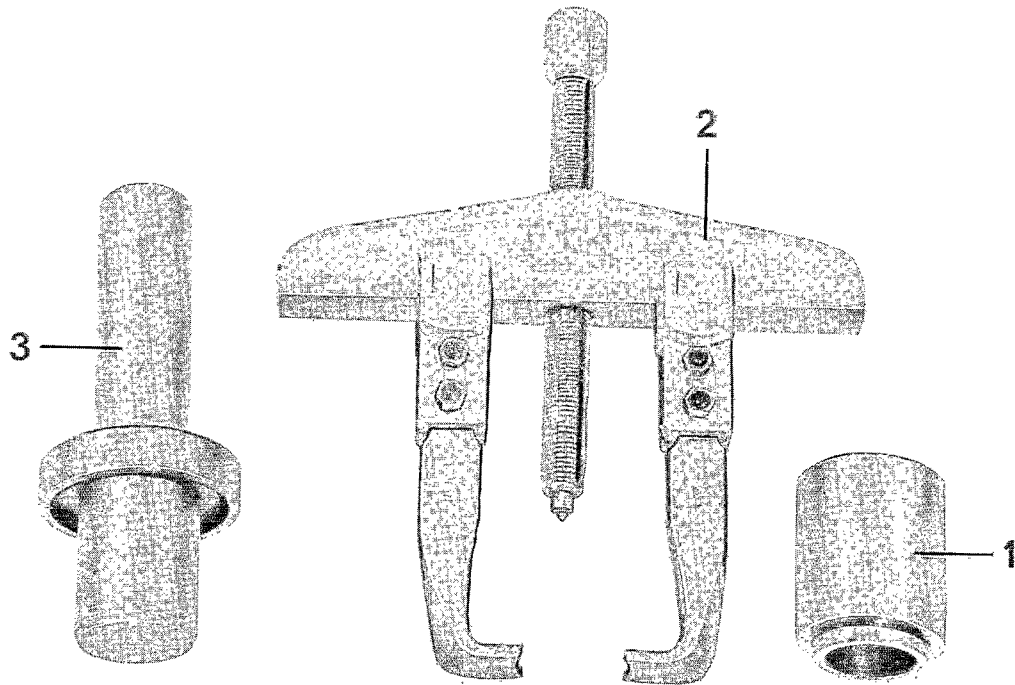


| No. | Description | Special Tool | Remarks |
|-----|--------------|--------------|------------|
| 1 | Pressure pad | P 263 | |
| 2 | Puller | US 1078 | or 40 - 19 |
| 3 | Pressure pad | P 264 b | |

| No. | Description | Qty. | Note When: | | Special Instructions |
|-----|---------------------------------|------|----------------------------------|---|----------------------|
| | | | Removing | Installing | |
| 1 | Roll pin | 1 | | | |
| 2 | Shaft | 1 | | | |
| 3 | Small differential gear | 2 | | Coat with MoS ₂ paste. Replace only in sets (with large differential gears). | |
| 4 | Large differential gear | 2 | | Coat with MoS ₂ paste. Replace only in sets (with small differential gears) | |
| 5 | Threaded retainer | 2 | | | |
| 6 | Taper roller bearing inner race | 2 | Pull off with US 1078 and P 263. | Drive on with P 264 b. | |
| 7 | Magnetic carrier disc | 1 | | | |
| 8 | Washer | X | Mark for reinstallation. | Determine new thickness, if necessary. | |
| 9 | Shim | X | Mark for reinstallation | Determine new thickness, if necessary. | |
| 10 | Key | 1 | | | |
| 11 | Lockplate | 6 | | Replace | |
| 12 | Bolt | 12 | | Threads dry and without grease. Tighten to 115... 120 Nm (83...86 ft lb). | |
| 13 | Ring gear | 1 | | Heat to about 120° C/248° F. Tapped bores for ring gear bolts must be dry and without grease. Watch pair code number. Adjust, if necessary. | |
| 14 | Differential case | 1 | | | |

DISASSEMBLING AND ASSEMBLING INSTRUCTIONS

Disassembling


1. Pull off taper roller bearing inner races with a puller (e. g. US 1078) and Special Tool P 263.

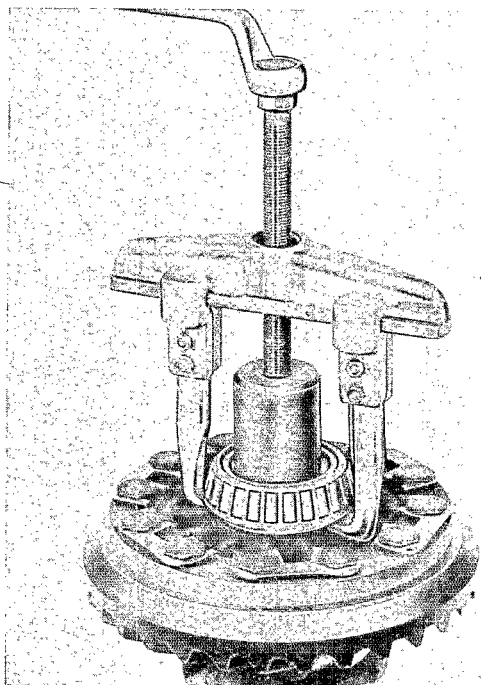

Note


Claws of both arms must be machined, if necessary.

2. Knock ring gear off of case with a suitable mandrel.

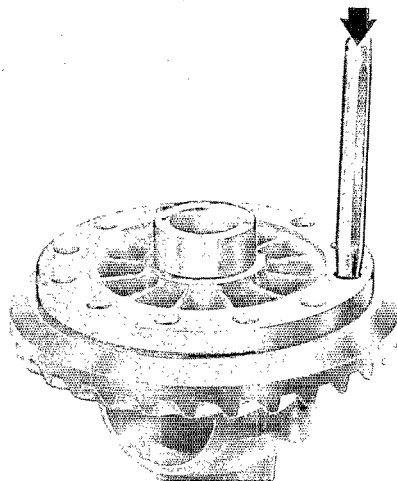

Assembling

1. Heat ring gear to about 120° C/248° F and install. Use locally made centering pins as guides.


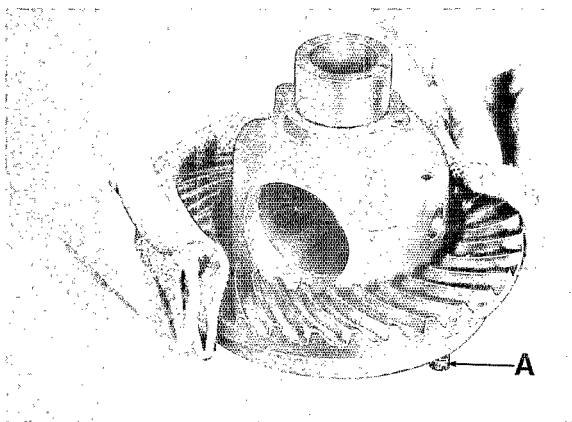


A - Centering pins (made locally)

2. Tighten ring gear bolts to specified torque value. Push lockplate in groove of bolts, squeeze front with pliers (so that lockplate is connected tightly on bolts) and bend down over a hexagon surface to lock.

3. Coat differential gears with MoS_2 paste.

4. Insert large differential gears with press-fit threaded retainers through large opening in differential case and locate with joint flanges.

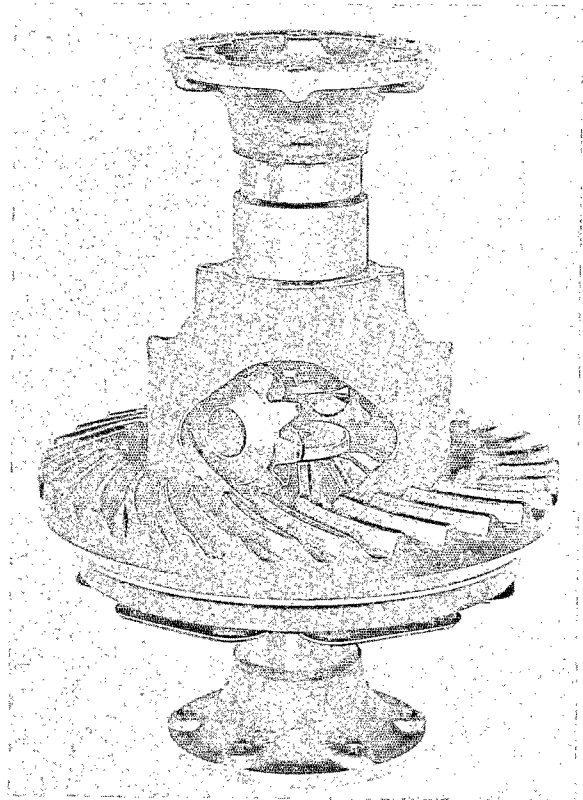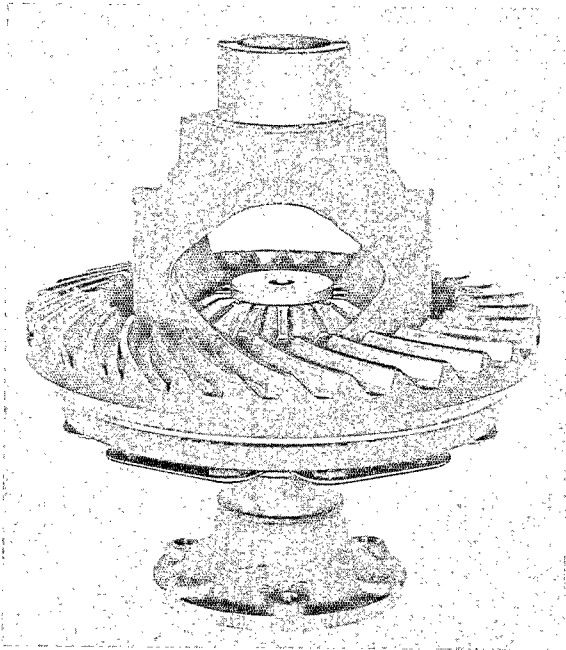

5. Insert small differential gears between large differential gears and turn until bores of gears are aligned with bores in case.

6. Drive in differential shaft in correct position and lock with roll pin.

7. Drive on taper roller bearing inner races with Special Tool P 264.



ADJUSTING RING GEAR AND PINION

General


Adjustment of the ring gear and pinion is important for quiet operation of the rear axle assembly. For this reason the pinion shaft and ring gear is already matched as a pair during production. They are checked on testing machines for correct contact pattern and low noise level in both directions of rotation. When the ring gear and pinion is tested, it is set according to the design dimension "R". Dimension "R" is the distance from the face of the pinion to the ring gear center line. The pinion is then moved in or out of mesh until the quietest operation is determined. The deviation from the design dimension (the in or out movement of the pinion) is called "r" and is etched on the face of the pinion. While making this test, the ring gear backlash is kept within a tolerance of 0.12 - 0.18 mm. The ring gear and pinion shaft is designed in such a way that the deviation "r" must always be added to the design dimension "R".

Earlier pinion assemblies had either a plus (+) or a minus (-) etched in front of the deviation "r" whereas on the newer pinion assemblies, the letter "N" precedes the deviation "r" on the pinion shaft.

Ring gear and pinion shaft sets are also stamped with a matching set number and should always be replaced as a complete set.

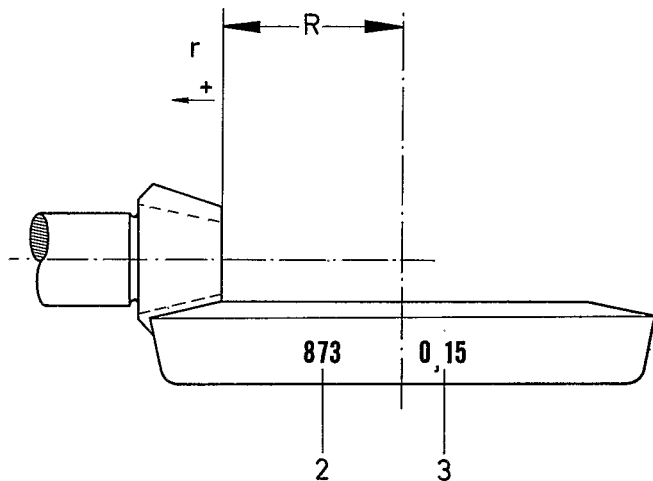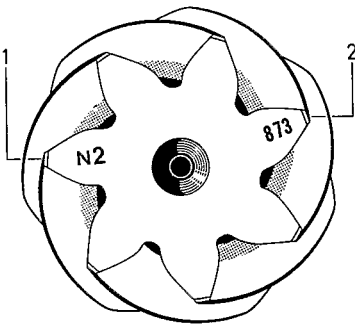


- R - Design Dimension (66.30 mm)
- r - Deviation from design dimension, shown in 1/100 mm
- 1 - Deviation r
- 2 - Matching set number
- 3 - Backlash

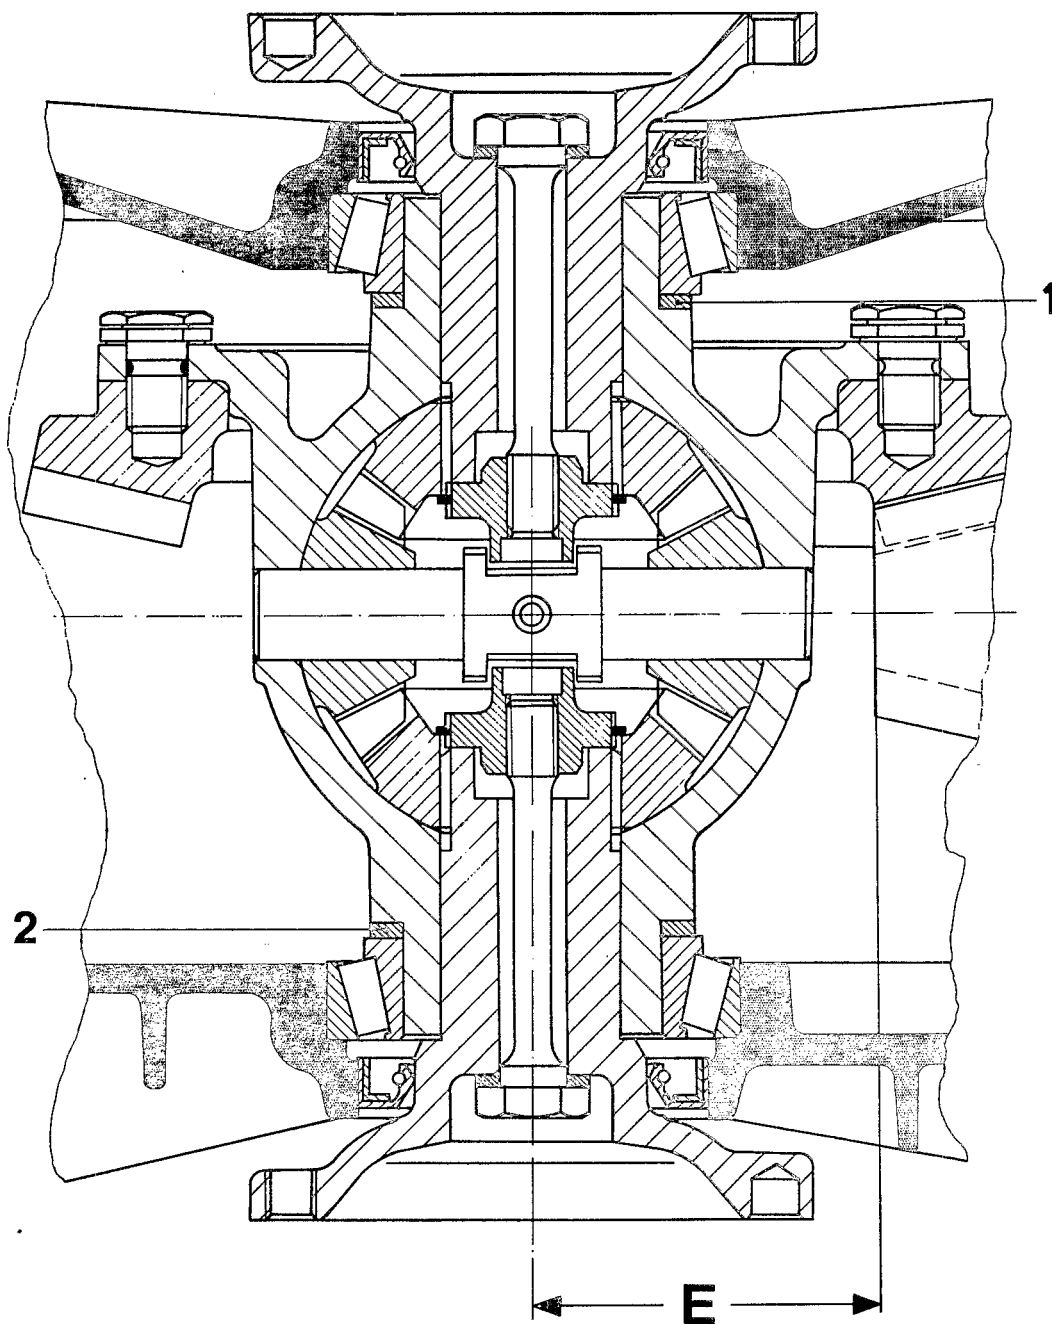

- 1 - Spacer S1
- 2 - Spacer S2
- E - Adjusting value

ADJUSTING RING GEAR AND PINION


TOOLS

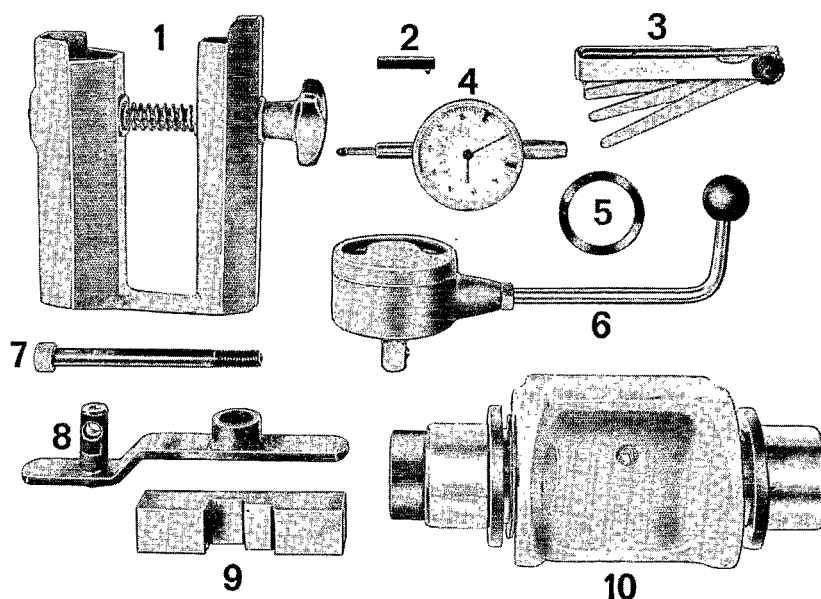

| Nr. | Description | Special Tool | Remarks |
|-----|-----------------------|--------------------|------------------|
| 1 | Holder | P 259a | |
| 2 | Sensor | P 259b | |
| 3 | Feeler gauge | - | 0.05 to 1.0 mm |
| 4 | Dial indicator | - | 0 to 10 mm scale |
| 5 | Washer | - | From P 357 |
| 6 | Torque wrench | US 8020 or similar | 0 to 60 cmkp |
| 7 | Bolt | - | M 10 x 110 |
| 8 | Dial indicator holder | - | From P 259 |
| 9 | Gauge block | P 258c | |
| 10 | Mandrel | P 258 | With bushings |

ADJUSTING PINION SHAFT

By adding the design dimension "R" and the deviation "r" you get the adjusting dimension "E". Dimension "E" is the distance from the ring gear center line to the face of the pinion at which the ring and pinion set has been found to operate best.

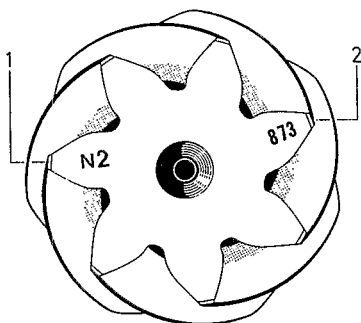

- 1 - Deviation r in 1/100 mm
- 2 - Mating number

Example

The pinion shaft face end shows the deviation "r" to be 0.02 mm.

| | |
|-------------------------|-----------------|
| R (design dimension) | 66.30 mm |
| + r (deviation) | + 0.02 mm |
| E (adjusting dimension) | <u>66.32 mm</u> |


1. After finding the "Adjusting dimension E", attach input and pinion shafts, without shims, to final drive housing with clamping plates.

Caution

Tighten flange nut on input shaft to correct torque before making any measurements.

Install plate P 260a. Assemble 5th speed gears with synchro hub and shifting sleeve. Engage 5th gear. Block input shaft with holder P 37a and torque flange nut to specification.

2. Place mandrel P 258 on gauge block P 258a. Attach dial gauge to mandrel with a 1 mm preload.

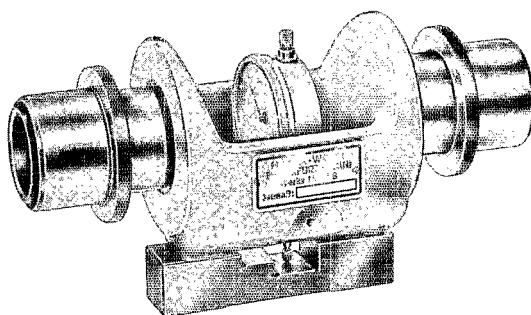

3. Install mandrel P 258, with tapered roller bearings, in the differential housing so that there is an axial preload of approx. 0.1 mm when the side cover is installed. The mandrel should not have axial play during the measurement. Play can be eliminated by using differential shims.

Caution

Make sure the dial indicator sensor does not point into the center bore of the pinion shaft.

4. Rotate the mandrel carefully until the sensor forms a right angle with the face of the pinion. At this point the dial indicator will show the highest reading. A notch on the end of the mandrel shows the position of the dial indicator sensor. Record the reading.

By adding the mandrel and gauge block dimensions the "actual adjusting dimension" is obtained.

Example:

| | |
|--------------------------------|---------------------------|
| Mandrel dimension | 54.015 mm |
| + <u>Gauge block dimension</u> | + <u>12.595 mm</u> |
| Actual adjusting dimension | <u>66.610 mm</u> ===== |

Note the following when reading the dial indicator:

If the pointer reads to the right (clockwise), the distance is smaller than the "actual adjusting dimension" (66.61 mm). Therefore subtract the dial indicator reading from the "actual adjusting dimension" to determine the distance from ring gear center to face of pinion.

The distance from the center line of the mandrel to its resting base is shown on the side of the mandrel.

Example:

| | |
|---|--------------------------|
| Actual adjusting dimension | 66.61 mm |
| - <u>Dial indicator reading</u> | - <u>0.39 mm</u> |
| Distance from ring gear center to face of pinion | <u>66.22 mm</u> ===== |

The distance from the measuring surface of the gauge block to its support surface is indicated on the side of the gauge block.

| | |
|---|-------------------------|
| Adjusting dimension "E" (as in example on P 5.1- 5/2) | 66.32 mm |
| - <u>Distance from ring gear center to face of pinion</u> | - <u>66.22 mm</u> |
| Shim thickness | <u>0.10 mm</u> ===== |

The pinion shaft must therefore be moved away from the ring gear center by 0.10 mm. This can be achieved by inserting a 0.10 mm thick shim. (End numbers from 3 or more should be rounded off to 5, and from 7 or more to 10).

Should the dial indicator read clockwise, the deviation when added to the "actual adjusting dimension" (mandrel dim. + gauge block dim.) should not exceed 0.03 mm.

Shims are available in the following thicknesses: 0.10, 0.15 and 0.20 mm. Total thickness of shims must not exceed 0.50 mm.

Adjusting dimension E should be rechecked after shims have been installed. A deviation of ± 0.03 mm is permissible. It is not necessary to check the gear tooth contact pattern.

DETERMINING TOTAL SPACER THICKNESS FOR RING GEAR ADJUSTMENT

1. Make sure that side bearing outer races are fully seated in the housing and side cover.
2. Install a 3.5 mm spacer (S_1) on the ring gear side beneath the side bearing. Install a 3.0 mm spacer (S_2) on the opposite side beneath the other bearing.
3. Install differential with side bearings in housing and install side cover without O-ring and without oil seal. Do not tighten.
4. Lightly tighten the side cover using two nuts opposite each other. This preloads the side bearings. Check the gap between the cover and housing with a feeler gauge. The nominal value for the side bearing preload is 0.30 to 0.40 mm.
5. If the nominal value of 0.30 to 0.40 mm is not reached, replace the (S_1) spacer (ring gear side) with an appropriate spacer.


Example:

| | |
|--|---------|
| Feeler gauge measurement | 0.65 mm |
| - Nominal value for side bearing preload | 0.40 mm |
| | <hr/> |
| | 0.25 mm |

The installed spacer S_1 (3.5 mm) must therefore be replaced with one 0.25 mm thinner, that is, it should be 3.25 mm thick.

6. Tighten side cover to correct torque.

7. Place washer from special tool P 357 on the U-axle flange. Install the axle flange. Slightly tighten the expansion bolt.

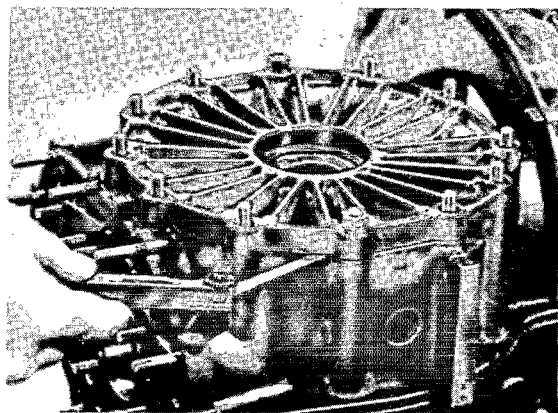


CAUTION

When measuring differential drag, the pinion shaft must be disengaged and the axle flange oil seal must be removed from the side cover to prevent additional drag.

8. Measure drag of the assembled differential with a torque wrench. The following values must be obtained to ensure proper side bearing preload.

SKF bearings = 300 to 420 Ncm
(26 - 37 in. lb)

FAG bearings = 350 to 650 Ncm
(30 - 56 in. lb)

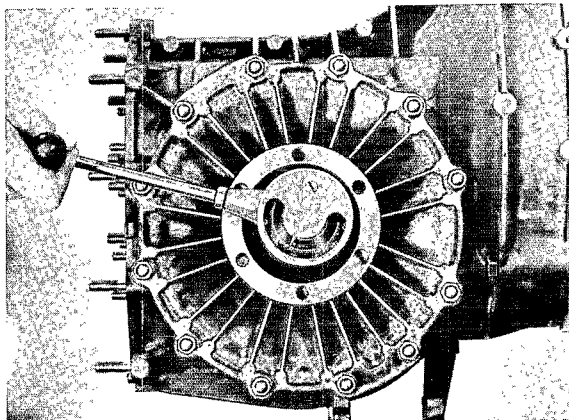

If the differential drag is not within tolerance, replace the spacer washer.

9. Remove differential. Then pull off both side bearings.

CAUTION

Do not interchange spacer washers after removal.

10. Measure the thickness of both spacers with a micrometer. Add these measurements to obtain the total thickness of the spacers for ring gear adjustment.

Note

In order to check backlash correctly (a subsequent procedure), the spacer S_1 should be 0.1 mm (0.004 in.) thinner than one half of the sum of spacers S_1 and S_2 . The spacer S_2 should be 0.1 mm (0.004 in.) thicker than one half of the sum of spacers S_1 and S_2 .

Example:

Total thickness of spacers ($S_1 + S_2$) ... 6.25 mm

$$\frac{6.25 \text{ mm}}{2} = 3.125 \text{ mm}$$

$$\text{Thickness of spacer } S_1 = \frac{3.125 \text{ mm}}{0.10 \text{ mm}} = 3.025 \text{ mm}$$

$$\frac{6.25 \text{ mm}}{2} = 3.125 \text{ mm}$$

$$\text{Thickness of spacer } S_2 = \frac{3.125 \text{ mm}}{0.10 \text{ mm}} = 3.225 \text{ mm}$$

Spacers are available in increments of 0.10 mm from 2.4 to 3.7 mm.

A shim, 0.25 mm thick, permits adjustments to the nearest 0.05 mm. The rounded off spacer thickness should not differ from the calculated spacer thickness.

Example:

Calculated spacer thickness

$$S1 + S2 = 3.025 + 3.225 = 6.25 \text{ mm}$$

Rounded off spacer thickness

$$S1 + S2 = 3.0 + 3.25 = 6.25 \text{ mm}$$

Before measuring, remove any burr that may be on the edges of the spacer. Measure the thickness of the two spacers with a micrometer at four different points; the thickness tolerance is 0.02 mm (0.008 in.).

ADJUSTING RING GEAR BACKLASH


1. Install gear cluster with shims determined at time of pinion shaft adjustment.
4. Block pinion shaft with holder P 259a.

Caution

Make sure pinion shaft flange nut is tightened to correct torque before making any adjustments.

5. Place washer from special tool P 357 onto the axle flange. Attach dial indicator with sensor P 259b. Bolt dial indicator holder over the axle flange with the 10 x 110 mm bolt. The dial indicator should have a slight preload.

2. Install differential with side bearings and correct shims (S1 and S2).

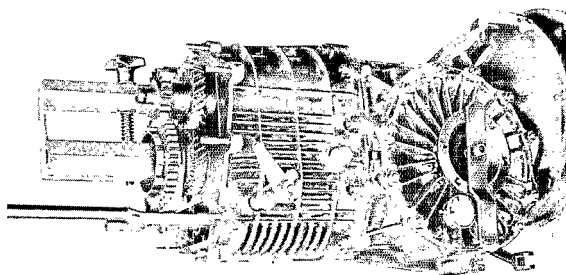


3. Install side cover with oil seal. Apply light coat of oil to seal.

Caution

When tightening the nuts, take care that a certain amount of side clearance exists. Make sure the pinion shaft does not jam.

Tighten side cover bolts to correct torque.

6. Move dial indicator holder back and forth.
Read backlash on dial indicator.

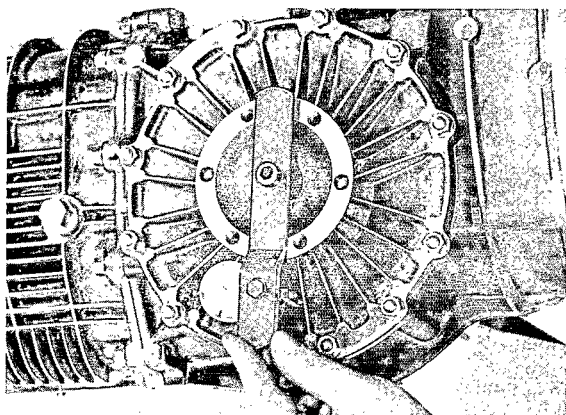

8. Spacers S1 and S2 can be replaced with special tools P 263 and P 264b until proper backlash is attained. Be sure that the total spacer thickness is not changed.


7. Turn ring gear about 90° and measure backlash again. The readings must not vary by more than 0.05 mm.

Caution

The accurate backlash is marked on the ring gear.

Backlash tolerance: 0.12 to 0.18 mm.


TOOLS

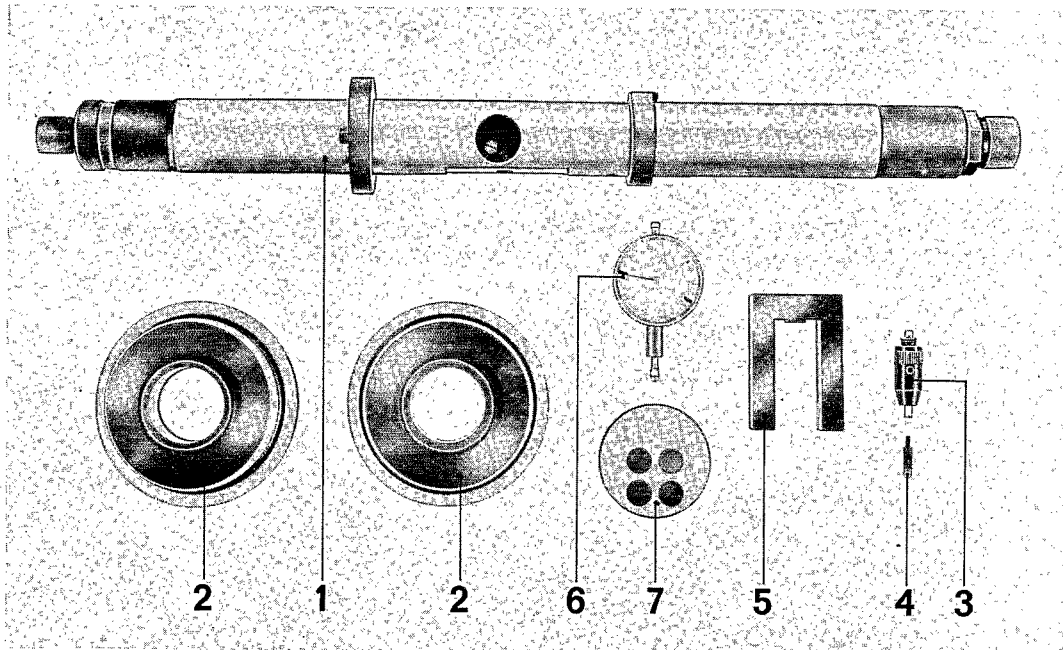

| Nr. | Designation | Special Tool Nr. | Remarks |
|-----|------------------------|------------------|------------------------|
| 1 | Setting gage shaft | VW 385/1 | |
| 2 | Gage block | VW 385/4 | |
| 3 | Gage contact plunger | VW 385/14 | |
| 4 | Gage contact extension | VW 385/53 | 14 mm |
| 5 | Master plate | VW 385/52 | $R = 66.30 \text{ mm}$ |
| 6 | Dial indicator | --- | 3 mm range |
| 7 | Setting pad | VW 385/17 | 50 mm \varnothing |

ADJUSTING PINION SHAFT WITH UNIVERSAL SETTING GAGE VW-385

Determine adjustment value E from known design value $R = 66.30$ mm by adding deviation "r" which is shown on pinion face.

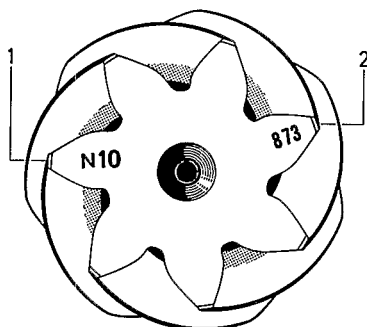

- 1 - Deviation "r" in 1/100 mm
2 - Mating number

Example:

The pinion face shows deviation "r" to be N 10

| | | |
|----------------------|---|----------|
| R = Design value | | 66.30 mm |
| r = Deviation | + | 0.10 mm |
| E = Adjustment value | = | 66.40 mm |


NOTE:

The collar nut on the pinion shaft must definitely be tightened to specified torque prior to measuring.

Fasten gear housing with 2 nuts. Install free gear of 5th speed together with spider. Block pinion shaft with clamp P 37a. Engage 4th speed and tighten collar nut to specified torque.

2. Make sure that outer races of bevel roller bearings are firmly seated in gear housing and housing side cover.

3. Move adjustable collar on setting gage VW 385/1 to dimension "a".




1. Assemble gear cluster without selector forks or adjustment shims.
Tighten preload plate nuts to specified torque.

$$a = \text{ca. } 52 \text{ mm}$$

4. Slide gage blocks VW 385/4 onto the setting gage shaft and screw contact plunger VW 385/14, together with the contact extension VW 385/53 (14 mm), into place.


NOTE: Turn adjustable collar back to stop.

5. Place master plate VW 385/52 ($R = 66.30 \text{ mm}$) in position and adjust dial indicator (3 mm range) to 0 under a 1 mm preload (small pointer on 1, long pointer on 0).

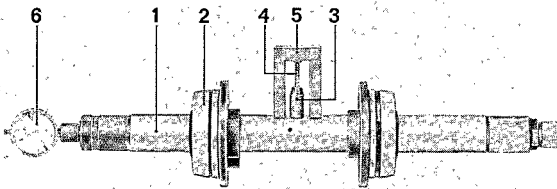


- | | | | |
|---|---|-----------|------------------------|
| 1 | = | VW 385/1 | Setting gage shaft |
| 2 | = | VW 385/4 | Gage block |
| 3 | = | VW 385/14 | Gage contact plunger |
| 4 | = | VW 385/53 | Gage contact extension |
| 5 | = | VW 385/52 | Master plate |
| 6 | = | --- | Dial indicator |

6. Place setting pad VW 385/17 on the pinion face.

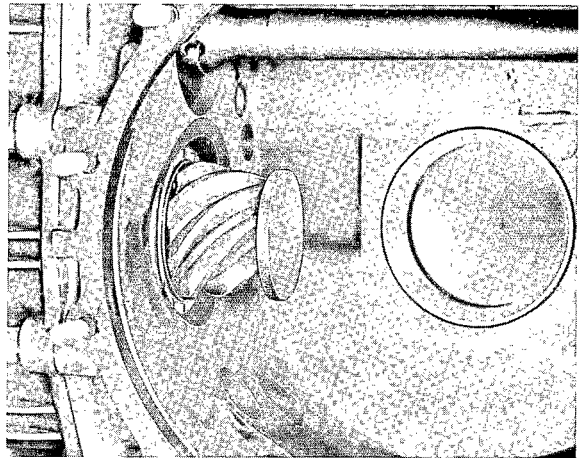

7. Remove master plate and place setting gage in gear housing, making sure that the dial indicator extension is oriented towards the setting pad.

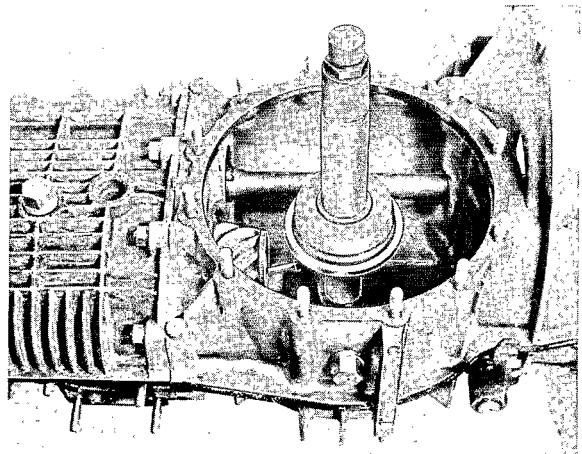


8. Insert housing side cover (without O-ring) and tighten nuts to specified torque.

Caution:

Never use a hammer when installing the housing side cover. This may cause the magnetically attached setting pad to fall off the pinion. Bring side cover into proper place only by evenly tightening the retaining nuts.

9. Using the spindle, pull the second gage block so far outwards that the setting gage shaft can still be barely turned.

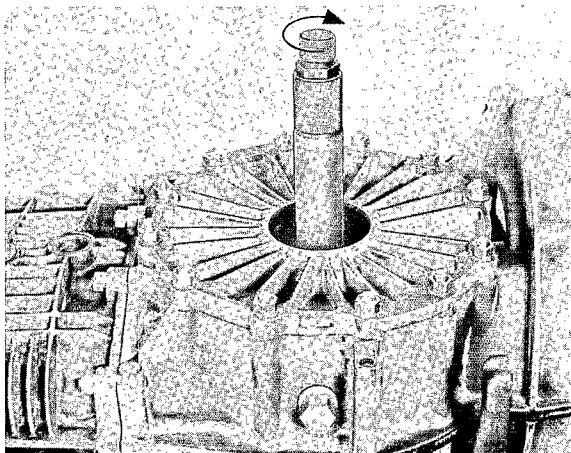

10. Carefully turn setting gage until the gage contact extension is positioned perpendicular to the pinion shaft face. In this instance, the indicator shows the highest reading which is to be noted.

Note the following points when reading the dial indicator:

The design value $R = 66.30$ mm was set by means of the master plate VW 385/52.

If the value indicated on the gage deviates clockwise from the set design value ($R = 66.30$ mm), then the dimension is smaller than 66.30 mm, that is, the amount of deviation from 0 must be subtracted from the value of 66.30 mm.

Example:

The small pointer on the indicator is between 1 and 2, and the long pointer shows 0.29 mm.

| | |
|---|------------------|
| Adjusted design value (master plate VW 385/52) | 66.30 mm |
| minus measured value | <u>- 0.29 mm</u> |
| Distance to pinion shaft face | = 66.01 mm |

| | |
|-------------------------------|-----------------|
| Adjustment value (as example) | 66.40 mm |
| Distance to pinion shaft face | <u>66.01 mm</u> |
| Shim thickness | = 0.39 mm |

This means that the pinion shaft must be moved away from the ring gear center by 0.39 mm. This is accomplished by installing two 0.20 mm thick shims (end values of 3 or more should be rounded off to 5, and from 7 on to 10).

Recheck adjustment value E (shown as 66.40 mm in the example) upon installation of shims; a deviation of ± 0.03 mm is permissible. A tooth contact pattern test need not be performed.

NOTE:

If the shims were selected in proper thickness, the dial indicator must show the value of deviation "r" (shown in the example as 0.10 mm) within a tolerance of ± 0.03 mm during the recheck.



ADJUSTING RING GEAR AND PINION

General

Adjustment of the ring gear and pinion is important for quiet operation of the rear axle assembly. For this reason the pinion shaft and ring is already matched as a pair during production. They are checked on testing machines for correct contact pattern and low noise level in both directions of rotation. When the ring gear and pinion is tested it is set according to the design dimension "R". Dimension "R" is the distance from the face of the pinion to the ring gear center line. The pinion is then moved in or out of mesh until the quietest operation is determined. The deviation from the design dimension (the in or out movement of the pinion) is called "r" and is etched on the face of the pinion. While making this test, the ring gear backlash is kept within a tolerance of 0.12 - 0.18 mm. The ring gear and pinion shaft is designed in such a way that the deviation "r" must always be added to the design dimension "R".

Earlier pinion assemblies had either a plus (+) or a minus (-) etched in front of the deviation "r" where as on the newer pinion assemblies , the letter "N" precedes the deviation "r" on the pinion shaft.

Ring gear and pinion sets are also stamped with a matching number and should always be replaced as a complete set.

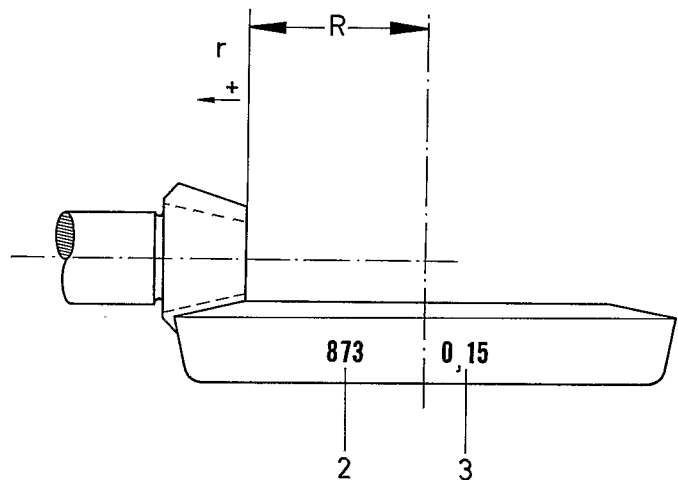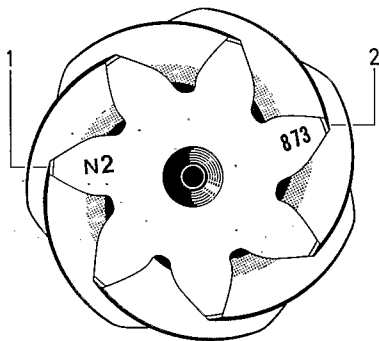

- R Design dimension (59.70 mm for Sportomatic transmissions 925/00 and 925/01).
- r Deviation from R indicated in 1/100 mm.
- 1 Deviation r
- 2 Matching set number
- 3 Backlash


ADJUSTING RING GEAR AND PINION

- 1. The design dimension "R" and the basic approximation value have been changed in the 925/00 and 925/01 transmission versions.

Design dimension "R" 59.70 mm
(formerly 54.20 mm)


Basic distance 60.70 mm
(approximation value)
(formerly 55.70 mm)

- 2. When determining the "Actual Adjusting Dimension", the gauge block P 258c must be used.
Adjustment is made in the same way as for manual units. See Type 911 workshop manual, volume I, 11 RA, page 46.

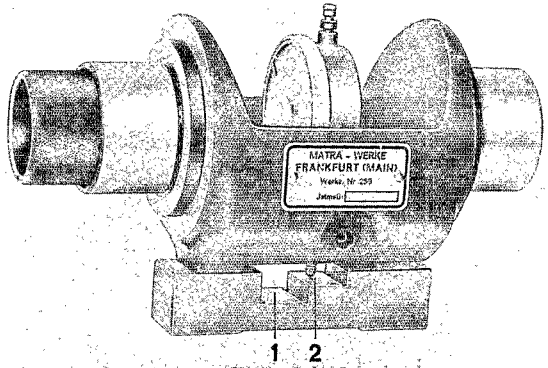


- 1 - Calibration surface for Type 915 transmission
- 2 - Calibration surface for Type 925 transmission

- 3. The holder P 357a is needed for blocking the pinion shaft when measuring gear backlash.

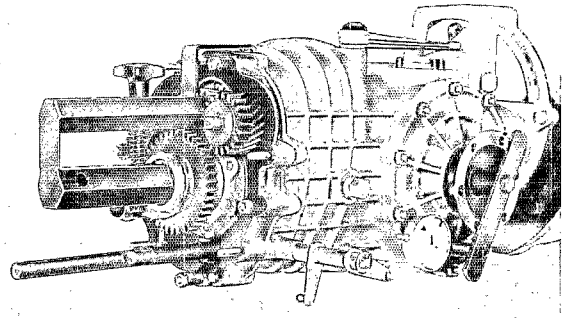

- 4. When measuring backlash, be sure to use the modified dial indicator holder (must have a second 6.5 mm hole - see illustration).

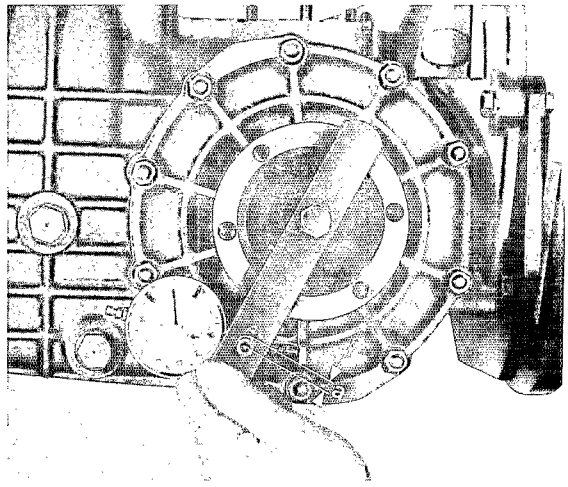

Note

$a = 10 \text{ mm}$

When using gauge block P 258c, make sure to use the appropriate calibration surface.

Vorderachse
Front Axle
Essieu AV
Assale anteriore

4

4

4

4

4

4

4

4

4

4

CONTENTS

0 - INFORMATION, DESCRIPTION, TECHNICAL DATA

0.0 Information

0.1 Description

| | |
|---|-----------|
| Front Axle Changes, from 1972 Model | 0.1 - 1/1 |
| Self-Leveling Hydropneumatic Suspension Strut, Operation - General Outline | 0.1 - 2/1 |
| Operation of the Self-Leveling Hydropneumatic KONI Suspension Struts | 0.1 - 2/2 |
| Cross-Section of Self-Leveling Hydropneumatic KONI Suspension Struts | 0.1 - 2/5 |

0.2 Technical Data

| | |
|-----------------------------|-----------|
| Technical Data | 0.2 - 1/1 |
| Technical Data, 1974 models | 0.2 - 1/3 |
| Technical Data, 1975 models | 0.2 - 1/5 |
| Tightening Torque Values | 0.2 - 2/1 |

1 - FRONT WHEEL ALIGNMENT

1.1 Alignment

| | |
|-----------------------------|-----------|
| General | 1.1 - 1/1 |
| Sample Wheel Alignment Card | 1.1 - 1/1 |

2 - FRONT AXLE

2.1 Front Axle with Shockabsorbers or Suspension Struts

| | |
|--|-----------|
| Disassembling and reassembling | 2.1 - 1/1 |
| Self-Leveling Hydropneumatic Suspension Struts, check | 2.1 - 2/1 |
| Aluminium Auxiliary Support, Carrera 2.7 | 2.1 - 3/1 |
| Disassembly and Reassembly of Stabilizer 1974 Models | 2.1 - 4/1 |
| Instructions for Removal and Installation | 2.1 - 4/4 |
| Shock Absorber/Spring Struts, USA Models Installation Instructions | 2.1 - 5/1 |

4 - STEERING WHEEL AND STEERING COLUMN

4.1 Steering Wheel

4.2 Steering Shaft

| | |
|---|-----------|
| Steering Shaft, disassemble and reassemble, beginning with 1974-models | 4.2 - 1/1 |
| Instructions for Disassembly and Reassembly | 4.2 - 1/6 |

FRONT AXLE CHANGES - BEGINNING WITH 1972 MODELS

1. BOGE shockabsorber struts are installed in front axles of all vehicles.
Available on special order are BILSTEIN or KONI shockabsorber struts, and BOGE or KONI suspension struts.

2. The basic adjustment of suspension struts has been changed.
To attain the highest degree of driving comfort, damping forces have been reduced. This softer adjustment can also be used in earlier models. In such cases make sure that struts of same setting are used on both left and right side:

Two complete shockabsorber struts, or one complete shockabsorber strut and one strut insert, or two strut inserts.

3. The ball joint mount in shockabsorber strut has been changed.
The ball joint assembly is now attached by a double-wedge arrangement. The former clamp-mount in the shockabsorber strut is no longer in use.

4. Type 911 S vehicles have 15 mm dia. stabilizers in front and rear as standard equipment.

DESCRIPTION OF THE SELF - LEVELING HYDROPNEUMATIC SUSPENSION SYSTEM

General

Beginning with 1972 models, self-leveling hydropneumatic front suspension struts are optional equipment for all Type 911 vehicles.

Operation - General Outline

As soon as the car begins to move, wheel oscillations caused by road bumps result in a pumping action in the strut, raising the car's height to a predetermined level.

The struts will bring the car to a normal level after covering a distance of anywhere between 300 and 1500 yards, depending on the road irregularities encountered. When the car is driven on particularly rough roads, the struts will pump the car, up to 10 mm more than the predetermined height. The height remains constant overnight providing that the load is not increased after the car has been parked. Upon removal of any load from the car, the suspension will first rebound, as in conventional systems, but will quickly proceed to adjust itself to the predetermined height where it then will remain.

Should the suspension be loaded beyond the permissible maximum, the pumping effect will automatically be relieved and height compensation stopped to prevent any overstressing of the system. Consequently, an overload condition can be readily noticed by the reduced ground clearance, similar to cars with conventional suspensions.

The suspension strut is filled with oil with the exception of two gas cushions. One of the gas cushions is located in the high-pressure part, between the damping cylinder and outer cover. The gas (nitrogen) is separated from the oil by a diaphragm. The second gas cushion is located in the low-pressure part above the damping cylinder, within the oil reservoir, and is not separated from the oil.

The pressure of the gas cushions is such that the force it exerts on the piston is equal to 90 percent of the empty weight of the vehicle.

A piston divides the damping cylinder. The space below the piston is in contact with the high-pressure part, and the space above the piston with the oil reservoir. A pressure valve is located on the piston.

The hollow piston rod accommodates the pump cylinder whose upper section is limited by a suction valve with a return flow orifice.

The pump rod is in the damper housing which is supported by the housing base. It also contains a needle valve which is suspended in the pump rod with the aid of a spring.

Pump Action Under Load

Irregularities in the road surface cause the piston rod to move in relation to the pump rod. Through this motion, the pump rod displaces a certain amount of oil from the pump cylinder, through the pressure valve, into the space below the piston.

During the suction stroke, a certain amount of oil is sucked from the space above the piston through the suction valve.

Due to the reduced oil supply above the piston, gas expands in the oil reservoir thus causing a pressure drop. At the same time, gas is compressed in the high-pressure chamber. The force under the piston is increased and the vehicle rises. This cycle repeats until the pump rod guide clears several orifices in the pump rod. On the subsequent suction stroke, oil also flows from the high-pressure chamber through the orifices into the oil reservoir. The pump also is neutralized, and the vehicle is no longer raised.

A balance is thus achieved since at higher vehicle level a return flow orifice is cleared by the needle valve permitting a small amount of oil to flow back to the oil reservoir.

In the balanced condition, the amount of oil pumped up equals the amount flowing back through the return flow orifice. The vehicle is at its predetermined level.

Action on Rebound

When the load is decreased, the car will rise briefly. As a result, the needle valve will open the return flow orifices until enough oil has returned to reestablish the normal oil level.

When the piston moves, the oil below the piston flows through the damper housing, creating a damping action. The oil velocity is kept within specified limits, thus limiting piston speed.

The required damping and springing characteristics are achieved through exact calibration of passages and valves, same as in conventional hydraulic shock absorbers.

In addition, the pumping action results in supplemental damping which increases in proportion to the load. In other words, the damping effect is load-sensitive.

Springing Action


Pressure in the oil reservoir acts on the top surface of the piston and exerts a small downward force on the piston. Pressure in the high-pressure chamber exerts a large upward force on the bottom surface of the piston. The load capacity of the suspension element can be obtained from the difference between these two forces.

Suspension compression results in increased pressure below the piston and a pressure drop above it. The spring rate of both gas cushions is cumulative. When the load increases, the displacement increases in the oil reservoir and decreases in the high-pressure chamber.

During this action the spring rate of both gas cushions changes in such a way that the piston rod related spring rate adjusts itself to the new load. Thus the spring rate of the suspension strut adjusts itself to the given load, maintains constant vehicle height, and has an optimal damping effect.

Compared with the conventional suspensions incorporating steel springs and dampers, this system offers improved comfort characteristics.

Cross-Section of Self-Leveling Hydropneumatic KONI Suspension Strut

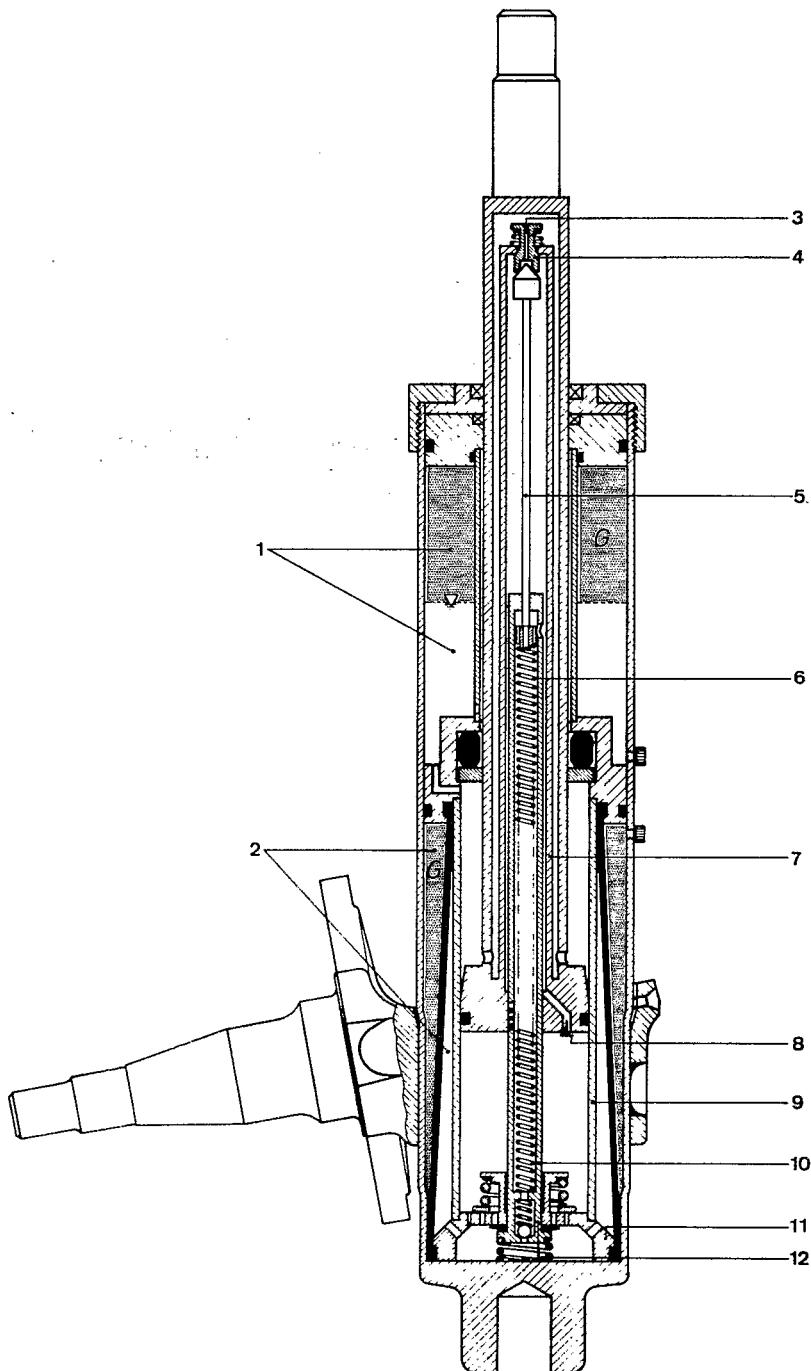

1. Low pressure chamber
2. High pressure chamber
3. Return flow orifice
4. Suction valve
5. Needle valve
6. Spring

7. Pump cylinder
8. Pressure valve
9. Main cylinder
10. Pump rod
11. Damper housing
12. Overload valve

G - Gas cushions

GENERAL SPECIFICATIONS

TYPE 911 VEHICLES - BEGINNING WITH 1972 MODELS

| | |
|---|--|
| Wheel suspension | independent, with shockabsorber struts and transverse control arms |
| Springing | 1 round longitudinal torsion bar per wheel (hydropneumatic suspension struts optional) |
| Shockabsorbers | double-action hydraulic shockabsorber struts |
| Stabilizer | 15 mm dia, standard in Type 911 S only (optional in Type 911 T and 911 E) |
| Wheelbase | 2271 mm (89.4 in.) |
| Track, front (wheel center 108 mm above torsion bar center) | 911 T = 1360 mm / 53.54 in. (5 1/2 J x 15 rim) 911 E & 911 S = 1372 mm / 54.02 in. (6 Jx15 rim) |
| Max. axle load, front | 600 kp (1320 lbs.) |
| Mean steering ratio | 17.78 : 1 |
| Steering wheel turns, lock-to-lock | approx. 3.1 |
| Smallest turning circle | approx. 10.7 m (35.1 ft.) |
| Nominal Adjustment Values and Wear Tolerance (at DIN curb weight) | |
| Toe angle, overall (pressed 15 kp) | $\pm 0'$ |
| Camber, front | $0^{\circ} \pm 10'$ |
| Max. camber difference, left to right | $10'$ |
| Caster | $6^{\circ} 5' \pm 15'$ |
| Steering difference angle, front wheels turned 20° | 0° to $30'$ |
| Front axle height adjustment (wheel center above torsion bar center) | $108 \text{ mm} \pm 5 \text{ mm}$ ($4.25 \pm 0.20 \text{ in.}$) |
| Height difference, left to right | max. 5 mm (0.20 in.) |
| Steering drag (measured at steering assembly flange without tie rods or damper connected) | 8 - 14 cmkp (6 - 12 in. lbs.) |

TECHNICAL DATA - 1974 Models

| Vehicle Type | 911 | 911 S | Carrera |
|---|--|-------------------------|-----------------------------------|
| Wheel suspension | independent, with shock absorber struts and transverse control arms | | |
| Springing | 1 round longitudinal torsion bar per wheel (hydropneumatic suspension struts optional) | | |
| Shock absorbers | double-action hydraulic shock absorbers struts | | |
| Stabilizer, diameter front/rear | 16 mm/--- | 16 mm/--- | 20 mm/18 mm |
| Torsion bar dia. | 18.8 mm | same as 911 | same as 911 |
| Wheelbase | 2271 mm | 2271 mm | 2271 mm |
| Track, front (wheel center 108 mm above torsion bar center) | 1360 mm (5 1/2 Jx15 rim) | 1372 mm (6 Jx15 rim) | 1372 mm (6 Jx15 rim) |
| Max. axle load, front | 600 kg | same as 911 | same as 911 |
| Mean steering ratio (steering wheel angle to road wheel angle) | 17.78 : 1 | same as 911 | same as 911 |
| Steering wheel turns, lock-to-lock | approx. 3.1 | same as 911 | same as 911 |
| Nominal Adjustment Values and Wear Tolerances (at DIN curb weight) | | | |
| Overall toe-in, front (pressed 15 kg) | $\pm 0'$ | same as 911 | same as 911 |
| front wheel camber | $0^{\circ} \pm 10'$ | same as 911 | same as 911 |
| Max. camber difference, left to right | $10'$ | same as 911 | same as 911 |
| Caster | $6^{\circ} 5' \pm 15'$ | same as 911 | same as 911 |
| Steering difference angle, front wheels turned 20° | 0° to $30'$ | same as 911 | same as 911 |
| Front axle height adjustment (wheel center above torsion bar center) | $108 \text{ mm} \pm 5 \text{ mm}$ | same as 911 | $113 \text{ mm} \pm 5 \text{ mm}$ |
| Height difference, left to right | max. 5 mm | same as 911 | same as 911 |
| Steering drag (measured at the steering assembly flange with tie rods disconnected) | 8 - 14 cmkp | same as 911 | same as 911 |

TECHNICAL DATA - 1975 Models

| Model | 911 S | Carrera |
|---|--|---------------|
| Wheel suspension | Independent with transverse control arms and shock absorber struts | |
| Springing | One round longitudinal torsion bar per wheel | |
| Shock absorbers | Double action hydraulic shock absorber struts | |
| Stabilizer dia. front/rear | 20 mm/18 mm | same as 911 S |
| Torsion bar dia. | 18.8 mm | same as 911 S |
| Wheelbase | 2271 mm | same as 911 S |
| Track width, front | 1372 mm with 6 J x 15 wheel | same as 911 S |
| Front axle height adjustment: center of wheel above center of torsion bar (at curb weight according to DIN) | 93 [±] 5 mm | same as 911 S |
| Max. axle load, front | 600 kg (1323 lb) | same as 911 S |
| Steering ratio (overall) | 17.78 : 1 | same as 911 S |
| No. of steering wheel turns from lock to lock | approx. 3.1 | same as 911 S |
| Adjusting, reference and wear specifications (at curb weight according to DIN) | | |
| Total toe, front (wheels pressed together with 15 kg) | ± 0' | same as 911 S |
| Camber, front | + 30' ± 10' | same as 911 S |
| Max. camber difference between left and right | 10' | same as 911 S |
| Caster | 6° 5' ± 15' | same as 911 S |
| Toe difference angle at 20° lock | 0° to 30' | same as 911 S |
| Height difference between left and right | max. 5 mm | same as 911 S |
| Steering drag (measured at steering gear flange with tie rods disconnected) | 8 to 14 cmkp | same as 911 S |

TECHNICAL DATA - from 1976 Model

| | 1976/77 Models 911 S | From 1978 911 SC |
|---|---|---|
| Wheel suspension | Independent wheel suspension on control arms and spring/absorber struts | |
| Springing | One round torsion bar per wheel in forward direction | |
| Shock absorbers | Double-action hydraulic shock absorbers | |
| Stabilizer dia. front/rear | 16 mm/--- | 20/18 mm |
| Torsion bar dia. | 18.8 mm | 18.8 mm |
| Track width, front | 1361 mm with rim 6 J x 15 | 1361 mm with rim 6 J x 15 |
| Wheelbase | 2272 mm | 2272 mm |
| Front axle height (wheel center over torsion bar center) (at DIN curb weight) | 99 \pm 5 mm | 99 \pm 5 mm |
| Height difference, left to right | max. 5 mm | max. 5 mm |
| Max. axle load, front | 600 kg | model 1978/79: 600 kg/1323 lb model 1980/81: 650 kg/1433 lb |
| Steering ratio at center (steering wheel lock to lock) | 17.78 : 1 | 17.78 : 1 |
| No. of steering wheel turns from lock to lock | approx. 3.1 | approx. 3.0 |
| Adjusting, reference and wear limit values (at DIN curb weight) | | |
| Total toe, front (wheels pressed together with 15 kg/150 N) | 0° | 0° |
| Toe difference angle at 20° steering lock | 0° to + 30' | 0° to + 30' |
| Camber of front wheels | + 30' \pm 10' | + 30' \pm 10' |
| Max. camber difference, left to right | 10' | 10' |
| Caster | 6° 5' \pm 15' | 6° 5' \pm 15' |
| Steering drag (measured on flange of steering gear with tie rod disconnected) | 0.8 to 1.4 Nm (8 to 14 cmkg) | 0.8 to 1.4 Nm (8 to 14 cmkg) |


TIGHTENING TORQUES FOR FRONT AXLE AND STEERING

| Location | Description | Thread | Grade | mkp | ft. lbs. |
|---|-------------|------------|-------|--------|-------------|
| Shockabsorber strut to upper mounting plate | Nut | M 14 x 1.5 | 8 | 8 | 57.9 |
| Tie rod clamping sleeve | Nut | M 8 | 8.8 | 1.5 | 10.8 |
| Strut upper mounting plate to body | Allen bolt | M 10 | 8.8 | 4.7 | 34.0 |
| Auxiliary support to body | Bolt | M 12 x 1.5 | 8.8 | 9 | 65.1 |
| Undershield fastener | Bolt | M 10 | 8.8 | 4.7 | 34.0 |
| Undershield fastener | Bolt | M 8 | 8.8 | 2.5 | 18.1 |
| Flanbloc attachment | Bolt | M 10 | 8.8 | 4.7 | 34.0 |
| Auxiliary support attachment | Bolt | M 10 | 8.8 | 4.7 | 34.0 |
| Steering unit attachment | Bolt | M 10 | 8.8 | 4.7 | 34.0 |
| Tie rod to steering unit | Bolt | M 10 | 8.8 | 4.7 | 34.0 |
| Stabilizer mount to body | Bolt | M 8 | 8.8 | 2.5 | 18.1 |
| Stabilizer lever to stabilizer | Bolt | M 8 | 8.8 | 2.5 | 18.1 |
| Wheelbearing clamping nut to axle | Allen bolt | M 7 | 10 K | 1.5 | 10.0 |
| Ball joint to shockabsorber strut | Nut | M 8 | 8 | 2.2 | 15.9 |
| Ball joint to shockabsorber strut | Bolt | M10x30 | 10.9 | 4.5 | 32.5 |
| Ball joint to transverse arm | Notched nut | M 45 x 1.5 | 8.8 | 25 | 180.0 |
| Plug for BOGE shockabsorber strut | Plug | | | 12 ÷ 2 | 86.8 ÷ 14.5 |
| Plug for KONI shockabsorber strut | Plug | | | 20 | 144.7 |
| Wheel to hub | Lug nut | M 14 x 1.5 | 10 K | 13 | 94.0 |
| Brake disc to wheel hub | Nut | M 8 | 8.8 | 2.3 | 16.6 |
| Cover shroud to steering knuckle | Bolt | M 8 | 8.8 | 2.5 | 18.1 |
| Brake caliper to steering knuckle | Bolt | M 12 x 1.5 | 8.8 | 7.0 | 50.6 |

| Location | Description | Thread | Grade | mkp | ft. lbs. |
|--|-----------------|------------|-------|---------|----------|
| Hollow bolt to brake caliper | Hollow bolt | M 10 x 1 | | 2.0 | 14.5 |
| Steering coupling to steering shaft | Bolt | M 8 | 8.8 | 2.5 | 18.1 |
| Steering shaft to steering unit | Bolt | M 8 | 8.8 | 2.5 | 18.1 |
| Steering support attachment | Allen bolt | M 8 | 8.8 | 2.5 | 18.1 |
| U-joint to steering shaft | Bolt | M 8 | 8.8 | 2.5 | 18.1 |
| Steering wheel attachment | Nut | M 18 x 1.5 | 8 | 7.5 | 54.2 |
| Dust boot support to steering rack | Notched nut | M 16 x 1.5 | 8 | 7.0 | 50.6 |
| Ball joint to steering arm | Castellated nut | M 10 x 1 | 8 | 4.5 | 32.5 |
| Coupling flange to steering pinion (self-locking) | Nut | M 10 | 8 | 4.7 | 34.0 |
| Housing cover to steering housing | Bolt | M 8 x 1 | 8.8 | 1.5 | 10.8 |
| Centering screw to steering lock | Stud | M 8 | 10.9 | 0.2-0.3 | 1.4-2.2 |
| Lock nut for centering screw | Nut | M 8 | 8 | 1.8 | 13 |


REMOVING AND INSTALLING FRONT AXLE BALL JOINT

TOOLS

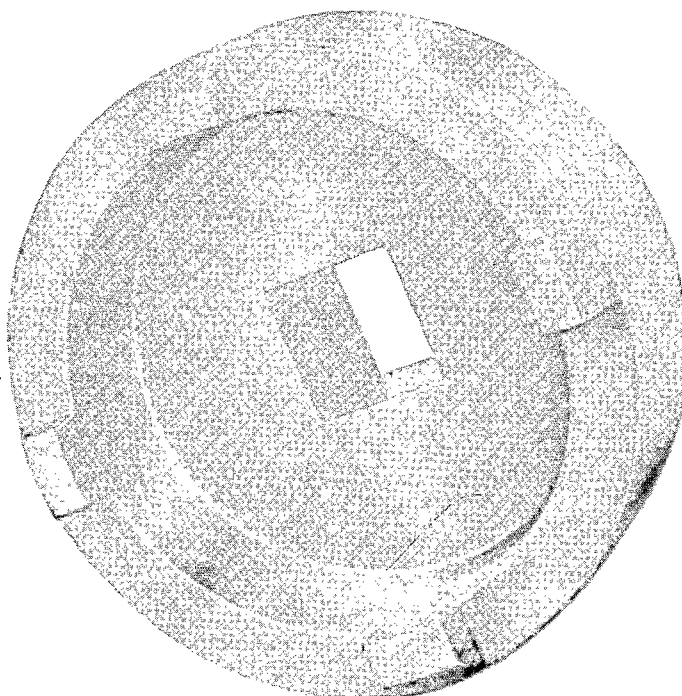

| Nr. | Description | Special Tool | Remarks |
|-----|-------------|--------------|---------|
| 1 | Wrench | P 280b | |

REMOVING AND INSTALLING FRONT AXLE BALL JOINT

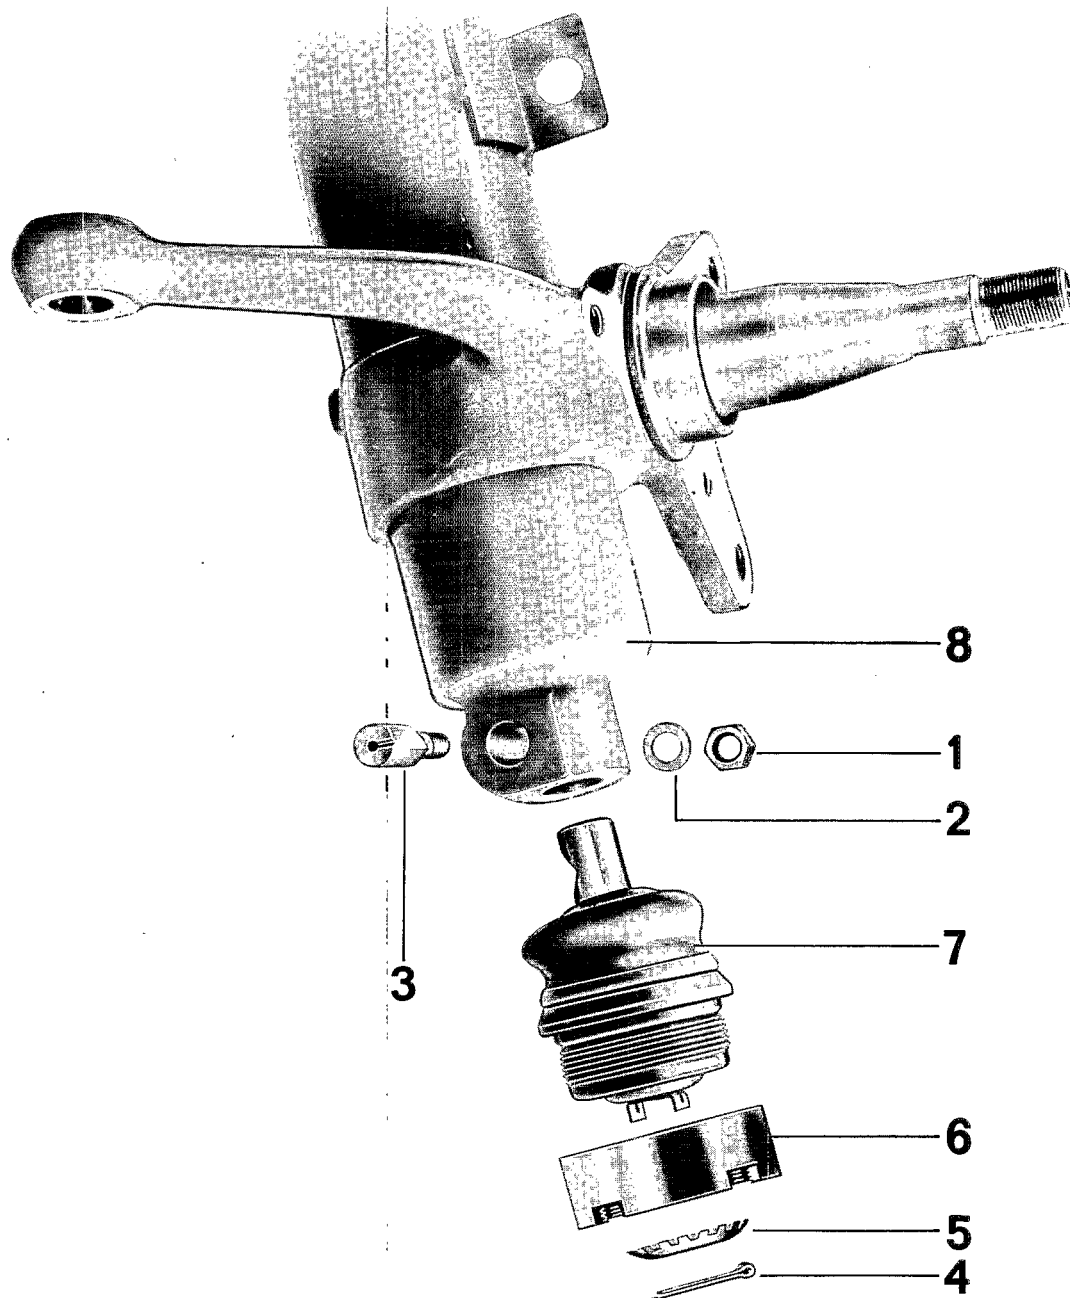


| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|---|-----|----------------------------------|---|-----------------------------|
| | | | removing | installing | |
| 1 | Nut M 8 | 1 | | Torque to specification. | |
| 2 | Washer | 1 | | | |
| 3 | Double-wedge bolt | 1 | Drive out. | Install with multipurpose grease, noting proper seating. Replace. | |
| 4 | Cotter pin | 1 | | Replace. | |
| 5 | Lock plate | 1 | | Replace if necessary. | |
| 6 | Nut | 1 | Remove with special tool P 280b. | Torque to specification. | |
| 7 | Ball joint | 1 | | Check, replace if worn. | |
| 8 | Shockabsorber strut (suspension strut) | | | Check, replace if necessary. | |

INSTRUCTIONS FOR DISASSEMBLY AND REASSEMBLY

Assembling

1. Coat double-wedge bolt with multipurpose grease before assembling.
2. Installed position of the double-wedge is so that the retaining nut points forward in the direction of travel.
The notch on the face of the double-wedge piece and the wedge contour must point toward the wheel stub axle.

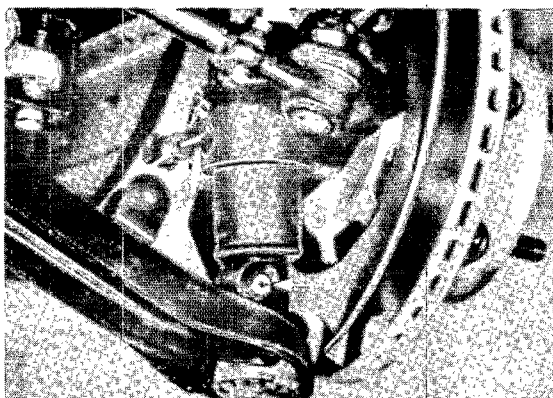

3. Make sure the double-wedge bolt is properly seated by tapping with a hammer before tightening the nut.
4. Torque Stop-nut to 2.2 mkp.


CHECKING SELF-LEVELING HYDROPNEUMATIC SUSPENSION STRUTS

Special Tools:

P 301b Measuring Mandrel


1. Load the front axle with a ballast of 100 kp (220 lbs) in such way that both wheels are evenly weighted (distribute the load evenly in the luggage compartment).
2. The best way to test the pumping action is by driving the car.

Drive the car into level surface and push plug gauges (special tool P 301b), from within the compartment of the reinforcing support member, to the stop in left and right transverse support arm (grease the mandrels slightly to provide some adhesion).

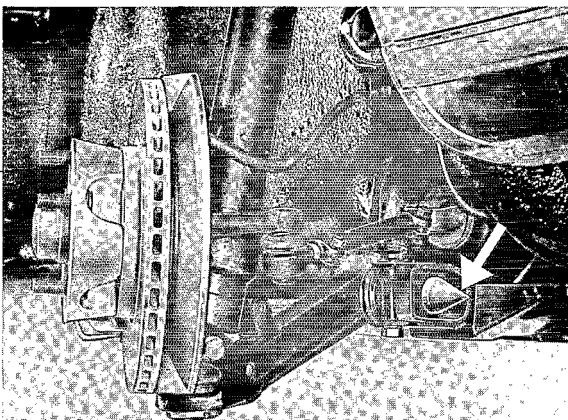

Measure distance "a" - from the ground vertically to the front wheel center.

Distance "b" equals distance "a" less 124 mm (5.0 in). Raise the car by the front center with a jack until distance "b" is attained at the measuring mandrels.

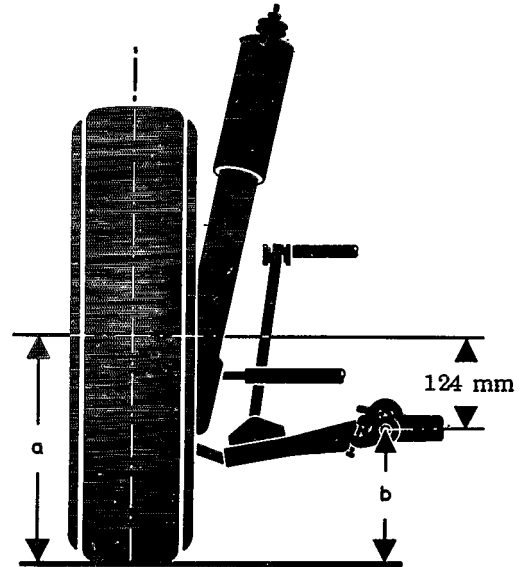

Measure and note the distance from the ground to the bottom edge of the fender across the front wheel center on left and right side. Remove measuring mandrels (special tool P 301b).

Note: Before lowering the jack, measure the distance from the wheel flange to the ground, then measure again after lowering the jack to determine the static deflection of the tires on both sides of the car. The difference must be deducted from measurements obtained between the ground and lower edge of fender.


Drive the car on a relatively straight but rough road over a distance of approx. 2 km (1 1/4 miles), without hard braking, and stop car on a level surface. Keeping car occupants in the car, have another person make comparison measurements at both front fenders. The values should not differ from the determininal nominal values by more than ± 10 mm (13/32 in).

LIGHT-ALLOY AUXILIARY CROSS MEMBER FOR CARRERA 2.7

General

Carrera 2.7 vehicles are equipped with a new, forged light-alloy auxiliary cross member. Tightening torques for the front axle remain unchanged.

DISASSEMBLY AND REASSEMBLY

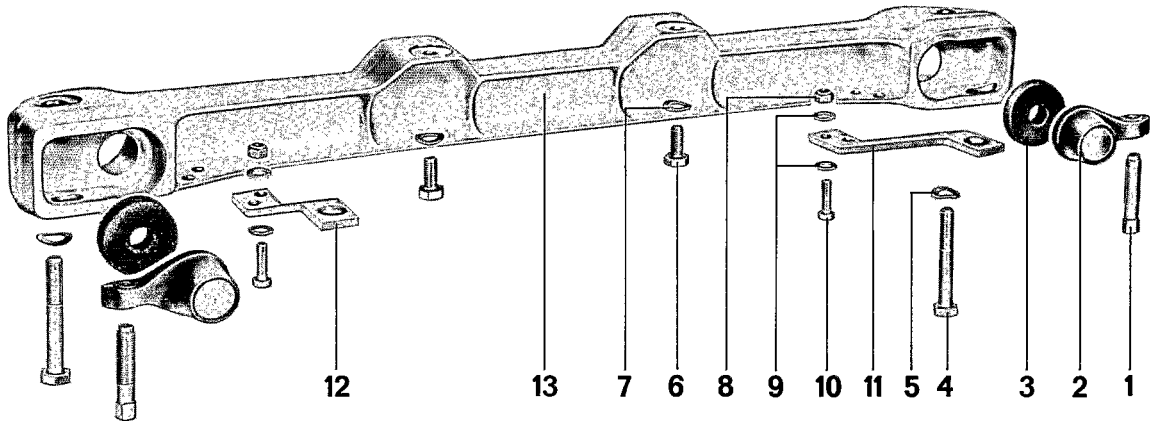

| No. | Description | Qty | Note when | | Special instructions see |
|-----|------------------------|-----|-----------|--|--------------------------|
| | | | removing | installing | |
| 1 | Adjusting screw | 2 | | Coat with multi-purpose MOS ₂ grease. | |
| 2 | Adjusting lever | 2 | | | |
| 3 | OWA-gasket | 2 | | | |
| 4 | Bolt, M 12 x 1.5 | 2 | | Tighten to specified torque. | |
| 5 | Spring washer | 2 | | Replace. | |
| 6 | Bolt, M 10 x 20 | 2 | | Tighten to specified torque. | |
| 7 | Spring washer | 2 | | Replace. | |
| 8 | Self-locking nut M 8 | 4 | | Replace if necessary. | |
| 9 | Washer | 8 | | | |
| 10 | Allen bolt M 8 | 4 | | | |
| 11 | Right brace | 1 | | | |
| 12 | Left brace | 1 | | | |
| 13 | Auxiliary cross member | 1 | | | |

STABILIZER 1974 MODELS

General

Beginning with the 1974 models, all vehicles are equipped with a new, one-piece front axle stabilizer.


The stabilizer bar diameter is

16 mm in 911 and 911 S vehicles

20 mm in Carrera vehicles

The stabilizer is mounted in rubber bushings located in the transverse control arms and the auxiliary support. It is attached by means of two clamps which are bolted to the modified support struts of the auxiliary support.

DISASSEMBLY AND REASSEMBLY

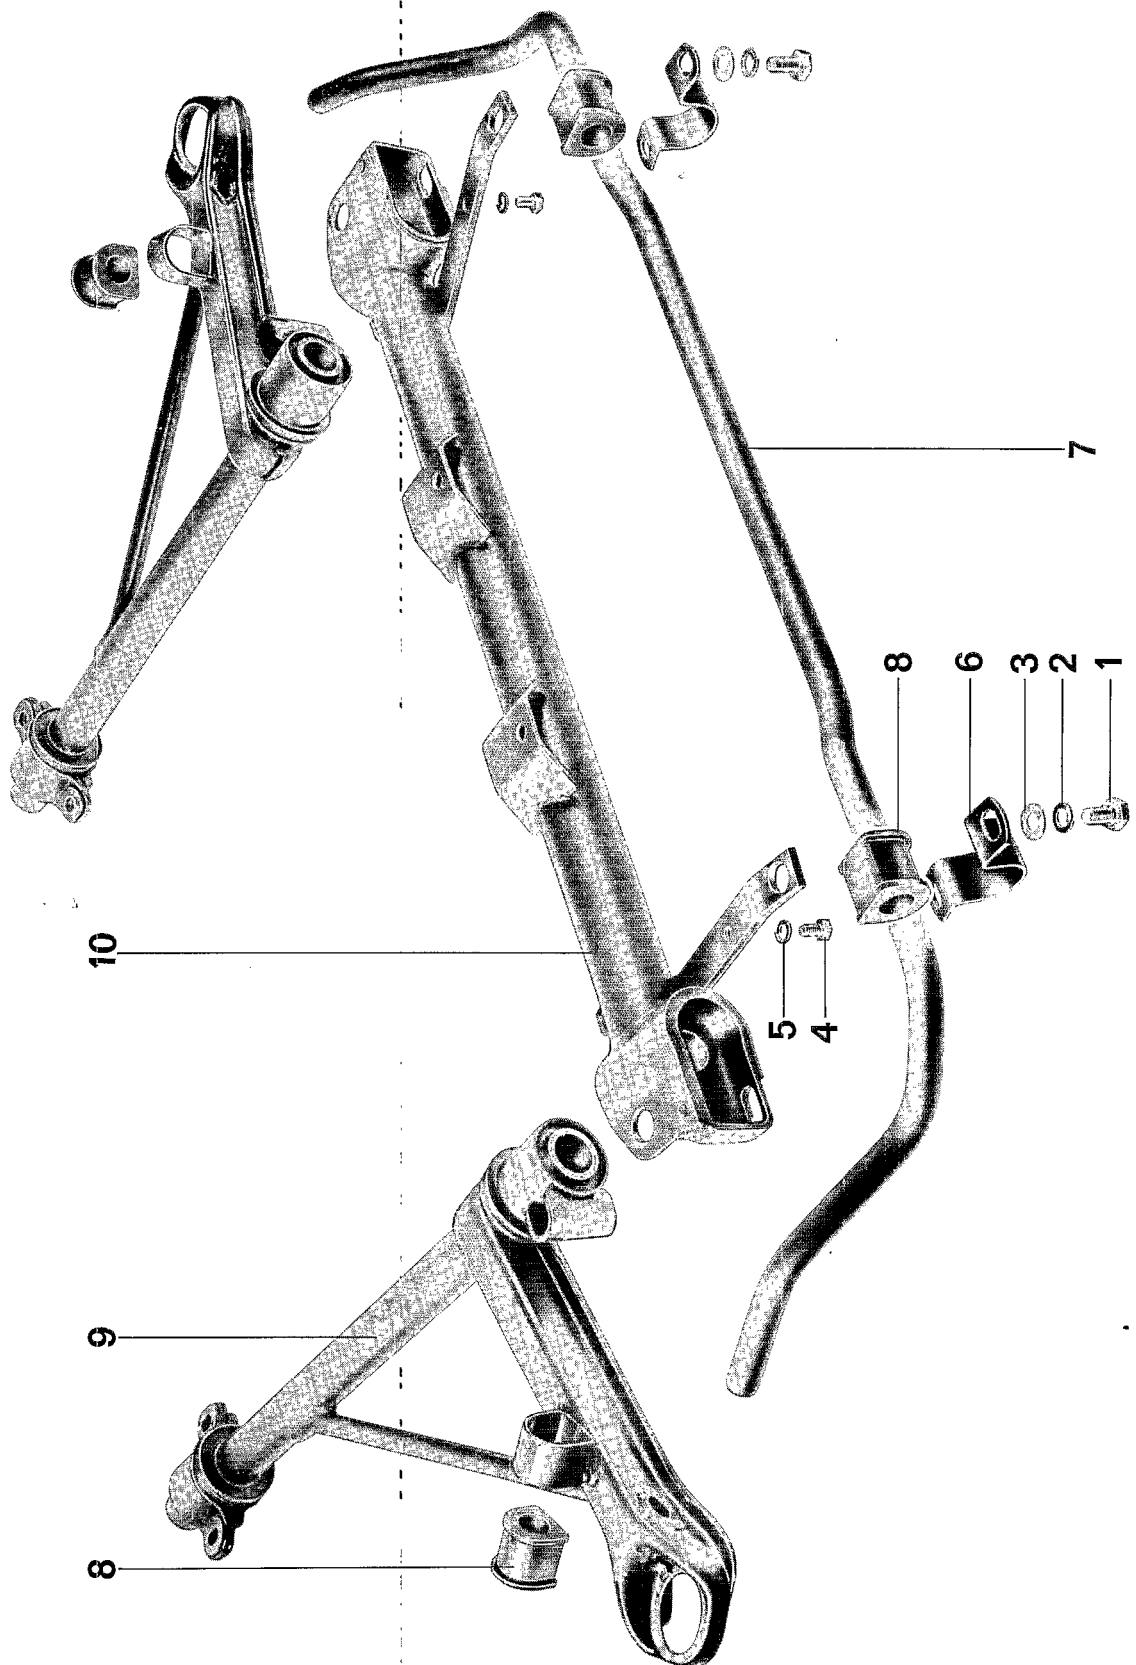


| No. | Description | Qty | Note during removal installation | References |
|-----|---------------------------|-----|--|------------|
| 1 | Bolt M 8 | 2 | Tighten to specified torque | |
| 2 | Lock washer | 2 | Replace | |
| 3 | Washer | 2 | | |
| 4 | Bolt M 8 | 2 | Tighten to specified torque | |
| 5 | Lock washer | 2 | Replace | |
| 6 | Clamp | 2 | | |
| 7 | Stabilizer | 1 | | |
| 8 | Rubber bushing | 4 | Check for wear Use rubber lubricant | |
| 9 | Transverse control arm | 2 | | |
| 10 | Auxiliary support | 1 | | |

INSTRUCTIONS FOR REMOVAL AND INSTALLATION

Removal

1. Remove stone guard.
2. Remove both support clamps from auxiliary support.
3. Remove stabilizer rearward by first pulling it out of one mounting point in the transverse control arm, and then out of the other.

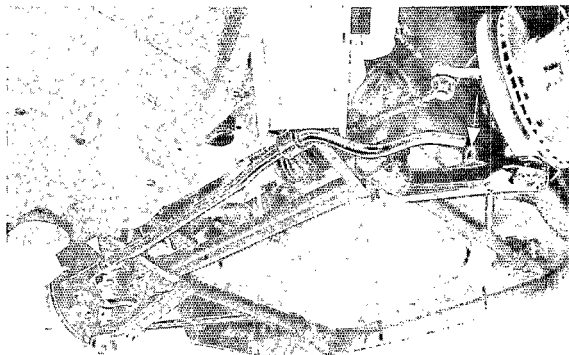


Installation

1. First push the stabilizer end into one mounting point, then into the other. Use rubber lubricant.

INSTALLATION NOTES FOR SHOCK ABSORBER/SPRING STRUTS

With the 1975 Models a different height adjustment was introduced. When installing the shock absorber/spring struts, make sure that spacer, Part No. 911.341.615.00, is installed between the guard tube and support bracket.

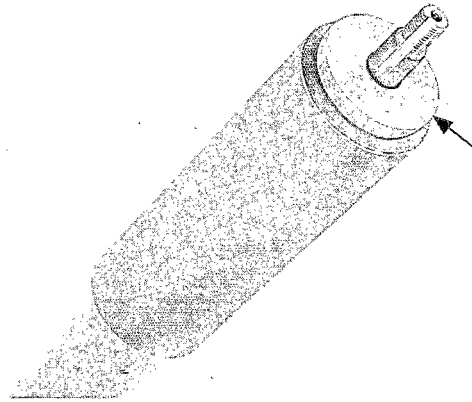

STEERING COLUMN ARRANGEMENT BEGINNING WITH 1974 MODELS

General

Beginning with 1974 models, the steering column attachment to the instrument panel has been changed.

A safety steering wheel has been introduced at the same time.

This modification necessitated changes in the following parts: steering shaft, steering shaft tube, and the switch assembly mounted on the steering column.

This steering column version with safety steering wheel can be subsequently installed in 1968 and later vehicles.

This exploded view diagram illustrates the assembly of a vehicle's steering column and dashboard. The components are numbered as follows:

- 1**: Steering wheel
- 2**: Steering wheel hub
- 3**: Steering wheel mounting bracket
- 4**: Steering wheel mounting nut
- 5**: Steering column upper housing
- 6**: Steering column lower housing
- 7**: Steering column shaft
- 8**: Steering column mounting bracket
- 9**: Steering column mounting nut
- 10**: Steering column mounting plate
- 11**: Steering column mounting bracket
- 12**: Steering column mounting nut
- 13**: Steering column mounting bracket
- 14**: Steering column mounting nut
- 15**: Steering column mounting bracket
- 16**: Steering column mounting nut
- 17**: Steering column mounting bracket
- 18**: Steering column mounting nut
- 19**: Steering column mounting bracket
- 20**: Steering column mounting nut
- 21**: Steering column mounting bracket
- 22**: Steering column mounting nut
- 23**: Steering column mounting bracket
- 24**: Steering column mounting nut
- 25**: Steering column mounting bracket
- 26**: Steering column mounting nut
- 27**: Steering column mounting bracket
- 28**: Steering column mounting nut
- 29**: Steering column mounting bracket
- 30**: Steering column mounting nut
- 31**: Steering column mounting bracket
- 32**: Steering column mounting nut
- 33**: Steering column mounting bracket
- 34**: Steering column mounting nut
- 35**: Steering column mounting bracket
- 36**: Steering column mounting nut
- 37**: Steering column mounting bracket
- 38**: Steering column mounting nut
- 39**: Steering column mounting bracket
- 40**: Steering column mounting nut
- 41**: Steering column mounting bracket
- 42**: Steering column mounting nut
- 43**: Steering column mounting bracket
- 44**: Steering column mounting nut
- 45**: Steering column mounting bracket
- 46**: Steering column mounting nut
- 47**: Steering column mounting bracket
- 48**: Steering column mounting nut
- 49**: Steering column mounting bracket


| No. | Description | Qty | Note when: | | Remarks |
|-----|--|-----|-------------------------|--|-----------|
| | | | removing | installing | |
| 1 | Pad | 1 | Pull off steering wheel | Press into place | |
| 2 | Nut, SW 27 | 1 | | Torque to specification | 0.2 - 2/2 |
| 3 | Spring washer | 1 | | Replace if necessary | |
| 4 | Safety steering wheel hub and energy absorbing support | 1 | | Install with road wheels in straight ahead position, release ring on left side | |
| 5 | Oval head screw M 3.5 x 10 | 3 | | | |
| 6 | External tooth lock washer | 3 | | Replace if necessary | |
| 7 | Contact ring | 1 | | Lightly grease contact surface (such as KONDOR T 250 contact grease) | |
| 8 | Fillister head screw | 4 | | | |
| 9 | Lock washer | 4 | | Replace if necessary | |
| 10 | Hub cover | 1 | | | |
| 11 | Fillister head screw, M 4 x 10 | 2 | | Replace if necessary | |
| 12 | Lock washer | 2 | | Replace if necessary | |
| 13 | Contact plate | 1 | | Lightly grease contact surface (such as KONDOR T 250 contact grease) | |
| 14 | Fillister head screw, M 3 x 8 | 4 | | | |
| 15 | Lock washer | 4 | | Replace if necessary | |
| 16 | Contact tab | 1 | | | |
| 17 | Fillister head screw, M 3 x 10 | 2 | | | |

| No. | Description | Qty | Note when: | | Remarks |
|-----|-------------------------|-----|---|------------------------------------|-----------|
| | | | removing | installing | |
| 18 | Switch housing top | 1 | | | |
| 19 | Switch housing bottom | 1 | | | |
| 20 | Nut, M 8 | 1 | | | |
| 21 | Stud | 1 | | | |
| 22 | Shear bolt, M 8 | 2 | drill bolt head off. | Tighten until bolt head shears off | 4.2 - 1/6 |
| 23 | Lock washer | 2 | | Replace if necessary | |
| 24 | Ignition steering lock | 1 | | | |
| 25 | Fillister screw M 3 | 2 | | | |
| 26 | Ignition/starter switch | 1 | | | |
| 27 | Self-locking nut M 8 | 1 | | Replace. Torque to specification | 0.2 - 2/2 |
| 28 | Bolt M 8 | 1 | | | |
| 29 | Universal joint | 1 | | Check, replace if necessary | |
| 30 | Shear bolt M 8 | 1 | Drill bolt head off | Tighten until bolt head shears off | |
| 31 | Lock washer | 1 | | Replace if necessary | |
| 32 | Shear bolt M 8 | 2 | Drill bolt head off, or grind it off if necessary. (Remove tachometer.) | Tighten until bolt head shears off | 4.2 - 1/7 |
| 33 | Lock washer | 2 | | Replace if necessary | |


| No. | Description | Qty | Note when: | | Remarks |
|-----|--------------------------------------|-----|---|-----------------|-----------|
| | | | removing | installing | |
| 34 | Steering shaft tube | 1 | Remove from instrument panel together with steering shaft and switches | | |
| 35 | Fillister head screw, M 3 x 8 | 2 | | | |
| 36 | Lock washer | 2 | Replace if necessary | | |
| 37 | Directional signal and dimmer switch | 1 | | | |
| 38 | Fillister head screw, M 8 x 3 | 2 | | | |
| 39 | Lock washer | 2 | Replace if necessary | | |
| 40 | Wiper/washer switch | 1 | | | |
| 41 | Lock washer | 1 | Replace if necessary | | |
| 42 | Lock washer | 1 | Replace if necessary | | |
| 43 | SEEGER retaining ring | 1 | Press out with a screwdriver | Press into seat | |
| 44 | Steering shaft | 1 | Drive out of steering shaft tube | | |
| 45 | Ball bearing | 1 | Check, replacing if necessary. Grooved ball bearings with plastic inner races from 1975 models. | | 4.2 - 1/7 |
| 46 | Contact ring | 1 | Replace if necessary. Deleted from 1975 models. | | 4.2 - 1/7 |
| 47 | Circlip | 1 | Must be seated in groove in steering shaft groove | | |
| 48 | Ball bearing | 1 | Check, replace if necessary | | |
| 49 | Circlip | 1 | Must be seated in groove in steering shaft groove | | |

Disassembly

1. Remove blower.

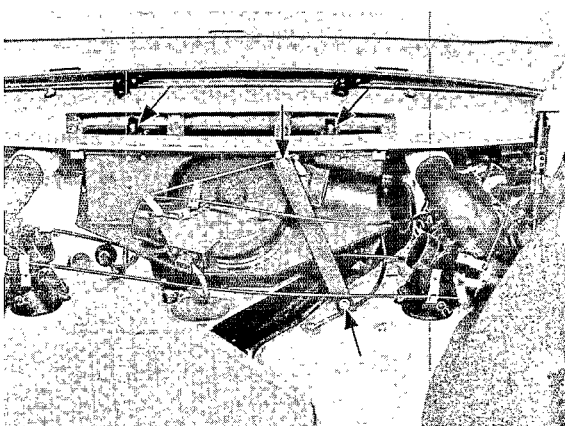


2. Remove steering shaft cover and take off universal joint retaining bolt.

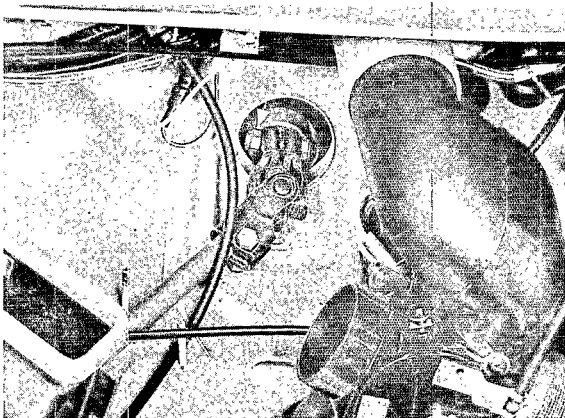


3. Remove knee strip.

4. Remove light switch and tachometer.

5. Drill off or grind off shear bolts in steering switch attachment and ignition/starter switch.

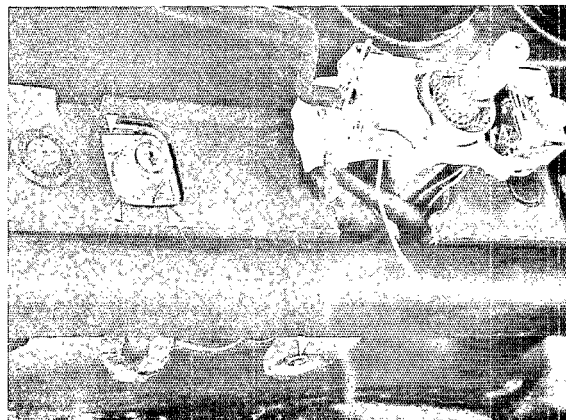


6. Detach wire connectors and multiple plugs.

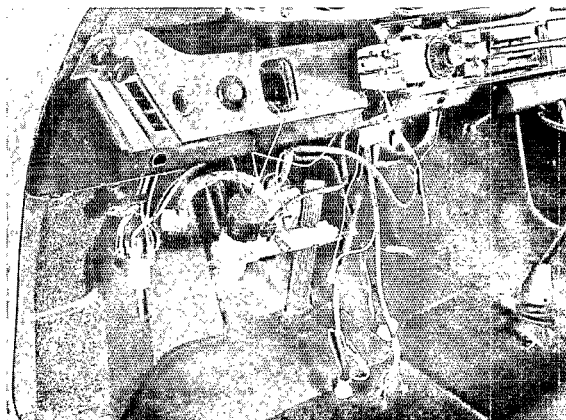


7. Remove complete steering switch from instrument panel.

Reassembly

1. Place contact ring and bearing together on the steering shaft.

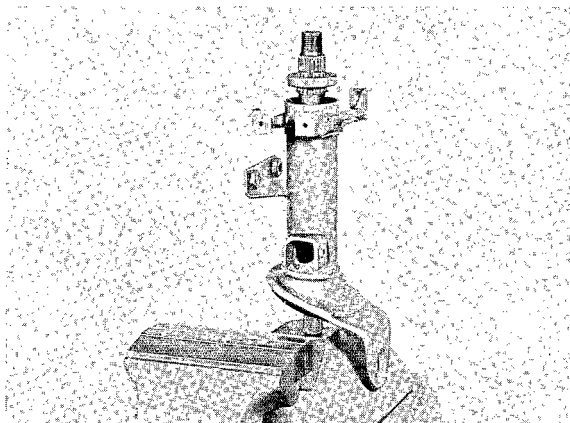


3. Tighten shear bolts for steering tube attachment until the heads break off.

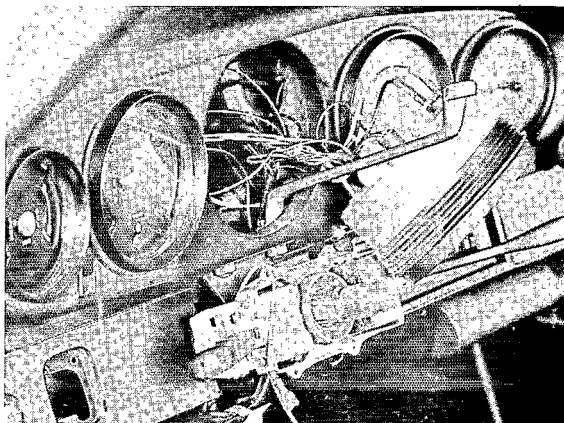

2. Drive bearing into place with a pipe section (inside dia. 24 mm, outside dia. 28 mm).

NOTE

The pipe section should contact the bearing inner race only.

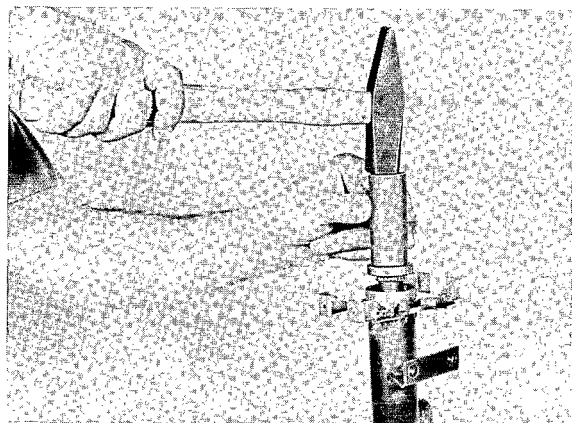

Hinterachse
Rear Axle
Essieu AR
Assale posteriore

5

5

5

5

5

5

5

5

5

5

CONTENTS

0 - INFORMATION, DESCRIPTION, TECHNICAL DATA

0.0 General Information

0.1 Description

Rear Axle Changes - Beginning with 1972 Models 0.1 - 1/1

0.2 Technical Data

General Specifications 0.2 - 1/1

Technical Data from 1974 model 0.2 - 1/3

Technical Data from 1975 model 0.2 - 1/5

Tightening Torques 0.2 - 2/1

1 - REAR WHEEL ALIGNMENT

1.1 Measuring Rear Axle

General Information 1.1 - 1/1

Wheel Alignment Data Chart 1.1 - 1/1

2 - REAR AXLE

2.1 Rear Axle Control Arms

Dismantle and reinstall Rear Axle Control Arms from 1974 Model 2.1 - 1/1

Instructions for Disassembly and Reassembly 2.1 - 1/6

Checking Parts 2.1 - 1/7

3 - AXLE DRIVESHAFTS

3.1 Axle Driveshafts

Axle Driveshafts - Lighter Version 3.1 - 1/1

REAR AXLE CHANGES - BEGINNING WITH 1972 MODELS

1. Beginning with 1972 models, rear axle shockabsorbers have been modified. The outside diameter and overall length of the shockabsorbers has been increased:

Outer diameter

| | |
|------|------------------|
| new: | 62 mm (2.44 in.) |
| old: | 58 mm (2.28 in.) |

Extended length

| | |
|------|--|
| new: | 599 ± 2.0 mm (23.59 ± 0.08 in.) |
| old: | 574 ± 2.5 mm (22.61 ± 0.10 in.) |

Closed length

| | |
|------|--|
| new: | 407.5 ± 2.0 mm (16.04 ± 0.08 in.) |
| old: | 390 ± 2.5 mm (15.37 ± 0.10 in.) |


2. The BOGE shockabsorbers are standard on the rear axle. BILSTEIN or KONI shockabsorbers are optional.

The various shockabsorber types can be distinguished by their color:

| | |
|----------|-------|
| BOGE | black |
| KONI | red |
| BILSTEIN | green |

To allow for the larger shocks, the lower mount has been moved rearward 10 mm. The upper mounting has also been moved slightly forward and in towards the vehicle longitudinal axis. This change was also necessary due to the new transmission which has its axle flanges approximately 10 mm further to the rear.

The shockabsorber mounting bolt has been changed from the former 12 mm diameter to 14 mm diameter.

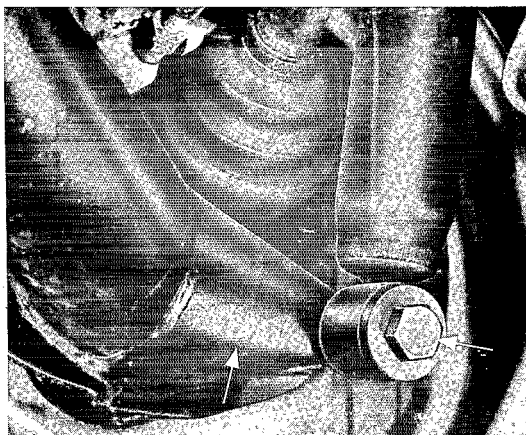

GENERAL SPECIFICATIONS

TYPE 911 VEHICLES - BEGINNING WITH 1972 MODELS

| | | |
|---|--|--|
| Wheel suspension | independent, with longitudinal trailing arms (radius arms) | |
| Springing | 1 round transverse torsion bar per wheel | |
| Shockabsorbers | double-action, hydraulic shockabsorbers | |
| Stabilizer | transverse, 15 mm (0.59 in.) dia, in Type 911 S only | |
| Wheelbase | 2271 mm (89.4 in.) | |
| Rear trailing arm adjustment (trailing arm inclination) | 36° 30' to 37° | |
| Track, rear | 911 T | 1342 mm/52.8 in. (5 1/2 J x 15 rim) |
| | 911 E and 911 S | 1354 mm/53.3 in. (6 J x 15 rim) |
| Max. axle load, rear | 840 kp (1852 lbs.) | |
| Nominal Adjustment Values and Wear Tolerances (at empty weight DIN) | | |
| Toe-in | 0° to + 20 ' per wheel | |
| Camber, rear | -1° + 10' | |

GENERAL SPECIFICATIONS BEGINNING WITH 1974 MODELS

| Vehicle Type | 911 | 911 S | Carrera |
|---|--|---------------------------|---------------------------|
| Wheel suspension | independent, with triangulated control arms | | |
| Springing | 1 round transverse torsion bar per wheel, 23 mm dia. | | |
| Shock absorbers | double-action, hydraulic shock absorbers | | |
| Stabilizer, transverse | optional | optional | 18 mm dia. |
| Wheelbase | 2271 mm | same as 911 | same as 911 |
| Trailing arm adjustment (trailing arm inclination) | 36° 30' to 37° | same as 911 | same as 911 |
| Track, rear (wheel center 12 mm below center of transverse tube) | 1342 mm (5 1/2 J x 15 rim) | 1354 mm (6 J x 15 rim) | 1380 mm (7 J x 15 rim) |
| Max. axle load, rear | 840 kg | same as 911 | same as 911 |
| Nominal Adjustment Values and Wear Tolerances (at empty weight DIN) | | | |
| Toe-in | + 20' - 20' per wheel | same as 911 | same as 911 |
| Camber, rear | - 1° ± 10' | same as 911 | same as 911 |

TECHNICAL DATA (1975 MODELS)

| Model | 911 S | Carrera |
|--|--|----------------------------------|
| Wheel suspension | Independent with triangulated control arms | |
| Springing | One round transverse torsion bar per wheel | |
| Torsion bar dia. | 23 mm | same as 911 S |
| Shock absorbers | Double action hydraulic shock absorbers | |
| Transverse stabilizer | 18 mm dia. | same as 911 S |
| Wheelbase | 2271 mm | same as 911 S |
| Trailing arm inclination | | |
| Coupe | 42° | same as 911 S |
| Targa | + 0.5° | same as 911 S |
| Air conditioner | + 0.5° | same as 911 S |
| Sportomatic | + 0.5° | same as 911 S |
| Models with Bilstein shock absorbers | 41° | same as 911 S |
| Track width, rear | 1342 mm with 6J x 15 wheel | 1368 mm with 7J x 15 wheel |
| Rear axle height adjustment: center of wheel below center of cross tube | 37 ± 5 mm | same as 911 S |
| Max. axle load, rear | 840 kg (1852 lb) | same as 911 S |
| Adjusting, reference and wear specifications (at curb weight according to DIN) | | |
| Toe | + 20' - 20' | same as 911 S |
| Camber, rear wheel | 0° ± 10' | same as 911 S |

TECHNICAL DATA - from 1976 Model


| | 1976/77 Models | from 1978 |
|---|--|---|
| | 911 S | 911 SC |
| Wheel suspension | Independent on trailing arms | |
| Springs | One round transverse torsion bar per wheel | |
| Torsion bar dia. | 23 mm | 24.1 mm |
| Shock absorbers | Double-action hydraulic absorbers | |
| Transverse stabilizer dia. | 18 mm (optional) | 18 mm |
| Wheelbase | 2272 mm | 2272 mm |
| Trailing arm inclination | | |
| Coupe | 42° | 40° |
| Targa | + 0.5° | + 0.5° |
| Air conditioner | + 0.5° | + 0.5° |
| Sportomatic | + 0.5° | + 0.5° |
| With Bilstein shock absorbers | 41° | 39° |
| Rear track width | 1342 mm with 6 J x 15 wheels | 1367 mm with 7 J x 15 wheels |
| Rear axle height | | |
| Wheel center below cross tube center | 37 ± 5 mm | 37 ± 5 mm |
| Max. rear axle load | 840 kg/1852 lb | 78/79 model: 840 kg/1852 lb 1980 model: 880 kg/1940 lb 1981 model: 950 kg/2094 lb |
| Adjusting, reference and wear limit specifications (at DIN curbweight) | | |
| Toe per wheel | + 10' ± 10' | + 10' ± 10' |
| Camber of rear wheels | 0° ± 10' | 0° ± 10' |

TIGHTENING TORQUES

| Location | Description | Thread | Grade | mkp | ft.lbs. |
|------------------------------------|-------------------|----------|---------|-------|---------------------|
| Bearing cap to body | Bolt | M 10 | 8.8 | 4.7 | 33.9 |
| Rear radius arm to axle cross | Bolt | M 14x1,5 | 10 K | 9.0 | 65.1 |
| Radius arm to spring plate | Eccenter | M 12x1,5 | 8.8 | 6.0 | 43.4 |
| Radius arm to spring plate | Bolt | M 12x1,5 | 10 K | 9.5 | 68.7 |
| Brake caliper to arm | Bolt | M 12x1,5 | 8.8 | 7.0 | 50.6 |
| Shockabsorber to arm | Bolt | M 14x1,5 | 8.8 | 12.5 | 90.4 |
| Shockabsorber to body | Nut | M 10x1 | 8 | 2.5 | 18.1 |
| Brake hose to brake lines | Brake hose | M 10x1 | | 1.5 | 10.9 |
| Stabilizer to body | Bolt | M 8 | 8.8 | 2.5 | 18.1 |
| CV flange attachment | Allen bolt | M 10 | 12 K | 8.3 | 60.0 |
| | | M 8 | 12.9/10 | 4.2 | 30.4 |
| Parking brake assembly to arm | Bolt | M 8 | 8.8 | 2.5 | 18.1 |
| Wheel to hub | Wheel lug | M 14x1,5 | | 13 | 94.0 |
| Wheel hub to axle | Castellated nut | M 20x1,5 | 10 K | 30-35 | 217-243 |
| Brake disc to wheel hub | Countersunk screw | M 6 | 8.8 | 0.5 | 3.6 (43 in.lbs.) |
| Parking brake cable housing to arm | Bolt | M 6 | 8.8 | 0.5 | 3.6 (43 in.lbs.) |
| Adjusting lever to spring strut | Hex.hd.bolt | M 16x1,5 | 10.9 | 24.5 | 177 |
| Adjusting lever to spring strut | Eccentric bolt | M 16x1,5 | 10.9 | 24.5 | 177 |


REAR AXLE CONTROL ARMS

TOOLS

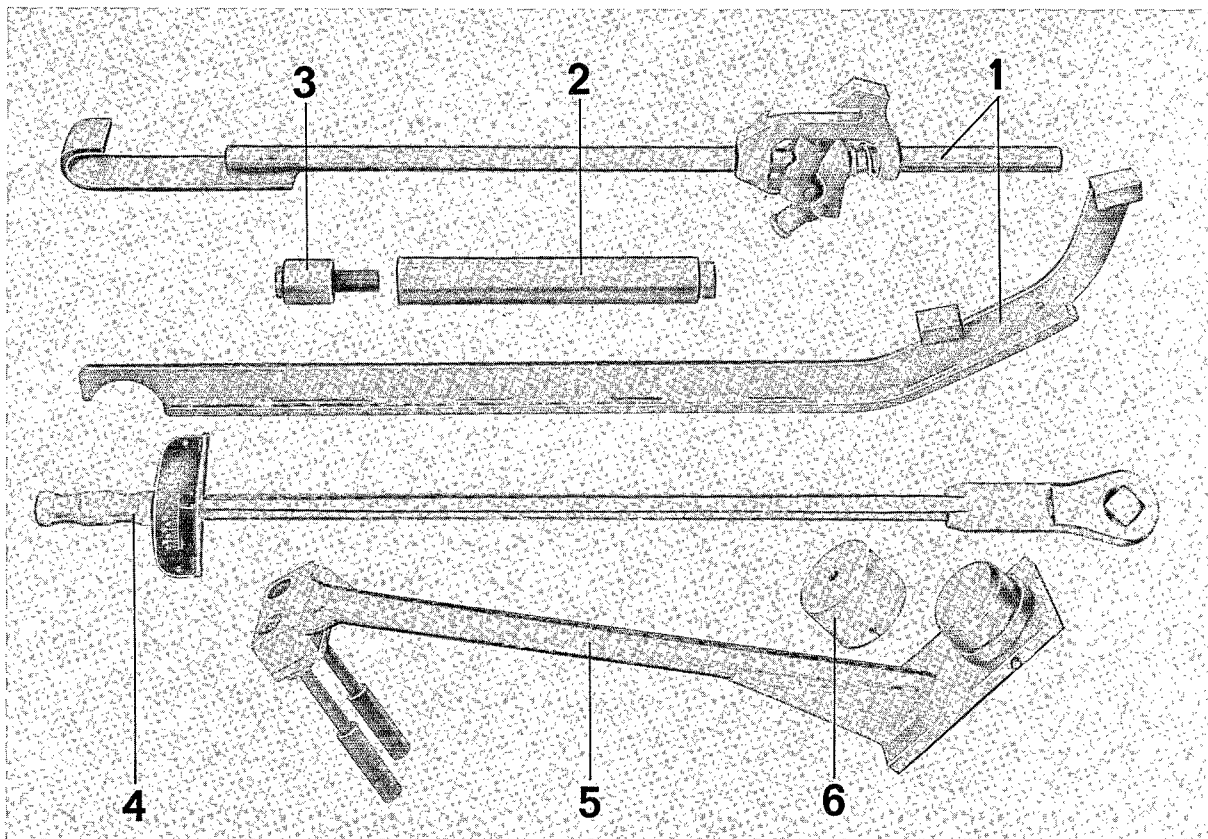

| No. | Description | Special Tool | Remarks |
|-----|---|--------------|-------------------|
| 1 | Trailing arm positioner | P 289 | |
| 2 | Driver for removing rear wheel hub | P 297 a | |
| 3 | Installer, rear wheel hub into control arm | P 298 b | |
| 4 | Torque wrench, 75 mkp | US 118/40 | |
| 5 | Rear axle control arm alignment gauge | P 295 b | |
| 6 | Adapter for control arms beginning with 1974 models | P 295 c | Used with P 295 b |

DISASSEMBLY AND REASSEMBLY

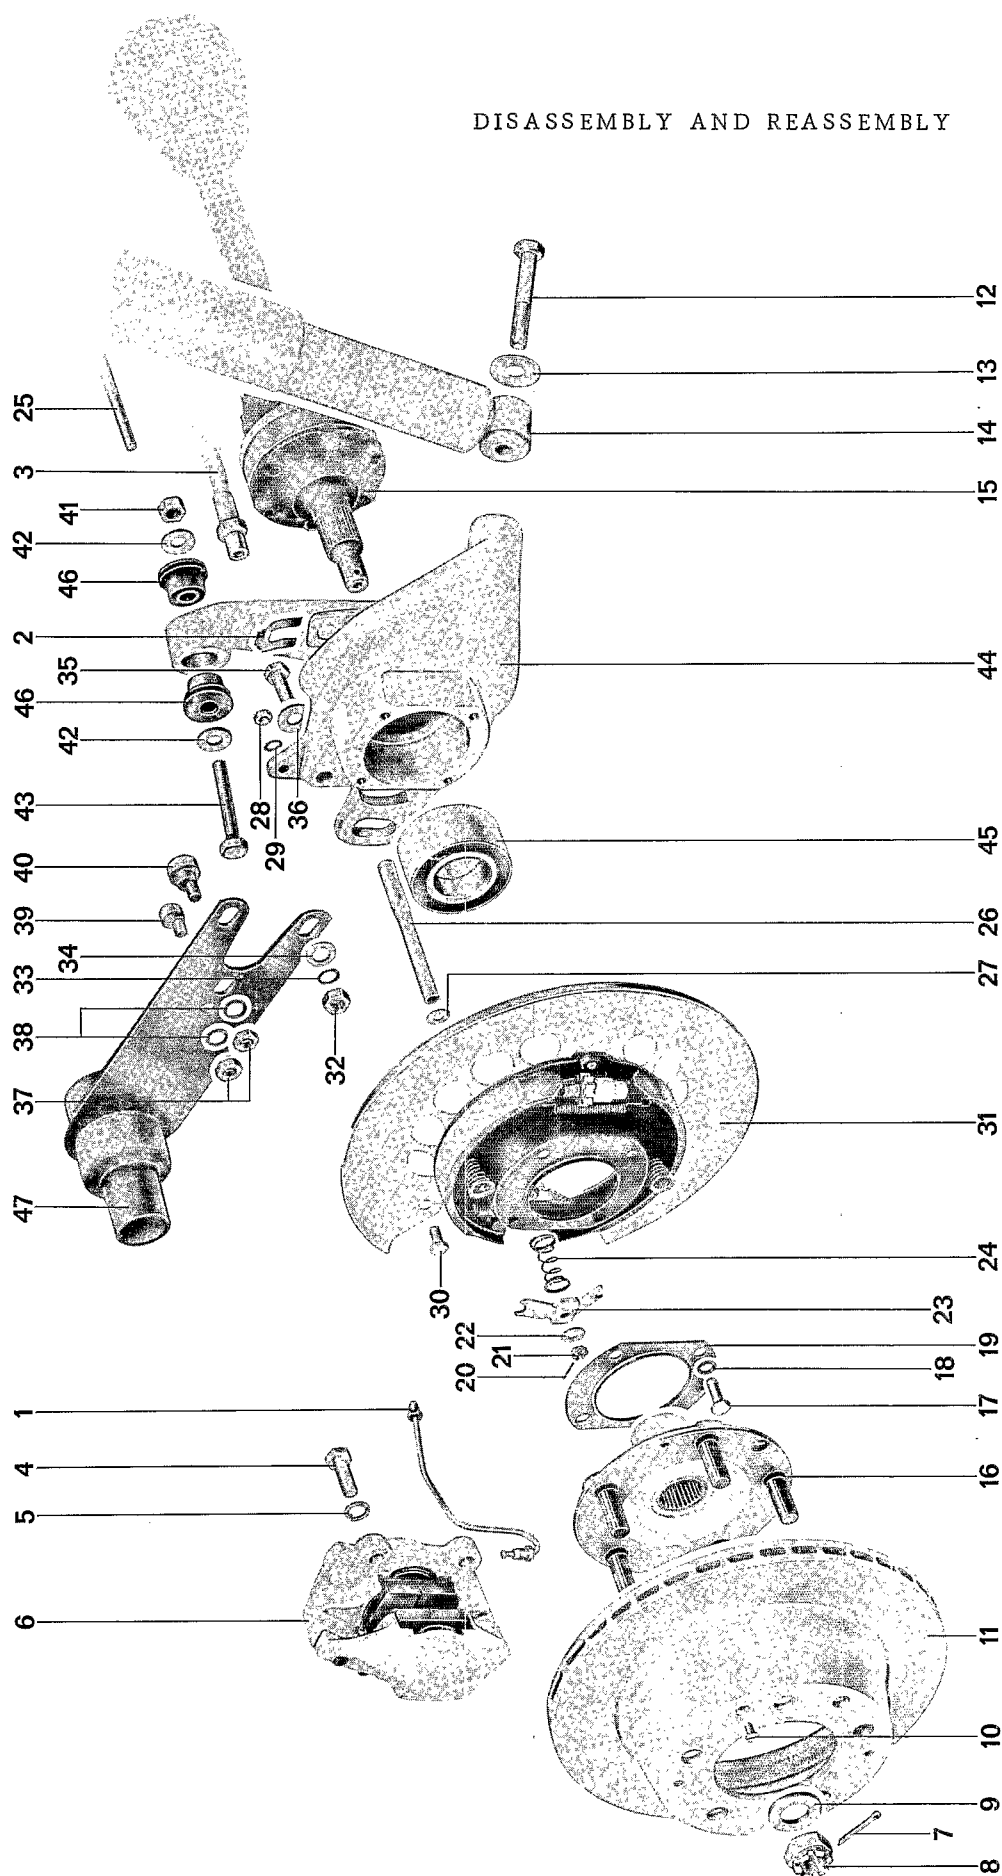

| No. | Description | Qty | Note when: | | Remarks |
|-----|-----------------------------|-----|-------------------------------------|-------------------------|------------------------|
| | | | removing | installing | |
| 1 | Brake line | 1 | | Torque to specification | 0.2 - 2/1 |
| 2 | Brake line retaining clip | 1 | | | |
| 3 | Brake hose | 1 | Pull out towards center of vehicle | | |
| 4 | Bolt, M 12 x 1.5 | 2 | | Torque to specification | 0.2 - 2/1 |
| 5 | Lock washer | 2 | | Replace if necessary | |
| 6 | Brake caliper | 1 | | | |
| 7 | Cotter pin | 1 | | Replace | |
| 8 | Castellated nut | 1 | | Torque to specification | 0.2 - 2/1 2.1 - 1/6 |
| 9 | Washer | 1 | | | |
| 10 | Countersunk screw, M 6 x 12 | 2 | | Torque to specification | |
| 11 | Brake disk | 1 | | | |
| 12 | Bolt, M 14 x 1.5 | 1 | | Torque to specification | |
| 13 | Washer | 1 | | | |
| 14 | Shock absorber | 1 | | | |
| 15 | Wheel shaft | 1 | Drive out towards center of vehicle | | |
| 16 | Wheel hub | 1 | Drive out with P 297 a | | 2.1 - 1/7 |

| No. | Description | Qty | Note when: | | Remarks |
|-----|--------------------------------|-----|---------------------------------|---|---------|
| | | | removing | installing | |
| 17 | Bolt, M 8 | 4 | | Torque to specification | |
| 18 | Lock washer | 4 | | Replace if necessary | |
| 19 | Reinforcing cover | 1 | | | |
| 20 | Cotter pin | 1 | | Replace | |
| 21 | Castellated nut M 6 | 1 | | | |
| 22 | Washer | 1 | | | |
| 23 | Expander | 1 | | Seat properly | |
| 24 | Spring | 1 | | | |
| 25 | Parking brake cable | 1 | Pull out towards vehicle center | | |
| 26 | Spacer tube | 1 | | Seat properly. Large cross-section faces towards vehicle center | |
| 27 | Washer | 1 | | | |
| 28 | Nut, M 8 | 2 | | Torque to specification | |
| 29 | Spring washer | 2 | | Replace if necessary | |
| 30 | Bolt, M 8 | 2 | | | |
| 31 | Backing plate with brake shoes | 1 | | Remove whole assembly | |
| 32 | Nut, M 12 | 2 | | Torque to specification | |
| 33 | Toothed washer | 2 | | Replace if necessary | |

| No. | Description | Qty | Note when: | | Remarks |
|-----|--------------------------------------|-----|--------------------------------------|---|-----------|
| | | | removing | installing | |
| 34 | Washer | 2 | | | |
| 35 | Bolt, M 12 | 2 | | | |
| 36 | Washer | 2 | | | |
| 37 | Nut (thin), M 12 | 2 | | Torque to specification | |
| 38 | Toothed washer | 2 | | | |
| 39 | Eccentric bolt for toe-in adjustment | 1 | | | |
| 40 | Eccentric bolt for camber adjustment | 1 | | | |
| 41 | Self-locking nut, M 14 | 1 | | Replace, torque to specification | |
| 42 | Washer | 2 | | | |
| 43 | Bolt, M 14 | 1 | | | |
| 44 | Axle control arm (aluminum) | 1 | | Check for deformation, replace if necessary | |
| 45 | Double-row ball bearing | 1 | Press out with fitting thrust piece. | Replace. Press in with appropriate thrust piece | 2.1 - 1/7 |
| 46 | Rubber mount | 2 | | If rubber mounts are removed, install new ones | 2.1 - 1/7 |
| 47 | Torsion plate (trailing arm) | 1 | | | |

INSTRUCTIONS FOR DISASSEMBLY AND REASSEMBLY


Disassembly

1. Detach drive shaft from transmission flange.
Use flat chisel in the area of the flange gasket to separate shaft assembly from flange.


CAUTION

Do not damage the flange surfaces.

2. Detach brake line from brake caliper and control arm assembly (first depress brake pedal with pedal holder to keep brake fluid from draining out of the brake fluid reservoir).

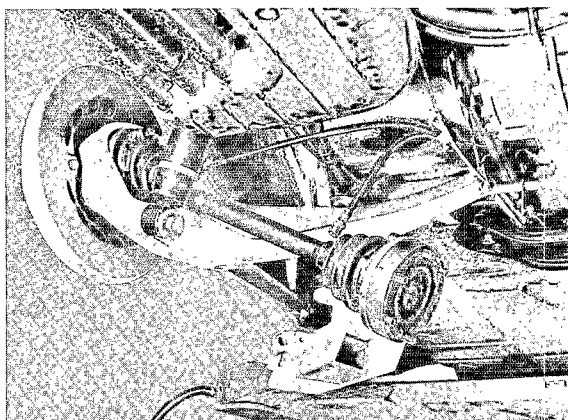


3. Remove cotter pin from the castellated nut in the wheel shaft and remove nut with the aid of P 42 a, P 36 b, P 44 a, and P 296.

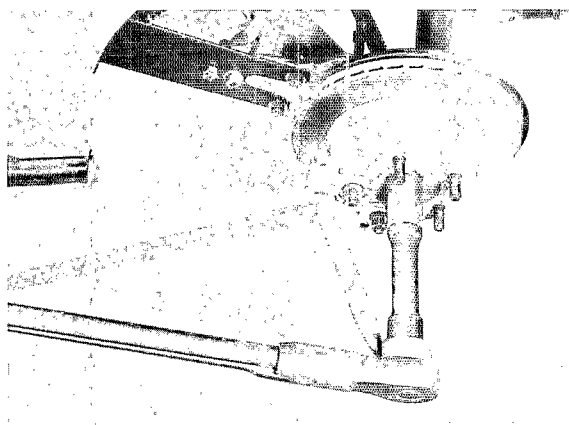


4. Remove brake disk.

5. Raise torsion plate (trailing arm) with the aid of P 289. Remove shock absorber retaining bolt.

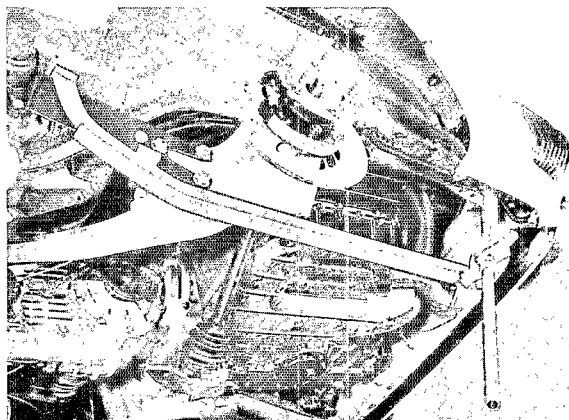


6. Drive wheel shaft out towards vehicle center.

7. Drive rear wheel hub out with the aid of P 297a.
8. Remove cotter pin and castellated nut from brake cable stub. Pull brake cable out towards vehicle center.

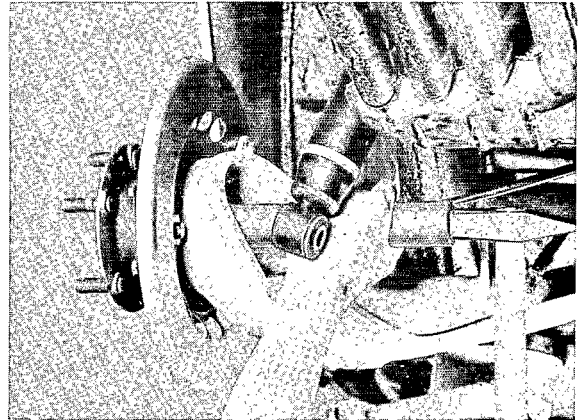



9. Press ball bearing out with an appropriate thrust piece (approx. 65 mm dia.).

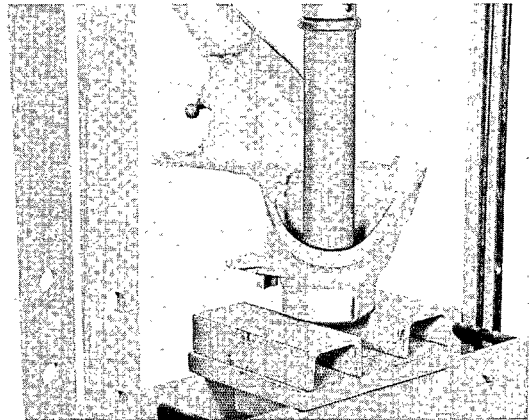

Checking Parts

1. Check rubber mounts in rear axle control arms for wear or damage, replace if necessary.
2. Install special tool P 295c (adapter for mounting aluminum axle control arm) in special tool P 295b. Marker in the P 295c adapter must point towards the marker in P 295b.

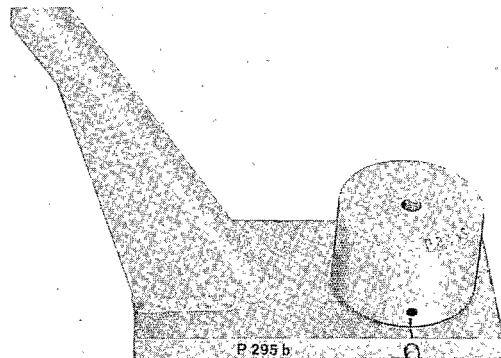


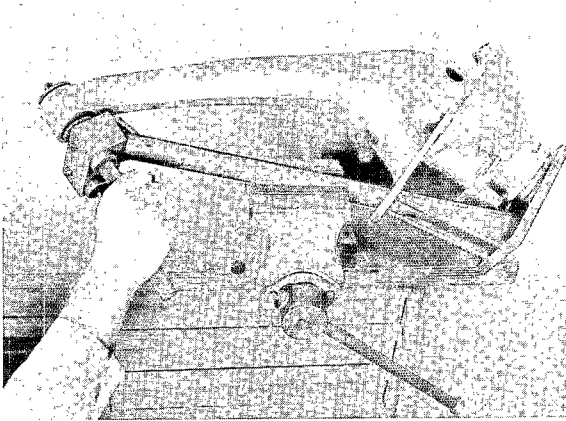

3. Using P 295b and P 295c, check axle control arm for deformation.

If the control arm is in alignment, it will be possible to push the test mandrel in with the rubber mounts installed. Deformed axle control arms must be replaced.


Reassembly

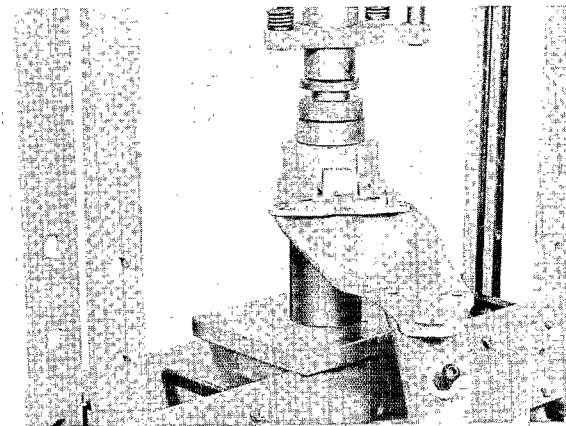

1. Using an appropriate press adapter (approx. 79 mm dia.), press the double-row ball bearing fully in (apply pressure to bearing outer race).

NOTE:

The double-row ball bearing must always be replaced because it is damaged during removal from the axle control arm.

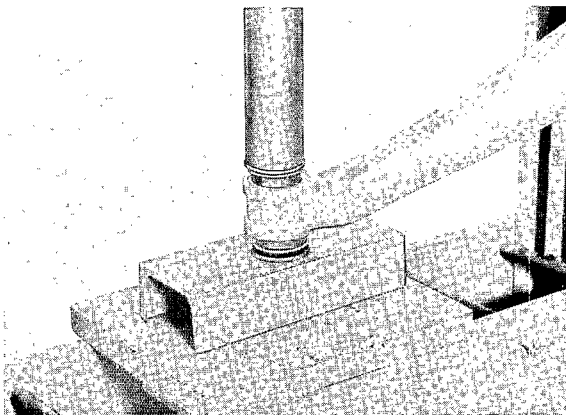


2. If the rubber mounts were removed, install new ones by pressing them fully in.

3. Using P 298b and the wheel shaft, press the wheel hub into the double-row ball bearing.

NOTE:

Do not drive the wheel hub into the bearing with a hammer since this will damage the bearing.

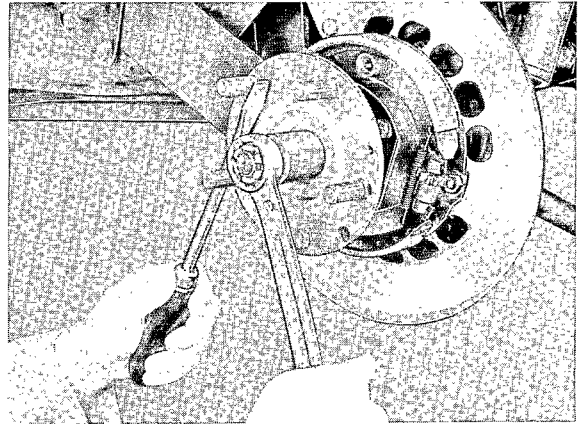

AXLE DRIVESHAFTS - LIGHTER VERSION

General


Beginning with October 6, 1971 production, all 911 models have new and lighter axle driveshafts (approx. 0.9 kp. (2 lbs.) lighter).

The CV (constant velocity) joints are 8 mm (0.31 in.) narrower (dimension A). As a result, the axle shafts are 8 mm longer.

Installation Note:

From 1969 models on, old-type drive shafts can be replaced with the new version on individual basis from 1969 models on.

When installing the newer axle drive shafts, it is necessary to use the new socket head bolts, M 10 x 48, as well as new supporting plates.

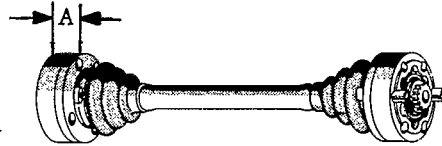

Dimension A - new driveshaft version = 32 mm

Dimension A - old driveshaft version = 40 mm

Bremsen, Räder, Reifen
Brakes, Wheels, Tires
Freins, Roues, Pneus
Freni, Ruote, Gomme

6

6

6

6

6

6

6

6

6

6

CONTENTS

0 - INFORMATION, DESCRIPTION, TECHNICAL DATA

0.0 Information

0.1 Description

0.2 Technical Data

General Data 0.2 - 1/1

Tightening Torques, front and rear brakes 0.2 - 2/1

1 - BRAKE BOOSTER, MASTER BRAKE CYLINDER

1.1 Brake Booster

Removing and Installing Brake Booster 1.1 - 1/1

Disassembling Brake Booster and Brake Master Cylinder Partially 1.1 - 2/1

Checking Brake Booster 1.1 - 3/1

4 - WHEELS AND TIRES

4.1 Wheels and Tires

Summary 4.1 - 1/1

Checking Steel-Disc Wheels 4.1 - 1/1

Mounting Instructions 4.1 - 1/2

Instructions for Installation of Adhesive Weights in
Light-Alloy Wheels 4.1 - 1/2

Balancing Wheels 4.1 - 1/2

Collapsible Spare Tire (Spare tire in vehicles with 85-liter
fuel tank) 4.1 - 1/3

Standard Wheels and Tires, overview, from 1973 model 4.1 - 1/5

Standard Wheels and Tires, overview, from 1975 model 4.1 - 1/7

| Item | Dimensions and Adjustment Values | Wear Tolerances |
|---|----------------------------------|-----------------|
| Tandem Brake Master Cylinder | | |
| Bore | 19.05 mm Ø | |
| Stroke | 18/13 mm | |
| Reduction ratio at brake pedal | 5.4 : 1 | |
| Clearance, actuating rod to piston | 1 mm | |
| Front Wheel Brakes | | |
| Brake disc outer diameter | 282,5 mm, vented | |
| Thickness, new | 20.0 mm resp. 20,5 mm | |
| Minimum thickness when reconditioned * | 18.6 mm | 18.0 mm |
| Thickness tolerance | max. 0.03 mm | |
| Brake disc lateral runout | max. 0.05 mm | |
| Lateral runout when installed | 0.2 mm | |
| Caliper piston Ø | 48 mm | |
| Brake lining thickness | 10 mm | 2.0 mm |
| Lining to rotor clearance when released | 0.2 mm | |
| Lining area per wheel: Type 911 T and E | 52.5 cm ² | |
| Type 911 S | 76.0 cm ² | |
| Rear Wheel Brakes | | |
| Brake disc outer diameter | 290 mm, vented | |
| Thickness, new | 20.0 mm | |
| Minimum thickness when reconditioned * | 18.6 mm | 18.0 mm |
| Thickness tolerance | max. 0.03 mm | |
| Brake disc lateral runout | max. 0.05 mm | |
| Lateral runout when installed | max. 0.2 mm | |
| Disc surface finish when reconditioned | max. 0.006 mm | |
| Caliper piston Ø | 38 mm | |
| Lining thickness | 10 mm | 2.0 mm |
| Lining to rotor clearance when released | 0.2 mm | |
| Lining area per wheel | 52.5 cm ² | |

*The disc must always be machined on both sides by the same amount.

| Item | Dimensions and Adjustment Values | Wear Tolerances |
|--|-------------------------------------|--------------------|
| Parking Brake | | |
| Parking brake drum \varnothing , new | 180 mm | 181 mm |
| Parking brake lining thickness | | 2,0 mm |

General Information for Brakes with Brake Booster

Brake Booster

| | |
|----------------------------|--------------|
| Type | T 52, 7 inch |
| Mean multiplication factor | 2.2 |

Tandem Brake Master Cylinder

| | |
|--|---------------|
| Bore | 20,64 mm dia. |
| Stroke | 20/12 mm |
| Play at brake pedal with brakes bled and engine stopped | 10 mm |

GENERAL DATA - from 1978 Model

| Description | Specifications | Wear Limits |
|---|--|-------------|
| Service brakes (foot-operated) | Hydraulic dual circuit brake system, separate circuit for each axle, brake booster, inboard vented brake discs on front and rear axles | |
| Brake booster dia. | 7 inches | |
| Brake master cylinder dia. | 20.64 mm | |
| Brake disc dia., front | 282.5 mm | |
| rear | 290 mm | |
| Eff. brake disc dia., front | 228 mm | |
| rear | 244 mm | |
| Brake caliper piston dia., front | 48 mm | |
| rear | 38 mm | |
| Brake pad area/each front wheel | 76.0 cm ² | |
| Brake pad area/each rear wheel | 52.5 cm ² | |
| Total pad area | 257 cm ² | |
| Pad thickness, front | 10 mm | 2 mm |
| rear | 10 mm | 2 mm |
| Brake disc thickness when new | | |
| Front | 20.5 mm | |
| Rear | 20.0 mm | |
| Min. brake disc thickness after machining * | | |
| Front | 19.1 mm | 18.5 mm |
| Rear | 18.6 mm | 18.0 mm |
| Max. brake disc thickness tolerance | 0.02 mm | |
| Max. brake disc lateral runout | 0.05 mm | |
| Max. brake disc lateral runout when installed | 0.1 mm | |
| Max. peak-to-valley surface finish after machining | 0.006 mm | |
| Play at brake pedal with brakes bled and engine stopped | 10 mm | |


* Brake discs must always be machined on both sides by the same amount.

| Description | Specifications | Wear Limits |
|----------------------------------|--|-------------|
| Parking brake (hand-operated) | Drum brake mechanical action on both rear wheels | |
| Brake drum dia. | 180 mm | 181 mm |
| Brake shoe width | 25 mm | |
| Brake lining area per wheel | 85 cm ² | |
| Brake lining thickness | 4.5 mm | 2 mm |

TIGHTENING TORQUES FOR FRONT AND REAR BRAKES

| Location | Designation | Thread | Grade | ft. lbs. | mkp |
|---|----------------------|----------|--------|----------|------|
| Tandem brake master cylinder to transverse wall | Nut | M 8 | 8.8 | 18 | 2.5 |
| Attachment of piston rod to eyebolt end | Nut (flat) | M 10 | C 45/6 | 7.3 | 1.0 |
| Brake line connection | Hollow bolt | M 10x1 | 5.8 | 11 | 1.5 |
| Hollow bolt in caliper | Hollow bolt | M 10x1 | | 14, 5 | 2.0 |
| Caliper to steering knuckle | Bolt | M 12x1.5 | 8.8 | 51 | 7.0 |
| Lock nut to steering knuckle | Allen bolt | M 7 | 10 K | 11 | 1.5 |
| Brake disc to wheel hub | Nut | M 8 | 8.8 | 17 | 2.3 |
| Disc shroud | Bolt | M 8 | 8.8 | 7, 3 | 1.0 |
| Caliper housing bolt (front) | Allen bolt | M 8 | 10 K | 25 | 3.4 |
| Caliper housing bolt (rear) | Allen bolt | M 6 | 12 K | 16 | 2.2 |
| Caliper to rear control arm | Bolt | M 12x1.5 | 8.8 | 51 | 7.0 |
| Brake disc to rear wheel hub | Countersunk bolt | M 6 | 8.8 | 3.6 | 0.5 |
| Brake carrier plate to rear control arm | Bolt | M 10 | | 34 | 4.7 |
| Shroud to brake carrier plate | Bolt | M 8 | 8.8 | 18 | 2.5 |
| Parking brake cable to control arm | Bolt | M 6 | 8.8 | 3.6 | 0.5 |
| Wheel to wheel hub | Spherical flange nut | M 14x1.5 | | 94 | 13.0 |
| Bleeder valve in caliper SW 7 wrench size | -- | -- | -- | 2.2 | 0.3 |

REMOVING AND INSTALLING BRAKE BOOSTER

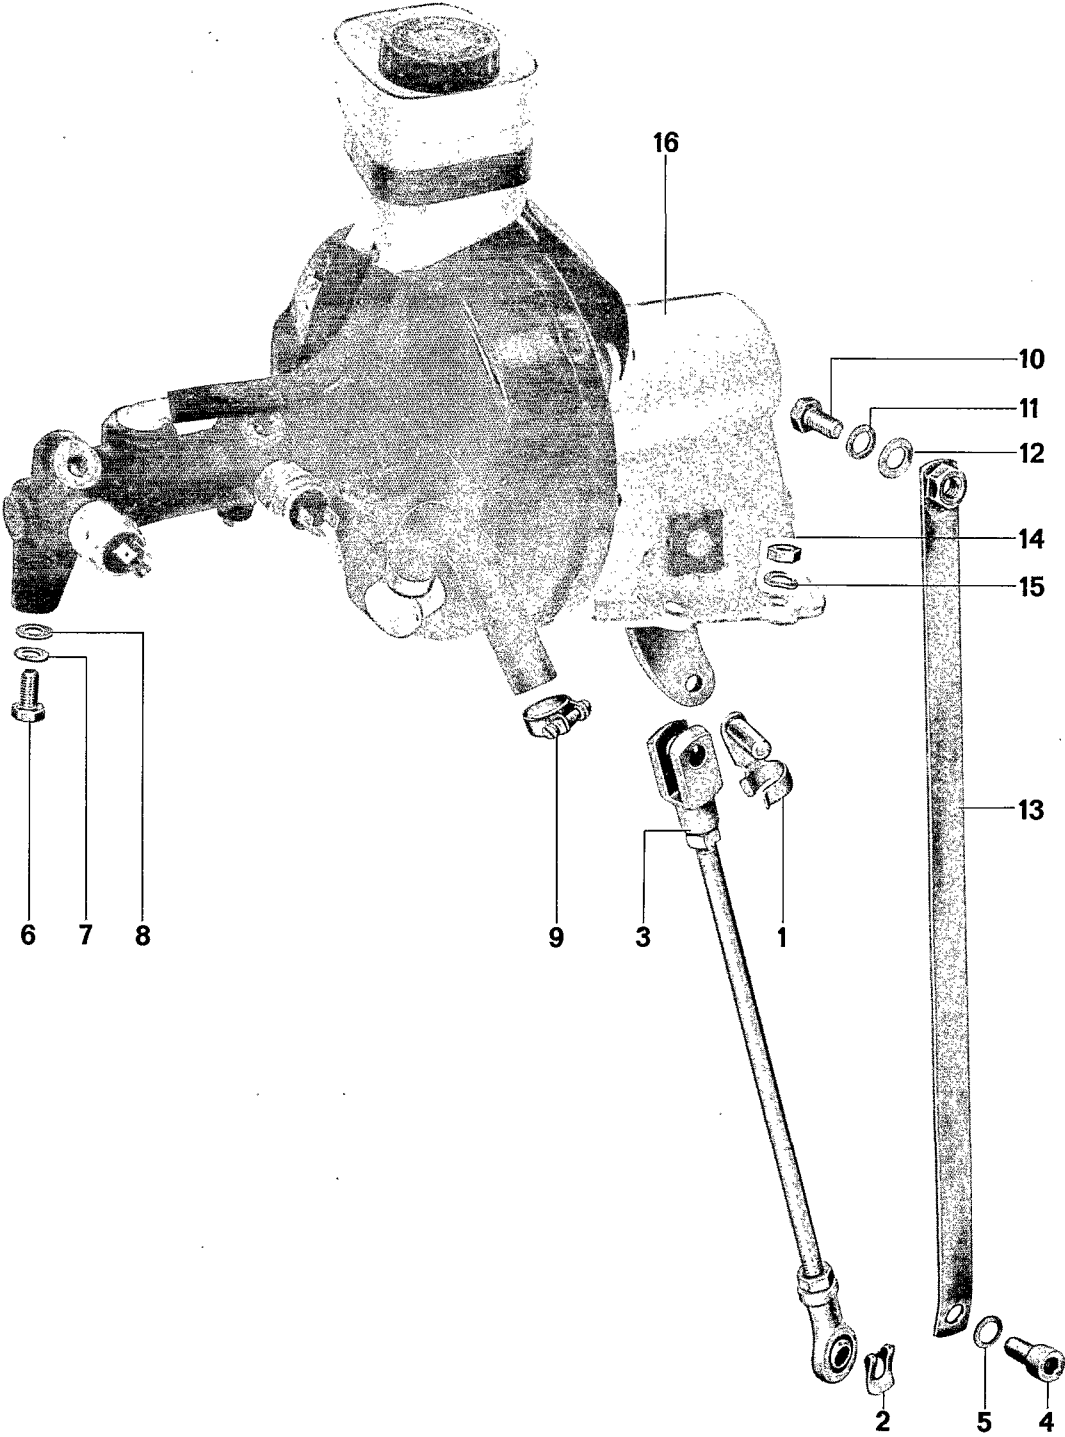


| No. | Description | Qty. | Note when removing installing | Remarks |
|-----|---|------|--|-------------------------------|
| 1 | Lock pin | 1 | Install in correct position Pull back brake pedal to stop. Lock pin must now be installed with- out tension, adjust operating rod if necessary | 1.1 - 1/3 |
| 2 | Lock clip | 1 | | |
| 3 | Operating rod | 1 | | |
| 4 | Socket head bolt | 1 | Can only be remo- ved after removing pedal assembly | Torque to specifica- tions |
| 5 | Lock washer | 1 | | Replace, if necessary |
| 6 | Bolt | 1 | | Torque to specifica- tions |
| 7 | Lock washer | 1 | | Replace, if necessary |
| 8 | Washer | 1 | | |
| 9 | Hose clamp | 1 | | |
| 10 | Bolt | 1 | | Torque to specifica- tions |
| 11 | Lock washer | 1 | | Replace, if necessary |
| 12 | Washer | 1 | | |
| 13 | Brace | 1 | | |
| 14 | Nut | 4 | | Torque to specifica- tions |
| 15 | Spring washer | 4 | | Replace, if necessary |
| 16 | Brake booster with tandem master cylin- der | 1 | | |


REMOVING AND INSTALLING INSTRUCTIONS

Removing


1. Remove lock pin for operating rod.

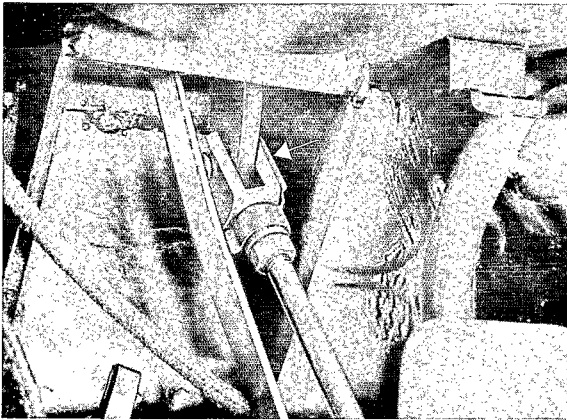

2. Remove mounting bolt for brake master cylinder (located inside on luggage compartment floor plate).
3. Drain brake fluid reservoir with siphoning device.
4. Disconnect stop light switch plugs. Loosen vacuum hose clamp and remove brake line.

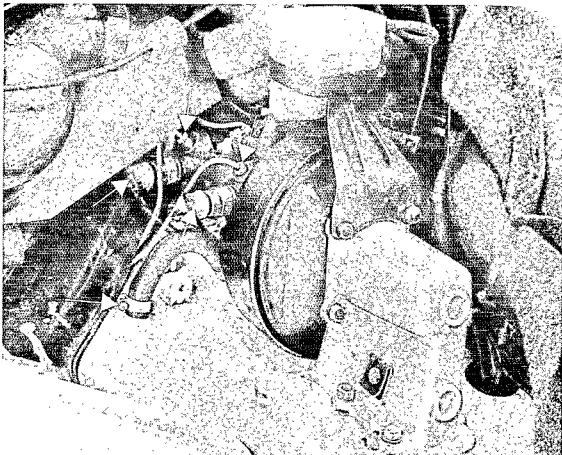


5. Remove upper bolt for brace and nuts for booster base.

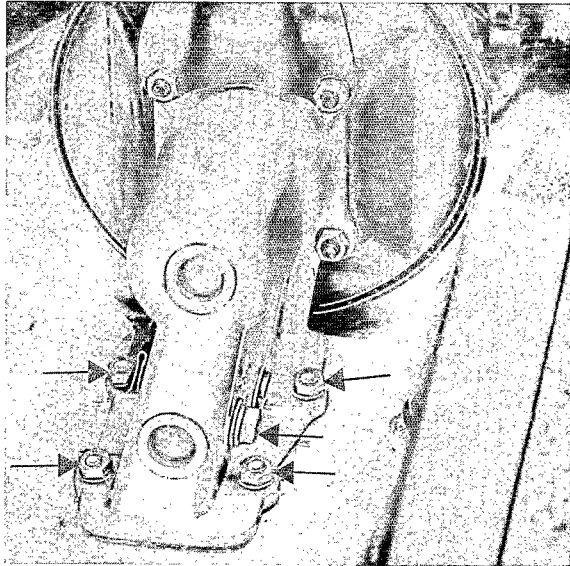

Note

Brace and operating rod do not have to be detached at pedal assembly to remove brake booster.

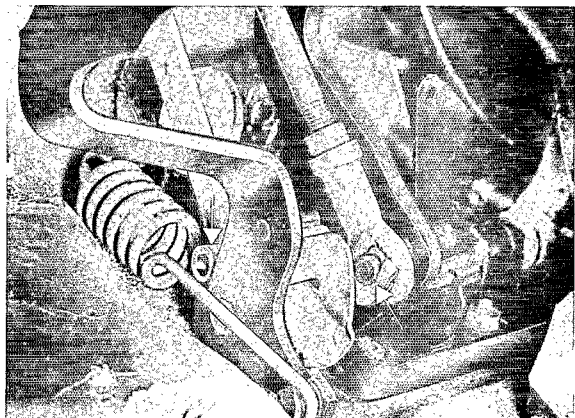

Installing

1. Install brake booster with brake master cylinder in reverse sequence.
2. Lock pin (item 1) for operating rod must be installed so that the spring can be inserted from above (see arrow, upper left picture).


ADJUSTING BRAKE OPERATING ROD

Note

The operating rod must be attached when the brake pedal is at its rest position without any force applied to the operating lever. The play set at the factory must not be changed.

1. Pull brake pedal back to stop.
 2. Loosen nuts on operating rod. Adjust operating rod until the lock pin for the operating lever can be installed without tension.
 3. Tighten nuts on operating rod.
 4. To verify the clearances required in the brake booster, check the operating rod play at the brake pedal by manual operation after the brakes have been bled and the engine is stopped. This play must be at least 10 mm.
-

DISASSEMBLING BRAKE BOOSTER AND BRAKE MASTER CYLINDER (PARTIALLY)

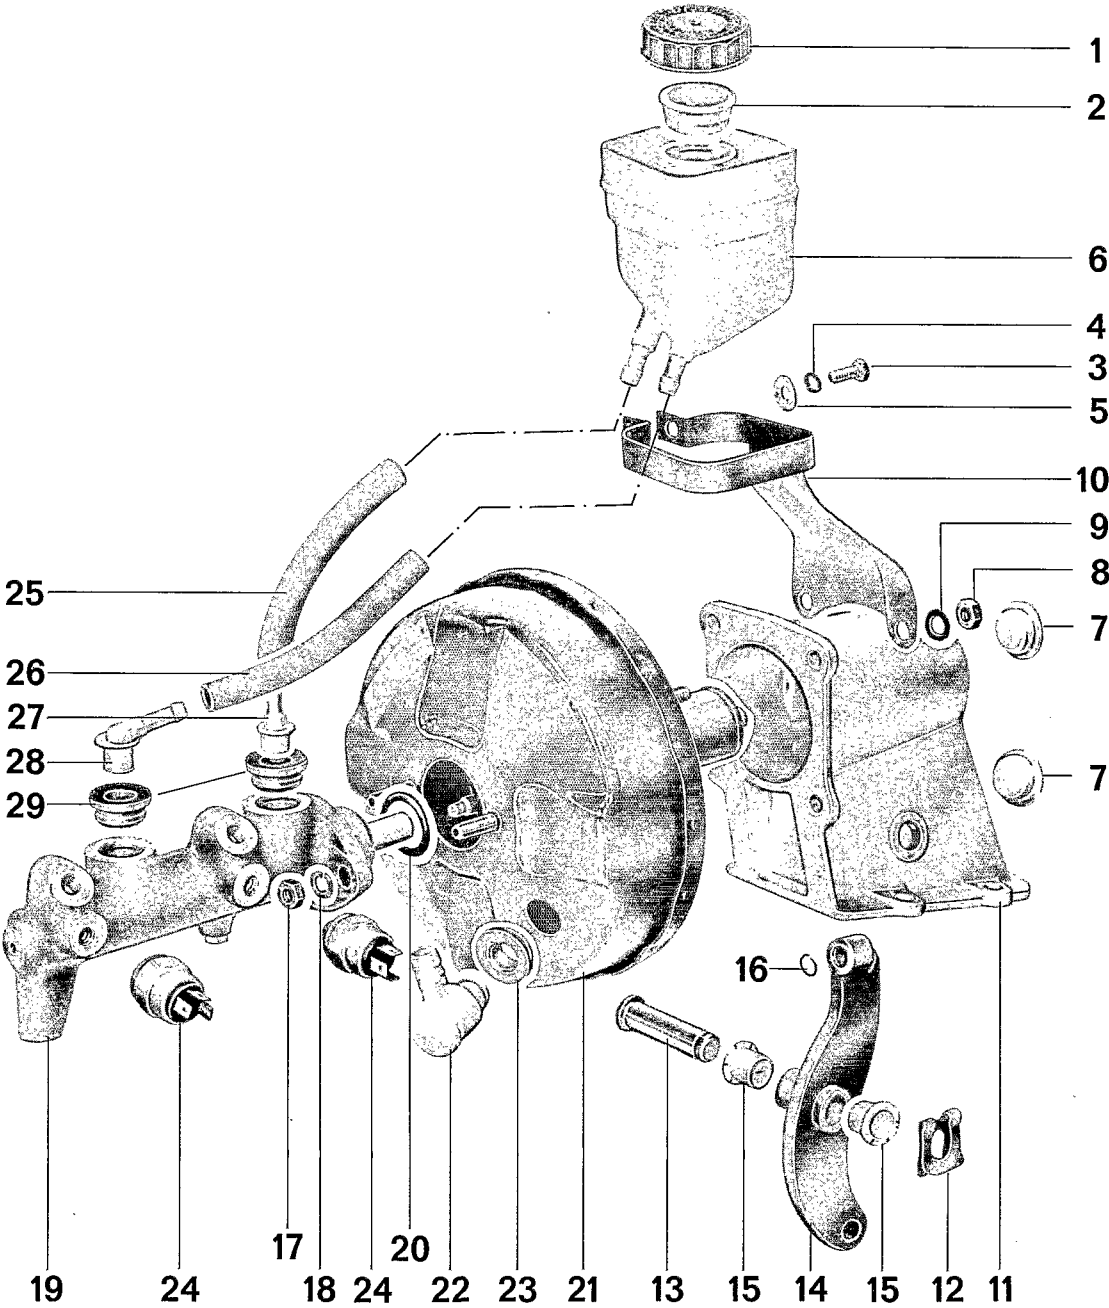

| No. | Designation | Qty. | Notes | | Remarks |
|-----|-----------------|------|---------|---|---------|
| | | | Removal | Installation | |
| 1 | Bolt cap | 1 | | | |
| 2 | Filter screen | 1 | | | |
| 3 | Hex. head screw | 1 | | Torque to specifications | |
| 4 | Lockwasher | 1 | | Replace, if necessary | |
| 5 | Washer | 1 | | | |
| 6 | Tank | 1 | | | |
| 7 | Plug | 2 | | | |
| 8 | Hexagon nut | 4 | | Torque to specifications. Not too tight! If staybolt is stretched or broken, replace brake booster. | |
| 9 | Spring washer | 4 | | Replace, if necessary | |
| 10 | Holder | 1 | | | |
| 11 | Base | 1 | | | |
| 12 | Lock | 1 | | Check for proper fit | |
| 13 | Bearing pin | 1 | | Coat with all-purpose lube containing MOS_2 | |
| 14 | Operating lever | 1 | | Coat ball socket with all-purpose lube containing MOS_2 . Make sure that piston rod fits properly. | |
| 15 | Bearing bushing | 2 | | | |
| 16 | Snap ring | 1 | | | |

| No. | Designation | Qty. | Notes | | Remarks |
|-----|------------------------|------|---------|--|---------|
| | | | Removal | Installation | |
| 17 | Hexagon nut | 2 | | Torque to specifications. Not too tight! If staybolts are stretched or broken, replace brake booster. | |
| 18 | Lockwasher | 2 | | Replace, if necessary | |
| 19 | Tandem master cylinder | 1 | | Check, if necessary repair or replace | |
| 20 | Seal | 1 | | Replace | |
| 21 | Brake booster | 1 | | Check, replace if necessary | |
| 22 | Check valve | 1 | | Check, replace if necessary | |
| 23 | Plug | 1 | | | |
| 24 | Stop light switch | 2 | | Torque to specifications | |
| 25 | Hose | 1 | | | |
| 26 | Hose | 1 | | | |
| 27 | Supply neck | 1 | | | |
| 28 | Supply neck 75° | 1 | | | |
| 29 | Plug | 2 | | | |

Checking Brake Booster

Depress and release brake pedal several times with the engine stopped to remove any vacuum out of the booster.

Now depress brake pedal to braking position with medium effort and start engine.

If the brake booster functions properly, it will be felt as the pedal gives slightly underneath the foot (booster takes effect).

Troubleshooting Chart

| Condition | Cause | Correction |
|--|---|--|
| 1 - Pedal pressure unusually high, no support from booster | a - Vacuum line connections loose | Tighten clamps |
| | b - Roller diaphragm loose | Replace booster |
| | c - Master cylinder seal leaking | Replace large seal, replace master cylinder |
| | d - Vacuum check valve malfunctions (closed always) | Check function of vacuum check valve, by blowing into valve in direction of arrow. Valve must lift off of seat. Valve must be tight against direction of arrow |
| 2 - Pedal pressure increases very much at certain pedal position | Pressure rod piston scored at one point. Once secondary cup passes this point, outside air comes into booster through vent bore | Repair or replace master cylinder |
| 3 - Pedal can be pressed to stop without braking effect Brake fluid runs out at vent bore | Cups leak | Repair or replace master cylinder |

Note

When a brake circuit fails or after repairs on the brake system, a brake warning light installed in the dashboard comes on.

After brake repairs, the brake warning light can be turned off by disconnecting the battery ground strap.

CHECKING WHEEL RIMS


Points for measuring radial and lateral runout on inside and outside shoulders of rim.

Distance "a" = 8 mm.

| | |
|---|---------|
| Max. permissible radial runout for steel rims | 1.25 mm |
| Max. permissible radial runout for aluminum rims | 1.0 mm |
| Max. permissible lateral runout for steel rims | 1.25 mm |
| Max. permissible lateral runout for aluminum rims | 0.8 mm |

Max. permissible radial and lateral runout
for rim + tire
(also refer to pages 4.1 - 1/3 and 4.1 - 1/4)

1.5 mm

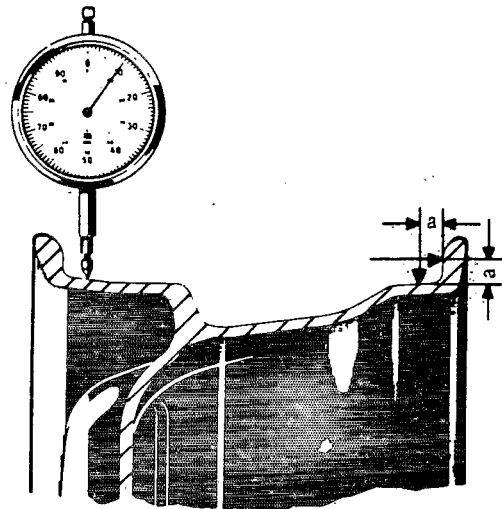

Note


Straightening of deformed rims is not permitted.

Check flanges of aluminum wheel rims for wear. The inside rim flange is more subject to wear. Check with a standard 8 mm radius gauge. If applicable, first remove sharp edges and burrs. Wear limit = 1 mm.

Replace wheel rim, if necessary.

Checking Rim Flange Shape

- New condition
- After wear
- ← Max. wear 1 mm
- 1 Radius gauge 8 mm

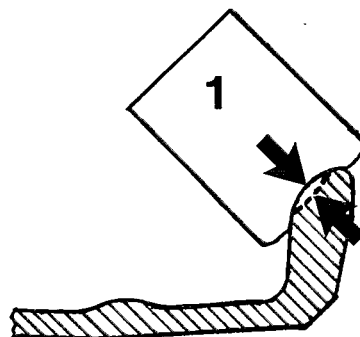

GENERAL ASSEMBLY INFORMATION ON TIRES AND TUBES

Always also use new tubes or rubber valve stems each time tires are replaced!

Tubes should only be used in "tubeless" tires in an emergency situation. It cannot be recommended to combine tires and tubes of different make. Tubes are not available for series 50 and 55 tires!

When mounting tubes with steel valve stems remember that valve core is screwed in only after inflation of the tire.

Be careful not to turn the tire valve when tightening the nut.

"Tubeless" tires may only be mounted without tubes on rims with a double hump. If this type rim is not available, this tire must also be mounted with a pertinent tube. When necessary tubeless tires can be used on an axle with tube tire as long as the make, size and type are identical.

Double hump rims (H2) were used on a general basis in the 1975 model year.

Original Porsche rims are identified by the Porsche part number in the wheel rim. Meaning of number: 901.361.xxx.xx (rim without hump) or 911.361.xxx.xx (rim with double hump), whereby x = digit for internal designation of version and paint.


Diecast rims are not always sufficiently leak-proof because of the coarser grain structure and consequently can only be used for tubeless tires when tested accordingly. From 1976 models on Porsche diecast rims are checked for leaks with a special fixture and therefore suitable for use with "tubeless" tires.

Part numbers of these rims:

| Rim Size | Untested Diecast Tires (tires with tubes) | Leak-proof Diecast Tires ("tubeless" tires) |
|----------------------|--|--|
| 6 J x 15 (silver) | 911.361.023.10 | 911.361.023.40 |
| 6 J x 15 (unpainted) | 911.361.023.14 | 911.361.023.44 |
| 7 J x 15 (silver) | 911.361.023.20 | 911.361.023.54 |

For cars, which have center pin wheel centering, we recommend always using rims with centering pins. Wheel nuts made of steel should be used on steel rims.

To prevent excessive loads on rubber tire valve stems (tube or tubeless version) caused by position of valve stem bore, 7" and 8" Porsche rims must be fitted with a valve stem support, Part No. 911, 361, 561, 00 or 01.

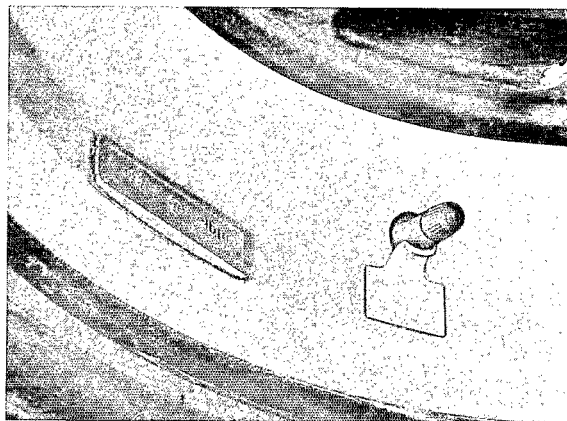

7 J x 15 diecast rims (ATS) sometimes have a special cast boss in area of the valve stem bore, so that safe support can be guaranteed without a holding plate. On rims, which have this cast boss, the wall thickness is so great at the valve stem hole that the 3 mm wide bead ring on the valve stem should not be pulled in when installing tubeless tire valves (as common on steel rims). Pulling in the valve stem bead would stretch the valve stem excessively.

Check sealing surfaces of tire and wheel rim for dirt and damage when mounting a tubeless tire. In conjunction with this point remember that the bead base of a tubeless tire provides the seal. If the bead flank is used for sealing, air could escape when driving aggressively.

Check flanges of aluminum wheel rims for wear (see page 4.1 - 1/1).

Always coat tire beads with rubber lubricant when mounting.

Apply talcum powder inside of tire in tube type.

Inflate tubeless tires to about 4 bar/58 psi after mounting without valve core to guarantee proper fit on rim. With 3.3 bar/48 psi pressure the tire bead should jump over the rim hump. Screw in valve core and inflate tire to specified pressure.

Max. permissible radial and lateral runout of wheel (tire + rim) is 1.5 mm/0.59 in. If necessary, turn tire on rim 180° (uncontrolled matching) to reach an acceptable value.

Controlled matching: align highest point of rim (not marked on 911, determine) with green dot on side wall of tire.

New tires should be used on the front axle, since

1. the rear axle is more critical over stability and
2. the front wheels must first make a track on wet roads,
in which the rear wheels can follow.

(Not possible on cars with different size tires front and rear.)

When replacing a defective tire, make sure difference in tread depth on one axle is not greater than 30 %.

BALANCING WHEELS

Max. permissible dynamic and static unbalance 5 grams.

Check radial and lateral runout of wheels when there is vibration and steering wheel shake in spite of perfect wheel suspension parts, perfect wheel centering, correctly adjusted wheel bearing play and properly balanced wheels.

Check on tires run warm (to exclude flat spots from standing) with a standard tester.

Max. permissible radial and lateral runout of wheel (tire +rim) = 1.5 mm.

Max. permissible radial and lateral runout of wheel rim = see page 4.1 - 1/1.

If testing is not performed on a stationary balancing machine, but direct on the car, a very slight lateral runout of wheel hub from manufacturing, wheel bearing play and also any error in wheel centering will be reflected in the measured value. If these factors are eliminated or compensated and the value is still greater than 1.5 mm, check whether an acceptable value can be reached by turning tire on rim 180° (uncontrolled matching).

INFORMATION ON CEMENTED WEIGHTS FOR ALUMINUM WHEEL RIMS

General


Aluminum wheel rims may only be balanced with balance weights which are cemented. The cemented type balance weights supplied by Porsche are available in steps of 10 g from 10 to 80 g.

Installation

1. Determine exact position of balance weights (if applicable first hold balance weights with pieces of tape until correct position has been determined).
2. Prepare adhesive surface on rim. Adhesive surfaces must be absolutely clean and free of grease.
3. Pull off paper backing from adhesive surface of weight and press weight on firmly.

Note

Pull off paper backing only immediately before pressing on weight, since the effect of air over a long time will impair the adhesion and there is also danger of dirt getting on the adhesive surface.

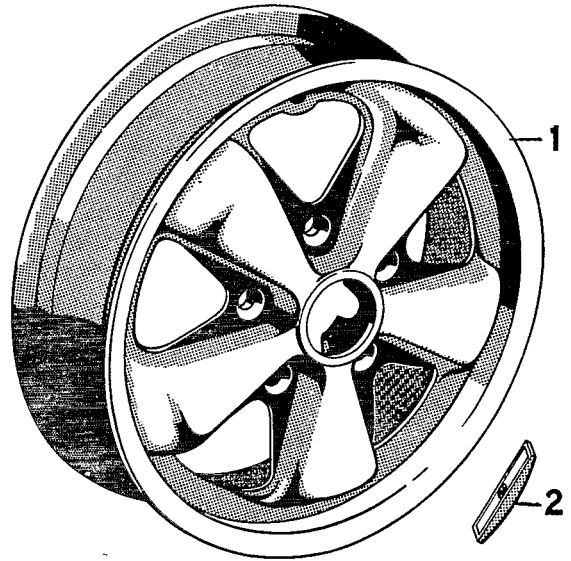

- 1 Aluminum rim
2 Adhesive balance weight

The adhesive balance weight must be located accurately on the flat surface of the rim. It must rest uniformly on the entire bearing surface. For rims of size 5 1/2 J x 14 the adhesive weights must be contoured to the rim with a plastic hammer to match the smaller radius (prior to pulling off the green paper backing).



4. Check tight fit of balance weight after trial run on a balancing machine.
The newly installed balance weight must not become loose from the rim when load is applied transversely to it.

Note

Adhesive weights may only be installed on the outside of 5 1/2 J x 14 aluminum hole-type wheel rims. Weights with spring clips must be used on the inside of these rims (as for steel hole-type rims).

From 1973 models on 5 1/2 J x 15 steel rims have tire valve holding sleeves instead of spring clips. The sleeve is fitted from inside of the rim and held in position by the tube or valve stem. This sleeve can also be used subsequently on older models.

COLLAPSIBLE SPARE TIRE

A spare wheel with a collapsible tire is used in cars with a 85 liter fuel tank to save space.

From 1974 models on a 80 liter steel tank and a collapsible tire/wheel are standard in all models.

Rim size 5 1/2 J x 14, tire size 7.35/185 - 14 SST or from 1973 models on.

Rim size 5 1/2 J x 15, tire size 165 - 15/4, 75/10.00 - 15 SST


When required the tubeless tire may be inflated to only 2.2 bar/32 psi. The tire will return to its original shape when discharging the air from the collapsible tire.

A collapsible tire cannot be repaired or mounted with conventional workshop equipment. Only the manufacturer should perform work on the collapsible tire/wheel.

This collapsible tire/wheel is only for an emergency situation and should not be used for long driving. The max. permissible speed with this wheel is 80 km/h (50 mph).

Replacing:

Only new version collapsible tires/wheels will be available after depletion of old stocks. Label on rim has been changed. Part number of collapsible tire/wheel remains unchanged.

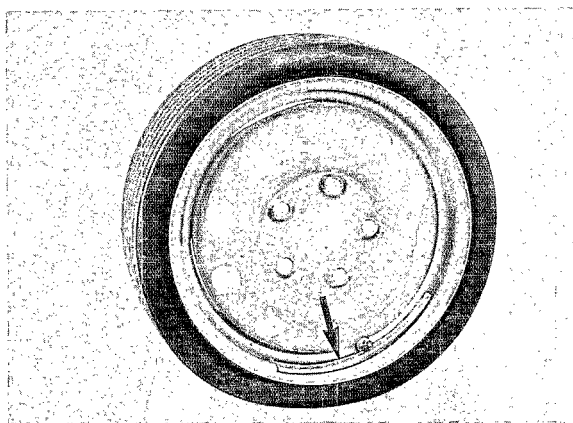

SURVEY OF WHEEL RIMS AND TIRES - from 1972 Models

| Type | Standard Rim | Tire | Optional Equipment | |
|-------|----------------------|--------------|--------------------|--------------|
| | | | Rim | Tire |
| 911 T | St. 5 1/2 J x 15 | 165 HR 15 | 5 1/2 J x 15 LMg | 185 HR 15 |
| 911 E | Mod. 72 St. 6 J x 15 | 185/70 VR 15 | 6 J x 15 St | 185/70 VR 15 |
| | Mod. 73 LMg 6 J x 15 | | 6 J x 15 LMgs | 185/70 VR 15 |
| 911 S | LMgs 6 J x 15 | 185/70 VR 15 | | |

SURVEY OF WHEEL RIMS AND TIRES - from 1974 Models

| Type | Standard Rim | Tire | Optional Equipment | |
|---------|---------------------|--------------|--------------------|--------------|
| | | | Rim | Tire |
| 911 | St. 5 1/2 x 15 | 165 HR 15 | 6 J x 15 LMgs | 185/70 VR 15 |
| 911 S | LMg 6 J x 15 | 185/70 VR 15 | 6 J x 15 LMgs | 185/70 VR 15 |
| Carrera | Front LMgs 6 J x 15 | 185/70 VR 15 | | |
| | Rear LMgs 7 J x 15 | 215/60 VR 15 | | |

| | |
|------|---------------------|
| LMg | Cast aluminum rim |
| LMgs | Forged aluminum rim |
| St | Painted steel rim |

Winter tires and tire inflation values same as for 1975 models, see page 4.1 - 1/8.

SURVEY OF WHEEL RIMS AND TIRES - from 1975 Models

| Type | Standard Rim | Tire | Optional Equipment | |
|---------|---------------------|--------------|--------------------|--------------|
| | | | Rim | Tire |
| 911 S | LMg 6 J x 15 | 185/70 VR 15 | LMgs 6 J x 15 | 185/70 VR 15 |
| Carrera | Front LMgs 7 J x 15 | 185/70 VR 15 | | |
| | Rear LMgs 8 J x 15 | 215/60 VR 15 | | |

Winter Tires *

| Tire | Rim |
|-----------------|--------------|
| 165 R 15 M+S | 5 1/2 J x 15 |
| 185/70 R 15 M+S | 5 1/2 J x 15 |
| | 6 J x 15 |

Inflation Pressure for Cold Tires:

| | |
|-------|----------------|
| Front | 2.0 bar/29 psi |
| Rear | 2.4 bar/35 psi |
| Spare | 2.2 bar/32 psi |

| | |
|------|---------------------|
| LMg | Cast aluminum rim |
| LMgs | Forged aluminum rim |
| St | Painted steel rim |

* SR or HR version

WHEELS AND TIRES - from 1976 Model

| Type | Standard Wheel | Tire | Optional | |
|-------|----------------|--------------|--|------------------------------|
| | | | Wheels (check fender clearance and position of wheels in wheel housings) | Tires |
| 911 S | LMg 6 J x 15 | 185/70 VR 15 | LMgs 6 J x 15 | 185/70 VR 15 |
| | | | front 6 J x 15 rear 7 J x 15 | 185/70 VR 15 |
| | | | front 7 J x 15 rear 7 J x 15 | 185/70 VR 15 |
| | | | front 6 J x 15 rear 7 J x 15 | 185/70 VR 15 215/60 VR 15 |
| | | | front 7 J x 15 rear 8 J x 15 | 185/70 VR 15 215/60 VR 15 |
| | | | | |

LMg = cast light alloy

Winter Tires *

| Tires | Wheels Type 911 S |
|-----------------|--------------------------|
| 165 R 15 M+S | 5 1/2 J x 15 |
| 185 R 14 M+S | 5 1/2 J x 14 |
| 185/70 R 15 M+S | 5 1/2 J x 15 6 J x 15 |

Cold Tire Pressure

front 2.0 bar/28 psi
 rear 2.4 bar/34 psi
 spare wheel 2.2 bar/31 psi

* = SR or HR version

WHEELS AND TIRES - from 1978 Model

| Type | Standard Wheels | Tires | Optional | |
|--------|-----------------|--------------|----------------|--------------|
| | | | Wheels | Tires |
| 911 SC | front 6 J x 15 | 185/70 VR 15 | front 6 J x 16 | 205/55 VR 16 |
| | rear 7 J x 15 | 215/60 VR 15 | rear 7 J x 16 | 225/50 VR 16 |

Winter Tires *

| Tires | Wheels |
|-----------------|-----------------|
| 185 R 14 M+S | 5 1/2 J x 14 |
| 185/70 R 15 M+S | 6 J x 15 |
| | 7 J x 15 |
| | 6 J x 15 front/ |
| | 7 J x 15 rear |
| 205/55 R 16 M+S | 6 J x 16 |
| | 6 J x 16 front/ |
| | 7 J x 16 rear |

Cold Tire Pressure:

front 2.0 bar/28 psi
 rear 2.4 bar/34 psi
 spare wheel 2.2 bar/31 psi

Hebelwerk
Pedal System and Levers
Pédalier et Leviers
Pedaleria e Leve

7

7

7

7

7

7

7

7

7

7

CONTENTS

0 - INFORMATION, DESCRIPTION, TECHNICAL DATA

0.0 Information

0.1 Description

0.2 Technical Data

Tightening Torques

0.2 - 2/1

1 - MANUAL CONTROLS

1.1 Gear Shift Linkage in Manual Transmission

Gear Shift Linkage, disassemble and reassemble

1.1 - 1/1

Gear Shift Linkage, adjust

1.1 - 2/1

Notes for Disassembly and Reassembly

1.1 - 1/5

Gear Shift Linkage, disassemble and reassemble, from 1973-model

1.1 - 1/7

Instructions for Disassembly and Reassembly

1.1 - 1/11

1.2 Heater and hand throttle controls from 1975 models

Dismantling and assembling heater and hand throttle controls

1.2 - 1/1

Removing and installing heater and hand throttle controls

1.2 - 1/3

Adjusting heater controls

1.2 - 1/6

Adjusting hand throttle control

1.2 - 1/7

Heater Blower Switch, remove and install

1.2 - 1/8

2 - PEDAL CONTROLS

2.1 Pedal Controls

Pedal Controls, disassemble and reassemble

2.1 - 1/1

Notes for Disassembly and Reassembly

2.1 - 1/6

Disassembly and Reassembly of Pedal Controls 1974 Models

2.1 - 1/7

Instructions for Disassembly and Reassembly

2.1 - 1/12

Adjusting Clutch

2.1 - 2/1

Adjusting Clutch from 1977 Models (with Servo Clutch on Transmission)


2.1 - 2/3

TIGHTENING TORQUES FOR MANUAL AND PEDAL CONTROLS


| Location | Designation | Thread | Grade | mkp |
|---|-------------------|--------|------------|-----|
| Support bracket to shift lever housing | Bolt | M 6 | 8.8 | 0.6 |
| Shift lever housing to center tunnel | Allen bolt | M 8 | 8.8 | 2.1 |
| Set screw in shift rod head | Taper screw | M 8 | 8.8 | 1.5 |
| Set screw in shift rod coupling | Taper screw | M 8 | 8.8 | 1.5 |
| Clamp bolt | Bolt | M 8 | 8.8 | 2.5 |
| Parking brake, heater, and throttle support bracket to body | Bolt | M 8 | 8.8 | 2.1 |
| Set screw in throttle control rod | Pointed set screw | M 5 | 8.8 | 0.2 |
| Parking brake switch to support bracket | Countersunk screw | M 4 | 5.8 | 0.1 |
| Throttle pedal to body | Bolt | M 6 | 8.8 | 0.6 |
| Pedal assembly support bracket to body | Nut | M 8 | 8.8 | 2.5 |
| Throttle shaft attachment | Nut | M 6 | 6.6 | 0.5 |
| Ball socket lock nut | Nut | M 5 | St 34-2K/8 | 0.3 |

DISASSEMBLING AND ASSEMBLING SHIFT LEVER ASSEMBLY

TOOLS

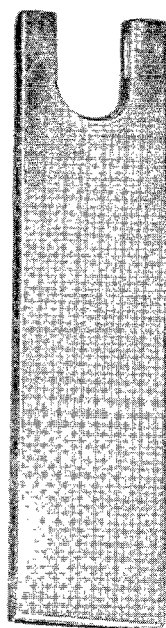


1

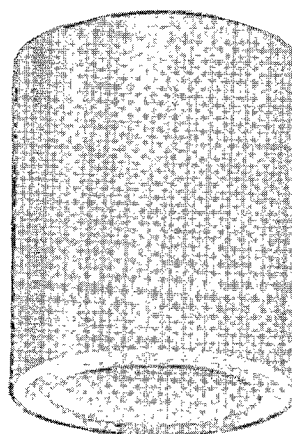

2

| Nr. | Description | Special Tools | Remarks |
|-----|----------------|---------------|----------------------|
| 1 | Assembly lever | | Locally manufactured |
| 2 | Installer | P 299 | |

DISASSEMBLING AND ASSEMBLING SHIFT LEVER ASSEMBLY

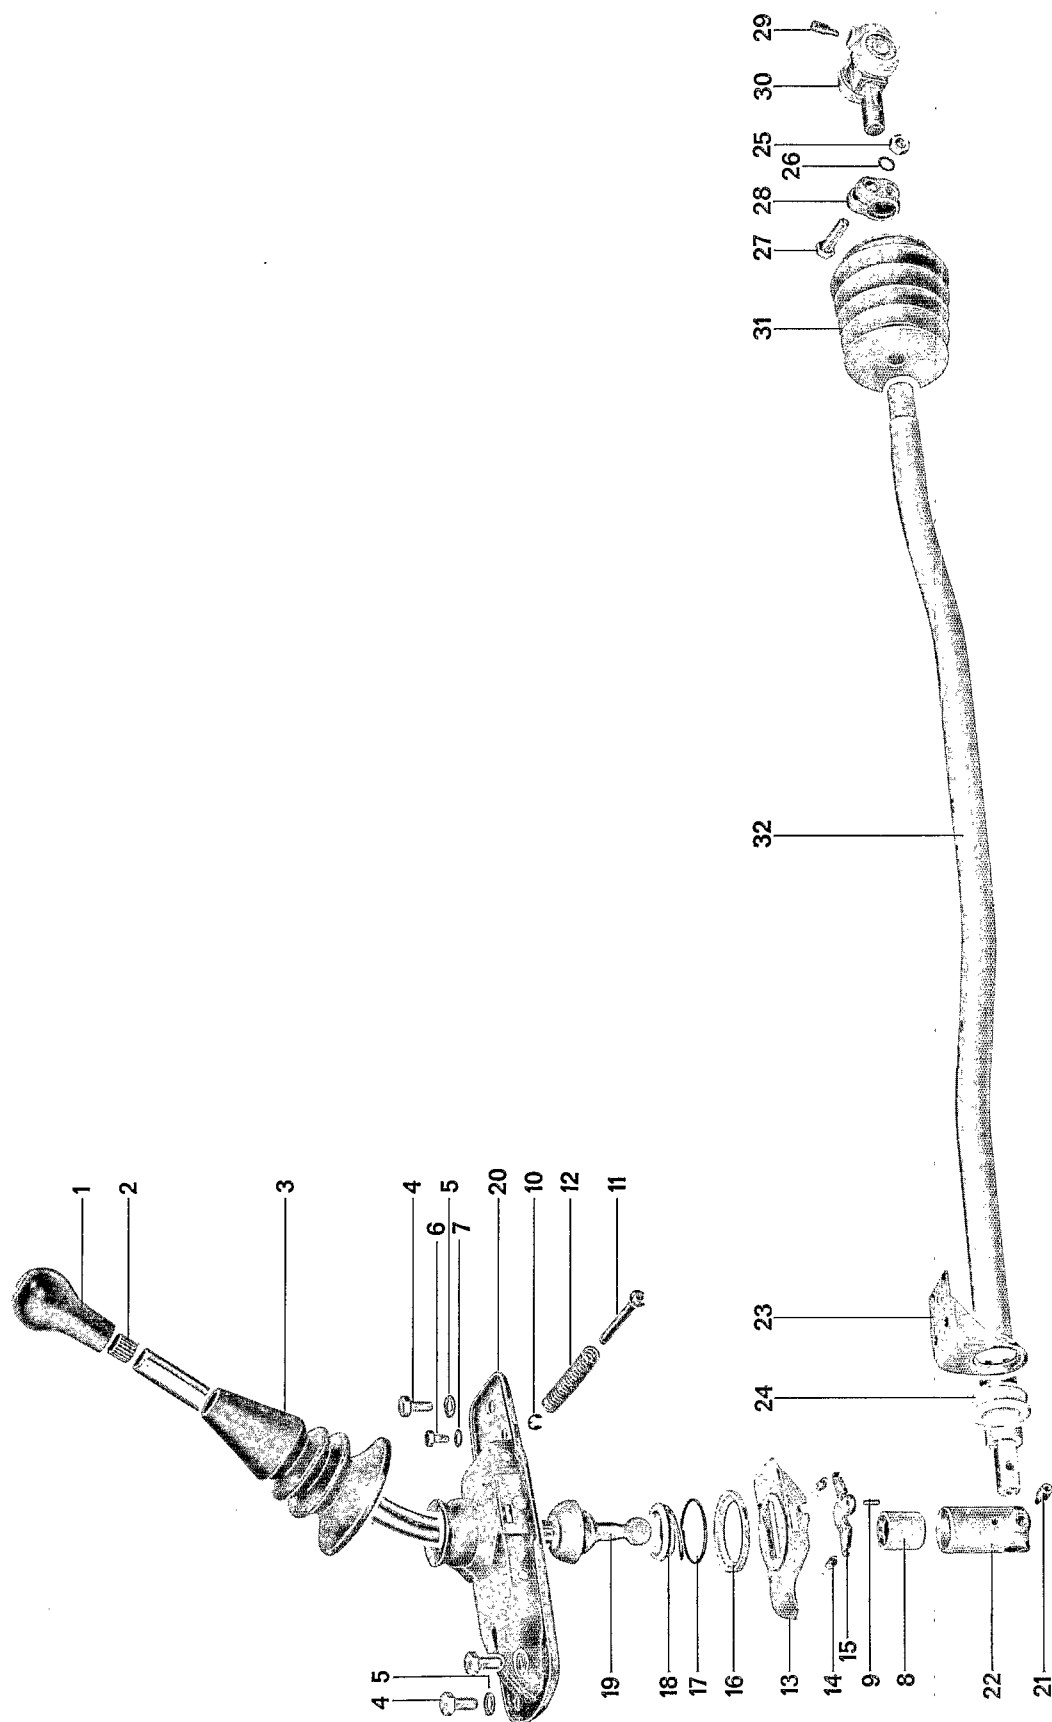

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|---------------------------|-----|-----------------------|---|--------------------------|
| | | | removing | installing | |
| 1 | Shift knob | 1 | | | |
| 2 | Shift knob retaining ring | 1 | | Replace. | |
| 3 | Dust boot | 1 | | | |
| 4 | Bolt, M8 | 3 | | | |
| 5 | Lock washer | 3 | | Replace. | |
| 6 | Bolt, M6 | 2 | | | |
| 7 | Spring washer | 2 | | | |
| 8 | Ball socket | 1 | | Use multipurpose grease with molybdenum additive. | |
| 9 | Pin, 30 x 10 | 1 | Drive out with punch. | Replace if necessary. | |
| 10 | Snap ring | 4 | | Replace. | |
| 11 | Guide pin | 2 | | | |
| 12 | Spring | 2 | | | |
| 13 | Stop plate | 1 | | Use multipurpose grease with molybdenum additive. | |
| 14 | Lock pawl return spring | 2 | | | |
| 15 | Lock pawl | 1 | | Use multipurpose grease with molybdenum additive. | |
| 16 | Spring seat, lower | 1 | | Use multipurpose grease with molybdenum additive. | |
| 17 | Spring | | | | |
| 18 | Spring seat, upper | 1 | | Use multipurpose grease with molybdenum additive. | |
| 19 | Gearshift lever | | | | |
| 20 | Support plate | 1 | | | |
| 21 | Tapered bolt | 1 | | | |
| 22 | Shift rod joint | 1 | | Coat inner side with multipurpose grease. | |
| 23 | Guide bracket | 1 | | | |
| 24 | Bushing | 1 | | | |
| 25 | Nut, M8 | 1 | | | |


| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|--------------------|-----|------------------------|------------|-----------------------------|
| | | | removing | installing | |
| 26 | Serrated washer | 1 | Replace. | | |
| 27 | Bolt, M8 x 32 | 1 | | | |
| 28 | Clamping bolt | 1 | | | |
| 29 | Tapered bolt | 1 | | | |
| 30 | Shift rod coupling | 1 | | | |
| 31 | Dust boot | 1 | | | |
| 32 | Shift rod | 1 | Lubricate pivot point. | | |

DISASSEMBLING AND ASSEMBLING SHIFT LEVER ASSEMBLY


Disassembling

1. Clamp the shift lever into a vice equipped with soft jaws. Drive off shift knob using the self-made tool. See illustrations.

Drawing for self-made tool

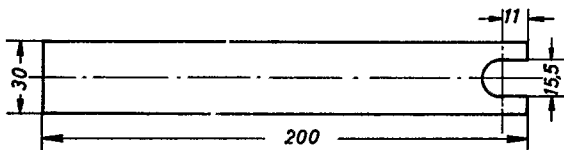

1/4 inch flat stock, all edges rounded off.

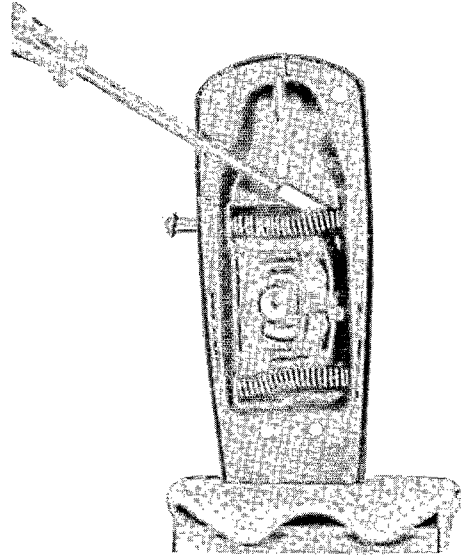


Assembling

2. Pull retaining ring out of shift knob with a hook.
3. Remove shift boot. Pry plastic ball socket off shift lever with a screwdriver.
4. Clamp shift lever mounting bracket into vice.
5. Push lower spring seat on the shift lever compression spring until the spring is seated.
6. Coat the lower part of the shift lever well with Molykote or similar lubricant. Insert lever into shift bracket.


Caution

Use care when removing the guide pin springs. They are under tension and may fly out. Cover the springs with a rag. Remove the guide pin snap springs. Remove the guide pin springs one at a time.

5. Remove remaining parts.

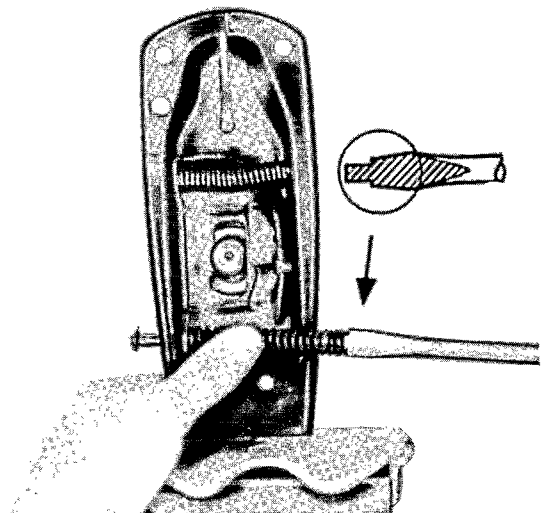

3. To install the guide pin springs:
 - a. Position the stop plate to the shift bracket of the guide pins.
 - b. Insert the second guide pin with snap ring at an angle.
Slip the spring over the pin.
 - c. Carefully push one end of the spring into the cutout. Align the spring and push the pin in completely.
 - d. Install the spring on the other guide pin in the same way.

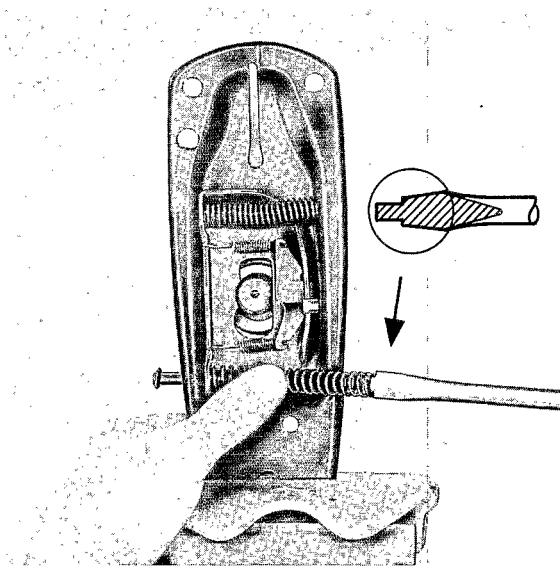

4. Slide on the shift boot.
5. Insert new retaining ring into shift knob (as far as the stop).
6. Place shift knob on lever so that the shift pin is in the correct position. Install using special tool P 299.


GEAR SHIFT ASSEMBLY EFFECTIVE WITH 1973 MODELS

General

Beginning with the 1973 models, a new pressure-cast shift lever housing is installed in all Type 911 vehicles equipped with a 5-speed transmission.

This shift lever housing can also be installed in older vehicles from 1972 model year on.

DISASSEMBLY AND REASSEMBLY

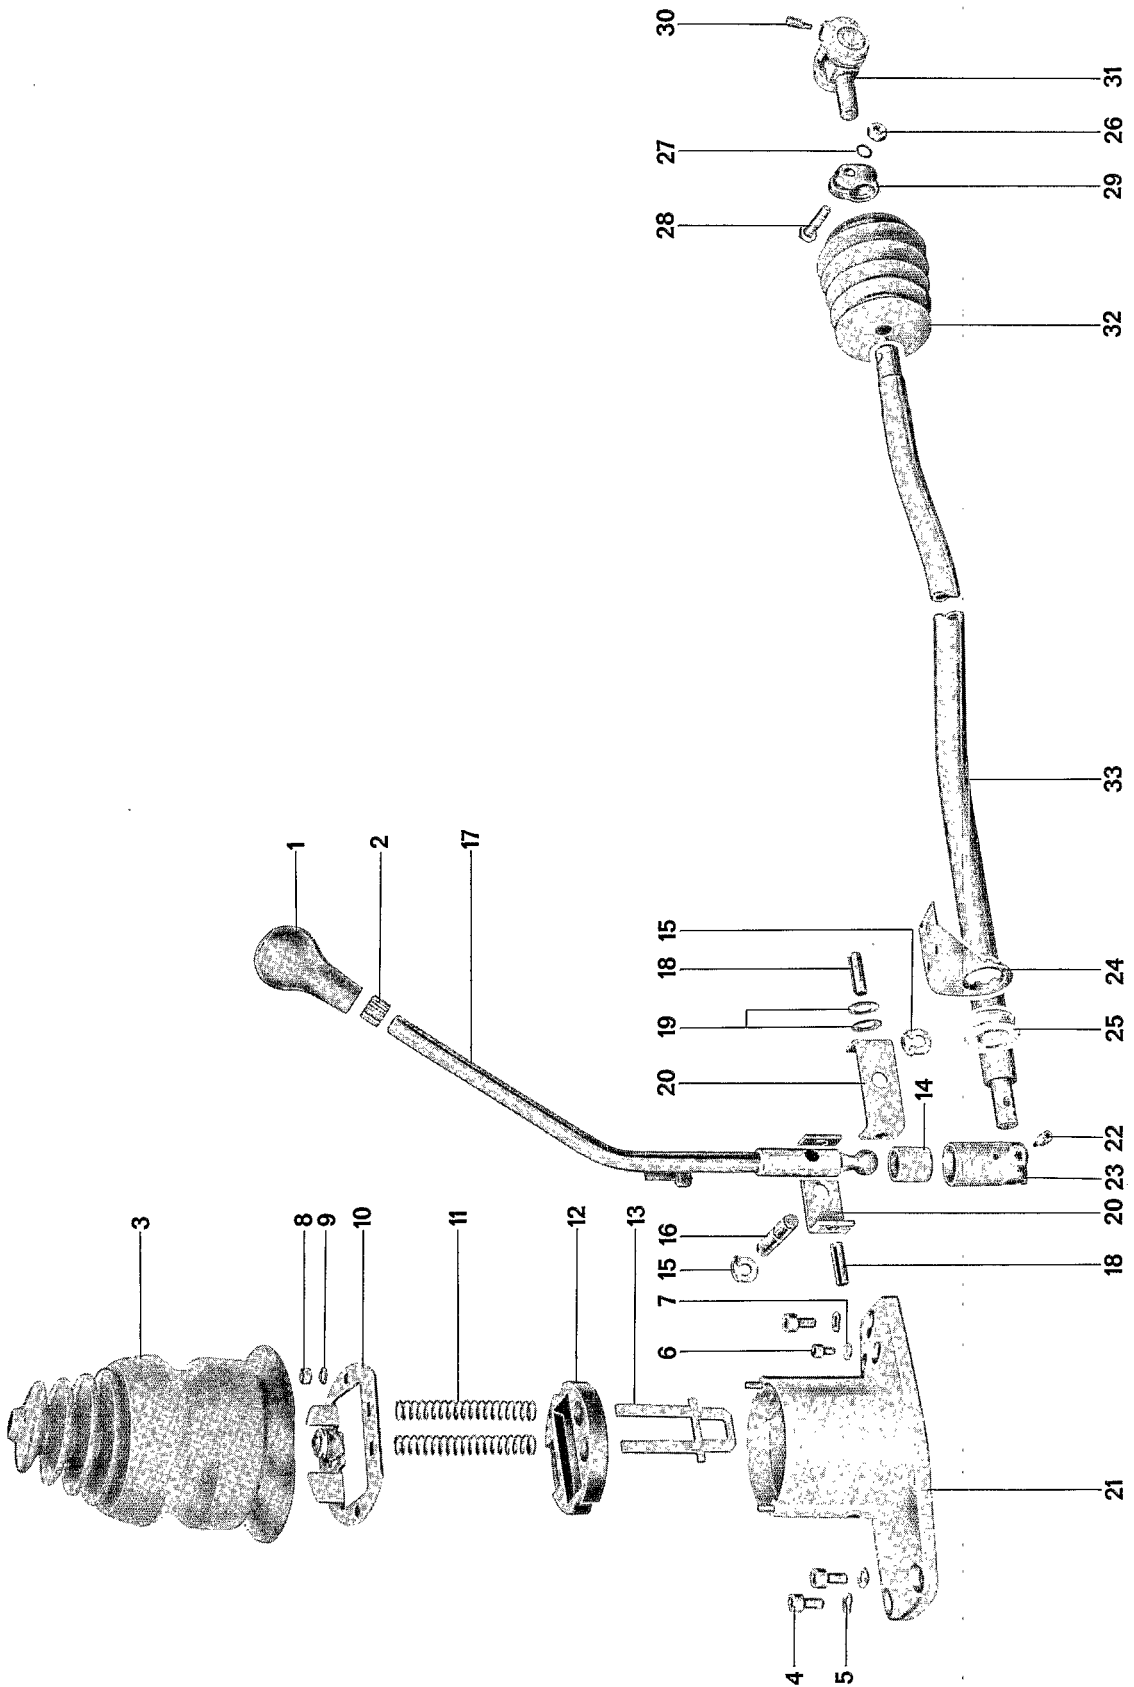

| Nr. | Description | Qty | Note when: | | Remarks |
|-----|--|-----|--|---|------------|
| | | | removing | installing | |
| 1 | Shift knob | 1 | | | |
| 2 | Interference sleeve | 1 | | Replace | |
| 3 | Dust boot | 1 | | | |
| 4 | Allen bolt, M8x20 | 3 | | | |
| 5 | Spring washer | 3 | | Replace | |
| 6 | Allen bolt, M6x20 | 2 | | | |
| 7 | Spring washer | 2 | | Replace | |
| 8 | Nut, M 6 | | | | |
| 9 | Lock washer | 2 | | | |
| 10 | Lock pawl carrier plate with lock pawl | 1 | | Apply MoS ₂ multi-purpose grease | |
| 11 | Spring | 2 | | | |
| 12 | Buffer plate | 1 | | | |
| 13 | Guide plate | 1 | | Apply MoS ₂ multi-purpose grease | |
| 14 | Ball socket | 1 | | Apply MoS ₂ multi-purpose grease | |
| 15 | Lock ring | 2 | | Replace if necessary | |
| 16 | Pivot pin | 1 | Check for wear | Apply MoS ₂ multi-purpose grease | |
| 17 | Gear shift lever | 1 | | Apply MoS ₂ multi-purpose grease in the pivot area | |
| 18 | Roll pin | 2 | Drive out with punch | Replace if necessary. Install flush with shift lever housing | |
| 19 | Spacer | X | Note number of shims and their thickness | If necessary, redetermine required number and thickness | 1.1 - 1/11 |

| Nr. | Description | Qty | Note when: | | Remarks |
|-----|---------------------|-----|------------|---|---------|
| | | | removing | installing | |
| 20 | Fork | 2 | | Apply MoS ₂ multi-purpose grease to friction points | |
| 21 | Shift lever housing | 1 | | | |
| 22 | Set screw | 1 | | | |
| 23 | Shift rod head | 1 | | Apply MoS ₂ multi-purpose grease to the inner surfaces | |
| 24 | Support bracket | 1 | | | |
| 25 | Bearing bush | 1 | | | |
| 26 | Nut, M 8 | 1 | | | |
| 27 | Schnorr lock washer | 1 | | Replace | |
| 28 | Bolt, M 8 x 32 | 1 | | | |
| 29 | Clamp | 1 | | Torque to specification | |
| 30 | Set screw | 1 | | | |
| 31 | Shift rod coupling | 1 | | | |
| 32 | Dust boot | 1 | | | |
| 33 | Shift rod | 1 | | Apply MoS ₂ multi-purpose grease to friction points | |


INSTRUCTIONS FOR DISASSEMBLY AND REASSEMBLY

Disassembly


1. Remove shift knob (see 1.1 - 1/5).
5. Take guide plate out of the shift lever housing through the top.

2. Mount shift lever housing in a vise.


3. Remove both lock pawl carrier plate retaining nuts (M 6).

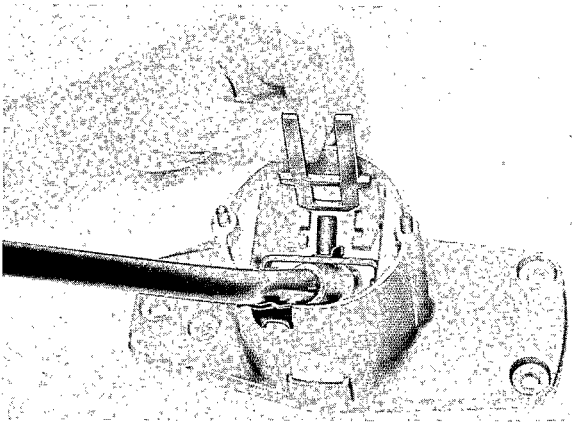

4. Open the vise slowly, holding the lock pawl carrier plate with one hand.

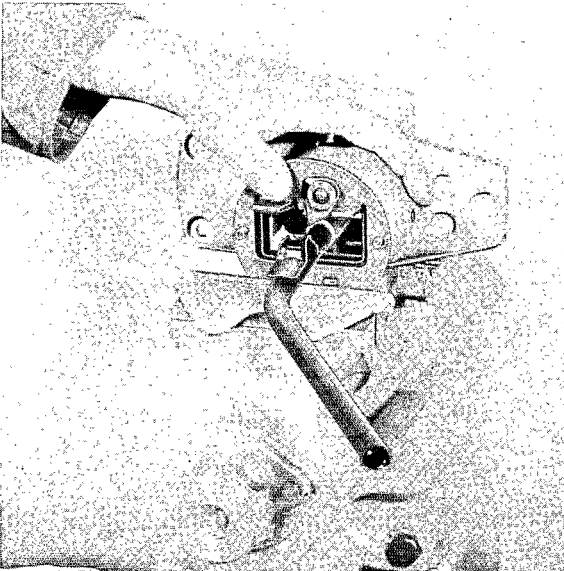

6. Remove lock rings from pivot pin with a screwdriver and pull pivot pin out of the shift lever housing.

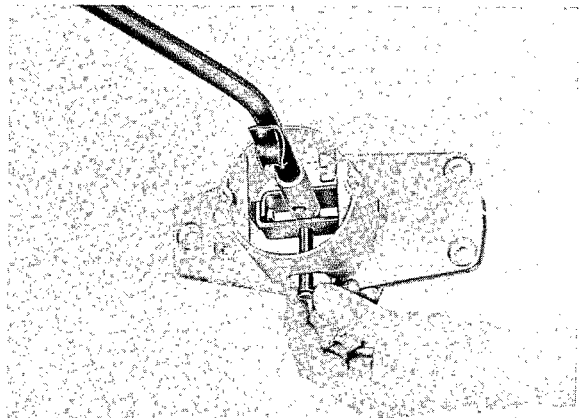
**Caution:**

The springs are under strong pressure and can cause the lock pawl carrier plate to snap out.

7. Take gear shift lever out of the housing.

Reassembly


1. Install gear shift lever, with forks and pin in place, into the shift lever housing.
2. Insert spacers. Select the spacers to achieve a clearance of 0 to 0.1 mm between the forks and housing.

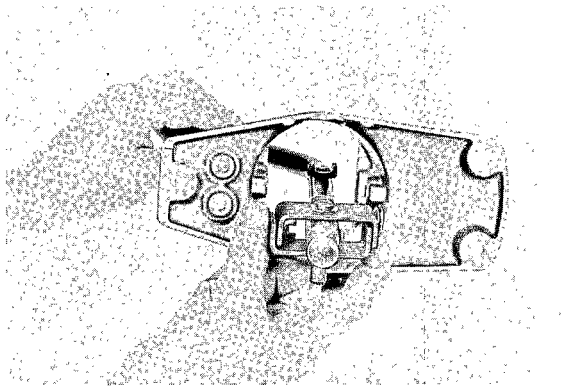

3. When installing the lock pawl carrier plate, place the lower part of the shift lever in the vise.
Use vise jaw covers.
4. Firmly press the lock pawl carrier plate down onto the shift lever base and tighten the M 6 retaining nuts.

Caution:


The springs are under heavy pressure and can cause the lock pawl carrier plate to snap out.

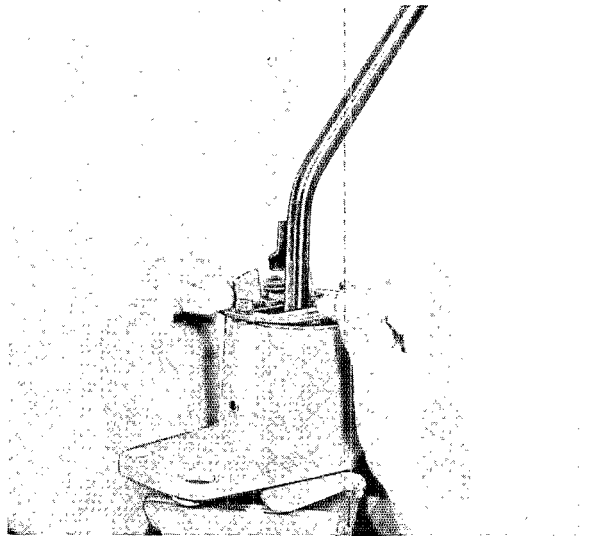

5. Place gear shift knob onto the shift lever and drive it into place with special tool P 299.
6. Install gear shift lever assembly in vehicle and adjust (see 1.1 - 2/1).

ADJUSTING GEARSHIFT LINKAGE

1. Loosen shift rod clamp. Turn shift rod for selector shaft to the right in neutral position (seen in direction of driving).

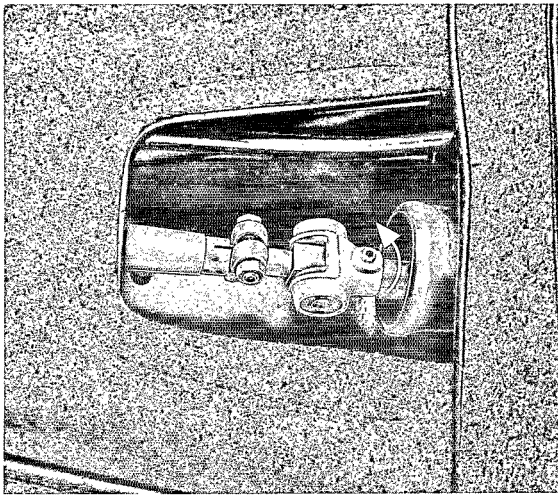


3. Lightly tighten the shift rod clamp.

4. Check if equally long travel is evident in gears 1 thru 4, and 5th and reverse gears can be easily engaged. Correct the adjustment if necessary.

5. Torque clamp nut to specification.

6. Shift into 5th gear. With the dust boot at the shift rod coupling pushed back, check selector shaft for rotational play. A definite amount of play must be in evidence.

2. Move gearshift lever in neutral to the point where the lower part of the shift lever is positioned vertically and touching the left stop.


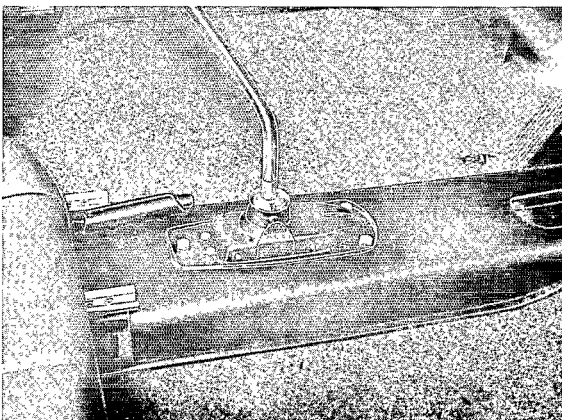


DISMANTLING AND ASSEMBLING HEATER AND HAND THROTTLE CONTROLS (from 1975 Models)

General Notes

The hand throttle and heater controls are located on the parking brake holder. The heater is regulated by two control levers infinitely, on the left and right sides of the vehicle.

DISMANTLING AND ASSEMBLING

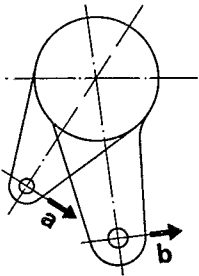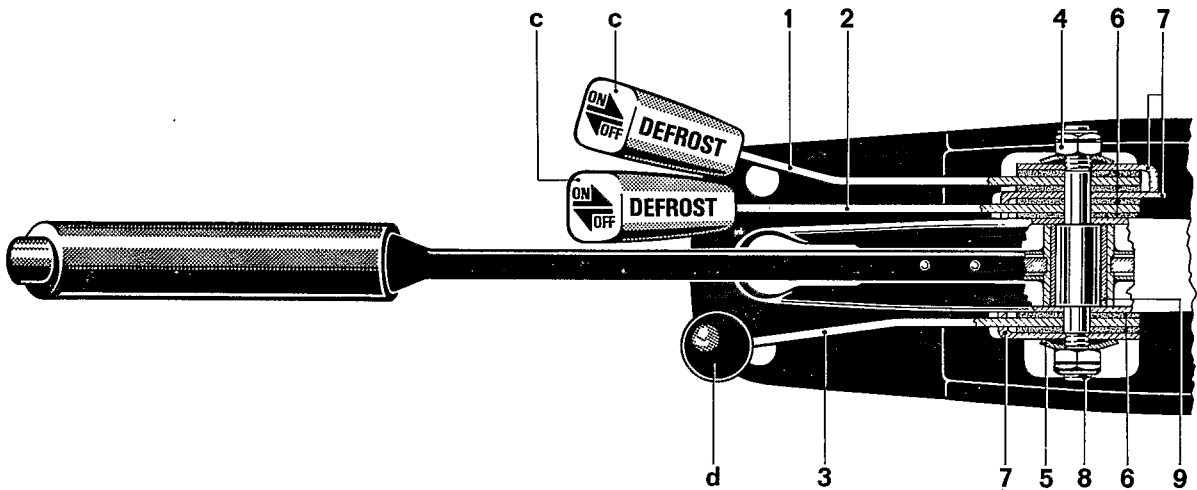



- | | |
|-------------------------------|-----------------|
| 1 Heater control lever, right | 6 Friction disc |
| 2 Heater control lever, left | 7 Disc |
| 3 Hand throttle control lever | 8 Shaft |
| 4 Nut, self-locking | 9 Spacer |
| 5 Spring disc | |

- a Release pressure for heater control friction clutch: 10 kp
 b Release pressure for hand throttle control friction clutch: 6 kp
 c Heater control knob (press fit)
 d Hand throttle control knob (press fit)

REMOVING AND INSTALLING HEATER AND HAND THROTTLE CONTROLS


Removing

1. Disconnect heater cables at rotary valves of heater body (underneath vehicle).
2. Remove tunnel cover and parking brake boot.
3. Remove parking brake base screws.
4. Remove hand throttle lever self-locking nut. Remove friction disc and discs. Disconnect hand throttle lever.
5. Lift parking brake base to unlock and pull out cable pin.
6. Disconnect wire connector at operating segment of parking brake indicator lamp. Remove parking brake base with heater cables.

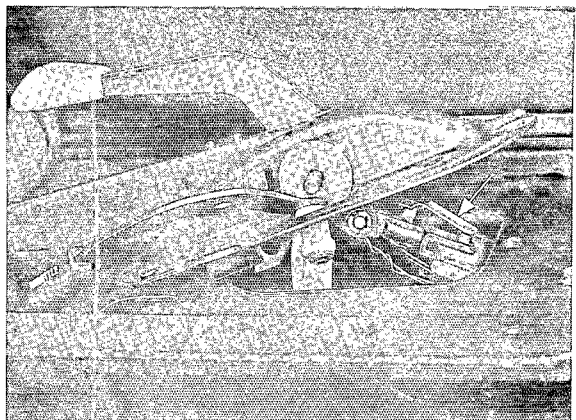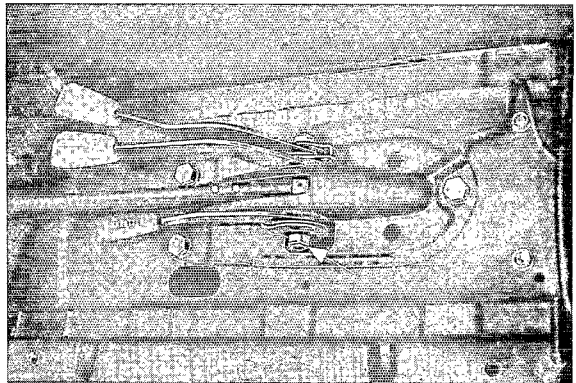

Caution

If the parking brake base cannot be lifted high enough to disconnect cable, disconnect the parking brake compensator.

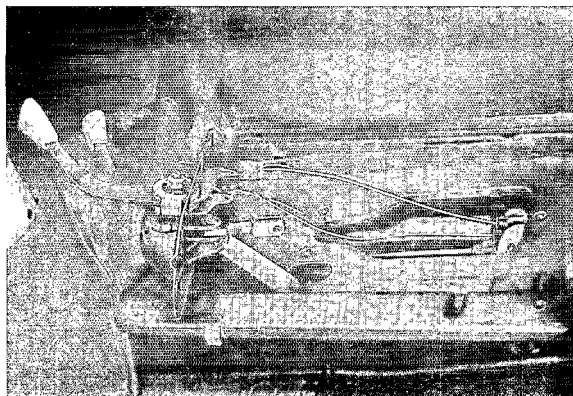

Installing

1. Pull heater cables into heater control lever. The longer heater cable is connected to left heater control lever.


2. Slide heater flap cables into guide tubes. Lubricate cables at the same time with a multi-purpose grease. Make sure that heater flap cables do not tangle.

3. Install and lock parking brake compensator (apply multi-purpose grease).

Caution

Make sure that parking brake cables are located properly.

4. Connect wire connector to operating segment of parking brake indicator lamp.

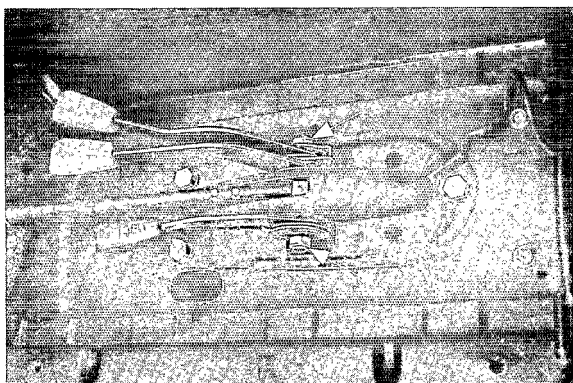

5. Connect hand throttle lever at parking brake base and throttle linkage. Install parking brake base on center tunnel.
6. Secure hand throttle lever. Tighten self-locking nut until hand throttle lever will not return on its own when throttle is fully pulled out.

7. Check hand throttle position (refer to page 1.2 - 1/7).
8. Connect heater cables to rotary valves at heater body. Install grommets on guide tubes.
9. Check heater flap settings (refer to page 1.2 - 1/6).


Replacing heater and hand throttle control knobs

Drive knobs off heater and hand throttle control levers with a piece of wood, or similar.


Drive knobs on with a plastic hammer.

Caution

Do not damage knobs.

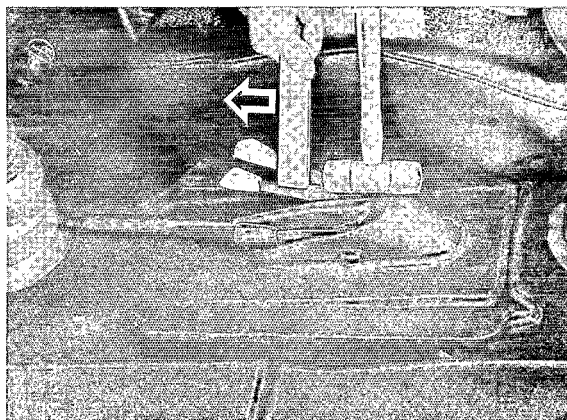

ADJUSTING HEATER CONTROLS

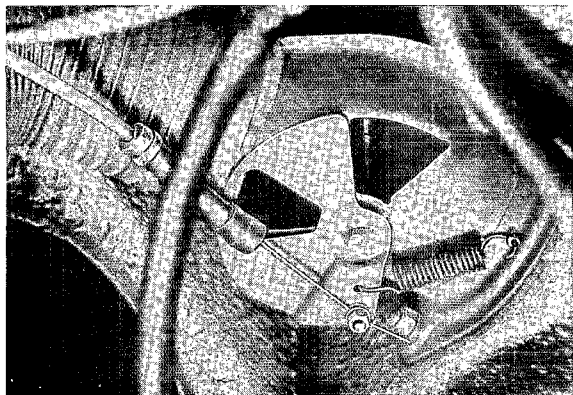

1. Move both heater control levers to front stop, slide to "off" position and tighten left and right heater cables to rotary valves underneath vehicle.
 2. Heater flap valves must be fully open.
 3. Check function of heater flaps. Heater flaps and rotary valves must open and close completely when operated.
 4. Tighten self-locking nut of heater controls so that lever does not return on its own when heater is on. On the other hand, the levers should not be too hard to move.
-


ADJUSTING HAND THROTTLE CONTROL

1. Remove tunnel cover and parking brake base cuff.
2. With a warm engine (approx. 80° C) and the hand throttle control lever pulled out completely, the engine speed must be between 3500 and 3800 rpm.

Caution

Do not race engine.

3. The hand throttle control adjustment can be corrected on the accelerator linkage nipple in the vehicle's tunnel.

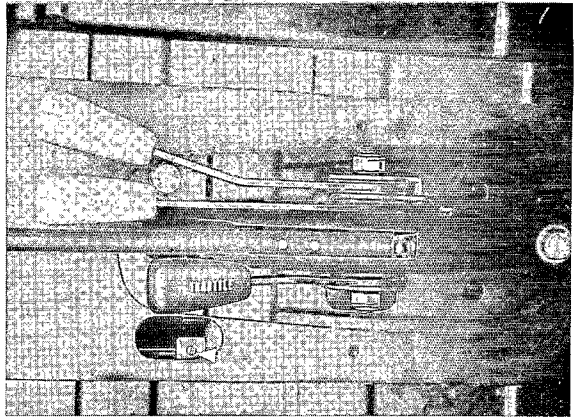

PEDAL CONTROLS

General

The clutch and brake pedals are mounted on a common clutch pedal shaft which is attached to the support fixture.

The support fixture is bolted to the floor and brake master cylinder attachment to the brake master cylinder is by two studs which extend through the transverse panel.

The throttle pedal cross-shaft rides in bushings mounted in the support fixture. The throttle pedal is fastened to the floor by two M 6 bolts.

This diagram illustrates the exploded view of a motorcycle engine assembly, showing the relationship between various components. The parts are numbered as follows:

- 1**: Upper cylinder head
- 2**: Upper cylinder head gasket
- 3**: Upper cylinder head bolt
- 4**: Upper cylinder head cover
- 5**: Upper cylinder head cover gasket
- 6**: Upper cylinder head cover bolt
- 7**: Upper cylinder head cover nut
- 8**: Upper cylinder head cover gasket
- 9**: Upper cylinder head cover gasket
- 10**: Upper cylinder head cover gasket
- 11**: Upper cylinder head cover gasket
- 12**: Upper cylinder head cover gasket
- 13**: Upper cylinder head cover gasket
- 14**: Upper cylinder head cover gasket
- 15**: Upper cylinder head cover gasket
- 16**: Upper cylinder head cover gasket
- 17**: Upper cylinder head cover gasket
- 18**: Upper cylinder head cover gasket
- 19**: Upper cylinder head cover gasket
- 20**: Upper cylinder head cover gasket
- 21**: Upper cylinder head cover gasket
- 22**: Upper cylinder head cover gasket
- 23**: Upper cylinder head cover gasket
- 24**: Upper cylinder head cover gasket
- 25**: Upper cylinder head cover gasket
- 26**: Upper cylinder head cover gasket
- 27**: Upper cylinder head cover gasket
- 28**: Upper cylinder head cover gasket
- 29**: Upper cylinder head cover gasket
- 30**: Upper cylinder head cover gasket
- 31**: Upper cylinder head cover gasket
- 32**: Upper cylinder head cover gasket
- 33**: Upper cylinder head cover gasket
- 34**: Upper cylinder head cover gasket
- 35**: Upper cylinder head cover gasket

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|------------------------------|-----|--|---|--------------------------|
| | | | removing | installing | |
| 1 | Bolt, M 6 x 25 | 2 | | | |
| 2 | Washer | 2 | | | |
| 3 | Throttle pedal | 1 | Pull back to remove. | | |
| 4 | Throttle pedal stop | 1 | | Adjust. | |
| 5 | Throttle pedal pressure rod | 1 | Detach. | Lubricate ball socket with multipurpose grease. | |
| 6 | Throttle rod | | Detach. | Install with some multipurpose grease, adjust if necessary. | |
| 7 | Clevis pin | 1 | | | |
| 8 | Nut, M 8 | 2 | | | |
| 9 | Spring washer | 2 | | Use new spring washers. | |
| 10 | Washer | 2 | | | |
| 11 | Nut, M 8 | 2 | Remove frontshroud of steering and dual master cylinder. | Torque to 2.5 mkp. | |
| 12 | Spring washer | 2 | | Use new spring washers. | |
| 13 | Support fixture | | Remove together with pedals. | Install in assembled condition. | |
| 14 | Cotter pin for actuating rod | 1 | | Use new cotter pin. | |
| 15 | Washer | 1 | | | |
| 16 | Intermediate piece | 1 | | | |
| 17 | Stop light actuating washer | 1 | | | |
| 18 | Nut, M 10 | 1 | | | |

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|----------------------------------|-----|------------------------|---|--------------------------|
| | | | removing | installing | |
| 19 | Master cylinder rod | 1 | | Assemble and install rod prior to the installation of the pedal assembly. Adjust free play between rod and piston in the brake master cylinder. | |
| 20 | Cross-shaft cotter pin | 1 | | Use new cotter pin. | |
| 21 | Washer | 1 | | | |
| 22 | Cross-shaft | 1 | Check for wear. | Install with multipurpose grease. | |
| 23 | Bushing | 2 | Check for wear. | Press in. | |
| 24 | Fillister head screw M 4 x 10 | 2 | | | |
| 25 | Lock washer | 2 | | | |
| 26 | Stop light switch | 1 | Detach flat connector. | Adjust switch, if necessary. | |
| 27 | Roll pin | 1 | Drive out. | Use new roll pin. | |
| 28 | Clutch pedal lower part | 1 | | | |
| 29 | Nut, M 14 x 1.5 | 1 | | | |
| 30 | Clutch pedal upper part | 1 | | Adjust length, if necessary. | |
| 31 | Clutch pedal shaft | 1 | Check for wear. | Install with multipurpose grease. | |
| 32 | Spring for clutch pedal shaft | 1 | | | |
| 33 | Bushing | 1 | Check for wear. | Lubricate with multipurpose grease. | |
| 34 | Nut, M 8 | 1 | | | |

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|----------------|-----|---------------------------|-----------------------------------|--------------------------|
| | | | removing | installing | |
| 35 | Spring washer | 1 | | Use new spring washer. | |
| 36 | Support tube | 1 | | Install with multipurpose grease. | |
| 37 | Bushing | 2 | Check for wear. | Press in. | |
| 38 | Rubber cushion | 1 | Check for wear or damage. | Replace if necessary. | |
| 39 | Brake pedal | 1 | | | |
| 40 | Return spring | 1 | | | |
| 41 | Bushing | 2 | Check for wear. | Press in. | |
| 42 | Rubber cushion | 1 | Check for wear or damage. | Replace if necessary. | |

INSTRUCTIONS FOR REMOVAL AND INSTALLATION


Removing

1. Remove shroud covering steering and brake master cylinder under the car.

2. Remove both M 8 retaining nuts from brake master cylinder.

Note:


Do not detach brake lines or remove the brake master cylinder. Remember to install the master cylinder rod prior to installing the pedal assembly.

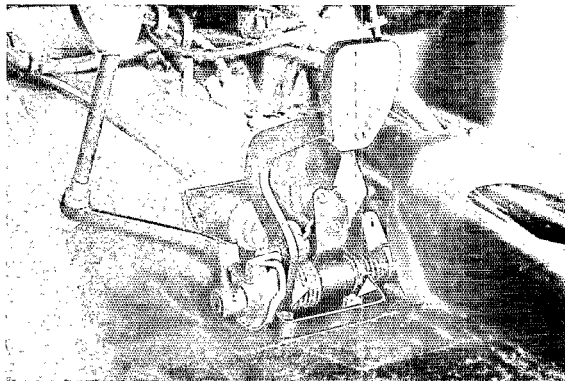

Installing

1. Clean the parts, check for wear or damage, and replace if necessary.

2. Press bushing in, lubricate bearing surface and pedal shaft.

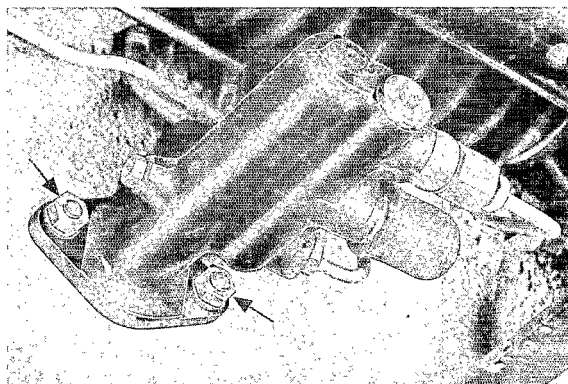

3. Remove M 8 retaining nuts from support fixture and remove pedal assembly (first remove clevis pin from clutch pedal shaft, and detach throttle rod).


PEDAL CONTROLS

General

Beginning with the 1974 models, all Type 911 vehicles are furnished with a supplemental clutch pedal spring to reduce the necessary pedal force. The pedal force decreases progressively as the clutch pedal is pushed in.


In addition, the cars are equipped with a longer brake pedal. The pedal lever length is 250 mm, the ratio 5,8:1.

TOOLS

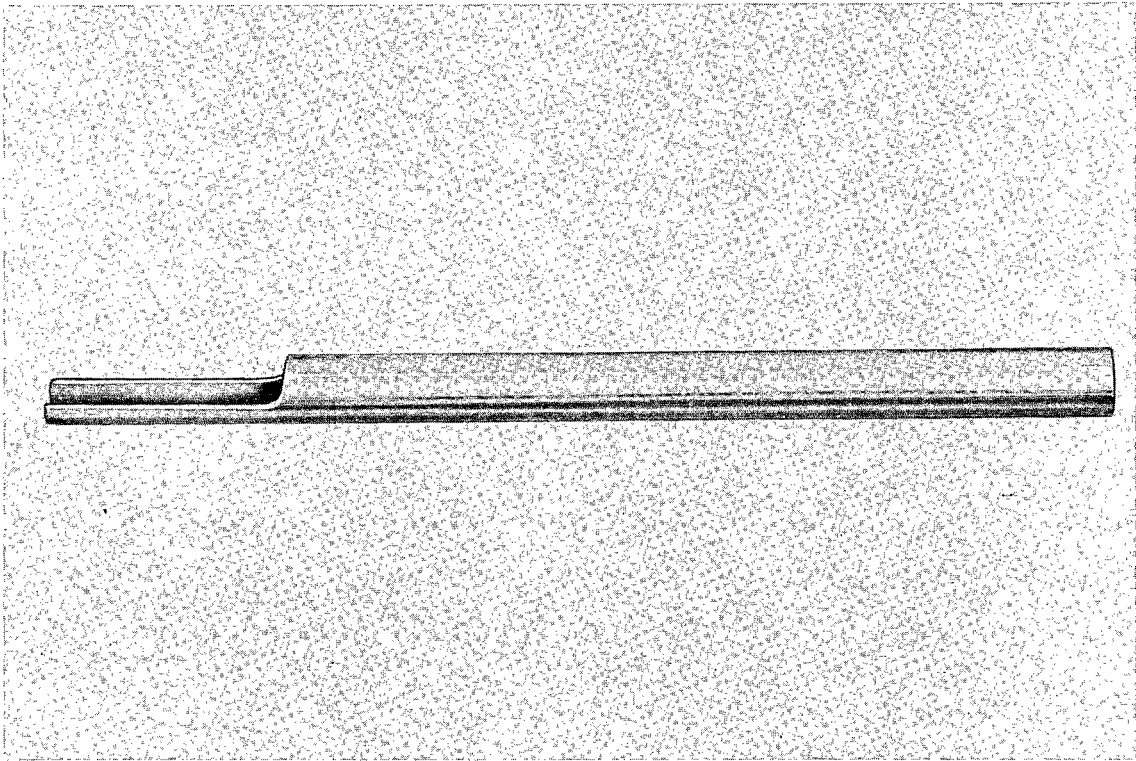

| No. | Description | Special Tool | References |
|-----|-------------|--------------|-------------------|
| 1 | Installer | --- | Local manufacture |

DISASSEMBLY AND REASSEMBLY

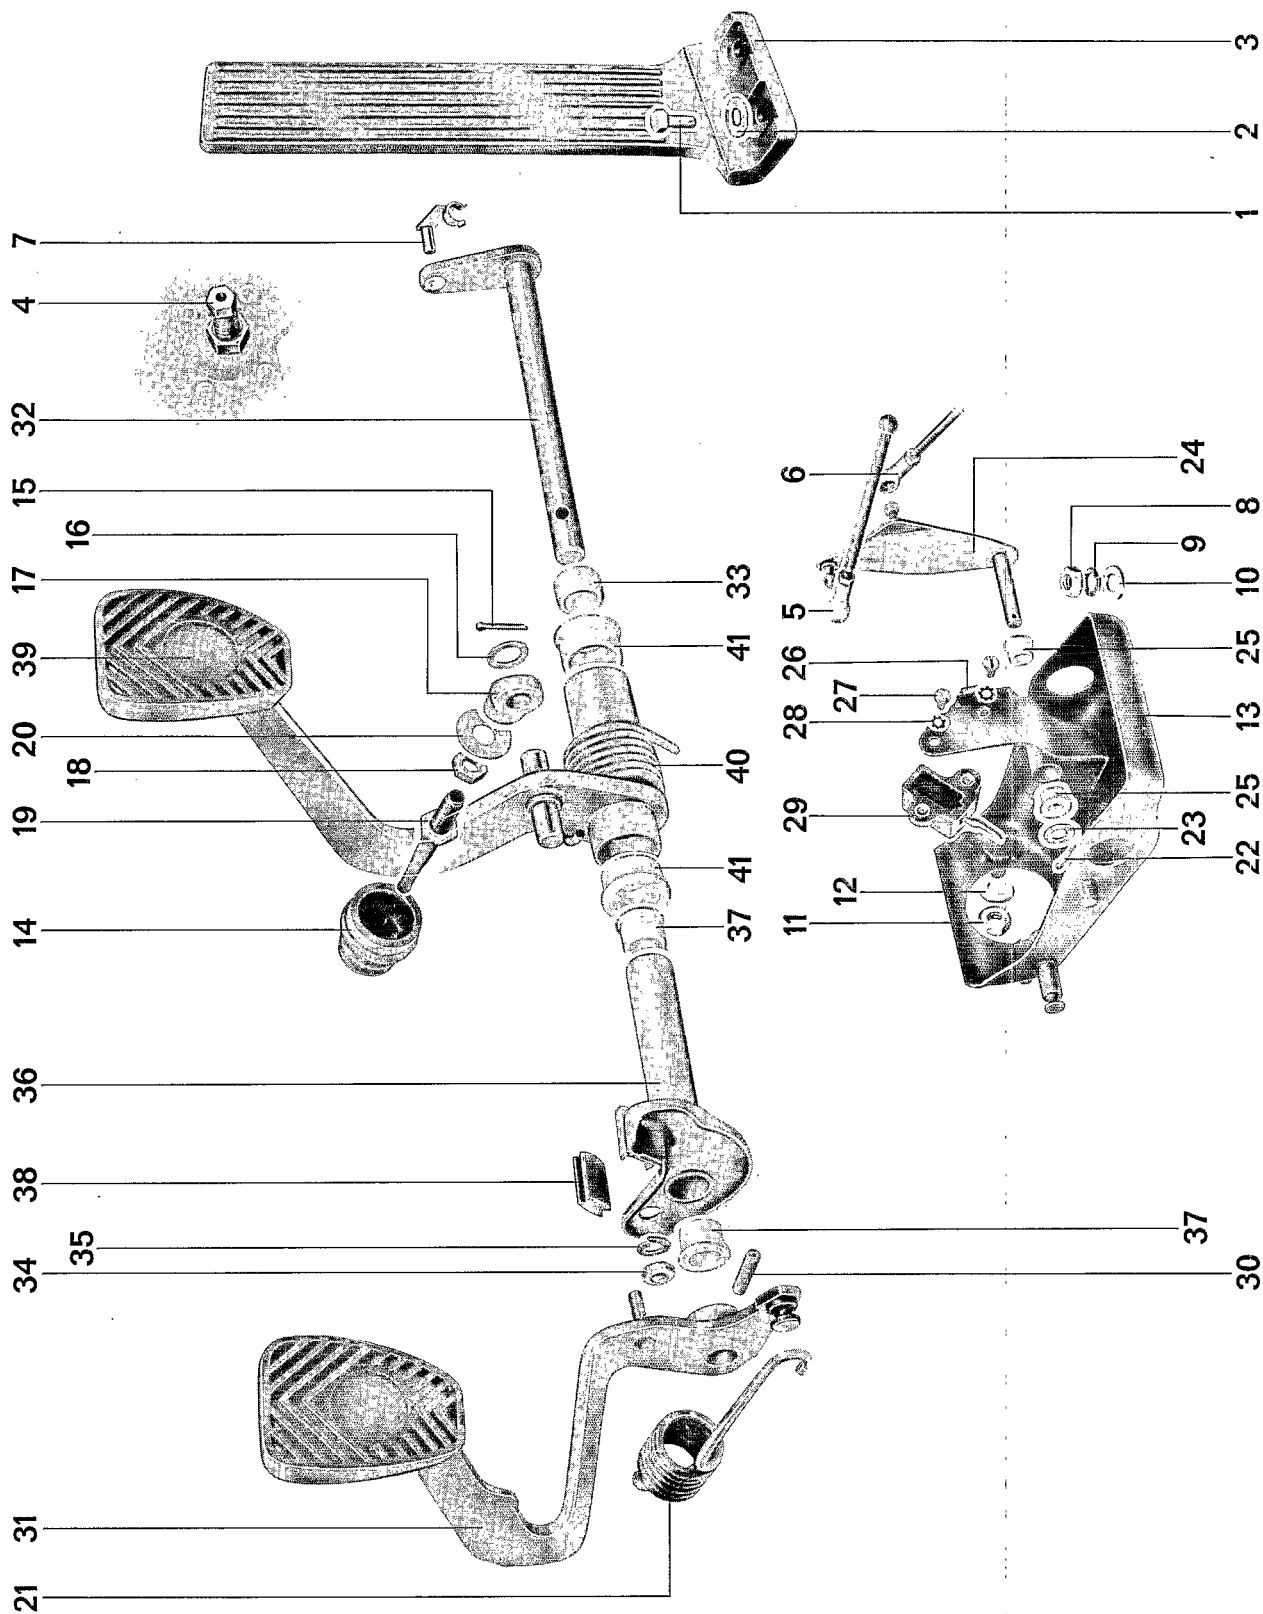

| No. | Description | Qty | removal | Note during installation | References |
|-----|------------------------------|-----|---|---|------------|
| 1 | Bolt M 6 x 25 | 2 | | Tighten to specified torque | |
| 2 | Washer | 2 | | | |
| 3 | Throttle pedal | 1 | Pull off rearward | | |
| 4 | Throttle pedal stop | 1 | | Adjust | |
| 5 | Throttle control link | 1 | Detach | Grease ball socket with multi-purpose grease | |
| 6 | Throttle control rod | | Detach | Install with multipurpose grease, adjust if necessary | |
| 7 | Clevis pin | 1 | | | |
| 8 | Nut M 8 | 2 | | Tighten to specified torque | |
| 9 | Lock washer | 2 | | Replace | |
| 10 | Washer | 2 | | | |
| 11 | Nut M 8 | 2 | Remove steering and brake master cylinder stone guard first | Tighten to specified torque | |
| 12 | Lock washer | 2 | | Replace | |
| 13 | Support | 1 | Remove together with pedals | Install assembled | |
| 14 | Dust boot | 1 | | | |
| 15 | Cotter pin for actuating rod | 1 | | Use new cotter pin | |
| 16 | Washer | 1 | | | |
| 17 | Intermediate piece | 1 | | | |
| 18 | Nut M 10 | 1 | | | |

| No. | Description | Qty | Note during removal | installation | References |
|-----|-----------------------------------|-----|--------------------------------------|---|------------|
| 19 | Actuating rod | 1 | | Assemble and insert the actuating rod prior to the installation of the pedal assembly. Adjust clearance between the actuating rod and piston in brake master cylinder | |
| 20 | Stoplight switch actuating washer | 1 | | | |
| 21 | Spring | 1 | Detach with the aid of a screwdriver | Use locally-manufactured tool | 2.1-1/2 |
| 22 | Cotter pin for bell crank | 1 | | Use new cotter pin | |
| 23 | Washer | 1 | | | |
| 24 | Bell crank | 1 | Check for wear | Grease with multipurpose grease prior to installation | |
| 25 | Bushing | 2 | Check for wear | Press in | |
| 26 | Rubber stop | 1 | | Replace if necessary | |
| 27 | Slotted screw M 4 x 10 | 2 | | | |
| 28 | External tooth lock washer | 2 | | | |
| 29 | Stoplight switch | 1 | Detach tab connector | Adjust if necessary | |
| 30 | Rollpin | 1 | Drive it out | Use new rollpin | |
| 31 | Clutch pedal | 1 | | | |
| 32 | Clutch pedal shaft | 1 | Check for wear | Use multipurpose grease | |
| 33 | Bushing | 1 | | Use multipurpose grease | |
| 34 | Nut M 8 | 1 | | | |
| 35 | Lock washer | 1 | | Replace | |

| No. | Description | Qty | Note during | | References |
|-----|---------------|-----|---------------------------|-------------------------|------------|
| | | | removal | installation | |
| 36 | Support tube | 1 | | Use multipurpose grease | |
| 37 | Bushing | 2 | Check for wear | Press in | |
| 38 | Rubber stop | 1 | Check for wear and damage | Replace if necessary | |
| 39 | Brake pedal | 1 | | | |
| 40 | Return spring | 1 | | | |
| 41 | Bushing | 2 | Check for wear | Press in | |


INSTRUCTIONS FOR DISASSEMBLY AND REASSEMBLY

Disassembly

1. Mount pedal support in a vise.
2. Unhook the clutch pedal supplemental spring from pedal support with the aid of a screwdriver while depressing the clutch pedal.


Caution

The spring is under tension and can jump out.

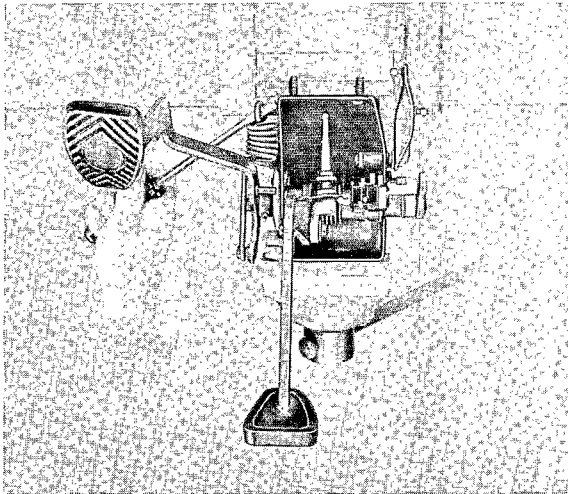


Reassembly

1. Grease both spring attachment studs (in the pedal and pedal support) with MoS₂ multi-purpose grease.
2. Attach spring to pedal support with the aid of the installer (see sketch for local manufacture of tool).

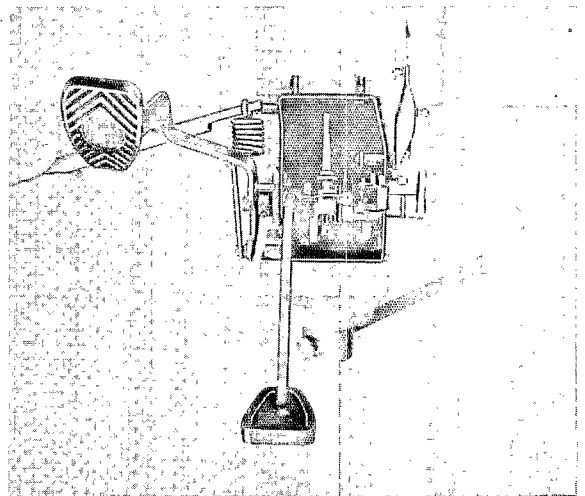

Sketch for local Manufacture of Tool

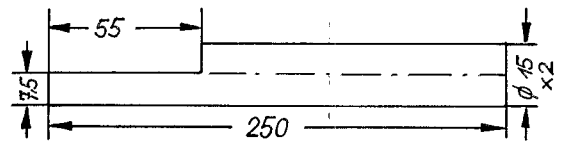


Material:

Steel pipe , 15 mm dia., wall thickness 2 mm

ADJUSTING CLUTCH

Checking Clutch Free Play

The clutch pedal free play is 15 - 20 mm. It is determined by pulling the clutch pedal out in the direction of the arrow.

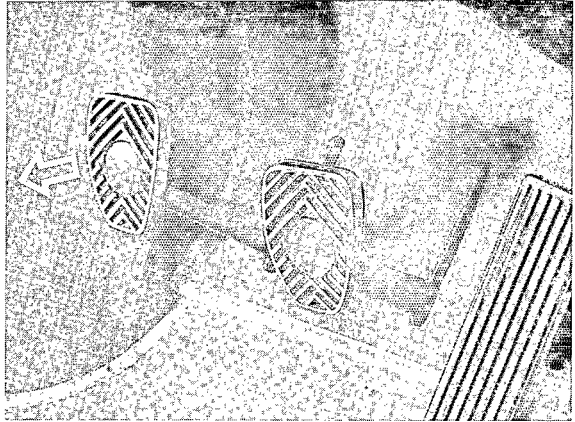


NOTE:

The clutch free play of 20 mm must not be exceeded since otherwise the clutch pedal supplemental spring will become active without actuation of the clutch pedal.

Adjusting Play

Use screwdriver to press release lever in direction of engine against stop. Measure distance between lever and transmission case. Release lever again. Turn adjusting nut on end of cable (undemeath car) until lever travel is 4 mm (5/32 in.). Now check clutch play at pedal and correct again, if necessary.

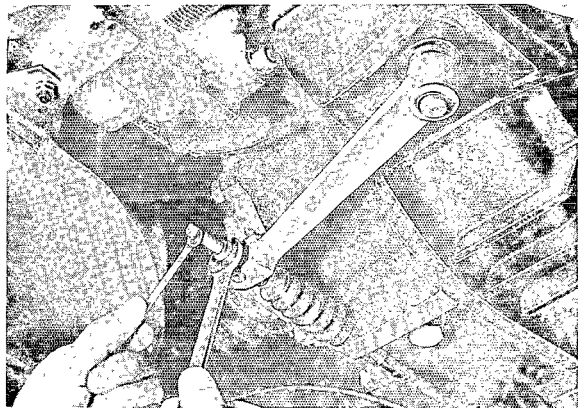


Note

A new clutch lever is installed on all 1975 models.

Checking Clutch Pedal Travel

The test should be accomplished when the transmission is warm. Depress clutch pedal fully to the stop. With clutch pedal in this position, the reverse gear should still engage clash-free.

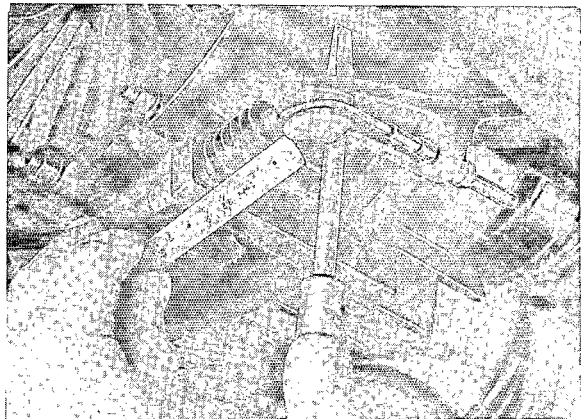

Adjusting Clutch Pedal Travel


1. Detach floor mat and remove.
2. Loosen both travel stop retaining screws.
3. Push the travel stop plate up or down, as required, until the adjustment is such that the reverse gear can still be engaged clash-free.
4. Tighten the retaining screws, recheck clutch pedal travel, and install floor mat.

ADJUSTING CLUTCH ON MODELS WITH AUXILIARY CLUTCH SPRING

Checking Clutch Play


Because of the auxiliary clutch spring the clutch play cannot be measured exactly at the clutch pedal. This is why the clutch play of models with a auxiliary clutch spring is checked at the transmission adjusting lever.

1. Check whether clutch cable is tight.
2. If cable has sufficient tightness, check clutch play with a feeler gauge and, if applicable, adjust it to 1.0 ± 0.1 mm with the adjusting screw.

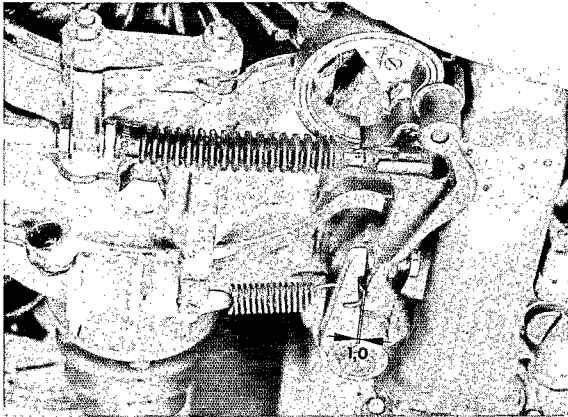


Basic Adjustment

1. Detach clutch cable or loosen completely at holder.
2. Adjust clutch play to 1.2 mm with a feeler gauge and lock adjusting screw.

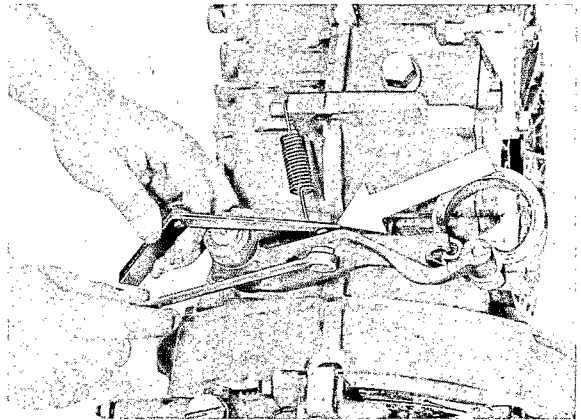

3. Detach clutch cable.
4. Tighten clutch cable until clutch play is 1.0 mm.

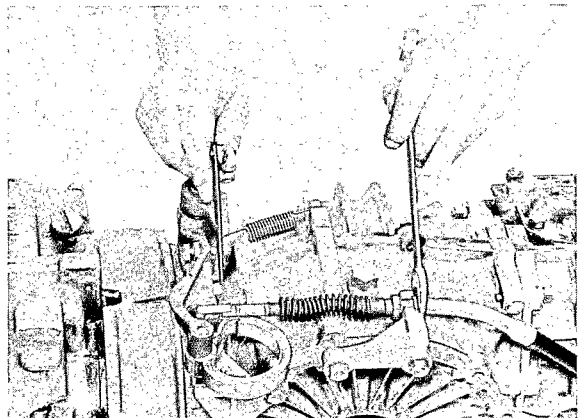

Note


Make basic adjustment if cable is loose (stretching process).

Note

If there is not enough room for adjustment at the clutch cable holder, adjustments must also be made up front at the pedal assembly. Adjust stop on floor plate until the release travel at the release lever is 25 ± 0.5 mm (Turbo 27 ± 0.5 mm).

5. Measure release travel distance.

- a) Insert calipers as shown in the photo and read distance I (e.g. 95.3 mm).
- b) Depress clutch pedal and measure distance II with calipers as shown in the photo (e.g. 69.9 mm).
- c) Distance I minus distance II (e.g. 95.3 minus 69.9 = 25.4 mm) equals release travel distance.

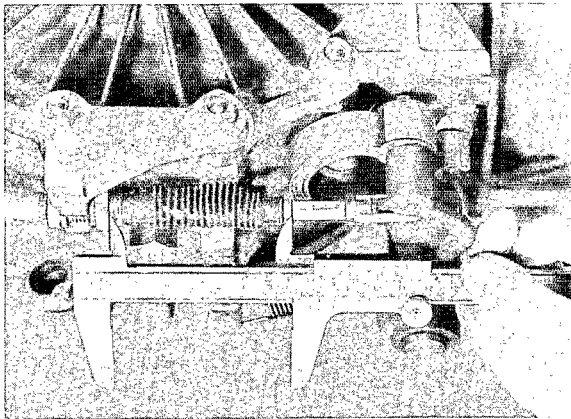

Aufbau
Body
Carrosserie
Carrozzeria

8

8

8

8

8

8

8

8

8

8

CONTENTS

0 - INFORMATION, DESCRIPTIONS, SPECIFICATIONS

0.1 Descriptions

| | |
|---------------------------------|-----------|
| Body modifications - 1972 model | 0.1 - 1/1 |
| Body modifications - 1973 model | 0.1 - 2/1 |
| Body modifications - 1974 model | 0.1 - 3/1 |

1 - BUMPERS

1.1 Bumpers

| | |
|--|-----------|
| Front spoiler - 911 S | 1.1 - 1/1 |
| Bumper, removing and installing - 1973 model | 1.1 - 2/1 |
| Front bumper - 1974 model | 1.1 - 3/1 |
| Rear bumper - 1974 model | 1.1 - 4/1 |
| Front spoiler, installing | 1.3 - 1/1 |

3 - HOODS AND LIDS

| | |
|--|-----------|
| Front hood lock, removing and installing | 3.1 - 1/1 |
| Hood, opening with broken cable | 3.1 - 1/2 |
| Rear lid with spoiler | 3.2 - 1/1 |

4 - DOORS

| | |
|---|-----------|
| Inner door fittings, removing and installing - 1974 model | 4.1 - 1/1 |
| Door stop, removing and installing | 4.2 - 1/1 |
| Ridge filler, installing | 4.2 - 1/2 |
| Door sheel preparation for remote control outside mirror | 4.3 - 1/1 |
| New door lock controls, service installing | 4.4 - 1/1 |
| Door window lift channel, installing | 4.5 - 1/1 |
| Electric window regulators, removing and installing | 4.6 - 1/1 |
| Electric cross arm window controls - 1980 model | 4.6 - 2/1 |
| Electric cross arm window controls, service installing | 4.6 - 3/1 |
| Adjusting door window - Targa | 4.6 - 4/1 |

7 - ROOF

| | |
|---|-----------|
| Folding roof modifications - 1974 model | 7.1 - 1/1 |
| Folding roof lock pin, service installing | 7.2 - 1/1 |
| Hardtop roof | 7.3 - 1/1 |
| Folding top to hardtop, switching | 7.4 - 1/1 |

9 - INTERIOR FITTINGS

9.1 Interior fittings

| | |
|---|-----------|
| Interior mirror, installing | 9.1 - 1/1 |
| Targa roof adjustments - 1970 model | 9.2 - 1/1 |
| Top wind deflector strip modifications | 9.2 - 1/3 |
| Three point belt with automatic retractor and warning system, removing and installing | 9.3 - 1/1 |
| Electric window regulator, removing and installing | 9.3 - 2/1 |
| Seat, installing - 1973 model | 9.4 - 1/1 |

10 - EXTERIOR FITTINGS

10.1 Exterior fittings

| | |
|--|------------|
| Oil tank filler lid and control, removing and installing | 10.1 - 1/1 |
| Rocker panel cover, removing and installing | 10.1 - 2/1 |
| End plate, removing and installing | 10.1 - 3/1 |
| Carrera emblems | 10.2 - 1/1 |
| Outside mirror with defogger and remote control, removing and installing | 10.3 - 1/1 |
| Exterior mirror on passenger's door, service installing | 10.3 - 1/4 |

18 - REFERENCE DIMENSIONS FOR REPAIRS

18.1 Reference dimensions

| | |
|--------------------------------|------------|
| Repair dimensions - 1972 model | 18.1 - 1/1 |
|--------------------------------|------------|

20 - REPAIRS

20.1 Repairs

| | |
|--|------------|
| Rear axle cross tube rust prevention | 20.1 - 1/1 |
| Galvanized sheet metal instructions - 1976 model | 20.2 - 1/1 |
| Rear axle cross tube, checking alignment | 20.1 - 2/1 |

22 - PAINTING

22.1 Paints

Paints - 1972 model 22.1 - 1/1

Paints - 1974 model 22.1 - 1/3

Paints - 1976 model 22.1 - 1/4

Paints - 1978 model 22.1 - 1/5

Range of body paint colors - 1981 models 22.1 - 1/7

22.2 Metallic paints

Metallic paint - wet on wet method 22.2 - 1/1

Targa roll bar cover, painting 22.2 - 1/2

30 - BODY REPAIRS

30.1 Front body 30.1 - 1/1

30.2 Extra attachment for economical repair of front end damage 30.2 - 1/7

Universal anchor ENS 937,900 30.2 - 3/1

Cobra 3 straightener with accessories 30.2 - 3/3

30.3 Rear body 30.3 - 1/1

BODY CHANGES - FROM 1972 MODEL

Beginning with 1972 models, the following body and trim changes were made.

Body

1. The shape of the rear seat sheetmetal and upper rear wall has been changed. They are the same shape for both Coupe and Targa models.
2. Rear crossmember moved forward; has modified shockabsorber cavities.
3. The rear seats were reshaped. The seat backs are positioned further to the rear.
4. Rocker panel and fender well provided with connecting points for oil tank and oil lines (911 S).
5. Rear torsion bar tubes provided with water drain holes.
6. Right rear fender with oil filler lid.
7. Muffling portion of heater pipe shortened 50 mm as of October, 1971.
As a result, the forward heating duct has been extended.
8. Inside area of door still galvanized.

Changes in Type 911 S

Rocker panels provided with supports for externally located oil lines, right fender well does not have oil line openings.

Engine compartment lid and bumper center section made of steel sheetmetal.

Front spoiler for Type 911 S (optional for other models).

Trim

1. Lettering, type identification, air inlet grille, and seat recliners in dull black finish.
2. Same basic trim for 911 T and 911 E.
3. Leatherette used on the instrument panel and seats (new leather-grained material).
4. Self-sealing clips in the door panel.
5. Door locks with vertically-positioned key slots.
6. Improved inside mirror attachment.
7. Seat belt mounting points in door lock posts dropped 90 mm lower in Coupe models beginning with November 1971.
8. Targa moulding strip, depressed in the area of roof lock pawls.
9. Tubular crossmember under instrument panel discontinued (Targa).
10. New color numbering code in paint nomenclature plate; paints are tested according to VW standards.

BODY CHANGES EFFECTIVE WITH 1973 MODELS

Doors

Modified door lock and striker plate can be replaced.

New type door hinges which are attached to the hinge post with interference pins instead of previously used rivets. The hinges can be installed in doors of older version by filing the bolt holes slightly.

Seats

1973-models are equipped with sport seats that are provided with double rail locks as of Sep-72.

Body Shell

Oil tank under right rear fender repositioned rearward.

Fender without filler neck lid.

Exterior

Black front horn grill.

Front bumpers in Type 911 E and 911 S vehicles equipped with spoiler.

Reinforced front and rear bumpers.

Front and rear bumper horns of energy absorbing material effective with Sep-1-72 production.

BODY CHANGES EFFECTIVE WITH 1974 MODELS

The following body changes were effective with the 1974 models.

Body:

1. New transverse lock panel in front with lid lock cover, as well as brackets for car jack and roof top.
2. Tank support modified for 80-liter tank (standard).
3. Battery support on left side for 66 or 88 Ah battery.
4. Front wheelhouse panels without battery compartments. Strong support plates for deformation tubes or hydraulic dampers along the front and rear wheelhouse panels.
5. New seat rails (with forward inclination).
6. Instrument panel with changed switch receptacles, as well as side-vent outlets.
7. Shorter front lid with new lid lock.
8. New front fenders with changed headlamp compartments. Large windshield washer reservoir under the left front fender, with filler neck within the fuel filler compartment.
9. Rocker panel covers with protective strip.
10. Aluminum bumpers with side boots and separate skirts, with rubber bumper guards in rear.
11. New towing hooks in front and rear.
12. Seat belt anchorages along side members and center tunnel.

Appointments:

1. Foam-padded instrument panel with adjustable side vents and changed glove compartment door.
2. New door trim, door weatherstrip, and door handles.
3. Seats with integrated head restraints.
4. Targa with solid roof top (fiberglass). Folding roof (optional) with central anchorage in rear.
5. Rear panel with reflectors and PORSCHE lettering.
6. Seat belts with automatic action.
7. Rear side window not operable in Type 911.
8. Front directional signals mounted in the bumper.
9. Black ornamentation for Carrera (instead of chrome).
10. New paint finish colors.

FRONT SPOILER - TYPE 911 S

Beginning with 1972 models, Type 911 S vehicles are furnished with a front spoiler-type bumper as standard equipment. This modification results in increased stability at high speed.


Initially made of fiberglass, these spoiler-type bumpers are made of steel sheetmetal from

| | | |
|-----------|--------------|---------|
| chassis # | 911 230 0385 | - Coupe |
| | 911 231 0231 | - Targa |

The steel spoiler-type bumper can be optionally equipped with overrider horns.

NOTE

The spoiler-type bumper can be installed in all vehicles from 1969 models on without further modifications.

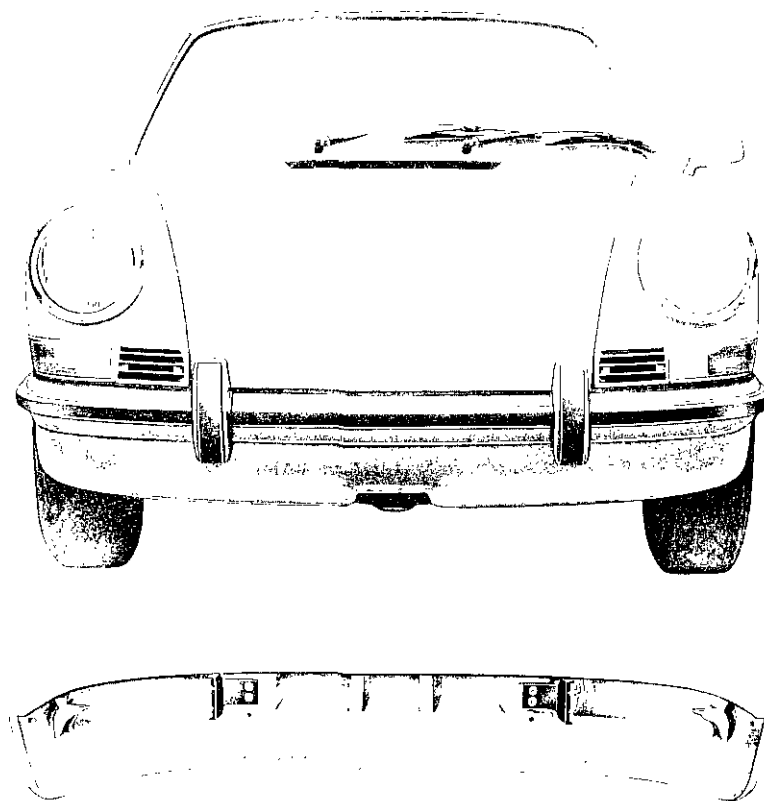


Steel spoiler-type bumper with bumper supports

REMOVING AND INSTALLING USA - TYPE BUMPERS

General

Beginning with the 1973 models, all vehicles exported to the USA are equipped with bumpers with energy-absorbing rubber bumper horns in front and rear, and reinforced bumper brackets. The bumper horns deform under heavy impact. Additional rubber supports are mounted on the rear bumper horn brackets to further support the bumper center section and upper part of bumper horns against the rear transverse member.

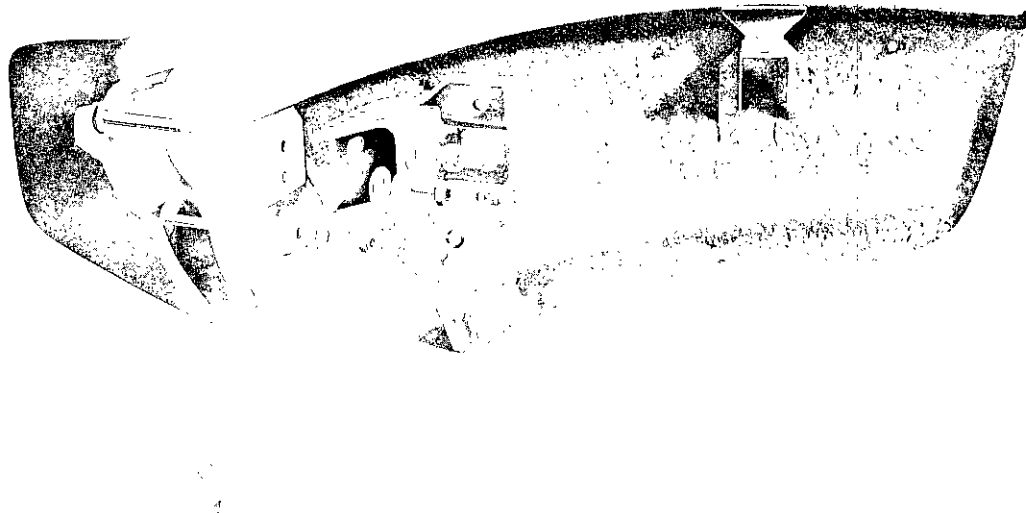

Removing Front Bumper

1. Detach bumper from fender sides; detach electrical wires if additional lamps are installed.
2. Detach bumper brackets from body (ahead of the battery compartments). Remove bumper.

NOTE:


In vehicles equipped with air conditioning, it will be necessary to detach impact protection bars from the suspension control arm attaching points.

Disassembling Bumper

1. Unscrew bumper brackets (M 8 nuts and Allen bolts).
2. Detach bumper horns.
3. Remove bumper trim strip.
4. Pull weather seal off bottom edge of fender and the lock transverse panel.

Reassembling Bumper

1. Insert weather seal into front lock transverse panel, glue it in at the fenders.
2. Install bumper trim strip (911 T).

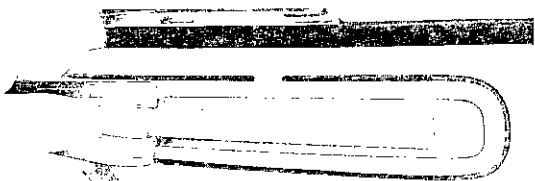


NOTE:

Trim strip containing a rubber liner should be installed by first securing the supporting strip to the bumper, then pressing and attaching one end of the rubber strip, and finally bending the rubber strip sides over and sliding it onto the supporting strip.

3. Install bumper horns.


NOTE:

If impact protection bars for the air conditioning system are to be installed, it will be necessary to first make an opening in the horn bottom through which the bar will pass for attachment to the horn, as shown in the illustration. The other end of the bars is later secured to the outer control arm mounting points.

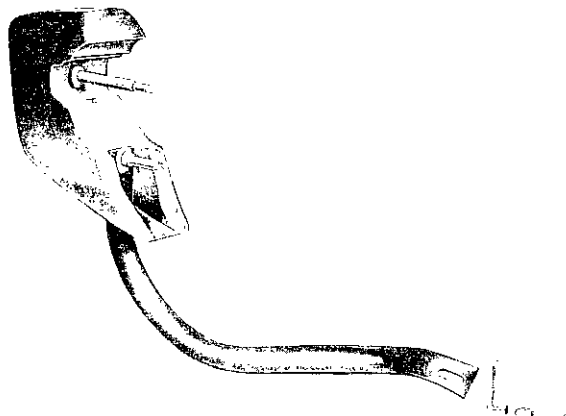

Removing Rear Bumper

1. Detach bumper outer sections from support pipe and bumper bracket sides.
2. Detach bumper brackets from the longitudinal members and remove complete bumper assembly.
3. Remove rubber spacers from the brackets.

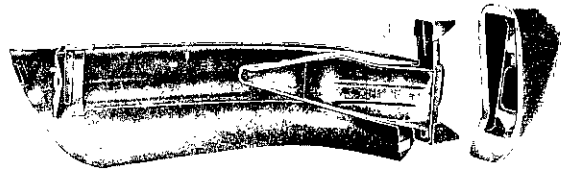

Outer section of bumper with reinforced bracket, rubber spacer, and rubber bumper horn.

Disassembling Bumper

1. Pull weather seal off center panel and bottom edge of fender.
2. Remove cover plugs from the bumper horns, unscrew Allen bolts, and take bumper horns off.
3. Remove sheetmetal screws connecting outer and center sections.
4. Remove trim strip, reflectors, and end plates from bumper outer sections.

Reassembling Bumper

NOTE:


When installing bumpers which were disassembled for painting, it is best to reassemble the parts off the vehicle and then mounting the entire bumper assembly in its place. If the disassembly involved repairs, it will be necessary to first fit the bumper outer sections on the car, making sure that they fit flush with the fenders and tail lamp assemblies, as well as being parallel to the fender bottom edge.

1. Glue weather seals to the bottom of the fenders.
2. Install reflectors, trim strips, and end plates in outer sections.
3. Slide sealing strip into center section and glue weather seal in place.
4. Place center piece onto the outer section brackets and lightly fasten at the bottom with sheetmetal screws and nuts.
5. Insert bumper horns and secure with Allen bolts.
Place rubber spacers onto brackets.

6. Attach bumper to longitudinal members, securing it by the brackets.

NOTE:

If the rear part of the bumper does not press against the weather seal in the fender, that distance must be reduced by inserting spacers between the bracket and longitudinal members, at the front bolt.

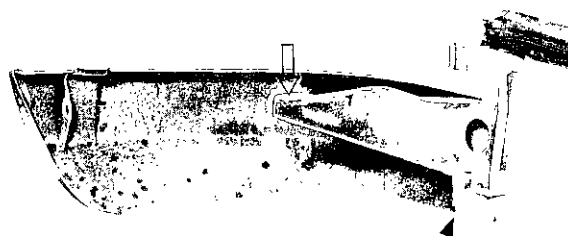


7. Attach bumper outer sections to support tubes and fender brackets.


8. Adjust distance between outer sections and center part by means of washers and tighten sheetmetal screws.

NOTE:

A tow hook can be installed on the right side only, in the direction of travel, by fastening it to the longitudinal member together with the bumper bracket. Allen bolts 8 x 35 mm, washers, and spring washers should be used for this purpose.

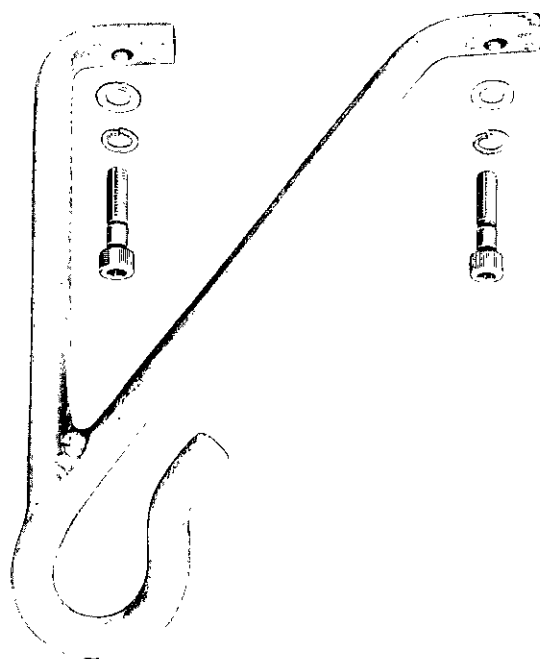

FRONT BUMPERS EFFECTIVE WITH 1974 MODELS

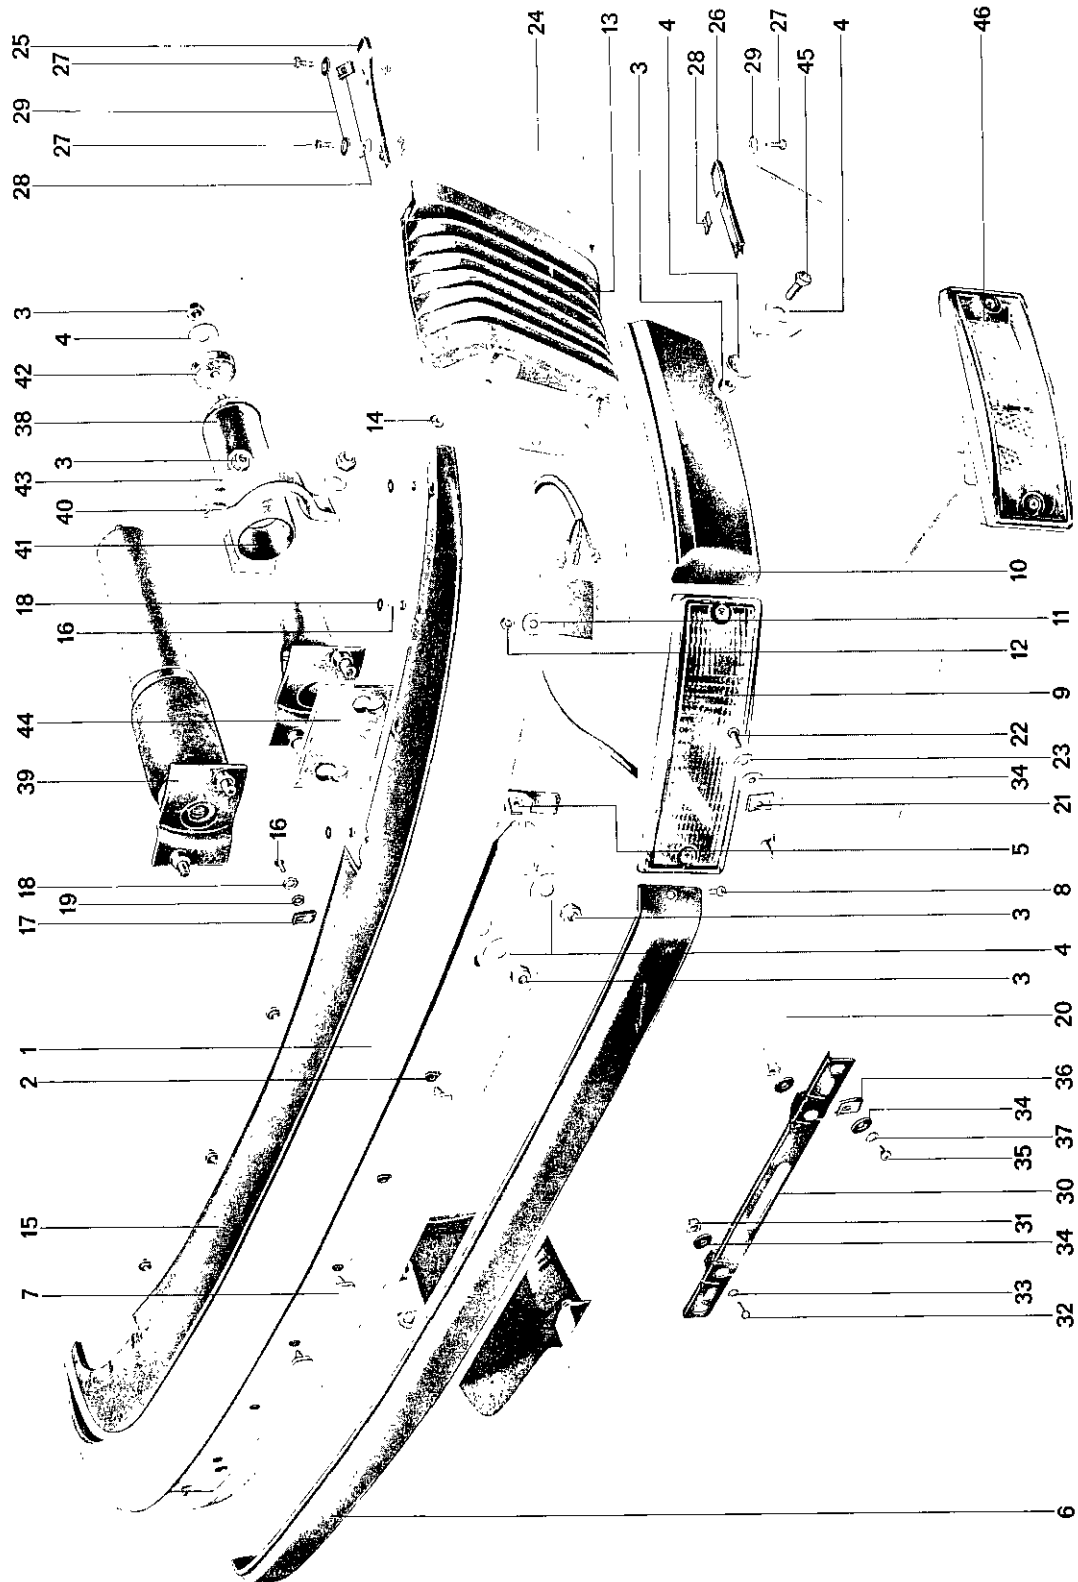


| No. | Description | Qty | Note when: | | Remarks |
|-----|-------------------------|-----|--------------------------------------|---|---------|
| | | | removing | installing | |
| 1 | Front bumper | 1 | | Flanged studs of deformation tube must fit into cutouts. Sealing strip must fit around. | |
| 2 | Grommet | 7 | | | |
| 3 | Nut, M 8 | 12 | | Use self-locking nuts. | |
| 4 | Washer | 4 | | | |
| 5 | Sheetmetal nuts, 4.2 mm | 2 | | | |
| 6 | Bumper strip | 1 | Detach side and pull off. | Press into grommets, bolt sides on. | |
| 7 | Bumper strip plugs | 7 | | Replace if necessary | |
| 8 | Sheetmetal screws, 4.2 | 2 | | Replace if necessary | |
| 9 | Directional signal lamp | 2 | Remove bumper, take out through back | Check for equal spacing. | |
| 10 | Side cover | 2 | | Check for equal spacing | |
| 11 | Washer | 8 | | | |
| 12 | Nut, M 5 | 8 | | Use self-locking nuts | |
| 13 | Boot | 2 | Remove self-tapping nuts from skirt | Attach to bumper | |
| 14 | Self-tapping nuts | 8 | | | |
| 15 | Sealing strip | 1 | | Fit well along the fender | |
| 16 | Sheetmetal screw | 12 | | | |
| 17 | Sheetmetal nut, 4.8 mm | 12 | Replace if necessary | | |
| 18 | Washer | 12 | | | |
| 19 | Rubber washer | 4 | | Use in the area of the lock transverse panel | |

| No. | Description | Qty | Note when: | | Remarks |
|-----|----------------------------|-----|------------|--|---------|
| | | | removing | installing | |
| 20 | Front skirt | 1 | | Preassemble side skirts. | |
| 21 | Sheetmetal nut, 6.3 | 2 | | | |
| 22 | Sheetmetal screw, 6.3 x 19 | 2 | | | |
| 23 | Gasket | 2 | | Place against lock transverse panel | |
| 24 | Side skirt | 2 | | | |
| 25 | Insert, top | 2 | | Install neatly | |
| 26 | Insert, bottom | 2 | | Install neatly | |
| 27 | Sheetmetal screw 4.8 x 13 | 8 | | | |
| 28 | Clip nut | 8 | | Replace if necessary | |
| 29 | Washer | 8 | | | |
| 30 | License plate bracket | 1 | | | |
| 31 | Sheetmetal nut | 2 | | | |
| 32 | Sheetmetal screw, 5.5 x 16 | 2 | | | |
| 33 | Washer | 2 | | | |
| 34 | Rubber washer | 4 | | Place between skirt and bracket | |
| 35 | Bolt, 5 x 10 | 2 | | | |
| 36 | Cage nut | 2 | | Replace if necessary. Space according to holes in license plate | |
| 37 | Washer | 2 | | | |
| 38 | Deformation tube | 2 | | Check, replace if necessary. Align bumper, then attach. Remove water reservoir | |

| No. | Description | Qty | Note when: | | Remarks |
|-----|-----------------------------|-----|------------|--|---------|
| | | | removing | installing | |
| 39 | Hydraulic damper (optional) | 2 | | Check, replace if necessary. Align bumper, then attach. Remove water reservoir | |
| 40 | Clamp | 2 | | | |
| 41 | Rubber buffer | 2 | | Check, replace if necessary | |
| 42 | Insert with sleeve | 2 | | Check, replace if necessary | |
| 43 | Washer | 6 | | | |
| 44 | Insert | 2 | | Glue to deformation tube | |
| 45 | Bolt, M 8 x 16 | 2 | | | |
| 46 | Side marker lamp | 2 | | | |


REAR BUMPER EFFECTIVE WITH 1974 MODELS

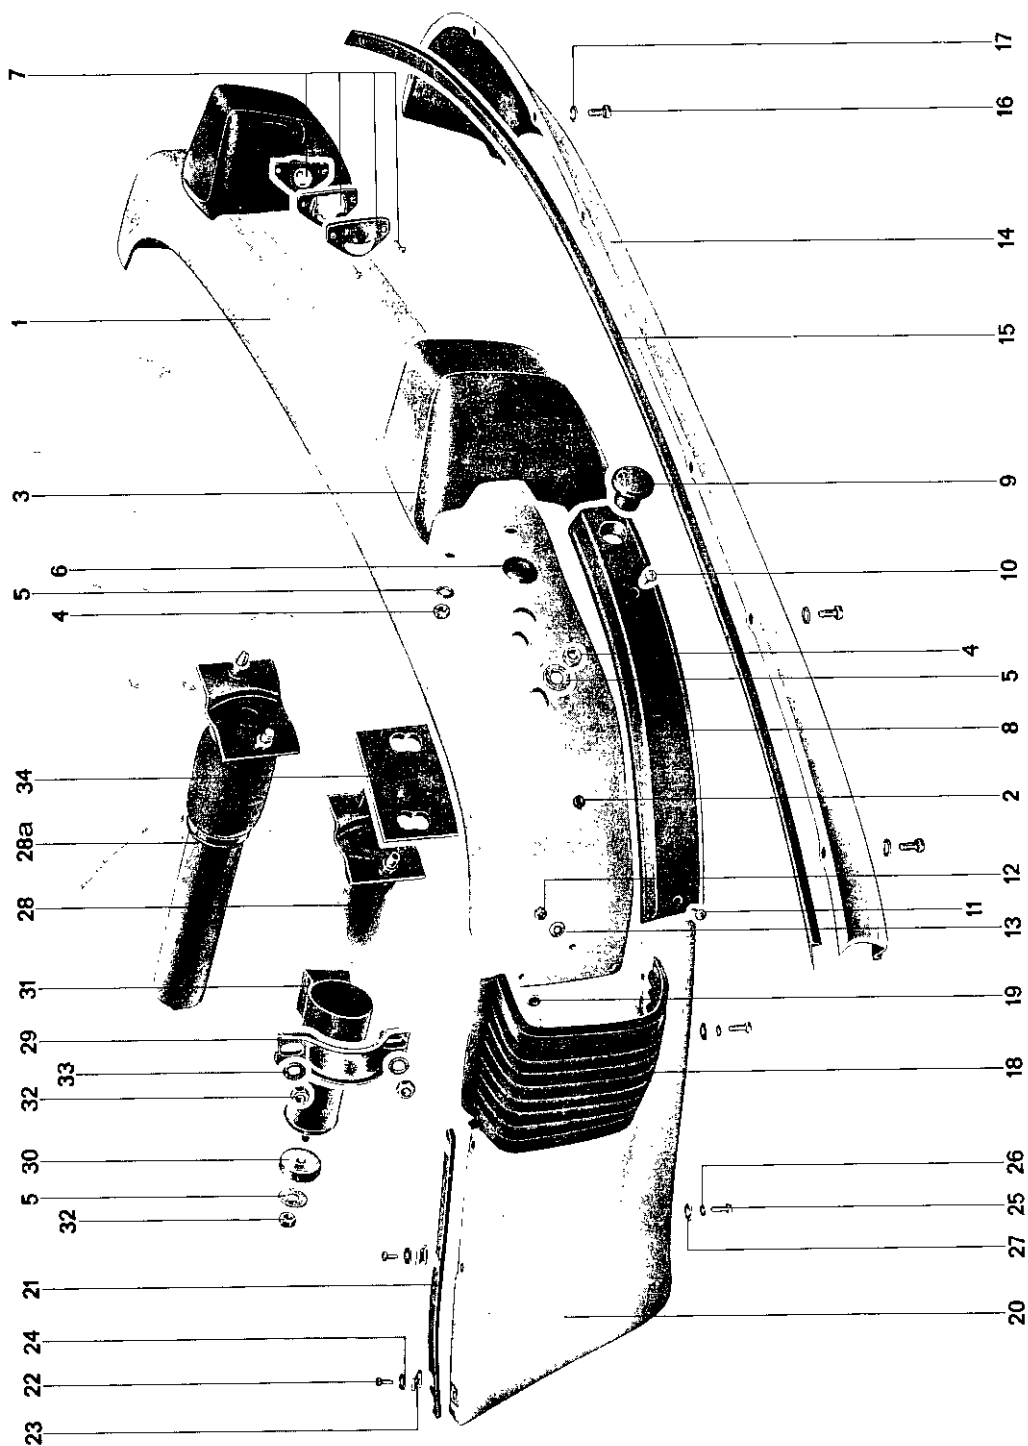

| No. | Description | Qty | Note when: | | Remarks |
|-----|-------------------------------|-----|--|---|---------|
| | | | removing | installing | |
| 1 | Rear bumper | 1 | Remove bumper strips and license plate lamps, pull wires out | Align bumper. Flanged studs of deformation tubes must fit into oval holes | |
| 2 | Grommet | 2 | | | |
| 3 | Bumper guard | 2 | | | |
| 4 | Nut, M 8 | 4 | | | |
| 5 | Washer | 4 | | | |
| 6 | Rubber grommet (wire passage) | 2 | | | |
| 7 | License plate lamp | 2 | Unscrew. Pull wire out | Lead wire through after installing guard | |
| 8 | Bumper strip | 2 | Remove fasteners. pull off | Install neatly | |
| 9 | Cap for towing attachment | 1 | | | |
| 10 | Bolt, 5 x 12 | 2 | | | |
| 11 | Bolt, 5 x 18 | 2 | | Install in front, at bumper strip | |
| 12 | Nut, M 5 | 2 | | | |
| 13 | Washer | 2 | | | |
| 14 | Rear skirt | 1 | | | |
| 15 | Insert | 1 | | Position insert lip against skirt | |
| 16 | Fillister screw 6 x 12 | 8 | | | |
| 17 | Washer | 8 | | | |

| No. | Description | Qty | Note when: | | Remarks |
|-----|---------------------------|-----|--|--|---------|
| | | | removing | installing | |
| 18 | Boot | 2 | Detach from bumper on right, and from lower fender on left, press out | Attach boot to both lower fender parts | |
| 19 | Self-tapping nut | 8 | | | |
| 20 | Fender lower section | 2 | | Fit against fender contour | |
| 21 | Insert | 2 | | Replace damaged parts. Install neatly | |
| 22 | Sheetmetal screw 4.8 x 16 | 6 | | | |
| 23 | Sheetmetal nut 4.8 | 6 | | Slip onto lower parts | |
| 24 | Washer | 6 | | | |
| 25 | Bolt, M 6 x 12 | 4 | | Attach fender lower parts to supporting tubes | |
| 26 | Lock washer | 4 | | | |
| 27 | Washer | 4 | | | |
| 28 | Deformation tube | 2 | Remove oil tank attachment at support tube, right side. Loosen 2 bolts in engine compartment | Check, replace if necessary. Align bumper and fasten accordingly | |
| 28a | Hydraulic damper | 2 | | | |
| 29 | Clamp | 2 | | | |
| 30 | Rubbert insert | 2 | | Replace if necessary. Install between deformation tube and console | |
| 31 | Rubber buffer | 2 | | Replace if necessary | |

| No. | Description | Qty | Note when: removing installing | Remarks |
|-----|------------------------------|-----|--|---------|
| 32 | Nut, M 8 | 10 | Use self-locking nuts | |
| 33 | Washer | 10 | | |
| 34 | Insert for mounting plate | 2 | Glue to deformation tube | |

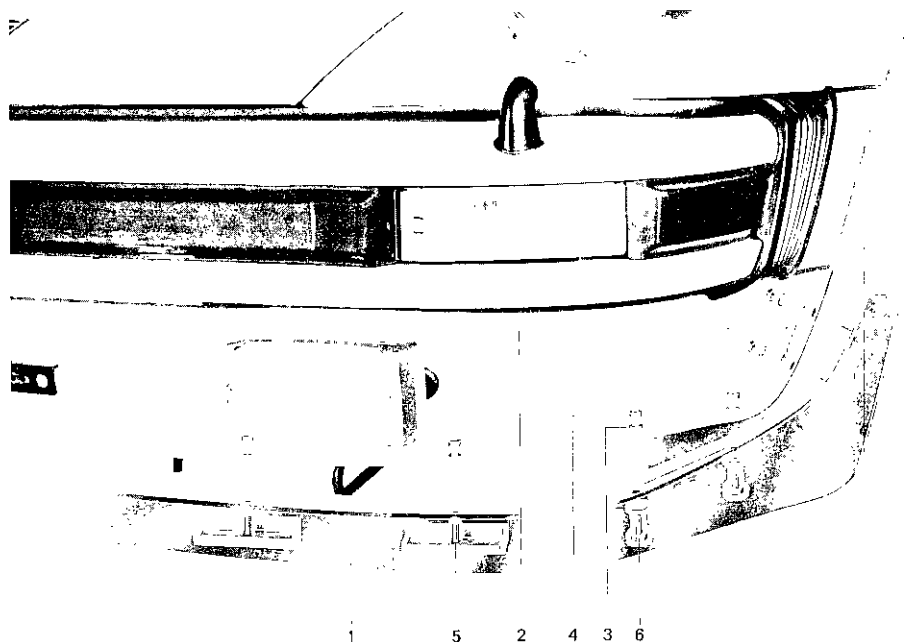


| No. | Description | Qty. | Notes | | Remarks |
|-----|--------------|------|----------------------|--------------------------------|---------|
| | | | Removal | Installation | |
| 1 | Nose spoiler | 1 | Replace if necessary | Bolt flush on sides with apron | |
| 2 | Spacer | 2 | | Match chamfer | |
| 3 | Washer | 19 | | | |
| 4 | Nut | 15 | | | |
| 5 | Insulator | 7 | | Use at front | |
| 6 | Bolt 6 x 20 | 4 | Replace if necessary | Use at outer holes | |

REMOVING AND INSTALLING FRONT LID LOCK


Removal

1. Remove plastic cover from lock transverse panel (pull out metal clips from lower part).
2. Loosen screw in clamp piece, pull control wire out.
3. Remove lock attaching bolts and take lower part of lock off.
4. Remove upper part of lock.

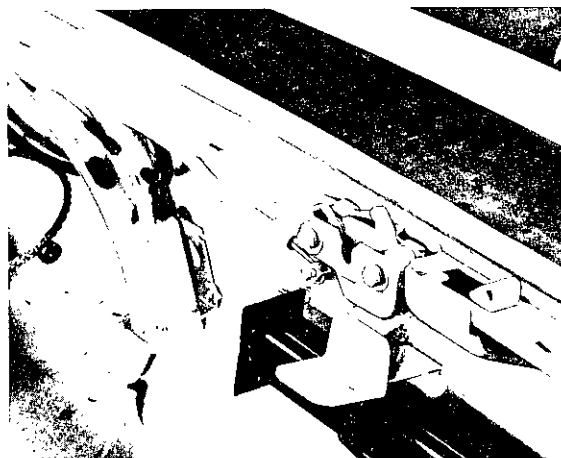


Installation

1. Lightly tighten upper part of lock to lid.
2. Lightly tighten lower part of lock. Insert control wire.
3. Adjust both lock parts to center position cross- and lengthwise, then tighten bolts. Tighten clamp piece securing screw and bend wire all the way back.
4. Close lid. Adjust height of lower part of lock. Adjust side stopper screws accordingly.
5. Install plastic cover.

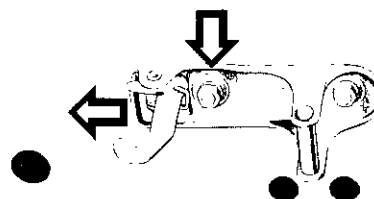

Opening Lid Lock when Control Cable breaks

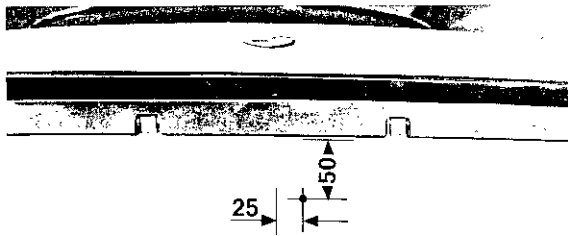

1. Remove front bumper (remove bumper strip, remove fasteners from rear part of boots and press the boots out; remove bumper fasteners from collision tubes).




2. Drill an 8 mm hole into the lock transverse panel (see illustration).



3. Make a tool from steel wire of 5 - 6 mm dia. and approx. 40 cm length.


4. Insert the self-made tool upward through the hole and press the wire clamping piece to the right. Open the lid.

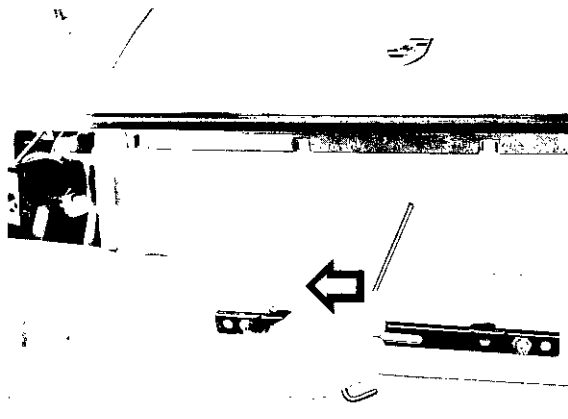


5. Install new control wire and check lock for proper operation.

6. Close hole with plug (999 703 044 50).

7. Install bumper.

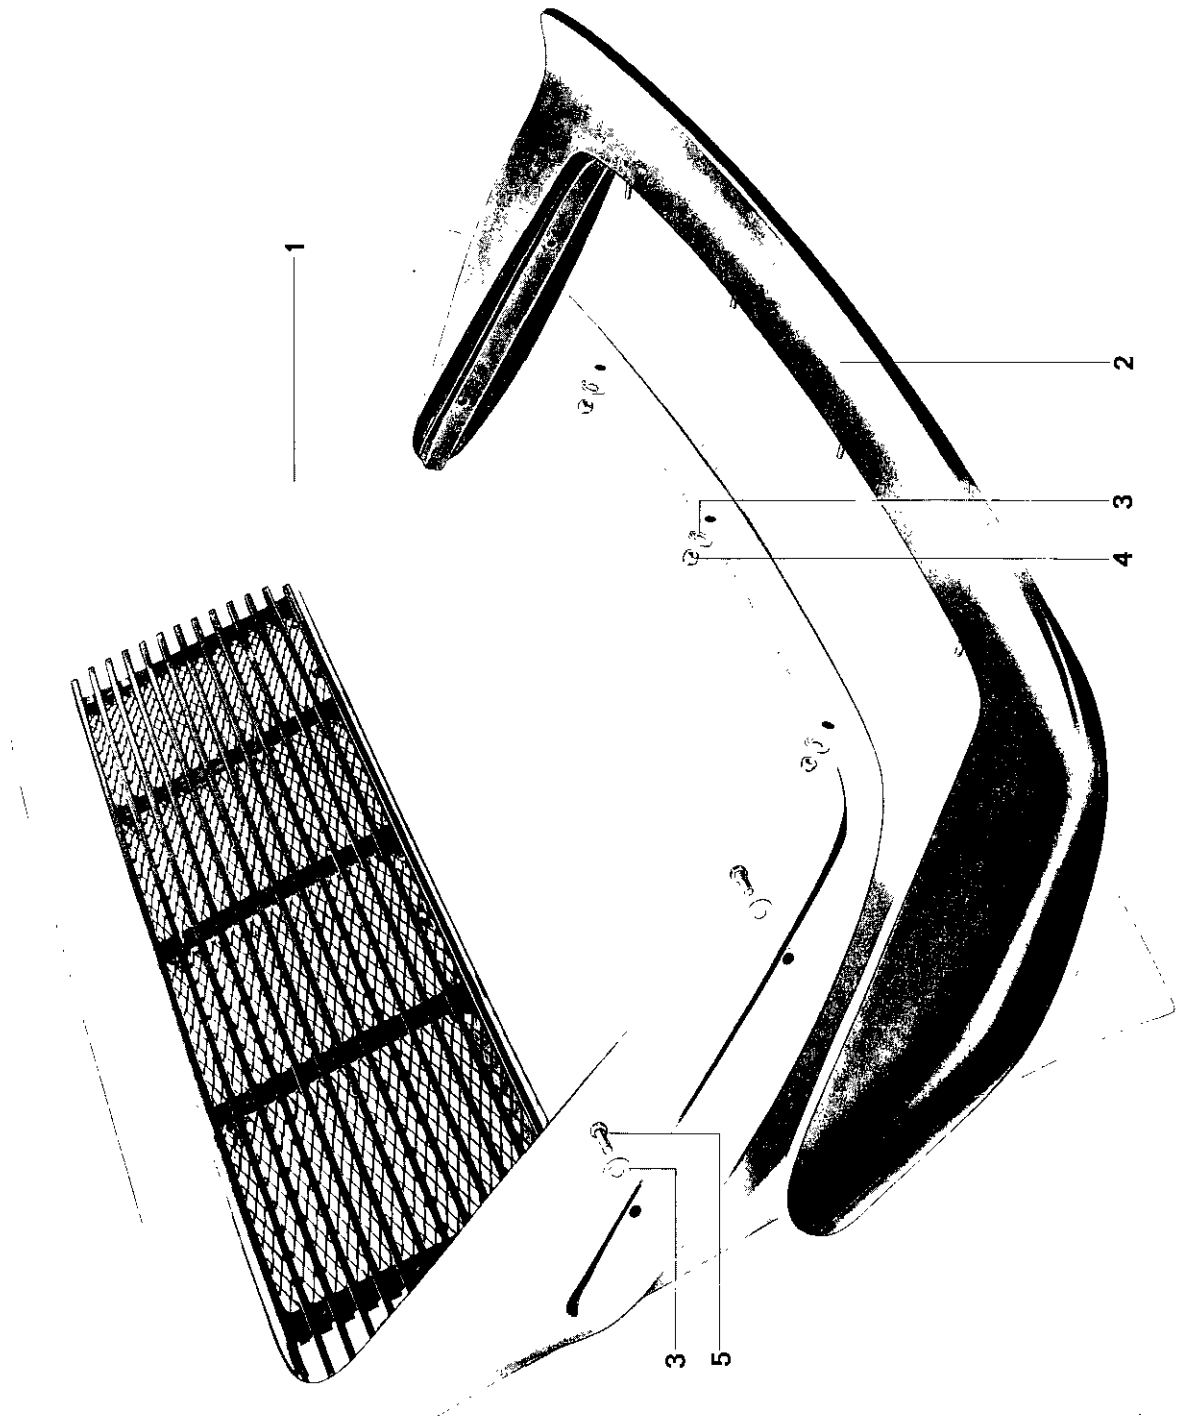

| No. | Description | Qty. | Notes | | Remarks |
|-----|---|------|--|--|---------|
| | | | Removal | Installation | |
| 1 | Rear lid | 1 | | Even gaps all around. Adjust height with washers at hinges | |
| 2 | Spoiler | 1 | Loosen guard | Align. Secure with studs and lock nuts | |
| 3 | Washer 5.3 mm diameter | 8 | | | |
| 4 | Lock nut | 4 | | Install with washer | |
| 5 | Hex. head metal screw 4.8 x 16 | 4 | | Install with washer | |
| | Guard | 1 | Remove metal screws, loosen at air inlet grill | | |
| | Oval head metal screw 2.9 x 9.5 | 9 | | | |
| | Gas lift cylinder Lift-O-Mat Part No. 911 512 331 07 | 1 | | Gas lift cylinder must hold lid open, replace if necessary | |

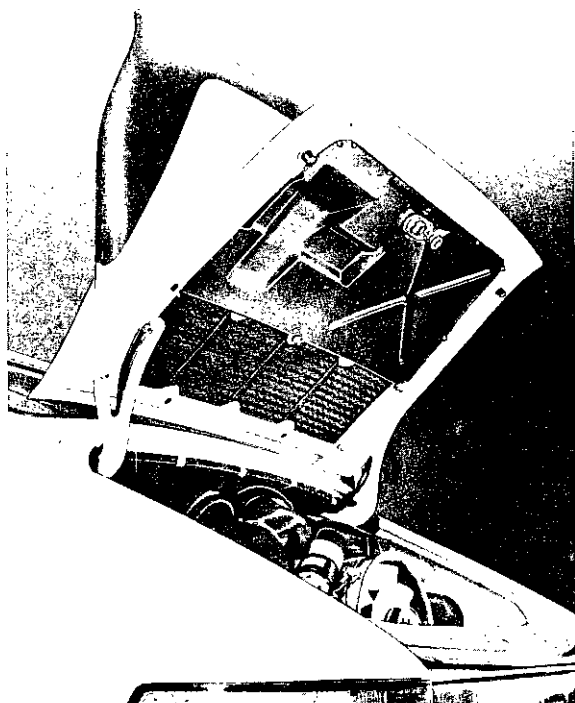

Removing

1. Detach lid at hinges.
2. Loosen lower air inlet grill screws.
3. Loosen all metal screws of guard. Bend open guard, or loosen upper lid lock section and remove guard.
4. Remove outer spoiler metal screws as well as the 4 lock nuts and remove spoiler

Installing

After assembling, bolt lid and ground wires to hinges. Align lid.


REMOVING AND INSTALLING DOOR PANEL EFFECTIVE WITH 1974 MODELS

General

Beginning with 1974 models, the doors have new type of door panel, door storage compartment, hand grip, and inside door release.

Removal


1. Remove sheetmetal screws from below the storage compartment, both end flanks, and in front below the cover. Remove the storage compartment.

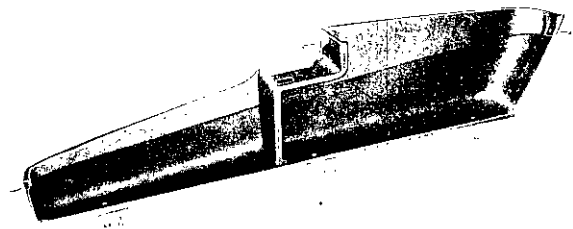

2. Remove door ledge cover (unscrew door lock button and sheetmetal screws at both ends).

3. Detach rear of storage compartment cover and remove.

4. Detach connecting rod at the handle, unscrew fasteners from handgrip top and bottom.

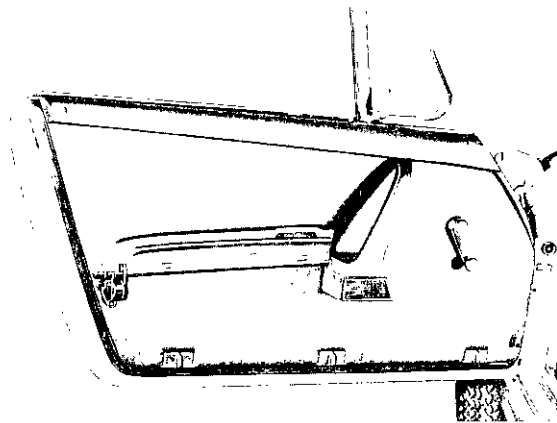

5. Remove window crank.


6. Remove supporting brackets.

7. Unhook door panel.

8. Remove control lever from door inner panel and disconnect spring.


NOTE

Removal and installation of the remaining door parts is described in volume II of the workshop manual.

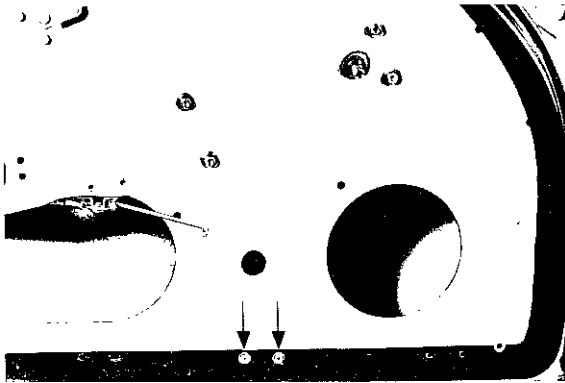


Installation

1. Attach threaded plate (see arrow) with countersunk screw.
2. Install control lever with connecting rod, hook spring to door inner panel.

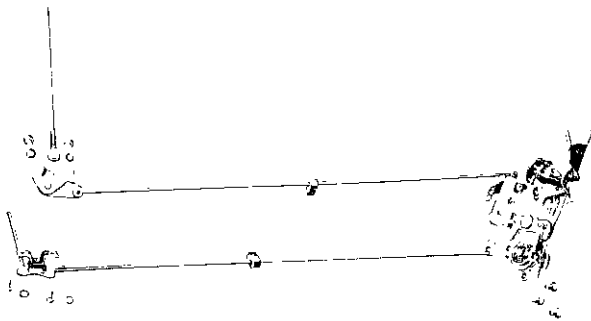

3. Tightly glue weatherfoil to door inner panel.
4. Hang door panel on door.

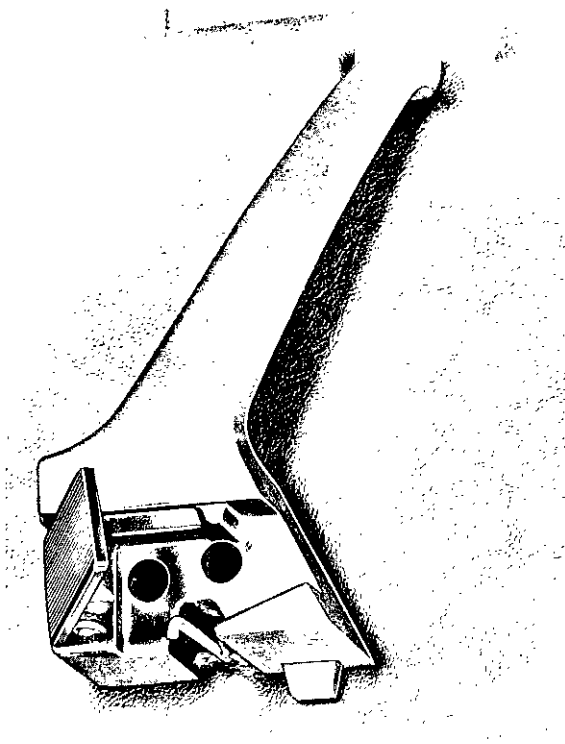

5. Install supporting brackets according to the location of holes in the storage compartment.
6. Install hand grip and connect connecting rod.
7. Install folding cover and storage compartment.
8. Install window crank and door ledge cover.

REMOVING AND INSTALLING DOOR STOP

Beginning with 1974 models, all Type 911 vehicles are equipped with a modified door stop. The door stop link is attached to the door hinge post with a rollpin.

The new door stops can be installed in all vehicles, from 1970 model on, which have the hinge post attachment as shown in the illustration.


Special tools: P 290 and P 290a

Removal

1. Detach window ledge rail, door pocket, door inner panel, and sealing foil as far as necessary.
2. Drive rollpin out with P 290 and P 290a.
3. Unscrew door stop from door frame and take out.

Installation

1. Insert door stop and secure with self-locking nuts.
2. The rollpin must be so installed, that the slit faces outside when the door is open. Drive the pin fully in to the upper ridge.

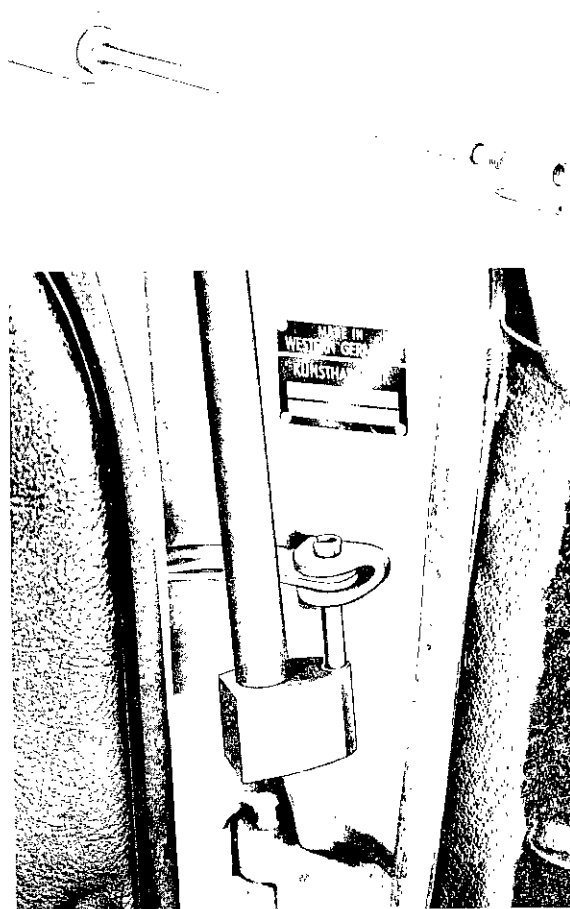


a = new version
b = old version



INSTALLING RIDGE FILLERS


Beginning with 1974 models, all Coupe vehicles are furnished with rubber ridge fillers which are glued to the front and rear part of the window frame to reduce wind noise.

Make sure that the ridge fillers are glued into place with waterproof glue, such as the BOSTIK-CYANDIT 202.

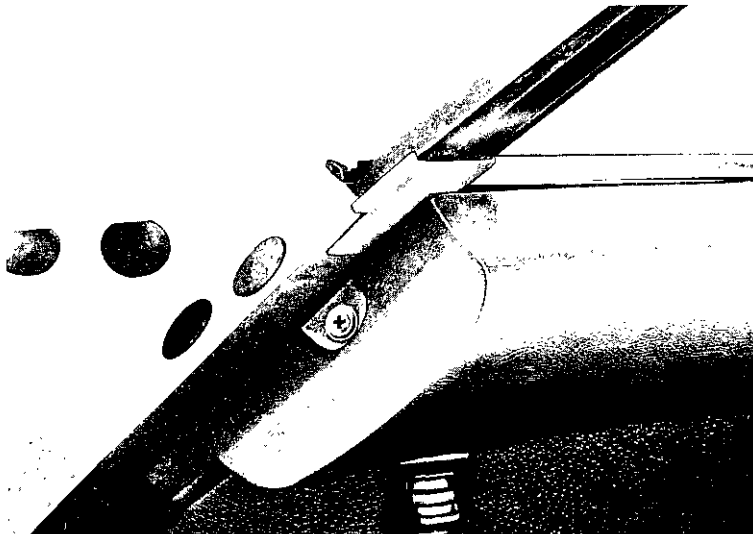


PREPARING DOOR SHELLS FOR REMOTE CONTROL OUTSIDE MIRROR

1. From the center of the hole for the first moulding clip, draw a vertical line 85 mm (3 1/2 in.) long down the door panel.

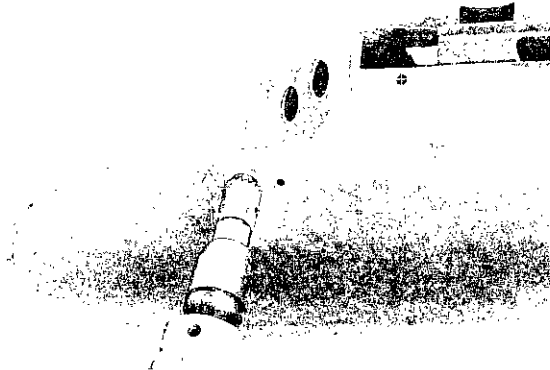


2. Hold reinforcement plate in position and mark holes as illustrated in picture. Then drill holes according to specifications.

CAUTION: The distance between the top edge of the large hole and the door mating edge must be at least 13 mm. The hole for the cables can be opened up with a standard hole saw, e.g. Black + Decker Type 21748 (see illustration).

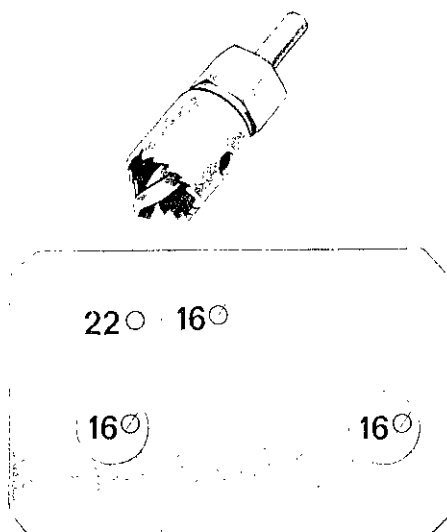


3. Drill another 5 mm dia. hole through the door panel and reinforcement plate (in front of the rear bottom hole). Secure the reinforcement plate with an appropriate pop rivet.

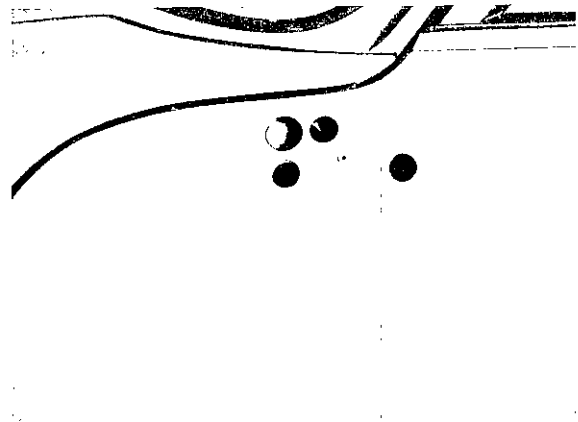


4. Install a cable clamp on the inside of the reinforcement plate (behind the top door hinge) so that the wires will not be damaged by the window regulator teeth.

Note: If the new mirror is installed on doors with old type mirrors, the front mounting hole must be plugged (welded).

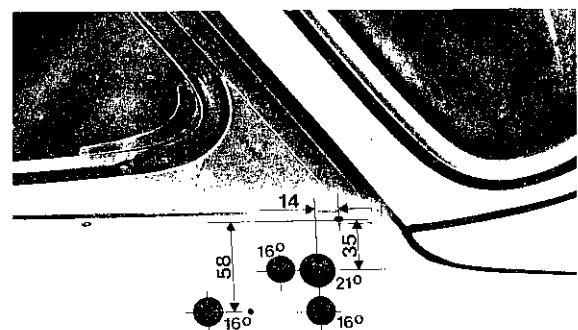


Hole pattern for passenger door mirror
(installation instructions, see 10.3 - 1/4).

5. Cut opening (according to specifications) for operating switch in inner door panel, top.

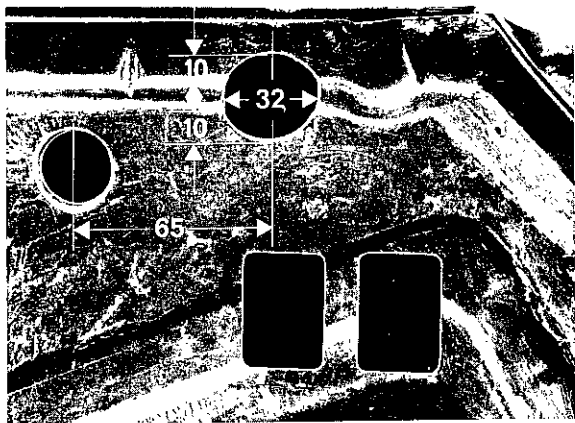

6. If necessary for the harness opening, drill another 20 mm dia. hole below the present hole in the front inner door panel.

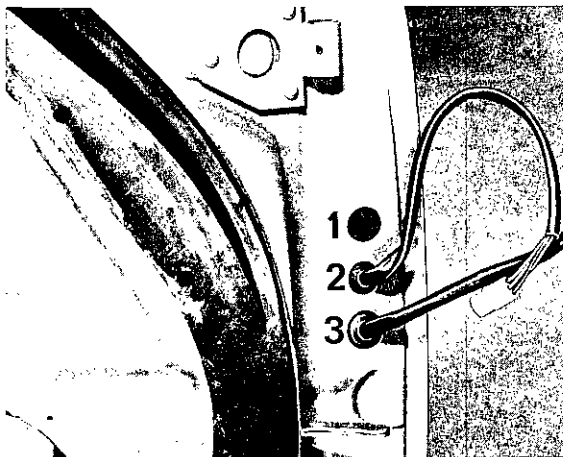




- 1 - For electric window winder.
2 - For outside mirror.
3 - For loudspeaker.

SERVICE INSTALLING NEW DOOR LOCK CONTROLS

All 1977 models will have doors with an improved, anti-theft lock control. The lock button lowers into the trim strip completely when the door is locked. Unlocking from the inside is by turning the new rotary knob.

Installing

1. Remove trim strip and inside door panel.
2. Exchange lock button holder for new part with a square pin and insert the new lock button rod.
3. Transfer center point of square pin to door panel. Cut an opening of 65 mm diameter in pressboard panel with a sharp compass. Cut out door panel trim around the square pin.
4. Open up hole in trim strip to 14.5 mm diameter for lock button and insert new guide sleeve.
5. Install inside door panel, lock button and trim strip.
6. Insert cover, mount rotary knob with fillister head cap screw M 5 x 12 mm and spring washer, and press on cap.

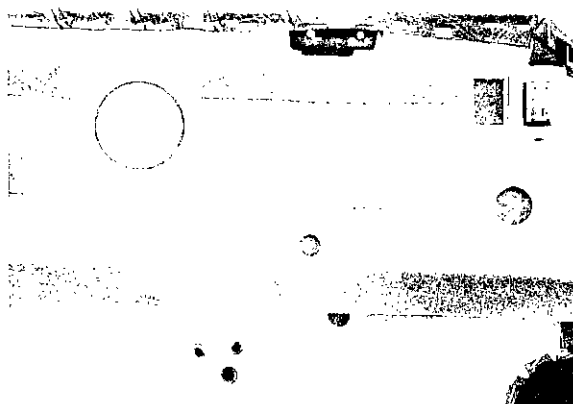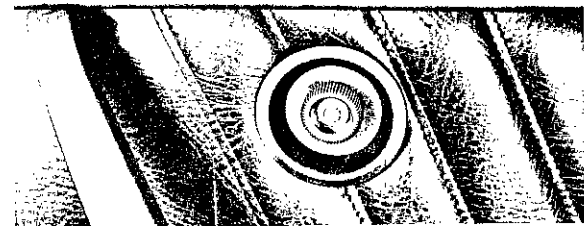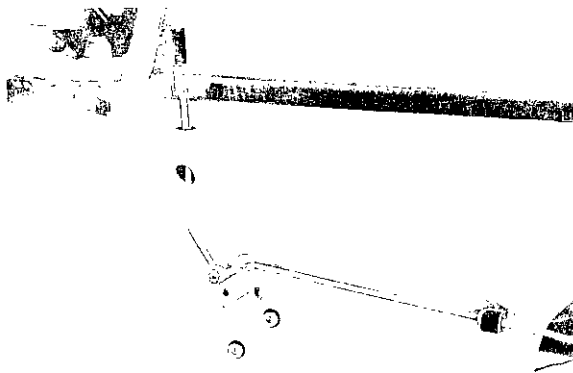

7. Check operation of door lock controls.

INSTALLING DOOR WINDOW LIFT CHANNEL

Assembling

1. Place door window on soft material and remove grease from lower edge.
2. Use new rubber insert, Part No. 901 542 491 21, and fit it on window glass to match lift channel.

Note

Clean rubber insert with acetone before installing. If wax coating is not cleaned off, window glass could disengage from lift channel.

3. Press in window lift channel.

Note

The window lift channel of a coupe must be installed so that the channel begins 88 mm behind edge of glass.




Coupe - window glass

The window lift channel of a Targa must be installed so that the glass fits fully in the plastic guide.

Window lift channels must be pressed in all the way over their entire length. Light taps applied to the channels while pressing the glass in will facilitate installation.

4. Place window in door and coat sliding surfaces of window regulator with a multi-purpose grease.



Targa - window glass

REMOVING AND INSTALLING ELECTRIC WINDOW REGULATORS

General


Beginning with the April 26, 1972 production, new electric motors with an integral transmission, as well as modified toggle switches with mounting frames are used. Electrical connections are made according to a new wiring diagram. Electric window regulators can be installed in Coupe models only.

The new regulators were first installed in the following vehicles:


| | |
|-------|--------------|
| 911 T | 911 210 2072 |
| 911 E | 911 220 0809 |
| 911 S | 911 230 1391 |

Removing


1. Remove window ledge rail and lock button.
2. Remove toggle switches. If possible, first position window glass about 10 cm (4") above its lowest position.
3. Remove entire door panel and sealing foil.
4. Remove outer chrome strip at window base.
5. Remove all window frame fasteners. Pull the frame out.
6. Push window glass forward and detach from the regulator. Remove upper door well weather seal and take the glass out.

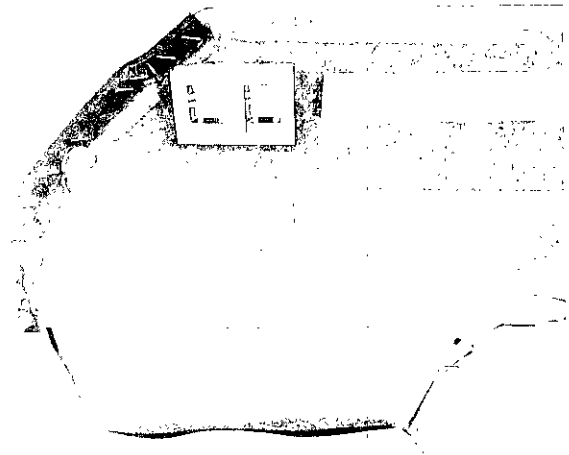

Rear side of door panel with weather seals and self-sealing mounting clips.

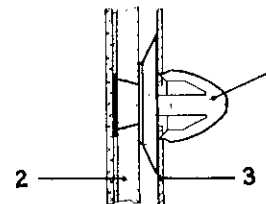

- 1 Clip
- 2 Door panel
- 3 Door inner sheetmetal panel

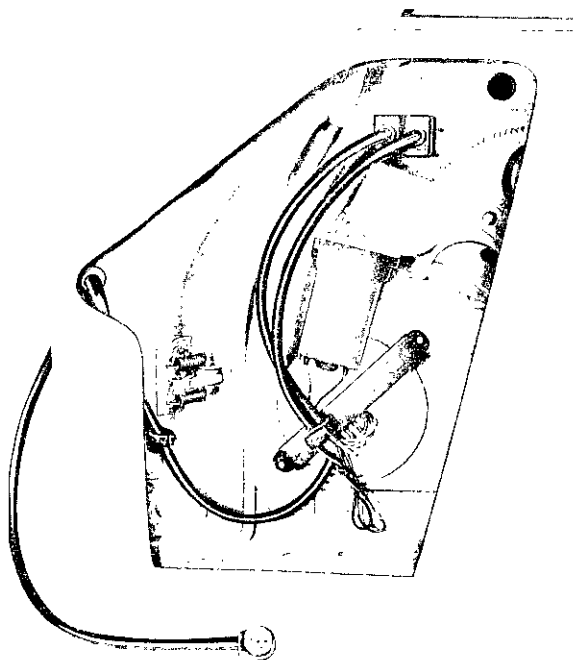


New motor and transmission with cable layout.

7. Take wires out of retainers, disconnect them from junction bar, and pull wire looms out together with caps. If the wire loom leading from the door into the car's interior is to be removed, it will be necessary to take the door off.

8. Unscrew window regulator and remove.

9. Remove stop wedge from door base.

Installing

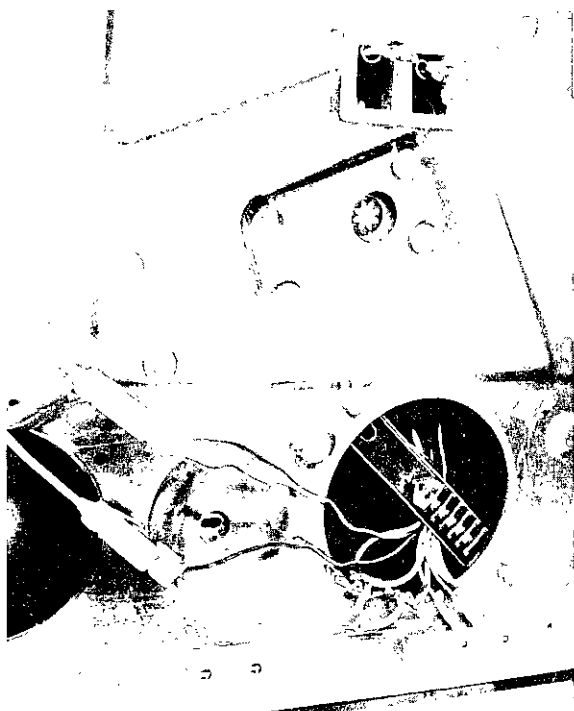

1. Insert wire grommet in forward part of inner sheetmetal panel of door. Lead the connecting wires into the car's interior. Install door.

2. Insert window regulator and fasten. Install stop wedge.

3. Run the regulator with a battery or battery charger to bring window to about 10 cm (4") above its lowest position by connecting the positive wire to green and negative wire to black wires in motor. If the regulator moves up, switch the wires to make it move down.


4. Install carrier plate with junction bar.

5. Insert toggle switches, cover caps, and wire looms. Connect all wires according to the new supplemental wiring diagram in Group 9, page 0, 1 - 2/11. Fasten the wire looms to carrier plate and inner sheetmetal panel.



6. Install door well weather seal. Place window glass in door well and attach to the regulator.


7. Insert door window frame in door and seal along the outside and inside flanks of top door edge with black, non-hardening putty. Fasten the frame in such position that sufficient pressure will be exerted against the door weatherstrip.

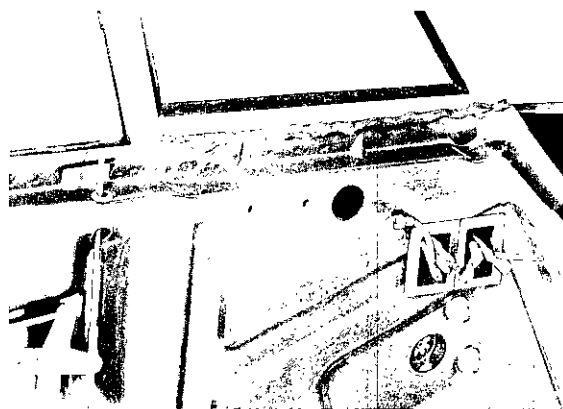

Note


Do not bend the window frame to fit.

8. Check window regulator for proper operation and free movement. If necessary, readjust regulator with adjusting screws so that the top edge of the window is parallel with the top part of the window frame.

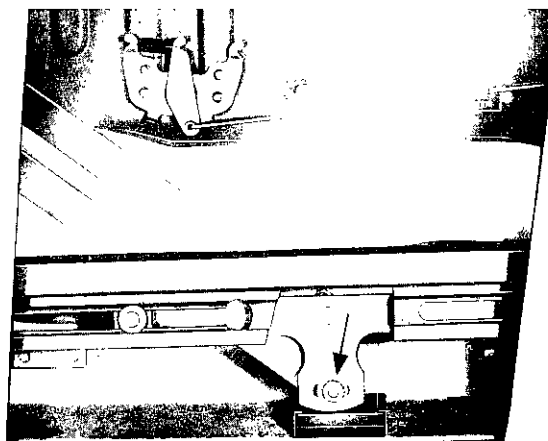




9. Glue the sealing foil in leak-free. Cut out a section in the toggle switch area.

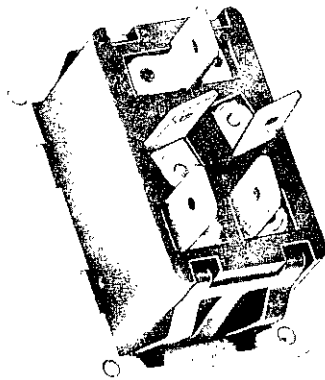

10. Install door inner panel, armrest with inner door release, door pocket, folding compartment, door ledge rail, and outside window base chrome strip.

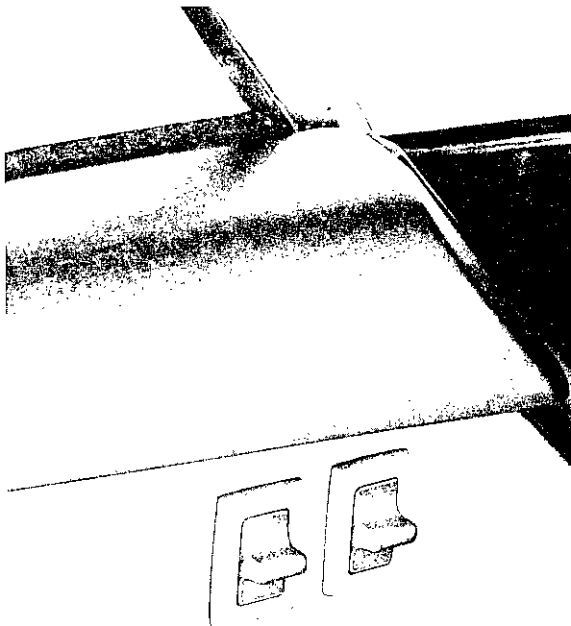

11. Connect toggle switches and install.


Note

When properly installed, all toggle switches are positioned with the single connector facing up.


The rear toggle switch in driver's door actuates the passenger side window.

ELECTRIC CROSS ARM WINDOW CONTROLS - from 1980 Model

Electric cross arm window controls are installed in all cars as of the 1980 model year. These new window controls have a different design for coupe and targa models. Targa window controls run slower and have two adjustable height limit stop brackets at top. Coupe has one adjustable stop bracket.

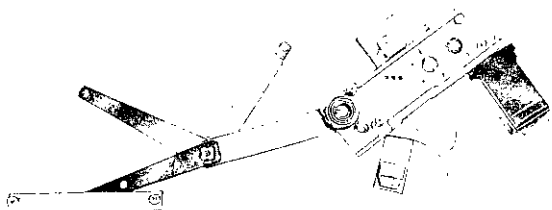


Targa Version

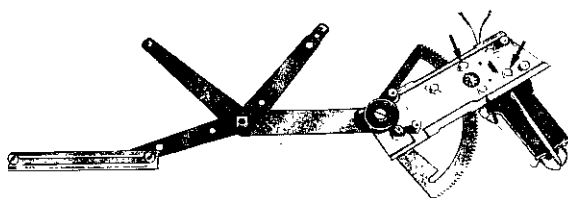

Coupe Version

These new window controls have an additional guide rail, which is bolted on the door inside panel (arrows).

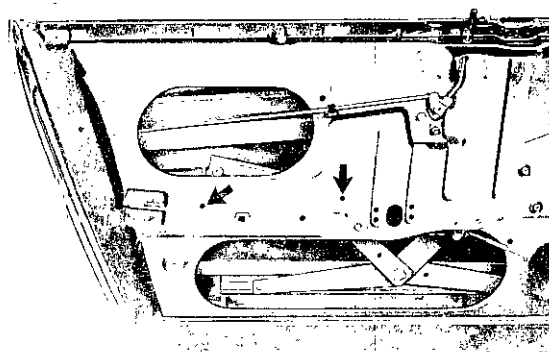


Coupe and Targa window controls use electric motors, of different power outputs and therefore cannot be interchanged. As of November 20, 1979 new light weight motors are used, whose power corresponds with the former versions.

Coupe motor, Part No. 911.624.014/015 01
formerly 00

Targa motor, Part No. 911.624.014/015 41
formerly 40

These motors are interchangeable with the former versions.

In conjunction with the new window controls, the door window glass has new one-piece window lift channels.

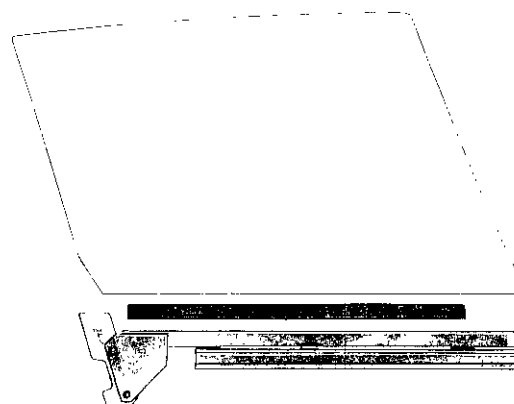

Targa window with new lift channel.


SERVICE INSTALLATION ELECTRIC CROSS ARM WINDOW CONTROLS

General Information

Electric cross arm window controls are installed in all cars as of the 1980 model year. These new window controls guarantee smoother door window operation and in future will replace all parallel arm window controls for Types 911 and 911 Turbo.

Later the Parts Catalog will be changed to include the mechanical cross arm window controls, which replace the mechanical parallel arm window controls after depletion of stocks and can be installed in all doors.

Service installation of these new cross arm window controls will require exchange of the lift channels on the door windows or use of new door windows.

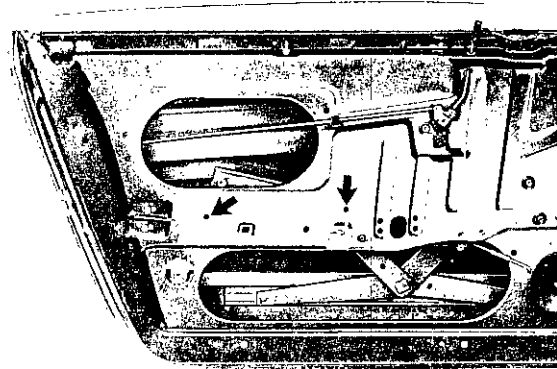


7. Loosen old lift channels from window by lightly tapping and then remove.

Removing


1. Remove inside door trim panel. Disconnect window control and mirror switch.
2. Pull off door window water shields.
3. Loosen and remove door window frame.
4. Disconnect parallel arm window control, detach door window at guide and remove.
5. Remove window control and electric motor.
6. Remove height adjusting screw on Targa doors.

Installing


1. Position new lift channel with cleaned (wax-free) rubber insert on window glass and press on tight.
The lift channel for Coupe door windows must be positioned 8 mm behind the front edge of the glass.

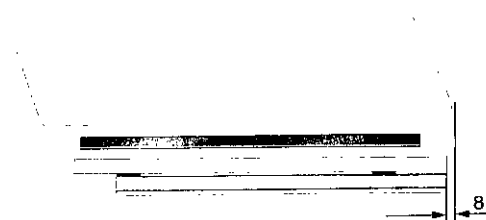


The plastic part of Targa window lift channels will have to be coated with rain molding cement, e.g. National Special Cement 670, at the groove.

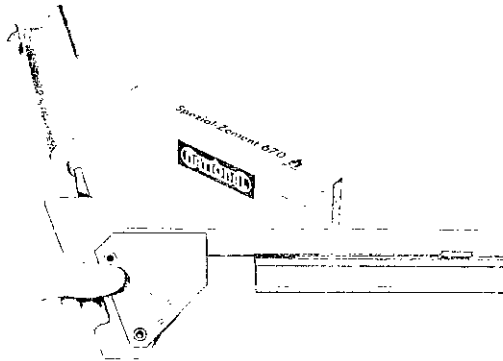


Then install window glass so that it rests firmly in guide groove and channel.

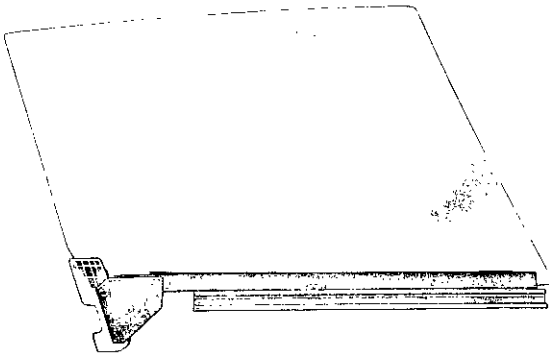

2. Mount electric motor on new cross arm window control (arrows). Guide wire harness between bolts so they will not interfere with moving parts.
Set window control at center position for installation in door.

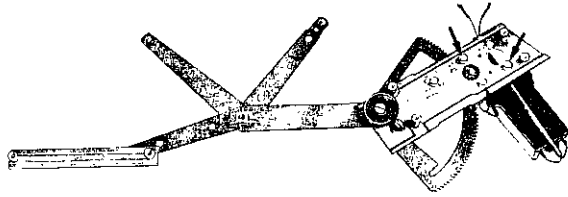

3. Find location for holes on inside door panel with a compass according to given dimensions and drill two 7.0 mm (9/32 in.) dia. holes.

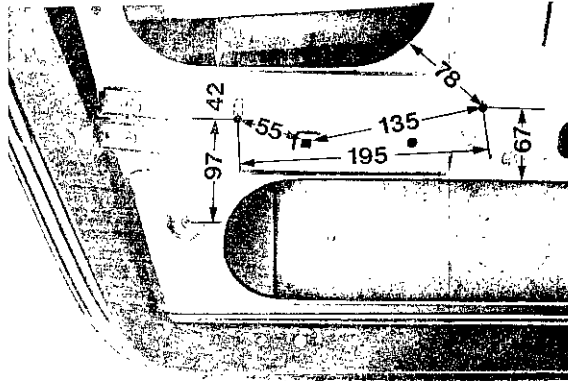


Note

If door window sags at rear when operated, the rear mounting hole (see broken line) must be extended upward.

Note

A slot must be made according to given dimensions in door inside panel of Targa models. The stop bracket for height control will be accessible through this opening.

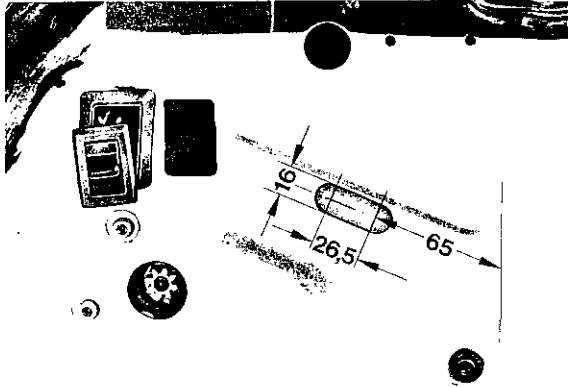

8. Check door window for easy movement. Close door and check entire periphery of glass and/or window frame for neat fit at door weatherstrip, correcting window frame adjustment if necessary.
9. Install door window water shields and inside door trim panel. Check operation of window control and mirror switch.
4. Check window guides for wear and replace if velvet is partially worn. Glue at top when inserting in door window frame.
5. Insert window control and bolt base plate. Connect wire harness with switch.
6. Insert window glass and guide plastic rollers of window control into window lift channel. Mount short guide rail on inside door panel with M 6 x 10 bolts and washers. Lubricate moving parts with a multi-purpose grease.
7. Install and secure door window frame.

ADJUSTING DOOR WINDOW - TARGA


The methods of adjustment have been improved since introduction of electric cross-arm window regulators from 1980 models on. The Targa window regulators now have two adjustable stop brackets for height control. The adjusting screw has been omitted.

Before beginning with adjustments the door gap to the rear fender and installed position of the Targa top must be checked.

Adjusting procedures require that the hinge strip, door pocket with cover, grab handle, door inside trim panel and plastic sheet be removed.

Adjusting Door Window

- Height Adjustment (arrow)

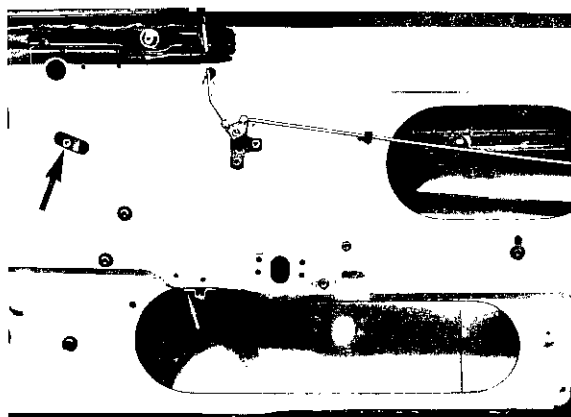


Note

Lower window until stop bracket is accessible through opening in door inside panel.

Adjust height so that window glass is aligned with roof seal and fits tight in profile seal along entire length.

- Inclination

Inclination of the door window glass can be regulated with the guide rail. If the door window glass sags excessively at the rear during movement, the rear bolt hole must be extended up.

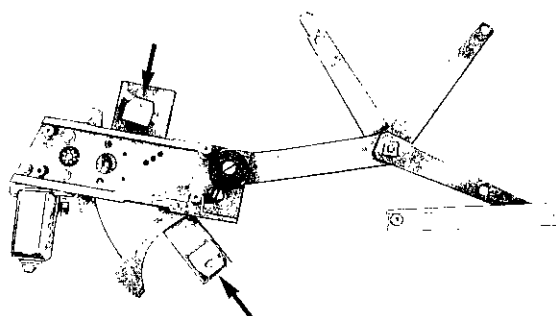


Targa version with stop bracket

MODIFICATIONS IN TARGA FOLDING ROOF 1974 MODELS


1. Beginning with 1974 models, new METALLASTIK supports are used in the rear part of the folding roof; the locating pins are covered with replaceable plastic sleeves.

A = new version

B = old version

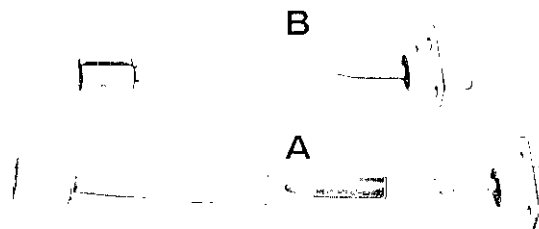

2. Modified METALLASTIK mounts, with bigger and longer receptacles, are used in the rollbar to accommodate the larger locating pins.

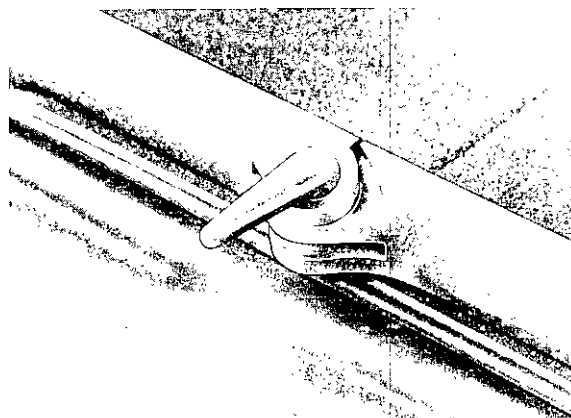

3. An additional support pin is provided in the center joint of the rear roof frame. The pin rests in rubber and provides additional rigidity for the roof.

4. Modified weatherstripping is used along the windshield frame and the front part of the roll bar to improve sealing and tightness of the roof.

NOTE:

The new folding roof can be used only in vehicles which have the larger METALLASTIK sleeves in the roll bar.

SUBSEQUENT INSTALLATION OF LOCATING PIN FOR FOLDING ROOF

NOTE: Installation of the additional locating pin may be accomplished only in folding roofs which have the pressure-cast aluminum frame. The rear frame section is of the triangular configuration.

Removal


1. Remove and slacken roof.
2. Drive hinge pin out of the rear roof frame and take the frame out.
3. Remove window ledge rails from right and left side of rear compartment, detach and remove roll bar inner panel.
4. Pull off approx. 30 cm of weatherstrip from roll bar center. Loosen leatherette and upholstery padding.


Installation

1. Replace right rear section of roof frame with one containing a slot (Part # 911 565 212 45).


NOTE:

The right roof frame section need not be replaced providing that a slot is filed into the hinge pin hole so that the locating pin points exactly to the rear when the roof is locked tight.

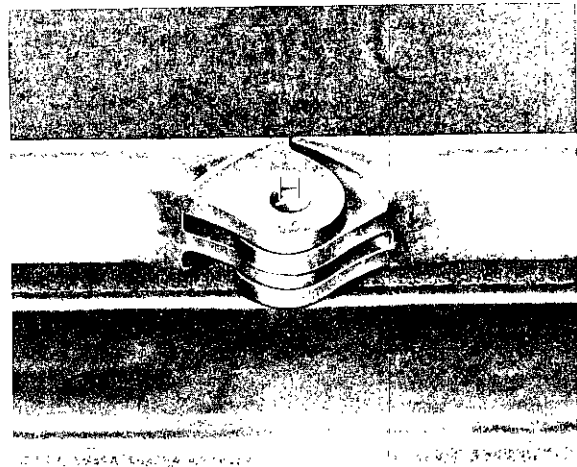


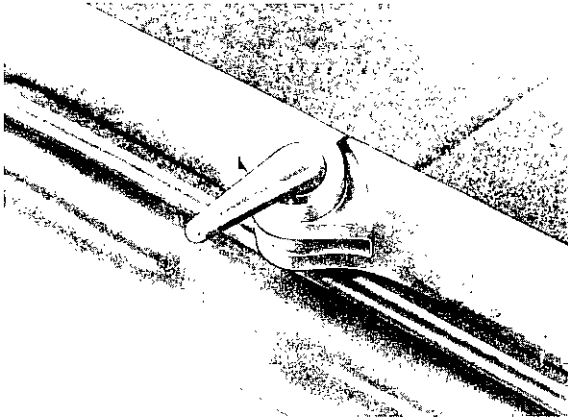

2. Install locating pin, Part # 911 565 145 10.

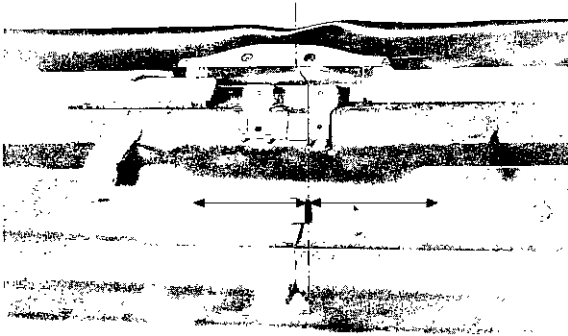


3. Measure and mark the center of the roll bar.
Center the supporting plate and weld it in.

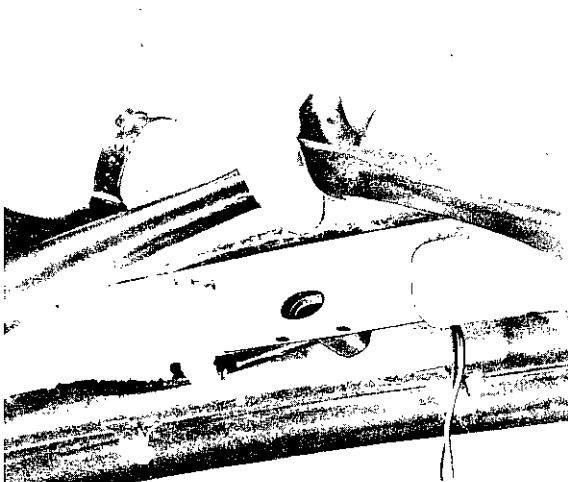

4. Align cover plate, Part # 911 565 133 40,
with sheetmetal top edge and weld, or spot-
weld. Shorten upholstery padding to fit the
cover plate.


5. Prime sheetmetal parts with primer. Attach
rubber mount, with large opening facing for-
ward, to the supporting plate using sheet-
metal screws.

6. Bend the inner panel front part to match the rubber mount.
Glue the leatherette covering to the roll bar and cut the access hole out. Insert rubber grommet.

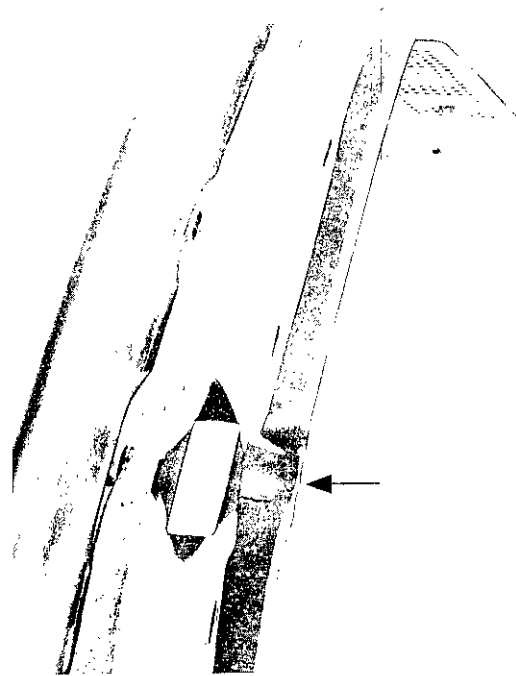


7. Install and fasten the roll bar inner panel.
Glue the weatherstrip in.

8. Place roof in position and check alignment of locating pin.

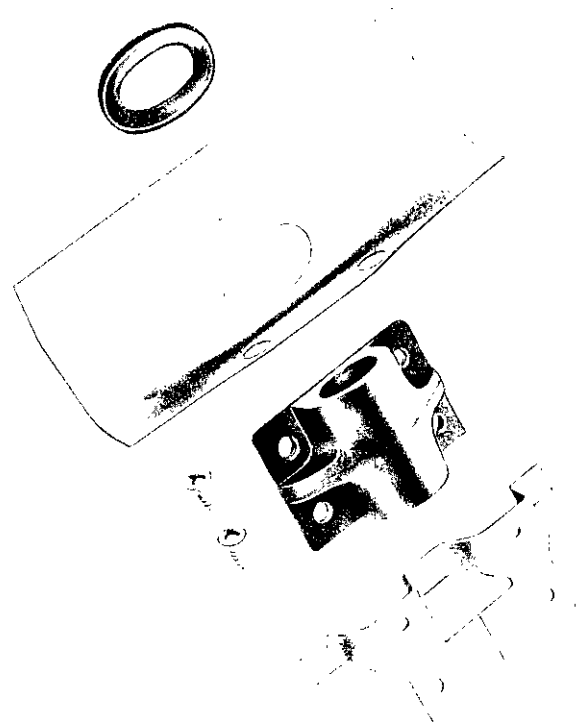


Required parts:

| | |
|---------------------|----------------|
| 1 Supporting plate | 911 565 133 40 |
| 1 Cover plate | 911 565 135 40 |
| 1 Rubber mount | 911 565 009 40 |
| 1 Rubber grommet | 911 565 189 40 |
| 1 Locating pin | 911 565 145 10 |
| 1 Roof rail section | 911 565 212 45 |

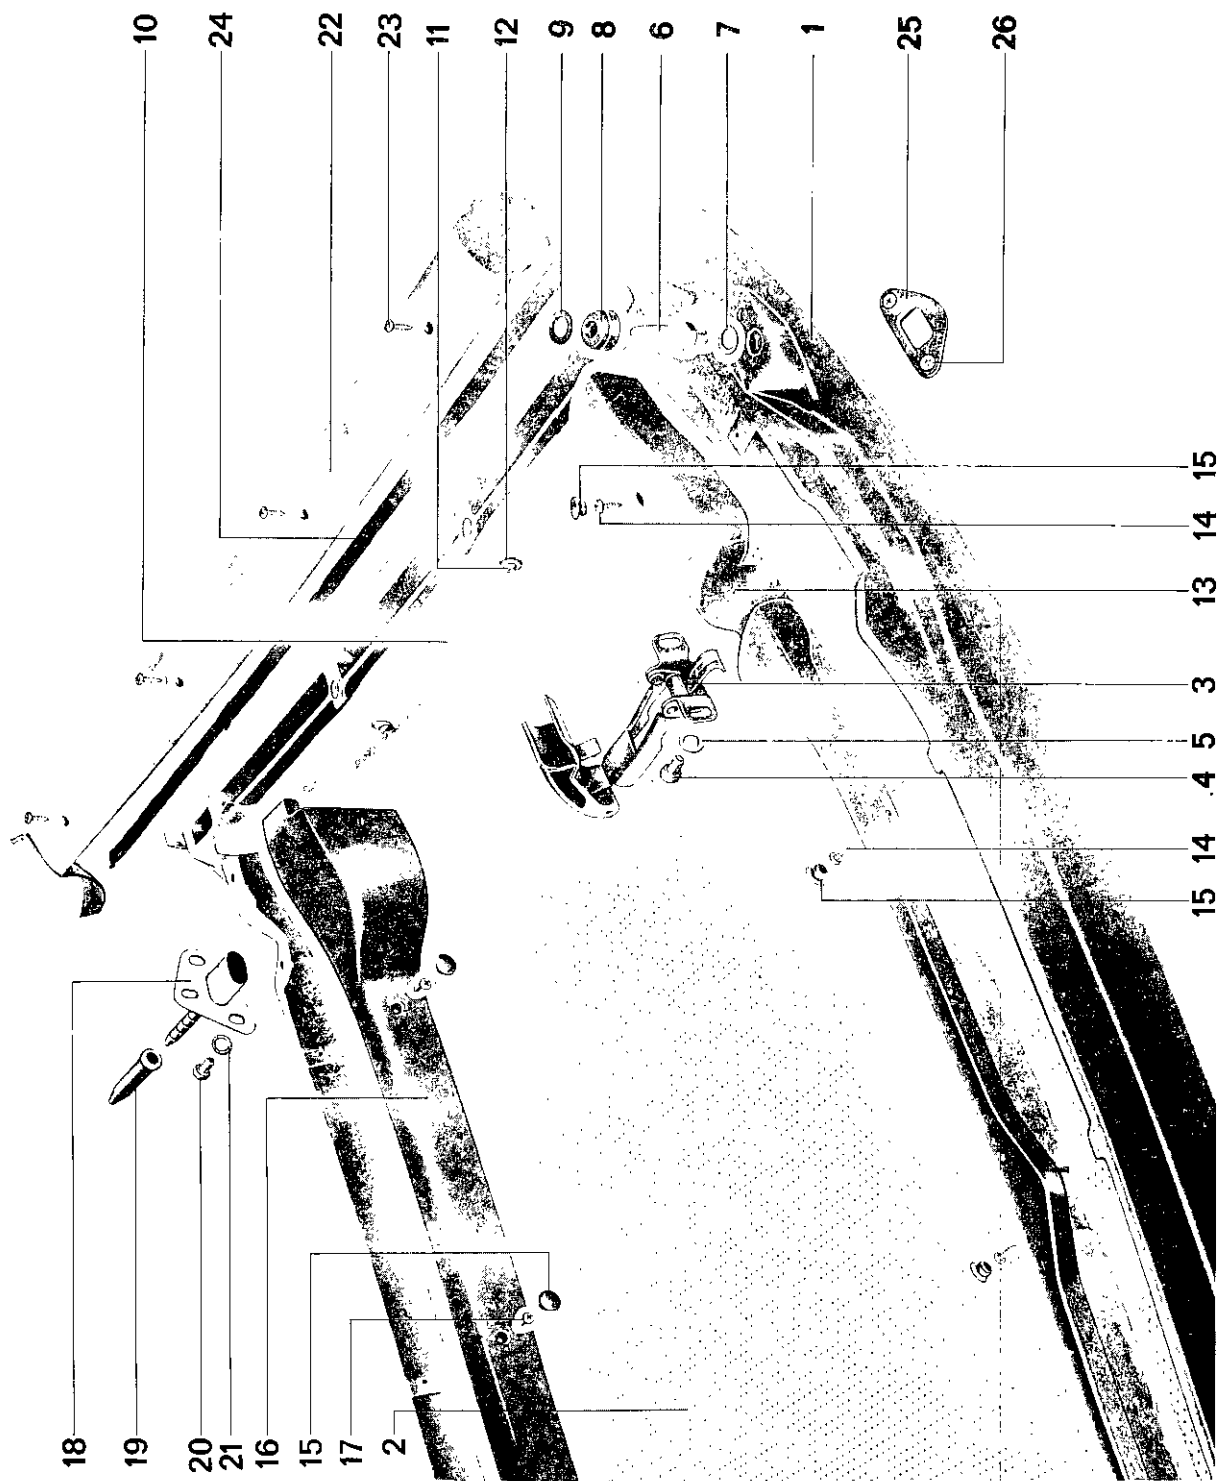

| No. | Description | Qty. | Notes | | Remarks |
|-----|-------------------------------------|------|--|--|---------|
| | | | Removal | Installation | |
| 1 | Removable hardtop | 1 | | | |
| 2 | Headliner | 1 | | Install with heat-resistant adhesive | |
| 3 | Lock | 2 | Check, replace if necessary | Adjust to tension of windshield | |
| 4 | Fillister head screw M 6 x 10 | 4 | | | |
| 5 | Washer | 4 | | | |
| 6 | Locating pin | 2 | Check, replace if necessary | | |
| 7 | Washer | 2 | | | |
| 8 | Stop pad | 2 | Check, replace if necessary | | |
| 9 | Spacer | X | | If required, install on stop pad to adjust height | |
| 10 | Roof edge guard | 1 | Loosen glued edge, remove metal screws | Glue properly to roof frame | |
| 11 | Oval head metal screw 3.5 x 13 | 4 | | | |
| 12 | Washer | 4 | | | |
| 13 | Roof edge guard front | 1 | Replace if damaged | | |
| 14 | Oval head metal screw 3.5 x 9.5 | 5 | | | |
| 15 | Cap plug | 9 | | Replace if necessary, plug openings in rear and front roof edge guards | |
| 16 | Roof edge guard rear | 1 | | | |
| 17 | Oval head metal screw 3.5 x 9.5 | 4 | | | |
| 18 | Metal/plastic bearing, left + right | 1 | Check, replace if necessary | Adjust so that roof and roll bar upper edges match | |
| 19 | Cover | 2 | Check, replace if necessary | | |
| 20 | Fillister head screw M 6 x 10 | 6 | | | |

| No. | Description | Qty. | Notes | | Remarks |
|-----|--------------------------------------|------|---|--|---------|
| | | | Removal | Installation | |
| 21 | Washer | 6 | | | |
| 22 | Roof frame seal side, left and right | 1 | Loosen glued front and rear ends, remove metal screws | Glue end pieces properly, using foam rubber underneath if required. Adjust door window seal, then tighten. Treat rubber seal with, for example, glycerine etc. | |
| 23 | Oval head metal screw 3.5 x 9.5 | 8 | | | |
| 24 | Sealing tape | 1 | Pull off | Glue on roof frame along complete length of seal | |
| 25 | Escutcheon, lock | 2 | | Installed for hard-top roof only | |
| 26 | Oval head metal screw 3.5 x 9.5 | 4 | | | |

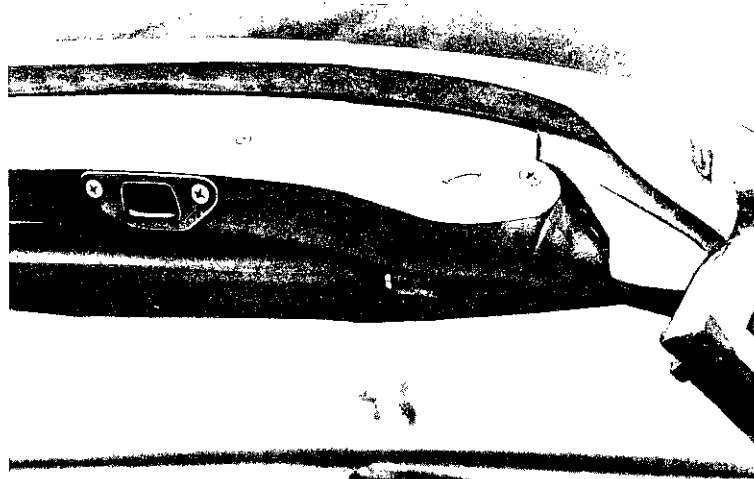

Removable hardtop escutcheon on windshield frame


REPLACING FOLDING OR SOLID ROOF

Note

Targa models (from 1974) can be equipped with either a folding or solid roof. Two escutcheons have to be installed on the windshield frame for the roof locks on models delivered with folding roofs. Adjustments are the same for both folding and solid roofs.


Converting

1. Remove folding or solid roof.
2. Cut out and paste leatherette on windshield frame for escutcheons.
3. Install escutcheons, Part No. 911 565 221 40, with rust-proof metal screws 3.5 x 13 mm.
4. Install and lock roof. Place rubber washers on the locating pins to adjust height.

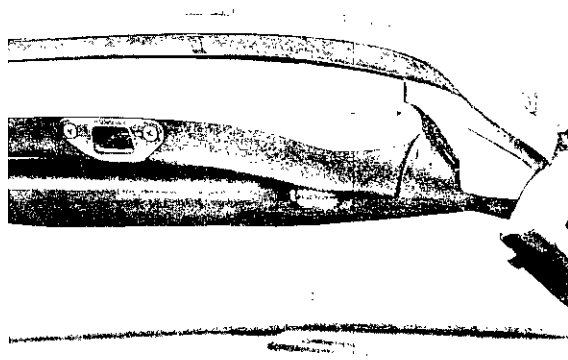

5. Check visually if all windshield and roll bar seals fit roof properly. If the seal lips are pressed together, the particular windshield or roll bar seal must be replaced.




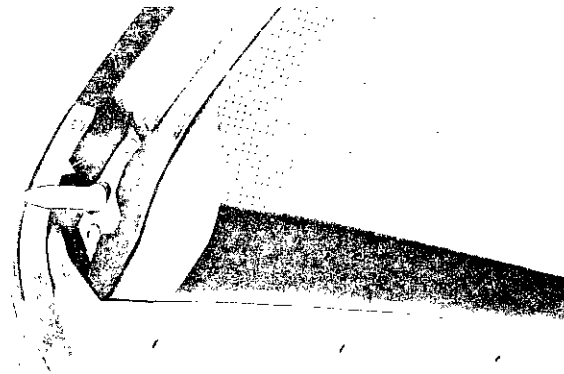

Small leaks can be repaired by gluing pieces of rubber on the roof - especially at the curved sections.



6. Close doors and remove inner door trim if the window frames and door windows protrude or do not align with the side roof frames correctly. Loosen door window frame screws and adjust the door windows to align with roof.

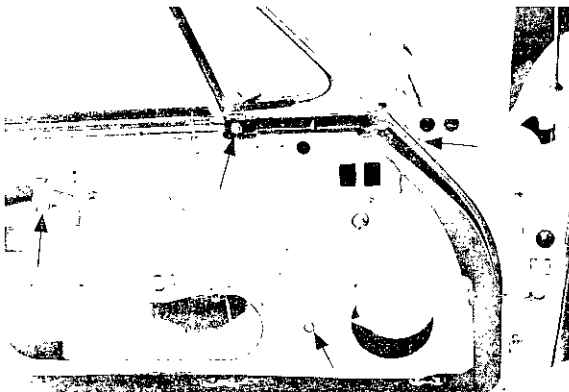

7. Check for leaks with a water test. If necessary, repair leaks with rubber or a non-hardening caulking compound.


REMOVING AND INSTALLING CABRIOLET TOP (since 1983 models)

Removing



1. Remove mounting screws and push buttons on key boards and side trim panels. Pull off plugs on radio speakers and remove all parts.




2. Remove screws on rear wall trim panel at bottom on left and right sides. Push up and pull out rear wall trim panel forward.

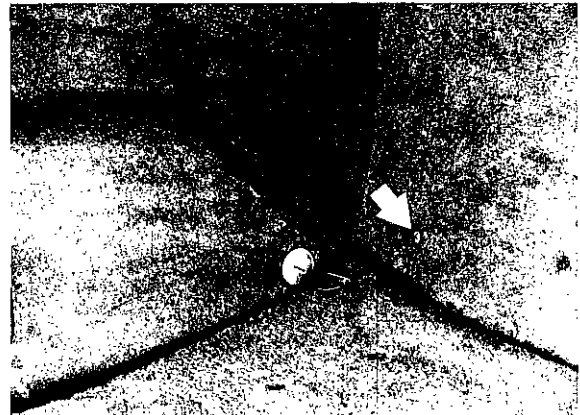


3. Remove caps on tensioning bar with a suitable tool.

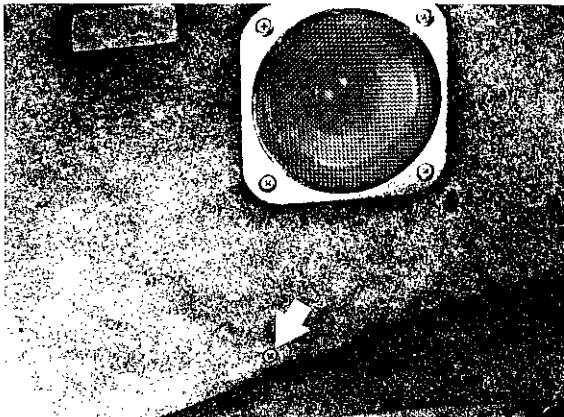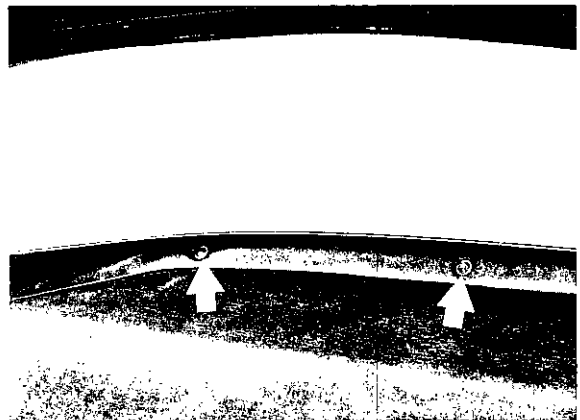

4. Remove mounting screws on tensioning bar and bracket.

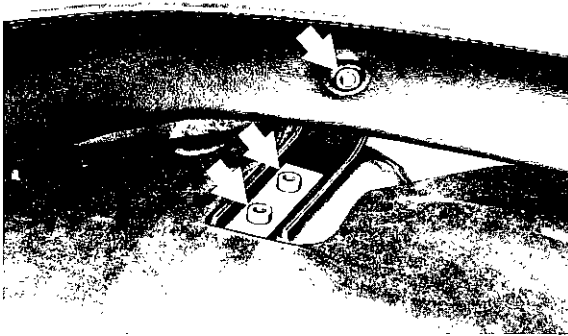

5. Open top locks. Remove mounting nuts and screws on top mounts, guide arms tensioning bar. Lift top off of car.

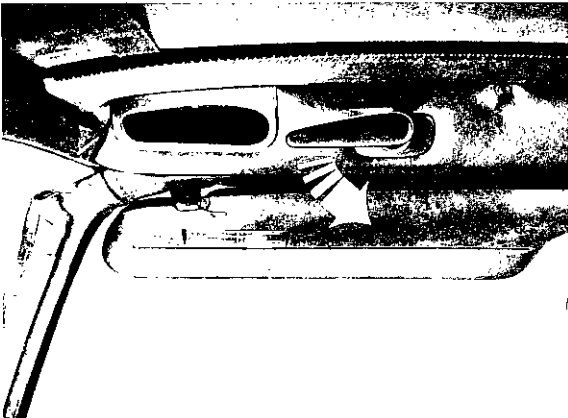

Installing


Installation is in reverse sequence.

Adjusting



1. 1 and 2 mm thick shims (max. 4 mm) can be used underneath the top hinges for correction of height.




2. The forward motion can be corrected slightly on the supports of the operating levers, so that the guide pins and locking hooks on the windshield frame engage exactly.

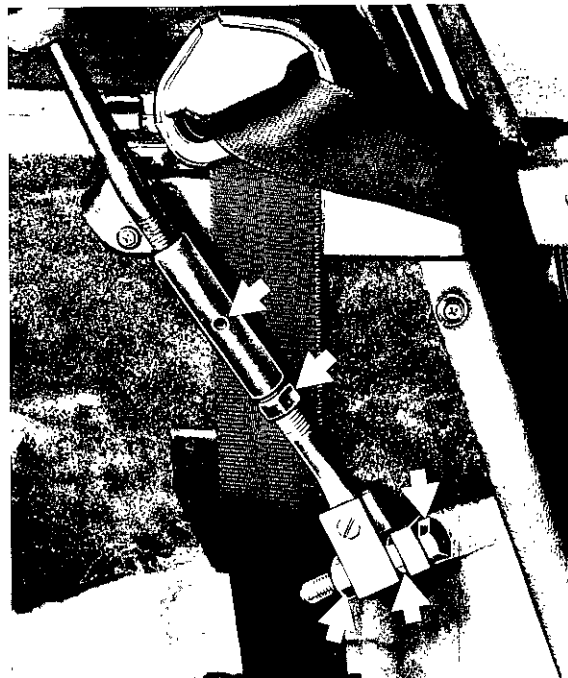



3. Close top, pull down on grip plate with one hand and lock lock simultaneously.
Repeat this step on the other side.

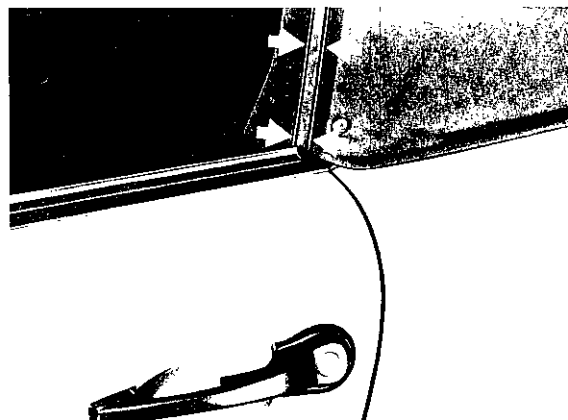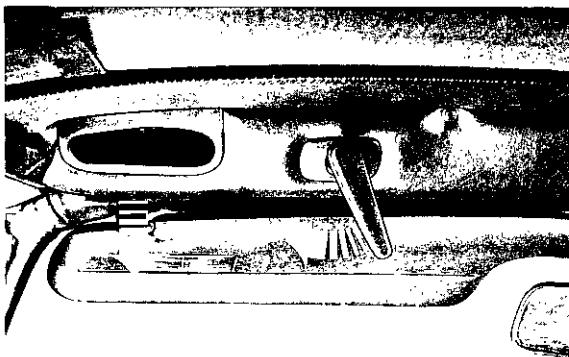



4. If the top is closed, make sure that there is equal distance from the top frame to the windows. If not, center door frames and windows to the top frame.

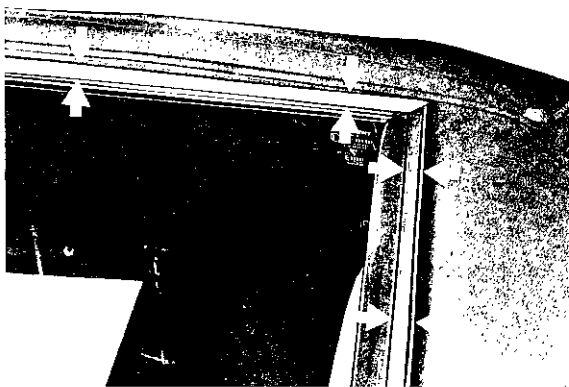

5. In order to have a smooth contour on the front top canvas cover between the front and rear hoops, the eccentric has to be adjusted accordingly.

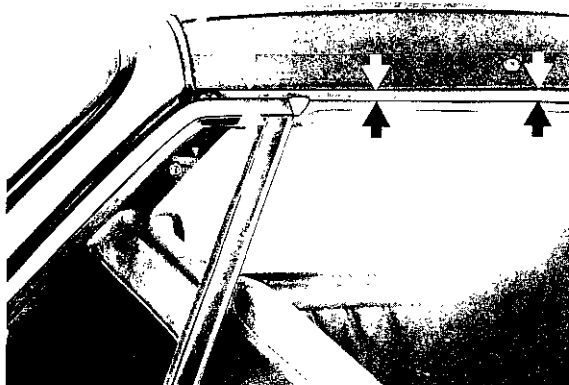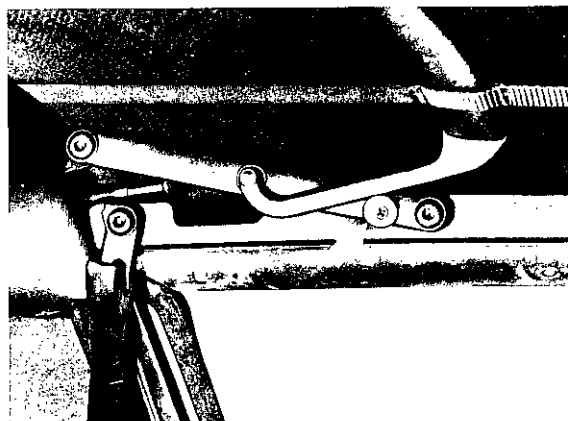



6. To adjust the tension of the rear window, loosen the mounting screws and then adjust the rear window tension with the tensioning screws on left and right sides.

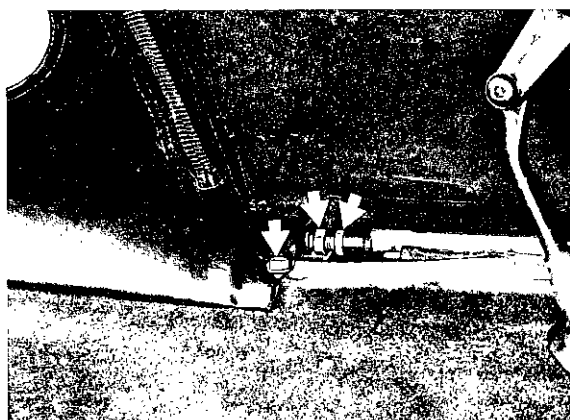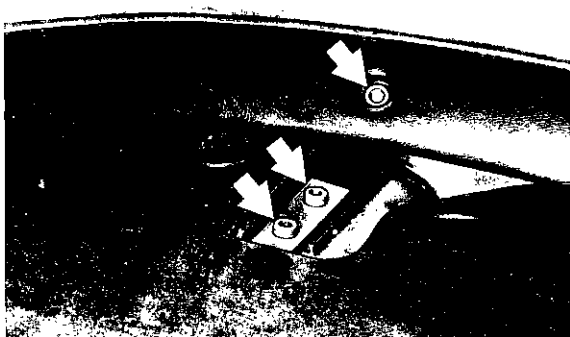


REMOVING AND INSTALLING TOP SEALS

Removing


1. Open top locks and unzip the zipper. Remove nuts and washers on the B pillars and lift off seals with profile section rails and trim forward.

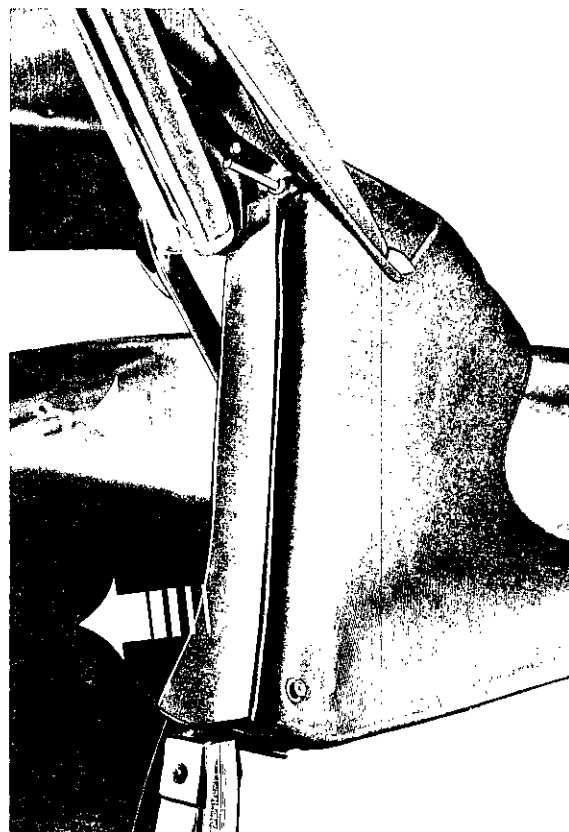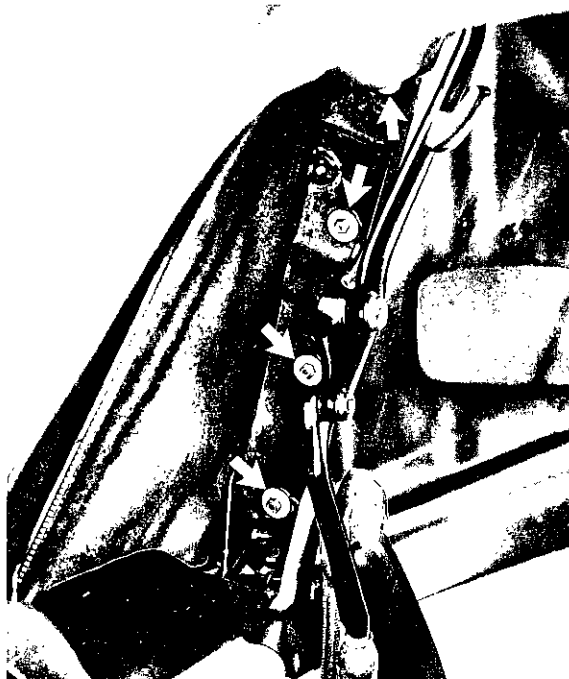


2. Lay back top, loosen screws of top frame seals, disconnect gluing on front hoop tips and take off seals.

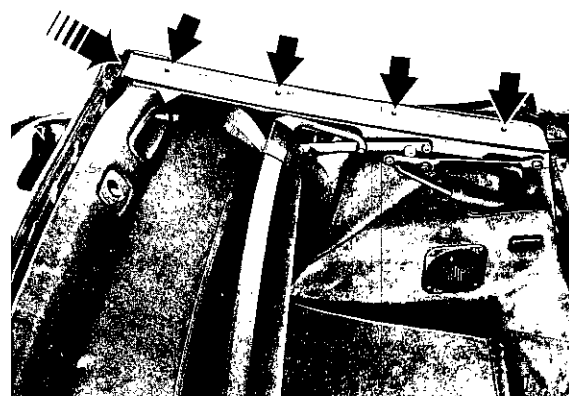



3. Remove rivets of grip plates and mounting screws of hoop trim.

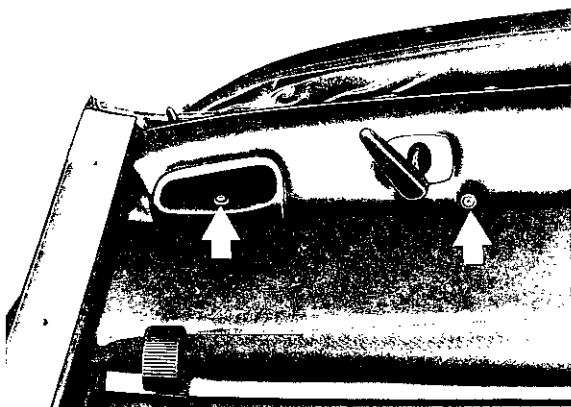

5. Loosen seal on hoop carefully.

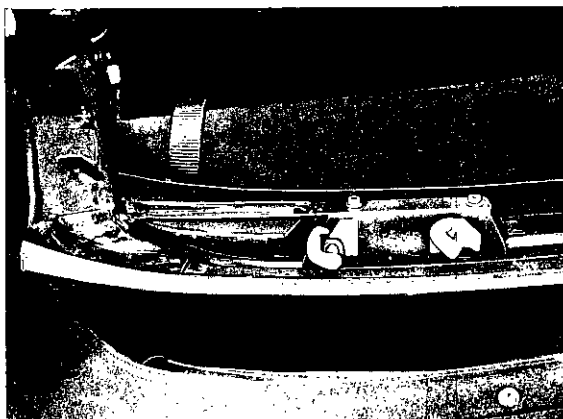




4. Remove grip plates, unclip hoop trim and unscrew locating pins and screws.

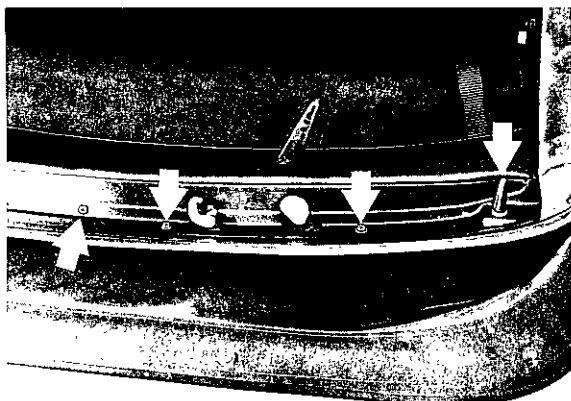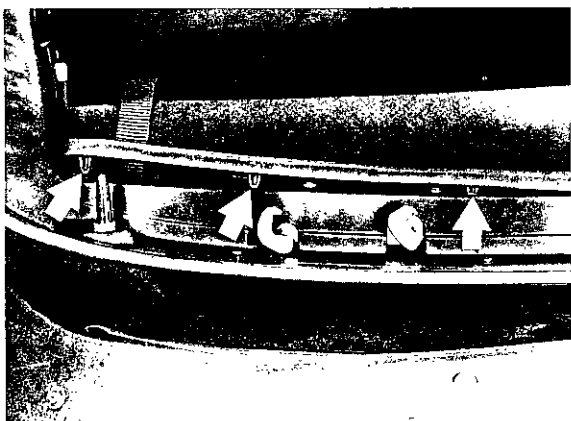

Installing

Installation is in reverse sequence.

All bearing surfaces for seals must be cleaned to remove sealing and adhesive compound.

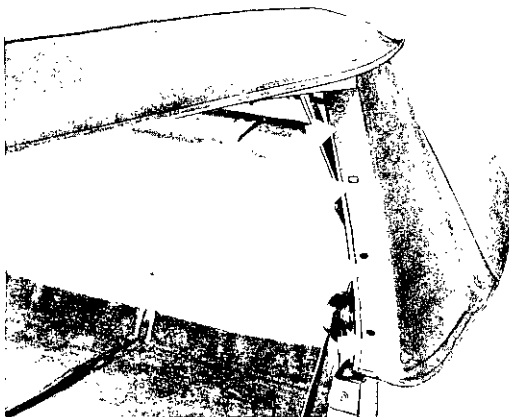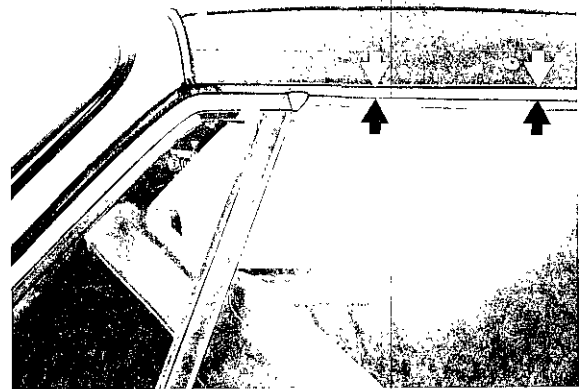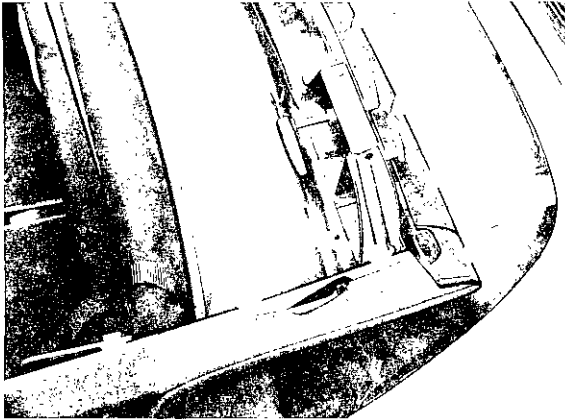

Adjusting

Seals have to be adjusted after closing the top.
Adjust top frame seals so that door windows run up into the provided sealing lips accurately.
Adjust B pillar seals so that door windows have tight contact.





REMOVING AND INSTALLING FRONT TOP CANVAS COVER


R e m o v i n g

1. Remove key boards, B pillar seals, top frame seals and seal on hoop.
See "Removing Top and Top Seals".


2. Remove snaps or Tenax bases, mounting screws, corners for tensioning cables and screws for tensioning cable guides.

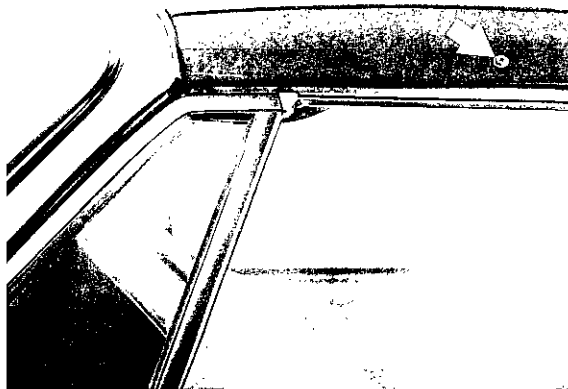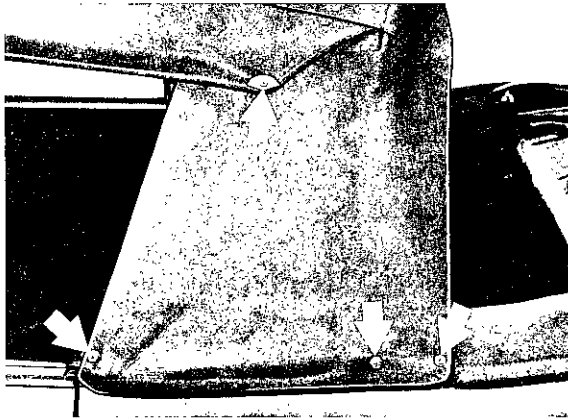

3. Unscrew mounting screws on rear top trim.

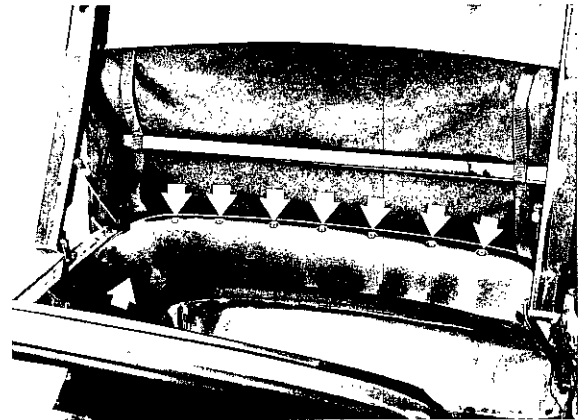


4. Disconnect front and rear cemented top canvas cover and remove screws of mounting rails.

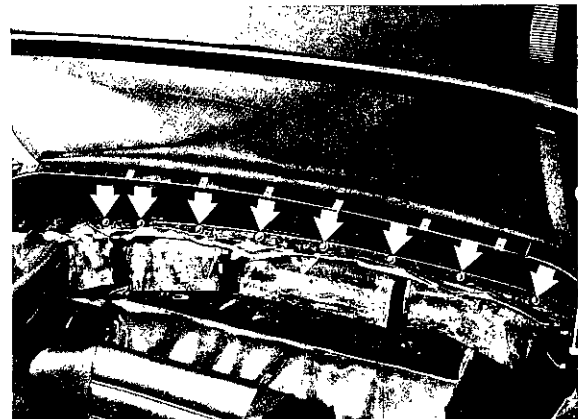


5. Loosen tensioning screws of tooth rails and remove screws.




6. Disconnect cemented top canvas cover on B pillars and main hoop.

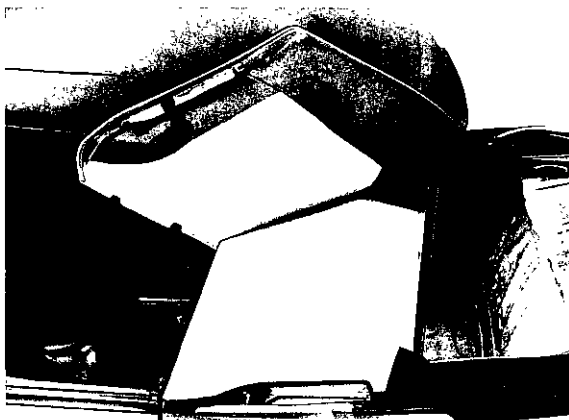


7. Disconnect cemented canvas cover on front hoop.

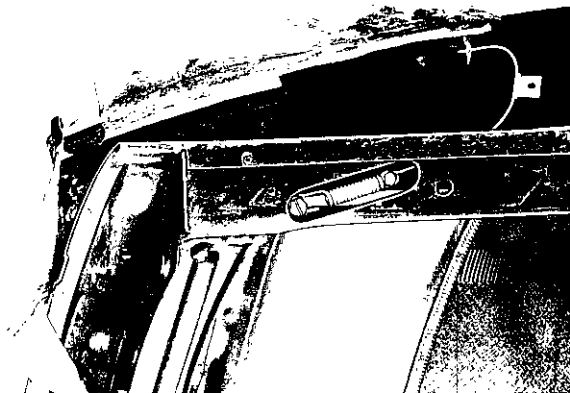


8. Disconnect rubber strap on roof liner.

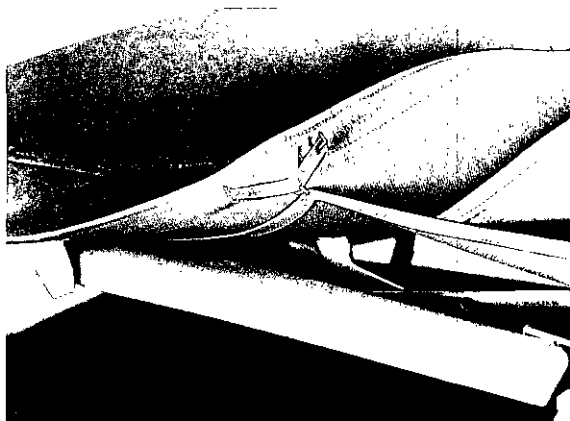


9. Unscrew screws of tensioning springs on top frame.

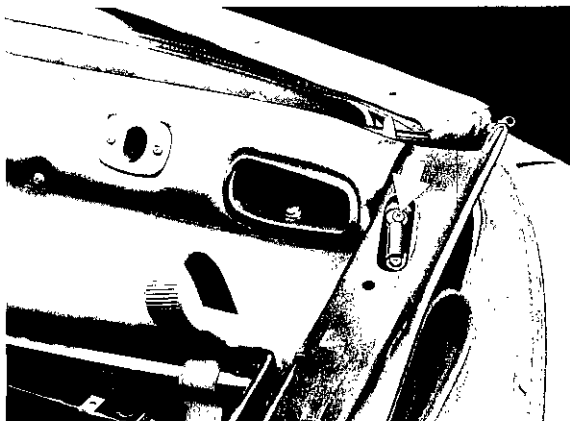


10. Unscrew tensioning springs on tensioning cables. Pull tensioning cables out of top frame and take off top canvas cover.

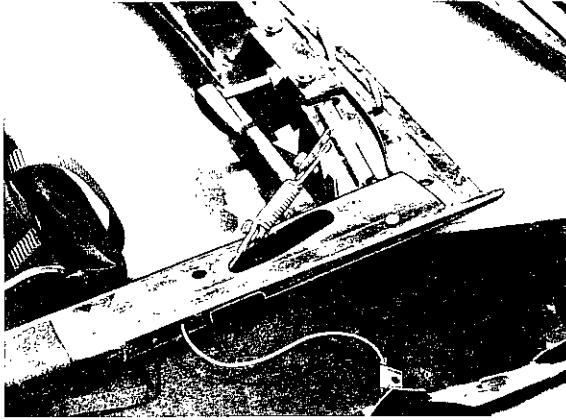


2. Guide tensioning cables into openings in top canvas cover from front end.

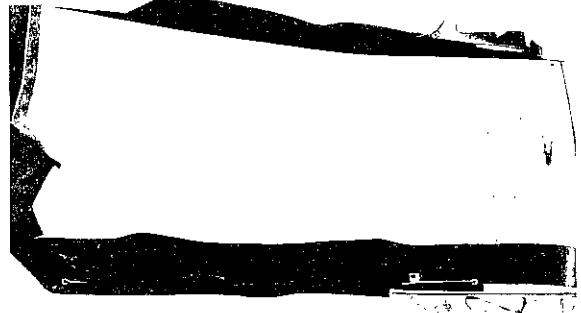

11. Disconnect tooth rails on top canvas cover and remove tooth rails.

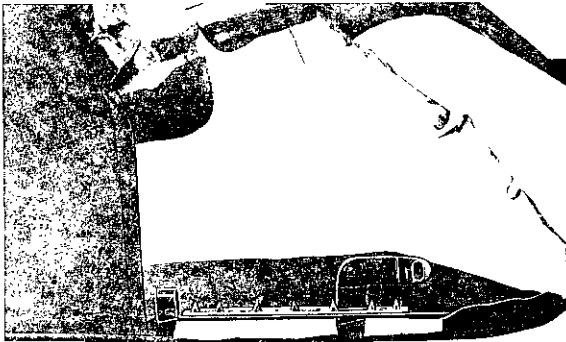


3. Mark center on rear hoop.

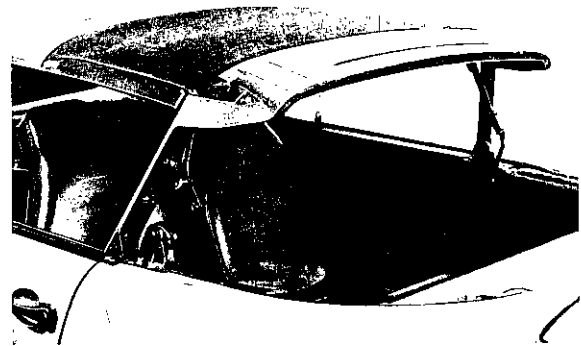

Installing



1. Guide rubber strap into top canvas cover.

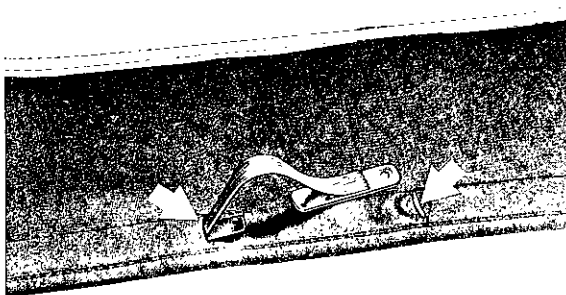



4. Mark center on rear end of top canvas cover. Install and align top canvas cover that marks are aligned. Canvas cover seam must run in groove of hoop edge. Only cement top canvas cover on threaded flange.





6. Mount tooth rails. Guide mounting strips of top canvas cover underneath tooth rails, cut to size, apply coat of cement, stretch, connect doubled in teeth and bend down teeth.

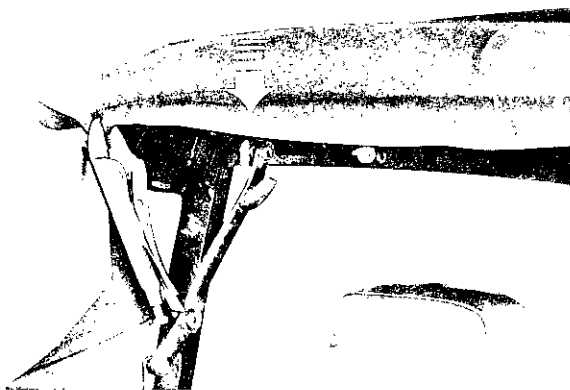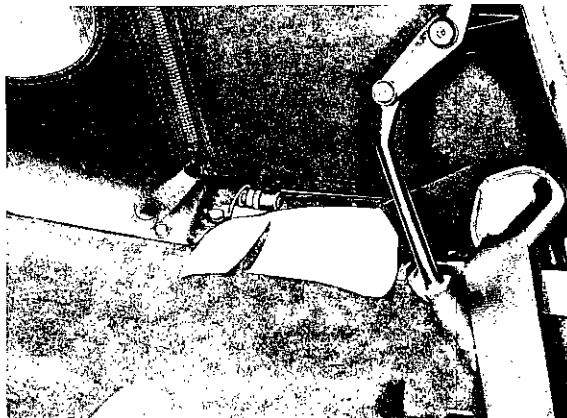


5. Cement top canvas cover on front hoop after stretching it.

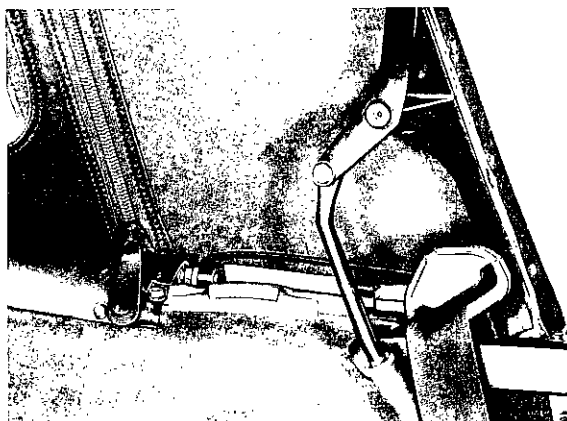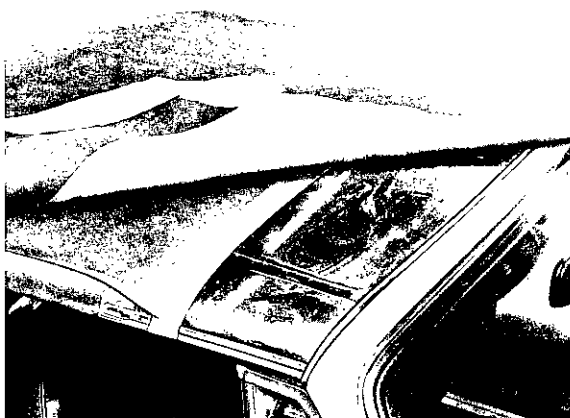



7. Loosen tooth rails and fold back top canvas cover. Insert seals and coat canvas cover with cement. Mount tooth rails and cement canvas cover on the B pillars.

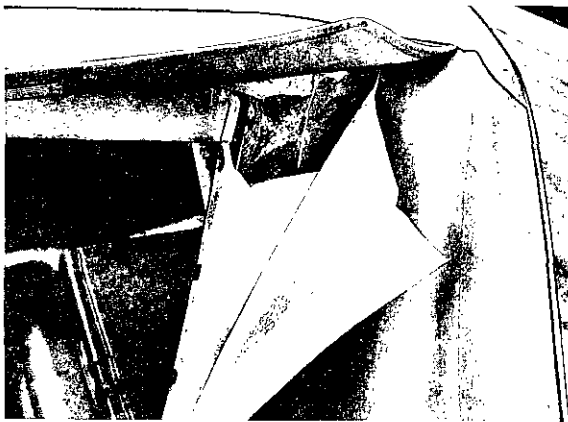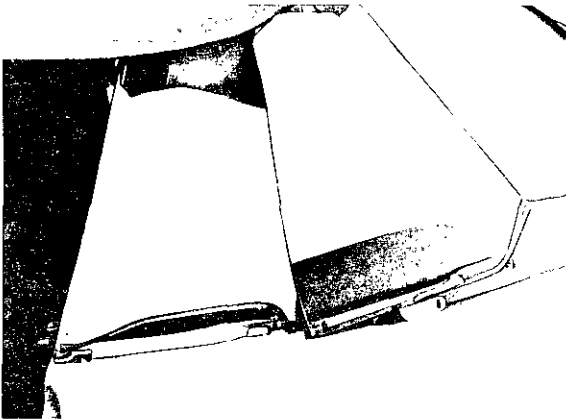

8. Stretch side canvas cover. Make a hole in the cover with a pointed punch and mount corners and tensioning cables with screws.

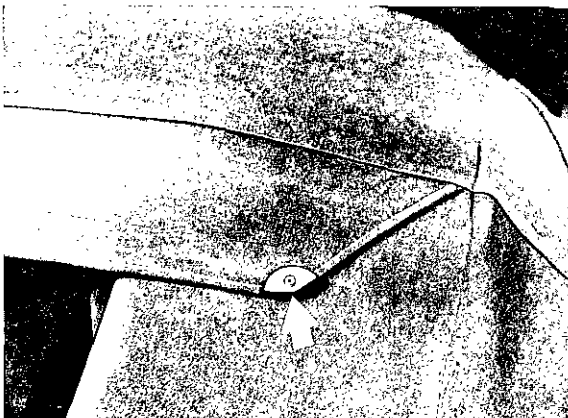


9. Install snaps or Tenax bases and screws with cloth protection washers.

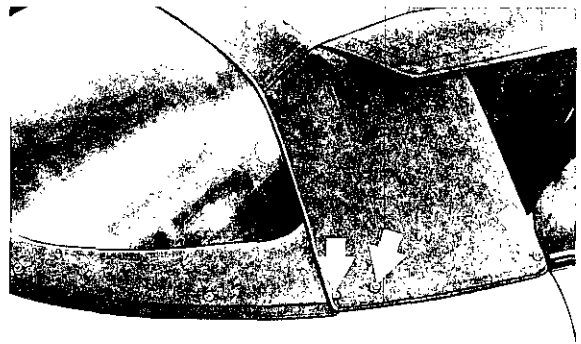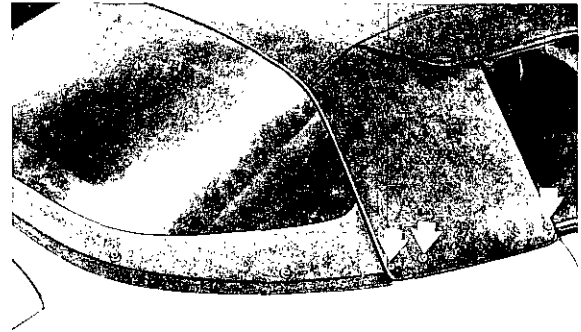


10. Cut front end of top canvas cover to size and cement on top frame.




11. Guide tensioning cables into top frame. Mount tensioning cable guides and canvas cover with screws and cloth protection washers.

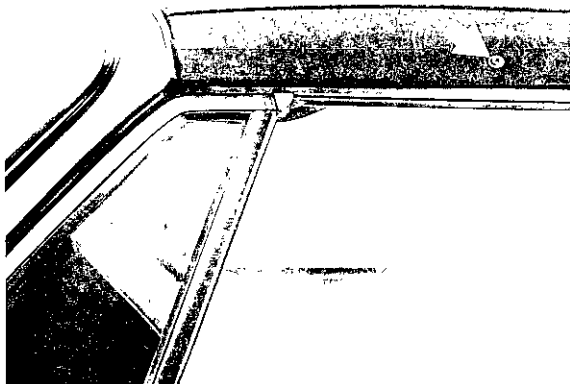


12. Sew rubber strap on roof liner.

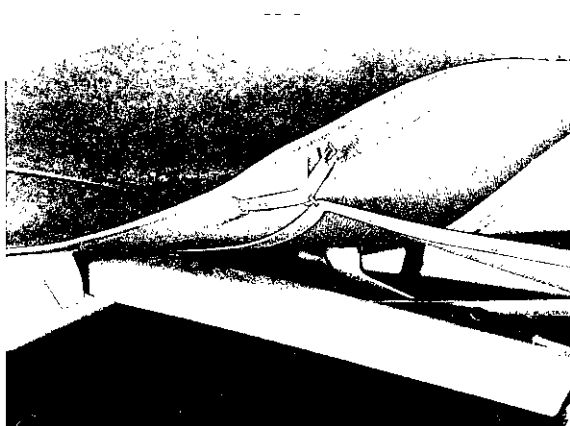


13. Clamp rear canvas cover on rear hoop with mounting rail and make hole in canvas cover with a suitable tool.

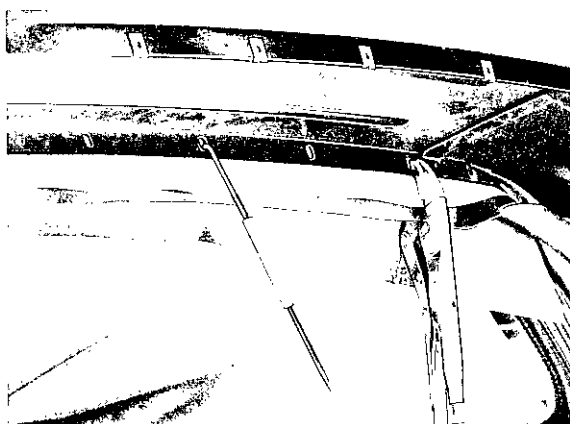


14. Mount shim wedges with screws.

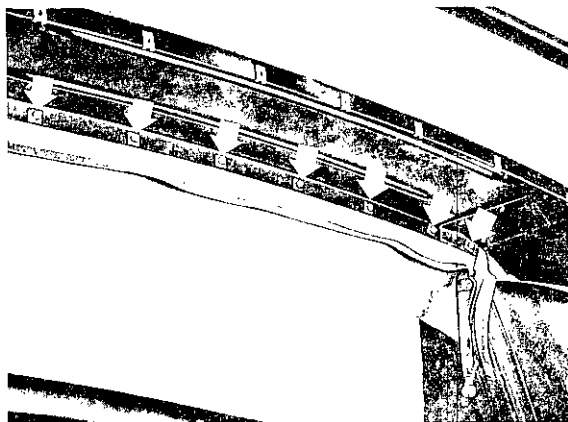


15. Cement rear and front canvas cover on rear hoop.

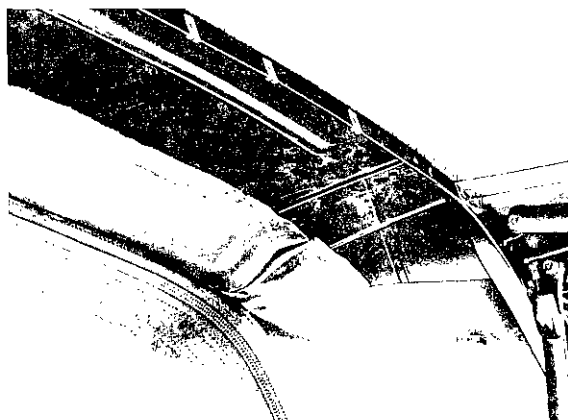

16. Install rear top trim.

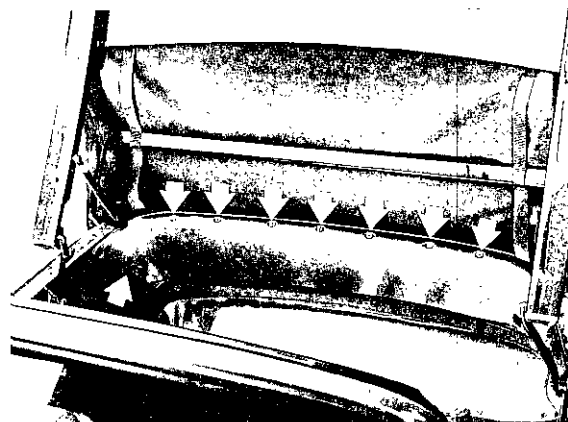

17. Screw on tensioning springs with tensioning cables. The bracket has two raised bosses, with which the tensioning force of the tensioning cables can be adjusted. Mount tensioning springs with bracket on the top frame.

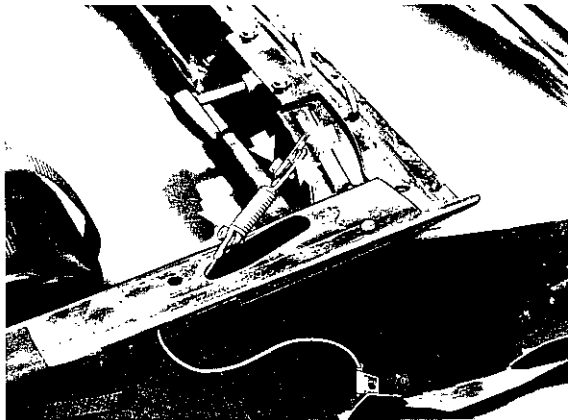


18. See "Installing Top and Top Seals" for rest of installing procedures.


REMOVING AND INSTALLING REAR TOP CANVAS COVER WITH TENSIONING BAR AND MOUNTING RAIL

Removing

1. Remove the key boards, side wall trim panels, rear wall trim panel, B pillar seals and front top canvas cover on B pillars. See "Removing Top Canvas Cover Seals and Front Top Canvas Cover". Remove screws on main hoop and disconnect cemented points.

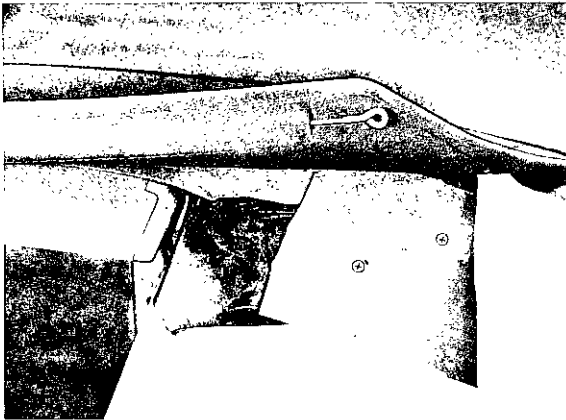

2. Disconnect canvas cover on B pillars and take off canvas cover.

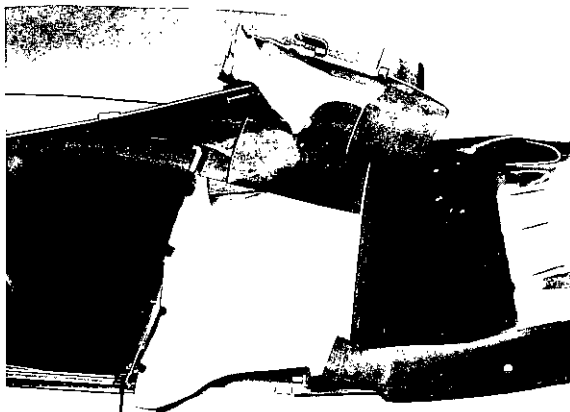


Installing

Installation is in reverse sequence.


REMOVING AND INSTALLING REAR TOP CANVAS COVER WITHOUT TENSIONING BAR AND MOUNTING RAIL

Removing


1. Remove key boards, side wall trim panels, rear wall trim panel, B pillar seals, front canvas cover and rear canvas cover on B pillars. See "Removing Top Canvas Cover Seals, Front and Rear Canvas Covers with Tensioning Bar and Mounting Rail".
2. Remove nuts on tensioning bar. Lift off shims, clamping rails and seal.

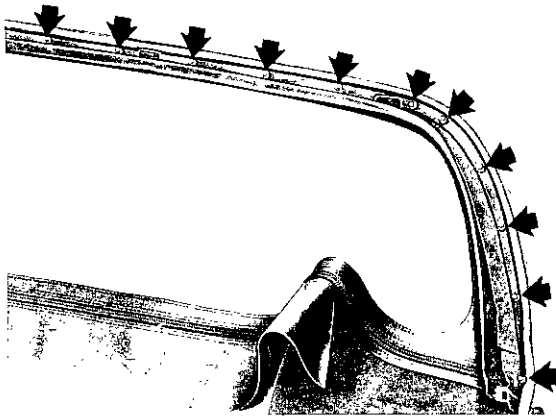


3. Unscrew snap heads and Tenax bases on tensioning bar.

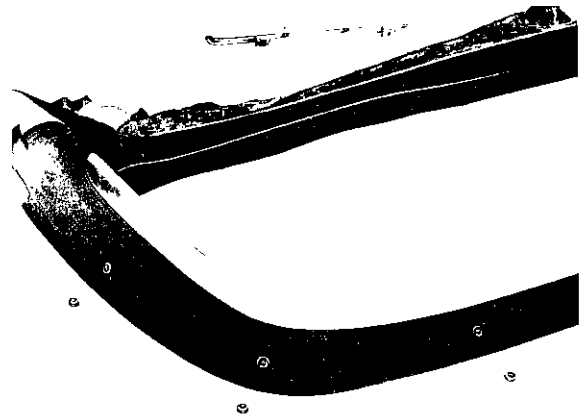


4. Disconnect cemented canvas cover on tensioning bar.

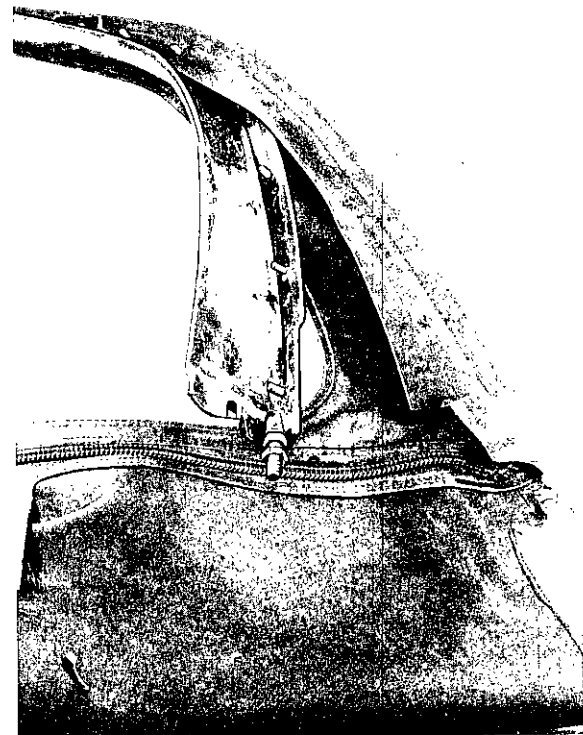

5. Disconnect and remove cemented mounting rail.

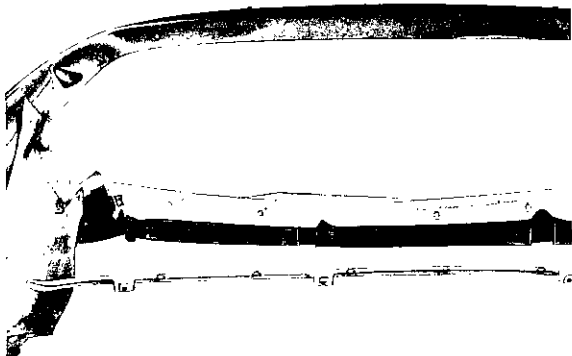


2. Mark distance from rear window to cementing edge of mounting rail on top canvas cover; approx. 80 mm.

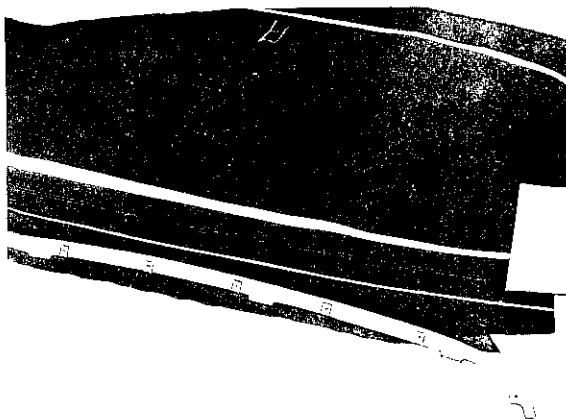


Installing


1. Cut out protective coat on inside of top canvas cover and zipper with a scissors.

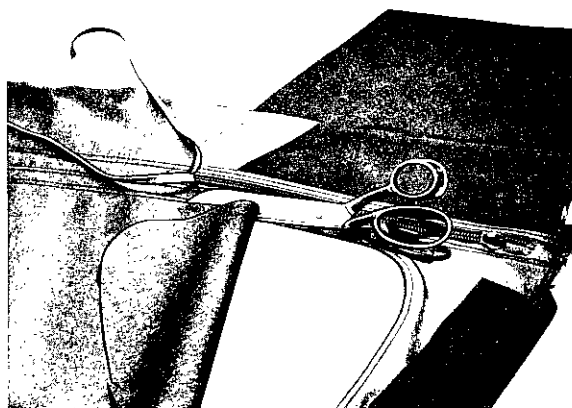


3. Cement mounting rail on top canvas cover according to marks.

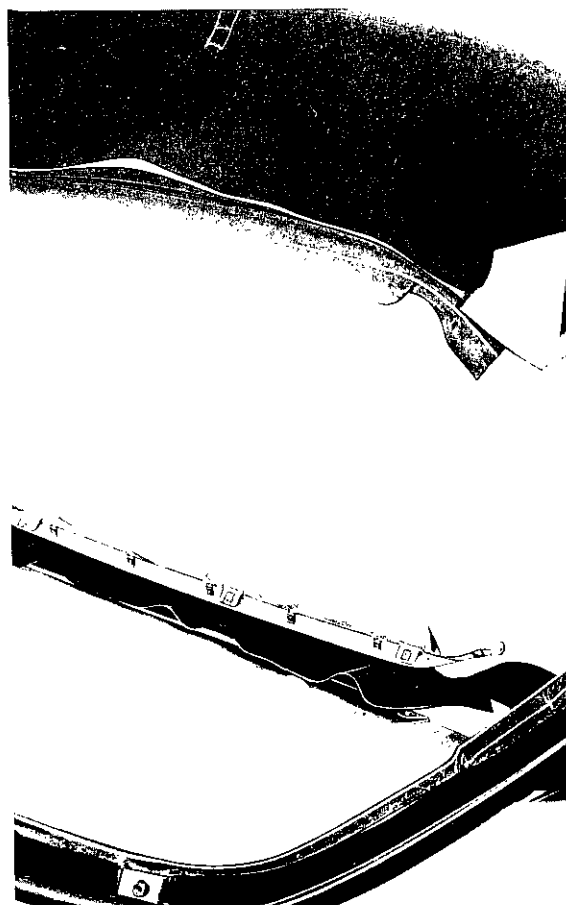


4. Fit canvas cover on tensioning bar and cut to size. Cement canvas cover on outside of tensioning bar from the center to left and right sides. Seam of canvas cover must run slightly higher than lower edge of the tensioning bar.

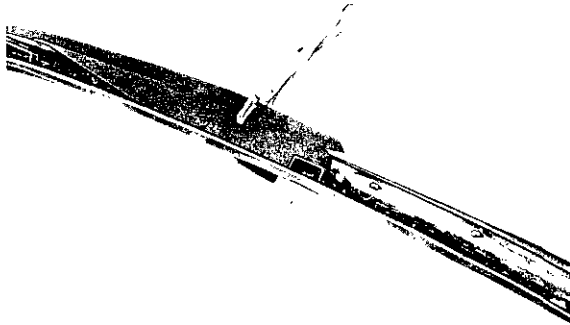


5. Cut holes in canvas cover for the staybolts and cement canvas cover on inside of tensioning bar.

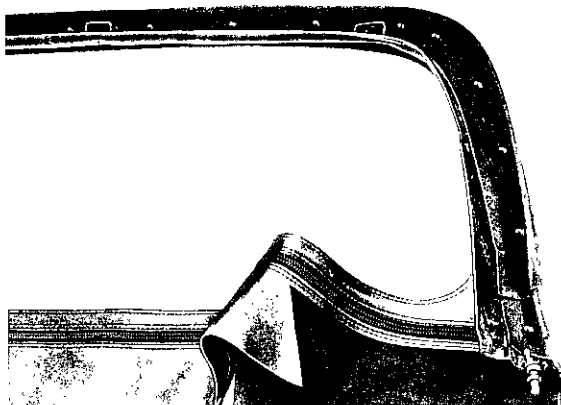

6. Fit in seal and clamping rails, and mount with washers and nuts.

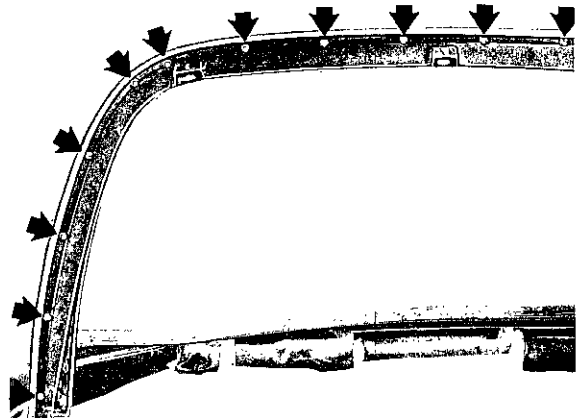

7. Place rear end of canvas cover on car. Place mounting rail with canvas cover on main hoop and install screws. Press down on rear of tensioning bar. If polyglass window does not have sufficient tension, disconnect canvas cover on the main hoop again. Disconnect cemented mounting rail and stretch the canvas cover.

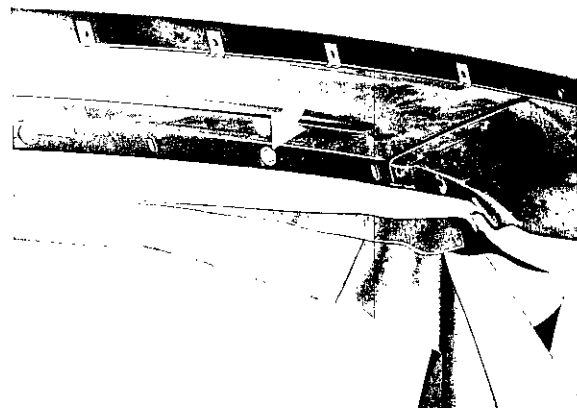


8. For remaining installation procedures refer to "Installing Rear Canvas Cover with Tensioning Bar and Mounting Rail".
Install top canvas cover seals.


REPLACING ZIPPER SLIDE

Removing


1. Remove Tenax base and self-tapping screw with cloth protection washer on the side, where the end hook is located (on rear end of front canvas cover) and open up sewn seam.

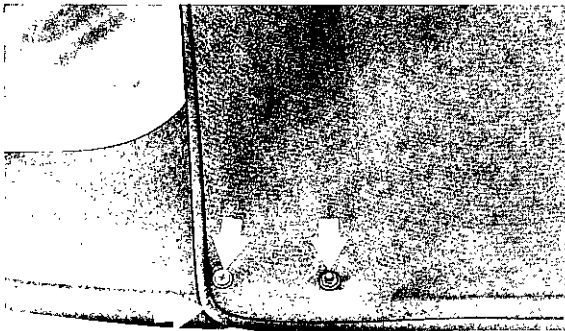



3. Lift off end hook towards inside.

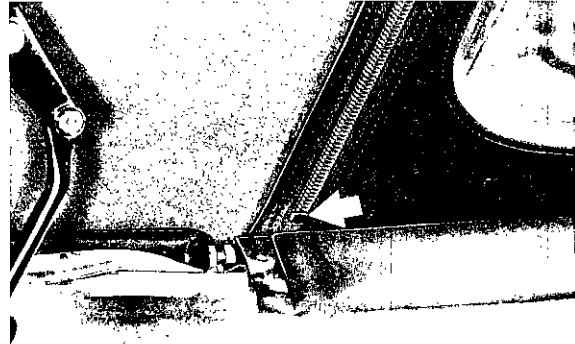

2. Fold open canvas cover and bend open claws of end hook.

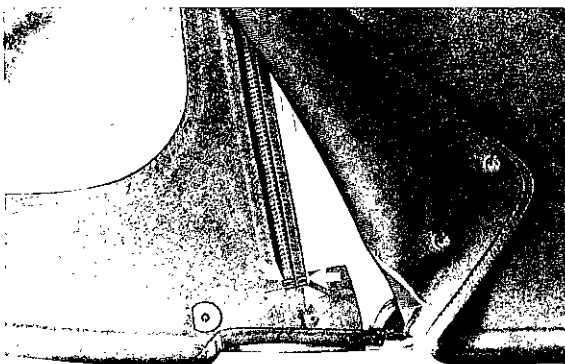


4. Remove key board. Slide zipper slide down and remove.

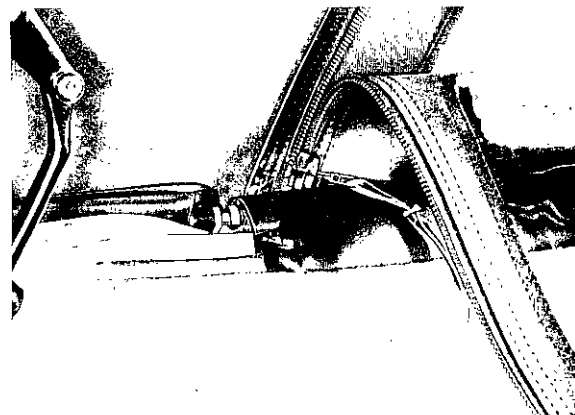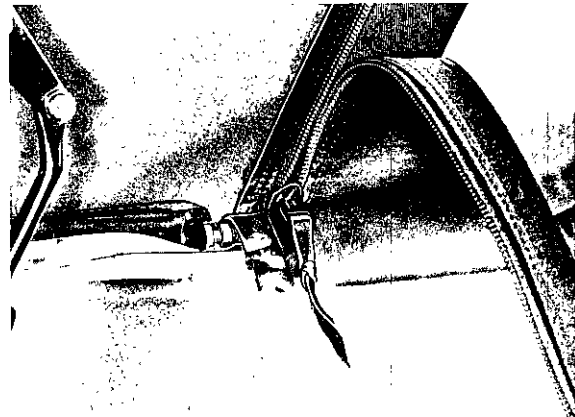


Installing


1. Press new zipper slide into rear zipper section.

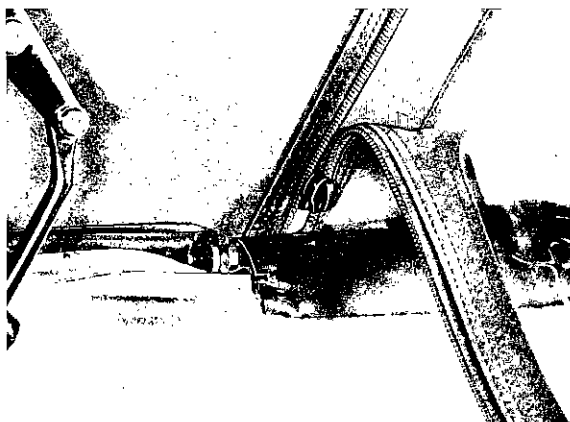


3. Insert end hook and bend down claws from the outside.

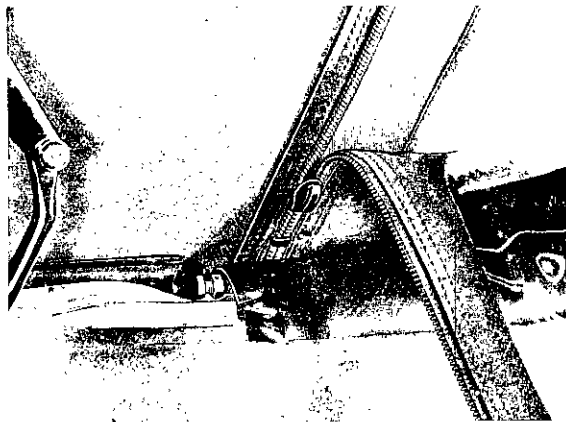


2. Insert zipper slide in front zipper section.

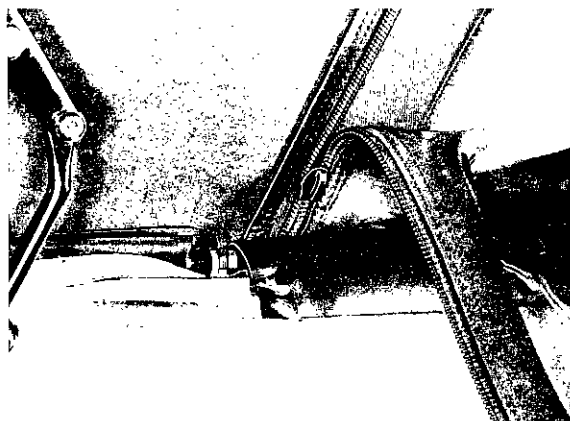


4. Mount pulling strap and snap head with eye on zipper slide.

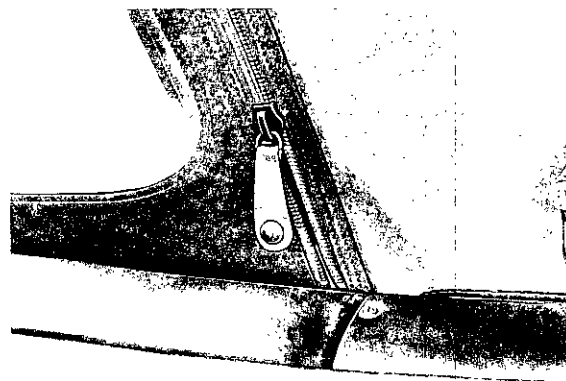


5. If applicable, drill a hole in the front of the key board, where the snap base is mounted with a self-tapping screw (see figure).

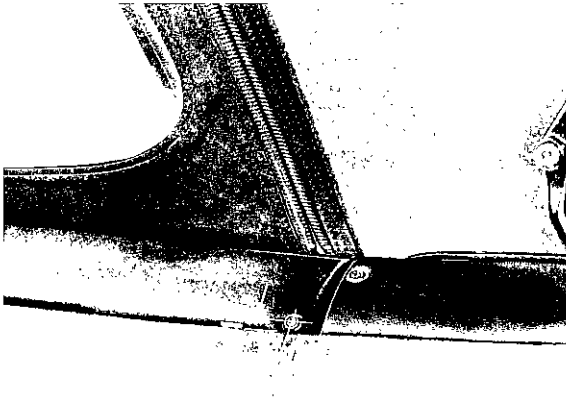

7. Install key board, Tenax base and self-tapping screw with cloth protection washer as well as front and rear canvas covers with two seam stitches.

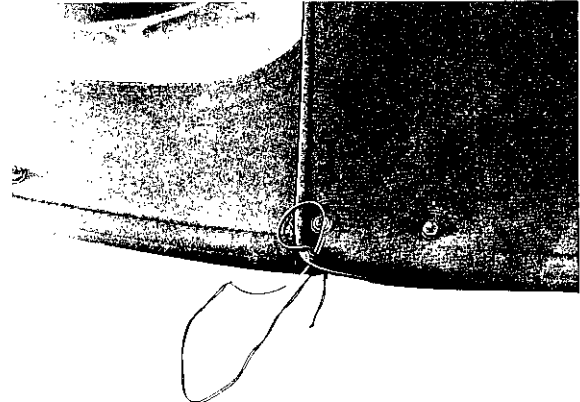


6. Press snap head into snap base.

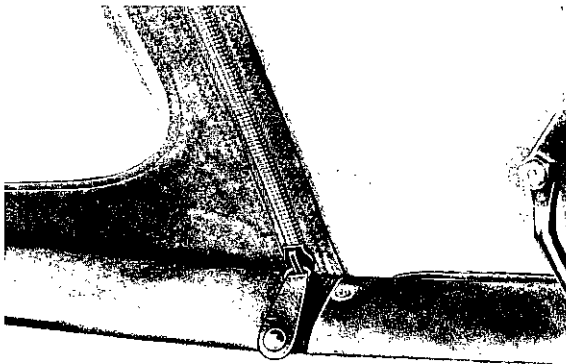


REMOVING AND INSTALLING ZIPPER

Removing


1. After removal of the rear top canvas cover without tensioning bar and without mounting rail, cut out zipper from rear canvas cover.

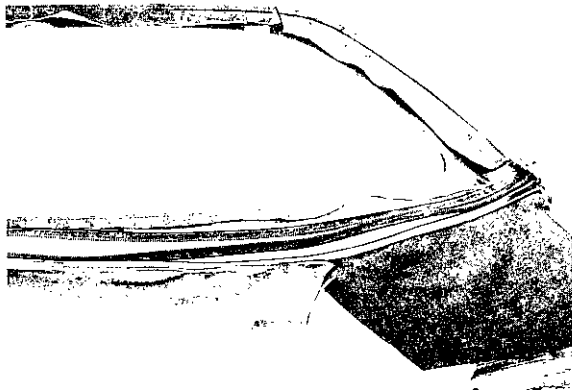

2. Cement canvas cover on zipper from above.

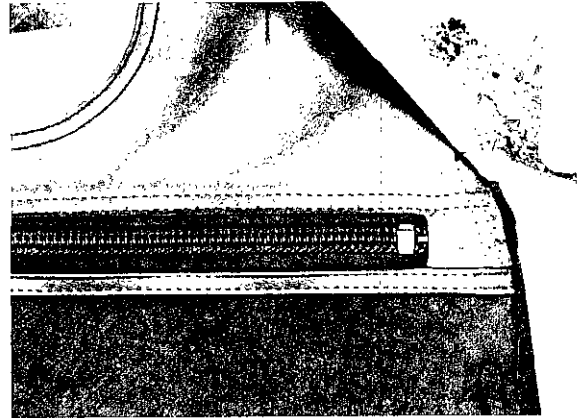


3. Cement tensioning section.

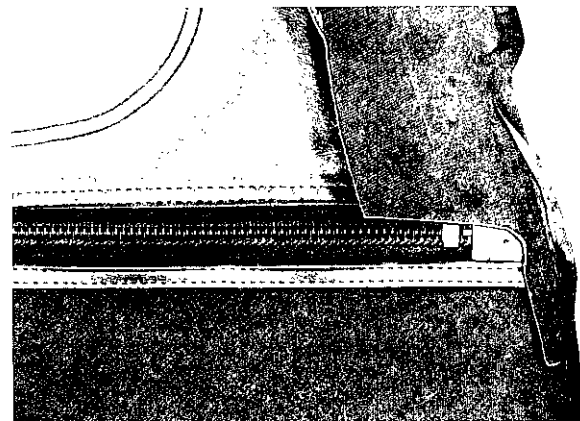

Installing

1. Canvas cover must be free of sewing yarn at cut surfaces. Apply coat of cement on zipper and canvas cover. Cement bottom of zipper on canvas cover on one side.

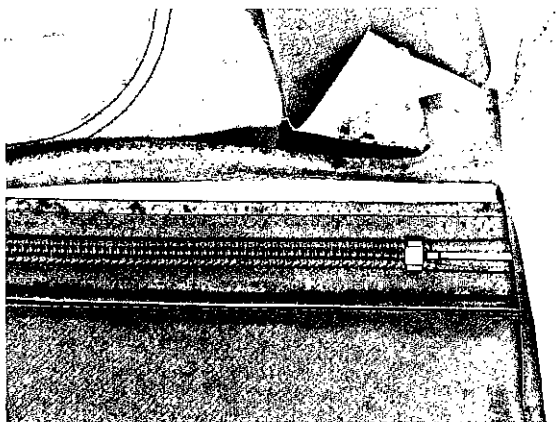

4. Wait until cement is dry and then sew zipper and border. Cement tensioning bar and mounting rail on canvas cover and install complete part in car.

RECOMMENDED CEMENTS OR ADHESIVES

Cements/Adhesives:

Terocal 2444 for cementing seals

Manufacturer: Teroson Werke GmbH
6900 Heidelberg 1

Dekalin 3649 for installation of canvas on metal or plastic

Manufacturer: Deutsche Klebstoffwerke GmbH
Rödiger & Sohn
6450 Hanau/Main

INSTALLING INSIDE MIRROR

1. Remove screw from mirror arm and take off mirror base.

2. Remove adhesive plate and clean burr, if any, from the mirror base collar.

3. Carefully clean and degrease windshield and mirror base (use alcohol, acetone, etc.)

4. Mark mounting surface for mirror base. Upper edge of mirror base must be in windshield center, 80 mm below windshield seal. Mark location on outside of windshield.

5. Heat mirror base on hot plate to approximately 200° F.

6. Remove backing (white or beige) from adhesive plate and place on mirror mounting base.

NOTE

Do not use adhesive plates on which the backing was already partially removed or plates from which the backing cannot be fully removed. These conditions will cause faulty bonding.

7. Seal all sides of adhesive plate with a bead of weatherstrip adhesive (3 M # 8011 or similar adhesive).

8. Place mounting base on windshield.

9. Attach extension US 8015 to the wheel tensioner (Bosch part # 2 688 190 000) and install mirror mounting base. Apply a pressure of 12 kp (26.5 lbs) for 15 minutes.

CAUTION

To prevent damage to windshield, compress the wheel tensioner against the floor tunnel. Do not compress against windshield.

NOTE


The adhesive area should be a shiny black and without dull black spots.

10. Remove tool and attach mirror to base.

INSTALLING INTERIOR REAR VIEW MIRROR

Note: Repair kit, Part No. 914 731 025 10, is required for the following operations.

1. Clean and degrease mirror base and windshield with acetone.
2. Cut strip of tape and paste on mirror base as illustrated.

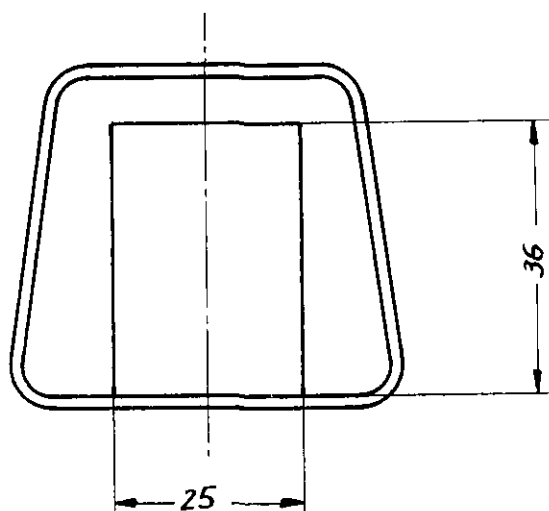

3. Fill in open surface on mirror base with an adhesive to height of tape.
4. Pull paper backing off tape.
5. Position mirror and press firmly so that tape surface rests completely flat on windshield.
6. Remove excess adhesive with cloth soaked in acetone.
7. Adjust mirror carefully, because the adhesive requires 24 hours to dry completely.
8. If possible, the car should not be used for several hours to let the adhesive settle and dry.

TARGA ROOF ADJUSTMENTS - FROM 1970 MODELS

General

If wind noise or creaking should occur in a Targa roof due to changed position, the following adjustments may become necessary to rectify the condition:

Creaking Noises

1. Remove folding top. Check front and rear tensioning rails for proper alignment, adjust if necessary.
2. Check roof locks, tighten retaining screws.
3. Check hinges, removing pins if loose; worn pins should be replaced. Grease hinges lightly.
4. Check front locating pins for wear, replacing if necessary.
5. Check weatherstrip at windshield and roll bar ends, replacing if damaged or flattened.

NOTE

Lightly coat weatherstrip with glycerine during the winter season.

6. If moulding strips in windshield frame show pressure marks, meaning improper tolerances at the convertible top, straighten the strip with a piece of hardwood, or remove strip and rework top surface across windshield frame.

Wind Noises


1. Check convertible top for proper seating. Readjust if it protrudes above the windshield frame or roll bar, or if it is uneven.
2. Check windows for proper sealing, readjust if necessary.
3. Readjust proof side seal if necessary.
4. Using wide-grip flat pliers, lightly bend rear seating surface of the folding top downward. (Do not bend the rounded sides).
5. Install convertible top and check positioning, readjusting door window frames if necessary.

Top Billows Out

The convertible top may billow out at high speeds with the fan on and windows closed (pressure in passenger compartment).

Remedy:


1. Move rear support pin upward on convertible top.
2. Check rear hinges, removing hinge pins if loose; worn hinge pins should be replaced. Grease hinges lightly.
3. If high pressure is exerted on the gasket at the LASTIK supports (roll bar), take gasket out of the supports and cut the base down as required. Glue it in place and secure with plastic rivets.

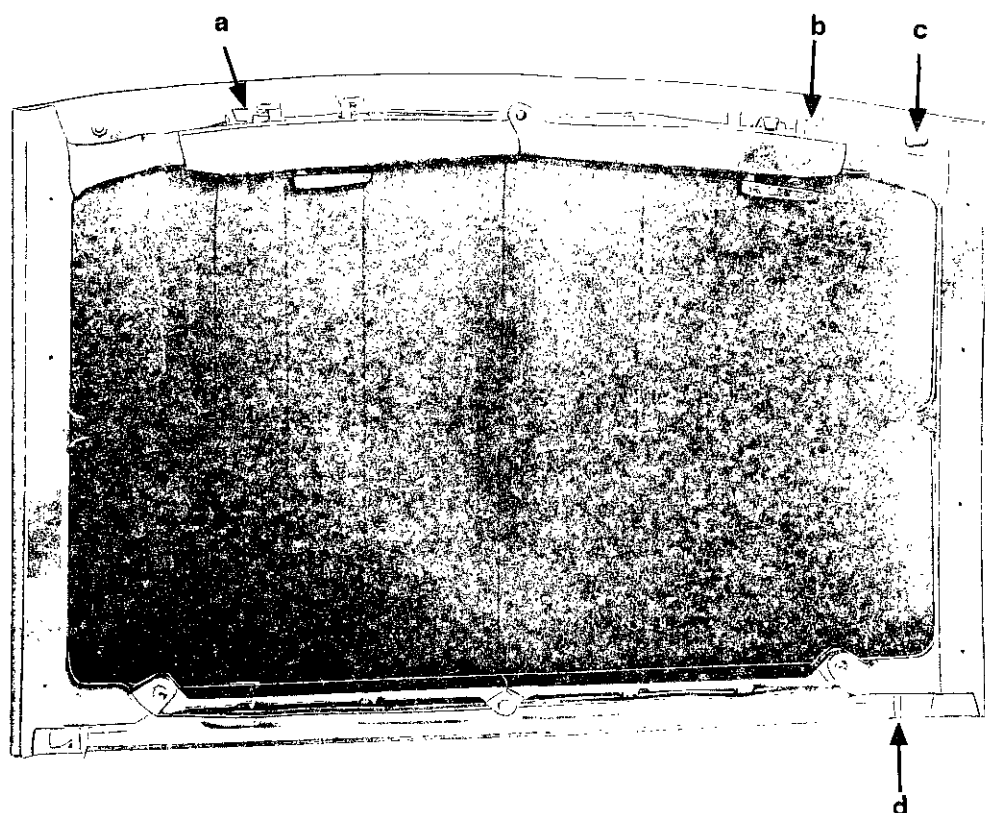

- a Tensioning rail
- b = Roof lock pawl
- c = Locating stud
- d = Rear support pin



Rollbar weatherstrip, new version

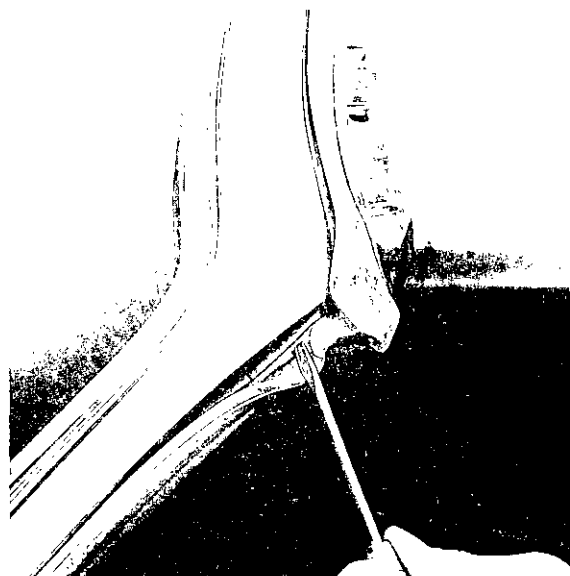

Windshield frame weatherstrip, new version

MOULDING CHANGES IN WINDSHIELD TOP


| | | |
|--------------------------------|--------------|-------|
| Beginning with chassis numbers | 911 251 0143 | 911 T |
| | 911 221 0091 | 911 E |
| | 911 231 0059 | 911 S |

moulding strips with a 2.3 mm depression in the area of the roof lock pawls are being installed on windshield frame top in all Targa vehicles. These strips can also be used on earlier vehicles, providing that the channel going across the windshield frame is reworked accordingly.

NOTE

If the moulding strips show pressure marks causing noise, do the following:

1. Reshape moulding strip with a piece of hardwood, as necessary.
2. Replace windshield frame weatherstrip if damaged or flattened. (The convertible top should rest only against the weatherstrip).
3. Further possible retification:
 - a - Remove old moulding strips.
 - b - Partly loosen leatherette covering.
 - c - Reshape top surface of windshield frame to accomodate new-type moulding strips.

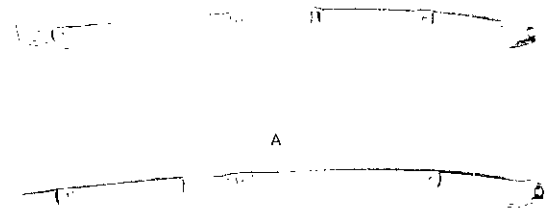

A = New version




CAUTION

Support other side of windshield frame to prevent damaging windshield when reshaping surface.


- d - Reglue leatherette covering and install new moulding strip.

INERTIA REEL SAFETY BELT WITH AUTOMATIC LOCKING RETRACTOR (COUPE)

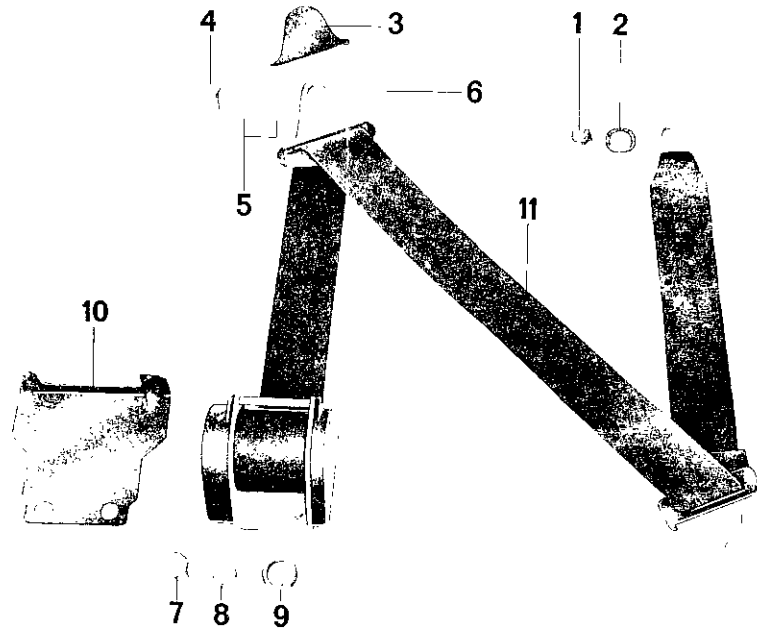

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|--|-----|-----------|---|-----------------------------|
| | | | removing | installing | |
| 1 | Retaining bolt | 1 | | Use original self-locking bolt. | 9.3 - 1/5 |
| 2 | Spring washer | 1 | | Replace if necessary. | |
| 3 | Loop cover | 1 | | | |
| 4 | Retaining bolt | 1 | | Use original self-locking bolt. | 9.3 - 1/5 |
| 5 | Flanged washer | 2 | | Position properly. | 9.3 - 1/5 |
| 6 | Washer | 1 | | | 9.3 - 1/5 |
| 7 | Retaining bolt | 1 | | | |
| 8 | Serrated washer | 1 | | Replace if necessary. | |
| 9 | Spacer | 1 | | | |
| 10 | Support plate | 1 | | Install together with belt retractor. | 9.3 - 1/4 |
| 11 | Inertia reel belt with automatic retractor | 1 | | Check installation side. Belts are different for right and left side. | 9.3 - 1/4 |

INERTIA REEL SAFETY BELT WITH AUTOMATIC LOCKING RETRACTOR (TARGA)

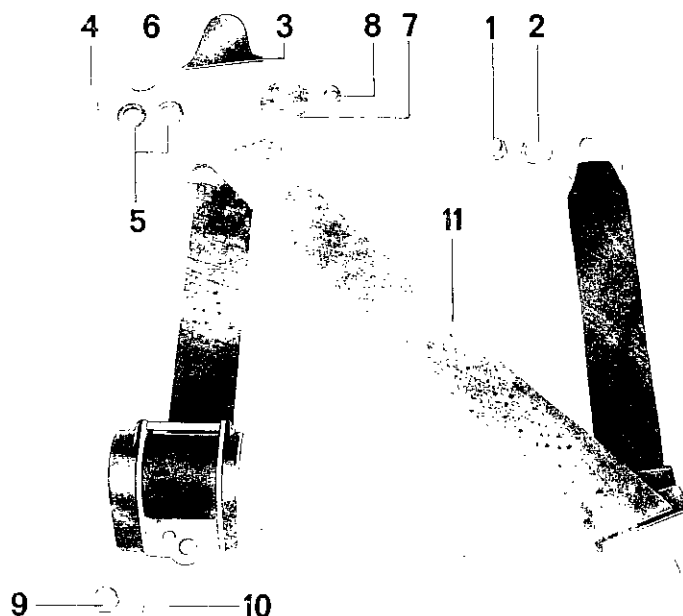

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|--|-----|-----------|---|-----------------------------|
| | | | removing | installing | |
| 1 | Retaining bolt | 1 | | Use original self-locking bolt. | |
| 2 | Spring washer | 1 | | Replace if necessary. | |
| 3 | Loop cover | 1 | | | |
| 4 | Loop retaining bolt | 1 | | Use original self-locking bolt. | 9.3 - 1/7 |
| 5 | Flanged washers | 2 | | Position properly. | 9.3 - 1/7 |
| 6 | Washer | 1 | | | 9.3 - 1/7 |
| 7 | Protective washer | 1 | | | 9.3 - 1/7 |
| 8 | Spacer | 1 | | | 9.3 - 1/7 |
| 9 | Retaining bolt | 1 | | | |
| 10 | Serrated washer | 1 | | Replace if necessary. | |
| 11 | Inertia reel belt with automatic retractor | 1 | | Check installation side. Belts are different for right and left side. | 9.3 - 1/7 |

REMOVING AND INSTALLING INERTIA REEL SAFETY BELT WITH AUTOMATIC LOCKING RETRACTOR AND ELECTRIC WARNING DEVICE

Removal (Coupe and Targa)


6. Remove and reinstall buckle.

1. Detach belt from side of seat.

2. Remove loop cover from B-pillar or roll bar.

3. Remove loop retaining bolt. Remove flanged washers, in Targa additionally the spacer located under the perforated cover.

4. Remove cover from side section; this requires removal of sheetmetal screws from the rosette plate and rocker panel. In the Targa vehicle, remove covering strip from side cover as well as sheetmetal screws from the rosette plate in the side cover and take both parts off.

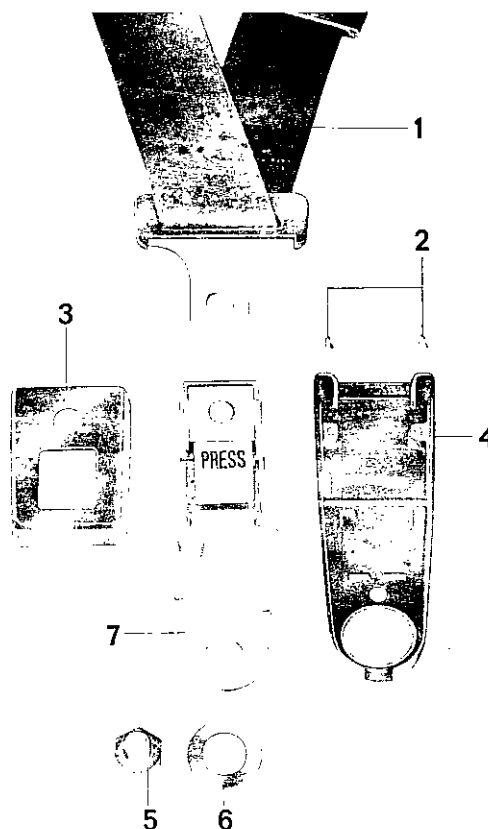

NOTE: The belt can be pulled out through the opening once the plastic cover is removed from the buckle assembly.


5. Remove belt retractor retaining screws.

- 1 - Inertia reel belt with automatic retractor
- 2 - Countersunk screws
- 3 - Cover
- 4 - Cover
- 5 - Retaining bolt
- 6 - Spring washer
- 7 - Buckle assembly

NOTE: The buckle assembly should not be disassembled unless it does not function properly.

- a) Remove both countersunk screws from the cover and separate both halves.

- b) Carefully detach buckle contact wires from connecting tabs.

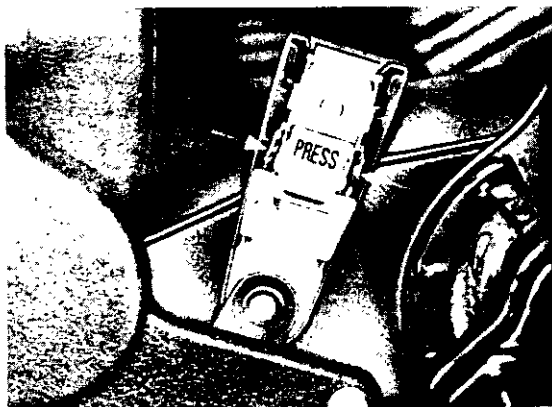


NOTE: To prevent damage to the contact plates, hold the tabs with needle nose pliers when disconnecting the wires.

- c) Press plastic cover off. Remove buckle retaining bolt and take buckle out.

Installation (Coupe)

1. Mount belt retractor on side panel together with support plate, spacer, and serrated washer.

NOTE: The larger retractor plastic cover should face to the rear, and the cover holder upwards. In addition, the retractor should be tilted forward about 15° in line with the direction of pull.

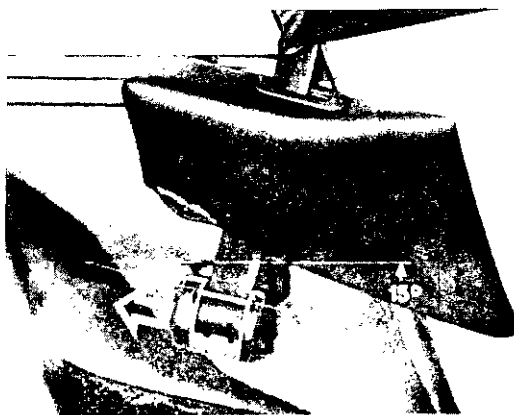


2. Pull the belt through the upholstery cover.


3. Install yoke on door lock post; see sketch for location of washer.

5. Install upholstery cover and rosette plate.

6. Fasten belt to mounting bracket in seat. See sketch for installed position of the spring washer.

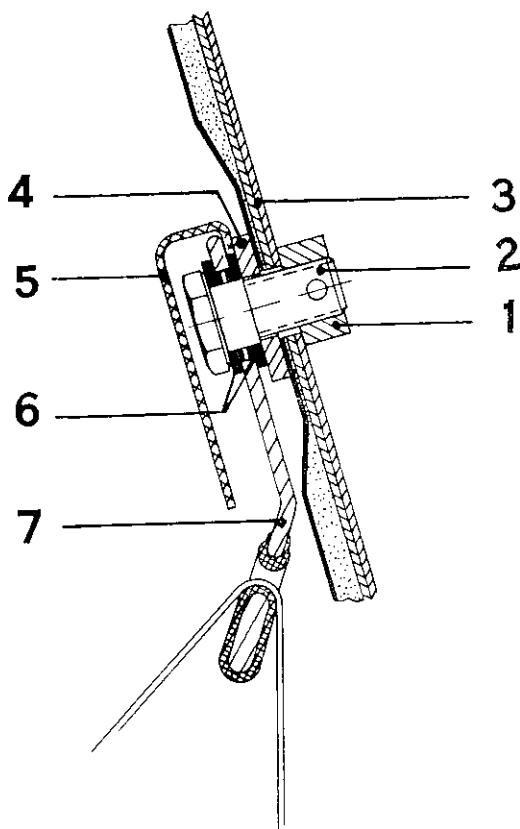

- 1 - Weld-nut
- 2 - Retaining bolt
- 3 - Door lock post with reinforcement
- 4 - Spacer
- 5 - Cover
- 6 - Flanged washers
- 7 - Yoke

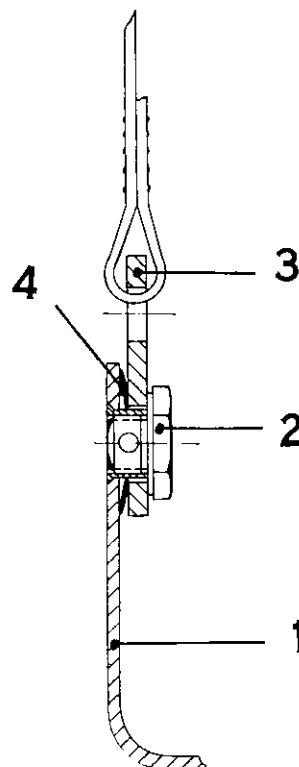


- 1 - Mounting bracket on seat outside
- 2 - Retaining bolt
- 3 - Yoke
- 4 - Spring washer

4. Pull the belt out horizontally and check unreeling and retrieval of belt. The belt should be traveling in center of retractor reel. If necessary, correct the 15° installation position of the retractor.

NOTE: The belt should not be twisted. Sewn end should face the seat.

7. Install belt buckle assembly. See sketch for location of spring washer.

9. Join belt buckle covers and secure with countersunk screws.

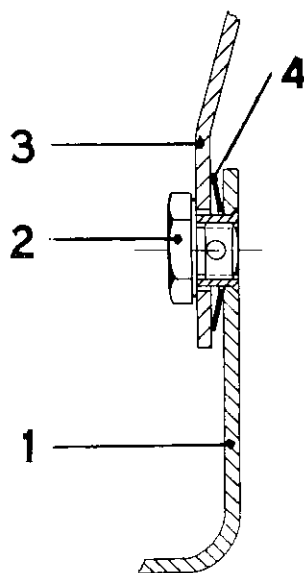

10. Put the belt on, adjust, and check operation. When the belt is moved rapidly, the locking retractor must lock, and must unreel easily when moved slowly.


- 1 - Mounting bracket on seat inside
- 2 - Retaining bolt
- 3 - Latch
- 4 - Spring washer

8. Guide buckle contact cable through the plastic cover and connect to contact tabs.

NOTE: To prevent damage to the contact plates, hold tabs with needle nose pliers when connecting the wires. Also see Group 9, page 6.2 - 1/1.

Installation Instructions for Targa Vehicles


1. Install retractor with retaining bolt and serrated washer. For clarity, the illustration does not show side covering.

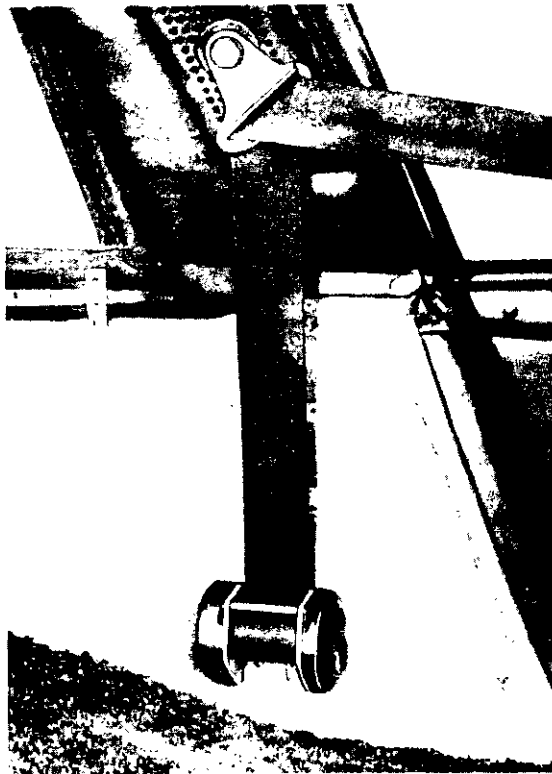

NOTE: The larger plastic cover on retractor should face back, and the retractor should tilt forward by 12° along the direction of pull.


2. Pull belt end through the side covering and rosette plate.

3. Attach yoke to roll bar. See sketch for location of washers.

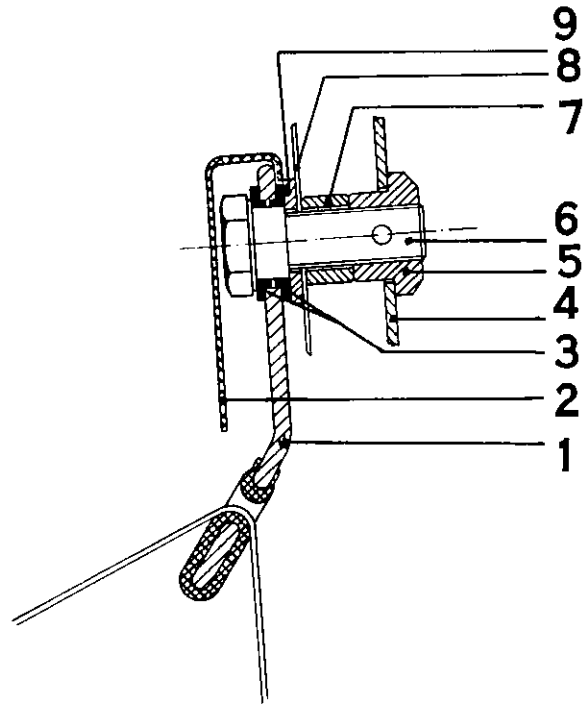

- 1 - Yoke
- 2 - Cover
- 3 - Flanged washers
- 4 - Roll bar reinforcement pan
- 5 - Weld-nut
- 6 - Retaining bolt
- 7 - Spacer
- 8 - Protective washer
- 9 - Spacer

4. Pull the belt out horizontally and check un-reeling and retraction. The belt should reel in center of retractor. If not, correct the 12° alignment of the retractor. For clarity, the illustration does not show the side covering.

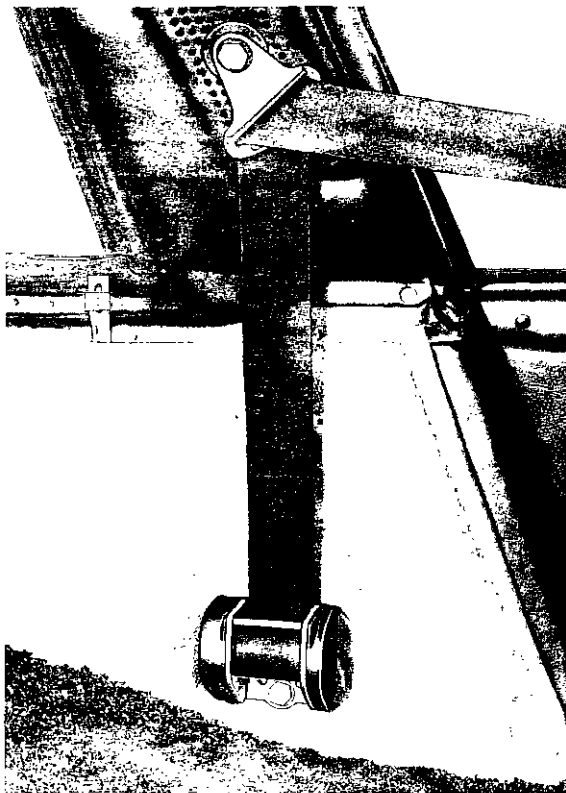

5. Install side covering, rosette plate, and cover moulding.

NOTE: The electrical operation and outline dealing with the automatic retractor is described in Group 9.

REMOVING AND INSTALLING ELECTRIC WINDOW REGULATORS

General


Beginning with the Apr-26-72 production, new electric motors with an integral transmission, as well as modified toggle switches with mounting frames are used. Electrical connections are made according to a new wiring diagram. Electric window regulators can be installed in Coupe models only.

The new regulators were first installed in the following vehicles:


| | |
|-----------|--------------|
| 911 T USA | 911 210 2072 |
| 911 E | 911 220 0809 |
| 911 S | 911 230 1391 |

Removal


1. Remove window ledge rail and lock button.
2. Remove toggle switches. If possible, first position window glass about 10 cm (4") above its lowest position.
3. Remove entire door panel and sealing foil.
4. Remove outer chrome strip at window base.
5. Remove all window frame fasteners. Pull the frame out.
6. Push window glass forward and detach from the regulator. Remove upper door well weather seal and take the glass out.

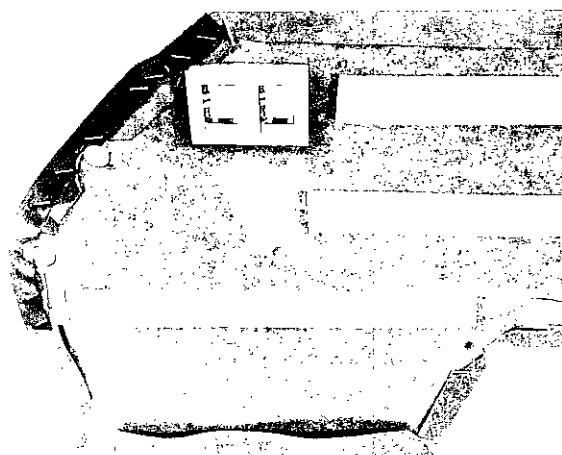

Rear side of door panel with weather seals and self-sealing mounting clips.

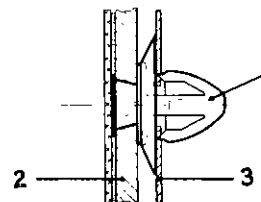

- 1 Clip
- 2 Door panel
- 3 Door inner sheetmetal panel

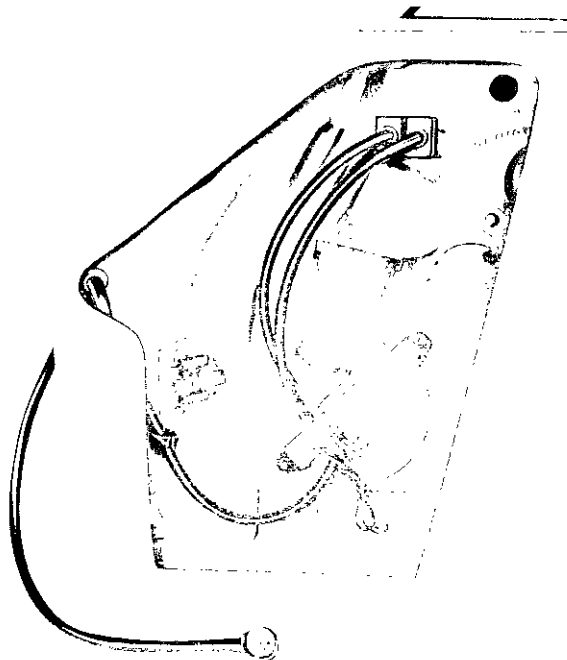

New motor and transmission with cable layout



7. Take wires out of retainers, disconnect them from junction bar, and pull wire looms out together with caps. If the wire loom leading from the door into the car's interior is to be removed, it will be necessary to take the door off.

8. Unscrew window regulator and remove.

9. Remove stop wedge from door base.

Installation

1. Insert wire grommet in forward part of inner sheetmetal panel of door. Lead the connecting wires into the car's interior. Install door.

2. Insert window regulator and fasten. Install stop wedge.


3. Run the regulator with a battery or battery charger to bring window to about 10 cm (4") above its lowest position by connecting the positive wire to green and negative wire to black wires in motor. If the regulator moves up, switch the wires to make it move down.

4. Install carrier plate with junction bar.

5. Insert toggle switches, cover caps, and wire looms. Connect all wires according to the new supplemental wiring diagram in Group 9. Fasten the wire looms to carrier plate and inner sheetmetal panel.



6. Install door well weather seal. Place window glass in door well and attach to the regulator.

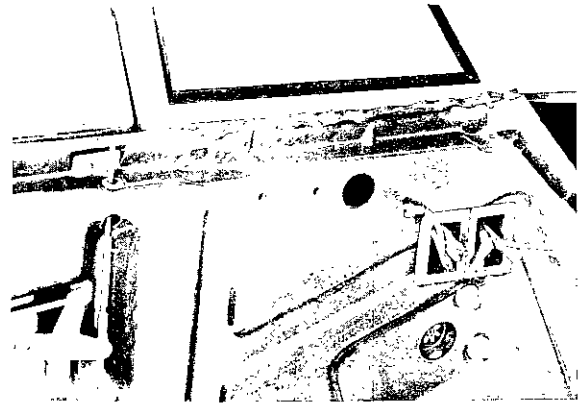



7. Insert door window frame in door and seal along the outside and inside flanks of top door edge with black, non-hardening putty. Fasten the frame in such position that sufficient pressure will be exerted against the door weatherstrip.

NOTE:


Do not bend the window frame to fit.

8. Check window regulator for proper operation and free movement. If necessary, readjust regulator with adjusting screws so that the top edge of the window is parallel with the top part of the window frame.

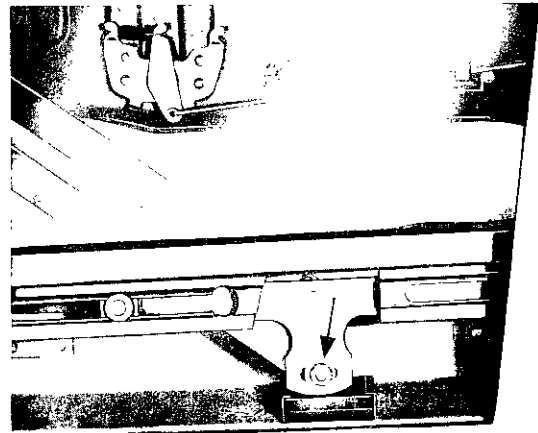


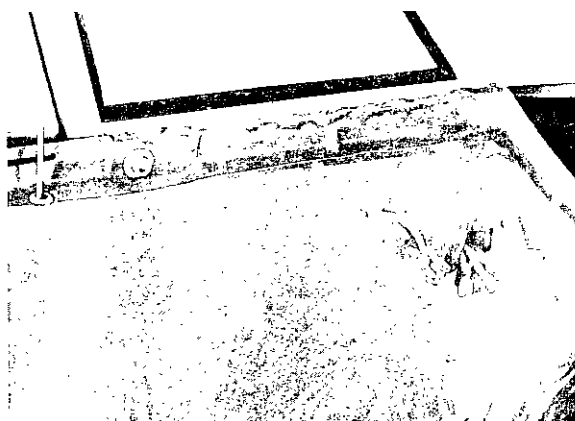

9. Glue the sealing foil in leak-free. Cut out a section in the toggle switch area.

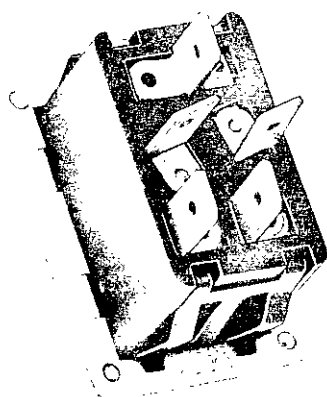

10. Install door inner panel, armrest with inner door release, door pocket, folding compartment, door ledge rail, and outside window base chrome strip.

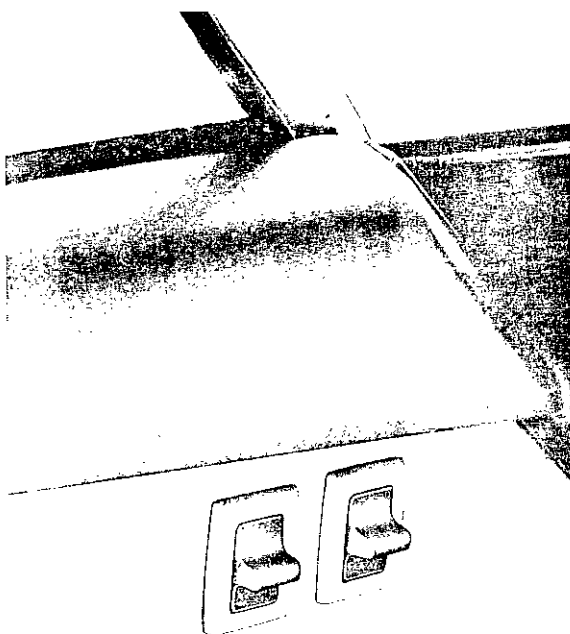

11. Connect toggle switches and install.

NOTE:

When properly installed, all toggle switches are positioned with the single connector facing up.

The rear toggle switch in driver's door actuates the passenger side window.

SEATS

General

Beginning with 1973 models, all standard and sport type seats have new longitudinal seat adjuster locks on both sides of the seat. The upholstery materials were also changed.

The seat adjuster controls remain unchanged. In the new standard seats, the seat pan has a control cable interconnecting lock pawls on both sides of the seat so that movement of the lock pawl on the center tunnel side of the seat is simultaneously transmitted to the lock pawl on the outer side of the seat.

This modification includes new seat rails with adjuster locking slots, Part #: 911 521 051 01, for installation along the longitudinal side members.

In the new sport seats, the twin adjuster locks are locked by two pawls mounted on a bar so that the pawls engage the rail locking slots on both sides simultaneously.


Installation date for the new standard seats:

July 24, 1972


Installation date for the new sport seats:

October 16, 1972

Seats with changed upholstery materials are installed from August 1972.

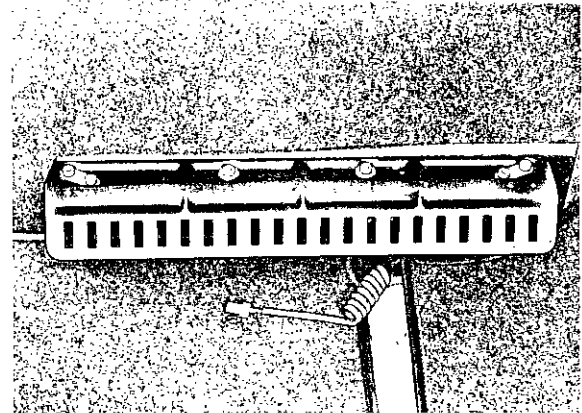

Seat rail support with seat contact cable

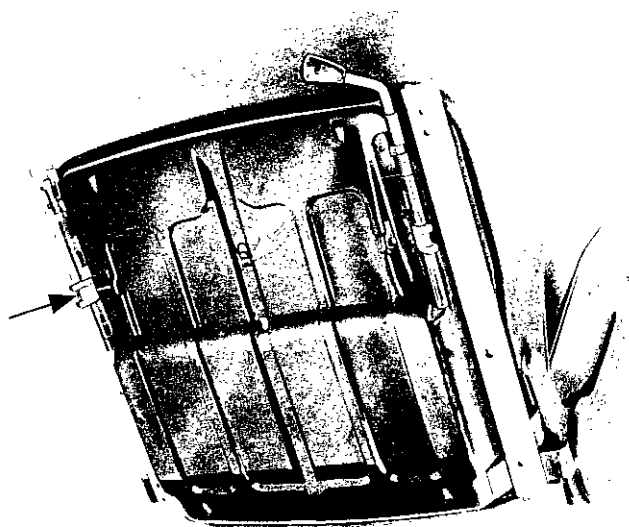

Standard seat - right side

Installing Seats

1. At first, tighten seat rails only lightly. Check seat adjustment positions throughout the entire position range to ensure that the lock pawls engage and the seat moves easily on the rails. The seat adjusting lever must return into its normal position by itself. If this is not the case, reposition the seat rails.

2. Torque all seat retaining bolts in seat rails and seat rail supports to 1.2 - 1.4 mkp.

3. Recheck seat repositioning.



Sport seat - right side

REMOVING AND INSTALLING OIL FILLER LID AND CONTROL

General


Beginning with 1972 models, oil tanks in all Type 911 vehicles are located under the right rear fender, adjacent to side member and wheel housing. The tank is fastened with retaining straps. The lid lock support was being welded to the oil filler pan until September 24, 1971.

Removing

1. Open lid, remove screws, and take lid off.
2. Detach remote control rod from connecting clip in lock lever and remove. Take grommet out.
3. Remove cotter key and clevis pin from the lock lever.
4. The bolt-on lock support can be detached only when the oil tank is removed (2 x M5 nuts).

Installing


1. Position oil filler lid, together with M6 x 15 screws and spring washers, lightly tightening screws. Align lid and tighten retaining screws.
2. Insert rubber grommet in door lock post.
3. Replace connecting clip if damaged. Install lock lever.
4. Connect remote control rod. Install washer, spring and control knob from the door lock post side.
5. Close oil filler lid. Bend lock lever as required.

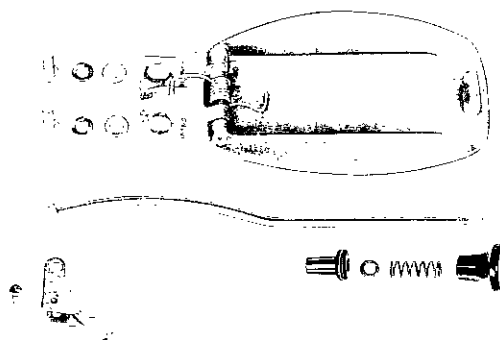

REMOVING AND INSTALLING ROCKER PANEL COVER

Removal


1. Remove end pieces from both ends.
2. Take rubber strip off. Remove cover from jacking point.
3. Remove sheetmetal screws from top and bottom parts, take rocker panel cover off.

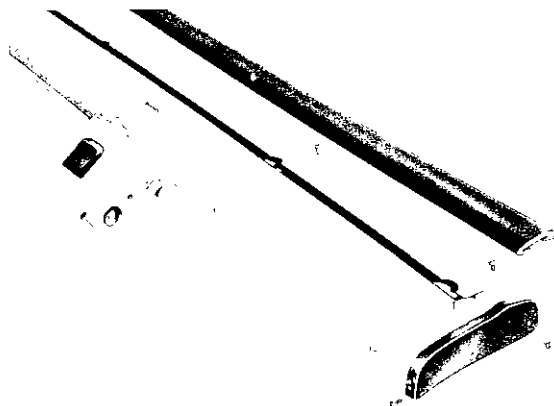

Installation is accomplished in reversed order.

NOTE

Insert one end of rubber strip onto the supporting rail, bend the strip tightly back, and slide it onto the supporting rail. The upper lip must rest closely to the body. If necessary, straighten supporting rail.

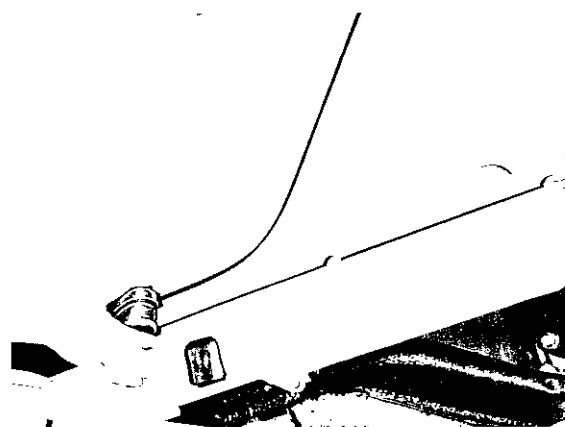


REMOVING AND INSTALLING END PANEL

General

Beginning with 1974 models, an end panel with reflectors and PORSCHE lettering is mounted at the rear cross panel. A sheetmetal shroud, serving as a heat shield, is located below the panel; it is inserted above the muffler and secured with bolts.


Removal

1. Remove rear bumper.
2. Unscrew heat shield and remove.
3. Remove self-locking nuts, washers, and rubber spacers.
4. Remove end panel.

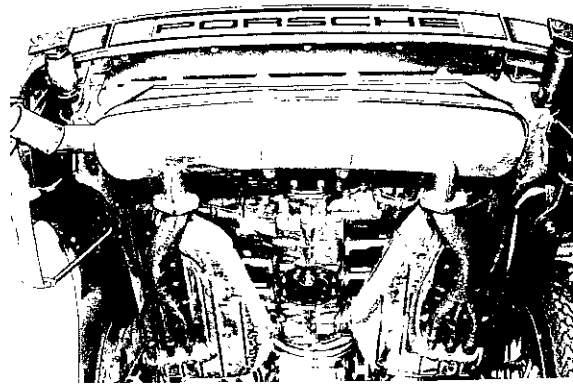


Installation

1. Lightly glue contoured rubber strip underneath.
2. Insert end panel, watching for equal side and height alignment with the tail lights.
3. Insert plastic washers, rubber spacers, and washers on the mounting studs and secure with self-locking M 4 nuts. Check installed location and correct if necessary. Moderately tighten nuts cross-wise without creating stresses.
4. Insert heat shield and secure with bolts.

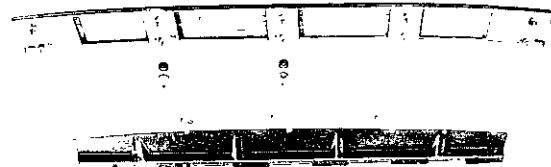

5. Install bumper.

REMOVING AND INSTALLING TAIL PLATE AS FROM 1978 MODELS

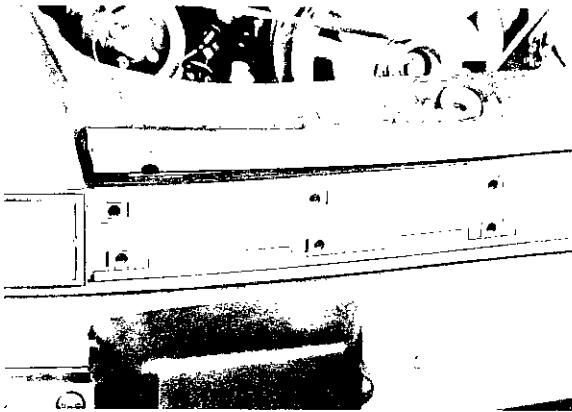

As from 1978 models the tail plate is attached to the tail panel with 10 clips, Part No. 999 591 447 02.

This facilitates installation, in that the bumper and heat guard do not have to be removed.

Square holes (previously slots) are punched in the tail panel to take the clips.

Removing

1. Cover tail panel above plate with adhesive tape to prevent damage on the paintwork.
2. Use pertinent tools (screwdriver, putty knife, etc.) to pry tail plate out of clips, first top and then bottom.



Note

Only apply pressure at reinforcements of plate to prevent damage on plate. Be careful not to injure coat on back of reflector area by scratching, since otherwise the reflecting effect will be impaired.

3. Take clips out of tail panel, replace damaged clips, straighten tail panel if necessary and eliminate paint damage.

Installing

1. Insert clips into tail panel.
 2. Hold tail plate in position, align clips with reinforcement pins and press on tail plate up to stop.
-

LETTERING FOR CARRERA VEHICLES


Notes

The following points must be observed to ensure that the lettering adheres firmly to the paint:

1. Wash paint surface, removing wax, etc, with clean cleaning solvent. Dry the paint surface.
2. Do not affix the lettering in cold or damp weather. The temperature of the vehicle and surrounding air should be about $+20^{\circ}\text{C}$.
3. Side lettering should be attached by two persons.

Affixing "Carrera" Side Lettering


1. Mark front and rear location of lettering above door lower edge.

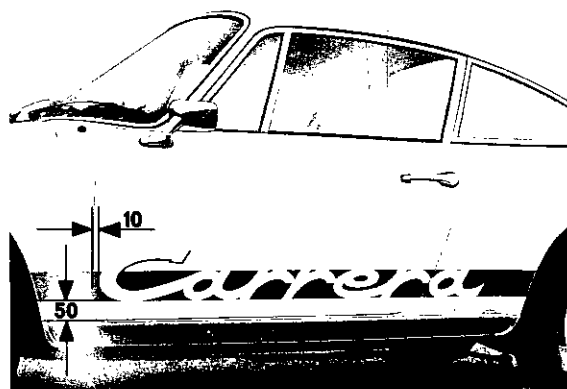

2. Peel off backing foil from the adhesive side.


3. Left door: Align starting letter "C" 1 cm behind the forward door edge and glue on. Stretch the foil forward and back, and press into place.

Right door: Align point of letter "a" at the forward door edge and glue on. Stretch the foil and press into place.

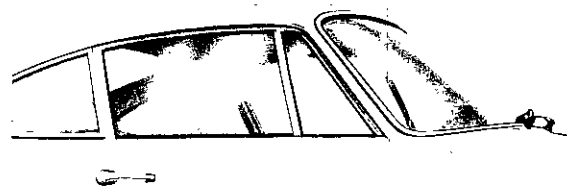


4. Press lettering areas smooth in all directions, then remove top foil.

5. Trim the lettering with a sharp knife, along the fender contour in front, along the door edge in rear, and along the wheel cutouts. Press end sections into place.

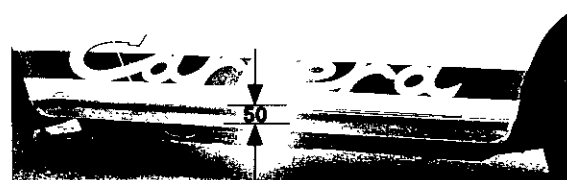


6. Puncture air bubbles in lettering with a needle and press smooth.

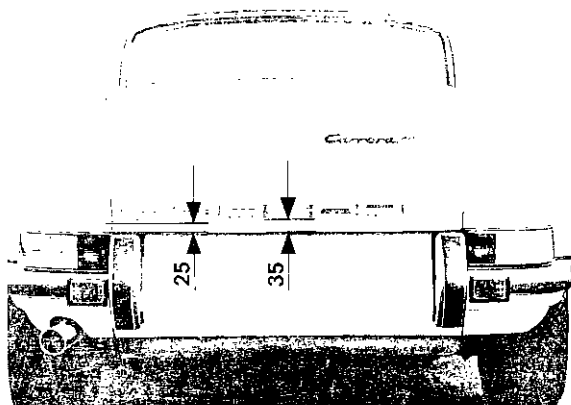

Affixing "Porsche" Lettering on Engine Compartment Lid

1. Mark location of the lettering 25 mm from bottom edge of lid on both sides, and 35 mm from bottom of lid in the center.
2. Peel off backing foil and affix the lettering as marked. Press it smooth and peel off top foil.

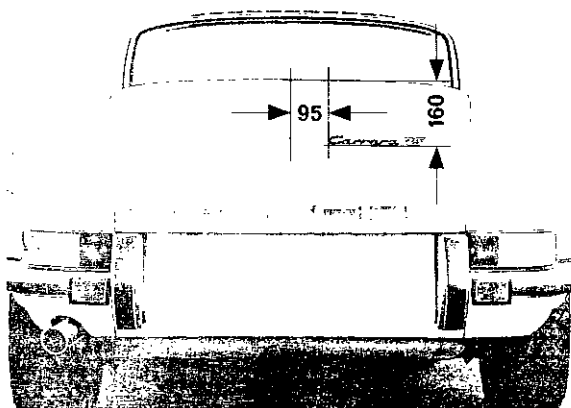

Affixing "Carrera RS" Lettering on Lid Spoiler

1. Mark location of the beginning of the lettering 160 mm below the spoiler inner edge, and 95 mm to the right of the lid center.
2. Peel off backing foil and glue the lettering optically horizontal to the right.


Colored Lettering

Carrera vehicles painted Grand Prix white are furnished with lettering in colors matching the respective wheel color (red - blue - green). All other vehicles are furnished with black lettering.

Removing Damaged Lettering

Heat the lettering with air heaters, infra-red lamps, etc, to the point where it can be peeled off without pulling the paint off in the process. Wash remnants of adhesive off the paint surface with cleaning solvent.

REMOVING AND INSTALLING OUTSIDE REAR VIEW MIRROR WITH DEFOGGER AND REMOTE CONTROL

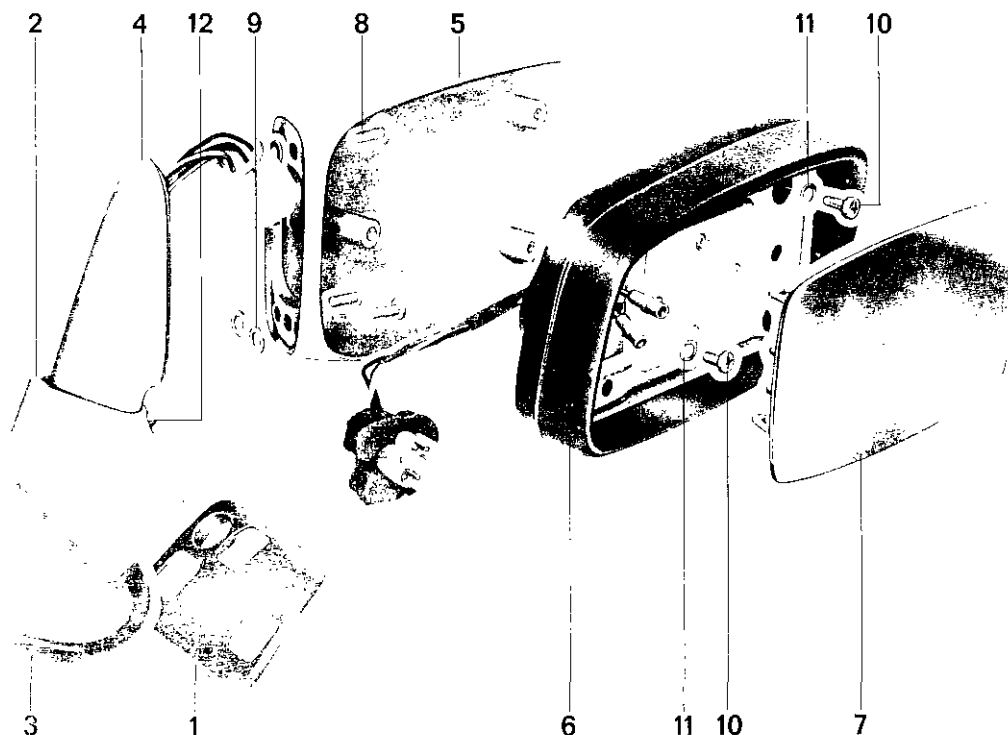

| No. | Description | Qty. | Note when | | Special instructions see |
|-----|----------------------------------|------|---|---|--------------------------|
| | | | Removing | Installing | |
| 1 | Gasket | 1 | | Replace, if necessary | |
| 2 | Mirror base | 1 | | Guide in harness | |
| 3 | Harness | 1 | Pull wires out of socket. Bend open cable clamp inside door | | |
| 4 | Mirror arm | 1 | | | |
| 5 | Mirror housing | 1 | | | |
| 6 | Carrier plate | 1 | | Replace, if defective | |
| 7 | Mirror glass | 1 | Remove carefully | First check reflection | |
| 8 | Phillips head screw 5 x 14 mm | 3 | | | |
| 9 | Washer | 3 | | Install between mirror housing and arm. | |
| 10 | Phillips head screw 5 x 16 mm | 3 | | | |
| 11 | Wave washer | 3 | | | |
| 12 | Allen head screw 5 x 35 mm | 1 | | Tighten until mirror base is tight | |

Removing


1. Use putty knife to mirror glass clips out of carrier plate. Carefully detach the wire terminals from the glass.

2. Remove the 3 Phillips head screws through the openings in carrier plate. Take out carrier plate and disconnect socket/plug.

3. Unscrew mirror housing at mirror arm.


4. Note color of wires in socket. Use a pointed tool (scriber) to press in the tongues of each wire terminal and pull out the wires.

5. Unscrew Allen head screw on mirror base until the mirror base and gasket can be removed.

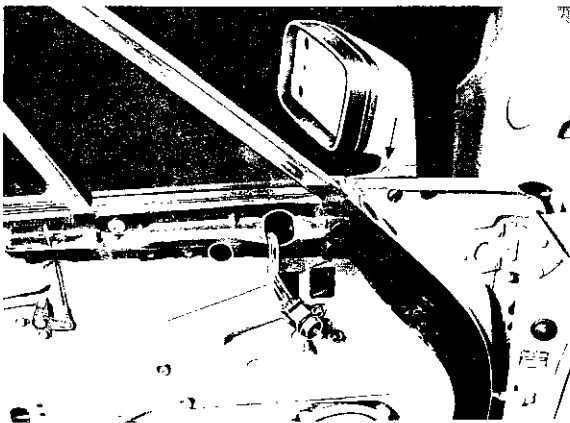


Note: If it is necessary to take the harness out of the door, remove the inner door trim and bend open the cable clamp behind the top door hinge.

The door must also be removed. First separate the connector in the side panel storage pocket.

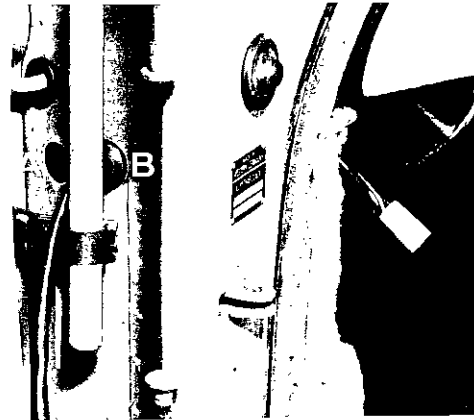

A - Mirror cable B - Loudspeaker wire

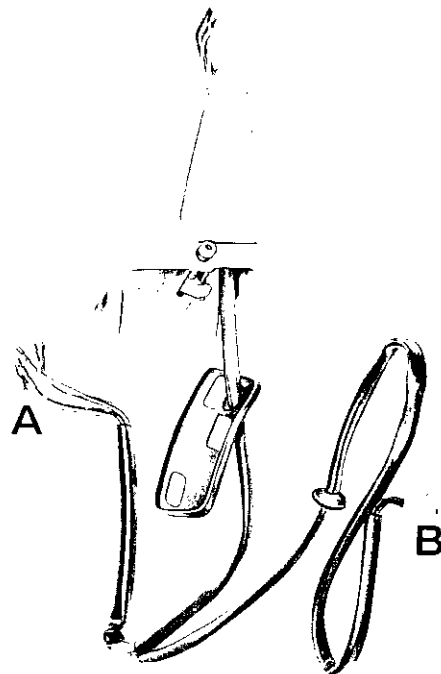

A - To operating switch B - To inside of car

INSTALLING

The following points are important.

1. Use the cable clamp (inside door behind the top hinge) to hold the harness away from the teeth of the window regulator.
2. Tighten the clamping jaw with the Allen head screw until the mirror base is held tight.
3. Observe wire colors when assembling socket.
4. Wrap foam tape around socket/plug and insert it through oval opening in mirror housing so that the mirror movement is not restricted.

Note: Check operation before attaching mirror because the clips and terminals on the mirror glass are easily damaged.

5. Install operating switch on trim strip so that the switch pin engages in bore of trim strip.
-


SERVICE INSTALLING EXTERIOR MIRROR ON PASSENGER'S DOOR

Note

These instructions apply to all models equipped with an exterior mirror, which is adjusted on the inside.

Three new harnesses are required.

- 1 - Driver's door harness
- 2 - Luggage compartment floor harness
- 3 - Passenger's door harness

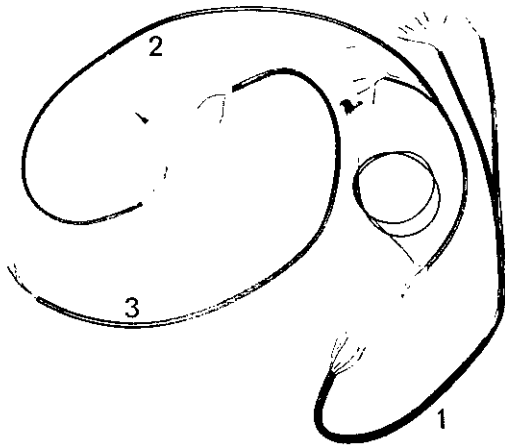

Installing



1. Paint mirror set to match car body color.
2. Install guide tube with spring and centering disc, and tighten to torque of 15 ± 3 Nm (1.5 ± 0.3 kpm). (Installed mirror can then still be turned via the cams.)



3. Pull harness into mirror.


4. Pull off door waistline strip. Remove inside trim on doors (also loudspeaker if applicable).

5. Drill holes in outside door panel according to dimensions and with reinforcement plate - for right door.

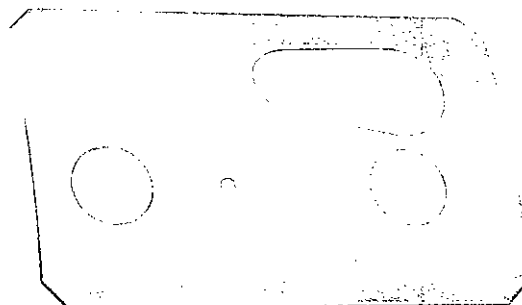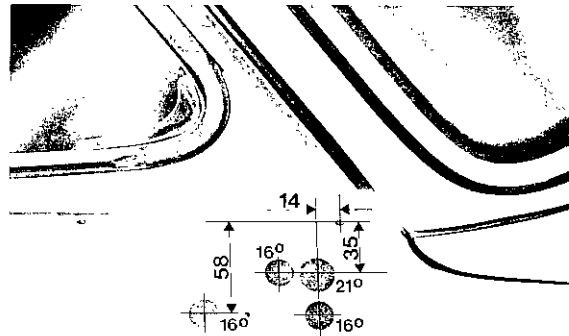


6. Install reinforcement plate and secure with pop rivets.


7. Lift out door and mount mirror base with gasket on door. Glue cap on mounting screw head. Guide set of wires through inside door panel and insert rubber grommet.

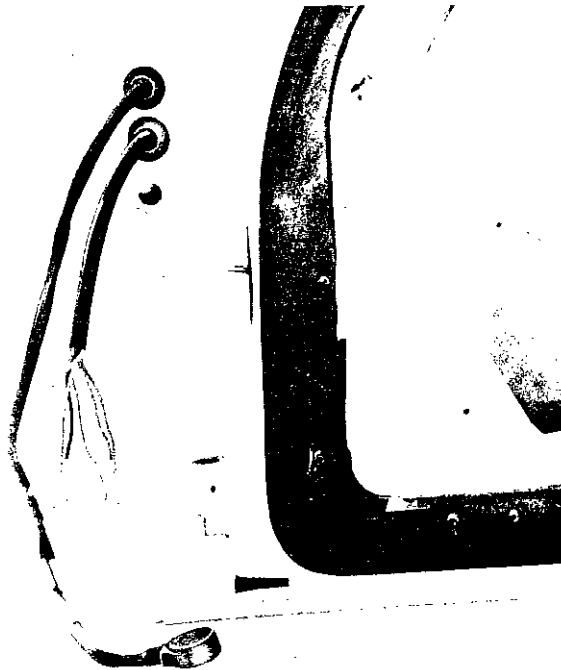

8. Press plug together and hold with self-adhesive foam tape. Note colors of wires and wiring diagram. Mount cover frame to mirror glass carrier. Connect and insert mirror glass.

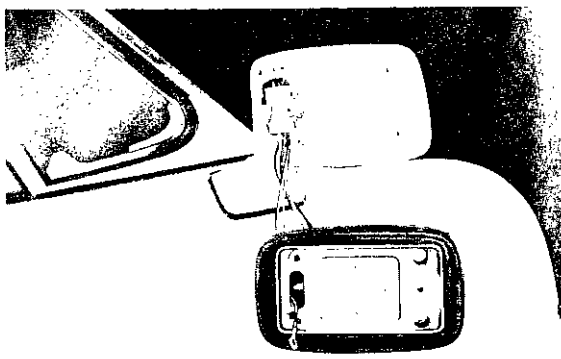


9. Insert wire grommet into door recess.

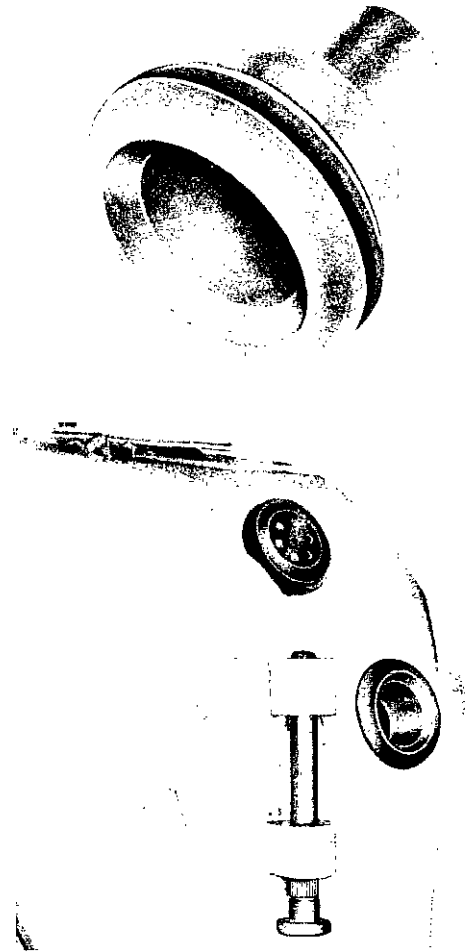


10. Install door and guide wires to luggage compartment floor plate. Install coupling plug according to wiring diagram.

11. Disconnect wire harness on luggage compartment floor plate at rear window defogger switch and combination instrument, and pull out. Pull in and connect new wire harness; remove instruments for this purpose.


12. Remove driver's door, and insert and connect new exterior mirror wire harness.
13. Cut a hole in trim of instrument panel, connect and install switch.

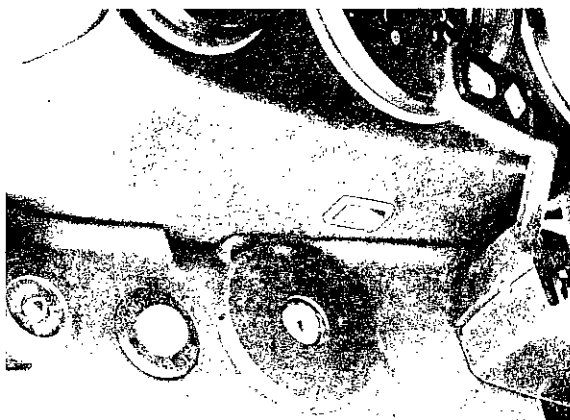

14. Connect couplings of wire harnesses in luggage compartment floor plate on left and right sides.

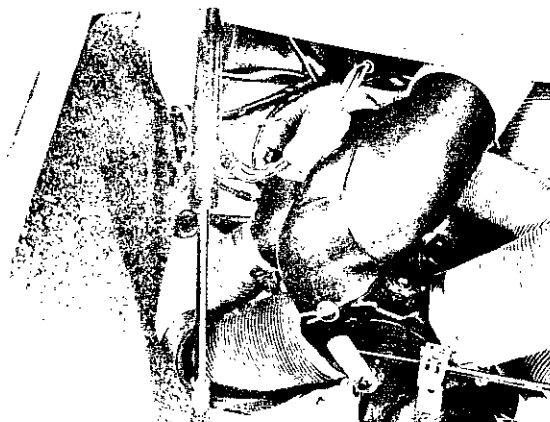

15. Attach door trim and check operation of mirror controls.

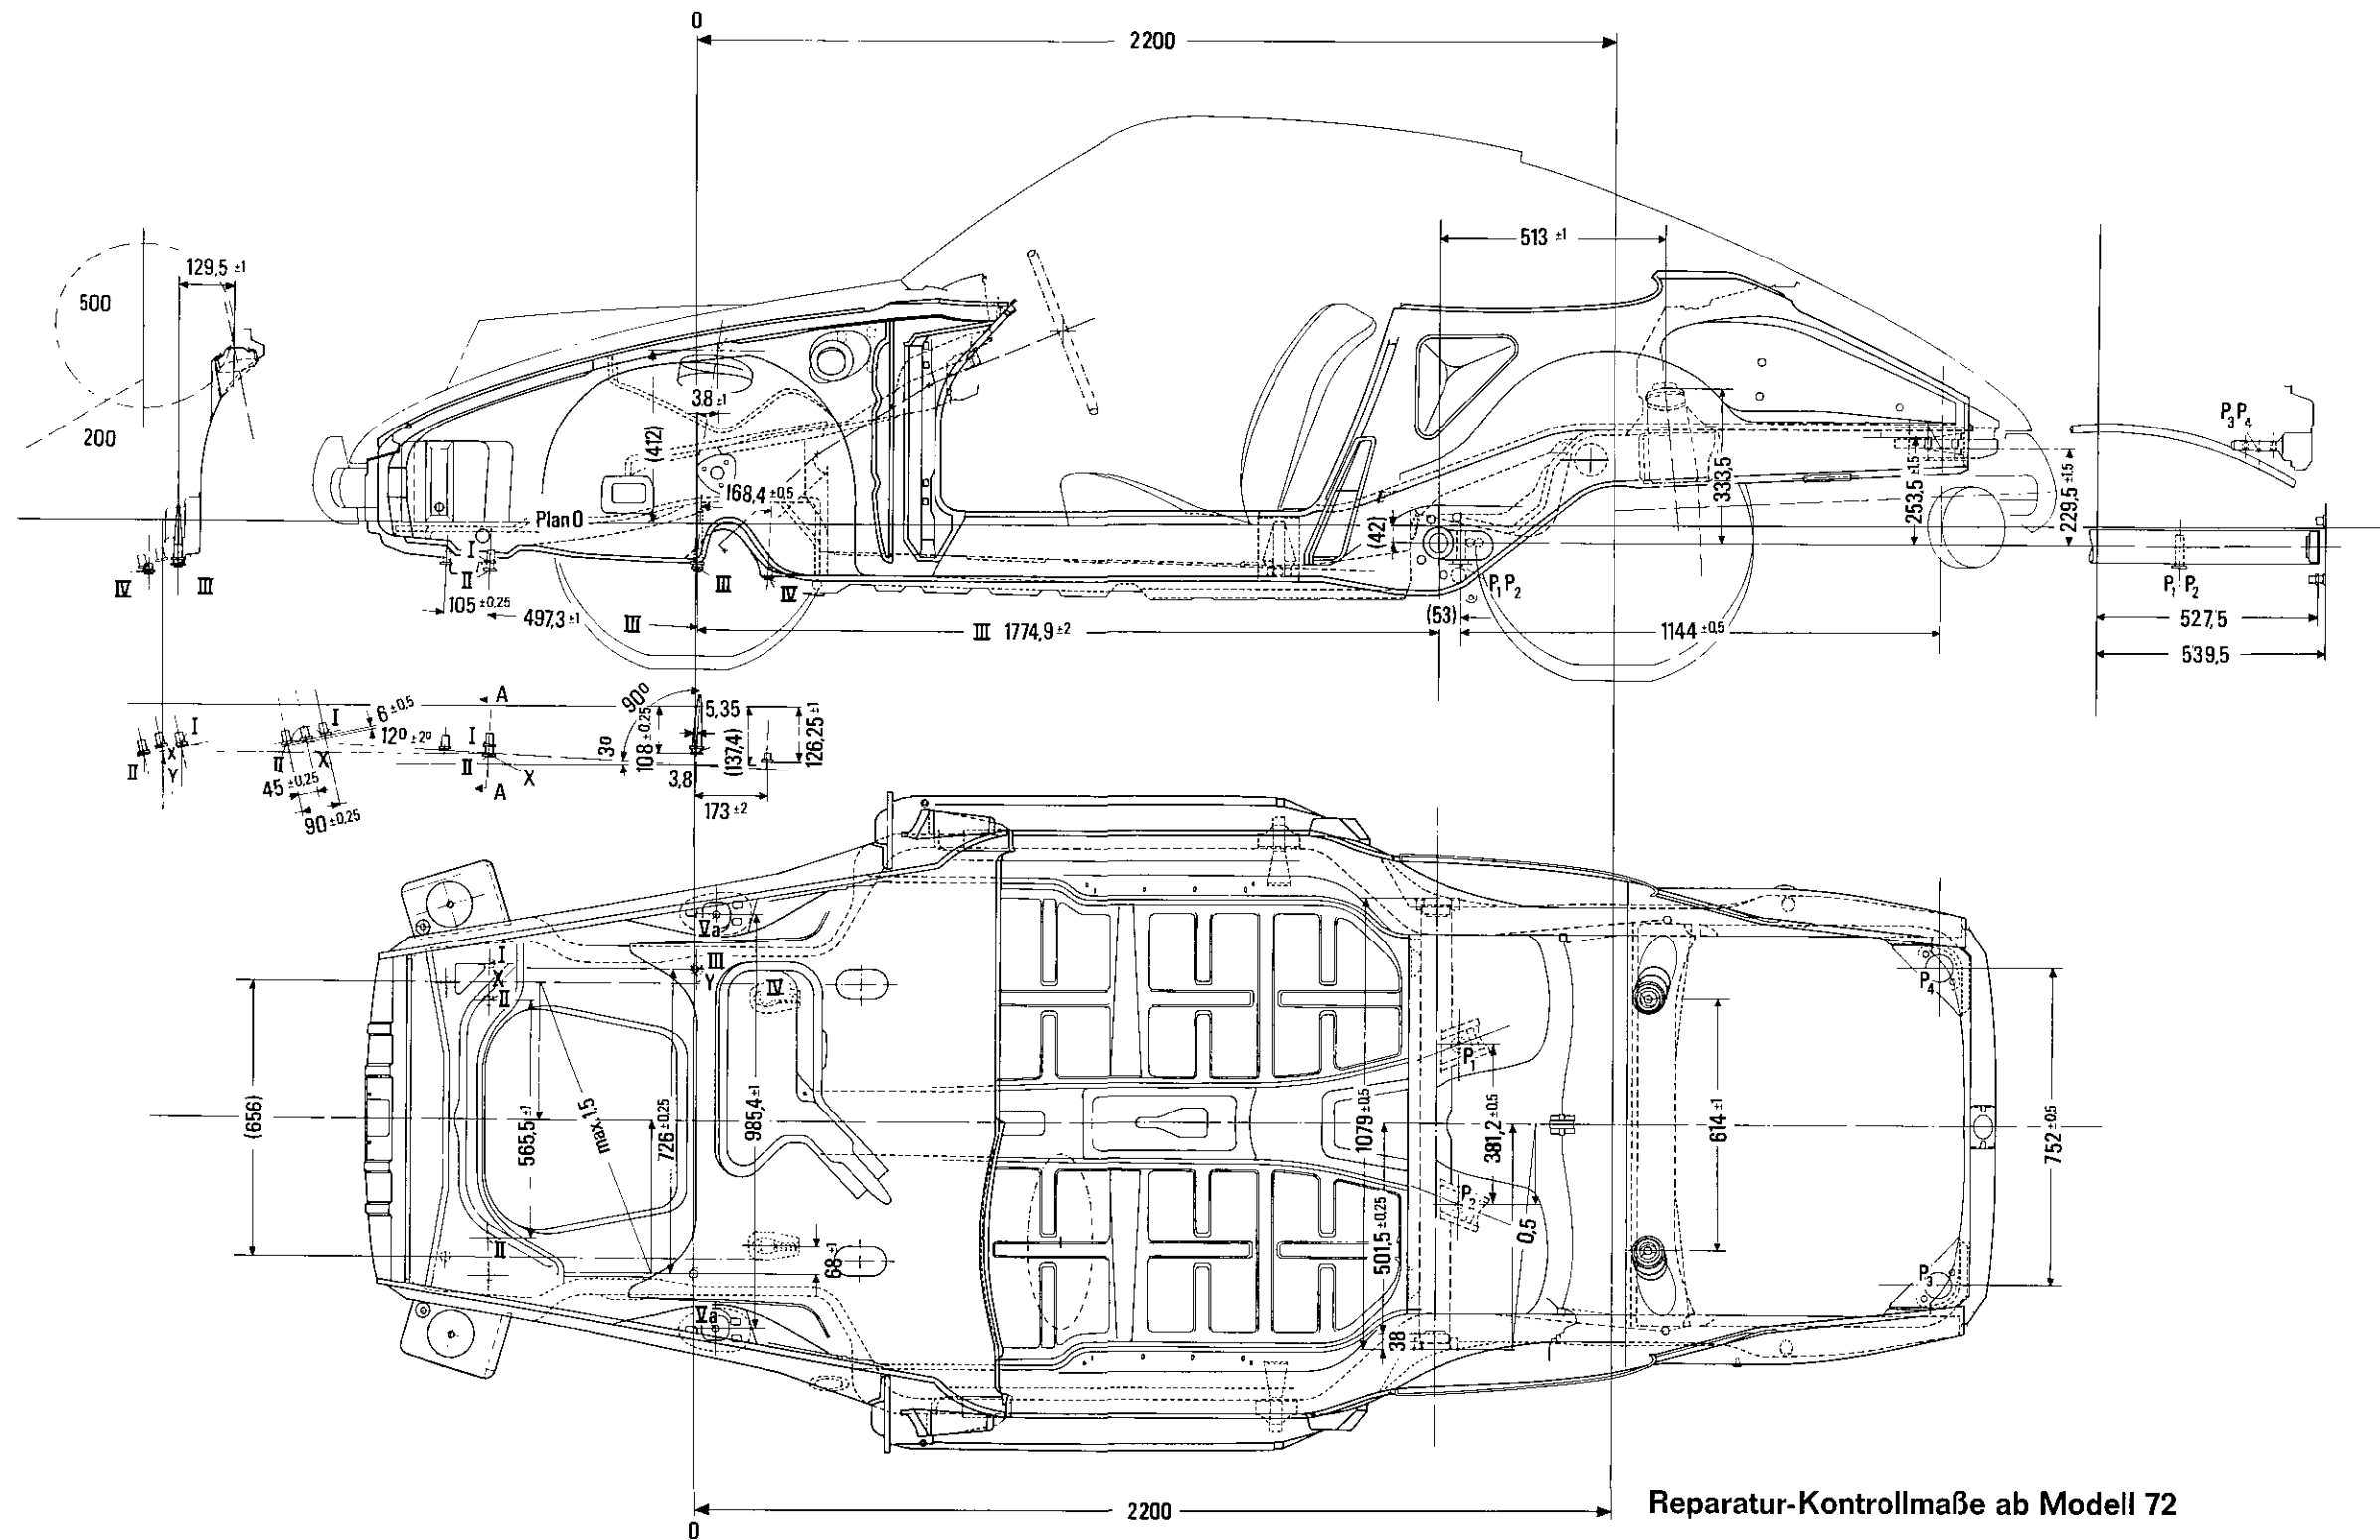

Reparatur-Kontrollmaße ab Modell 72

Check dimensions for bottom groups
from model 72 on

Cotes de contrôle pour le groupe de
fonde à partir du modèle 72


CHECKING REAR AXLE CROSS TUBE

The rear axle tube for Types 911 and 911 Turbo can be inspected for deformation with a locally made tool and a torsion bar.

Two pieces of round steel bar, 13 mm (1/2 in.) dia. x 300 mm (12 in.) long, are required for the locally made tool.

Machine one end of each bar to a point of about 60° .

The rear axle cross tube can be inspected after removal of the engine and rear axle.

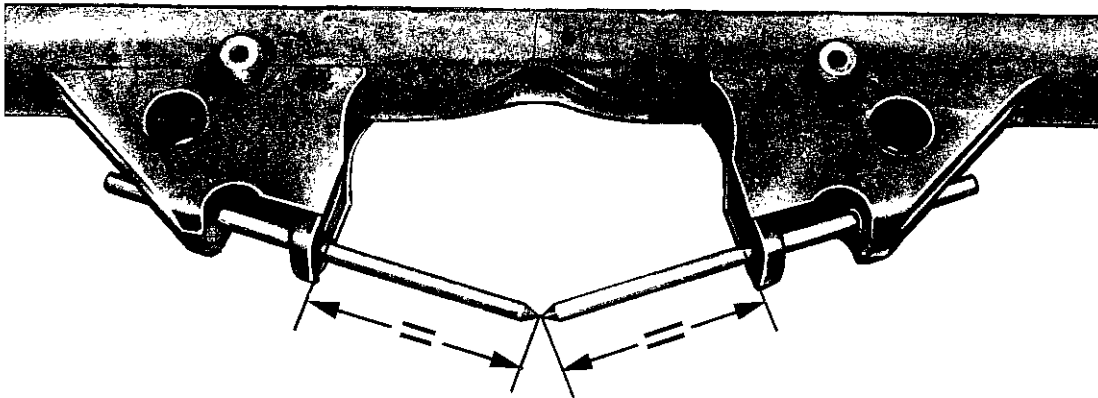

1. Insert both round bars through the trailing arm mounts. If both steel bar tips meet each other with the same distance from the mount to the tip, the mounts are okay. Deviations up to max. 3 mm (1/8 in.) are permissible.
2. Guide torsion bar into splines of cross tube on one side. Bar must be centered in tube with distance between bar and tube equal around entire circumference. Repeat procedure on other side. Slight deviations of about 3 mm (1/8 in.) are permissible.

INSTRUCTIONS FOR WELDING GALVANIZED SHEET METAL - 1976 MODEL

For the 1976 model the entire body is made of steel sheet galvanized on both sides. The zinc thickness varies between 7.5 and 20 micromillimeters depending on the corrosion possibility (except the Coupe's roof). Together with other protective measures, such as cavity spraying, undercoating and modern painting techniques, the body has adequate protection against corrosion.

This means several changes for repairs on sheet metal parts.

- The zinc coat should be ground down as little as possible or damaged in any other manner.
- Never use acids for cleaning.
- Use welding techniques which cause the least possible damage to the zinc coat. If at all possible replace welding with other welding techniques - resistance welding (spot) - gas-arc welding/brazing. Painting can be performed with the same materials as for steel sheet. Below are several explanations about recommended welding techniques.

RESISTANCE WELDING

Several points must be observed when employing resistance welding (spot welding).

- Due to the improved electrical conductivity of galvanized sheet in comparison to blank steel sheet, the current intensity will have to be increased to attain the required welding temperature of $1300^{\circ}\text{C}/2372^{\circ}\text{F}$.
- The welding time should be as brief as possible to keep the melting zone around the welding spot small. This will also mean that less zinc will stick to the electrodes and thus longer operating times are assured before maintenance becomes necessary.
- Hard copper (copper-chrome-zirconium alloys) is the best material for electrodes. It has high heat physical properties (above $400^{\circ}\text{C}/752^{\circ}\text{F}$); maximum service life up to 15,000 spots.
- The electrode welding surface shape can be Shape 1 or Shape 2 (see sketch).



Fig. 1



Fig. 2

- Depending on the thickness of the material, the max. welding spot diameter should be 4 to 5 mm (5/32 to 3/16 in.) depending on pressure applied to the electrode holder.
- Butt weld spots are not acceptable because these welding spots do not have sufficient strength.
- Cool-off periods must be scheduled if welding equipment without water cooling is employed, so that the electrodes are not deformed.


- Never make spot welds on edges of sheet metal (spatter formation).
- Clean and dress electrodes on their flanks and tip surface only if there is a heavy coat of deposits. The tip surface of the electrodes becomes harder from spot welding; the layer underneath however becomes softer.
- The distance between spots should be about 20 mm (3/4 in.). If the spots are too close together, the welding current will reduce the strength of the welding spots.
- Electrode arms should be as short as possible to increase the pressure at the weld point.

GAS-ARC WELDING

For body repairs the only type of gas-arc welding acceptable is the MIG method (Metal Inert Gas) with carbon dioxide (CO_2) or mixed gases, e.g. corgon (argon, CO_2 , O_2). Good welding is possible with these types of gases. Mixed gases increase the welding speed and the seams remain ductile.

Additional information for MIG welding galvanized steel sheet.

- Clean as much of the area to be welded as possible.
Optimum welding results require that the equipment be adjusted correctly.
- Check adjustment by listening if the arc has a steady crackling or hissing sound.
- Hold the torch at an angle of $75-80^\circ$ and approximately 3/8 inch away from the metal (dependent on equipment being used).

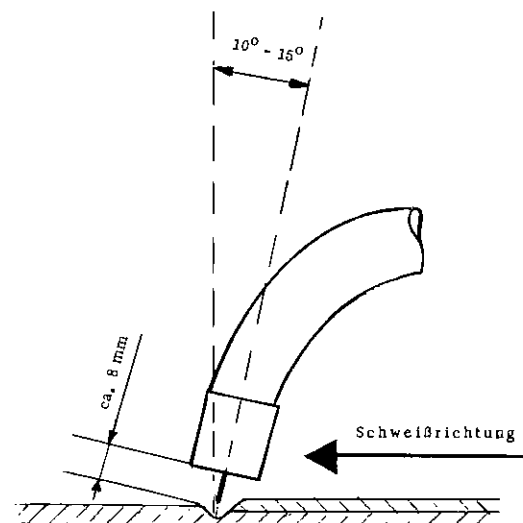

If adjusted properly the gas shielding will surround the melting zone and blow away the zinc oxide vapors produced.

To keep welding distortion to a minimum, the work should be allowed to cool down after welding a long seam.

- The most suitable welding wire is of soft quality, 0.8 mm (0.031 in.) in diameter and has 0.8 % silicon and manganese additives.
 - The gas shielding flow rate should be set at about 17 cu. ft. per hour.
 - For large scale welding adequate ventilation must be provided.
 - Welding seams, if accessible, must be protected with zinc paint, cavity or undercoating materials.
-

COLOR SELECTION - FROM 1972 MODEL

General

Beginning with 1972 models, a new numbering code is used in identifying paints on the paint nomenclature plate. The change was necessary to ensure right shipment of paint when ordered for given vehicle.

The new color code on the vehicle paint data plate is identical with the order numbers in the color catalogue.

Identification of the new 5-digit code numbers on the paint nomenclature plate:

Example: 131 9 2

| | | | |
|----|--------------------------|----------------|------------------|
| 1. | Three-digit paint number | <u>131</u> 9 2 | light ivory |
| 2. | Place of application | 131 <u>9</u> 2 | Porsche company |
| 3. | Paint manufacturer | 131 9 <u>2</u> | Glasurit company |

Standard colors from 1972 model:

| | |
|-----|---------------|
| 131 | light ivory |
| 117 | light yellow |
| 114 | signal yellow |
| 018 | tangerine |
| 022 | bahia red |
| 025 | aubergine |
| 225 | viper green |
| 325 | albert blue |
| 415 | sepia brown |

Optional colors from 1972 model:

| | |
|-----|---------------|
| 019 | gulf orange |
| 024 | fraise |
| 116 | signal orange |
| 132 | ivory |
| 213 | irish green |
| 218 | bush green |
| 226 | lind green |
| 227 | light green |
| 326 | icing blue |
| 328 | gulf blue |
| 329 | sea blue |
| 341 | lilac |
| 414 | olive |
| 622 | beige grey |
| 700 | black |

Metallic colors:

| | | |
|--------------|-----|---------------------------|
| to Sep-1st | 133 | metallic gold |
| from Sep-2nd | 140 | VW-metallic gold |
| | 224 | metallic green |
| | 324 | metallic blue |
| | 330 | metallic gemini |
| to Sep-2nd | 925 | metallic silver |
| from Sep-3rd | 936 | VW-metallic silver |
| | 999 | optional colors to sample |

COLOR SELECTION EFFECTIVE WITH 1974 MODELS

Standard colors beginning with 1974 models:

| | |
|-----|------------------|
| 027 | India red |
| 042 | Peru red |
| 117 | Light yellow |
| 137 | Yellow green |
| 156 | Orange |
| 336 | Mexico blue |
| 408 | Cockney brown |
| 516 | Sahara beige |
| 908 | Grand-Prix white |

Optional colors beginning with 1974 models:

| | |
|-----|----------------|
| 009 | Carmine red |
| 024 | Fraise |
| 025 | Aubergine |
| 116 | Signal orange |
| 139 | Blossom yellow |
| 213 | Irish green |
| 227 | Light green |
| 253 | Space green |
| 328 | Gulf blue |
| 341 | Lilac |
| 351 | Dark blue |
| 354 | Acid blue |
| 414 | Olive |
| 700 | Black |

Metallic colors:

| | |
|-----|----------------------|
| 036 | Salmon dust |
| 250 | Silver-green diamond |
| 335 | Gemini metallic |
| 406 | Comet shower |
| 432 | Copper diamond |
| 936 | Silver metallic |
| 249 | viper green diamond |
| 334 | metallic blue |

PAINTS - 1976 MODEL

| | | |
|------------------|-----|----------------------|
| Standard Colors: | 027 | indian red |
| | 106 | talbot yellow |
| | 107 | continental orange |
| | 117 | light yellow |
| | 258 | speedway green |
| | 305 | arrow blue |
| | 408 | cockney brown |
| | 700 | black |
| | 908 | grand prix white |
| Optional Colors: | 009 | carmine red |
| | 042 | peru red |
| | 137 | yellow green |
| | 213 | irish green |
| | 260 | daphne green |
| | 360 | cappa florio |
| | 516 | sahara beige |
| Metallic Colors: | 264 | viper green diamond |
| | 265 | oak green |
| | 266 | silver green diamond |
| | 304 | minerva blue |
| | 436 | diamond sarah |
| | 443 | brown copper diamond |
| | 936 | silver |
| | 944 | platinum diamond |

Note: Some of the metallic colors have new color codes because of a finer bronze powder.

E.g. silver green diamond before 250, now 266.

An extra "A" after the color code indicates an acrylic paint.

All of the listed colors are standard for the Turbo Carrera.

Caution : Most paints and their additives are combustible or explosive.
Take every precaution when using them.

PAINTS - 1978 MODELS

| | | |
|----------|-----|--------------------|
| Standard | 027 | india red |
| | 106 | talbot yellow |
| | 107 | continental orange |
| | 260 | sebring green |
| | 273 | fern green |
| | 274 | olive green |
| | 305 | royal blue |
| | 408 | chocolate brown |
| | 451 | mocca brown |
| | 502 | cashmere beige |
| | 700 | black |
| | 908 | grand prix white |
| Metallic | 265 | oak green |
| | 275 | light green |
| | 304 | caribe blue |
| | 376 | petrol blue |
| | 443 | copper brown |
| | 936 | silver |

BODY PAINT COLORS FOR 1979 + 1980 MODELS

Standard Colors from 1979 Models:

| | |
|-----|------------------|
| 027 | india red |
| 106 | talbot yellow |
| 273 | olive green |
| 305 | arrow blue |
| 408 | cockney brown |
| 451 | moCCA brown |
| 502 | cashmire beige |
| 601 | lilac |
| 700 | black |
| 908 | grand prix white |

Metallic Colors from 1979 Models:

| | |
|------|--------------|
| 265 | oak green |
| 275 | lind green |
| 30 T | light blue |
| 304 | minerva blue |
| 376 | petrol blue |
| 443 | copper brown |
| 463 | opal green |
| 464 | tabacco |
| 708 | black |
| 936 | silver |

Colors by Sample:

| |
|-----|
| 099 |
|-----|

RANGE OF BODY PAINT COLORS - 1981 MODELS

Standard Colors:

| | |
|------------------|-----|
| guards red | 027 |
| alpine white | 182 |
| mint green | 20A |
| royal blue | 305 |
| mocca black | 451 |
| bamboo beige | 523 |
| black | 700 |
| grand prix white | 908 |
| caramel brown | 524 |

Special Colors:

| | |
|-----------------------|-----|
| metallic moss green | 20C |
| metallic light blue | 30T |
| metallic minerva blue | 304 |
| metallic pacific blue | 31G |
| metallic rosewood | 474 |
| metallic platinum | 655 |
| metallic black | 708 |
| metallic wine red | 895 |
| metallic pewter | 956 |

Metallic Paint

Wet-on-Wet Process

Until now, two different types of clear enamel with synthetic resin base were used in the course of repairs:

- | | |
|---------------------------------------|--------------|
| 1. 80° C clear enamel | 77 - 84 0503 |
| 2. Two-component acrylic clear enamel | 51 - 09168 |
| with catalyst | 40 - 22004 |

To simplify painting process, only the two-component acrylic clear enamel with catalyst will be offered in the future.

The two-component clear enamel # 51 - 09168 will be available in 1 liter cans, and the catalyst # 40 - 22004 in 0.125 liter cans. This provides for an easy preparation of the two-component enamel in the right proportions.

This enamel can be air-dried or baked at 80° C.

Preparation: The spraying consistency is attained upon mixing.

Allow to age 15 - 20 minutes before applying.

Spraying pressure 5 atm

Nozzle size 1.2 mm

Application 1 1/2 - 2 cross-coats

Do not mix more enamel than can be used within a max. of 8 hours

The enamels should not be stored in excess of 1 year.

PAINTING TARGA ROLL BAR COVER

General Information

The Targa roll bar cover (rustproof steel) has a coat of flat black polyurethane textured paint. In addition to metal parts, polyurethane paint can be used on parts made of fiber glass (Targa removable roof) and rigid expanded polyurethane.

Polyurethane paint is extremely scratch and wear resistant, color fast and can be air dried.

Required for touch-up painting:

| | |
|-----------------------------|-------------------------|
| Polyurethane textured paint | Part No. 911 096 160 02 |
| Polyurethane hardener | Part No. 911 096 220 04 |
| Polyurethane thinner | Part No. 911 096 330 03 |

Procedure:

Clean and degrease new part.

Grind off all textured paint from damaged part, grind out and clean damage spot (s) as required.

Priming Use Dupont 1005 (or equivalent) primer

| | | |
|--------------|---|---|
| Initial coat | Mix polyurethane textured paint with hardener | |
| | Mixing ratio | 5 : 1 or 7 : 2 parts by weight |
| | Spray viscosity | 20 to 25 seconds |
| | Spray nozzle | 1.5 mm dia (30 De Vilbiss or equivalent) |
| | Spray pressure | 3 to 4 bar (45 - 60 psig) |
| | Application | 1 cross pattern |
| | Flash off time | 15 to 20 minutes in open air |

| | | |
|------------|-----------------|--|
| Final coat | Spray viscosity | 45 to 50 seconds (using pressure gun) |
| | Spray nozzle | 1.5 mm dia. (30 De Vilbiss or equivalent) |
| | Spray pressure | 0.8 to 1.0 bar (12 - 15 psig) |
| | Application | 1 cross pattern |

Note: Check texture pattern by spraying a test panel.

| | | |
|--------|--------------|--|
| Drying | Air drying | approx. 12 hrs. at 20 ^o C/68 ^o F |
| | Force drying | 30 to 40 min. at 80 ^o C/176 ^o F |

Complete hardness is reached in 5 to 7 days.

SHOP MATERIALS FOR BODY REPAIRS

Hydraulic 10 ton straightener with accessories

Celette straightening bench

Set of attachments ENS 77.360

| | |
|------------------|-------------|
| Universal anchor | ENS 937.900 |
|------------------|-------------|

Front end gauge P 863 + P 863 a

Inert gas welder

Resistance spot welder

Gas welder

Hand grinder with inserts (grinding wheels and stones, steel brushes, cutters)

Disc grinder

Angle grinder with accessories (180 mm dia. cutting wheels and grinding paper)

Pneumatic hammer with inserts


Beam compass

Bubble level

Shoulder pliers

Air gun

| | |
|-------------------------|----------------------------|
| Equipment and materials | for permanent undercoating |
| | for cavity sealing |
| | for sealing |

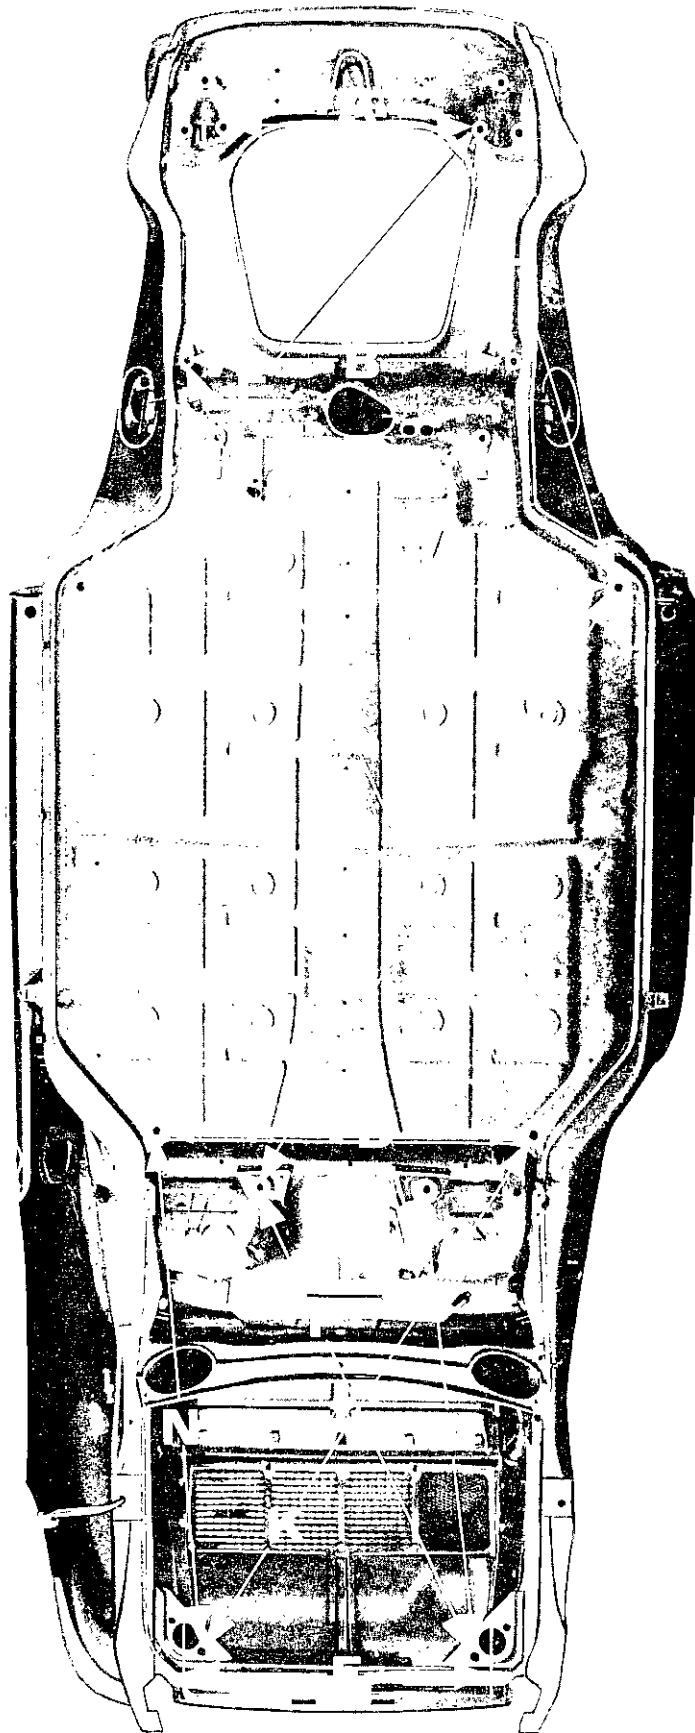

| Dimension | Location | mm | inch |
|-----------|--|---------------|-------------------------------------|
| A | Control arm mounts | 565.5 ± 1 | $22 \frac{1}{4} \pm \frac{1}{32}$ |
| B | Auxiliary support | 726 ± 1 | $28 \frac{1}{2} \pm \frac{1}{32}$ |
| C | Front floor plate | 1200 ± 2 | $47 \frac{1}{4} \pm \frac{1}{16}$ |
| D | Rear floor plate | 850 ± 2 | $33 \frac{1}{2} \pm \frac{1}{16}$ |
| E | Engine brackets | 752 ± 1 | $29 \frac{19}{32} \pm \frac{1}{32}$ |
| F | Front floor plate - control arm mount | 1327 ± 3 | $52 \frac{1}{4} \pm \frac{1}{8}$ |
| G | Rear floor plate - auxiliary support | 1868 ± 3 | $73 \frac{1}{2} \pm \frac{1}{8}$ |
| H | Axle tube/transmission mount - front floor plate | 1550 ± 3 | $61 \frac{1}{32} \pm \frac{1}{8}$ |
| I | Axle tube/transmission mount - engine bracket | 1323 ± 5 | $52 \frac{3}{32} \pm \frac{3}{16}$ |
| K | Rear floor plate - engine bracket | 1557 ± 5 | $61 \frac{5}{16} \pm \frac{3}{16}$ |
| L | Front floor plate - control arm mount | 1041 ± 3 | $41 \pm \frac{1}{8}$ |
| M | Front floor plate - rear floor plate | 1215 ± 2 | $47 \frac{27}{32} \pm \frac{1}{16}$ |
| N | Rear floor plate - engine bracket | 1355 ± 3 | $53 \frac{11}{32} \pm \frac{1}{8}$ |
| O | Axle tube/transmission mount - engine bracket | 1220 ± 3 | $48 \frac{1}{32} \pm \frac{1}{8}$ |

All dimensions are measured from center of holes.

Note



Dimensions to engine suspension points are measured diagonally.

CAUTION

The difference between left and right longitudinal dimensions may not exceed the specified tolerances.

Floor Assembly Checkpoints and Front Body Gauges P 863 and 863a

As already announced in the 1975 Model Information, checkpoints are welded to the frame/floor assembly of 1975 models. These checkpoints and front body gauge P 863a (consisting of former gauge P 863 and an additional adaptor) make it possible to diagnose the damage quickly.

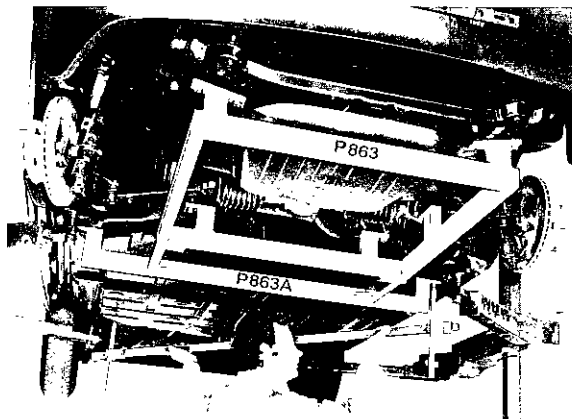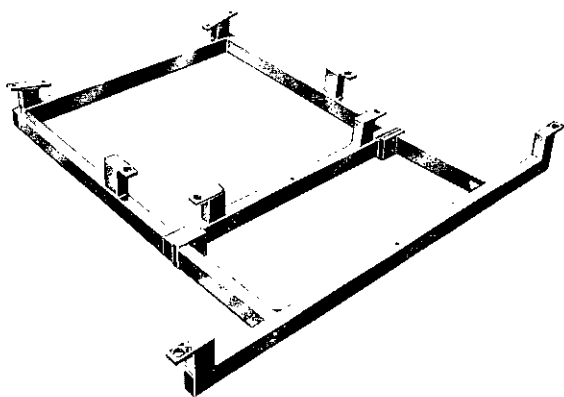

The gauge can also be applied to repair slight front end damage (Dents up to 10mm). It is no longer necessary to place a car with damage of this type on an alignment bench.

Installation of this gauge requires removal of the wheels, guards, carrier and control arms. As illustrated, the gauge is then bolted to the front axle holder points and front floor plate checkpoints.


A surveyor's rod is used to measure the distances back to the floor plate checkpoints and rear axle tube holder points for the transmission, from the engine suspension.

Note! The gauge is for gauging only. It must be removed for aligning and welding operations to prevent distortion through body stresses.

The auxiliary carrier pin for Type 911 Turbo is installed 21 mm higher. When measuring with front end gauge P 863 the distance between upper edge of gauge and collar on auxiliary carrier pin must be 21 mm or, with adapter mounted on auxiliary carrier pin, 13 mm.


Replacing Part of Front Wheelhousing

Includes: Lock panel, front tank support and left or right tank support.

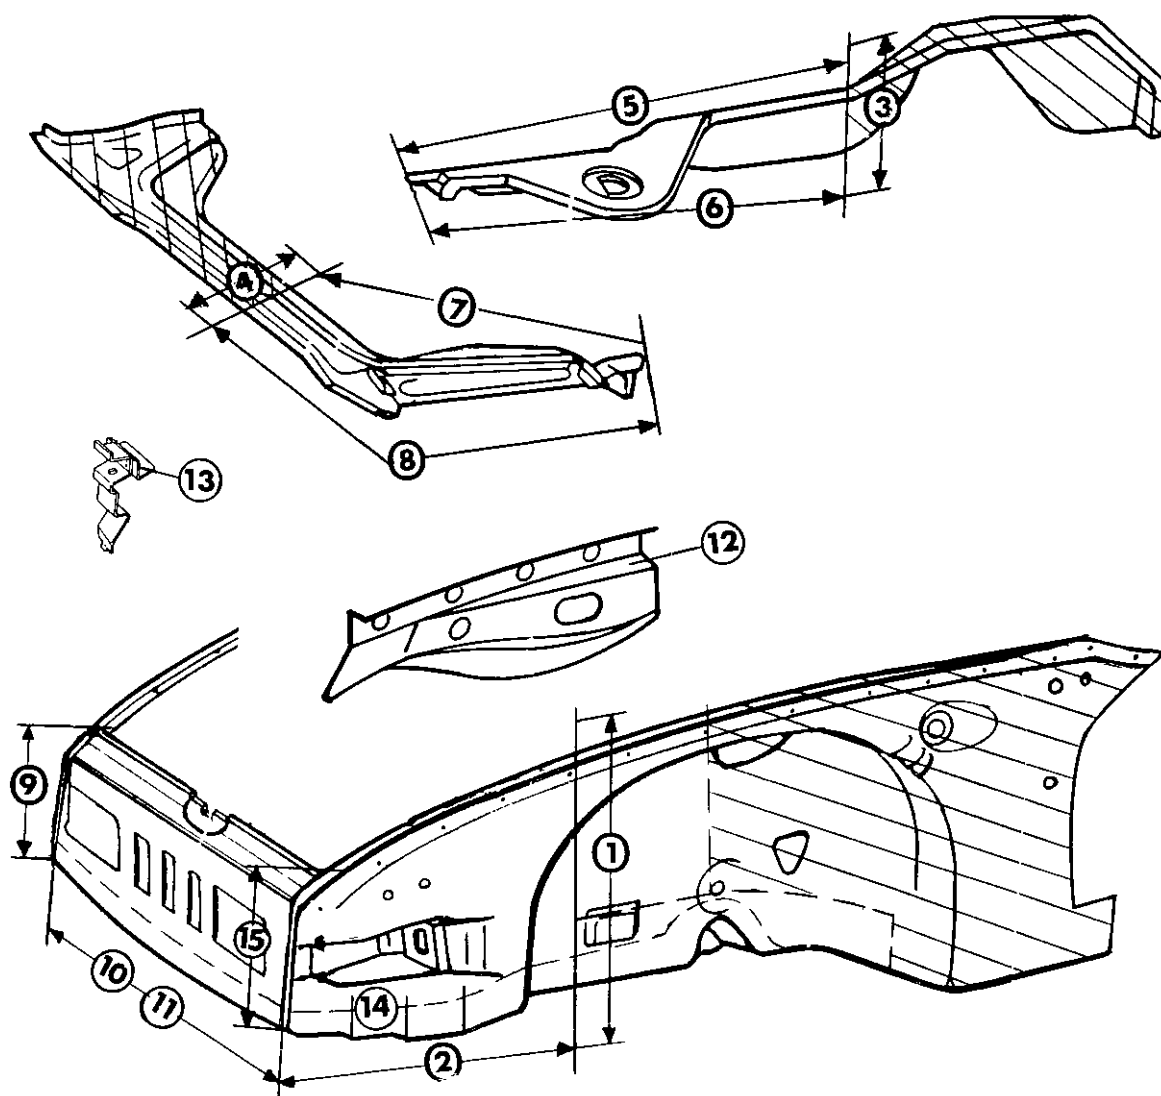

Replacing Part of Front Wheelhousing

Includes: Lock panel, front tank support and left or right tank support.

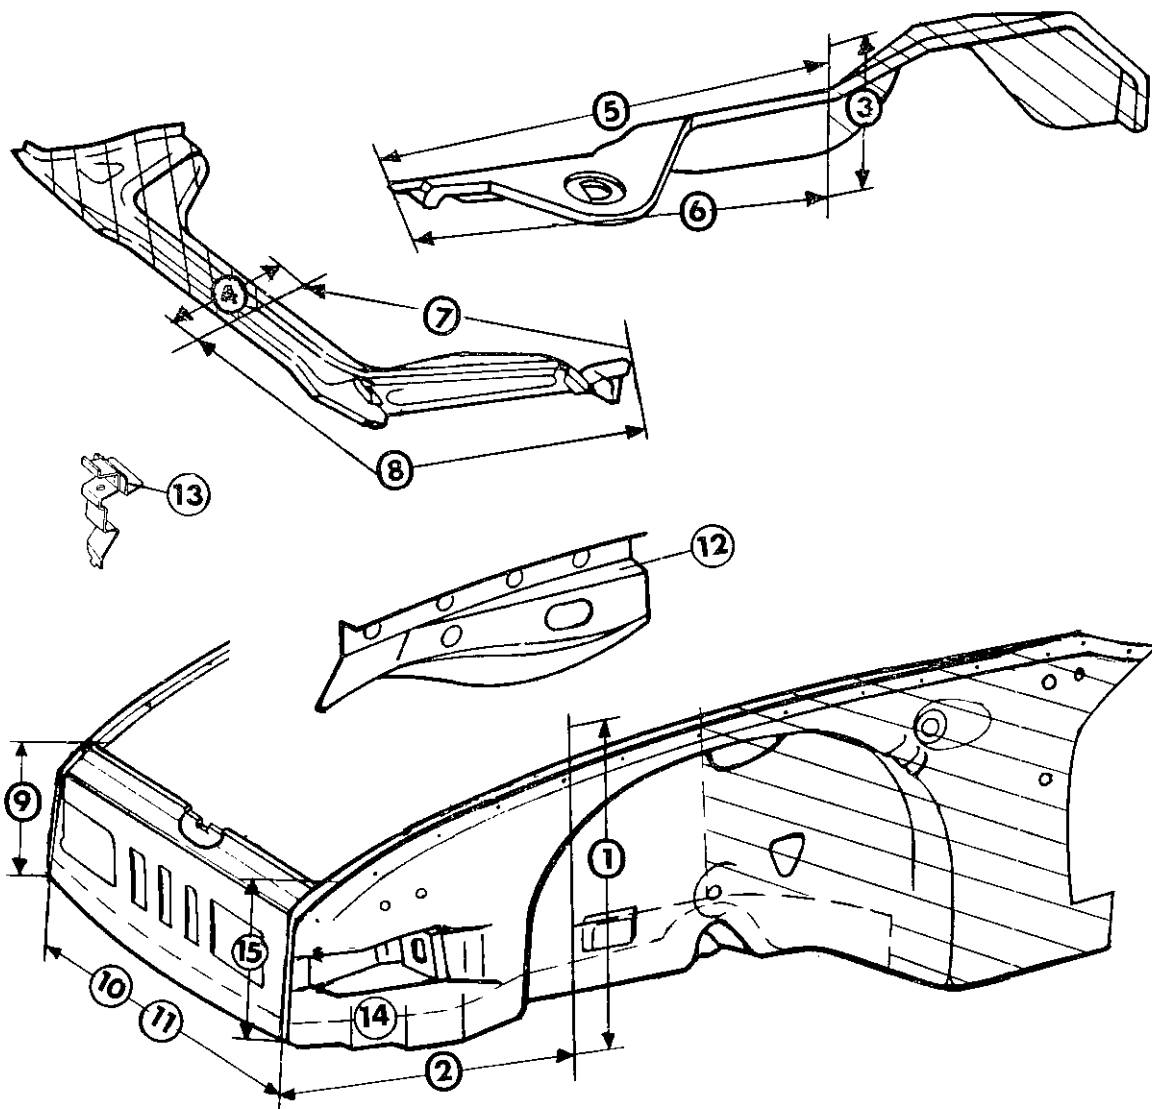

Replacing Part of Front Wheelhousing

| Operation | Areas | Material |
|---|--|--|
| 1. <u>Separating</u> | 1, 3, 4, 9, 10, 12 | Cutting disc |
| Chiseling | 2, 5, 6, 7, 8, 10, 11 | Pneumatic chisel or hand chisel |
| <u>Remove metal scraps</u> <u>undercoating and paint</u> | 2, 5, 7, 8, 9, 10, 11, 12, 14 | Welding torch, hand grinder and pliers |
| 2. <u>Preparing</u> (new parts) | | |
| Cutting and grinding | 1, 3, 4 | Cutting disc, hand grinder and metal cutters |
| Apply rust preventative | 1-15 | Paint |
| 3. <u>Welding</u> | | |
| Spot weld | 2, 5, 7, 10, 12 | Spot welder |
| Butt weld | 3, 6, 8, 12 | Spot welder |
| Weld | 1, 3, 4, 9, 11, 13, 14, 15 | MIG welder |
| Weld | hood and fender connection welded flush | Gas welder |
| 4. <u>Finishing</u> | | |
| Grinding | 1, 4, 5, 7 | Hand grinder |
| Welding seams | 1-15 spots burnt through | Gas or MIG welder |
| Sealing | Inner and outer | Undercoating (asphalt - PVC basis) |
| Preserving | Cavities | Tectyl etc. (wax basis) |

Replacing Part of Front Wheelhousing

1 - Damage Diagnosis

When the extent of damage cannot be defined exactly.

- Check floor plate assembly.

Includes: Removing and installing front wheels, control arms, auxiliary support and protection plate.

2 - Alignment

Before the damaged parts are cut out, the dented portion is as close as possible aligned with hydraulic alignment equipment.

3 - Preparations

Dismantle front bumper

left front fender

right front fender (loosen partially)

front hood

lower hood lock and cable

front apron


electrical items as required

4 - Separation of damaged parts

Note: Cut out badly damaged parts instead of unbolting.

Replacing Part of Front Wheelhousing

- 4 a - Damaged parts can be separated in any sequence in accordance with the operations illustrated below.

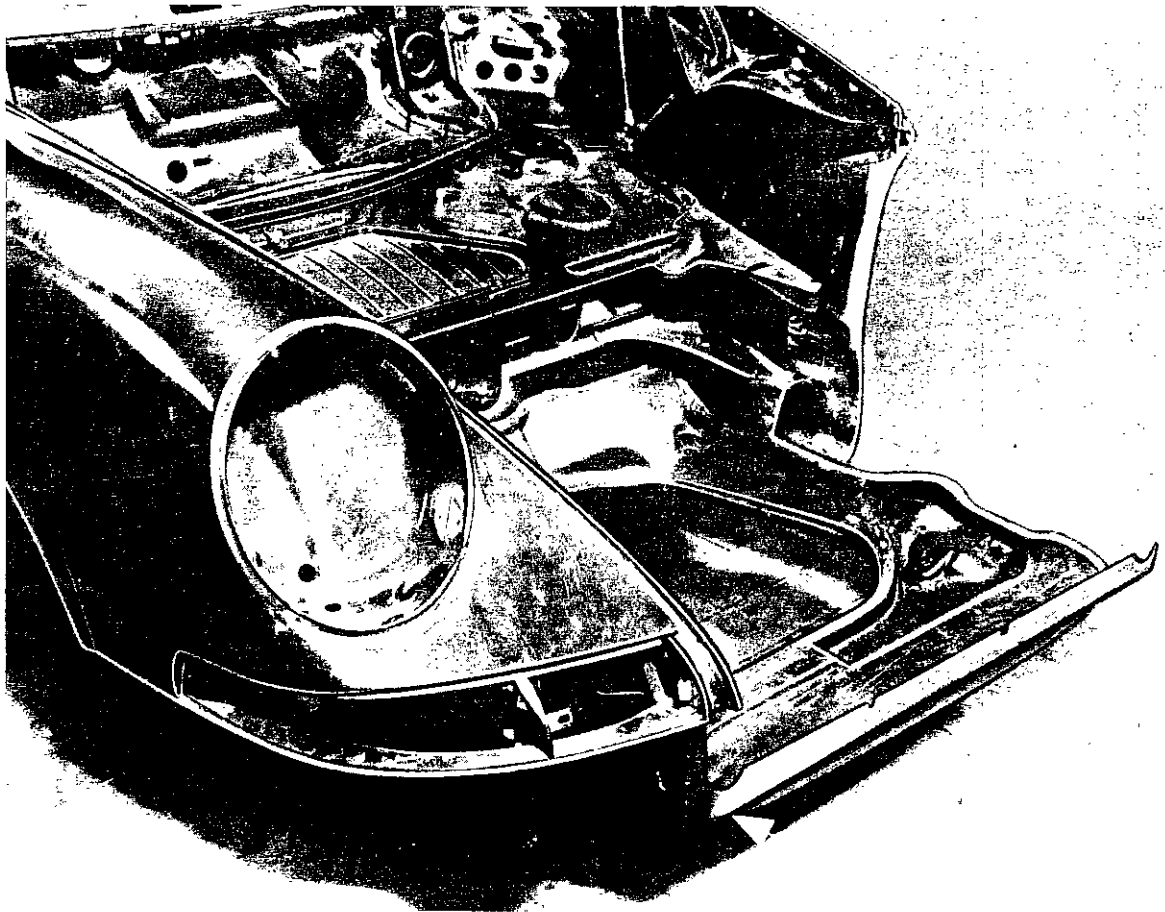


- 4 b - Remove remaining scraps of metal. Align and grind down mating surfaces and flange.
- 5 - Cut floor plate at remaining portion of wheelhousing far enough so that the lock panel can be stuck through (see arrow).

Replacing Part of Front Wheelhousing

6 - Check axle take-up points, aligning if necessary.

7 - Align and cut new parts.
(various cutting lines marked)

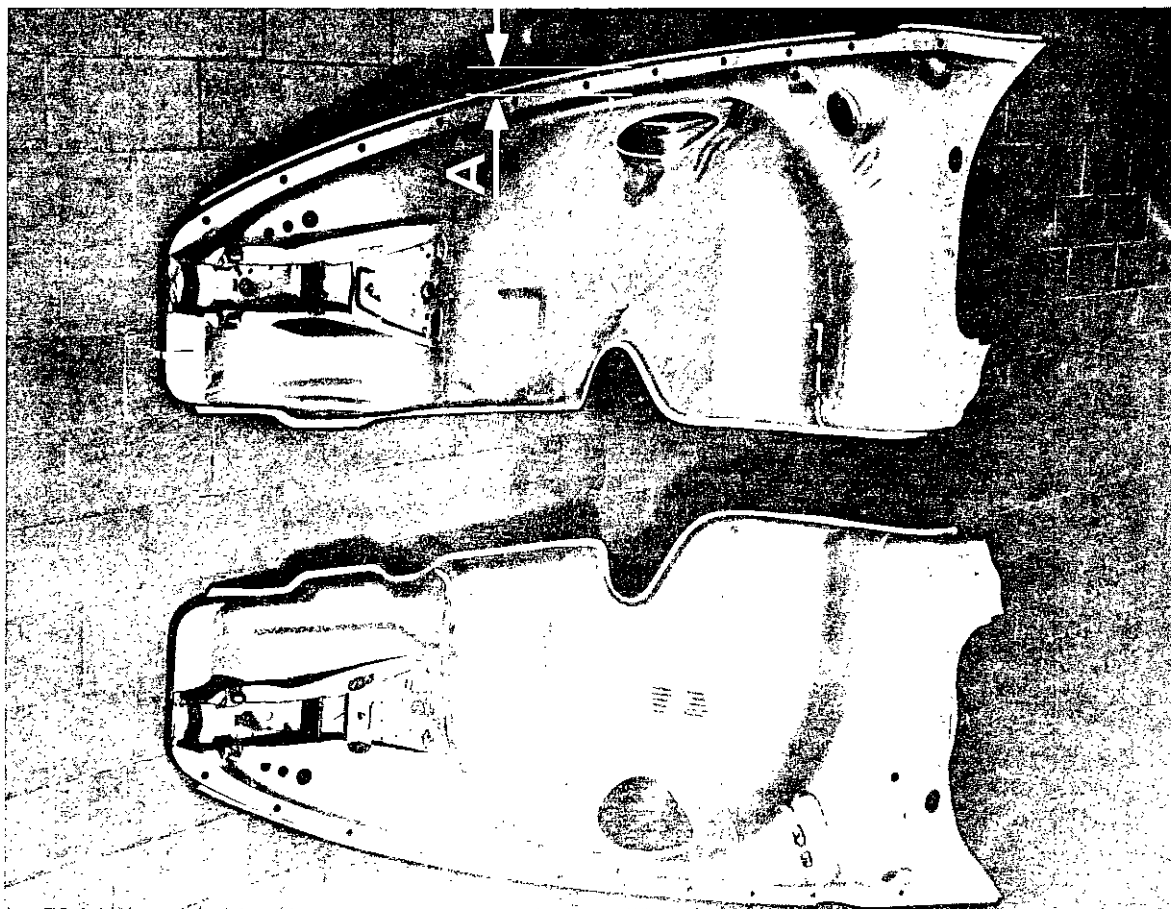


8 - Bolt front hood.

9 - Install lock panel cutting bottom left and right if necessary.

10 - Install wheelhousing panel so that it overlaps connector plate. Saw cuts in hood crease and fender mating surface and butt weld (Area A).


Replacing Part of Front Wheelhousing

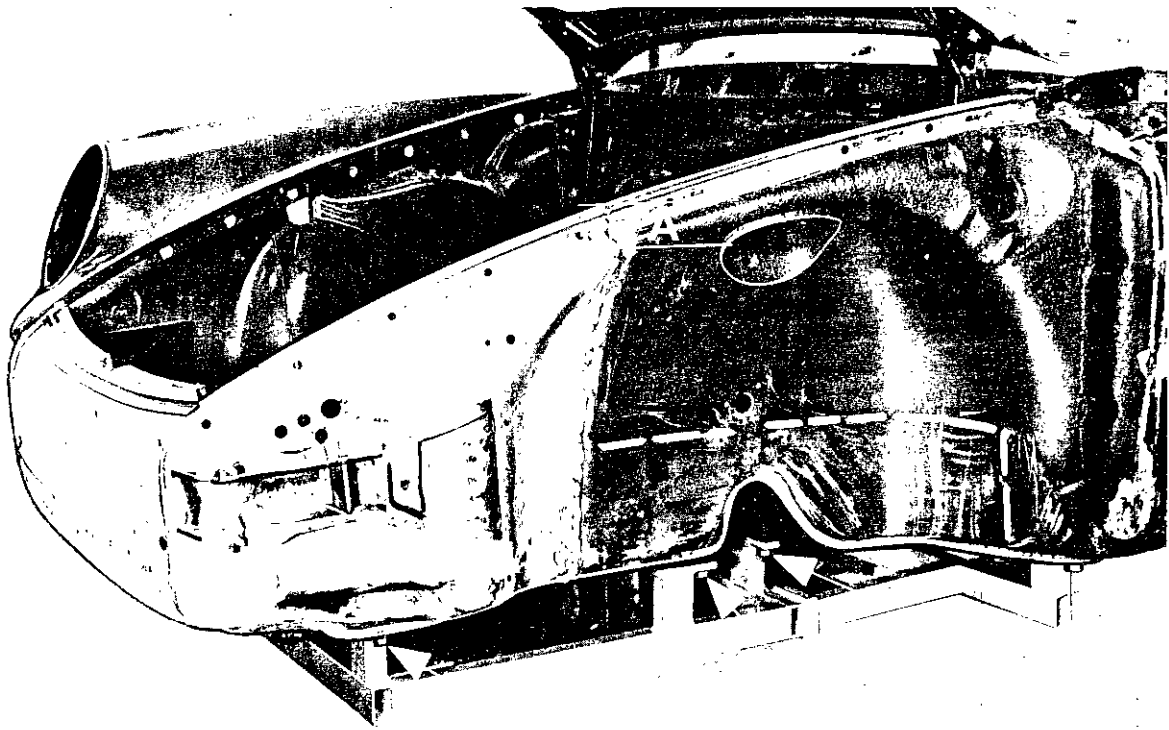

- 10 a - If the wheelhousing was dented at the rear control arm bolting points and above, extend and weld the new part overlapping the dented section. See broken line.
- 11 - Check take-up points.

Replacing Part of Front Wheelhousing

- 12 - Align and spot weld front tank support.
- 13 - Align and spot weld left tank support.
 - Secure tube for hood release cable.
 - Insert and spot weld reinforcement plate.
 - Weld jack and hardtop roof brackets.

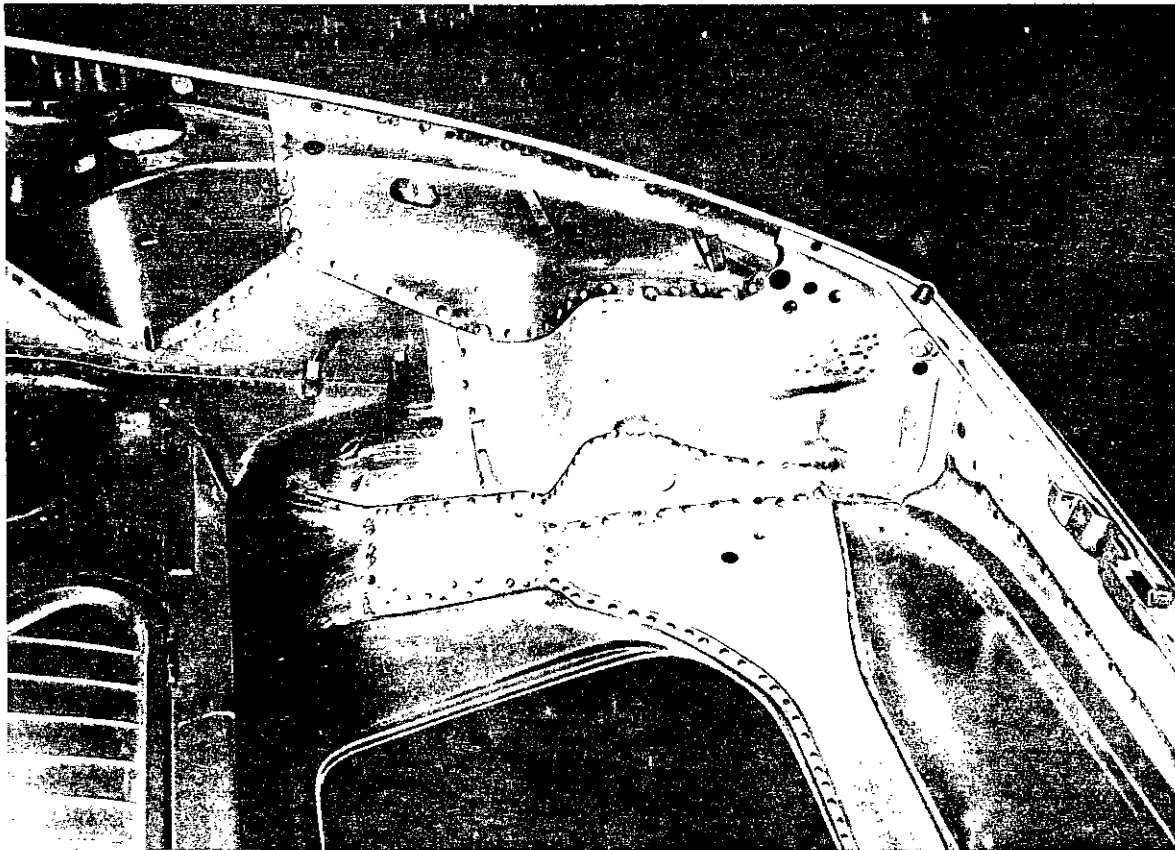

- 14 - Finishing

Grind down welding seams in Area A. Clean and prime coat all other welding seams. Weld burnt through welding spots. Apply undercoating. Seal seams and joints.


ECONOMICAL REPAIRS WITH CELETTE STRAIGHTENING BENCH FOR TYPE 911, 912 AND 930 TURBO

The attachment set ENS 77.360 was developed for body straightening work. The attachment set consists of basic equipment, with which all important take-up points can be checked. This attachment set also has attachments for simple repairs. With these parts it is no longer necessary to remove the engine and transmission for front end body damage or the front axle for rear end body damage.

All mounting points must fit flat on the Celette straightening bench and bolting must be possible without stress.

Take-up Points and Bolt Size

- | | |
|-------------------------------|-----------------|
| 1. Control arm front | M 10 x 30 |
| 2. Auxiliary carrier front | M 12 x 1.5 x 70 |
| 3. Auxiliary carrier rear | M 10 x 30 |
| 4. Shock absorber top | |
| 5. Rear axle cross tube outer | M 10 x 30 |
| 6. Transmission suspension | M 12 x 1.5 x 70 |
| 7. Cross member upper | |
| 8. Engine mount | |

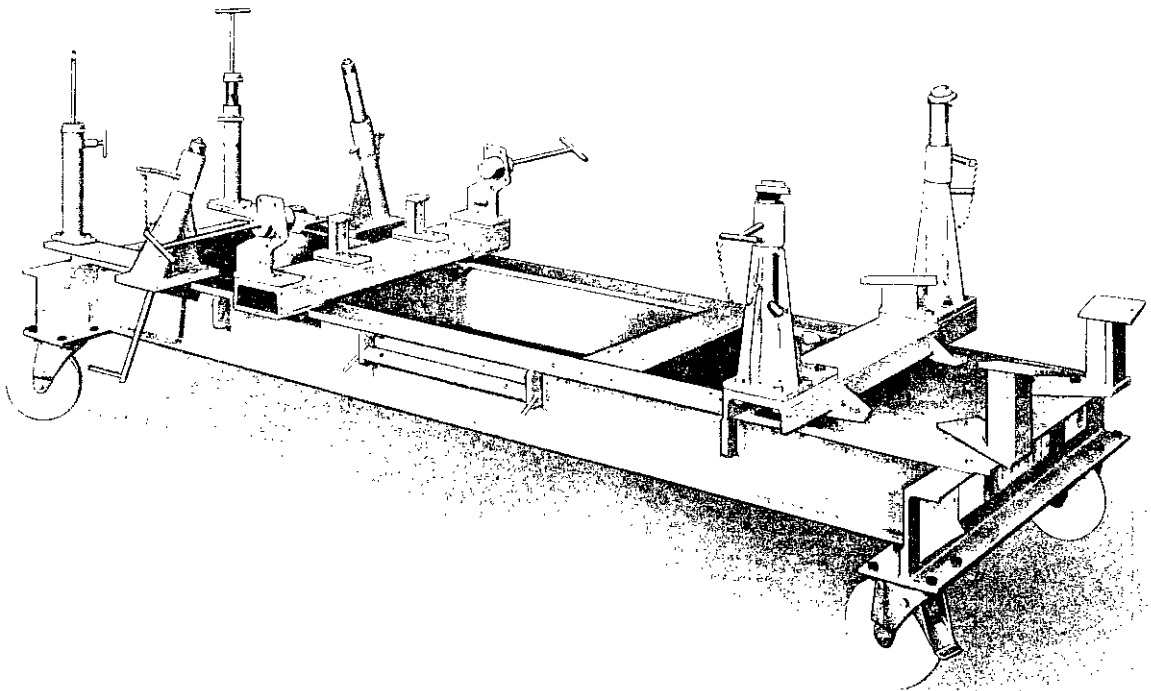

Attachment set ENS 77.360 basic equipment


PREPARING BODY FOR USE OF ATTACHMENT SET
ENS 77.360

Remove:

- Bottom guard
- Wheels
- Front axle and steering gear assembly
- Fuel tank
- Rear axle arms and shock absorbers
- Torsion bars
- Engine
- Transmission
- Damaged body parts and equipment,
as necessary for straightening.

Preparing Celette straightening bench:


Bolting all attachments of set, except
for spring strut dome. Setting scale on
auxiliary carrier take-up to 0.

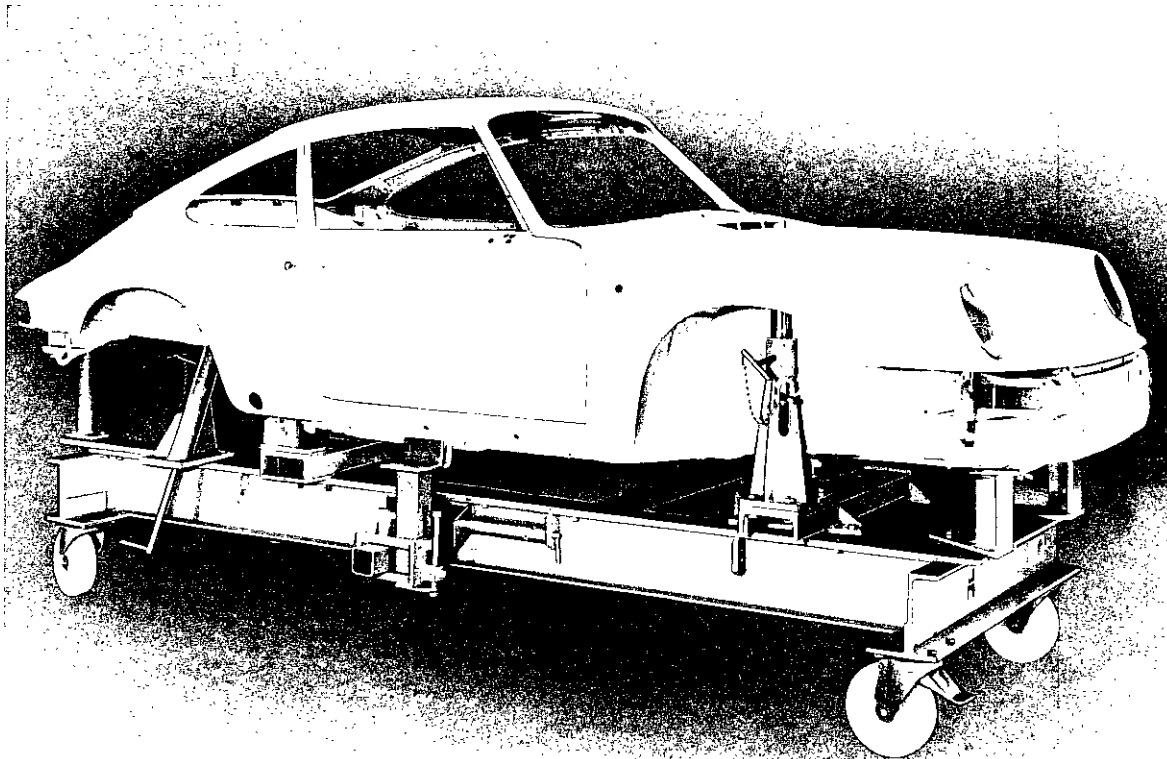

Note:

Horizontal position of a movable Celette
straightening bench must be checked
with a bubble level.

From 1977 models on (adjustable spring strut setting) the shoulder bolts of side member/rear axle cross tube are 4 mm longer on both sides.

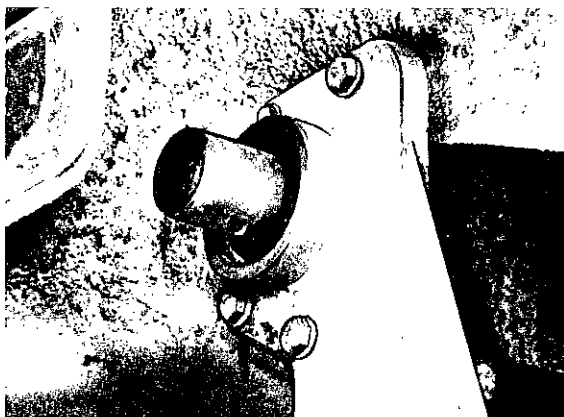


For these cars the bores in the take-ups of the attachment set must be enlarged by this amount. For the previous models these enlarged holes must be adapted by using suitable washers.

Note

Attachment set ENS 77.360 corresponds with version from 1977 models on. For cars up to 1976 models the supplied washers must be used.

ATTACHMENT SET FOR TYPE 930 TURBO ENS 77.303

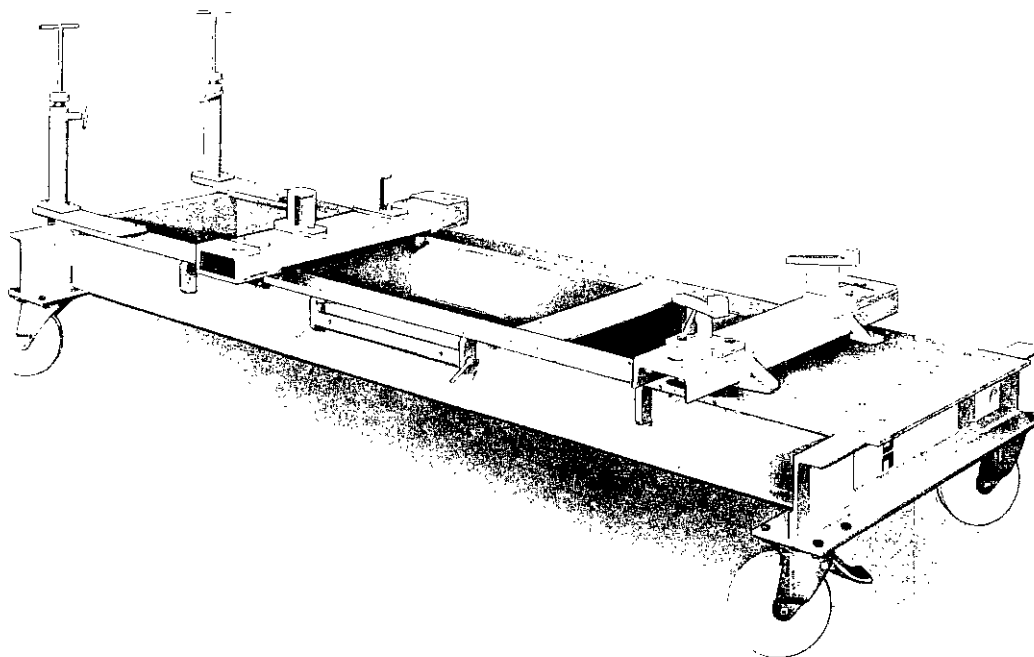

The illustrated take-up points differ from Type 911 attachment set and are used for Turbo models.

The auxiliary carrier pin is installed 21 mm higher.

The brackets on the rear axle cross tube are inclined upward.

The take-up point for transmission suspension is located further forward by 25 mm.

The engine mount for Type 3.0 Turbo up to 1977 models corresponds with Type 911.

The engine mount for Type 3.3 Turbo from 1978 models on is located further toward rear by 30 mm.

EXTRA ATTACHMENT FOR ECONOMICAL REPAIR OF FRONT END DAMAGE


With this set of straightening bench attachments it is not necessary to remove the engine, transmission and rear running gear parts.


Its application requires that the rear end of the body is not damaged.

Remove:


Bottom guard
Wheels
Front axle with steering gear
Fuel tank
Bearing (torsion bar) covers
Damaged body parts and equipment for required for straightening


Preparation of Celette straightening bench: Bolt attachments for front control arms and auxiliary carrier, install and bolt cross member with control pins.

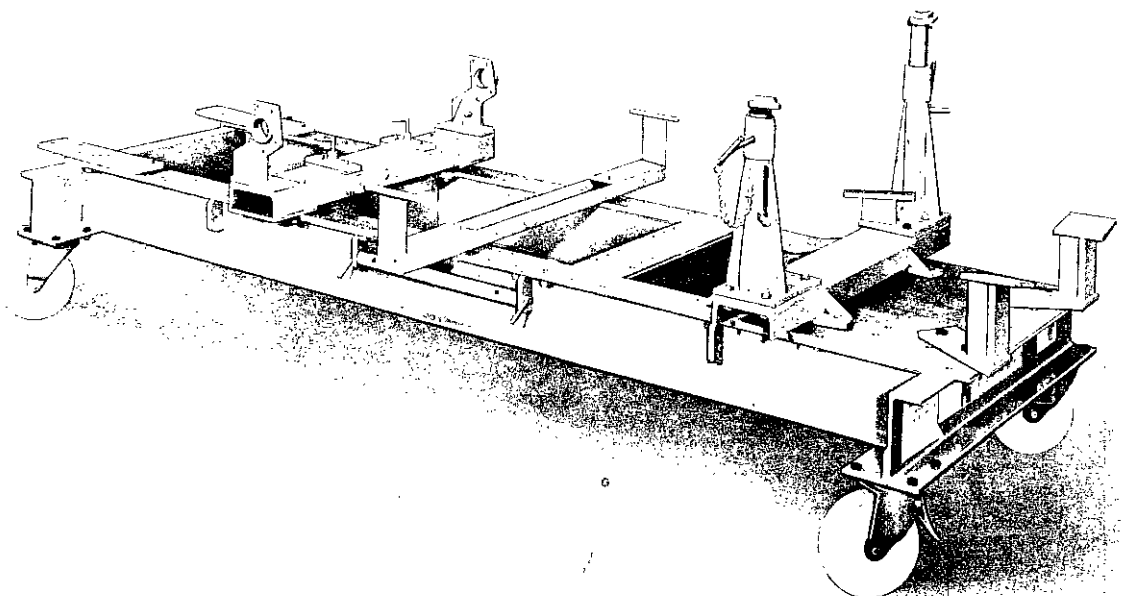

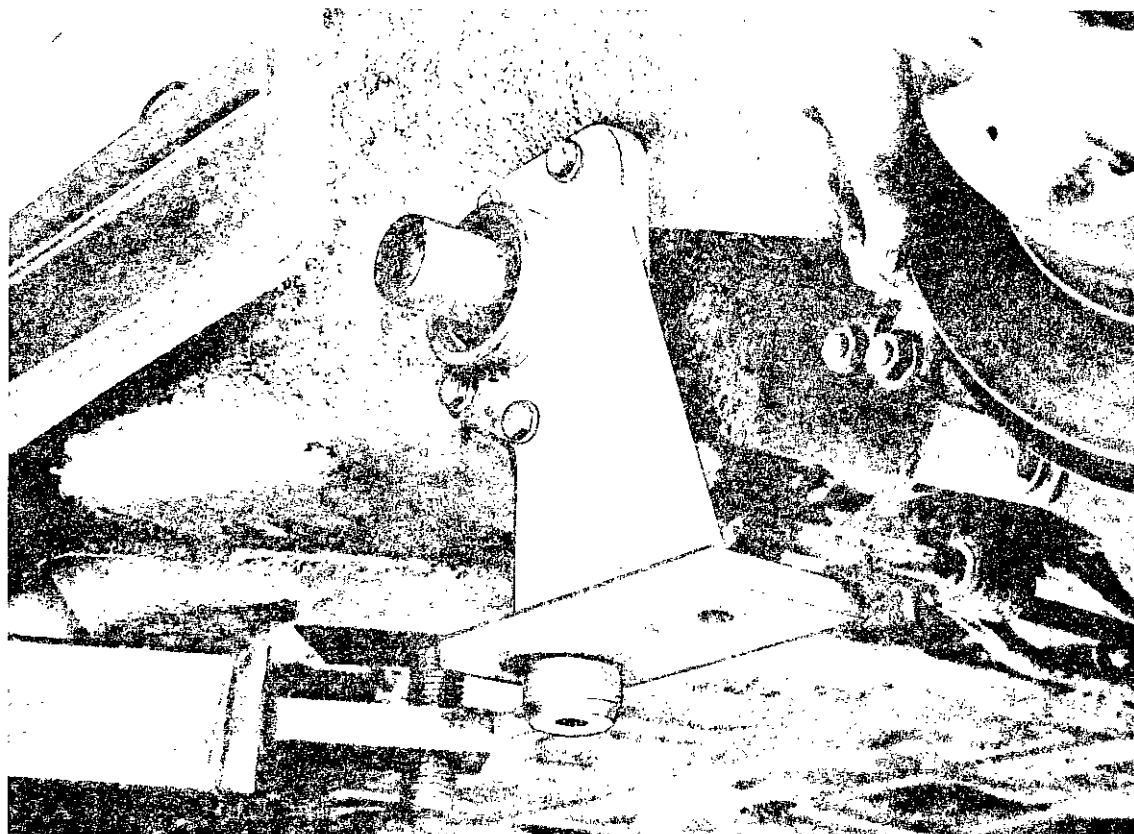

Note: Before lowering the body on the straightening bench the attachments must be secured on the shoulder bolts.

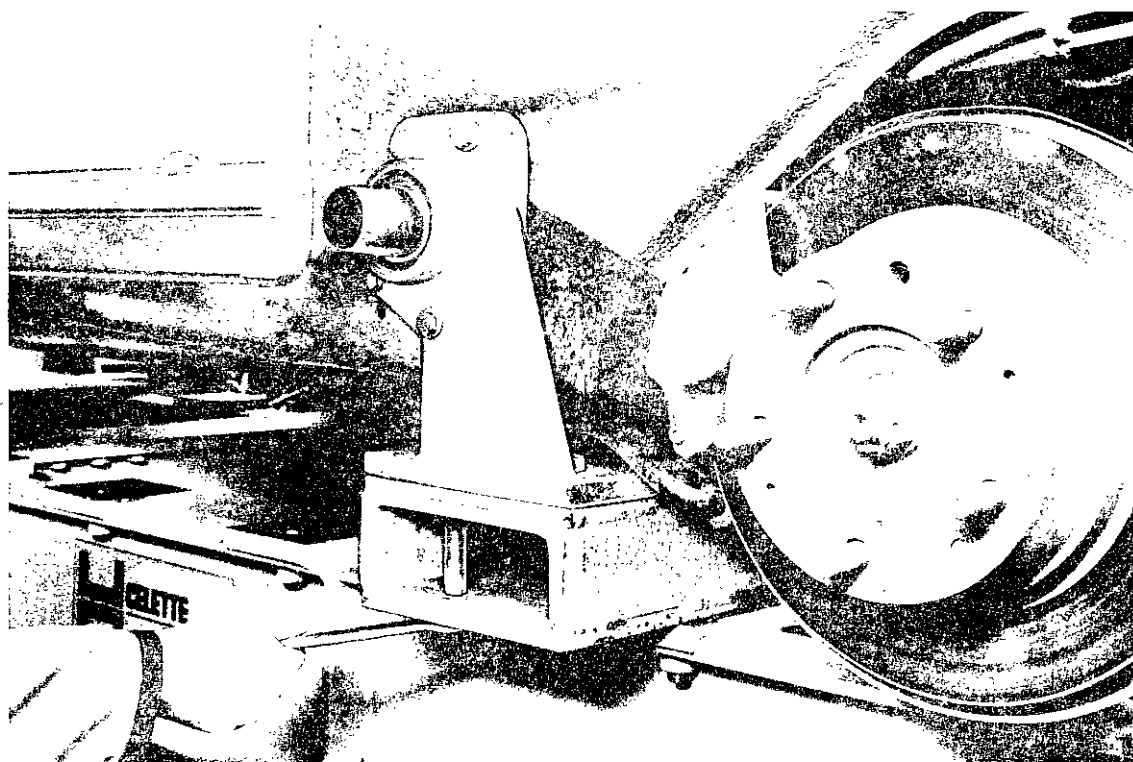

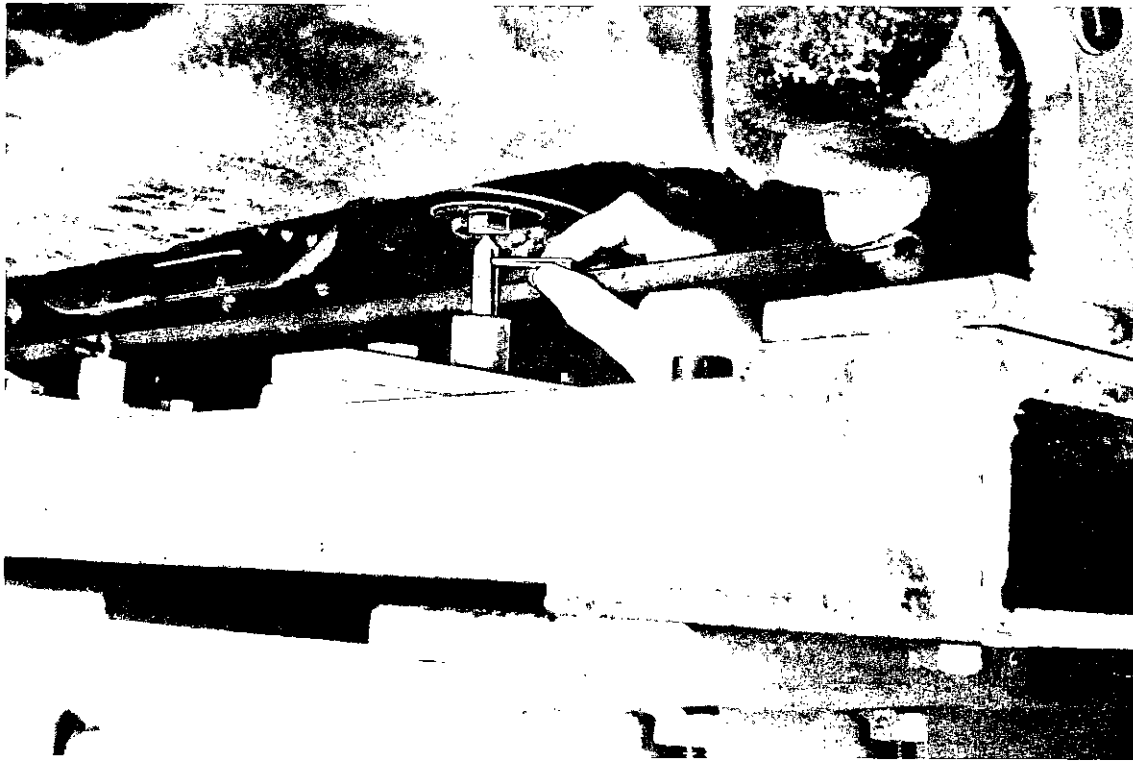

After bolting down the set of attachments, check the central position of the transmission bolts with the control pins.

Note: The horizontal position of a moving
Celette straightening bench must be
checked with a (bubble) level.

EXTRA ATTACHMENT FOR ECONOMICAL REPAIRS OF BODY REAR SECTION DAMAGE

With this attachment set it is not necessary to remove the bottom guard and front axle. Its application requires that the body front section is not damaged.


For serious body rear section damage, e.g. when the rear axle cross tube has to be replaced, it is not recommended to use the economical extra attachment without removal of the front axle.


Remove:

Engine
Transmission
Rear axle arms and shock absorbers
Bearing caps and torsion bars
Damaged body and equipment parts,
insofar as required for straightening.


Preparing Celette straightening bench:

Bolting economical extra attachment.
Removing all other attachments in front area.
Bolting cross member, shock absorber attachments and engine mount attachment at rear.

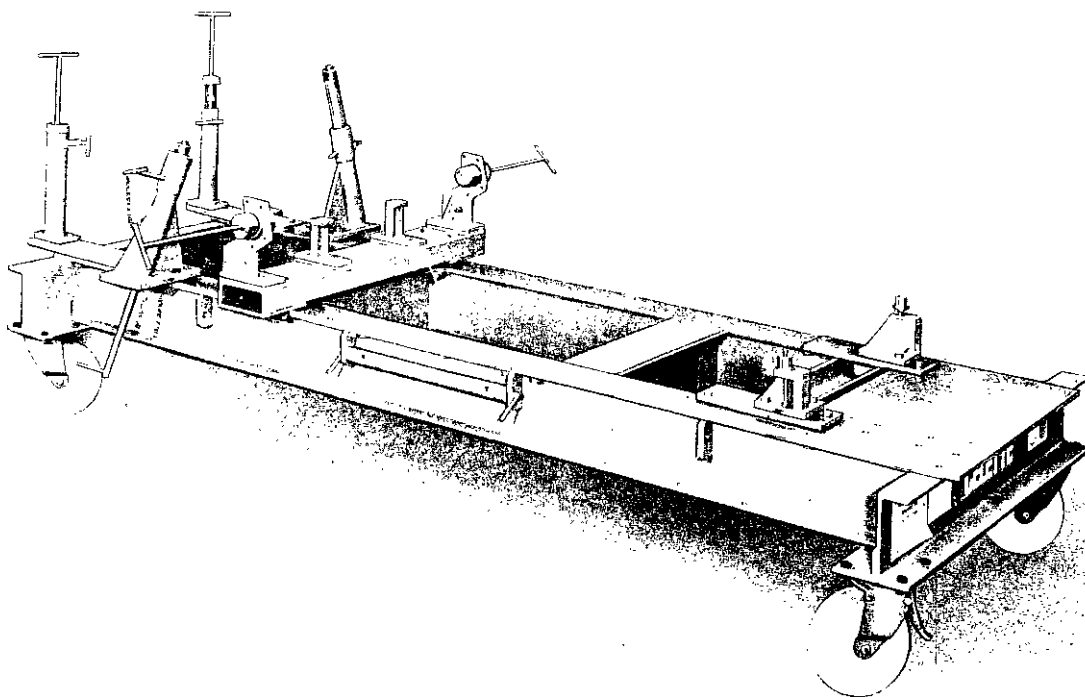


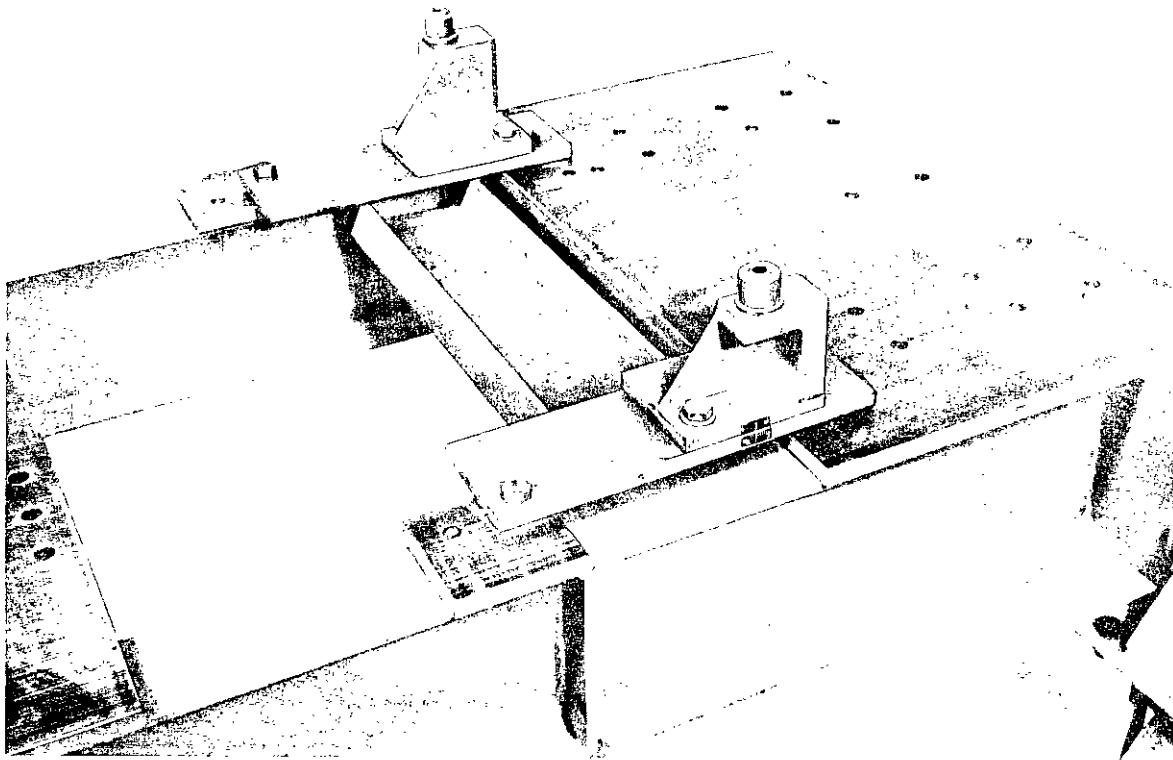

Economical extra attachment is bolted on auxiliary carrier pin.

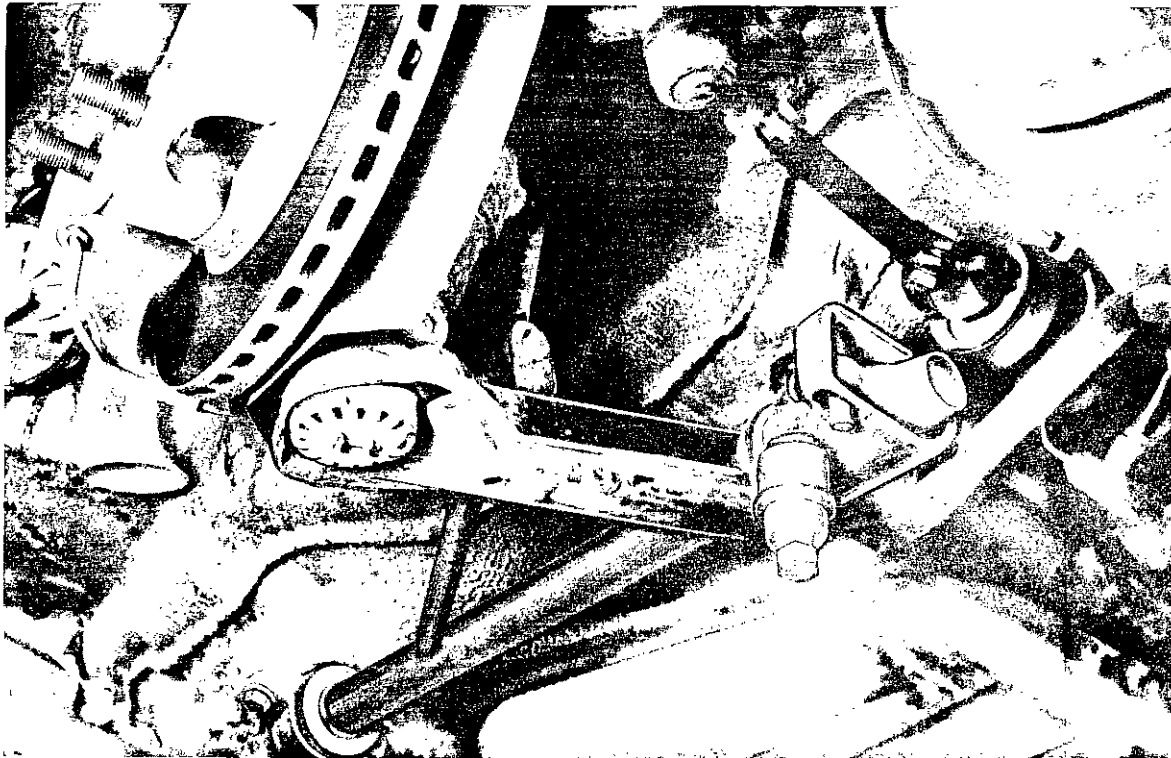

Remove auxiliary carrier bolts and mount adapter with longer bolts supplied.

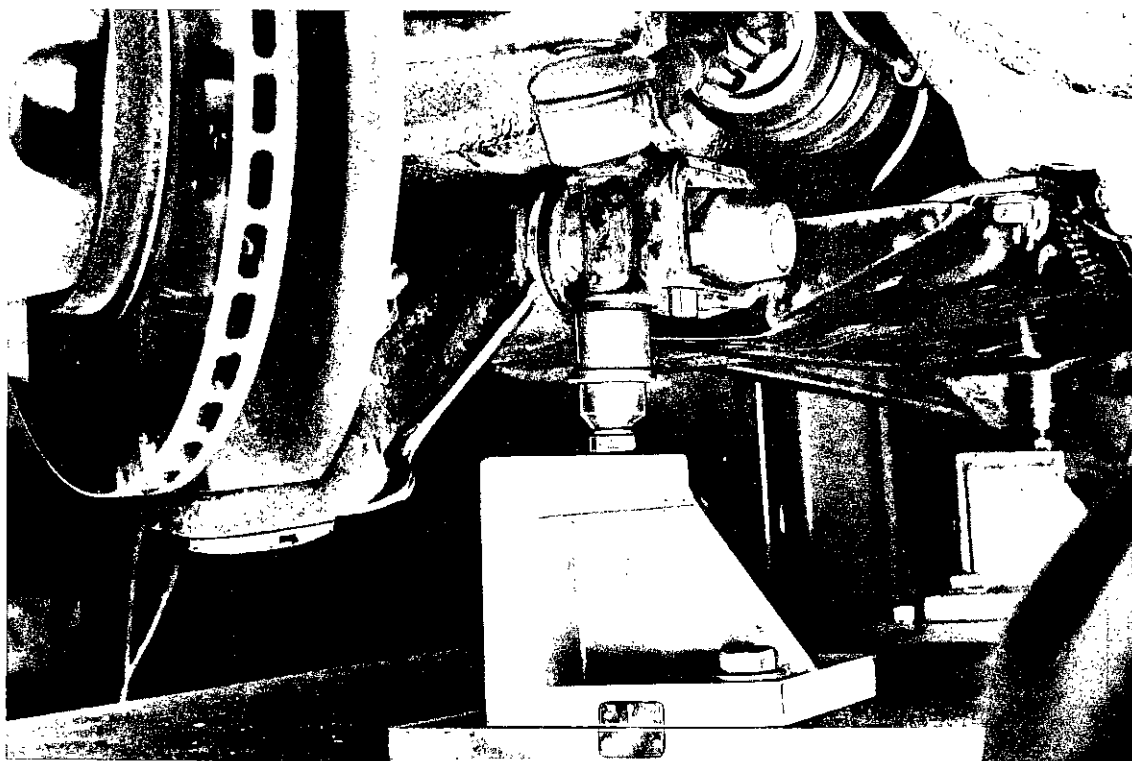


Lower body in horizontal position. Set attachment set to 0 on scale and tighten.

Note

The auxiliary carrier pin is installed 21 mm higher on Turbo cars. This deviation must be compensated for when installing the adapter.


UNIVERSAL ANCHOR ENS 937.900

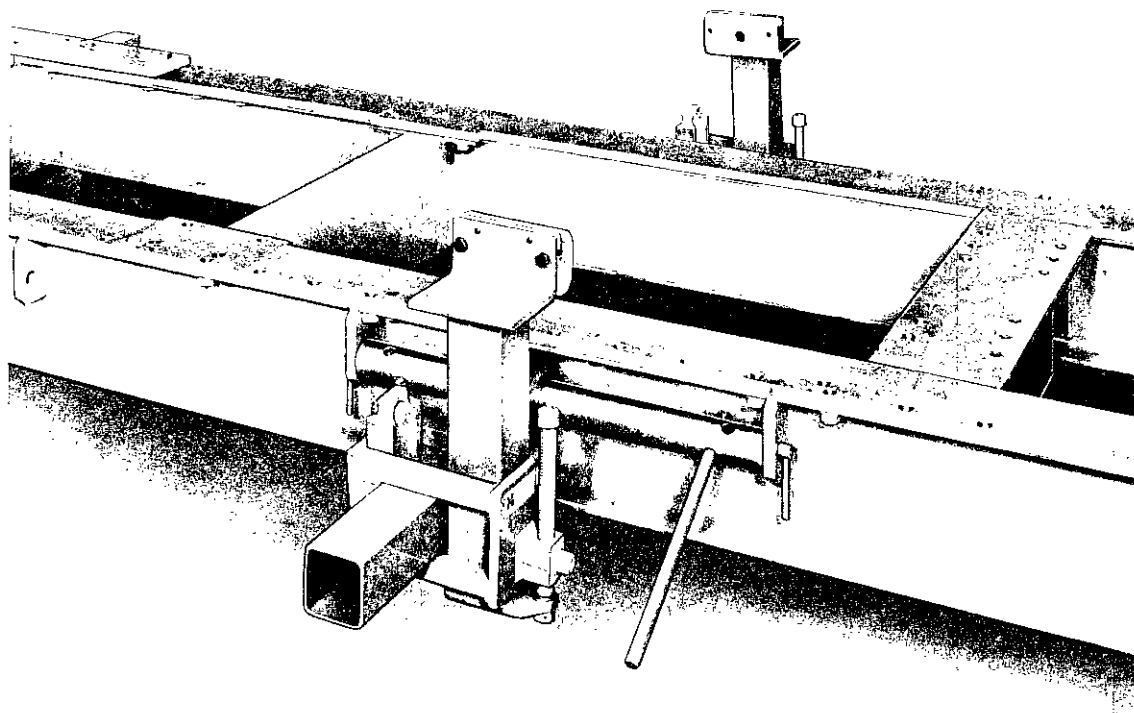

The universal anchor ENS 937.900 illustrated above can be used for additional anchorage of a body on the Celette straightening bench.


Application of the universal anchor is recommended in conjunction with the extra attachments for economical repair of front and rear end damage.

The universal anchor can be mounted on the straightening bench at three different points. It can be adjusted in axial direction as well as in height and width. Even older straightening benches can be fitted with universal anchors.

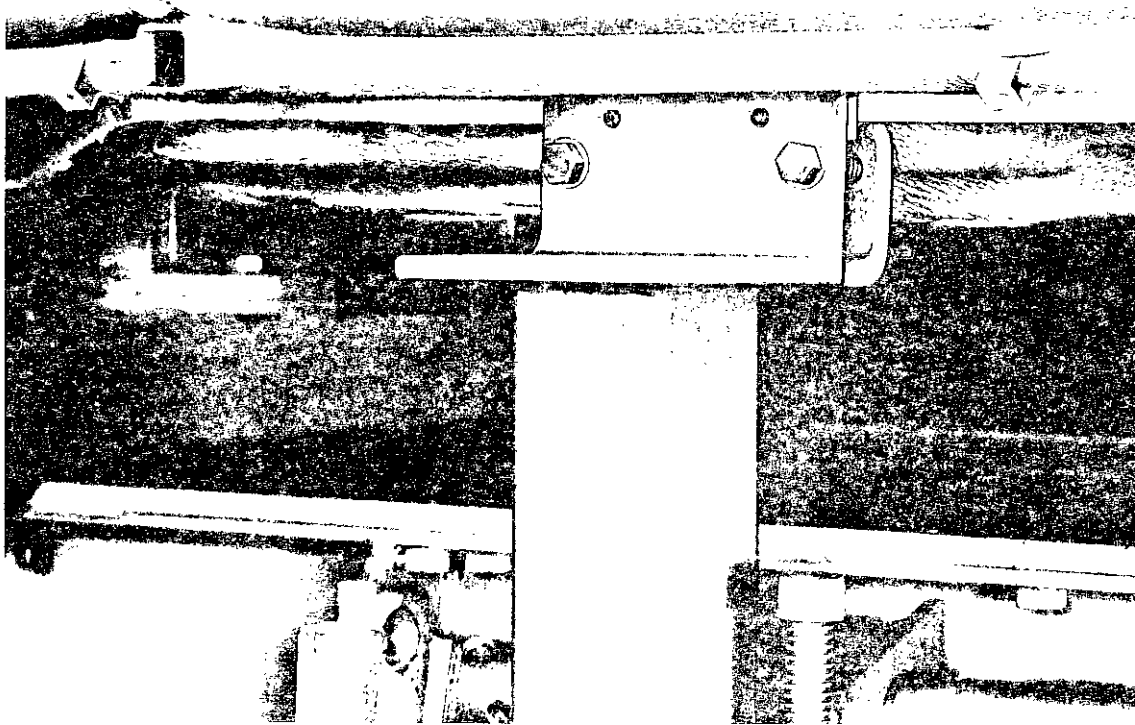

Universal anchor mounted on floor flange. Undercoating should be removed in this area to provide greater holding forces.

COBRA 3 STRAIGHTENER WITH ACCESSORIES

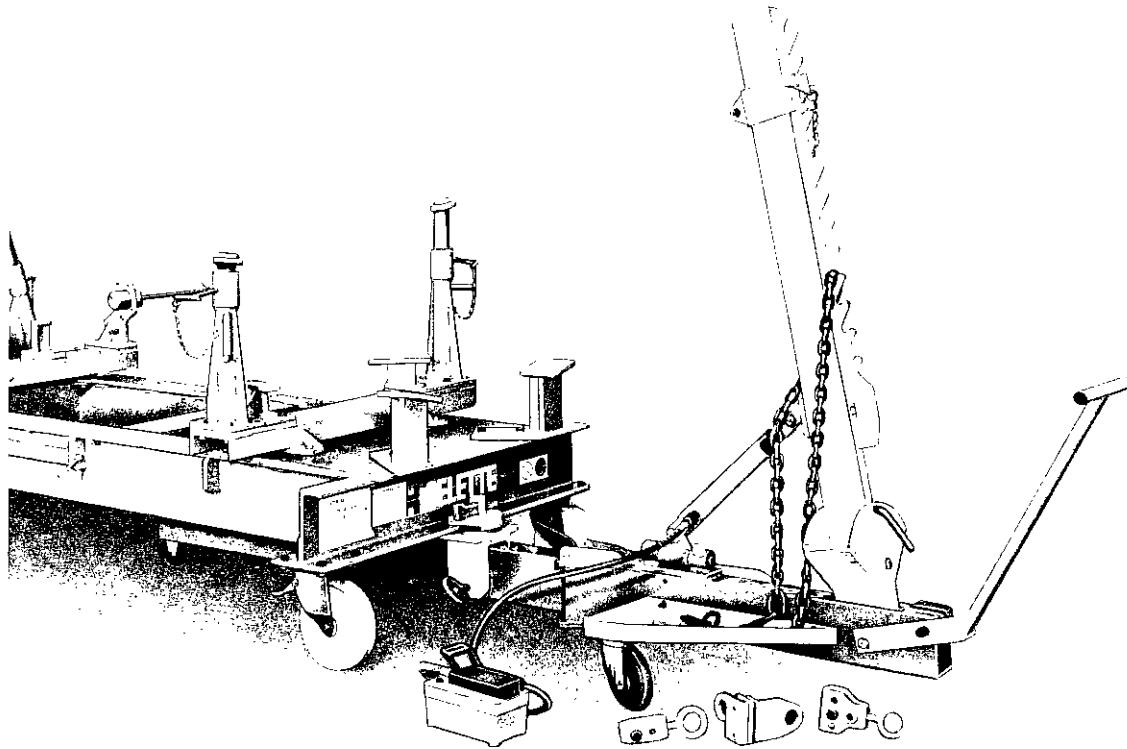


This straightener can be permanently anchored on the bench. The pulling direction can be adjusted by swinging the beam even when anchored.

BODY REPAIRS - REAR

Replacing Part of Inner Side Member

Includes: Wheelhousing inner and outer rear cross members, left or right engine brackets end plate and rear fender.

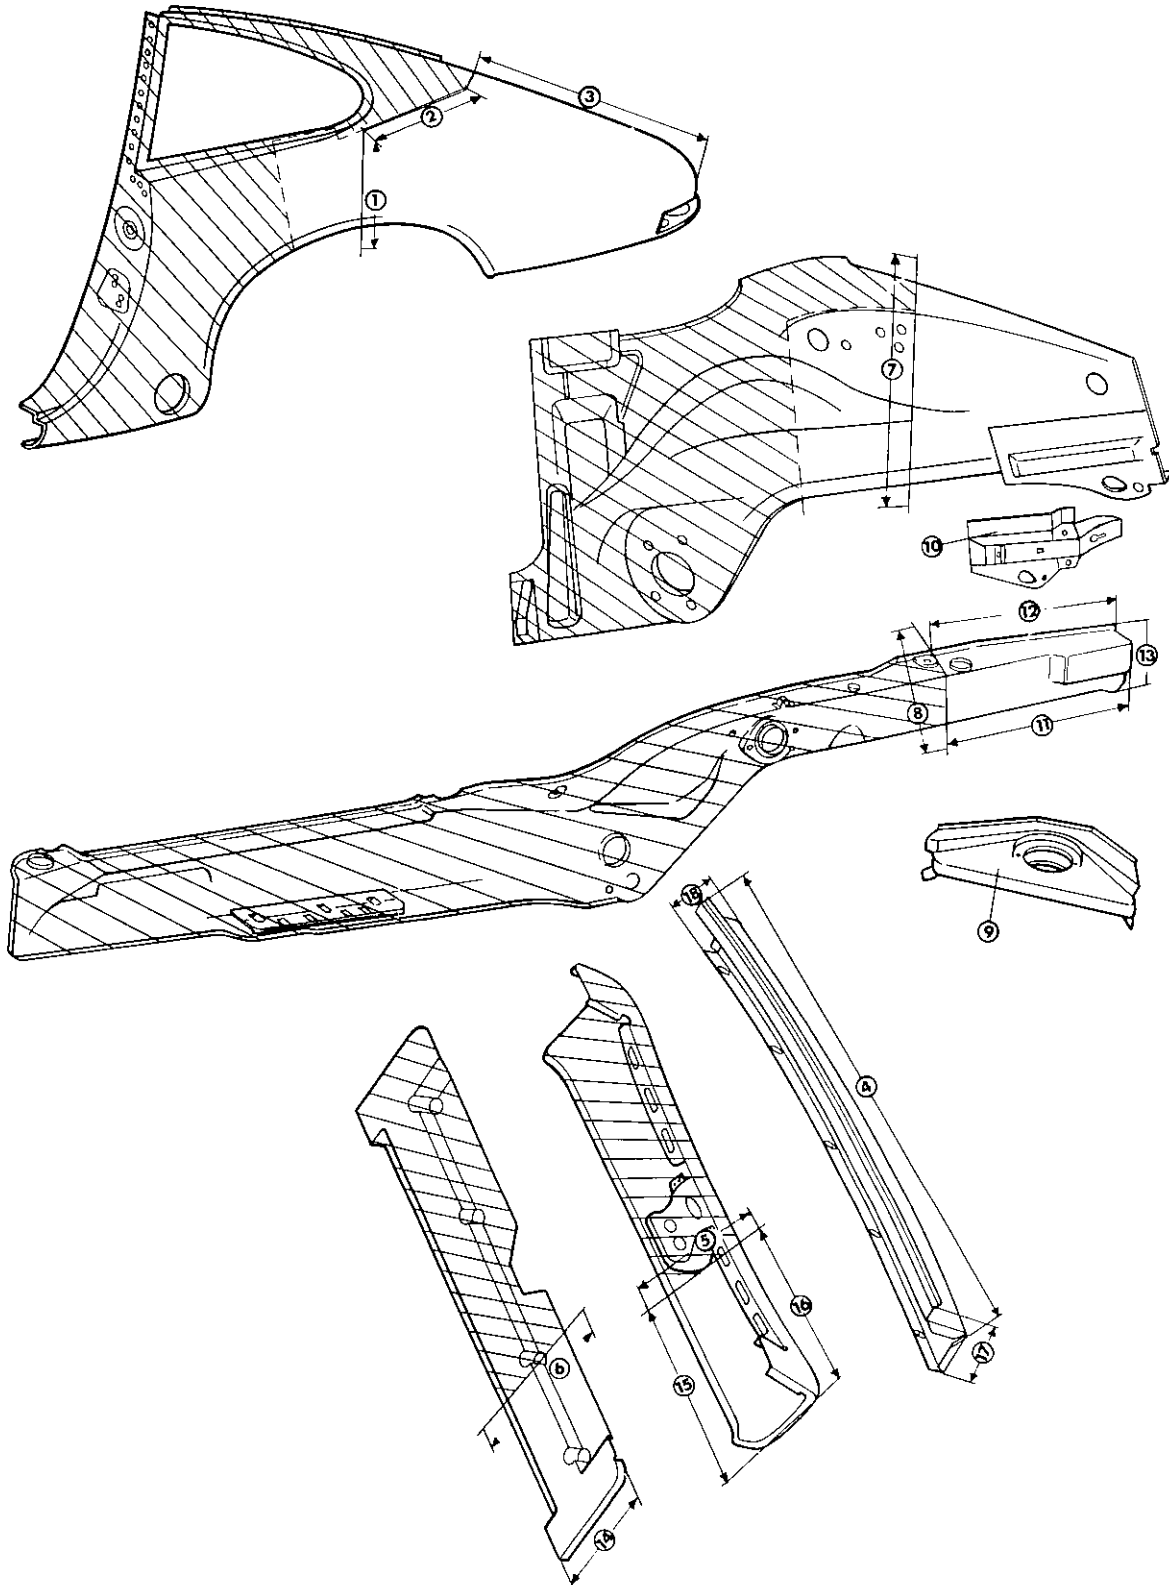

Replacing Part of Inner Side Member

| Operation | Areas | Material |
|---|--|--|
| 1. <u>Separating</u> Re move metal scraps Undercoating and paint | 1-8 2, 4, 7, 8 Clean and grind down mating surfaces | Cutting disc Welding torch, hand grinder and öliers |
| 2. <u>Preparing</u> (new parts) Aligning, cutting and grinding Apply rust preventative | 1, 2, 5, 6, 7, 8 1-10 | Cutting disc, metal cutters and hand grinder Paint |
| 3. <u>Welding</u> Spot weld Butt weld Weld Weld | 3, 11, 12, 15, 16 4, 9, 10 1, 2, 5, 6, 7, 8, 13, 14, 17 Area 3, top of lid and wheel-housing joint welded flush | Spot welder Spot welder MIG welder Gas welder |
| 4. <u>Finishing</u> Grinding Welding seams Sealing Preserving | 1, 2, 3, 4, 5, 6, 7, 8 1-18 welding spots burnt through All surfaces inner and outer Cavities | Hand grinder Gas or MIG welder Undercoating (asphalt - PVC basis) Tectyl etc. (wax basis) |

Replacing Part of Inner Side Member

1 - Damage Diagnosis

2 - Alignment

Before the damaged parts can be removed by cutting, align the ented section with hydraulic alignment equipment as well as possible.

3 - Preparation

Dismantle

Engine with transmission

Rear bumper

Left and right bottom fender sections

Left and right vent windows

Lower lid lock

Electrical items as required


4 - Separation of damaged parts

Note Cut out badly damaged parts instead of unbolting.

Replacing Part of Inner Side Member

- 4 a - Damaged parts can be separated in any sequence in accordance with the operations illustrated.



Note Mating surfaces of supporting parts are offset to each other see arrows.

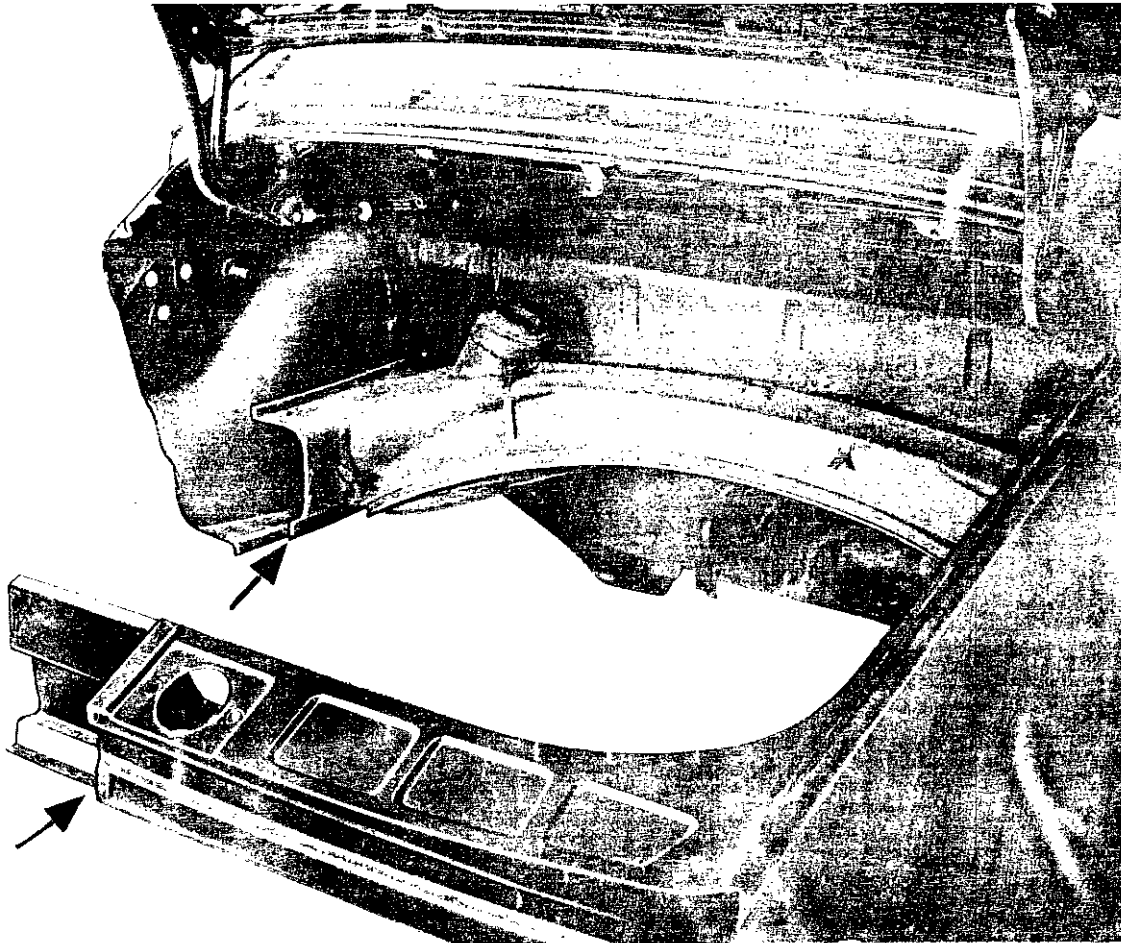

- 5 - Remove remaining scraps of metal. Align and grind down mating surfaces and flange.
- 6 - Align car in both directions with side members.

Replacing Part of Inner Side Member


- 7 - Align and weld new parts.
- 7 a - Install side member with about 2 cm (4 inches) overlap. Align, Check engine compartment in longitudinal and diagonal direction. Weld side member.

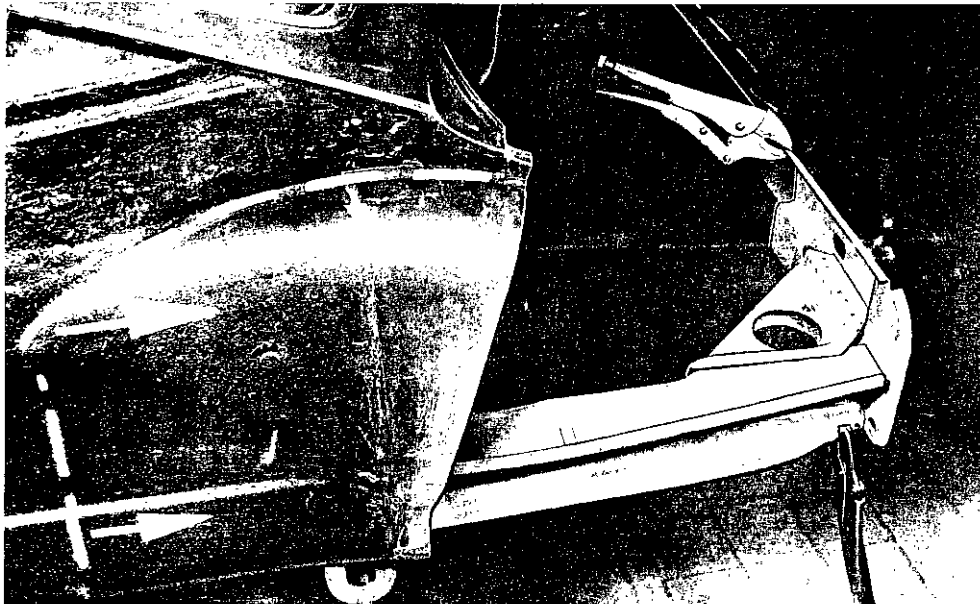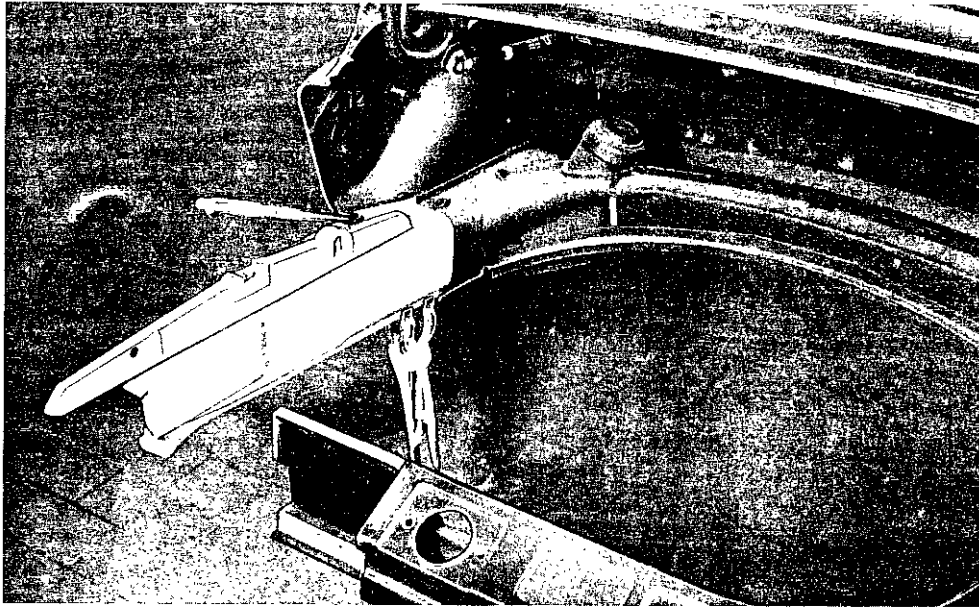


- 7 b - Align and weld inner cross member. Install engine bracket suspension. Align and spot weld.

Replacing Part of Inner Side Member

- 7 c - Align wheelhousing panel, cut and weld with about 2cm (4inches) overlap. Butt weld in area of lid recess. Align wheelhousing panel with contour of lid.

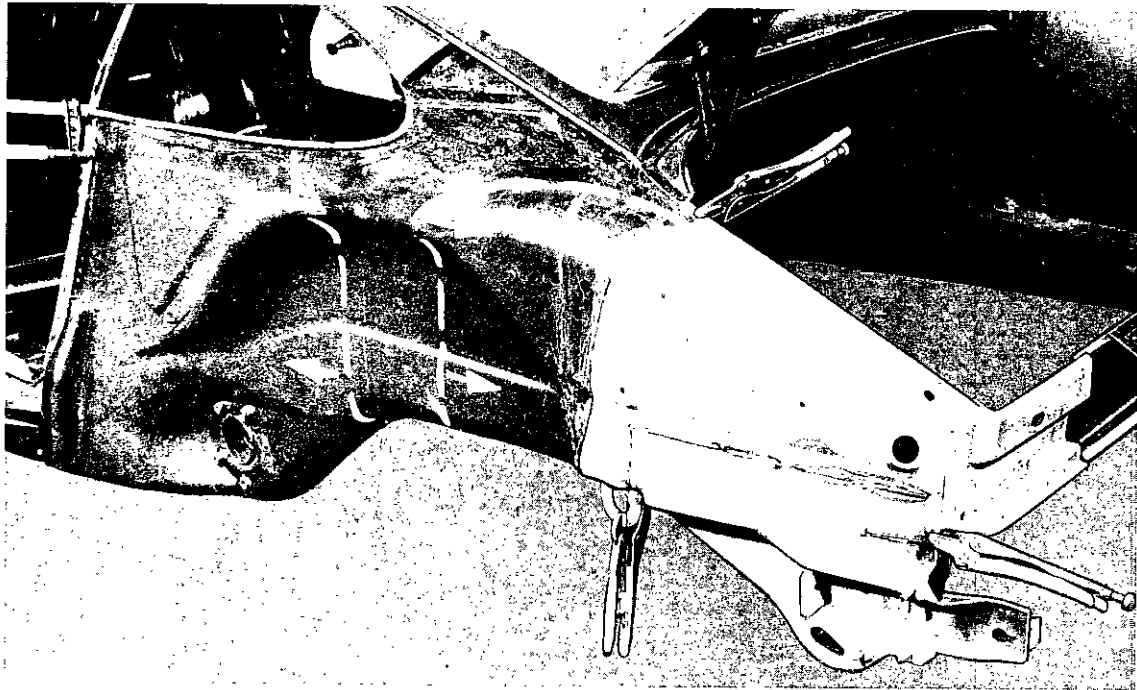


Various marked cutting lines (broken lines).

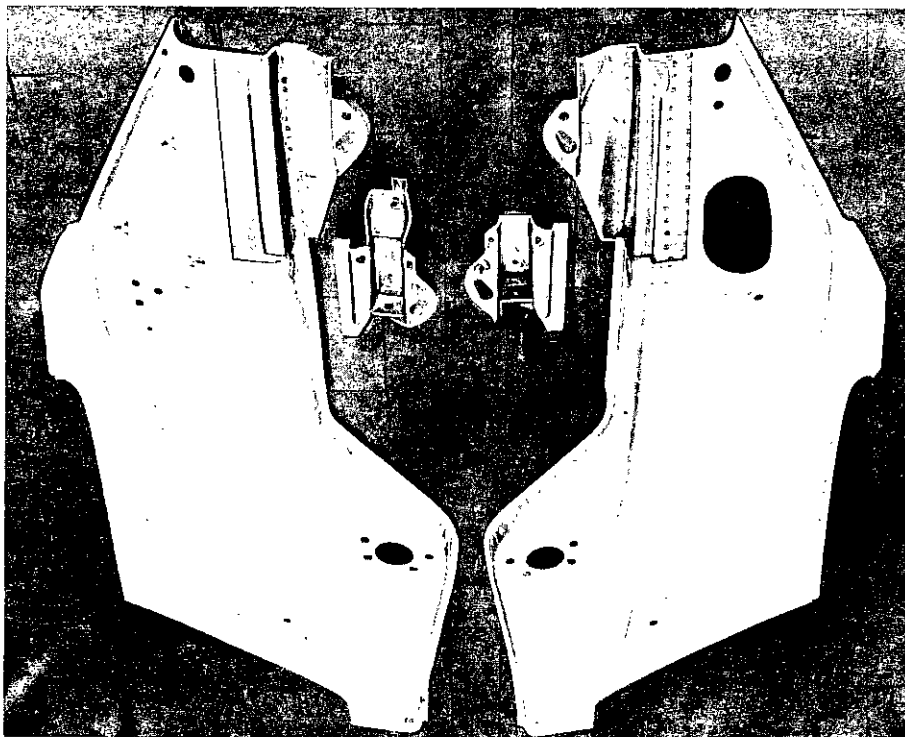

Replacing Part of Inner Side Member


- 8 - Align and butt weld outer section of cross member at center cutting point. Spot weld top and bottom of inner cross member section.

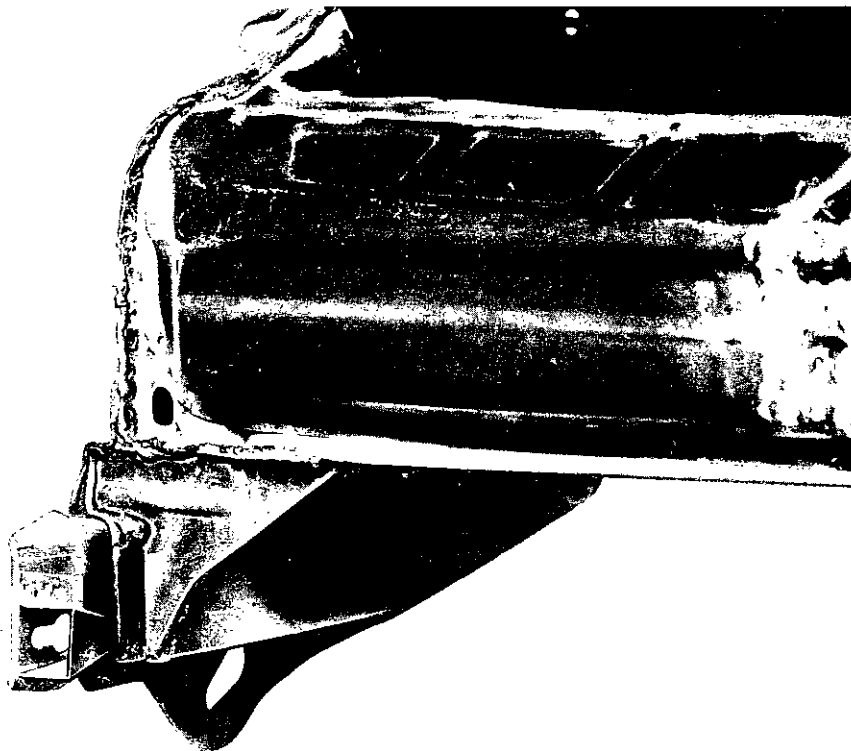

- 9 - Install and weld impact absorber holder.
- Weld impact absorber holder reinforcement to cross member.
 - Braze tube for lid release cable.
 - Spot weld engine seal rails.
- 10 - Install and spot weld rear panel.

Replacing Part of Inner Side Member

- 11 - Align and cut rear fender.
- Cut along cutting line to wheel opening.
 - Cut along cutting line from lid opening to vent window so that it overlaps. Crimp new part using crimping pliers.
 - Shorten crimped surfaces to an overlap of about 3mm (1/8 inch).
- 11 a - Clamp and tack weld fender. Watch lid joint.
- 11 b - Spot weld rain molding in lid opening. Gas weld seam to wheel opening. MIG weld overlap and align fender.

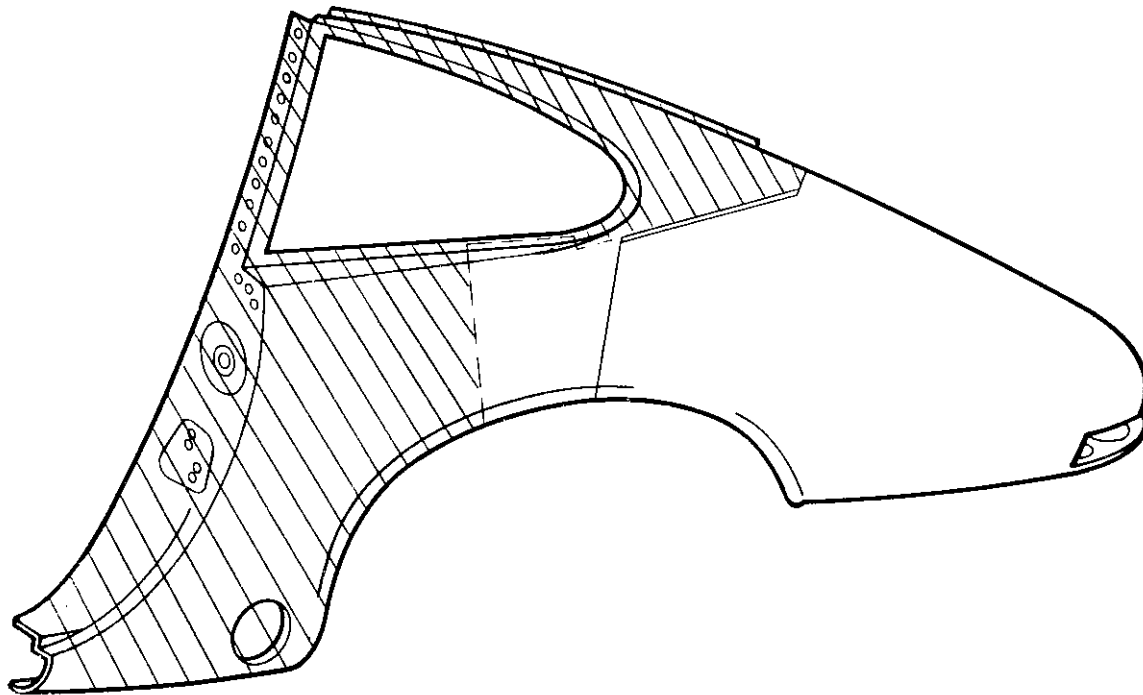

- 12 - Finishing: Weld burnt through welding spots. Clean welding seams and prime, apply body solder if necessary. Seal seams and joints. Apply undercoating.

Elektrische Anlage
Electrical System
Installation électrique
Impianto elettrico

9

9

9

9

9

9

9

9

9

9

CONTENTS

0 - INFORMATION, DESCRIPTION, TECHNICAL DATA

0.0 Information

0.1 Description

Ignition distributor, current flow diagram 0.1 - 1/1

Wiring diagram 0.1 - 2/1

Current flow diagram 0.1 - 3/1

Relays and fuses 0.1 - 4/1

Lighting 0.1 - 5/1

Alternator - 1975 model 0.1 - 6/1

Ignition system modifications - 1978 model 0.1 - 7/1

0.2 Technical data

Starter 0.2 - 1/1

1 - GENERATOR, VOLTAGE REGULATOR

2 - STARTER

2.1 Description

2.2 Disassembling and assembling

Spiral-drive starter BOSCH GB 12 V 1.5 HP 2.2 - 1/1

2.3 Removing and installing 2.3 - 1/1

3 - LIGHTING EQUIPMENT

3.1 Description

3.2 Headlights

Headlights (sealed beam), replacing 3.2 - 1/1

Headlights, adjusting 3.2 - 2/1

3.3 Fog lamps and fog/tail lamp

Subsequent installation - 1974 model 3.3 - 1/1

4 - WINDSHIELD WIPER AND WASHER SYSTEM

4.1 Description

4.2 Disassembling and assembling

Adjustment instruction 4.2 - 1/1

Removing and installing 4.3 - 1/1

4.4 Water reservoir for windshield wiper switch

Removing and installing 4.4 - 1/1

4.5 Intermittent windshield washer system

Removing and installing 4.5 - 1/1

5 - INSTRUMENTS AND CONTROL SYSTEM

5.2 Emission controls

Exhaust gas recirculation control 5.2 - 1/1

5.3 Speedometer

Speedometer cable, removing and installing 5.3 - 1/1

Electronic speedometer 5.3 - 2/1

6 - ELECTRICAL ACCESSORIES

6.1 Description

Safety belt warning system 6.1 - 1/1

Control illumination 6.1 - 2/1

Headlight washer 6.1 - 3/1

6.2 Safety belt warning system

Removing and installing 6.2 - 1/1

Troubleshooting 6.2 - 2/1

6.3 Control illumination

Bulbs, replacing 6.3 - 1/1

6.4 Headlight washers

Removing and installing 6.4 - 1/1

Adjusting specifications 6.4 - 2/1


Service installation 6.4 - 3/1

| | | |
|-----|---|------------|
| 6.5 | Automatic heating control | |
| | Removing and installing | 6.5 - 1/1 |
| | Troubleshooting | 6.5 - 2/1 |
| | Disassembling and assembling | 6.5 - 1/4 |
| 6.6 | Automatic speed control | |
| | Removing and installing | 6.6 - 1/1 |
| | Troubleshooting | 6.6 - 1/5 |
| | Removing and installing automatic antenna | 6.7 - 1/1 |
| | 911 Alarm system | 6.8 - 1/1 |
| 7 - | WIRING HARNESS | |
| 8 - | BATTERY | |
| 8.2 | Battery - 1974 model | |
| | Removing and installing | 8.2 - 1/1 |
| 9 - | IGNITION | |
| 9.1 | Description | |
| 9.2 | Spark plugs, ignition leads, connectors | |
| | Spark plug chart | 9.2 - 1/1 |
| | Equipment tables - 1980 model | 9.2 - 1/5 |
| | Ignition leads | 9.2 - 2/1 |
| 9.3 | Ignition distributor | |
| | Adjusting | 9.3 - 1/1 |
| | Testing instructions | 9.3 - 2/1 |
| | Ignition timing, adjusting - 1977 model | 9.3 - 2/9 |
| | Ignition timing curves - 1978 model | 9.3 - 2/11 |
| | Ignition timing, adjusting - 1980 model | 9.3 - 2/13 |
| | Ignition retard/advance, checking - 1980 model | 9.3 - 2/14 |
| | Adjusting ignition timing from 1981 models | 9.3 - 2/17 |
| | Checking ignition timing control from 1981 models | 9.3 - 1/18 |

IGNITION DISTRIBUTOR FOR 2.4 LITER ENGINES -
BEGINNING WITH 1972 MODELS

General Information

Beginning with the 1972-model year, all Type 911 vehicles are equipped with either BOSCH or MARELLI distributors described below.

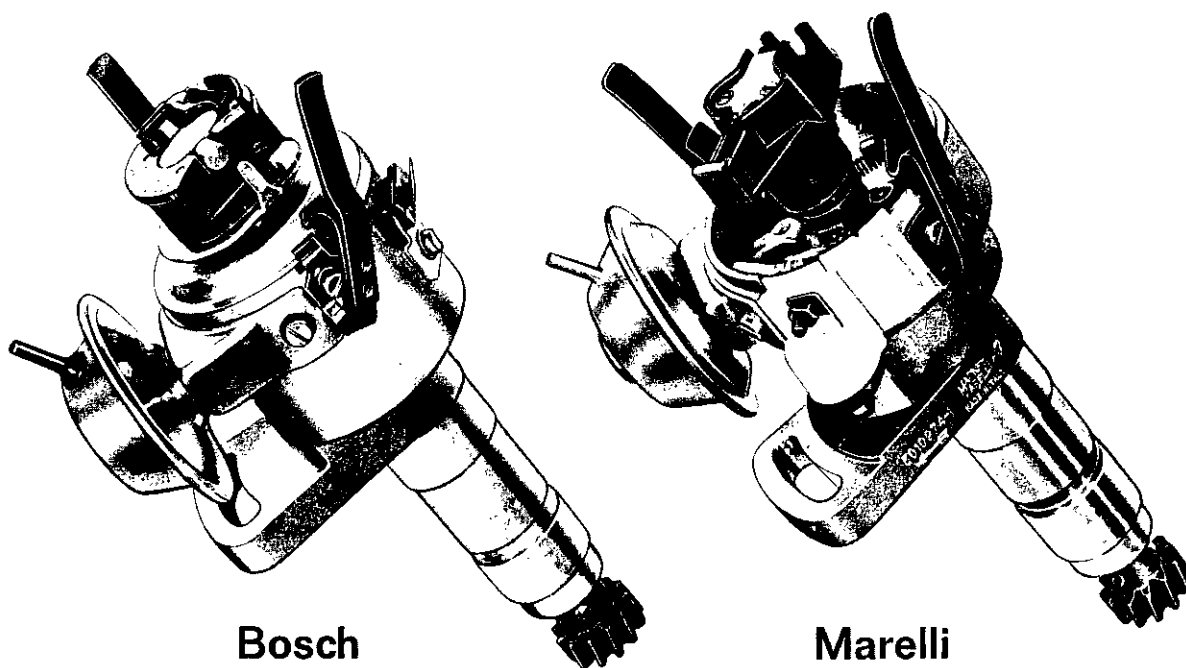

In the new distributors, engine timing is changed by:



- 1 - Centrifugal weights (responding to engine speed)
- 2 - Vacuum control (responding to throttle valve position)

Speed limiters (engine governors) continue to be used in the distributors. A centrifugal weight built into the rotor of each distributor short-circuits the secondary side of the ignition system at a predetermined cut-off speed. This prevents exceeding maximum engine speed. The distributors for the Type 911 T, E, and S 2.4 liter engines are identical with the exception of the rotors which have different cut-off speeds.



The vacuum control unit retards the ignition timing during idle and low speed ranges. The ignition then fires 5° ATDC. This results in cleaner combustion, reducing the emission of harmful exhaust pollutants. When the throttle opens, vacuum is reduced and the ignition timing is advanced by 10°.

| Vehicle Type | BOSCH Distributor | MARELLI Distributor |
|--------------|-------------------|---------------------|
| 911 T | 0 231 169 003 | 5 010 974 - 1 |
| 911 E | 0 231 169 004 | 5 010 974 - 2 |
| 911 S | 0 231 169 005 | 5 010 974 - 3 |

Beginning with 1973 models, all BOSCH distributors used in Type 911 T, E and S vehicles are equipped with a modified rotor. The new rotor can be installed in distributors used in 1972 model vehicles providing that the old dust cover is replaced with one of the new version.

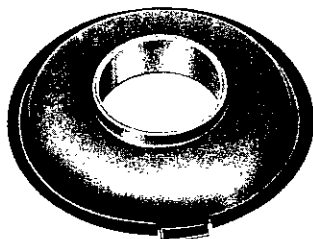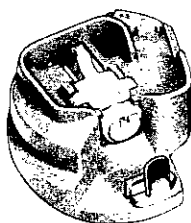

NEW

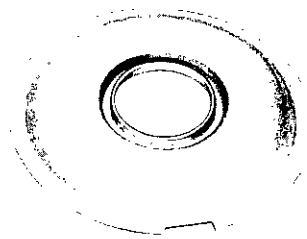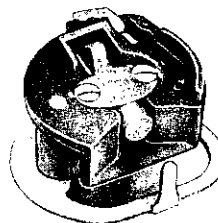

OLD

With this modification, BOSCH distributors are assigned a new part number.

IGNITION DISTRIBUTOR FOR 2.7 LITER ENGINES

Beginning with 1974 models, Type 911 (2.7 liter) and 911 S (2.7 liter) engines are equipped with the BOSCH or MARELLI distributors formerly used in the Type 911 T (2.4 liter) engines. Ignition timing spark advance characteristics, and test specifications applicable to the 2.4 liter engine are also continued.

The cutoff speed in both engine types is 6500 ± 200 rpm.

The BOSCH or MARELLI distributors used in the 2.7 liter CARRERA engines differ from the above described distributors due to a different spark advance characteristic.

Ignition timing at idle is on TDC. Upon opening of the throttle valve, the drop in manifold negative pressure (vacuum) results in the ignition point advancing by 10° crankshaft rotation.

The CARRERA cutoff speed is 7300 rpm.

The distributor used in the 1973 model 2.7 CARRERA engines remains in use in 1974 model engines as well.

DISTRIBUTOR - 1976 MODEL

The distributor advance curves on pages 9.3 - 2/1, 9.3 - 2/3 and 9.3 - 2/4 also apply to the 1976 model 911 S.

The cutoff speeds of the speed limiter are for

| | |
|-------|--------------------|
| 911 S | 6500 ± 200 rpm |
|-------|--------------------|

How to read current flow diagrams

In previous wiring diagrams electrical components were shown in the approximate position as you would find them on the car. However, to show the electrical connections between each component in the diagram became more and more difficult as the number of components increased. The result was that it was hard to trace electrical circuits.

To make reading wiring diagrams easier, we revised them completely. The result of intensive studies is a new diagram called "current flow diagram".

Current flow diagrams are laid out by placing circuits of related components one next to the other. The base of each circuit always starts with ground. The location of components on this diagram is no longer related to where the components would be in the car. The layout of the circuits, however, is such that each can be followed much easier to help in troubleshooting of electrical faults.

Looking at a current flow diagram you will find a yellow base line. The numbers in the yellow base line characterize the current tracks in the diagram and are to locate each component that is listed in the legend.

The colored lines in the diagram represent wires in the car, the colors correspond with the actual colors of the wires. The small numbers in the wiring runs indicate the wiring gauge in mm². The thin black lines are not actual wires but internal connections, such as the ground connection of a lamp housing. The base line for ground is the thin black line directly on top of the yellow base line.

Interrupted wires or connections end in a yellow square. Continuation of this interrupted circuit can be found in the current track using the number in the square.

Each component in the diagram is identified with a letter, sometimes with a letter and a number. Component definition can be found in the legend.

Most connectors or terminals are numbered. These numbers correspond with the numbers that are right next to most connectors on electrical components, such as switches and relays. This numbering system is used on most European cars. Listed below are the most commonly used terminals and their location.


| Terminal No. | Location |
|--------------|---|
| B+ | - on coil, input from ignition switch |
| D+ | - on relay and generator |
| DF | - on relay and generator |
| 1 | - on coil, output to primary distributor lead |
| 4 | - on coil, high tension output and on distributor high tension lead |
| 15 | - on coil, input from ignition switch |
| 30 | - on starter solenoid, input from battery, ignition starter switch, light switch, dimmer relay, and twin horn relay |
| 31 | - ground |
| 31 b | - windshield wiper switch and motor |
| 49 | - on turn signal bulbs |
| 50 | - on both terminals of starter solenoid - ignition starter switch |
| 54 | - on stoplight bulbs, steering ignition switch and windshield wiper switch |
| 54 d | - windshield wiper switch and motor |
| 56 | - light switch and dimmer relay |
| 56 a | - dimmer relay, headlight low beam |
| 56 b | - headlight high beam |
| 58 | - on taillight bulbs, light switch and front parking lights |
| 58 b | - light switch |
| 85, 86, 87 | - relay |

Electrical Symbols

| | | | |
|--|--|--|--|
| | Antenna | | Heating resistor (element) |
| | Dipole antenna | | Danger! High Voltage |
| | Direct current | | Spark gap |
| | Alternating current | | Condenser |
| | Three-phase current | | Feedthrough (suppressor) condenser |
| | Generator | | Coil, iron core |
| | Battery cell | | Transformer, iron core |
| | Motor | | Diode |
| | Measuring gauge | | Zener diode |
| | Voltmeter | | Transistor |
| | Ammeter | | Thyristor |
| | Wiring | | Mechanical connection of components |
| | Wire cross section in mm² | | Mechanical connection, spring loaded contact |
| | Wire junction, fixed | | Time switch |
| | Wire connector, separable | | Manually operated switch |
| | Wire junction, separable | | Mechanically operated switch |
| | Suppression wire | | Motor operated switch |
| | Wire crossing | | Relay coil |
| | Ground | | Solenoid coil |
| | Switch position, open | | Relay, electrothermal |
| | Switch position, closed | | Relay, electromagnetic |
| | Multiple contact switch | | Electromagnetic valve (jet) |
| | Fuse | | Boundary line for an assembly |
| | Light bulb | | Horn |
| | Glow lamp | | Loudspeaker |
| | Resistor | | |
| | Potentiometer | | |
| | Tapped resistor | | |
| | Thermal resistor, automatically regulating | | |

Electric wiring diagram (Part I) Type 911 T, 911 E, 911 S, Model 72

Printed in Germany - I, 1971

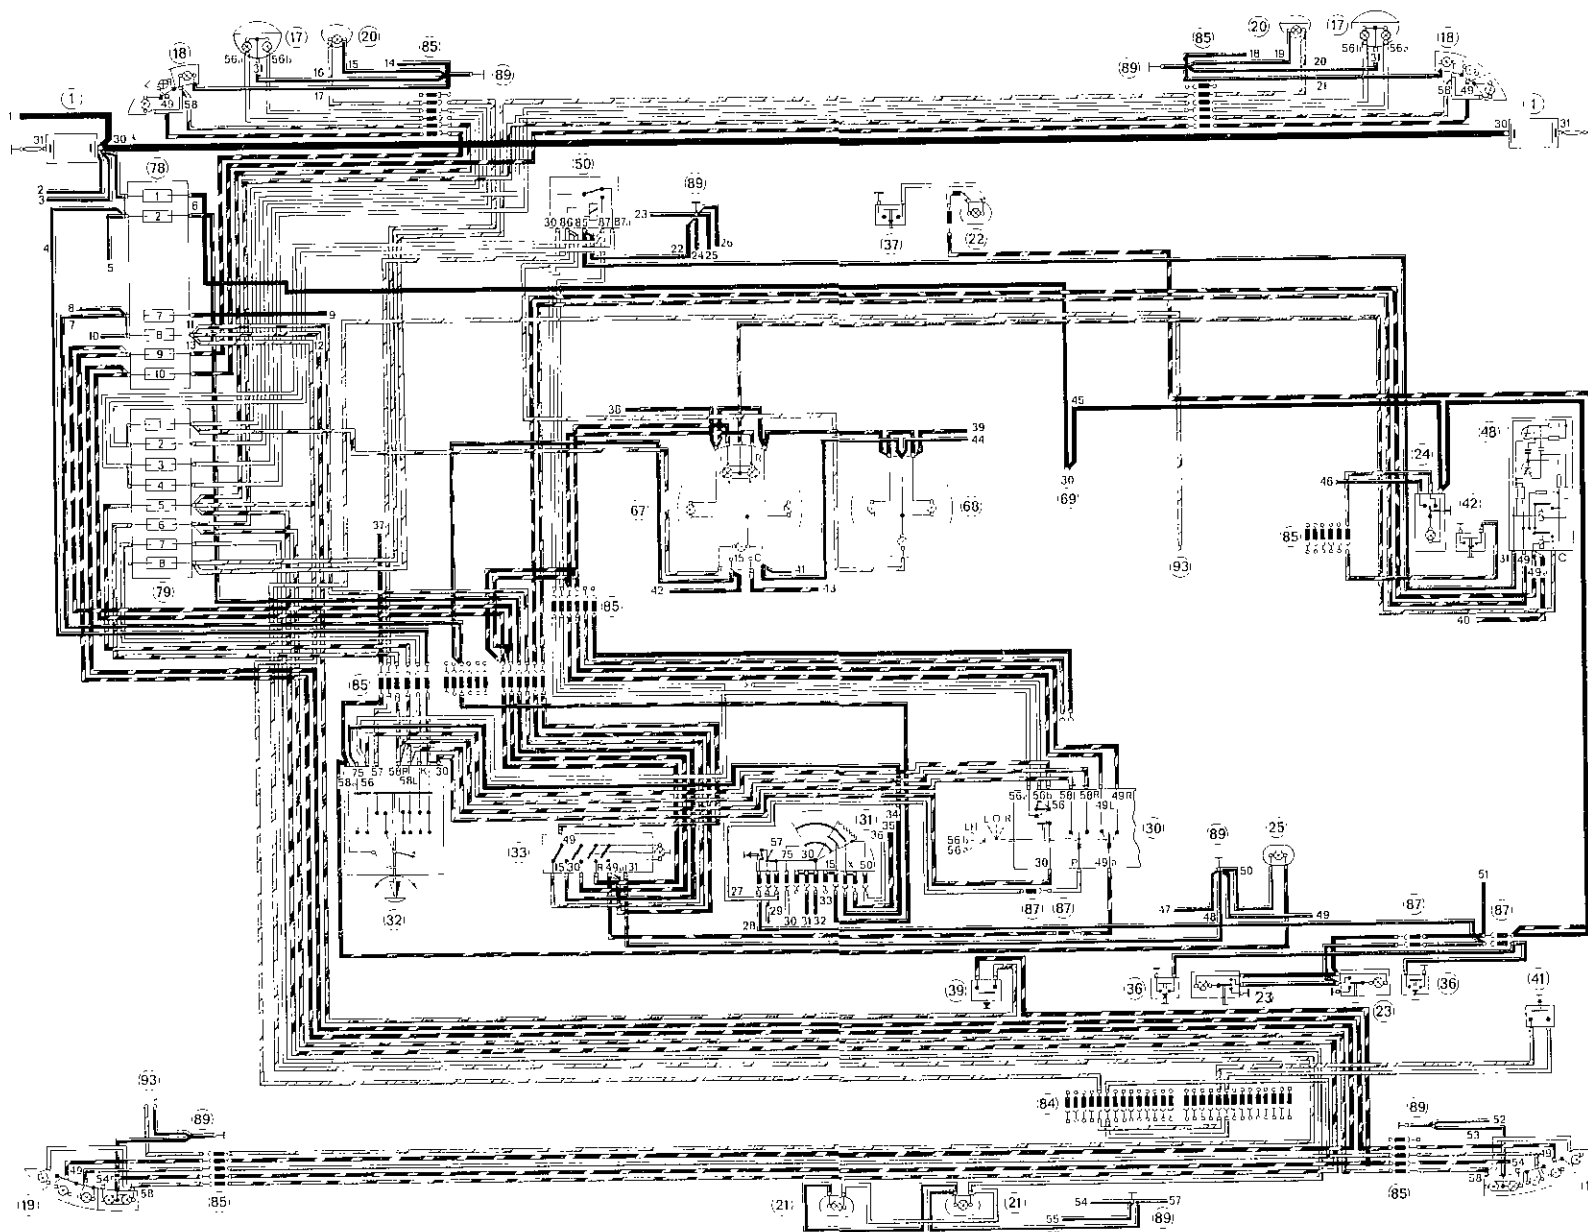

0.1-2/1

911 9

- | | |
|---|---|
| 1 Battery | 33 Emergency flasher switch (not applicable in Italy and France) |
| 17 Headlights | 36 Door contact switch |
| 18 Turn signal, parking and side marker lights (side marker lights USA only) | 37 Switch for luggage compartment light |
| 19 Tail, stop, turn, back-up and side marker lights (side marker lights USA only) | 39 Stop light switch |
| 20 Fog lights (optional) | 41 Back-up light switch |
| 21 License plate light | 42 Switch for glove compartment light |
| 22 Luggage compartment light | 48 Turn signal/emergency flasher unit |
| 23 Interior light | 50 Headlight relay |
| 24 Glove compartment light | 67 Tachometer |
| 25 Ashtray light | 68 Speedometer |
| 30 Flasher, dimmer, wiper/washer switch with horn ring on steering column | 69 Electric clock |
| 31 Ignition starter switch and steering lock | 78 Fuse box I (10 terminal) |
| 32 Light switch | 79 Fuse box II (8 terminal) |
| | 84 Multi-connector (14 terminal) |
| | 85 Multi-connector (6 terminal) |
| | 87 Connector (single contact) |
| | 89 Ground connection-body |
| | 93 Rear fog light (optional) |

FUSES:

Fuse box I:

- 1 Interior light, clock, luggage compartment light
- 2 Emergency flasher
- 7 Fresh air fan
- 8 Stop, turn and back-up lights
- 9 Left front turn signal light
- 10 Right front turn signal light

Fuse box II:


- 1 High beam, left
- 2 High beam, right
- 3 Low beam, left
- 4 Low beam, right
- 5 Side marker, left
- 6 Side marker, right
- 7 License plate light
- 8 (Fog lights)

CAUTION!

Do not disconnect battery while the engine is running as this will damage the alternator.

Electric wiring diagram (Part II) Type 911 T, 911 E, 911 S, Model 72

Printed in Germany - I, 1971

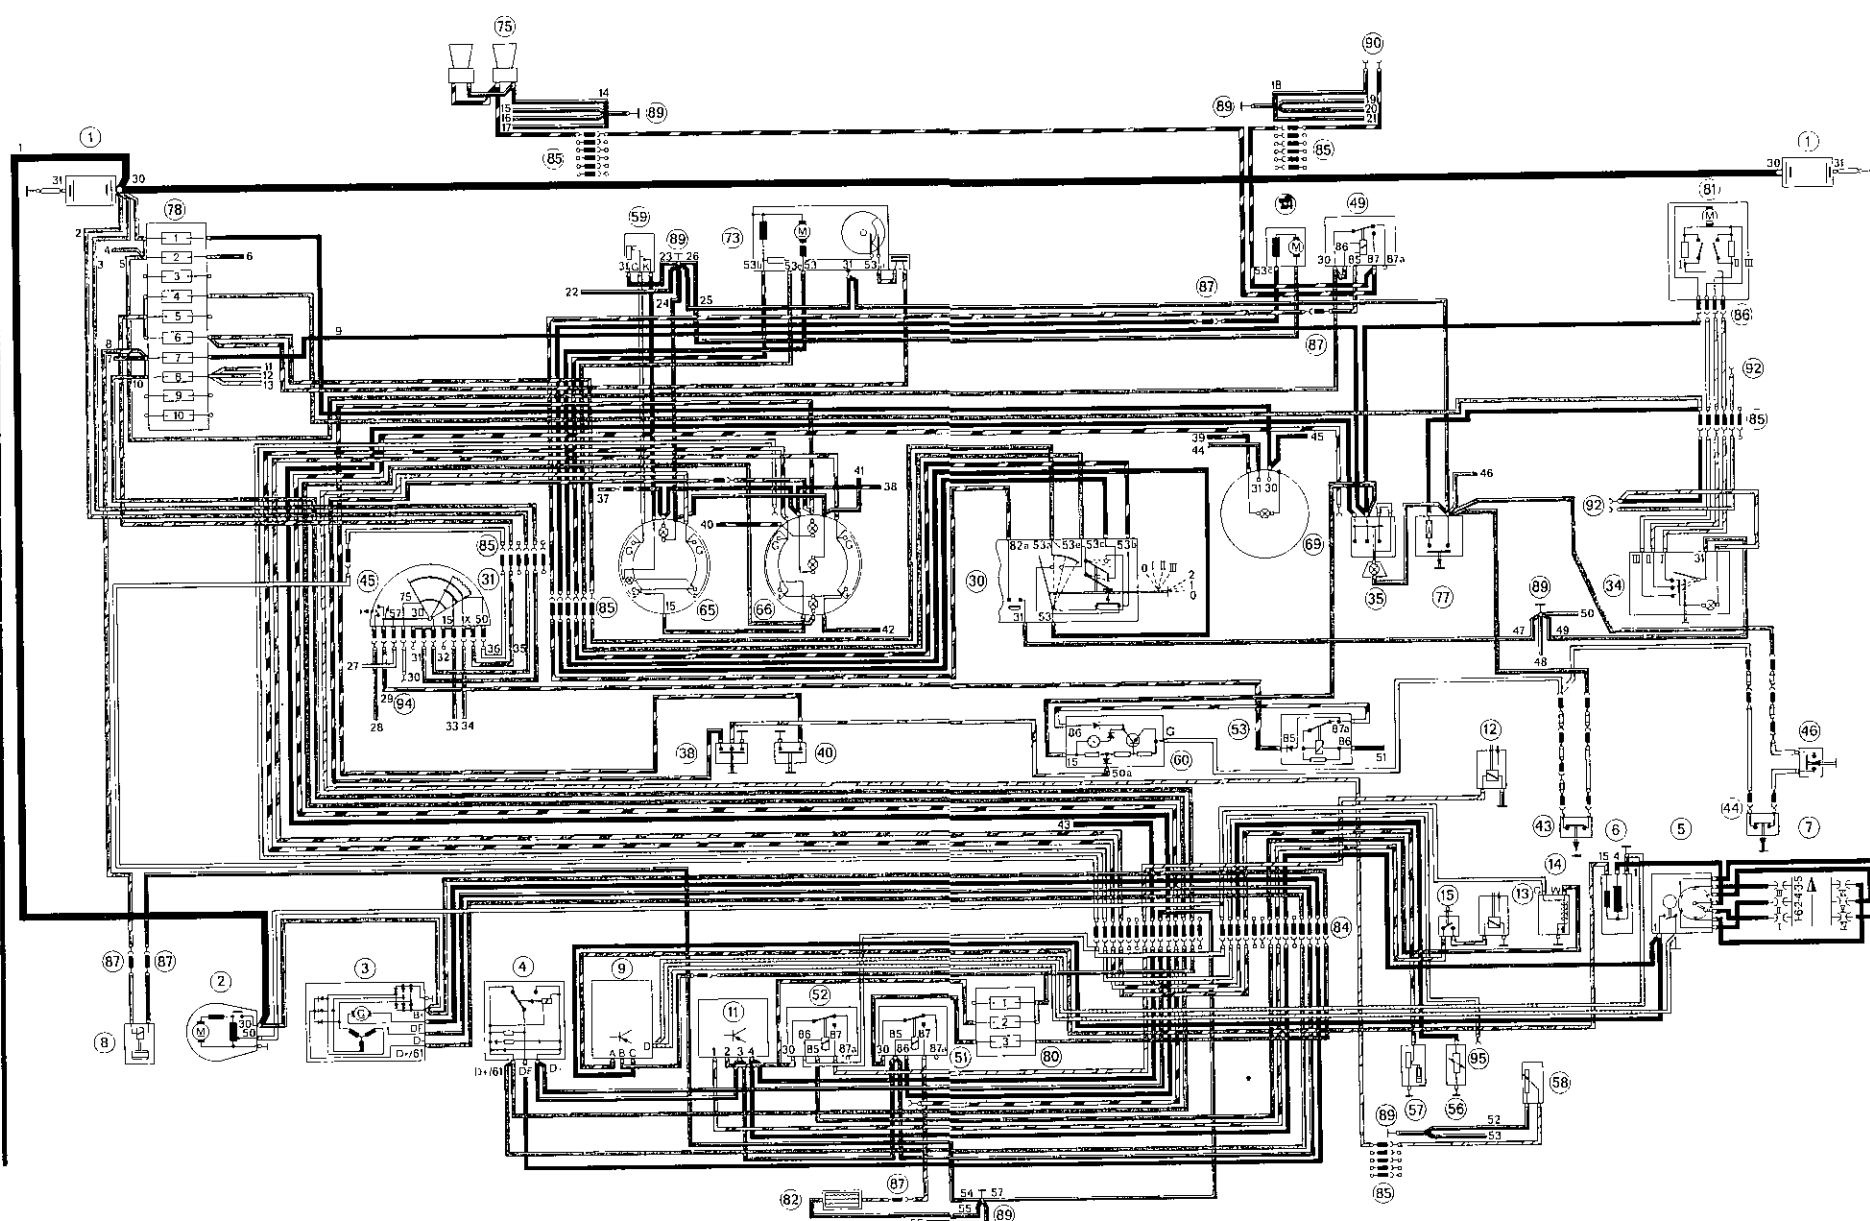

- 1 Battery
- 2 Starter
- 3 Alternator
- 4 Governor
- 5 Distributor
- 6 Ignition transformer
- 7 Spark plugs
- 8 Fuel pump
- 9 High tension ignition unit
- 11 Speed switch
- 12 Cold start solenoid (except 911 TV)
- 13 Shut-off solenoid (911 TV: solenoid valve)
- 14 Thermo-time switch (except 911 TV)
- 15 Micro switch
- 30 Flasher, dimmer, wiper/washer switch with horn ring on steering column
- 31 Ignition starter switch and steering lock
- 34 Switch for fan and auxiliary heater
- 35 Rear window defogger switch
- 38 Parking brake contact
- 40 Brake warning light switch (USA only)

- 43 Safety belt contact, driver side (USA only)
- 44 Safety belt contact, passenger side (USA only)
- 45 Buzzer contact (USA only)
- 46 Seat contact, passenger side (USA only)
- 49 Horn relay
- 51 Rear window defogger relay
- 52 Auxiliary starting relay (except 911 TV)
- 53 Buzzer (USA only)
- 56 Oil temperature indicator
- 57 Oil pressure indicator
- 58 Oil level indicator
- 59 Indicator for fuel gauge
- 60 Safety belt warning light (USA only)
- 65 Fuel gauge dial
- 66 Oil temperature gauge dial
- 69 Electric clock
- 73 Wiper motor
- 74 Washer pump
- 75 Horns

- 77 Cigarette lighter
- 78 Fuse box I (10 terminal)
- 80 Fuse box III (3 terminal)
- 81 Fan motor
- 82 Rear window defogger element
- 84 Multi-connector (14 terminal)
- 85 Multi-connector (6 terminal)
- 86 Multi-connector (4 terminal)
- 87 Connector (single contact)
- 89 Ground connection-body
- 90 Optional horn
- 92 Auxiliary combustion heater (optional)
- 94 Radio (optional)
- 95 Oil temperature switch sportomatic (optional)

FUSES:

Fuse box I:

- 1 Interior light, clock, luggage compartment light
- 2 Emergency flasher
- 3 (Electric windows)
- 4 Cigarette lighter
- 5 (Sliding roof)
- 6 Windshield wiper, washer pump
- 7 Fresh air fan
- 8 Stop, turn and back-up lights
- 9 Left front turn signal light
- 10 Right front turn signal light

Fuse box III:

- 1 (Sportomatic)
- 2 Shut-off solenoid, solenoid valve, solenoid for cold starting unit
- 3 Rear window defogger


CAUTION!

Do not disconnect battery while the engine is running as this will damage the alternator.

0.1-2/3

911 9

Electric wiring diagram (Part I) Type 911 T, 911 E, 911 S, Carrera 2.7, Model 73

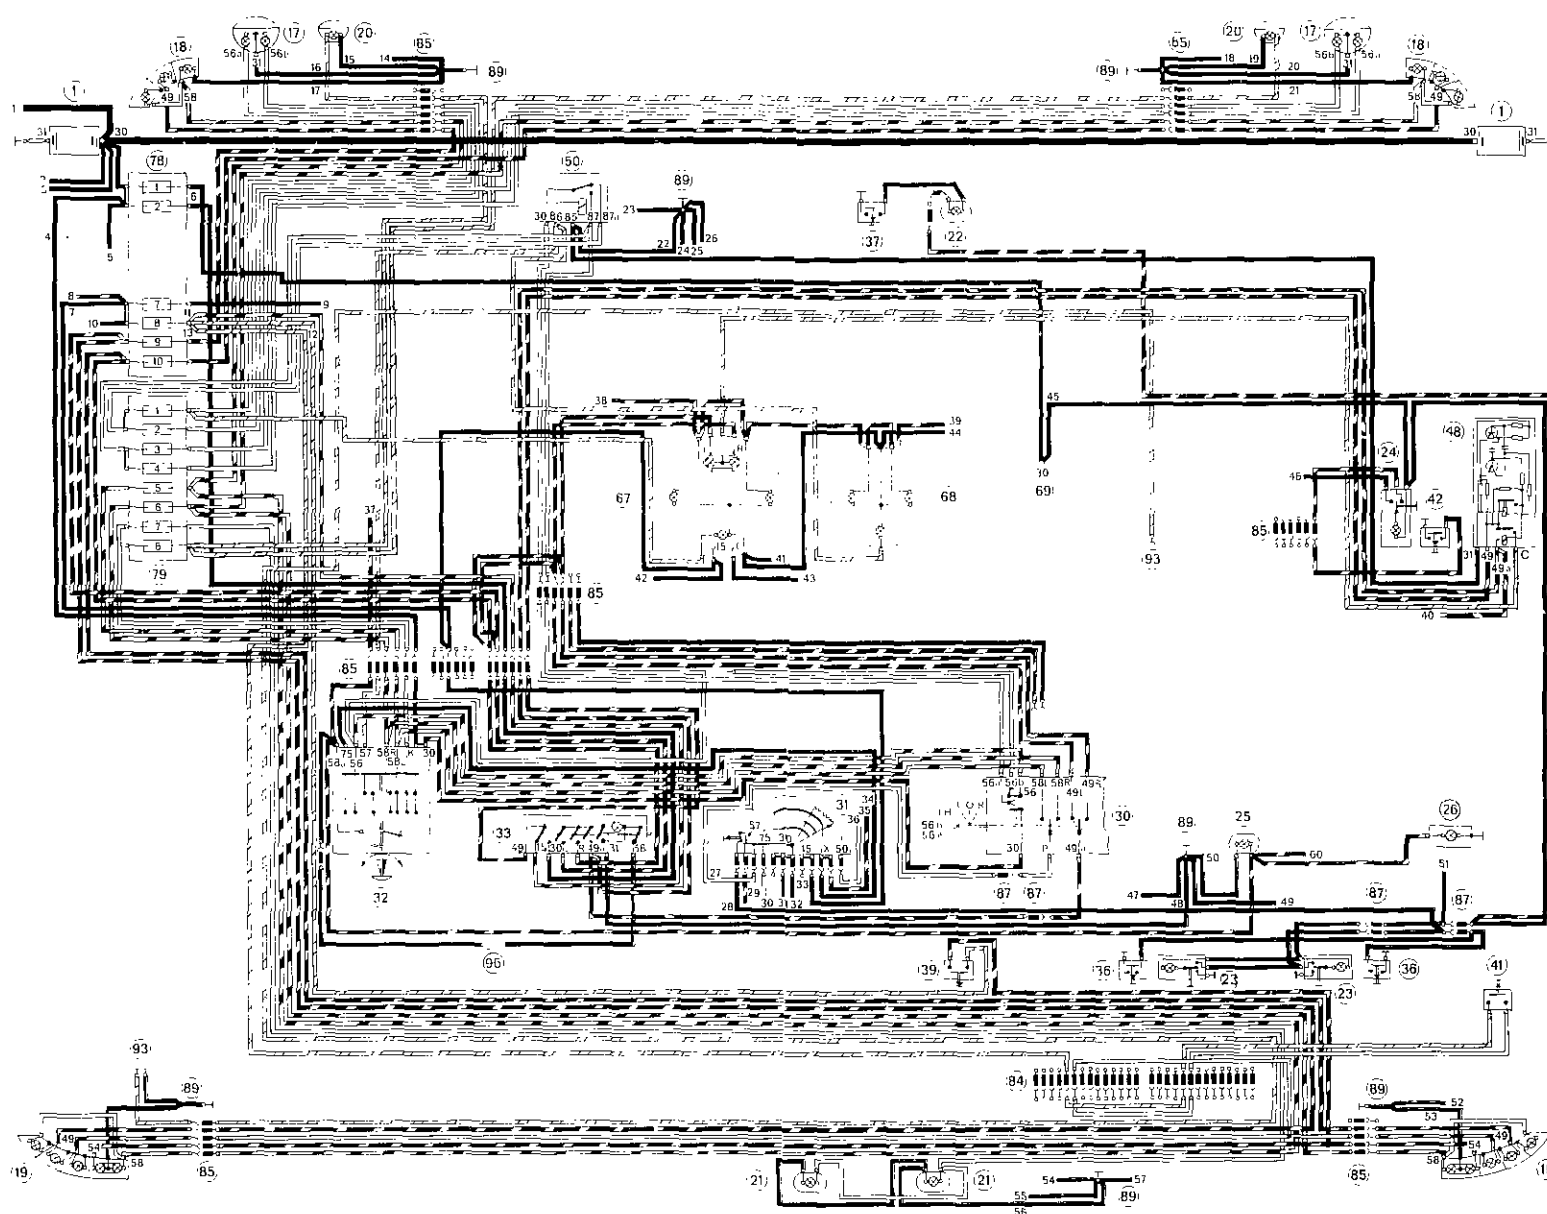

- | | |
|---|---|
| 1 Battery | 33 Emergency flasher switch (not applicable in Italy and France) |
| 17 Headlights | 36 Door contact switch |
| 18 Turn signal, parking and side marker lights (side marker lights USA only) | 37 Switch for luggage compartment light |
| 19 Tail, stop, turn, back-up and side marker lights (side marker lights USA only) | 39 Stop light switch |
| 20 Fog lights (optional) | 41 Back-up light switch |
| 21 License plate light | 42 Switch for glove compartment light |
| 22 Luggage compartment light | 48 Turn signal/emergency flasher unit |
| 23 Interior light | 50 Headlight relay |
| 24 Glove compartment light | 67 Tachometer |
| 25 Ashtray light | 68 Speedometer |
| 26 Illumination for heating lever (USA only) | 69 Electric clock |
| 30 Flasher, dimmer, wiper/washer switch with horn ring on steering column | 78 Fuse box I (10 terminal) |
| 31 Ignition starter switch and steering lock | 79 Fuse box II (8 terminal) |
| 32 Light switch | 84 Multi-connector (14 terminal) |
| | 85 Multi-connector (6 terminal) |
| | 87 Connector (single contact) |
| | 89 Ground connection-body |
| | 93 Rear fog light (optional) |
| | 96 Resistor (USA only) |

FUSES:

Fuse box I:

- 1 Interior light, clock, luggage compartment light
- 2 Emergency flasher
- 7 Fresh air fan
- 8 Stop, turn and back-up lights
- 9 Left front turn signal light
- 10 Right front turn signal light

Fuse box II:

- 1 High beam, left
- 2 High beam, right
- 3 Low beam, left
- 4 Low beam, right
- 5 Side marker, left
- 6 Side marker, right
- 7 License plate light
- 8 (Fog lights)

CAUTION!


Do not disconnect battery while the engine is running as this will damage the alternator

Electric wiring diagram (Part II) Type 911 T, 911 E, 911 S, Carrera 2.7, Model 73

Printed in Germany - I, 1972

0.1-2/7

911
9

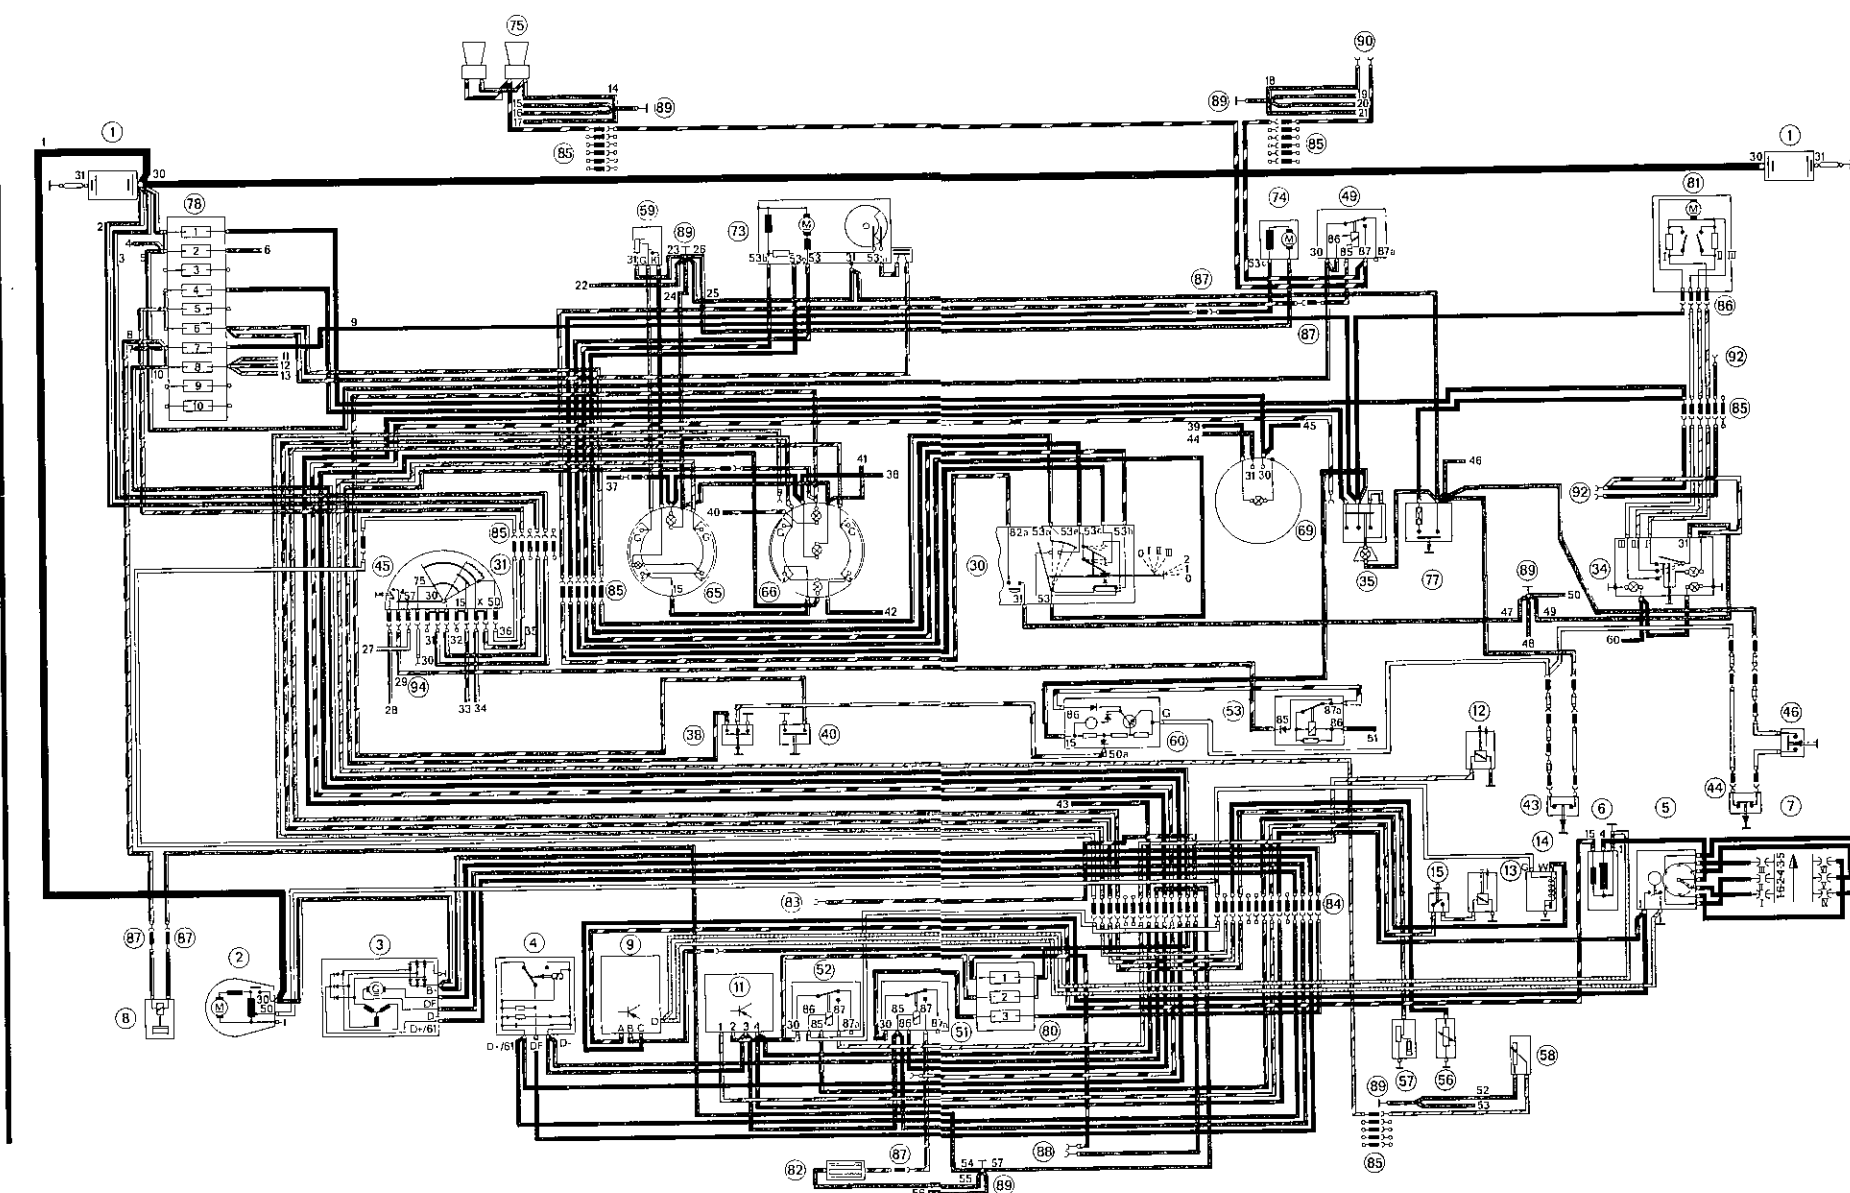

- 1 Battery
- 2 Starter
- 3 Alternator
- 4 Governor
- 5 Distributor
- 6 Ignition transformer
- 7 Spark plugs
- 8 Fuel pump
- 9 High tension ignition unit
- 11 Speed switch
- 12 Cold start solenoid (except 911 TV)
- 13 Shut-off solenoid (911 TV: solenoid valve)
- 14 Thermo-time switch (except 911 TV)
- 15 Micro switch
- 30 Flasher, dimmer, wiper/washer switch with horn ring on steering column
- 31 Ignition starter switch and steering lock
- 34 Switch for fan and auxiliary heater
- 35 Rear window defogger switch
- 38 Parking brake contact
- 40 Brake warning light switch (USA only)

- 43 Safety belt contact, driver side (USA only)
- 44 Safety belt contact, passenger side (USA only)
- 45 Buzzer contact (USA only)
- 46 Seat contact, passenger side (USA only)
- 49 Horn relay
- 51 Rear window defogger relay
- 52 Auxiliary starting relay (except 911 TV)
- 53 Buzzer (USA only)
- 56 Oil temperature indicator
- 57 Oil pressure indicator
- 58 Oil level indicator
- 59 Indicator for fuel gauge
- 60 Safety belt warning light (USA only)
- 65 Fuel gauge dial
- 66 Oil temperature gauge dial
- 69 Electric clock
- 73 Wiper motor
- 74 Washer pump
- 75 Horns

- 77 Cigarette lighter
- 78 Fuse box I (10 terminal)
- 80 Fuse box III (3 terminal)
- 81 Fan motor
- 82 Rear window defogger element
- 83 Sportomatic (optional)
- 84 Multi-connector (14 terminal)
- 85 Multi-connector (6 terminal)
- 86 Multi-connector (4 terminal)
- 87 Connector (single contact)
- 89 Ground connection-body
- 90 Optional horn
- 92 Auxiliary combustion heater (optional)
- 94 Radio (optional)

FUSES:

Fuse box I:

- 1 Interior light, clock, luggage compartment light
- 2 Emergency flasher
- 3 (Electric windows)
- 4 Cigarette lighter
- 5 (Sliding roof)
- 6 Windshield wiper, washer pump
- 7 Fresh air fan
- 8 Stop, turn and back-up lights
- 9 Left front turn signal light
- 10 Right front turn signal light


Fuse box III:

- 1 (Sportomatic)
- 2 Shut-off solenoid, solenoid valve, solenoid for cold starting unit
- 3 Rear window defogger

CAUTION!

Do not disconnect battery while the engine is running as this will damage the alternator.

Additional wiring diagram front and rear fog lights, Type 911

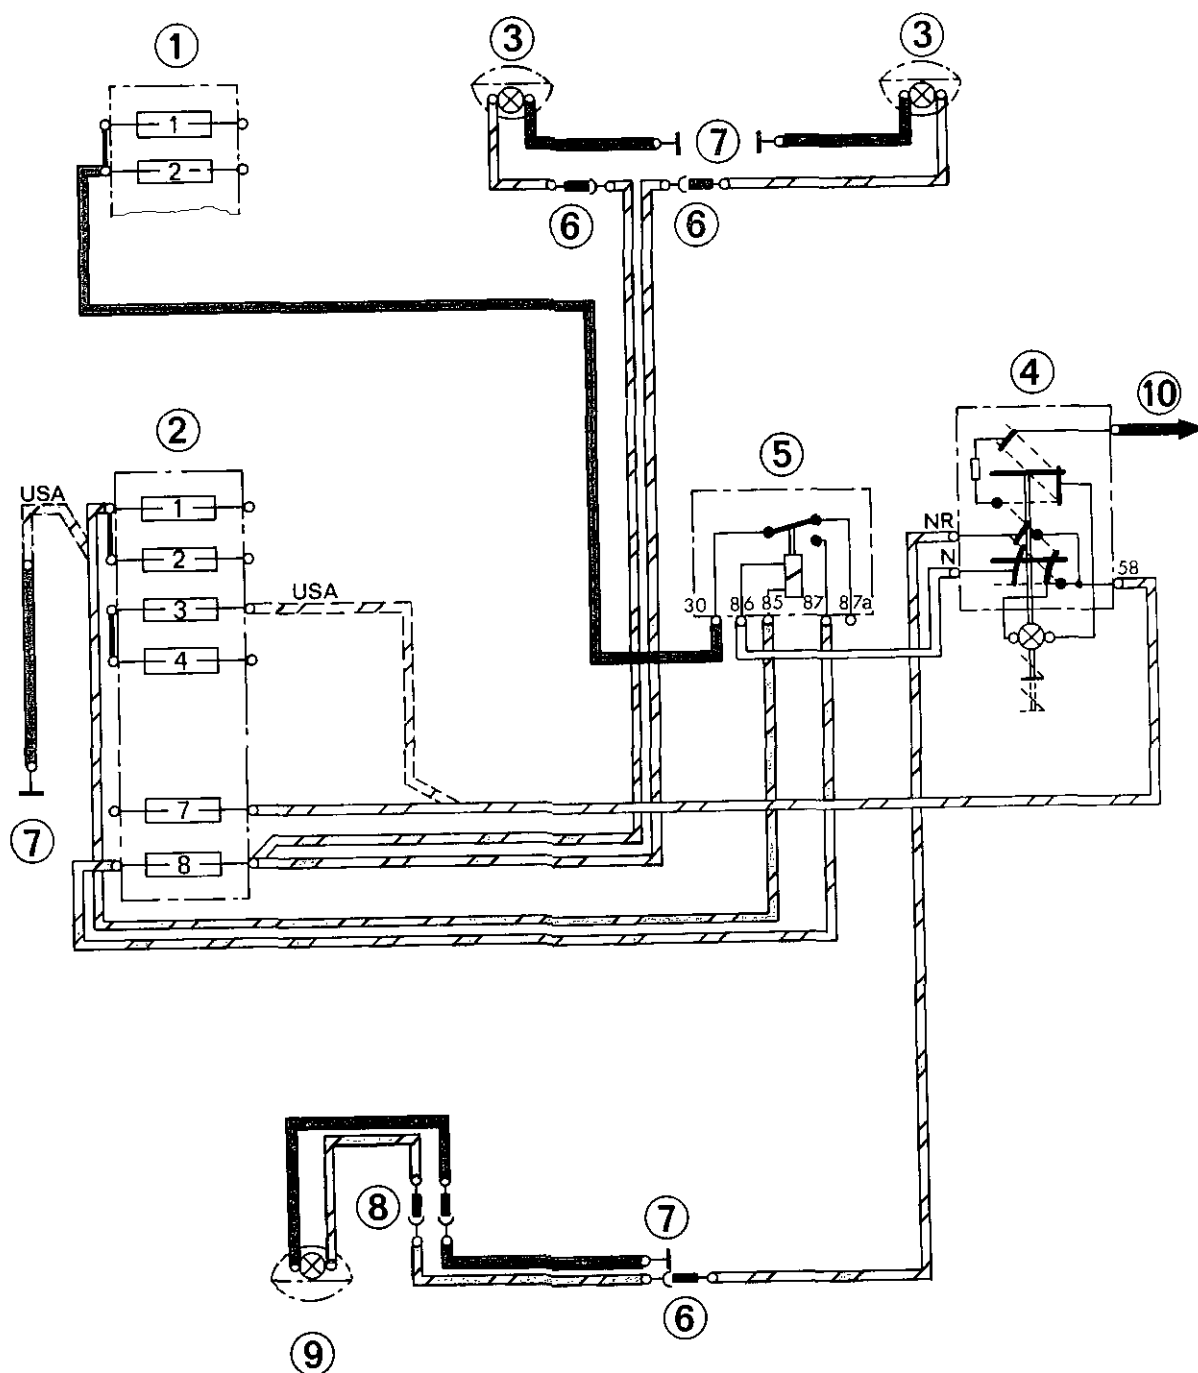

1 Fuse box I

2 Fuse box II

3 Fog lights

4 Fog lights switch

5 Relay

6 Multi-connector (6 terminal)


7 Ground connection-body

8 Connector (double contact)

9 Rear fog light

10 Ground connection (cigarette lighter)


Additional wiring diagram electric window opener, Type 911

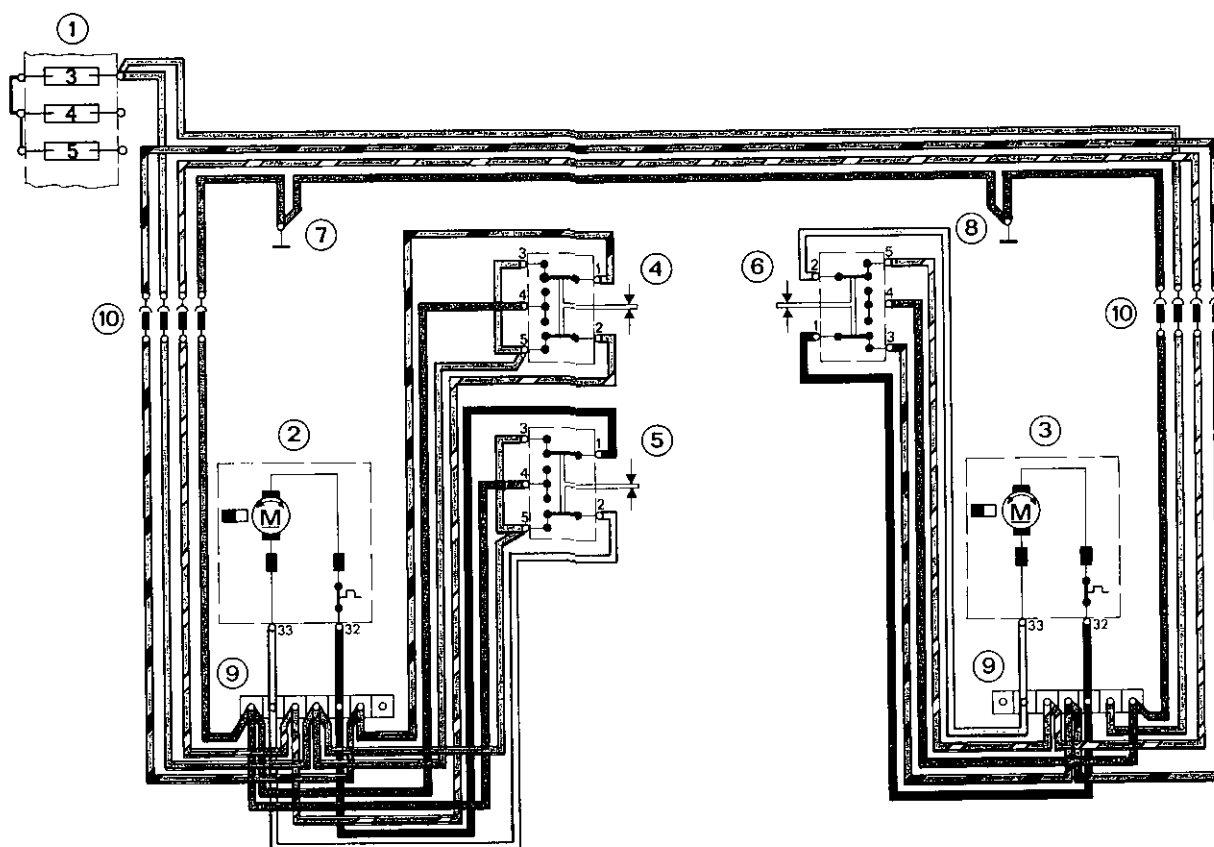

- 1 Fuse box I
- 2 Motor, driver side
- 3 Motor, passenger side
- 4 Switch for passenger side, left
- 5 Switch for driver side

- 6 Switch for passenger side, right
- 7 Ground connection, left
- 8 Ground connection, right
- 9 Terminal strip
- 10 Connector

Electric wiring diagram (Part I) Type 911 T with CIS, Model 73

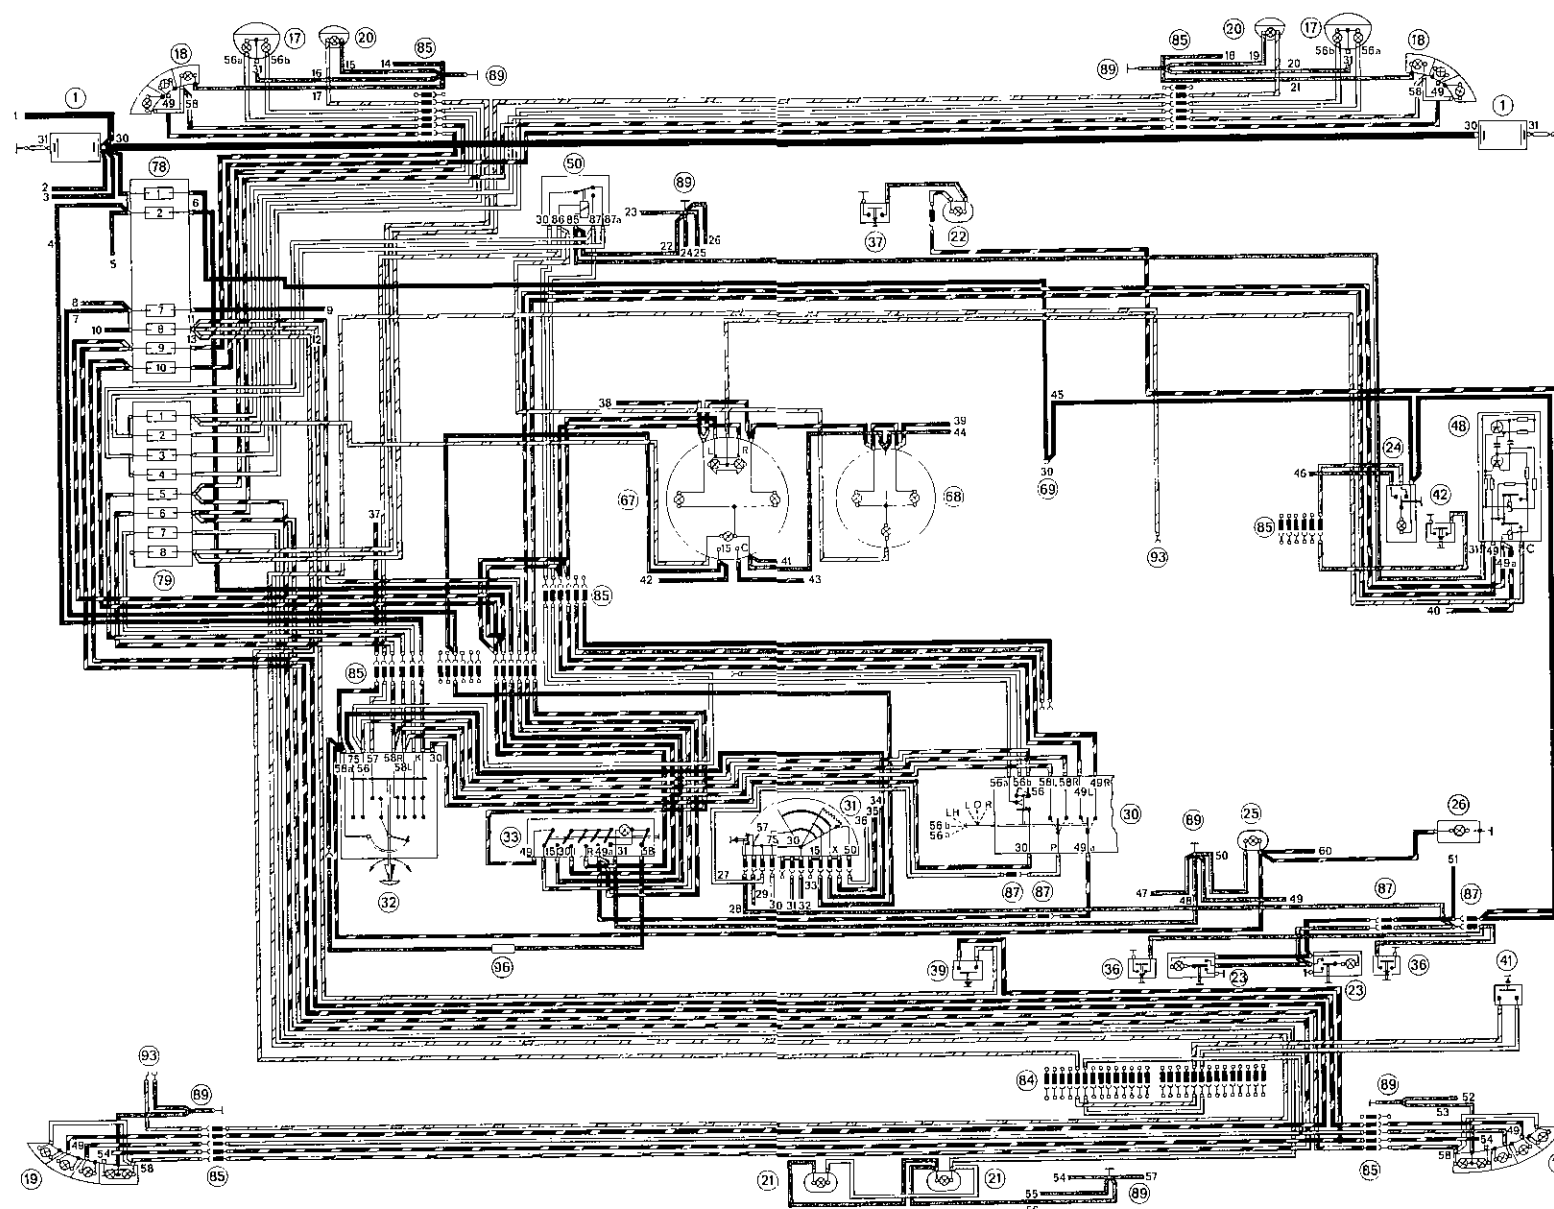

- 1 Battery
- 17 Headlights
- 18 Turn signal, parking and side marker lights
(side marker lights USA only)
- 19 Tail, stop, turn, back-up and side marker lights
(side marker lights USA only)
- 20 Fog lights (optional)
- 21 License plate light
- 22 Luggage compartment light
- 23 Interior light
- 24 Glove compartment light
- 25 Ashtray light
- 26 Illumination for heating lever
(USA only)
- 30 Flasher, dimmer, wiper/washer switch with horn ring on steering column
- 31 Ignition starter switch and steering lock
- 32 Light switch

- 33 Emergency flasher switch
(not applicable in Italy and France)
- 36 Door contact switch
- 37 Switch for luggage compartment light
- 39 Stop light switch
- 41 Back-up light switch
- 42 Switch for glove compartment light
- 48 Turn signal/emergency flasher unit
- 50 Headlight relay
- 67 Tachometer
- 68 Speedometer
- 69 Electric clock
- 78 Fuse box I (10 terminal)
- 79 Fuse box II (8 terminal)
- 84 Multi-connector (14 terminal)
- 85 Multi-connector (6 terminal)
- 87 Connector (single contact)
- 89 Ground connection-body
- 93 Rear fog light (optional)
- 96 Resistor (USA only)

FUSES:

Fuse box I:

- 1 Interior light, clock, luggage compartment light
- 2 Emergency flasher
- 7 Fresh air fan
- 8 Stop, turn and back-up lights
- 9 Left front turn signal light
- 10 Right front turn signal light

Fuse box II:

- 1 High beam, left
- 2 High beam, right
- 3 Low beam, left
- 4 Low beam, right
- 5 Side marker, left
- 6 Side marker, right
- 7 License plate light
- 8 (Fog lights)

CAUTION!


Do not disconnect battery while the engine is running as this will damage the alternator.

Electric wiring diagram (Part II) Type 911 T with CIS, Model 73

Printed in Germany - XXVII, 1973

0.1-2/15

911
9

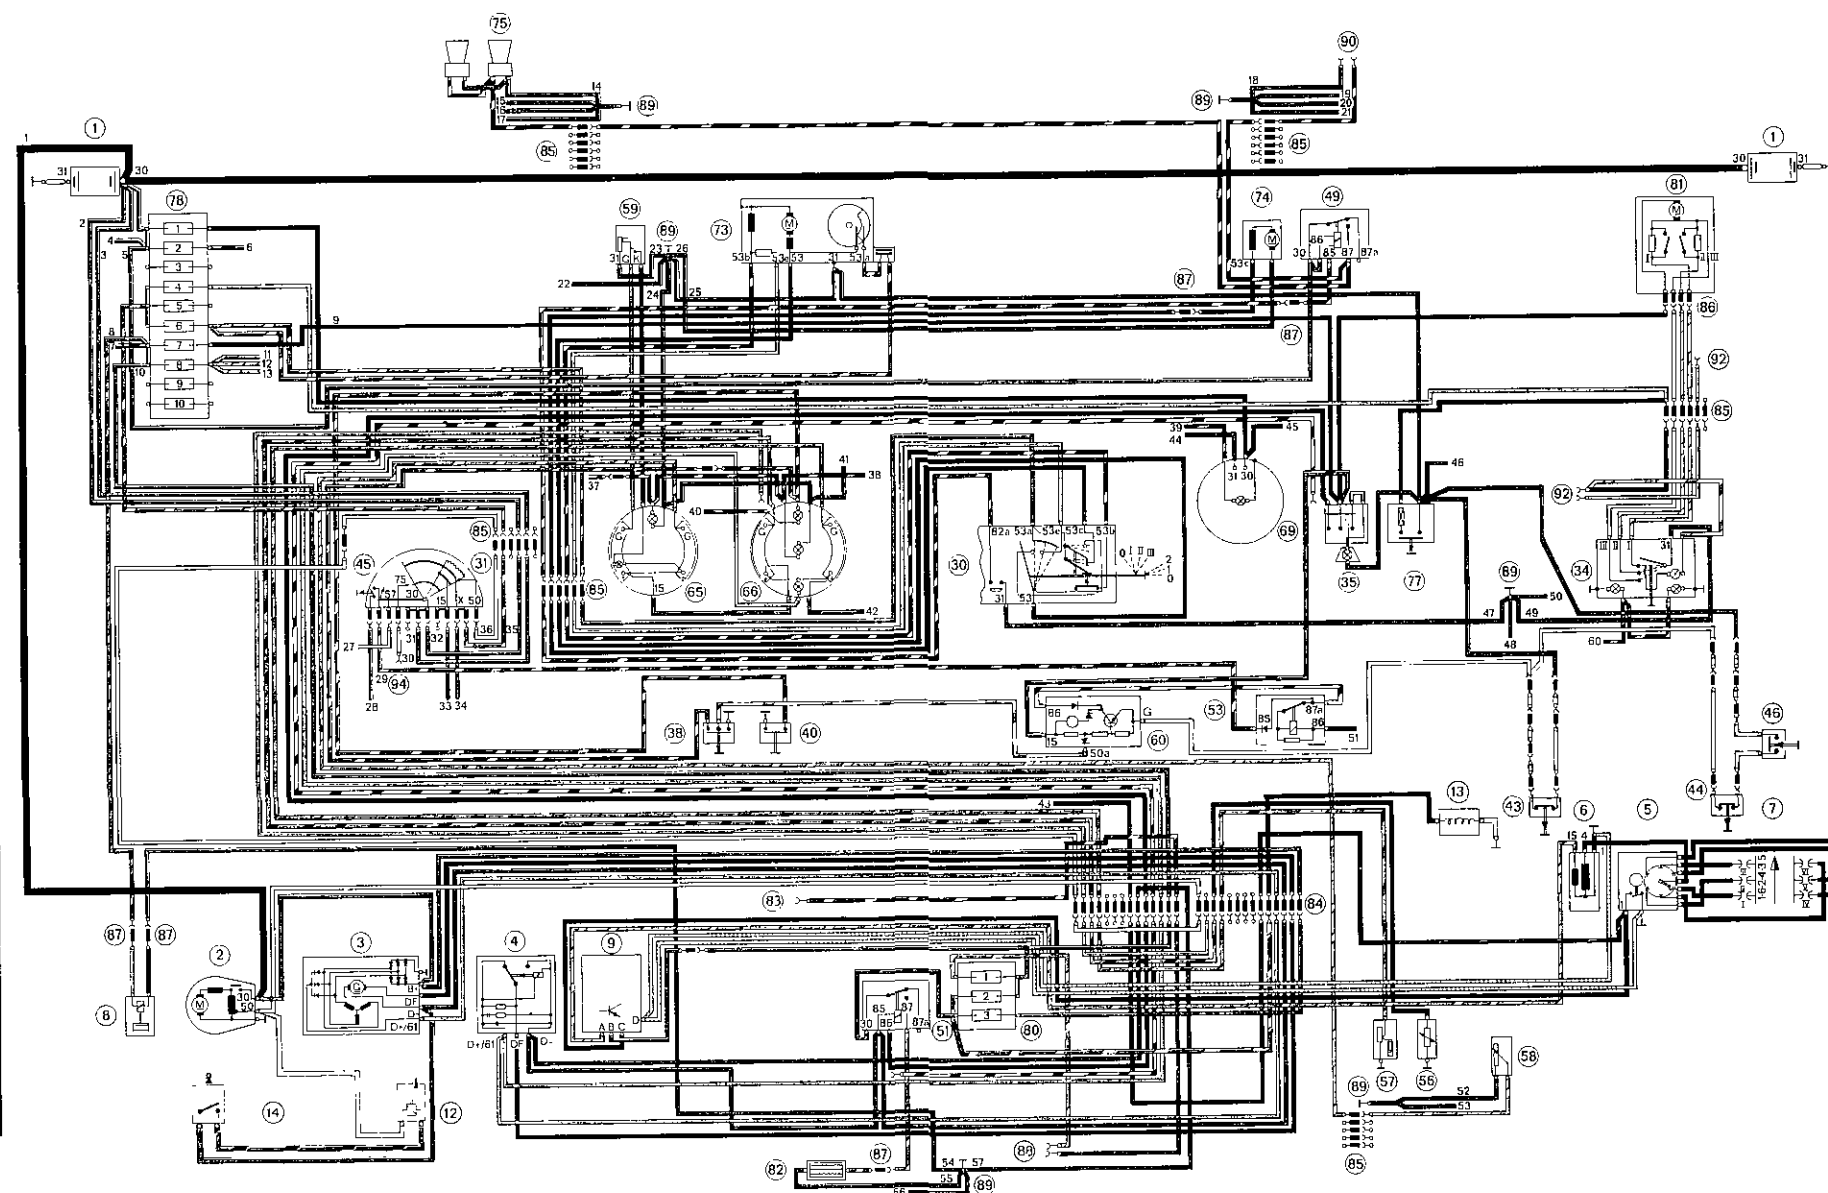

- 1 Battery
- 2 Starter
- 3 Alternator
- 4 Governor
- 5 Distributor
- 6 Ignition transformer
- 7 Spark plugs
- 8 Fuel pump
- 9 High tension ignition unit
- 12 Cold start solenoid
- 13 Control pressure regulating valve with warm-up compensation
- 14 Micro switch
- 30 Flasher, dimmer, wiper/washer switch with horn ring on steering column
- 31 Ignition starter switch and steering lock
- 34 Switch for fan and auxiliary heater
- 35 Rear window defogger switch
- 38 Parking brake contact
- 40 Brake warning light switch (USA only)

- 43 Safety belt contact, driver side (USA only)
- 44 Safety belt contact, passenger side (USA only)
- 45 Buzzer contact (USA only)
- 46 Seat contact, passenger side (USA only)
- 49 Horn relay
- 51 Rear window defogger relay
- 53 Buzzer (USA only)
- 56 Oil temperature indicator
- 57 Oil pressure indicator (optional)
- 58 Oil level indicator (optional)
- 59 Indicator for fuel gauge
- 60 Safety belt warning light (USA only)
- 65 Fuel gauge dial
- 66 Oil temperature gauge dial
- 69 Electric clock
- 73 Wiper motor
- 74 Washer pump
- 75 Horns

- 77 Cigarette lighter
- 78 Fuse box I (10 terminal)
- 80 Fuse box III (3 terminal)
- 81 Fan motor
- 82 Rear window defogger element
- 83 Sportomatic (optional)
- 84 Multi-connector (14 terminal)
- 85 Multi-connector (6 terminal)
- 86 Multi-connector (4 terminal)
- 87 Connector (single contact)
- 88 Gear lever contact SPM (optional)
- 89 Ground connection-body
- 90 Optional horn
- 92 Auxiliary combustion heater (optional)
- 94 Radio (optional)

FUSES:

Fuse box I:

- 1 Interior light, clock, luggage compartment light
- 2 Emergency flasher
- 3 (Electric windows)
- 4 Cigarette lighter
- 5 (Sliding roof)
- 6 Windshield wiper, washer pump
- 7 Fresh air fan
- 8 Stop, turn and back-up lights
- 9 Left front turn signal light
- 10 Right front turn signal light

Fuse box III:

- 1 (Sportomatic)
- 2
- 3 Rear window defogger

CAUTION!

Do not disconnect battery while the engine is running as this will damage the alternator.

SUPPLEMENT TO ELECTRIC WIRING DIAGRAM


TYPE 911 T WITH CONTINUOUS INJECTION SYSTEM (CIS), 1973 MODEL

Wiring in the area of fuse box III shown on page 0.1 - 2/15 differs in Type 911 T vehicles equipped with the Continuous Injection System (CIS) due to the utilization of differing components. The resulting changes in the wiring diagram can be seen in the circuit schematic shown below.

The red/white wire originally connected to fuse No. 2 now is connected to terminal No. 87 of the newly added solenoid switch. The red/white wire currently attached to fuse No. 2 has no function in CIS-equipped vehicles even though it continues to be installed for production reasons.


The added solenoid switch is installed in the same place where the cold start enrichment solenoid normally is located in vehicles equipped with the mechanical fuel injection system.

This wiring circuit ensures that the warm-up regulator does not come into action until electric current is produced by the alternator, that is, only when the engine actually is running. This system prevents preparation of an overly lean starting fuel/air mixture if a longer time lag should occur between the time the ignition is switched on and the engine started.

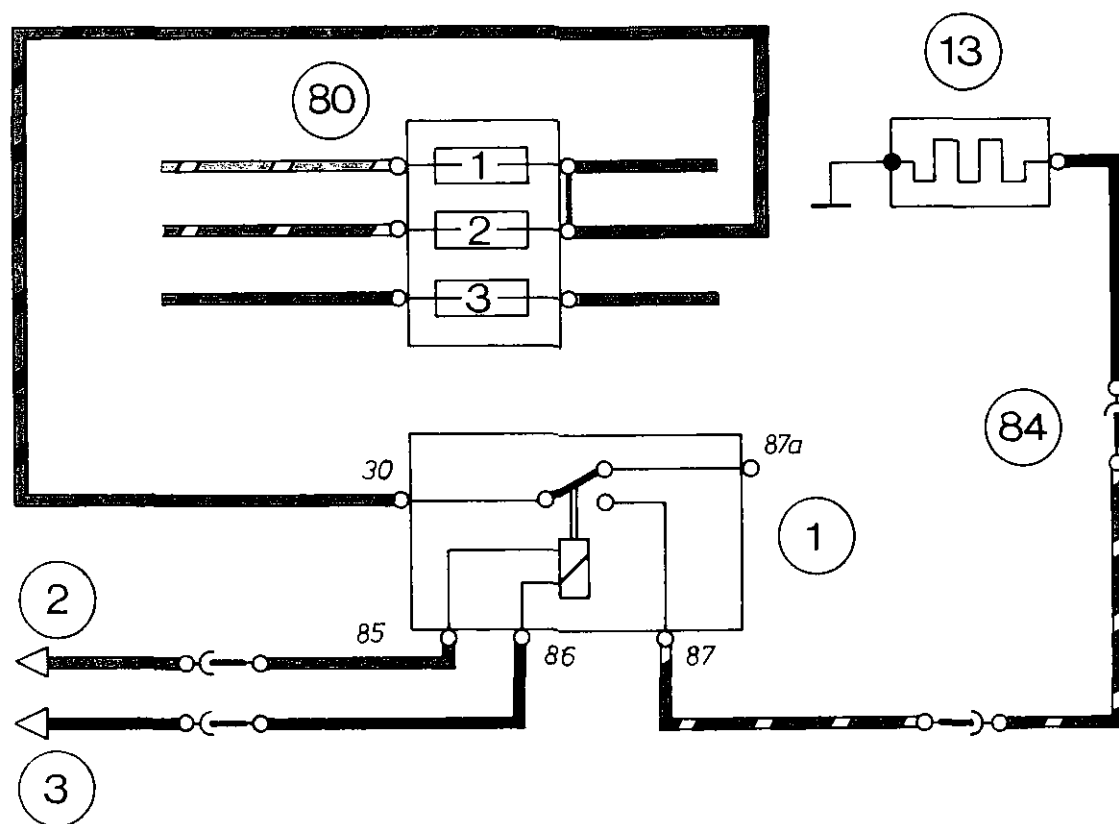

- 1 Solenoid switch
- 2 To voltage regulator, terminal D- (ground)
- 3 To voltage regulator, terminal D+/61


- 13 Warm-up regulator
- 80 Fuse box III
- 84 14-pole connector, connector No. 10

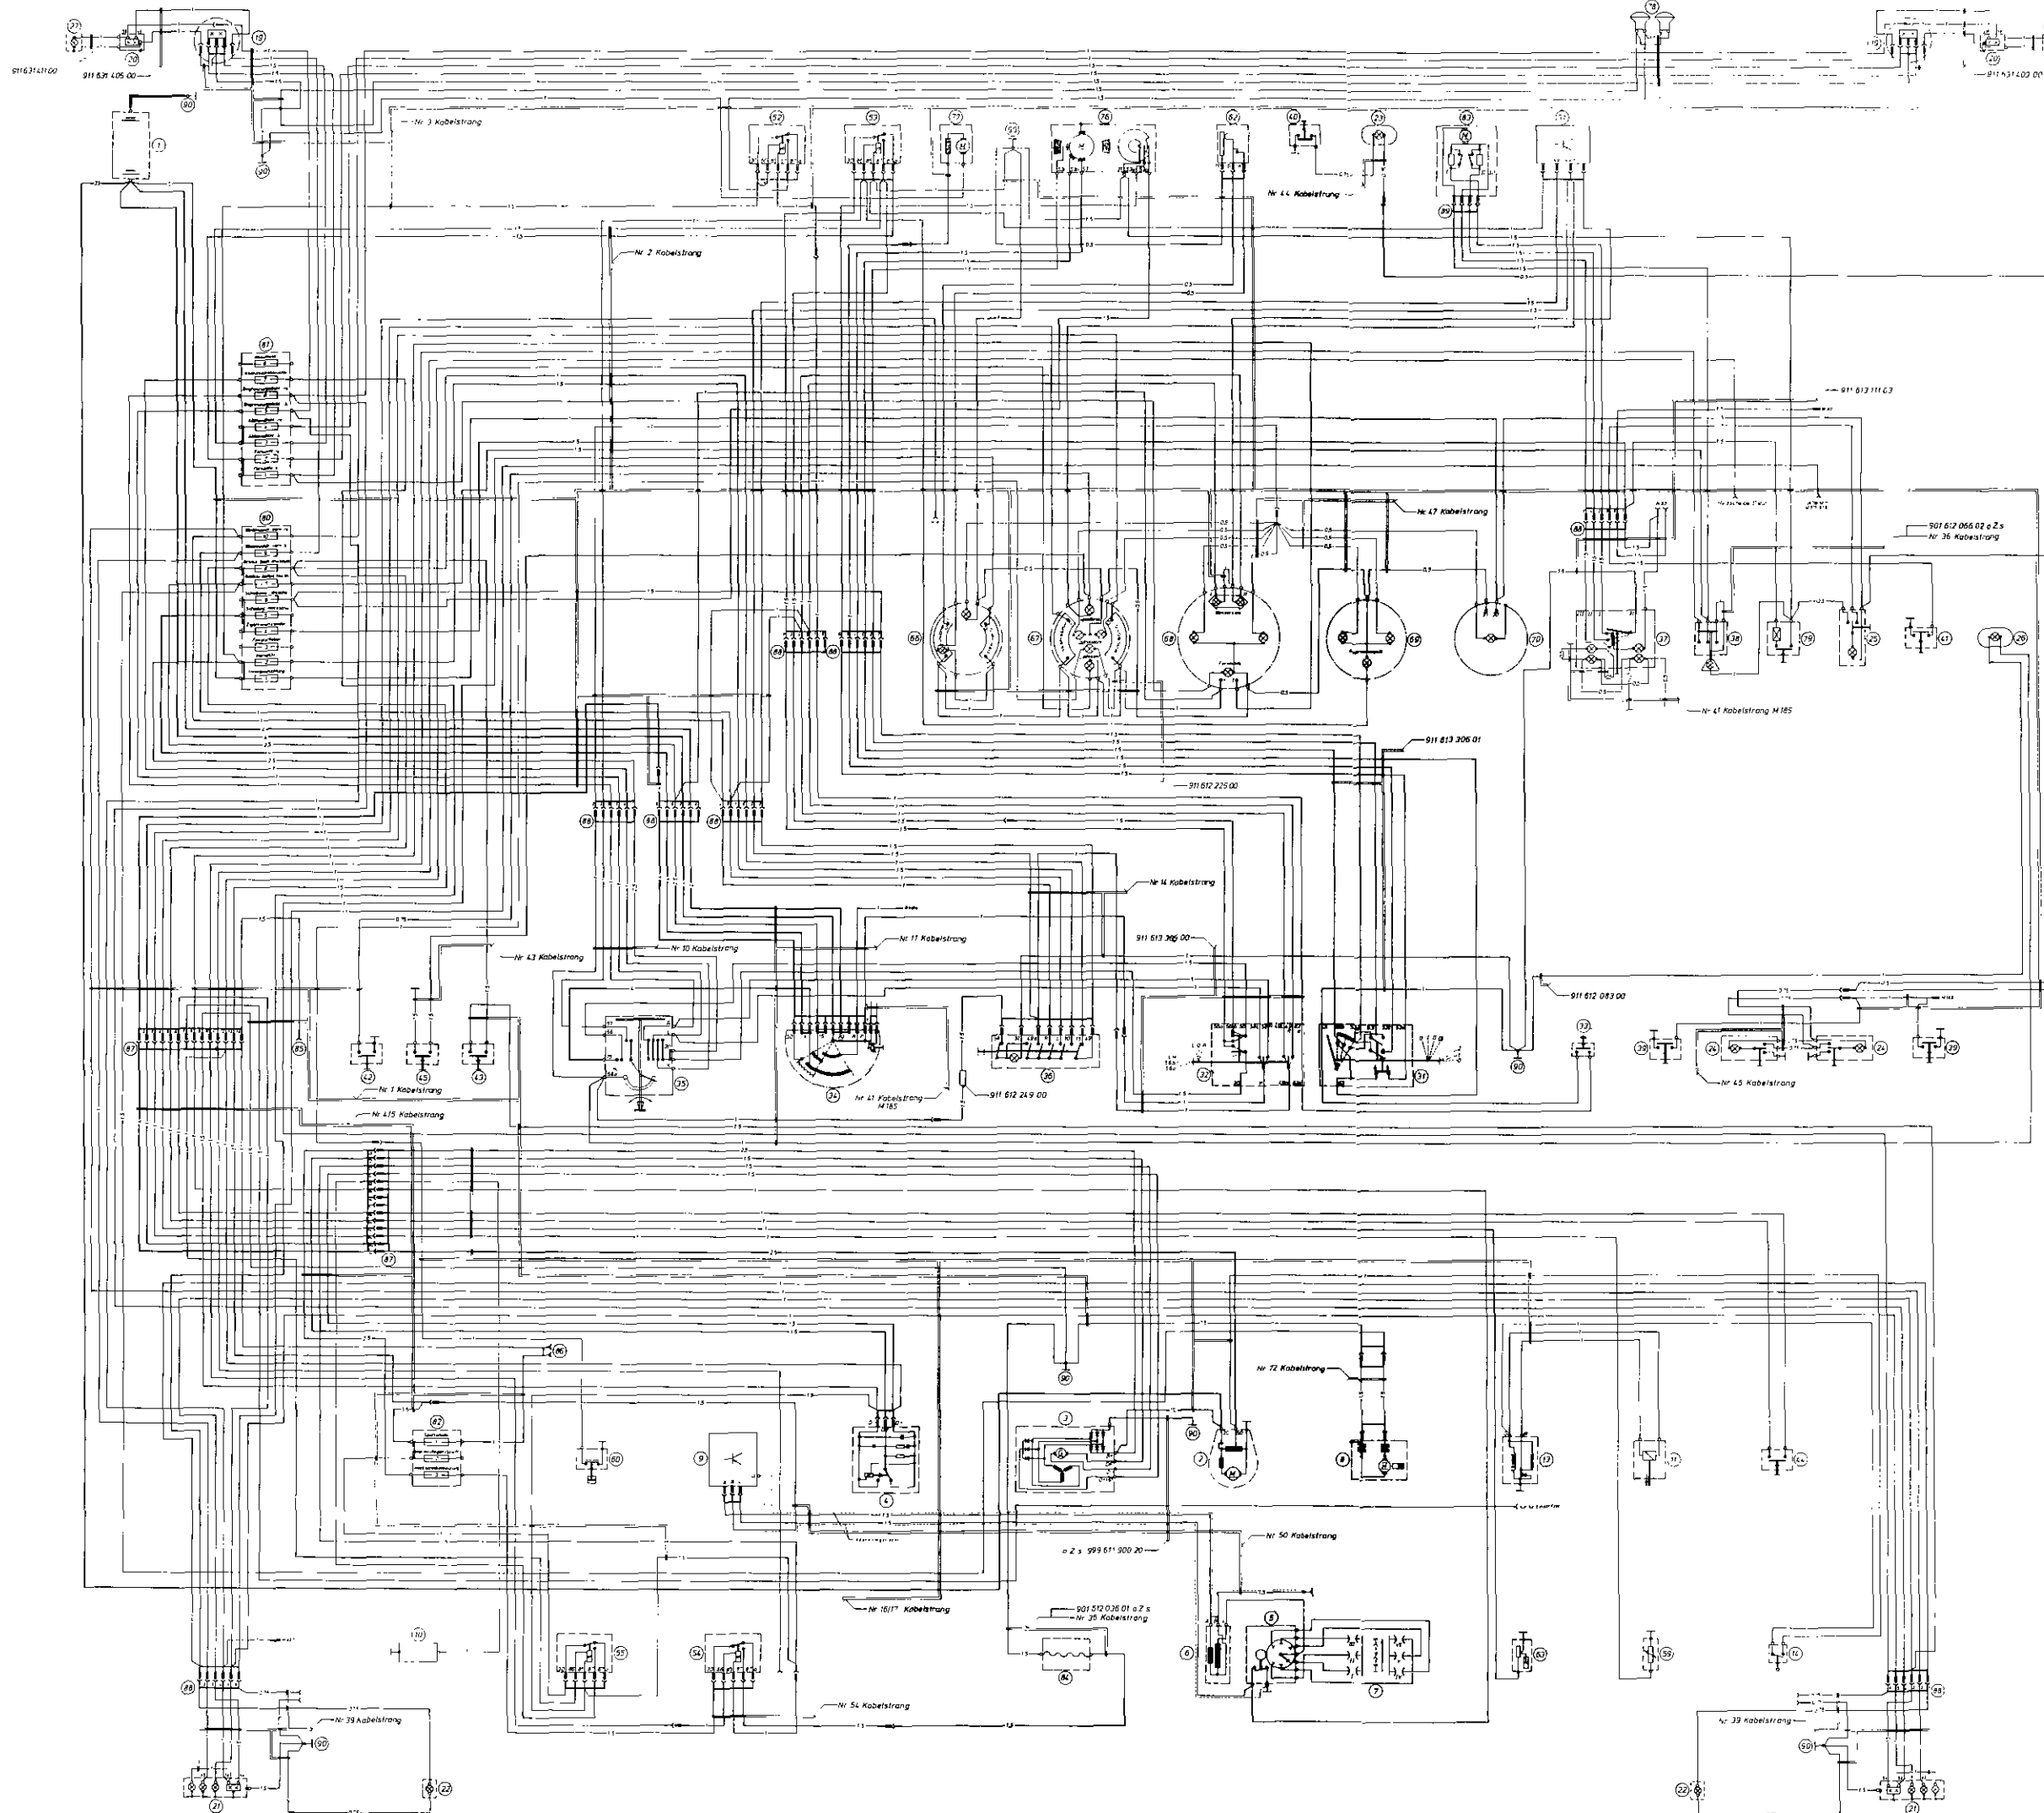

Electric wiring diagram 911, 911S - Model 74 - USA

- 1 Battery
- 2 Starter
- 3 Alternator
- 4 Governor
- 5 Distributor
- 6 Ignition transformer
- 7 Spark plugs
- 8 Fuel pump
- 9 High tension ignition unit
- 10 Control pressure regulating valve with warm-up compensation
- 11 Cold start solenoid
- 13 Thermo-time switch
- 14 Micro switch
- 19 Head lights
- 20 Turn signal and parking lights
- 21 Tail, stop, turn, back-up and side marker lights
- 22 License plate light
- 23 Luggage compartment light
- 24 Interior light
- 25 Glove compartment
- 26 Ashtray light
- 27 Side marker light
- 31 Windshield wiper/washer switch
- 32 Flasher/dimmer switch
- 33 Horn button
- 34 Ignition starter switch and steering lock
- 35 Light switch
- 36 Emergency flasher switch
- 37 Switch for fan and auxiliary heater
- 38 Rear window defogger switch
- 39 Door contact switch
- 40 Switch for luggage compartment light
- 41 Switch for glove compartment light
- 42 Parking brake contact
- 43 Stop light switch
- 44 Back-up light switch
- 45 Brake warning light switch
- 51 Turn signal/emergency flasher unit
- 52 Horn relay
- 53 Headlight relay
- 54 Rear window defogger relay
- 55 Relay for control pressure regulating valve
- 59 Oil temperature indicator
- 60 Oil pressure switch
- 61 Oil level indicator
- 62 Indicator for fuel gauge
- 63 Oil pressure indicator
- 66 Fuel gauge dial
- 67 Oil temperature gauge dial
- 68 Tachometer
- 69 Speedometer
- 70 Electric clock
- 76 Wiper motor
- 77 Washer pump
- 78 Horns
- 79 Cigarette lighter
- 80 Fuse box I (10 terminal)
- 81 Fuse box II (8 terminal)
- 82 Fuse box III (3 terminal)
- 83 Fan motor
- 84 Rear window defogger element
- 85 Gear lever contact SPM (optional)
- 86 Connector SPM (double)
- 87 Multi-connector (14 terminal)
- 88 Multi-connector (6 terminal)
- 89 Multi-connector (4 terminal)
- 90 Ground connection - body

ADDITIONAL WIRING DIAGRAM, SEAT BELT WARNING SYSTEM
TYPE 911, 911S, MODEL 74 - USA

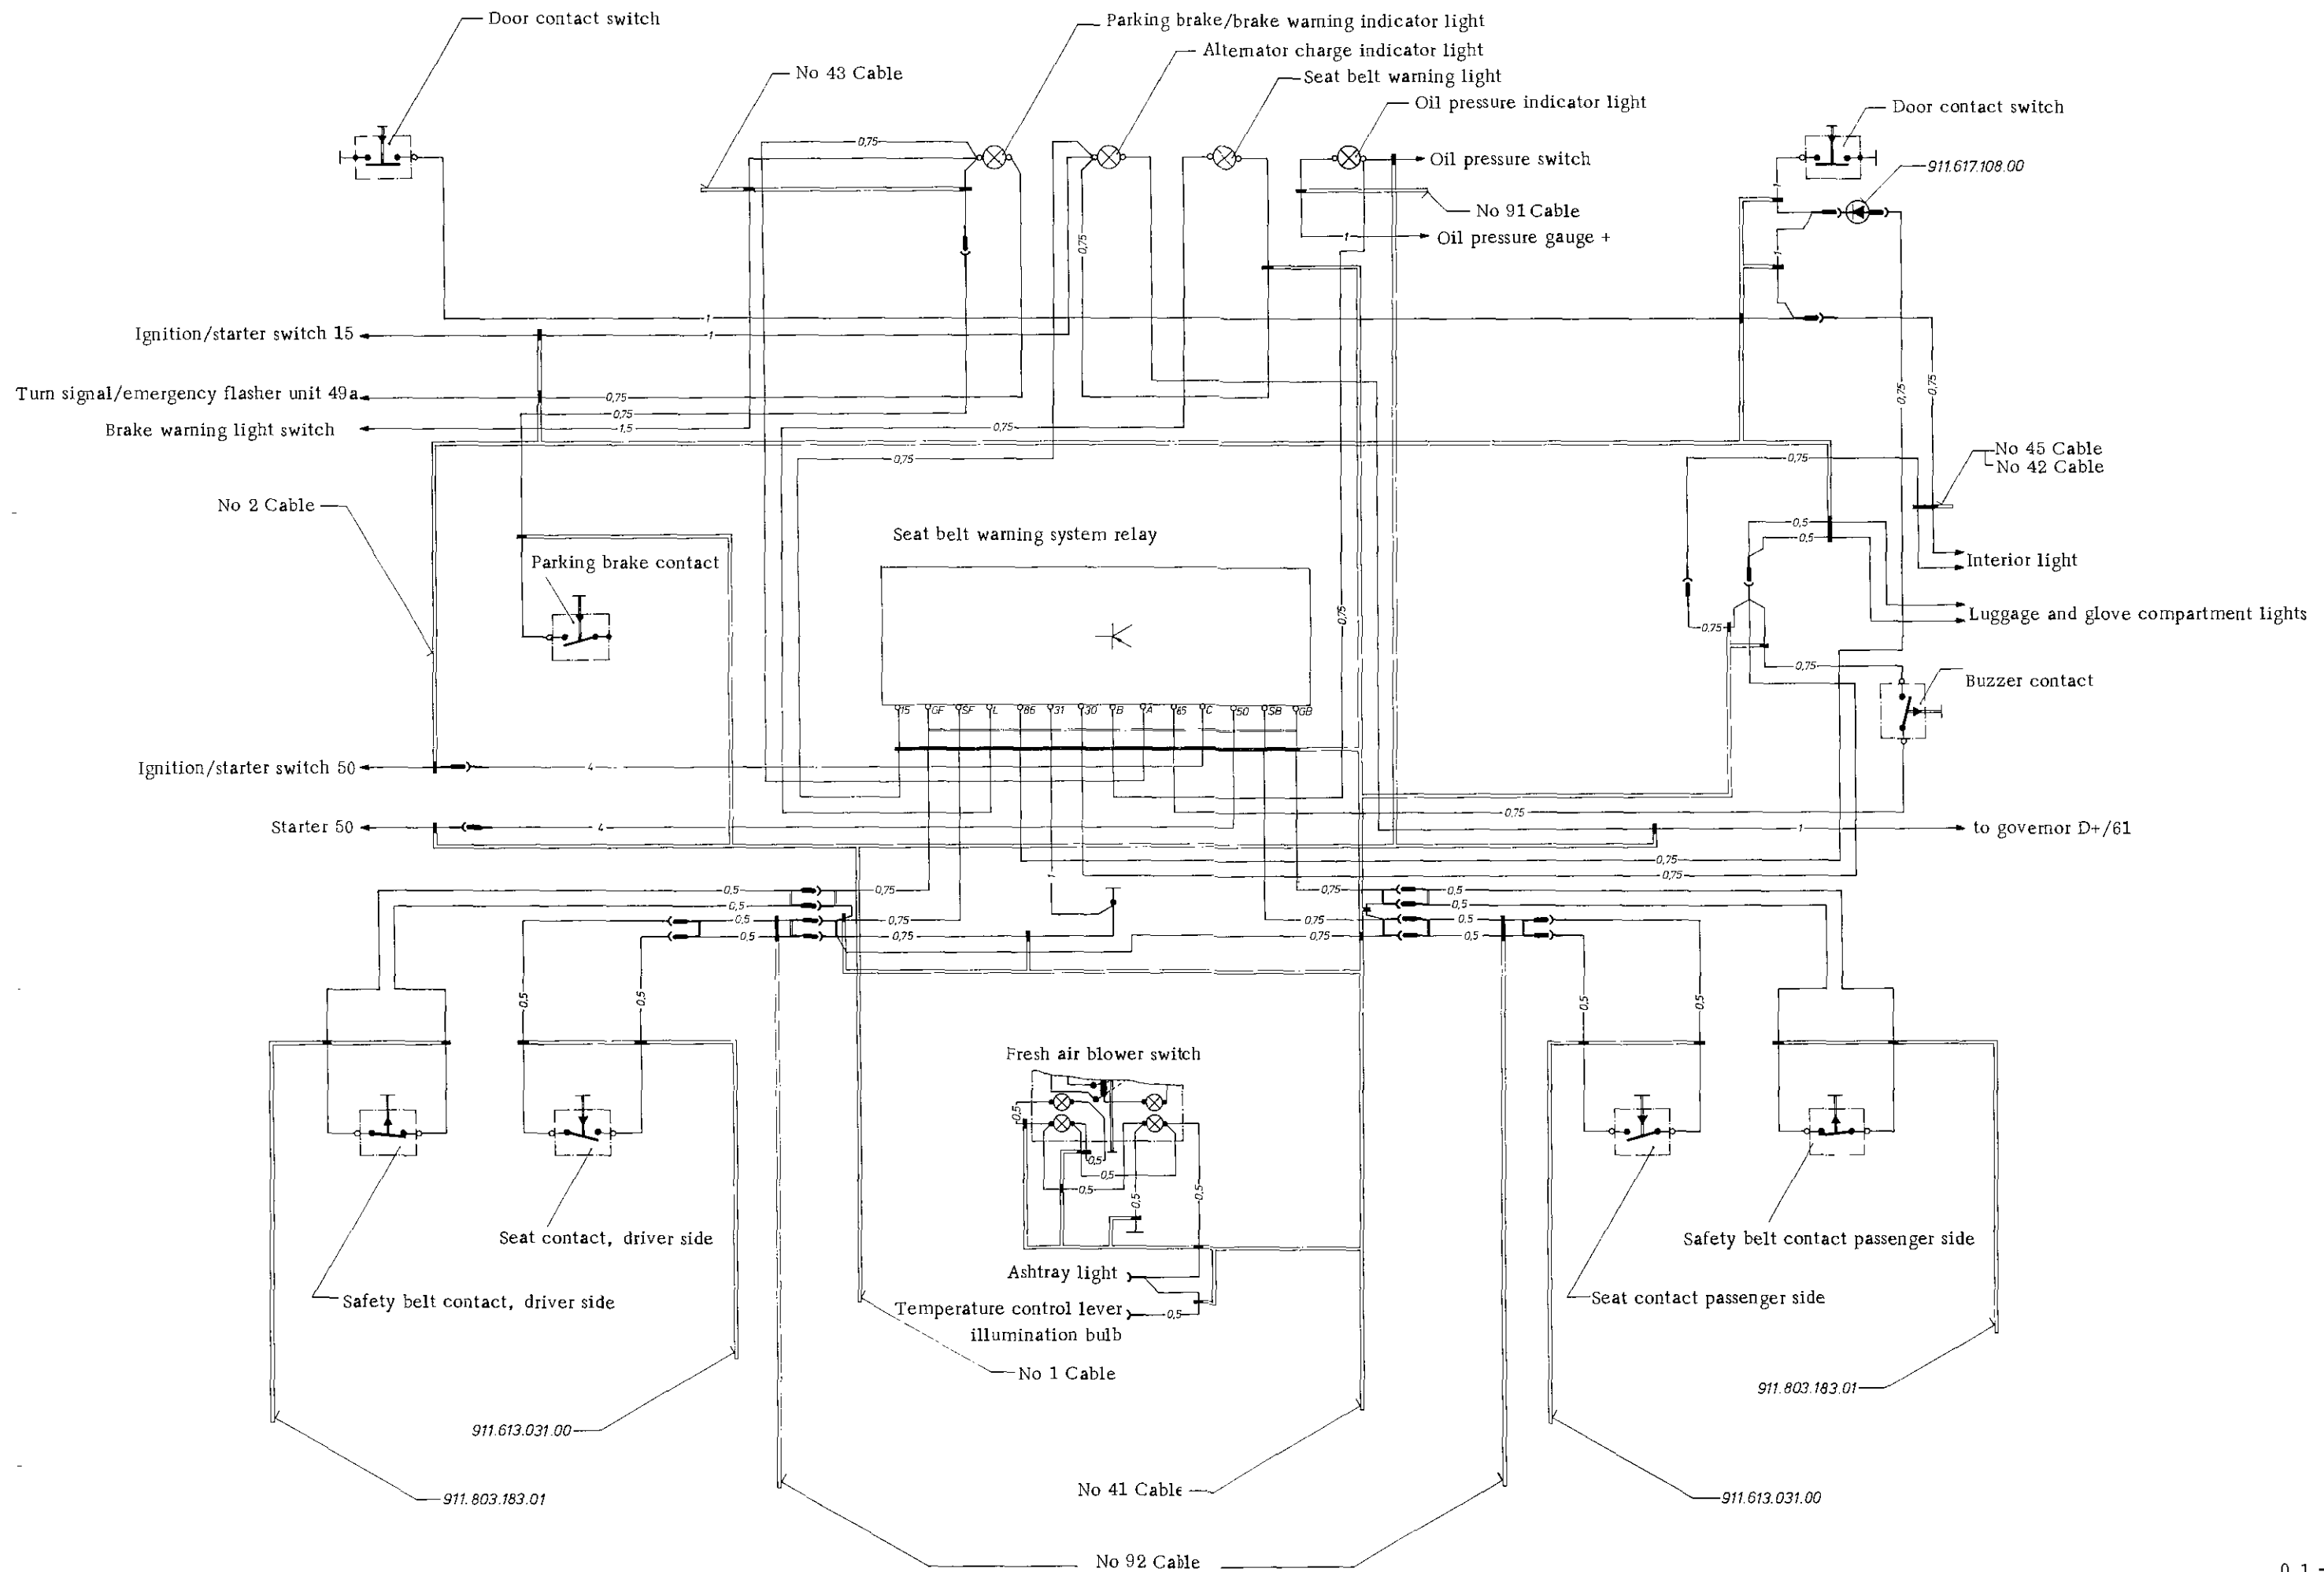


Current flow diagram, Type 911 USA, Model 74


Description

- E¹ — Headlight switch
E² — Turn signal switch
E³ — Emergency flasher switch
E⁴ — Dimmer switch
E⁵ — Headlight flasher switch
E¹⁹ — Parking light switch
E²⁰ — Instrument panel illumination potentiometer
E²⁴ — Switch for glove compartment light
F — Stop light switch
F² — Left door switch
F³ — Right door switch
F⁴ — Back-up light switch
F⁵ — Switch for luggage compartment light
F⁶ — Brake warning switch
F⁹ — Parking brake switch
H — Horn switch
H² — Horns
H⁶ — Key warning buzzer contact
J¹ — Hazard / turn signal flasher
J⁴ — Horn relay
J²⁵ — Headlight relay
J²⁷ — Diode for seat belt warning system
K¹ — High beam indicator light
K⁴ — Parking lights indicator light
K⁵ — Turn signal indicator light
K⁶ — Hazard flasher indicator light
K⁷ — Parking brake / brake warning indicator light
L¹ — Sealed beam unit, left headlight
L² — Sealed beam unit, right headlight
L⁶ — Speedometer illumination light
L⁷ — Fuel gauge illumination light
L⁸ — Clock illumination light
L¹⁵ — Ashtray illumination light
L¹⁶ — Heater control assembly illumination light
L²¹ — Temperature control lever illumination light
L²⁴ — Oil temperature indicator illumination light
L²⁶ — Tachometer illumination light
L²⁷ — Oil pressure indicator illumination light
M² — Right stop / rear light
M⁴ — Left stop / rear light
M⁵ — Left front turn signal / parking light
M⁶ — Left rear turn signal
M⁷ — Right front turn signal / parking light
M⁸ — Right rear turn signal
M¹¹ — Front side marker light
M¹² — Rear side marker light
M¹⁶ — Left back-up light
M¹⁷ — Right back-up light
N⁵ — Resistor
S² — Fuses
S¹⁷ — on the
S¹⁸ — fuse box
T¹ — Cable connector, single
a — near regulator panel
b — behind sealed beam unit, left
c — behind sealed beam unit, right
d — behind fuse box
e — on luggage compartment floor
f — behind instrument panel
h — near left rear lights
T⁶ — Cable connector, sixfold
a — in the engine compartment, rear left
b — in the engine compartment, rear right
d — below instrument panel
e — below instrument panel
g — below instrument panel
h — below instrument panel
T¹⁴ — Cable connector, fourteenfold
a — on regulator panel, front
b — on regulator panel, rear
W — Interior light
W² — Luggage compartment light
W⁶ — Glove compartment light
X — License plate light
Y — Clock

Current track

- 6, 8, 9, 11, 15, 20
28
24, 25, 28, 31, 34
6, 39
4
13
20
41
50
45
46
48
42
34
33
39
36, 38
43
33, 34, 35
36, 37
4, 5
46
2
1
27, 29
24
34
3, 7
4, 8
22
22
22
20
19
21
22
22
22
17, 50
13, 51
11, 25
26
15, 31
30
12, 16
14, 18
48
49
23
9, 15, 11
8, 7, 4
3, 31, 25, 48
34
40
14
11, 25
15, 31
37
22, 42, 44, 45, 46
6, 22, 24, 28
24
9, 13, 24, 26, 48, 51
10, 17, 30, 49, 50
4, 6, 26, 30, 39
25, 31, 32, 34
8, 9, 11, 15, 22
41
48
48
45, 46
42
41
9, 10
40

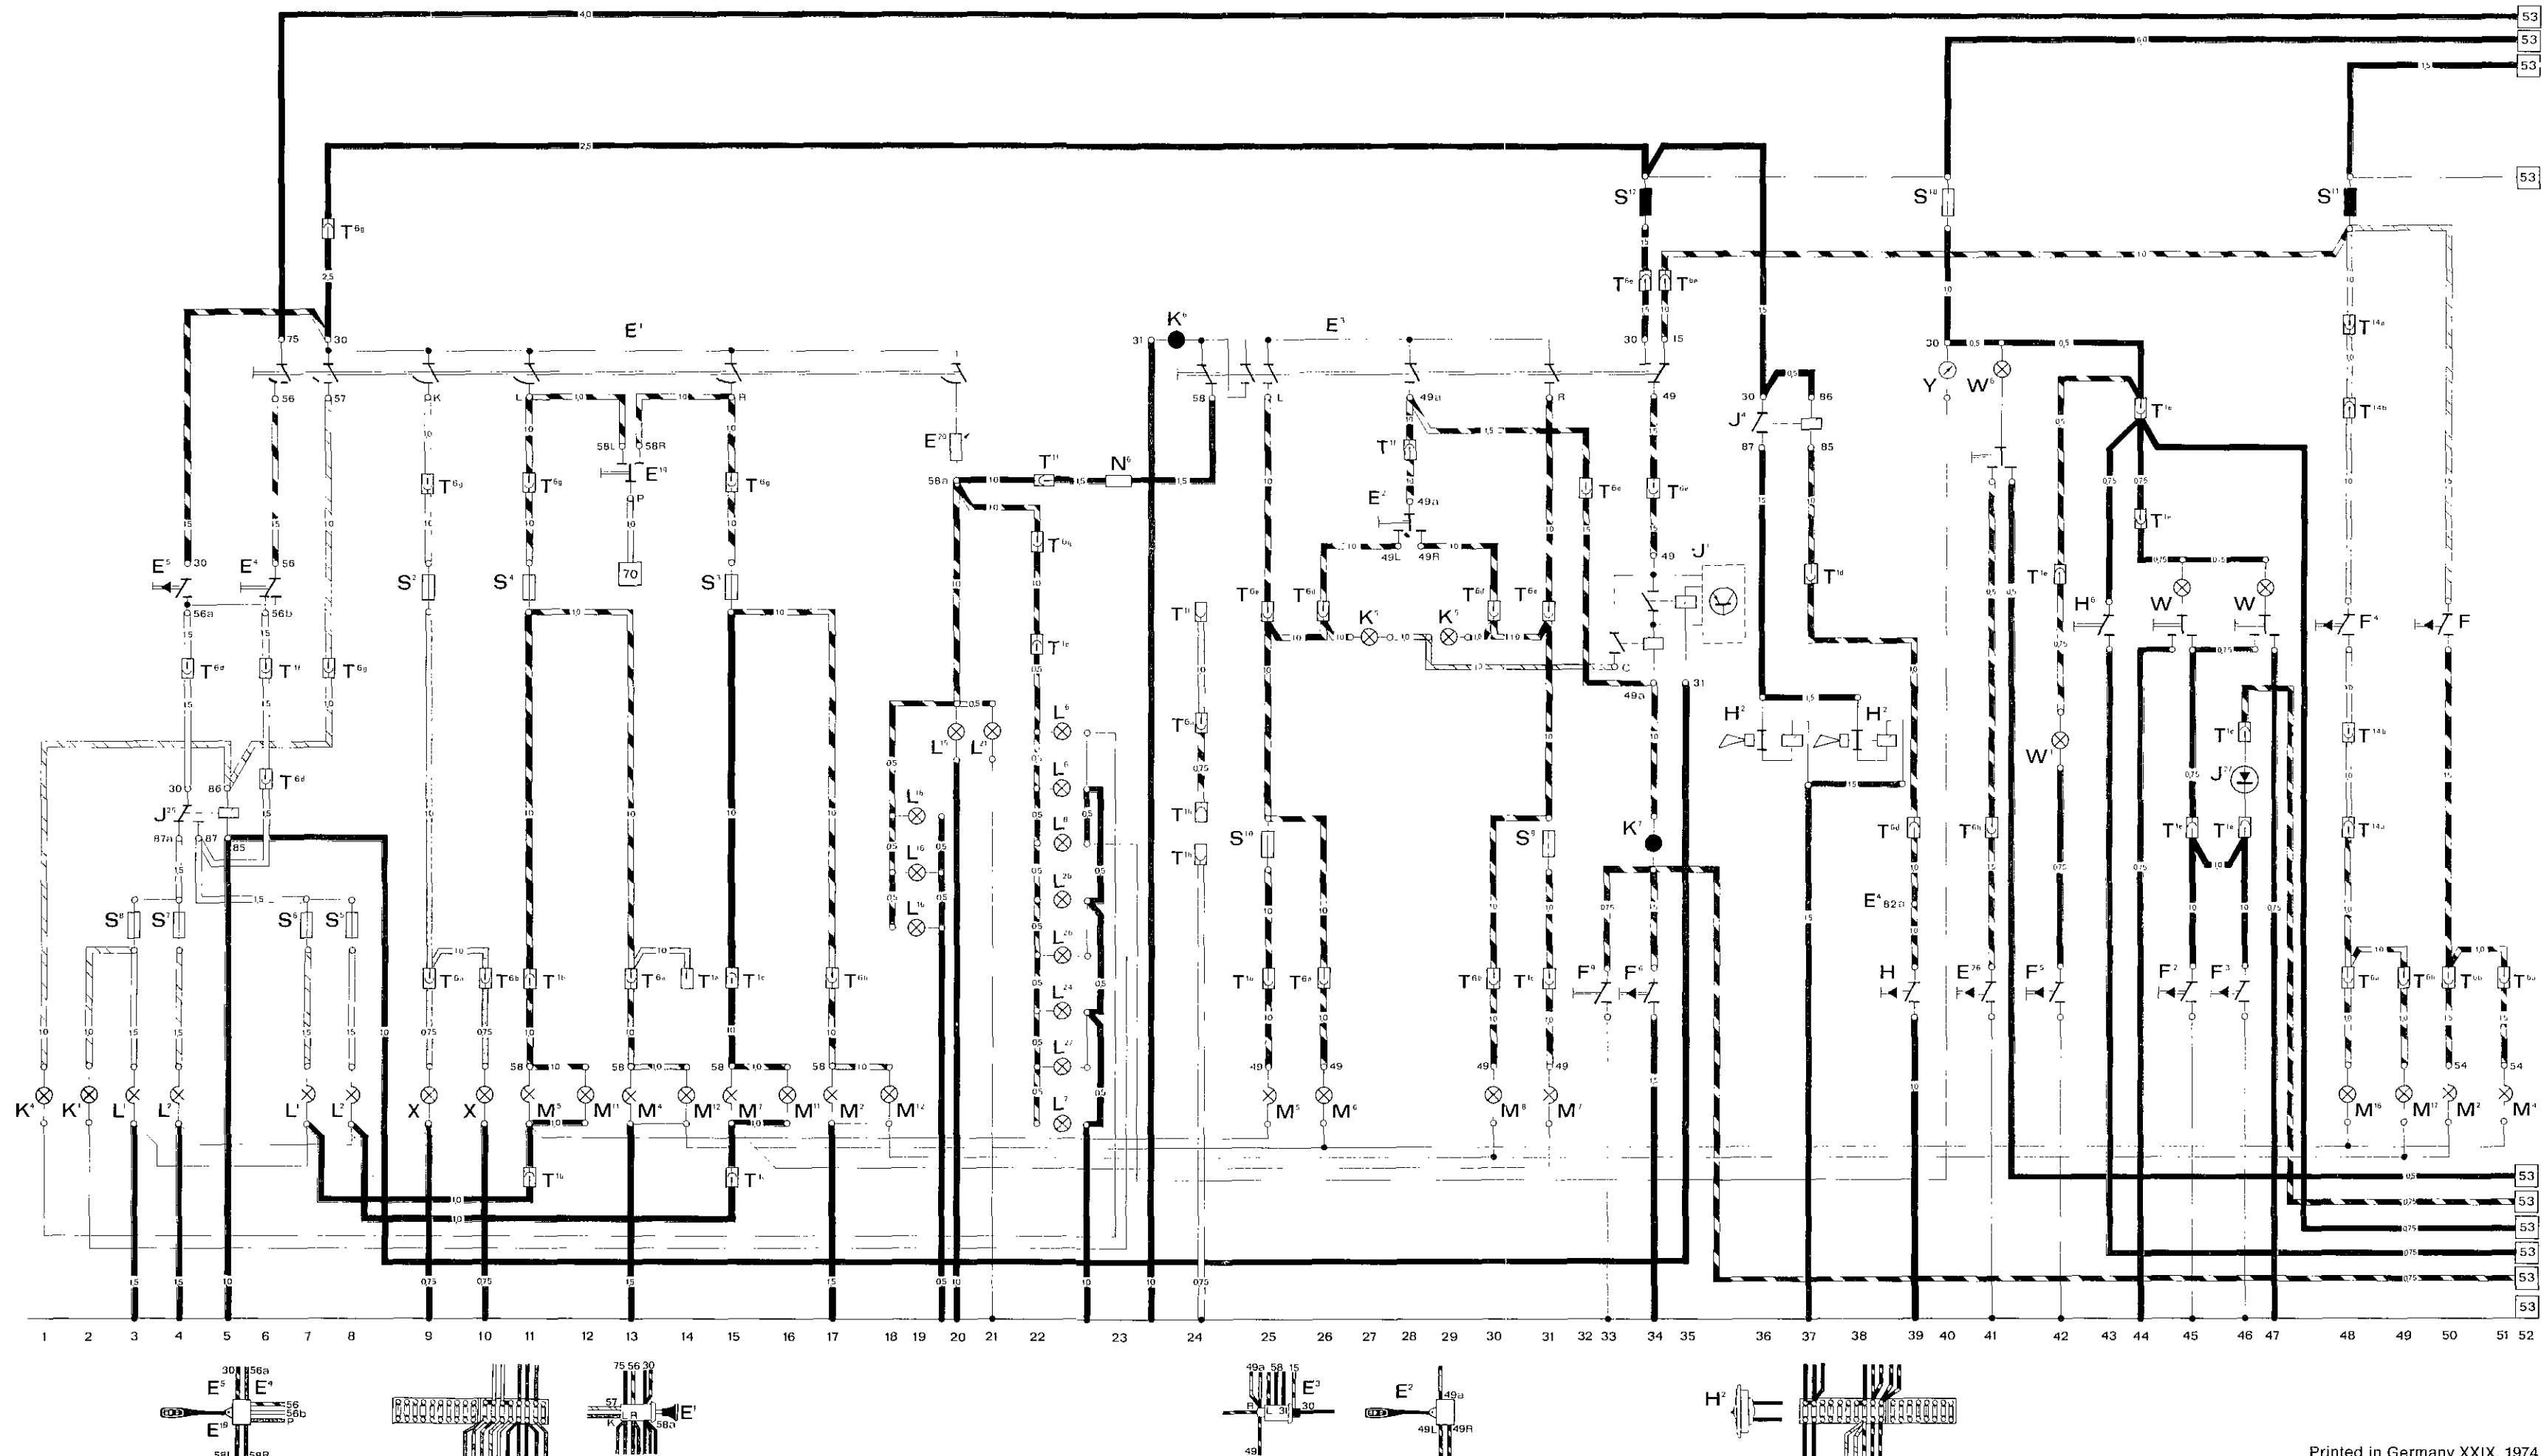

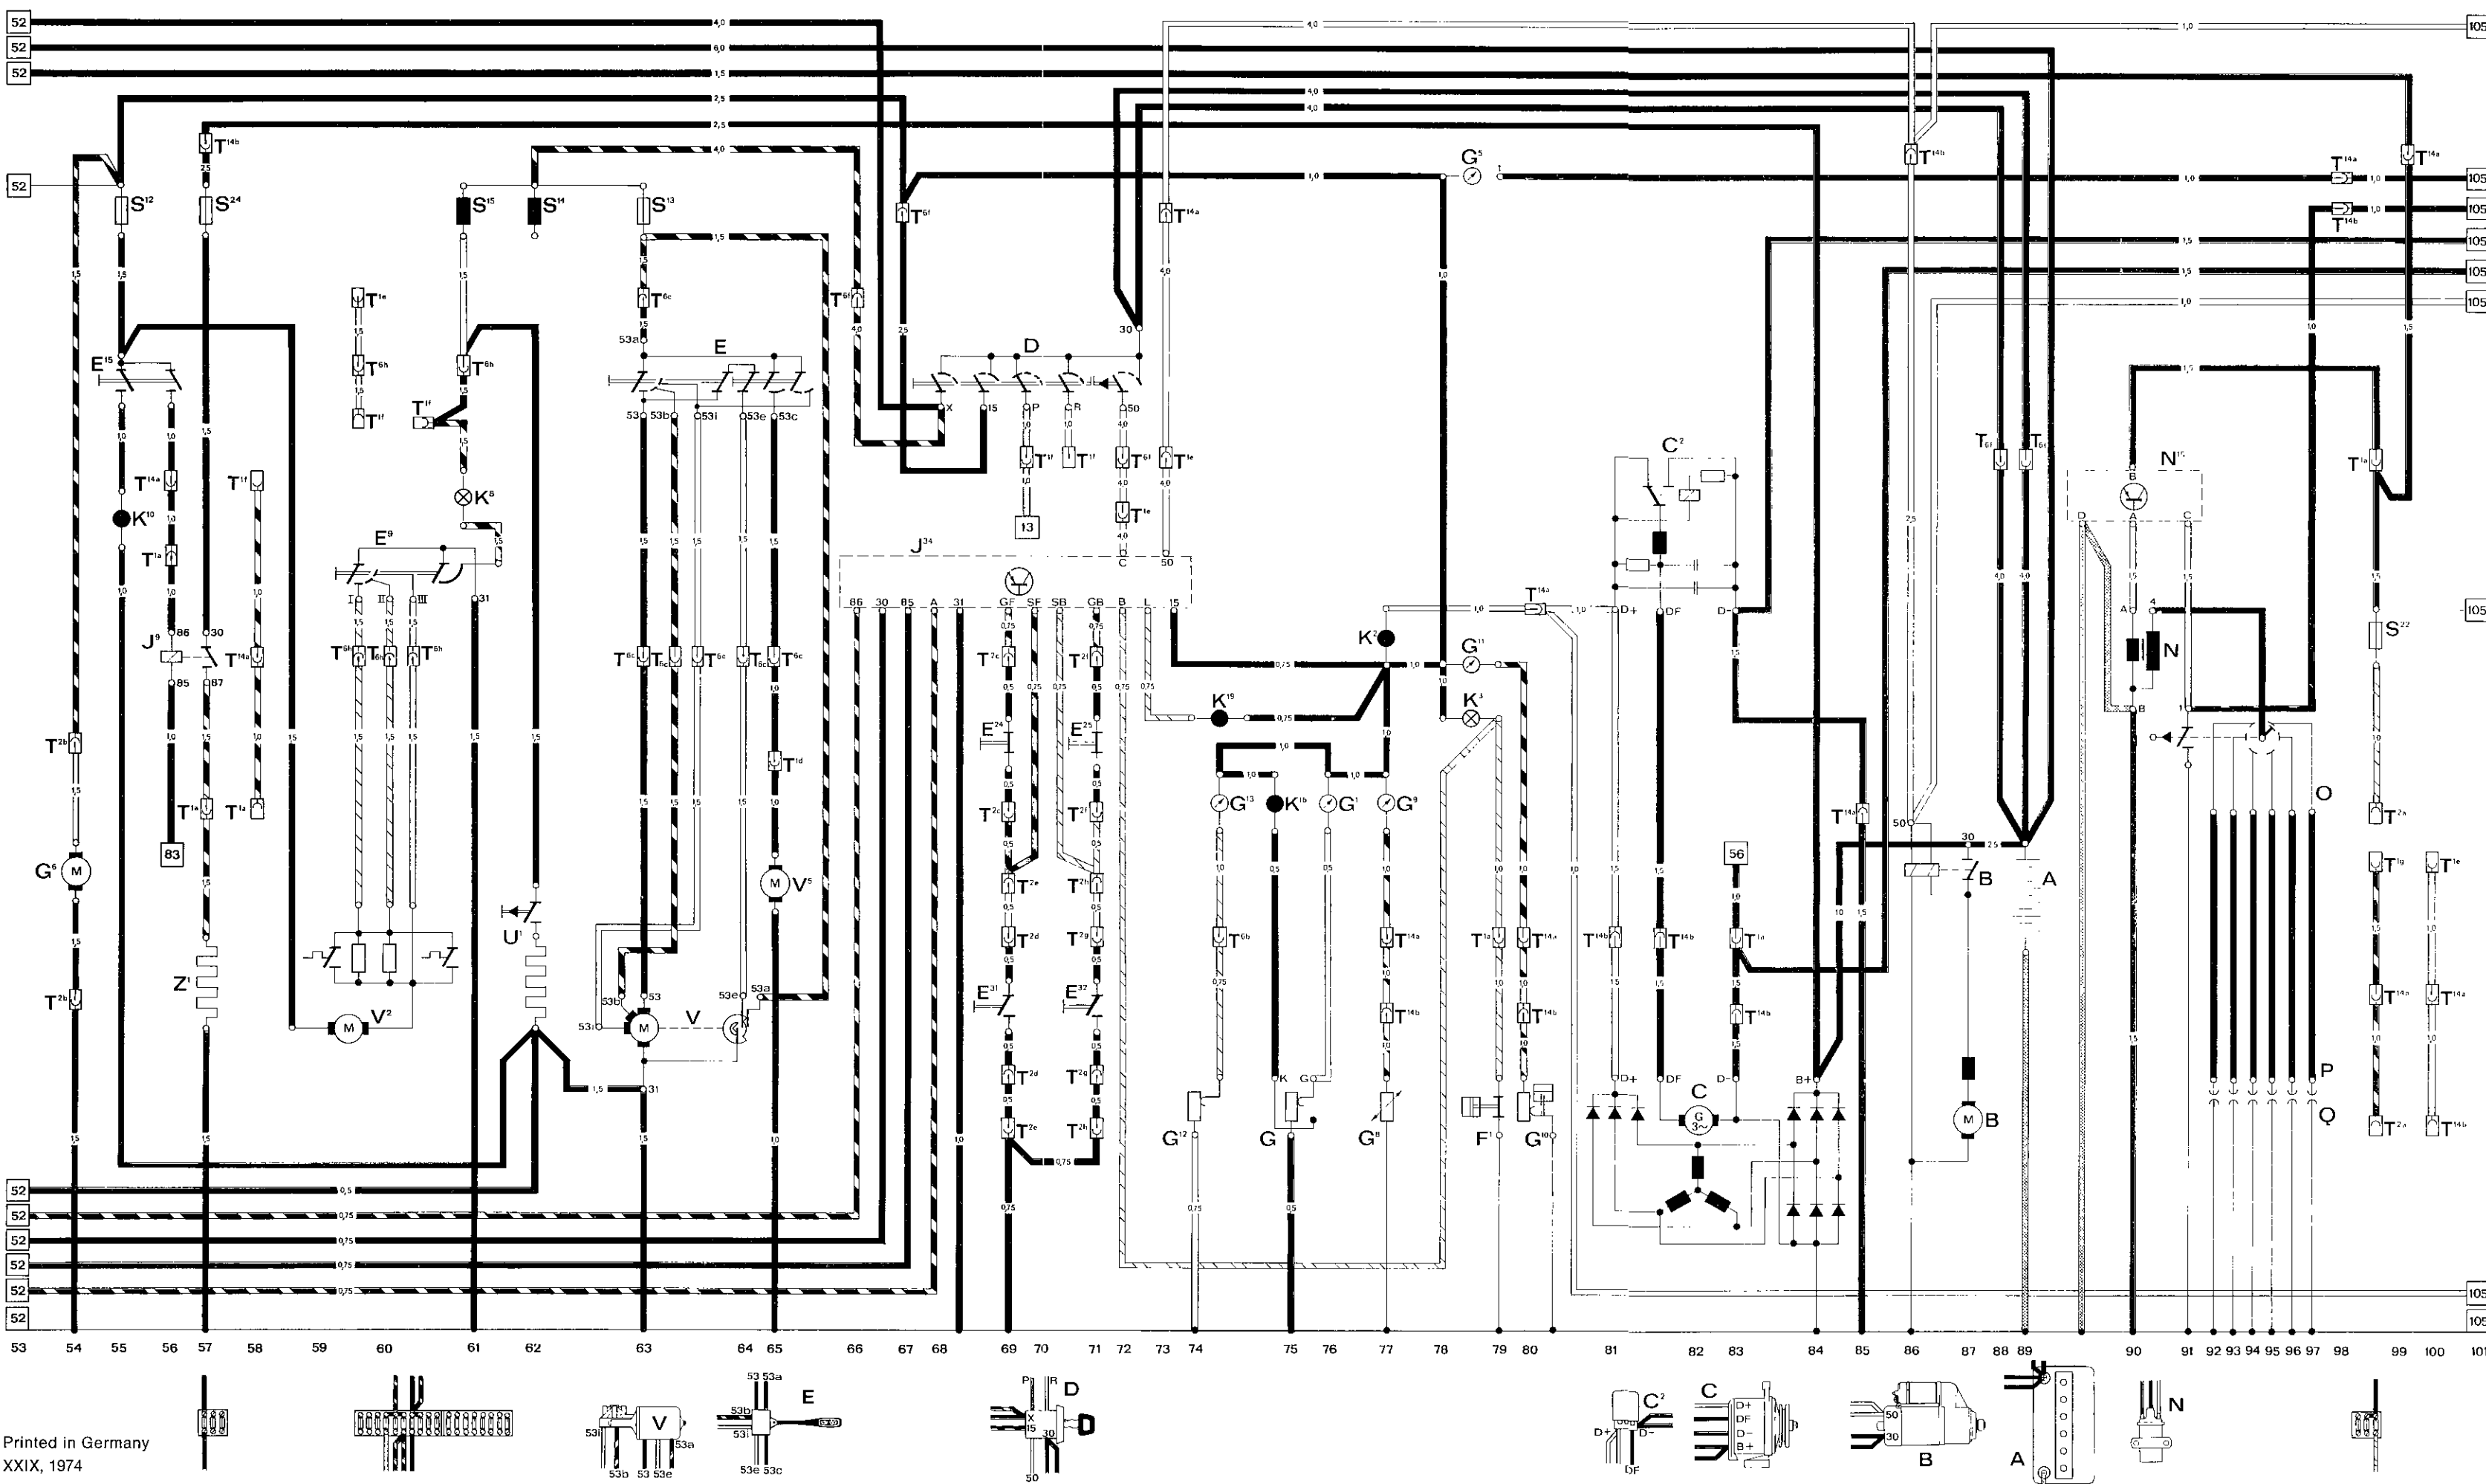


| Description | Current track |
|---|-------------------------------------|
| A — Battery | 89 |
| B — Starter | 86, 87 |
| C — Generator | 81, 82, 83, 84 |
| C ² — Voltage regulator | 81, 82, 83 |
| D — Ignition / starter switch | 68, 69, 70, 71, 72 |
| E — Windshield wiper switch | 63, 64, 65 |
| E ⁹ — Fresh air blower switch | 60 |
| E ¹⁵ — Rear window defogger switch | 55, 56 |
| E ²⁴ — Left seat belt switch | 69 |
| E ²⁵ — Right seat belt switch | 71 |
| E ³¹ — Left seat sensor switch | 69 |
| E ³² — Right seat sensor switch | 71 |
| F ¹ — Oil pressure switch | 79 |
| G — Fuel sender unit | 75 |
| G ¹ — Fuel gauge | 76 |
| G ⁵ — Tachometer | 78 |
| G ⁶ — Fuel pump | 54 |
| G ⁸ — Oil temperature sender unit | 77 |
| G ⁹ — Oil temperature indicator | 77 |
| G ¹⁰ — Oil pressure sender unit | 80 |
| G ¹¹ — Oil pressure indicator | 78 |
| G ¹² — Oil level sender unit | 74 |
| G ¹³ — Oil level gauge | 74 |
| J ⁹ — Rear window defogger relay | 56, 57 |
| J ³⁴ — Seat belt warning system relay with integrated buzzer | 66, 67, 68, 69, 70, 71, 72, 73 |
| K ² — Generator charge indicator light | 77 |
| K ³ — Oil pressure indicator light | 78 |
| K ⁸ — Blower indicator light | 61 |
| K ¹⁰ — Rear window defogger indicator light | 55 |
| K ¹⁶ — Low fuel warning light | 75 |
| K ¹⁹ — Seat belt warning light | 74 |
| N — Ignition transformer | 90 |
| N ¹⁵ — High tension ignition unit | 90 |
| O — Distributor | 91, 92, 93, 94, 95, 96, 97 |
| P — Spark plug connector | 92, 93, 94, 95, 96, 97 |
| Q — Spark plug | 92, 93, 94, 95, 96, 97 |
| S ¹² — Fuses | 55, 63 |
| to — on the | 62 |
| S ¹⁵ — fuse box | 61 |
| S ²² — Fuses on the | 99 |
| S ²⁴ — rear fuse box (regulator panel) | 57 |
| T ¹ — Cable connector, single | |
| a — near regulator panel | 56, 57, 58, 79, 83, 99 |
| d — behind fuse box | 65 |
| e — on luggage compartment floor | 60, 72, 73, 100 |
| f — behind instrument panel | 58, 60, 61, 69, 70 |
| g — below shift lever housing | 99 |
| T ² — Cable connector, double | |
| a — below regulator panel | 99 |
| b — in engine compartment, left | 54 |
| c — near left seat | 69 |
| d — below left seat | 69 |
| e — near left seat | 69 |
| f — near right seat | 71 |
| g — below right seat | 71 |
| h — near right seat | 71 |
| T ⁶ — Cable connector, sixfold | |
| b — in engine compartment, right | 74 |
| c — below instrument panel | 63, 64, 65 |
| f — below instrument panel | 66, 67, 72, 88, 89 |
| h — below instrument panel | 60, 61 |
| T ¹⁴ — Cable connector, fourteenfold | |
| a — on regulator panel, front | 56, 58, 73, 77, 80, 85, 98, 99, 100 |
| b — on regulator panel, rear | 57, 77, 80, 81, 83, 86, 98, 100 |
| U ¹ — Cigar lighter | 62 |
| V — Windshield wiper motor | 63, 64 |
| V ² — Blower motor | 60 |
| V ⁵ — Washer pump | 65 |
| Z ¹ — Rear window defogger | 57 |

Additional current flow diagram CIS-injection engine, Type 911, Model 74


9

| Description | Current track |
|---|---------------|
| F25 - Throttle valve switch | 109 |
| F26 - Thermo-switch for cold start valve | 109 |
| J15 - Relay for warm-up regulator | 107, 108 |
| N9 - Warm-up regulator | 107 |
| N17 - Cold start valve | 110 |
| S23 - Fuse on the rear fuse box | 106 |
| T14b - Cable connector, fourteenfold on regulator panel, rear | 107 |

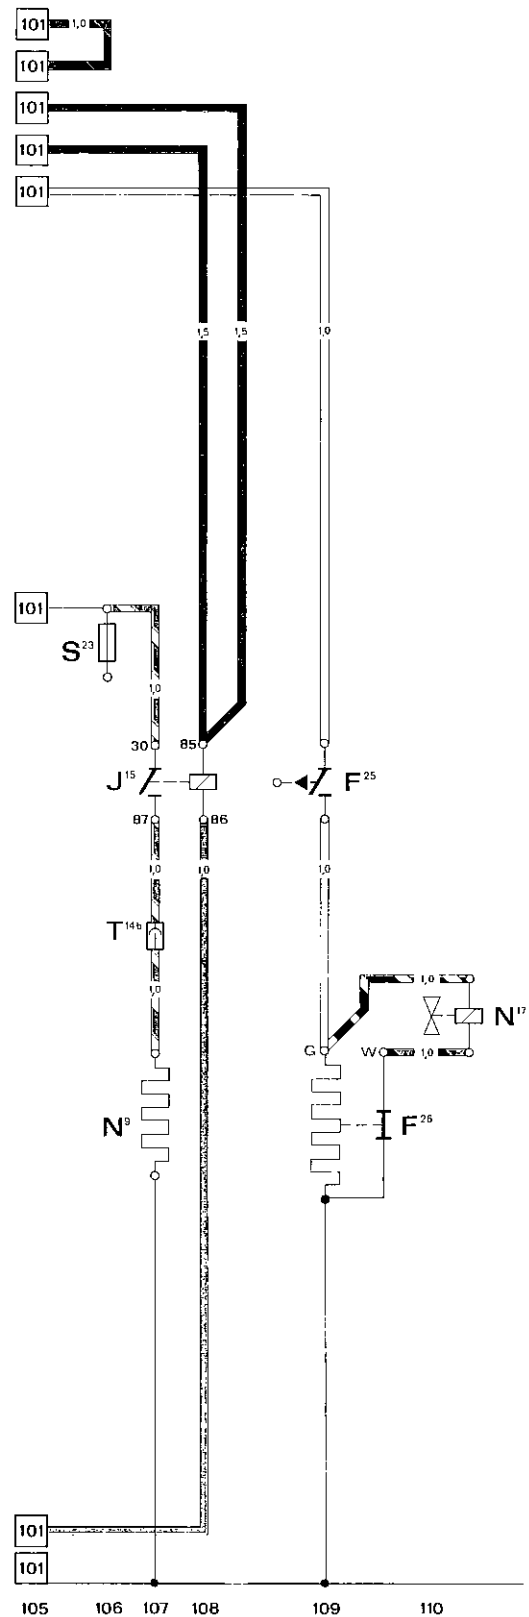

Additional current flow diagram CIS-injection and Sportomatic, Type 911, Model 74

| Description | Current track |
|---|--------------------|
| B - Starter | 114, 115 |
| C - Generator | 110, 111 |
| D - to ignition / starter switch | 115 |
| E ¹⁷ - Starter cutout switch (bypass switch) | 111, 112 |
| E ²¹ - Selector lever contact | 109 |
| F ⁴ - Back-up light switch | 115, 116 |
| F ¹³ - Oil temperature switch | 118 |
| F ²⁵ - Throttle valve switch (micro switch) | 112 |
| F ²⁶ - Thermo-switch for cold start valve | 112 |
| J ¹⁵ - Relay for warm-up regulator | 106, 107 |
| K ² - Generator charge indicator light | 118 |
| K ⁹ - Oil temperature indicator light | 118 |
| M ¹⁶ - Left back-up light | 116 |
| M ¹⁷ - Right back-up light | 117 |
| N ⁷ - Control valve | 109 |
| N ⁹ - Warm-up regulator | 107 |
| N ¹⁷ - Cold start valve | 113 |
| S ¹¹ - Fuse on the fuse box | 116 |
| S ²² - Fuse on the rear fuse box (regulator panel) | 109 |
| S ²³ - Fuse on the rear fuse box (regulator panel) | 108 |
| T ² - Cable connector, double, below regulator panel | 109 |
| T ⁶ - Cable connector, sixfold | |
| a - in engine compartment, rear left | 116 |
| b - in engine compartment, rear right | 117 |
| T ¹⁴ - Cable connector, fourteenfold | |
| a - on regulator panel, front | 109, 116, 118 |
| b - on regulator panel, rear | 107, 115, 116, 118 |

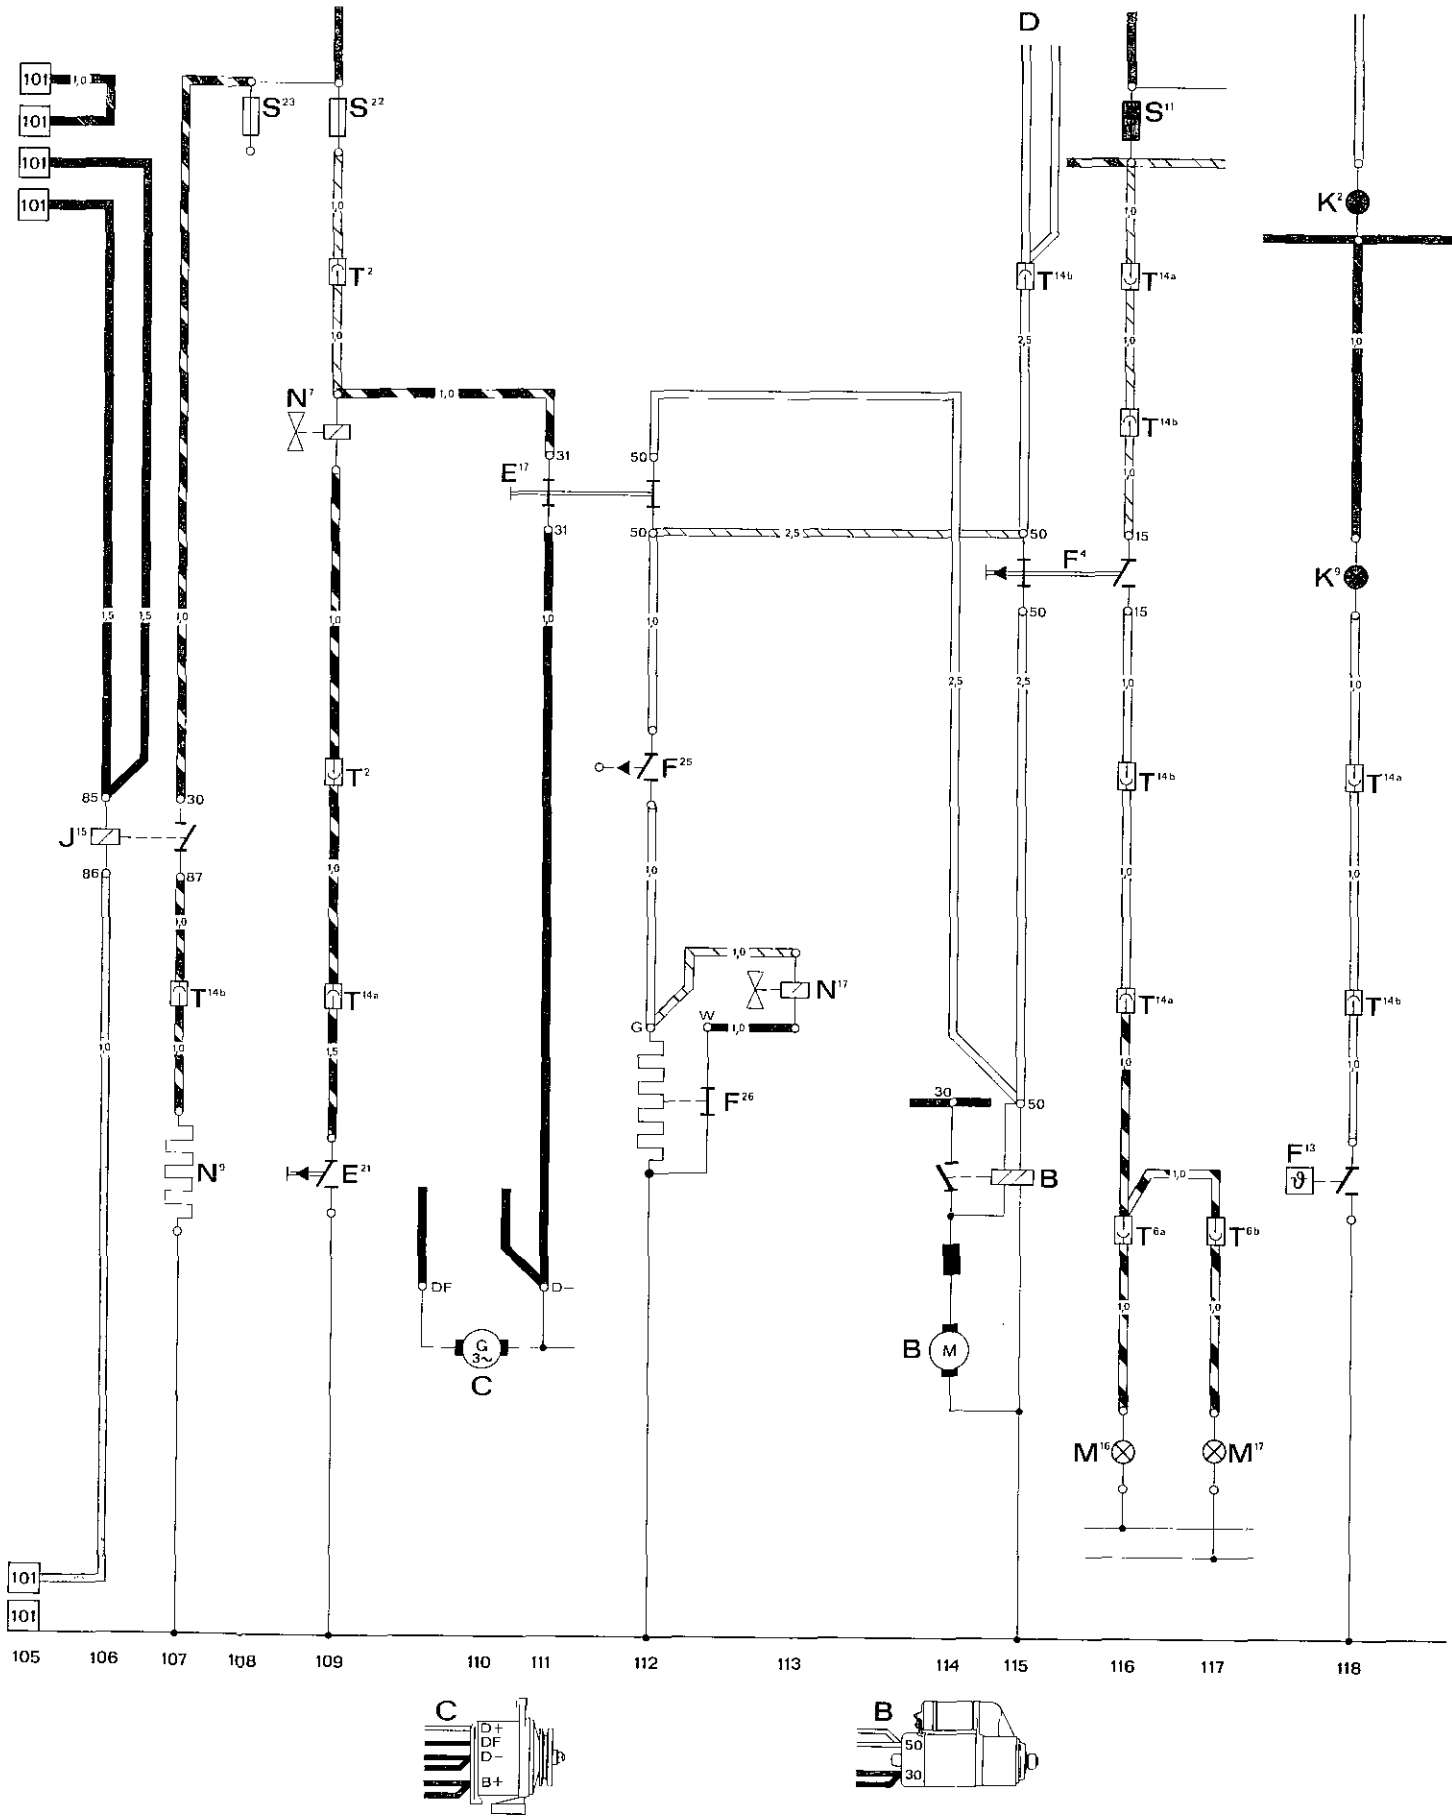


**Additional current flow diagram CIS-injection
and Sportomatic, Type 911, Model 74**

9


Additional current flow diagram automatic heating system, Type 911

9

| Description | Current track |
|---|---------------|
| D - to ignition/starter switch | 6 |
| E ¹³ - Control unit for automatic heating system | 4, 5 |
| E ²⁰ - Instrument panel illumination potentiometer | 1 |
| L ⁶ - Speedometer illumination light | 3 |
| N ²⁸ - Interior temperature sensor | 5 |
| N ²⁹ - Exterior temperature sensor | 4 |
| S ¹¹ - Fuses in the | 4 |
| S ¹² - fuse box | 5 |
| T ^{1e} - Cable connector, single, on luggage compartment floor | 2 |

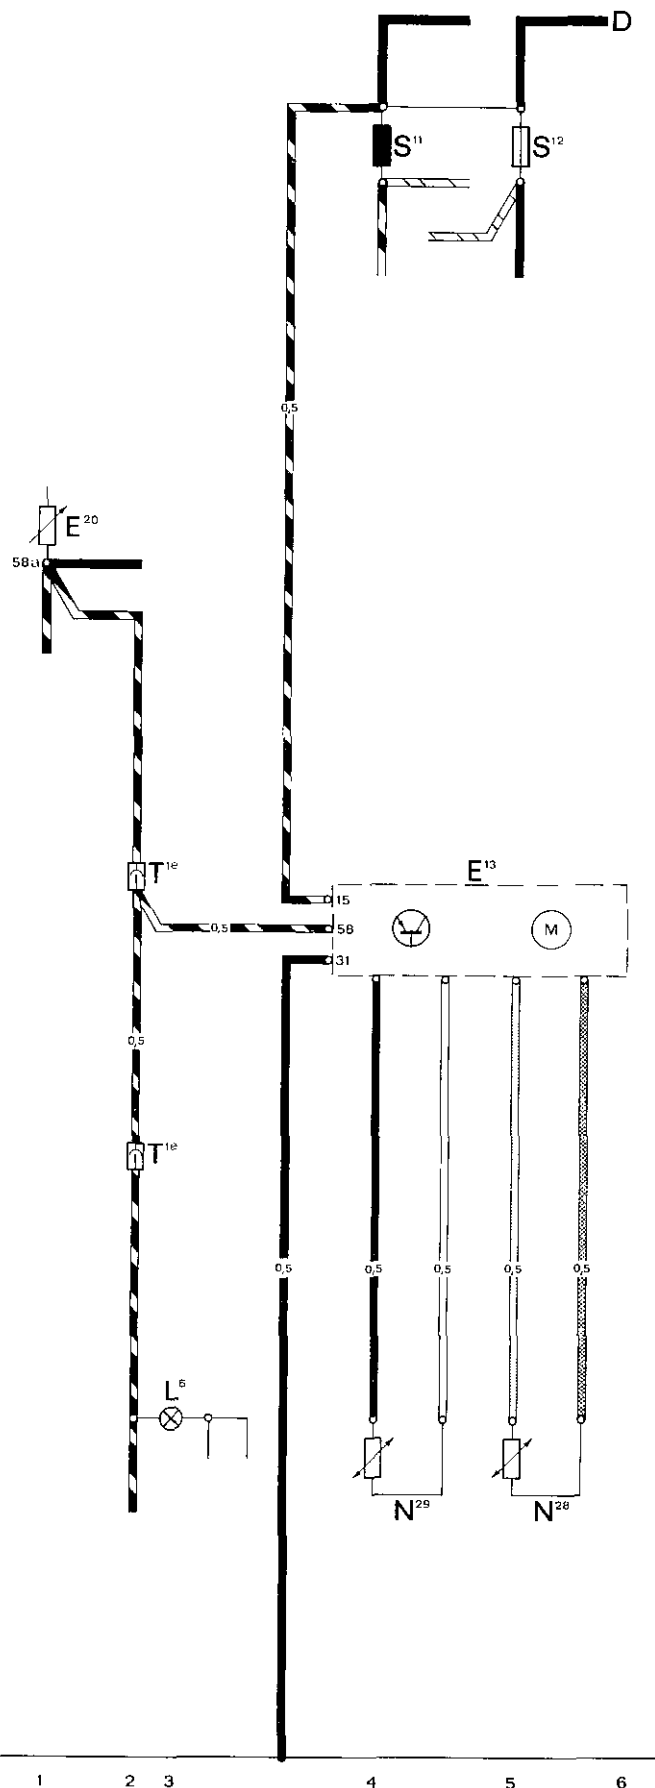

Current flow diagram, Type 911 USA, Model 75

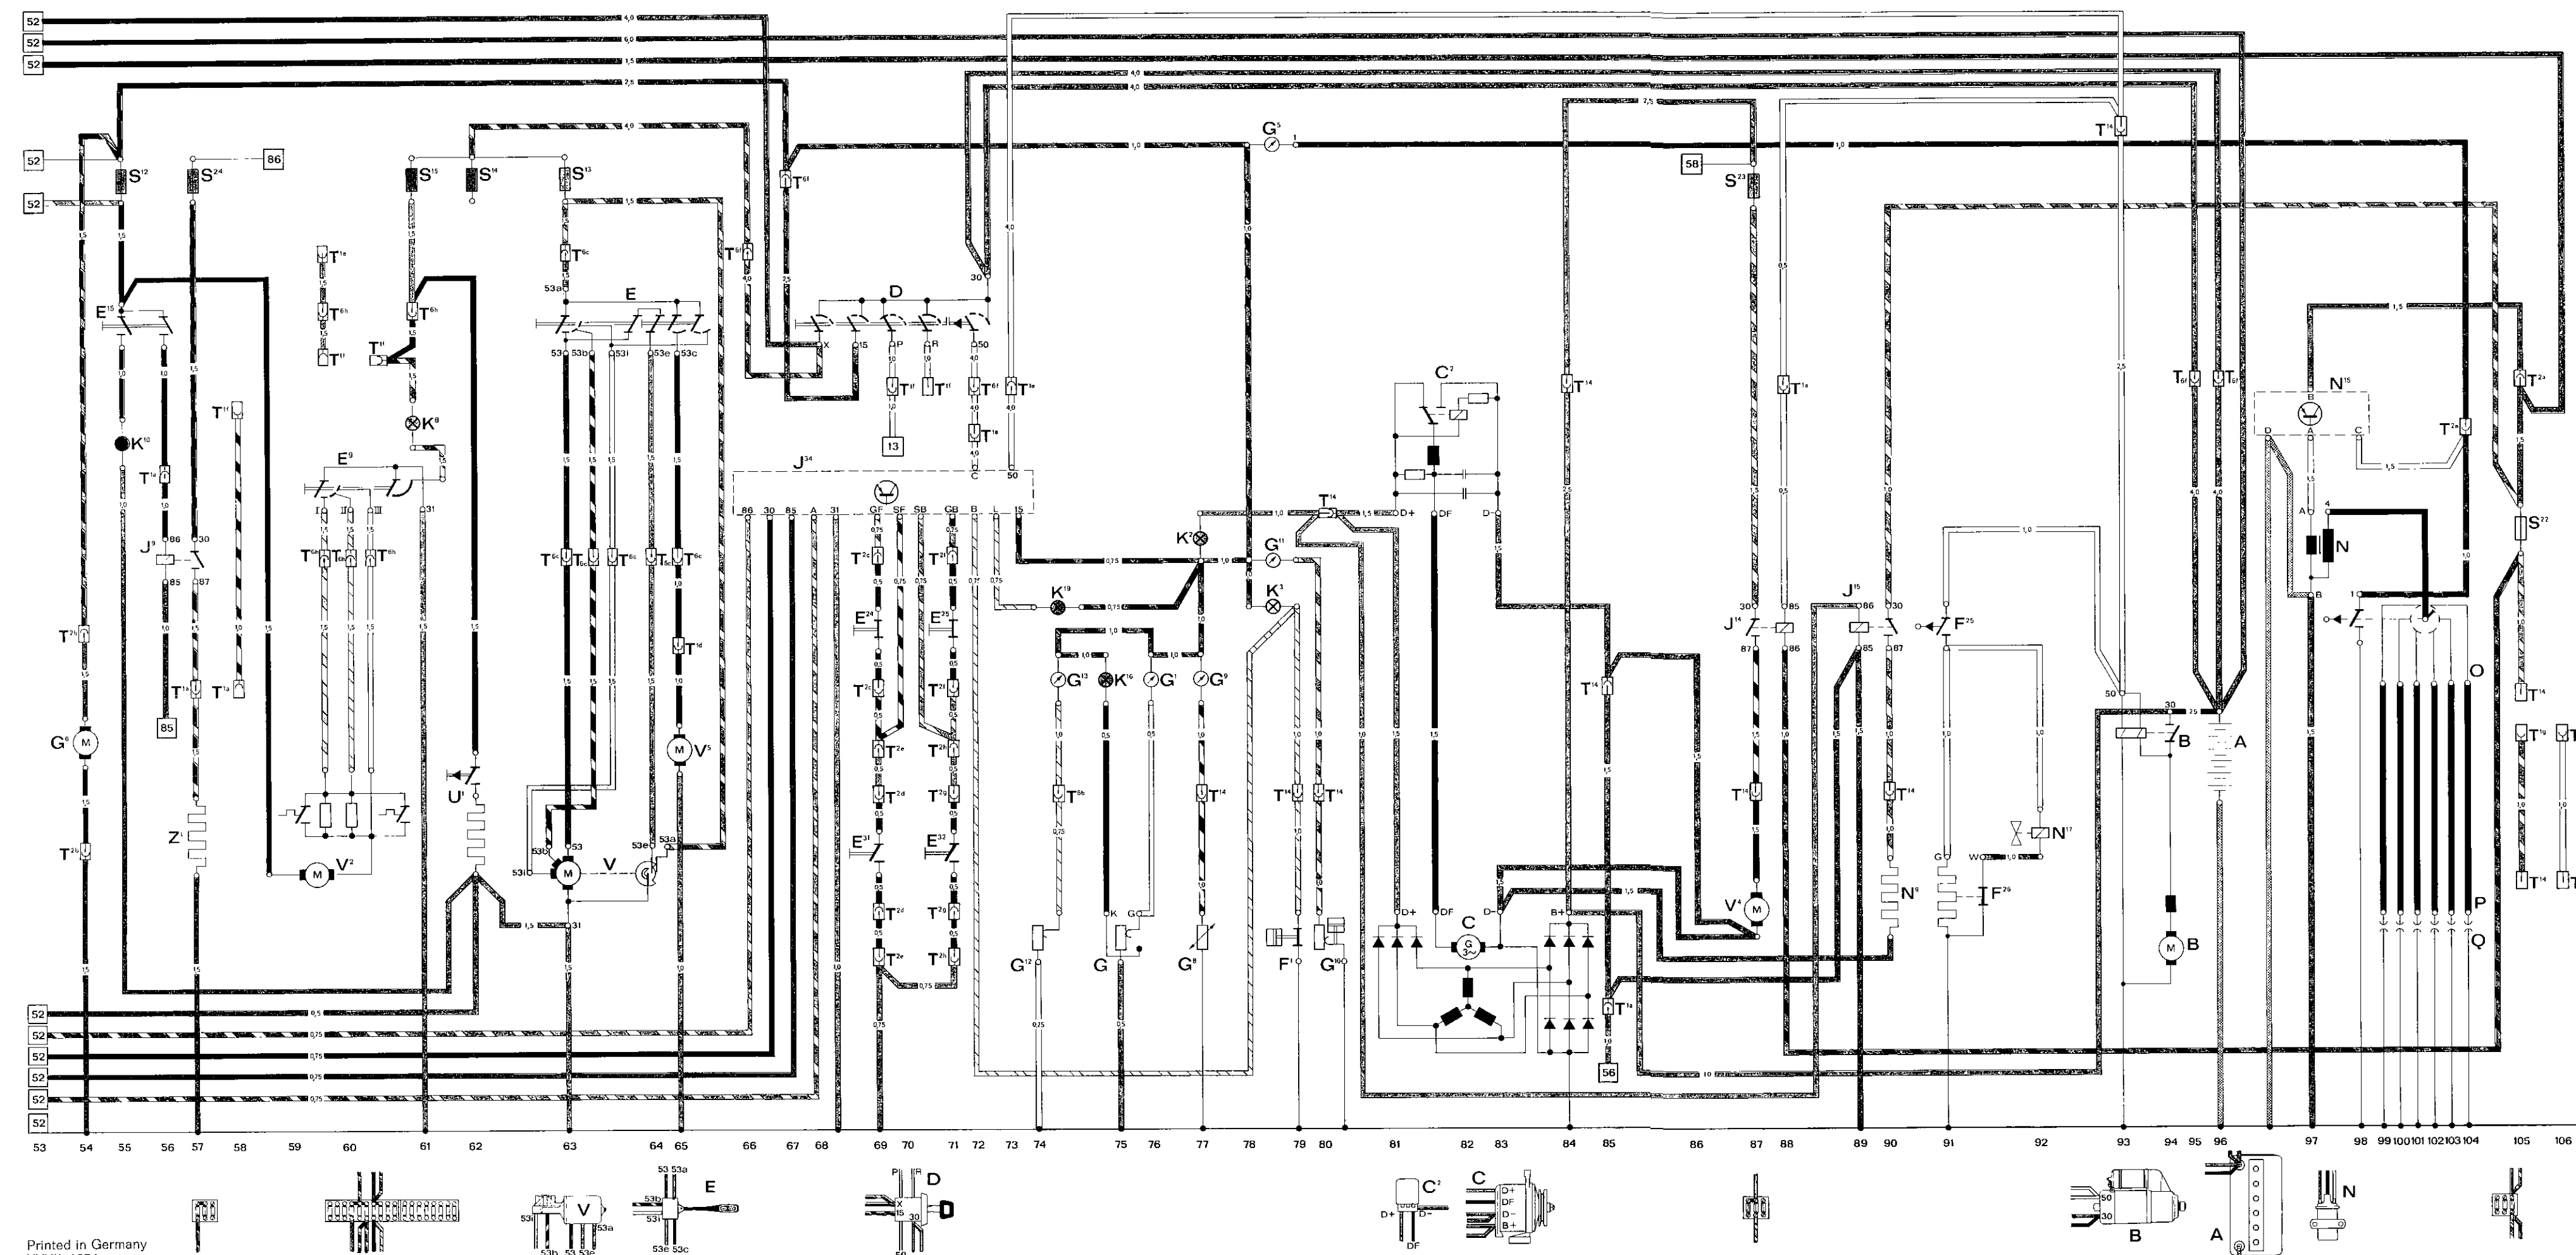

| Description | Current track |
|---|--|
| A — Battery | 96 |
| B — Starter | 83, 94 |
| C — Generator | 81, 82, 83, 84 |
| C2 — Voltage regulator | 81, 82, 83 |
| D — Ignition / starter switch | 88, 69, 70, 71, 72 |
| E — Windshield wiper switch | 63, 64, 65 |
| E9 — Fresh air blower switch | 60 |
| E15 — Rear window defogger switch | 55, 56 |
| E24 — Left seat belt switch | 69 |
| E25 — Right seat belt switch | 71 |
| E31 — Left seat sensor switch | 69 |
| E32 — Right seat sensor switch | 71 |
| F1 — Oil pressure switch | 79 |
| F25 — Throttle valve switch | 91 |
| F26 — Thermo-switch for cold start valve | 91 |
| G — Fuel sender unit | 75 |
| G1 — Fuel gauge | 76 |
| G5 — Tachometer | 78 |
| G6 — Fuel pump | 54 |
| G8 — Oil temperature sender unit | 77 |
| G9 — Oil temperature indicator | 77 |
| G10 — Oil pressure sender unit | 80 |
| G11 — Oil pressure indicator | 78 |
| G12 — Oil level sender unit | 74 |
| G13 — Oil level gauge | 74 |
| J9 — Rear window defogger relay | 56, 57 |
| J14 — Relay for heater blower | 87, 88 |
| J15 — Relay for warm-up regulator | 89, 90 |
| J34 — Seat belt warning system relay with integrated buzzer | 66, 67, 68, 69 |
| K2 — Generator charge indicator light | 70, 71, 72, 73 |
| K3 — Oil pressure indicator light | 78 |
| K8 — Blower indicator light | 61 |
| K10 — Rear window defogger indicator light | 55 |
| K15 — Low fuel warning light | 75 |
| K16 — Seat belt warning light | 74 |
| N — Ignition transformer | 97 |
| N1 — Warm-up regulator | 90 |
| N17 — High tension ignition unit | 97 |
| O — Cold start valve | 92 |
| O — Distributor | 98—104 |
| P — Spark plug connector | 99—104 |
| Q — Spark plug | 99—104 |
| S12 — Fuses | 55, 63 |
| S15 — on the fuse box | 62 |
| S22 — Fuses on the rear fuse box (regulator panel) | 61 |
| S24 — Fuses on the rear fuse box (regulator panel) | 105 |
| T1 — Cable connector, single | 87 |
| a — near regulator panel | 56, 57, 58, 85, 88 |
| d — behind fuse box | 65 |
| e — on luggage compartment floor | 60, 72, 73 |
| f — behind instrument panel | 58, 60, 61, 69, 70 |
| g — below shift lever housing | 105 |
| T2 — Cable connector, double | |
| a — below regulator panel | 104, 105 |
| b — in engine compartment, left | 54 |
| c — near left seat | 69 |
| d — below left seat | 69 |
| e — near left seat | 69 |
| f — near right seat | 71 |
| g — below right seat | 71 |
| h — near right seat | 71 |
| T6 — Cable connector, sixfold | |
| b — in engine compartment, right | 74 |
| c — below instrument panel | 63, 64, 65 |
| f — below instrument panel | 66, 67, 72, 95, 96 |
| h — below instrument panel | 60, 61 |
| T14 — Cable connector, fourteenfold on regulator panel | 77, 79, 80, 84, 85, 87, 90, 93, 105, 106 |
| U1 — Cigar lighter | 62 |
| V — Windshield wiper motor | 63, 64 |
| V2 — Blower motor | 60 |
| V4 — Heater blower | 87 |
| V5 — Washer pump | 65 |
| Z1 — Rear window defogger | 57 |

Current flow diagram, Type 911 USA, Model 75

Additional current flow diagram California, Type 911, Model 75


9

Description

- F²⁷ - Mileage counter switch (EGR)
- G⁹ - Oil temperature indicator
- K² - Generator charge indicator light
- K²² - EGR warning light
- L⁷ - Fuel gauge illumination light
- L²⁴ - Oil temperature indicator illumination light
- L²⁷ - Oil pressure indicator illumination light

Current track

- 2
- 1
- 1
- 2
- 1
- 1
- 1

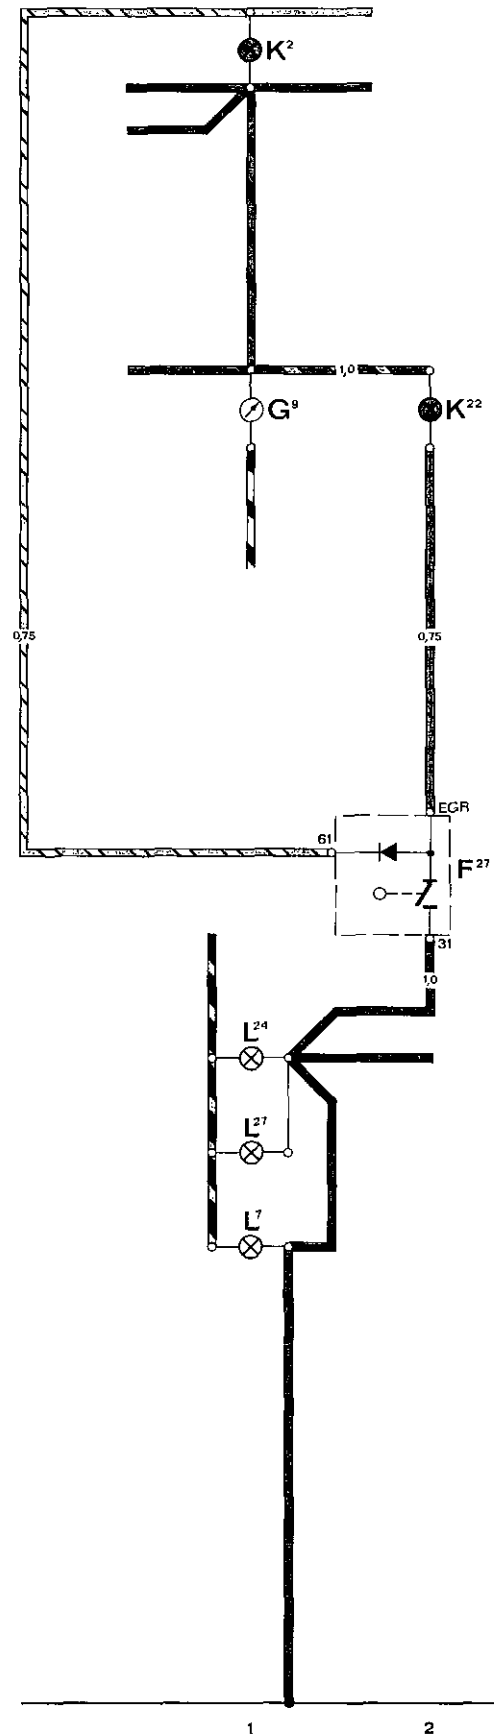

Additional current flow diagram intermittent wiper operation, Type 911


9

Description

- D - to ignition/starter switch
- E - Windshield wiper switch
- E³⁸ - Potentiometer for intermittent wiper operation
- J³¹ - Relay for intermittent wiper operation
- S¹³ - Fuses in the
- S¹⁴ - fuse box
- T¹ - Cable connector, single, on luggage compartment floor
- T^{6c} - Cable connector, sixfold, below instrument panel
- V - Windshield wiper motor


Current track

- 2
- 2, 3, 4
- 5, 6
- 3, 4, 5
- 2
- 1
- 3
- 2
- 2, 3

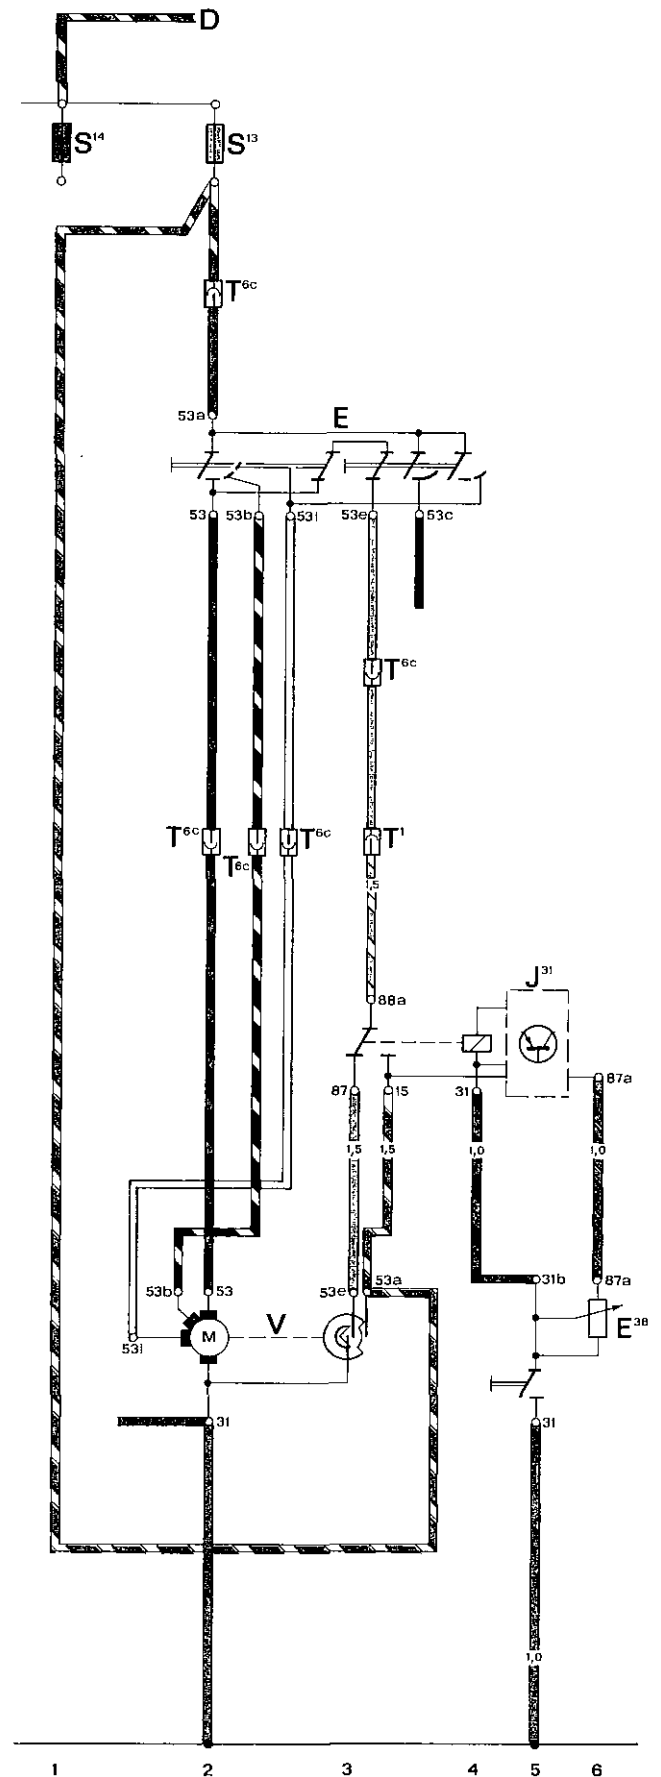

Additional current flow diagram
headlight washers, Type 911

| Description | Current track |
|--|---------------|
| A - to battery | 7 |
| D - to ignition/starter switch | 1 |
| E ¹ - Headlight switch | 1, 2, 3 |
| E ⁴ - Dimmer switch | 1 |
| E ³⁷ - Headlight washer switch | 4 |
| J ²⁵ - to headlight relay (from model 76 to fuse S ⁶) | 1 |
| J ³⁹ - Headlight washer relay | 5, 6, 7 |
| S ¹⁷ - to fuse S ¹⁷ | 2 |
| S ² - Fuses | 3 |
| S ¹⁸ - in the | 6 |
| S ¹⁹ - fuse box | 7 |
| T ^{1f} - Cable connector, single, behind instrument panel | 1 |
| T ² - Cable connector, double, near battery | 7 |
| T ⁶ - Cable connector, sixfold | |
| d - below instrument panel | 1 |
| g - below instrument panel | 3 |
| V ¹¹ - Headlight washer pump | 7 |

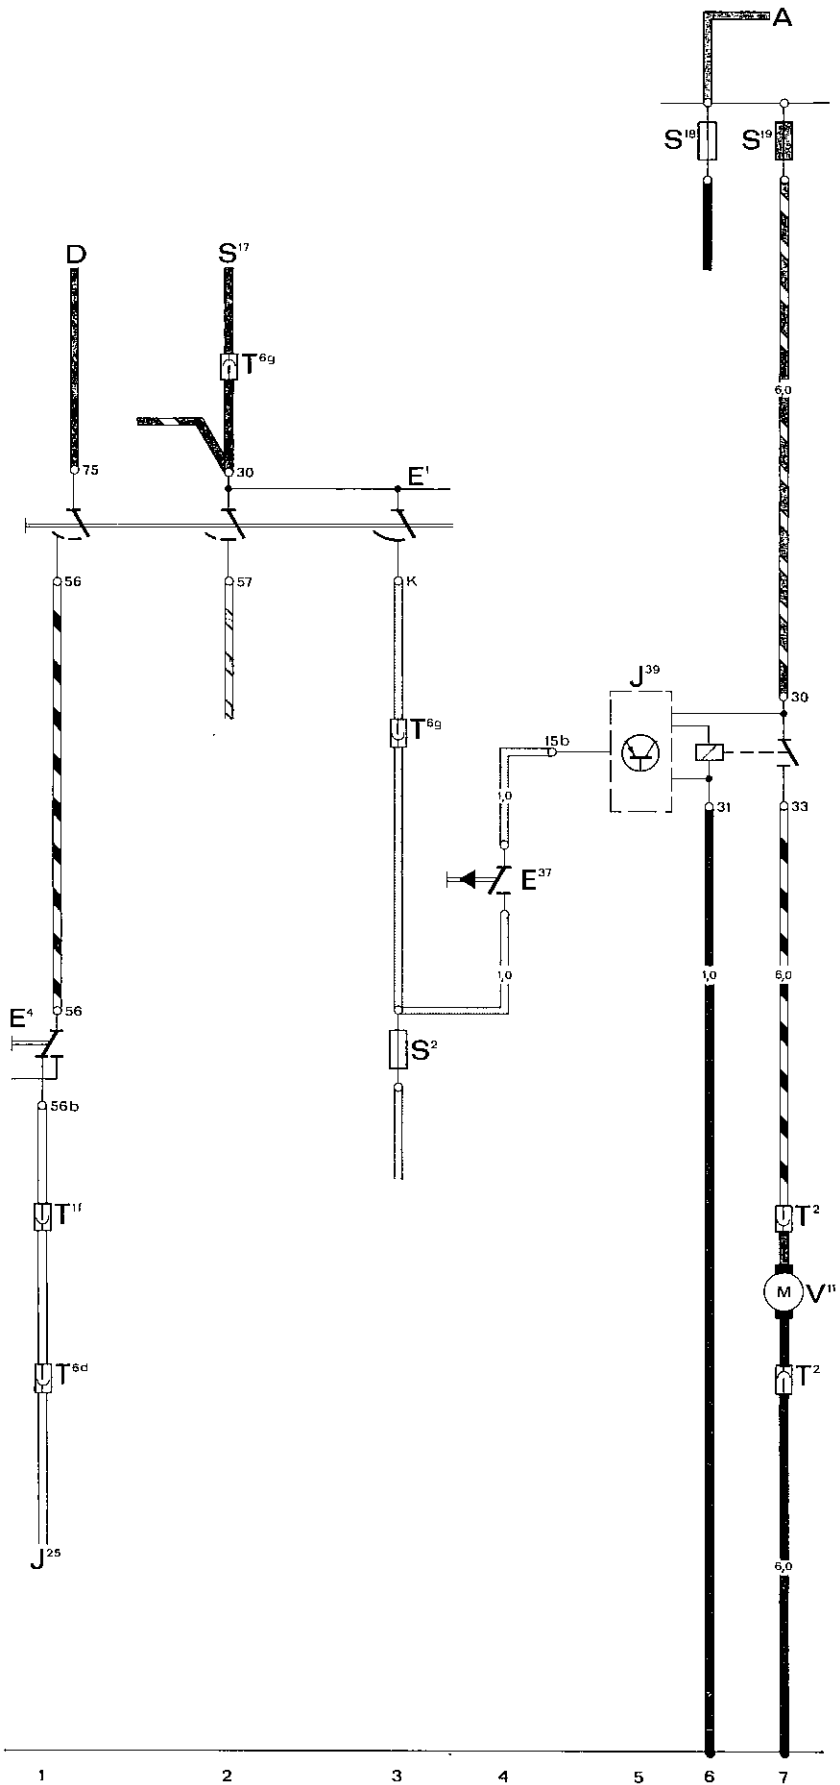


**Additional current flow diagram
headlight washers, Type 911**

9

Additional current flow diagram automatic heating system, Type 911

9

| Description | Current track |
|---|---------------|
| D - to ignition/starter switch | 6 |
| E ¹³ - Control unit for automatic heating system | 4, 5 |
| E ²⁰ - Instrument panel illumination potentiometer | 1 |
| L ⁶ - Speedometer illumination light | 3 |
| N ²⁸ - Interior temperature sensor | 5 |
| N ²⁹ - Exterior temperature sensor | 4 |
| S ¹¹ - Fuses in the | 4 |
| S ¹² - fuse box | 5 |
| T ^{1e} - Cable connector, single, on luggage compartment floor | 2 |

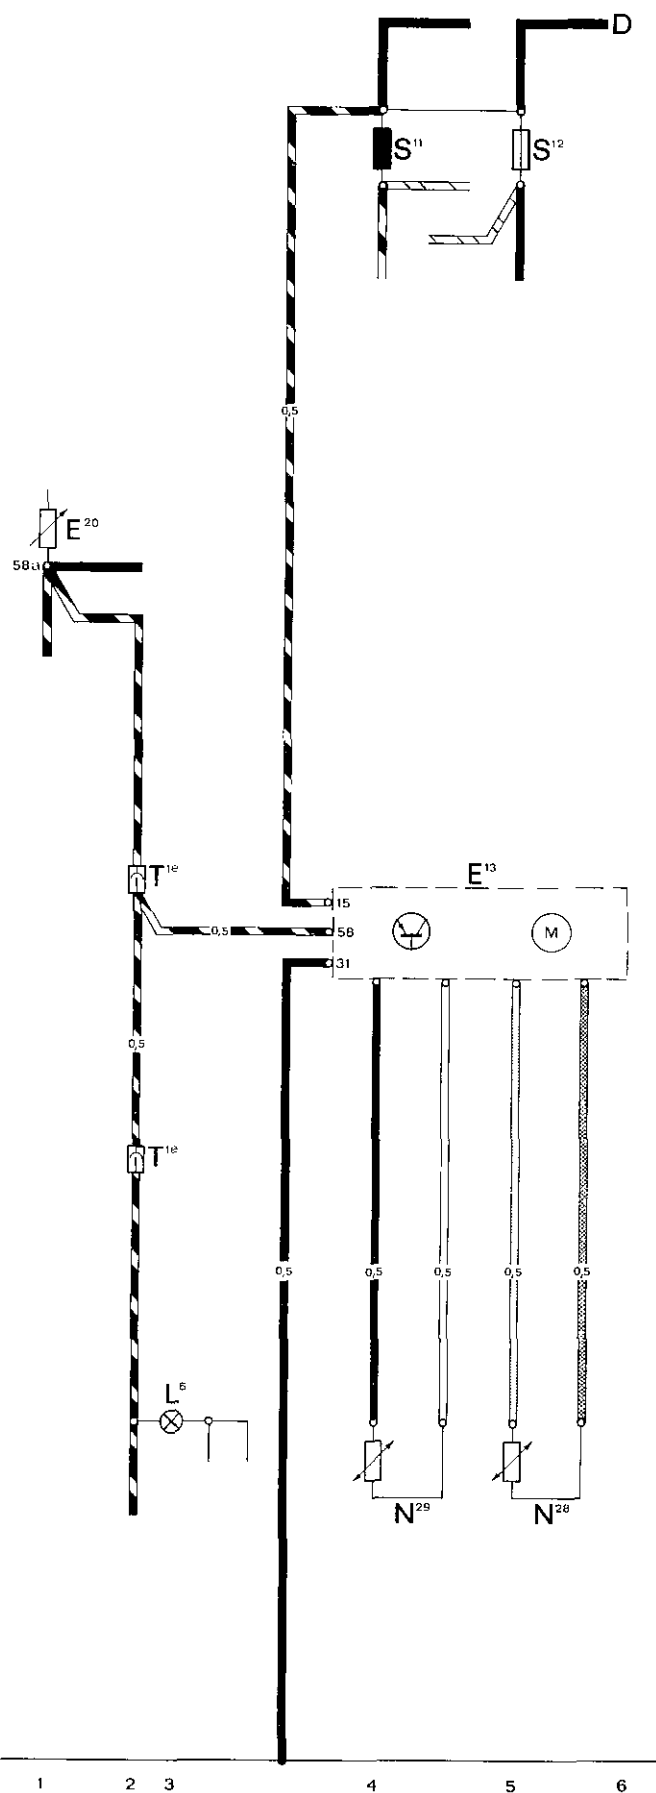

Additional current flow diagram electric sliding roof, Type 911


9

Description

- D - to ignition/starter switch
- E⁸ - Switch for sliding roof
- S¹⁴ - Fuse in the fuse box
- T¹ - Cable connector, single,
near sliding roof motor
- V¹ - Sliding roof motor

Current track

- 3
- 1, 3
- 1
- 1, 3
- 2

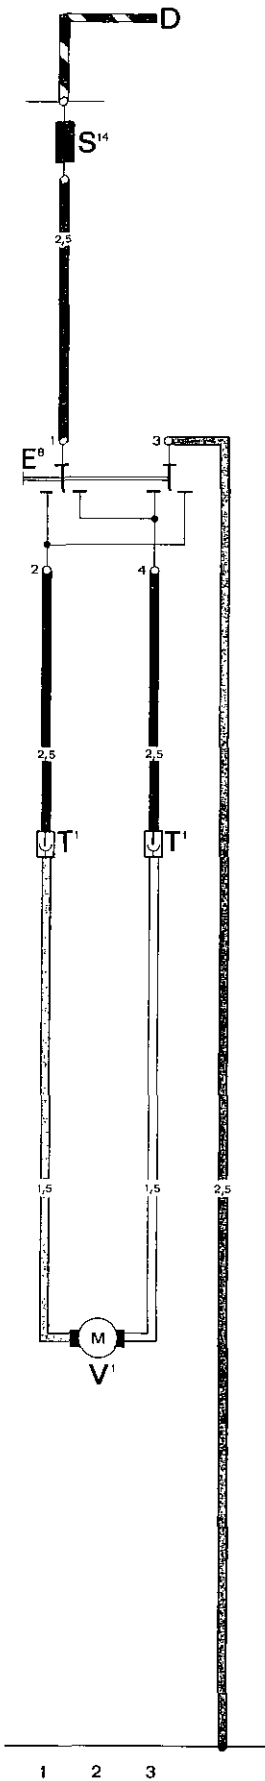

ADDITIONAL CURRENT FLOW DIAGRAM


ELECTRIC WINDOW CONTROLS

Modification - 1977 Models

The electric connection for the window regulating motor is no longer made at fuse S 16, but S 21 instead.

Additional current flow diagram
power windows, Type 911

| Description | Current track |
|--|---------------|
| A - to battery | 9 |
| D - to ignition/starter switch | 2 |
| E ³⁹ - Power window switch, driver side, for passenger side | 4, 5 |
| E ⁴⁰ - Power window switch, driver side | 8, 9 |
| E ⁴¹ - Power window switch, passenger side | 4, 5 |
| J ⁵¹ - Power window relay | 2, 3 |
| S ¹² - Fuses | 1 |
| S ¹⁶ - in | 4 |
| S ¹⁷ - the | 7 |
| S ¹⁸ - fuse box | 8 |
| T ¹ - Cable connector, single, behind fuse box | 2 |
| T ⁶ - Cable connector, sixfold | |
| a - in door well, left | 4, 5, 7 |
| b - in door well, right | 4, 5, 6 |
| V ¹⁴ - Power window motor, left | 8, 9 |
| V ¹⁵ - Power window motor, right | 4, 5 |

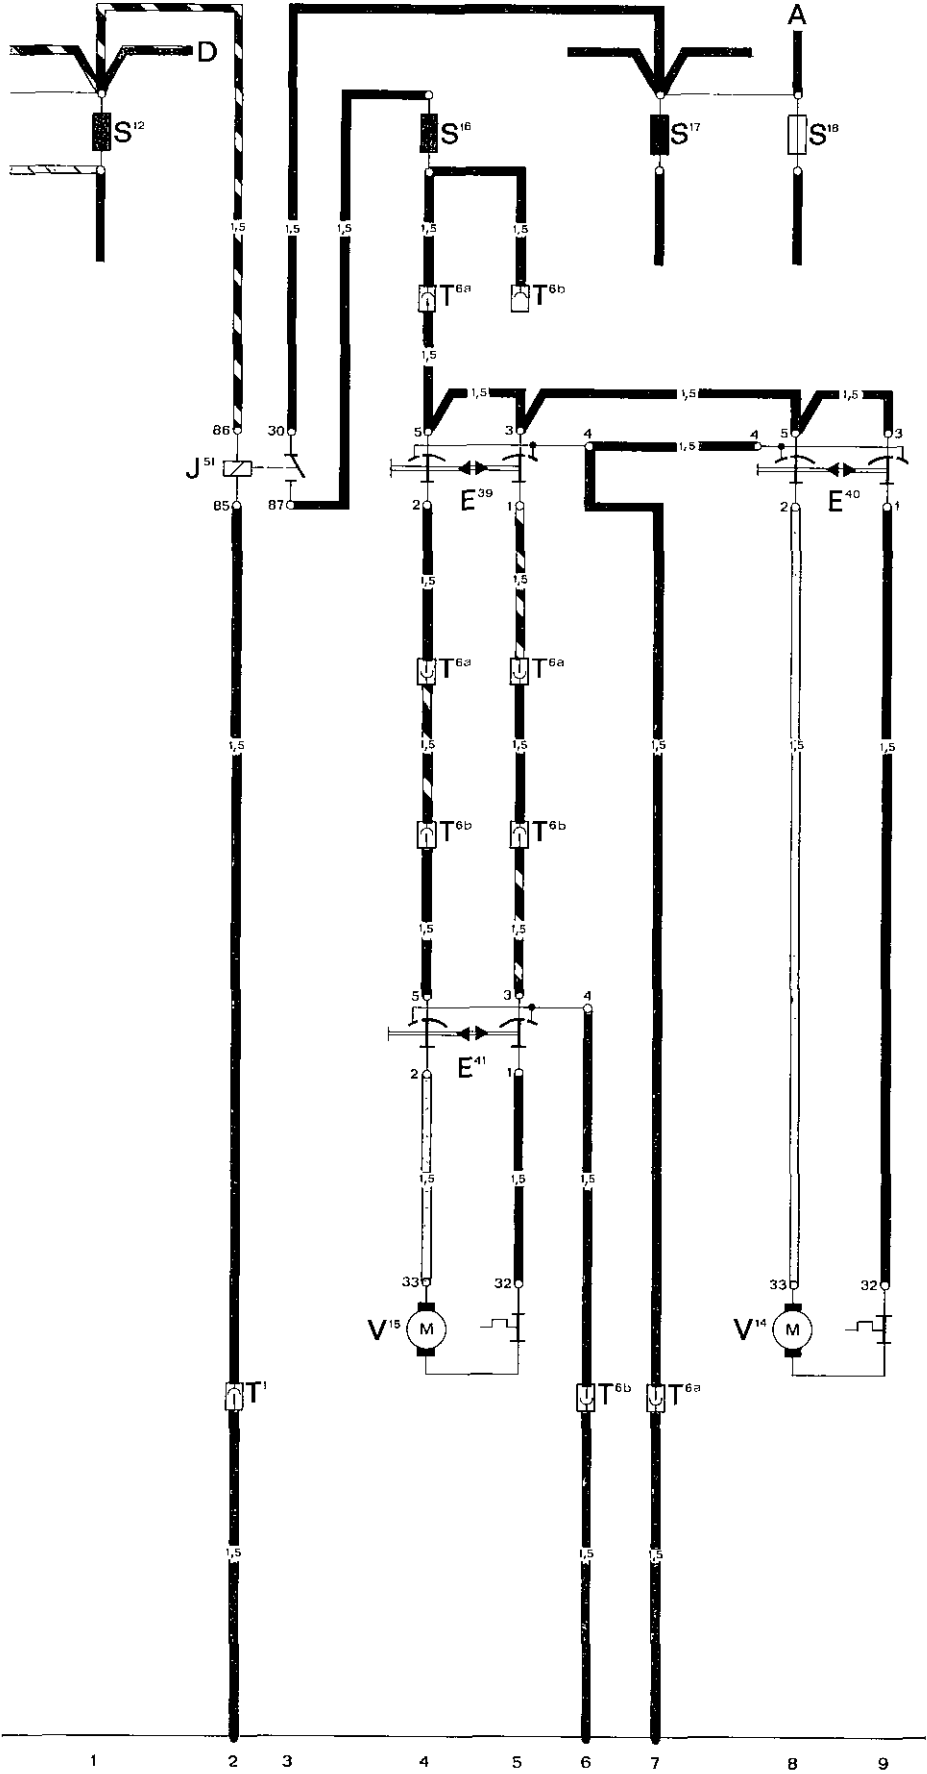

**Additional current flow diagram
power windows, Type 911**

Additional current flow diagram rear window wiper, Type 911


9

Description

- C - to generator
- D - to ignition/starter switch
- E³⁴ - Rear wiper switch
- J⁴⁶ - Diode for rear wiper
- S¹³ - Fuses
- S¹⁴ - in the
- S¹⁵ - fuse box
- S²³ - Fuses in the
- S²⁴ - rear fuse box
- T¹ - Cable connector, single
 - a - behind instrument panel
 - b - in engine compartment, left
- V¹² - Rear wiper motor


Current track

- 5
- 4
- 2, 4
- 2
- 3
- 2
- 1
- 7
- 6
- 2
- 2, 4
- 2, 4

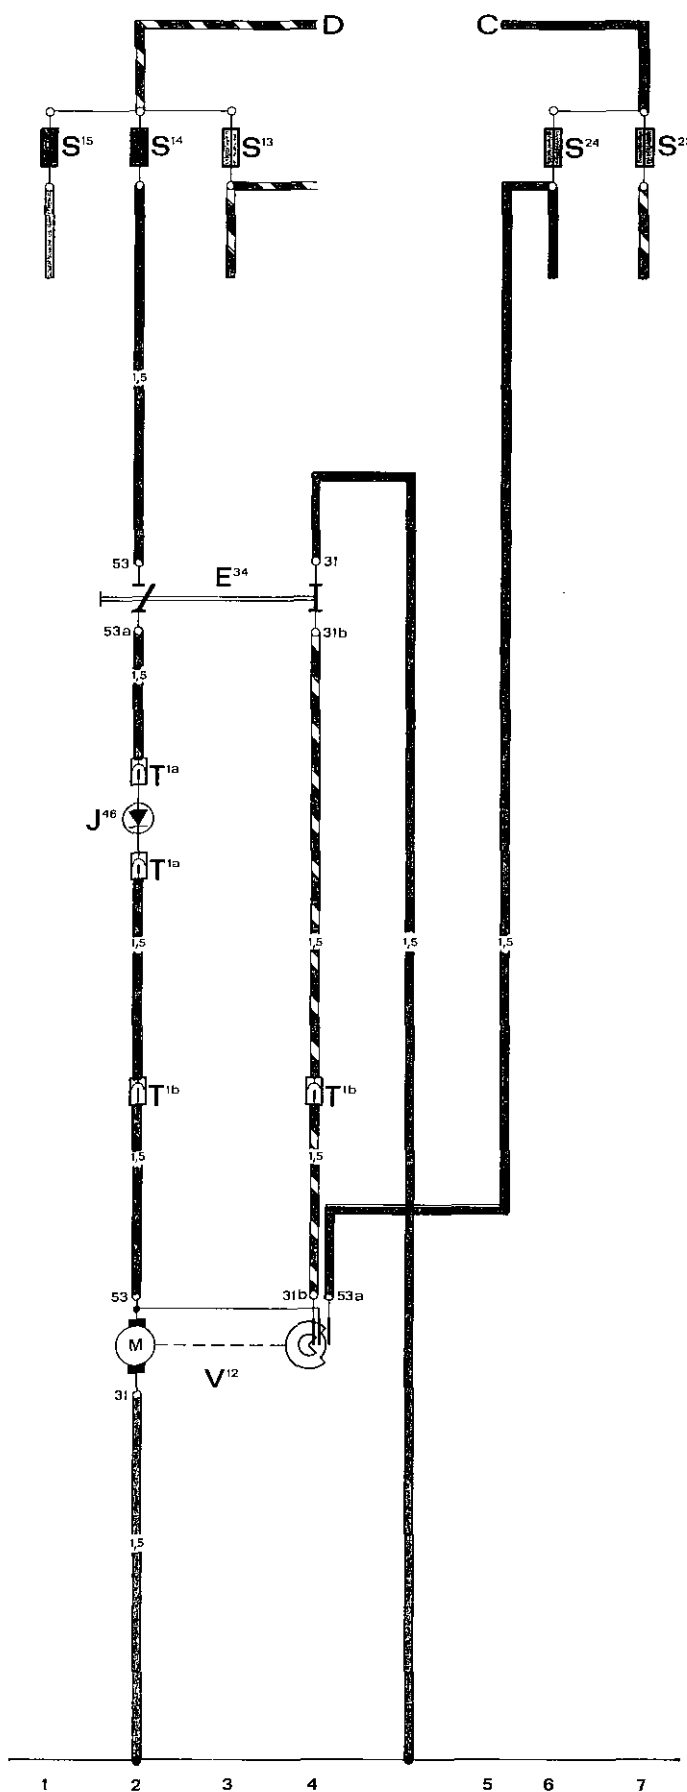

Additional current flow diagram
windshield and rear window defoggers
Type 911


| Description | Current track |
|---|---------------|
| A - to battery | 2 |
| C - to generator | 10 |
| C ² - to voltage regulator | 6 |
| D - to ignition/starter switch | 7 |
| E ³⁶ - Windshield and rear window defogger switch | 6, 8, 9 |
| J ⁴⁵ - Diode for windshield defogger | 7 |
| J ⁴⁷ - Windshield defogger relay | 4, 5 |
| J ⁴⁸ - Relay for two-stage rear window defogger | 6, 7, 8, 10 |
| K ²³ - Windshield and rear window defogger indicator light | 5 |
| S ¹² - Fuses | 6 |
| S ¹⁸ - in | 1 |
| to - the | 2, 3 |
| S ²¹ - fuse box | 4 |
| S ²³ - Fuses in the | 11 |
| S ²⁴ - rear fuse box | 10 |
| T ¹ - Cable connector, single | |
| a - below regulator panel | 6, 10 |
| b - behind fuse box | 4 |
| T ² - Cable connector, double, below regulator panel | 7, 8 |
| T ¹⁴ - Cable connector, fourteenfold | 6 |
| U ¹ - to cigar lighter | 5 |
| Z ¹ - Rear window defogger, stage 1 | 7 |
| Z ² - Windshield defogger | 4 |
| Z ³ - Rear window defogger, stage 2 | 8, 9 |

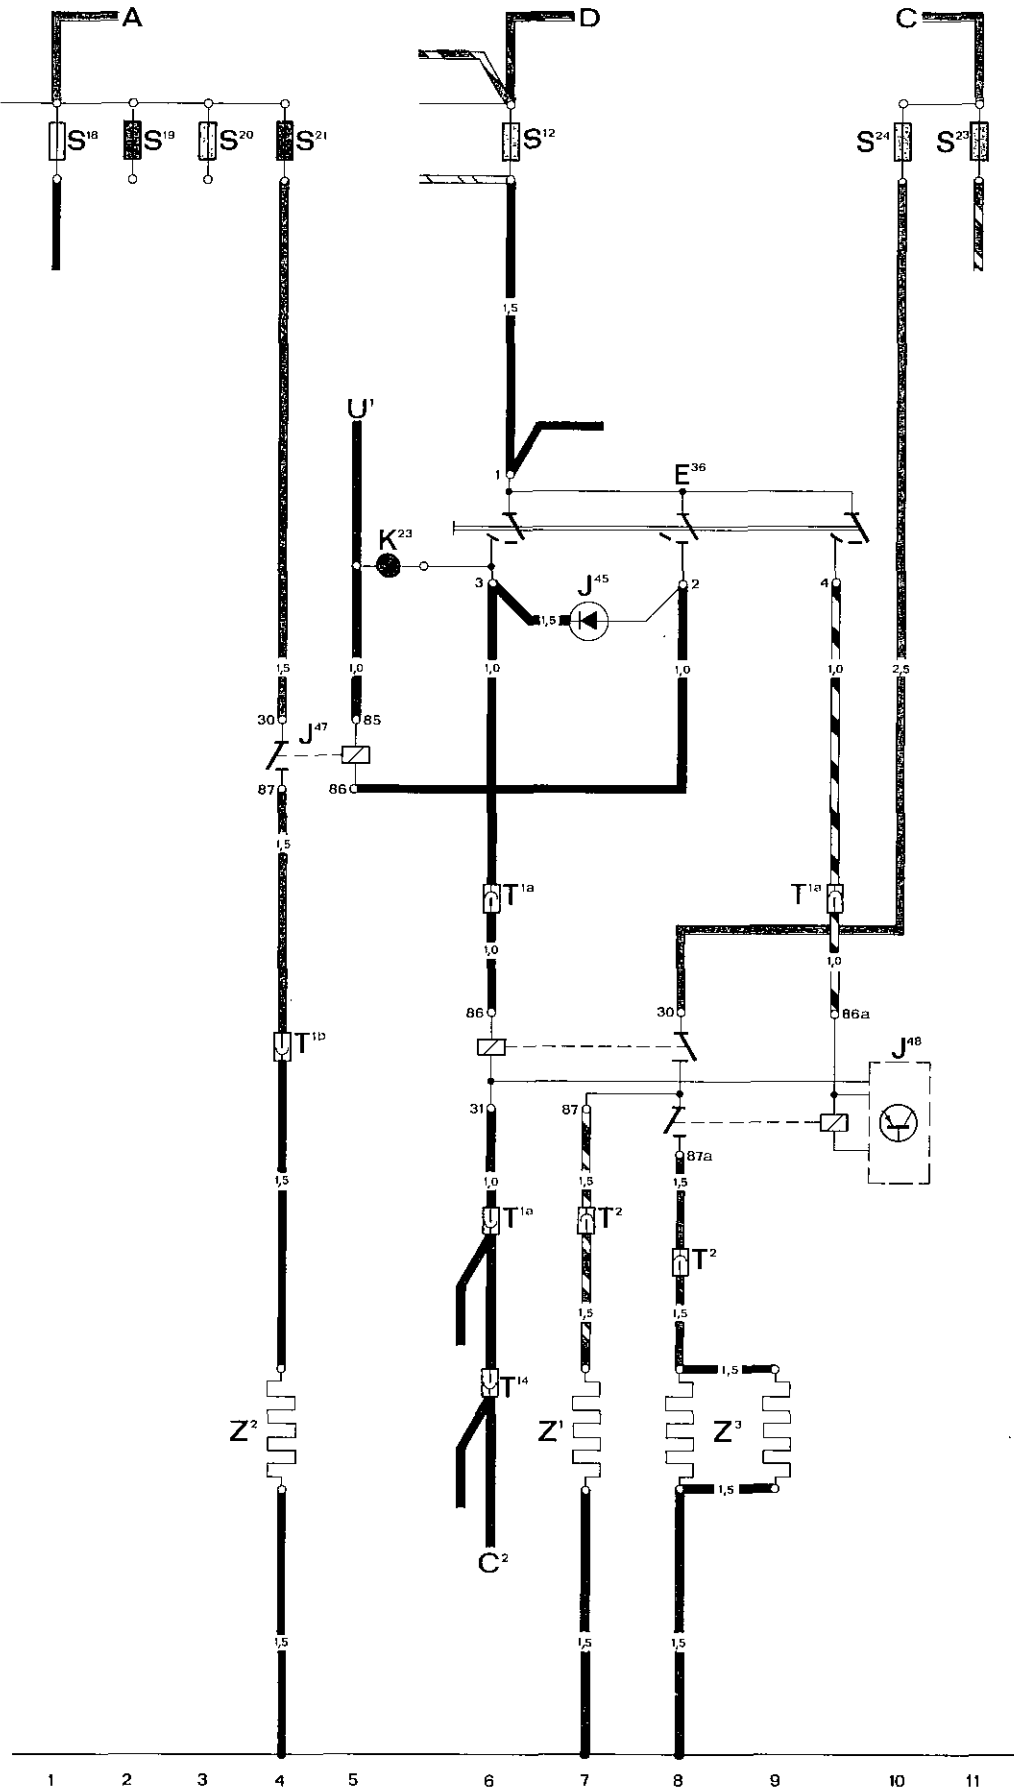


**Additional current flow diagram
windshield and rear window defoggers
Type 911**

9 Current flow diagram, Type 911 S, USA, Model 76

| Description | Current track |
|--|-----------------------|
| E — Windshield wiper switch | 39 |
| E ¹ — Headlight switch | 6, 8, 9, 11, 15, 20 |
| E ² — Turn signal switch | 28 |
| E ³ — Emergency flasher switch | 24, 25, 28, 31, 34 |
| E ⁴ — Dimmer switch | 6, 39 |
| E ⁵ — Headlight flasher switch | 4 |
| E ¹⁹ — Parking light switch | 13 |
| E ²⁰ — Instrument panel illumination potentiometer | 20 |
| E ²⁶ — Switch for glove compartment light | 41 |
| F — Stop light switch | 50 |
| F ² — Left door switch | 45 |
| F ³ — Right door switch | 46 |
| F ⁴ — Back-up light switch | 48 |
| F ⁵ — Switch for luggage compartment light | 42 |
| H — Horn switch | 39 |
| H ² — Horns | 36, 38 |
| H ³ — Key warning buzzer contact | 43 |
| J ¹ — Hazard / turn signal flasher | 33, 34, 35 |
| J ⁴ — Horn relay | 36, 37 |
| J ²⁵ — Headlight relay | 4, 5 |
| J ²⁷ — Diode for seat belt warning system | 46 |
| K ¹ — High beam indicator light | 2 |
| K ⁴ — Parking lights indicator light | 1 |
| K ⁵ — Turn signal indicator light | 27, 29 |
| K ⁶ — Hazard flasher indicator light | 24 |
| L ¹ — Sealed beam unit, left headlight | 3, 7 |
| L ² — Sealed beam unit, right headlight | 4, 8 |
| L ⁶ — Speedometer illumination light | 22 |
| L ⁷ — Fuel gauge illumination light | 22 |
| L ⁸ — Clock illumination light | 22 |
| L ¹⁵ — Ashtray illumination light | 20 |
| L ¹⁶ — Heater control assembly illumination light | 19 |
| L ²¹ — Temperature control lever illumination light | 21 |
| L ²⁴ — Oil temperature indicator illumination light | 22 |
| L ²⁶ — Tachometer illumination light | 22 |
| L ²⁷ — Oil pressure indicator illumination light | 22 |
| M ² — Right stop / rear light | 17, 50 |
| M ⁴ — Left stop / rear light | 13, 51 |
| M ⁵ — Left front turn signal / parking light | 11, 25 |
| M ⁶ — Left rear turn signal | 26 |
| M ⁷ — Right front turn signal / parking light | 15, 31 |
| M ⁸ — Right rear turn signal | 30 |
| M ¹¹ — Front side marker light | 12, 16 |
| M ¹² — Rear side marker light | 14, 18 |
| M ¹⁶ — Left back-up light | 48 |
| M ¹⁷ — Right back-up light | 49 |
| N ⁶ — Resistor | 23 |
| S ² — Fuses | 9, 15, 11 |
| S ¹¹ — on the | 8, 7, 4 |
| S ¹⁷ — fuse box | 3, 31, 25, 48 |
| S ¹⁸ — | 34 |
| T ¹ — Cable connector, single | 40 |
| a — near regulator panel | 14 |
| b — behind sealed beam unit, left | 11, 25 |
| c — behind sealed beam unit, right | 15, 31 |
| d — behind fuse box | 37 |
| e — on luggage compartment floor | 22, 42, 44, 45, 46 |
| f — behind instrument panel | 6, 22, 24, 28 |
| h — near left rear lights | 24 |
| T ⁴ — Cable connector, sixfold | |
| a — in the engine compartment, rear left | 9, 13, 24, 26, 48, 51 |
| b — in the engine compartment, rear right | 10, 17, 30, 49, 50 |
| c — below instrument panel | 4, 6, 26, 30, 39 |
| d — below instrument panel | 25, 31, 32, 34 |
| e — below instrument panel | 8, 9, 11, 15, 22 |
| g — below instrument panel | 41 |
| h — below instrument panel | 41 |
| T ¹⁴ — Cable connector, fourteenfold | |
| on regulator panel | 48 |
| W — Interior light | 45, 46 |
| W ³ — Luggage compartment light | 42 |
| W ⁶ — Glove compartment light | 41 |
| X — License plate light | 9, 10 |
| Y — Clock | 40 |

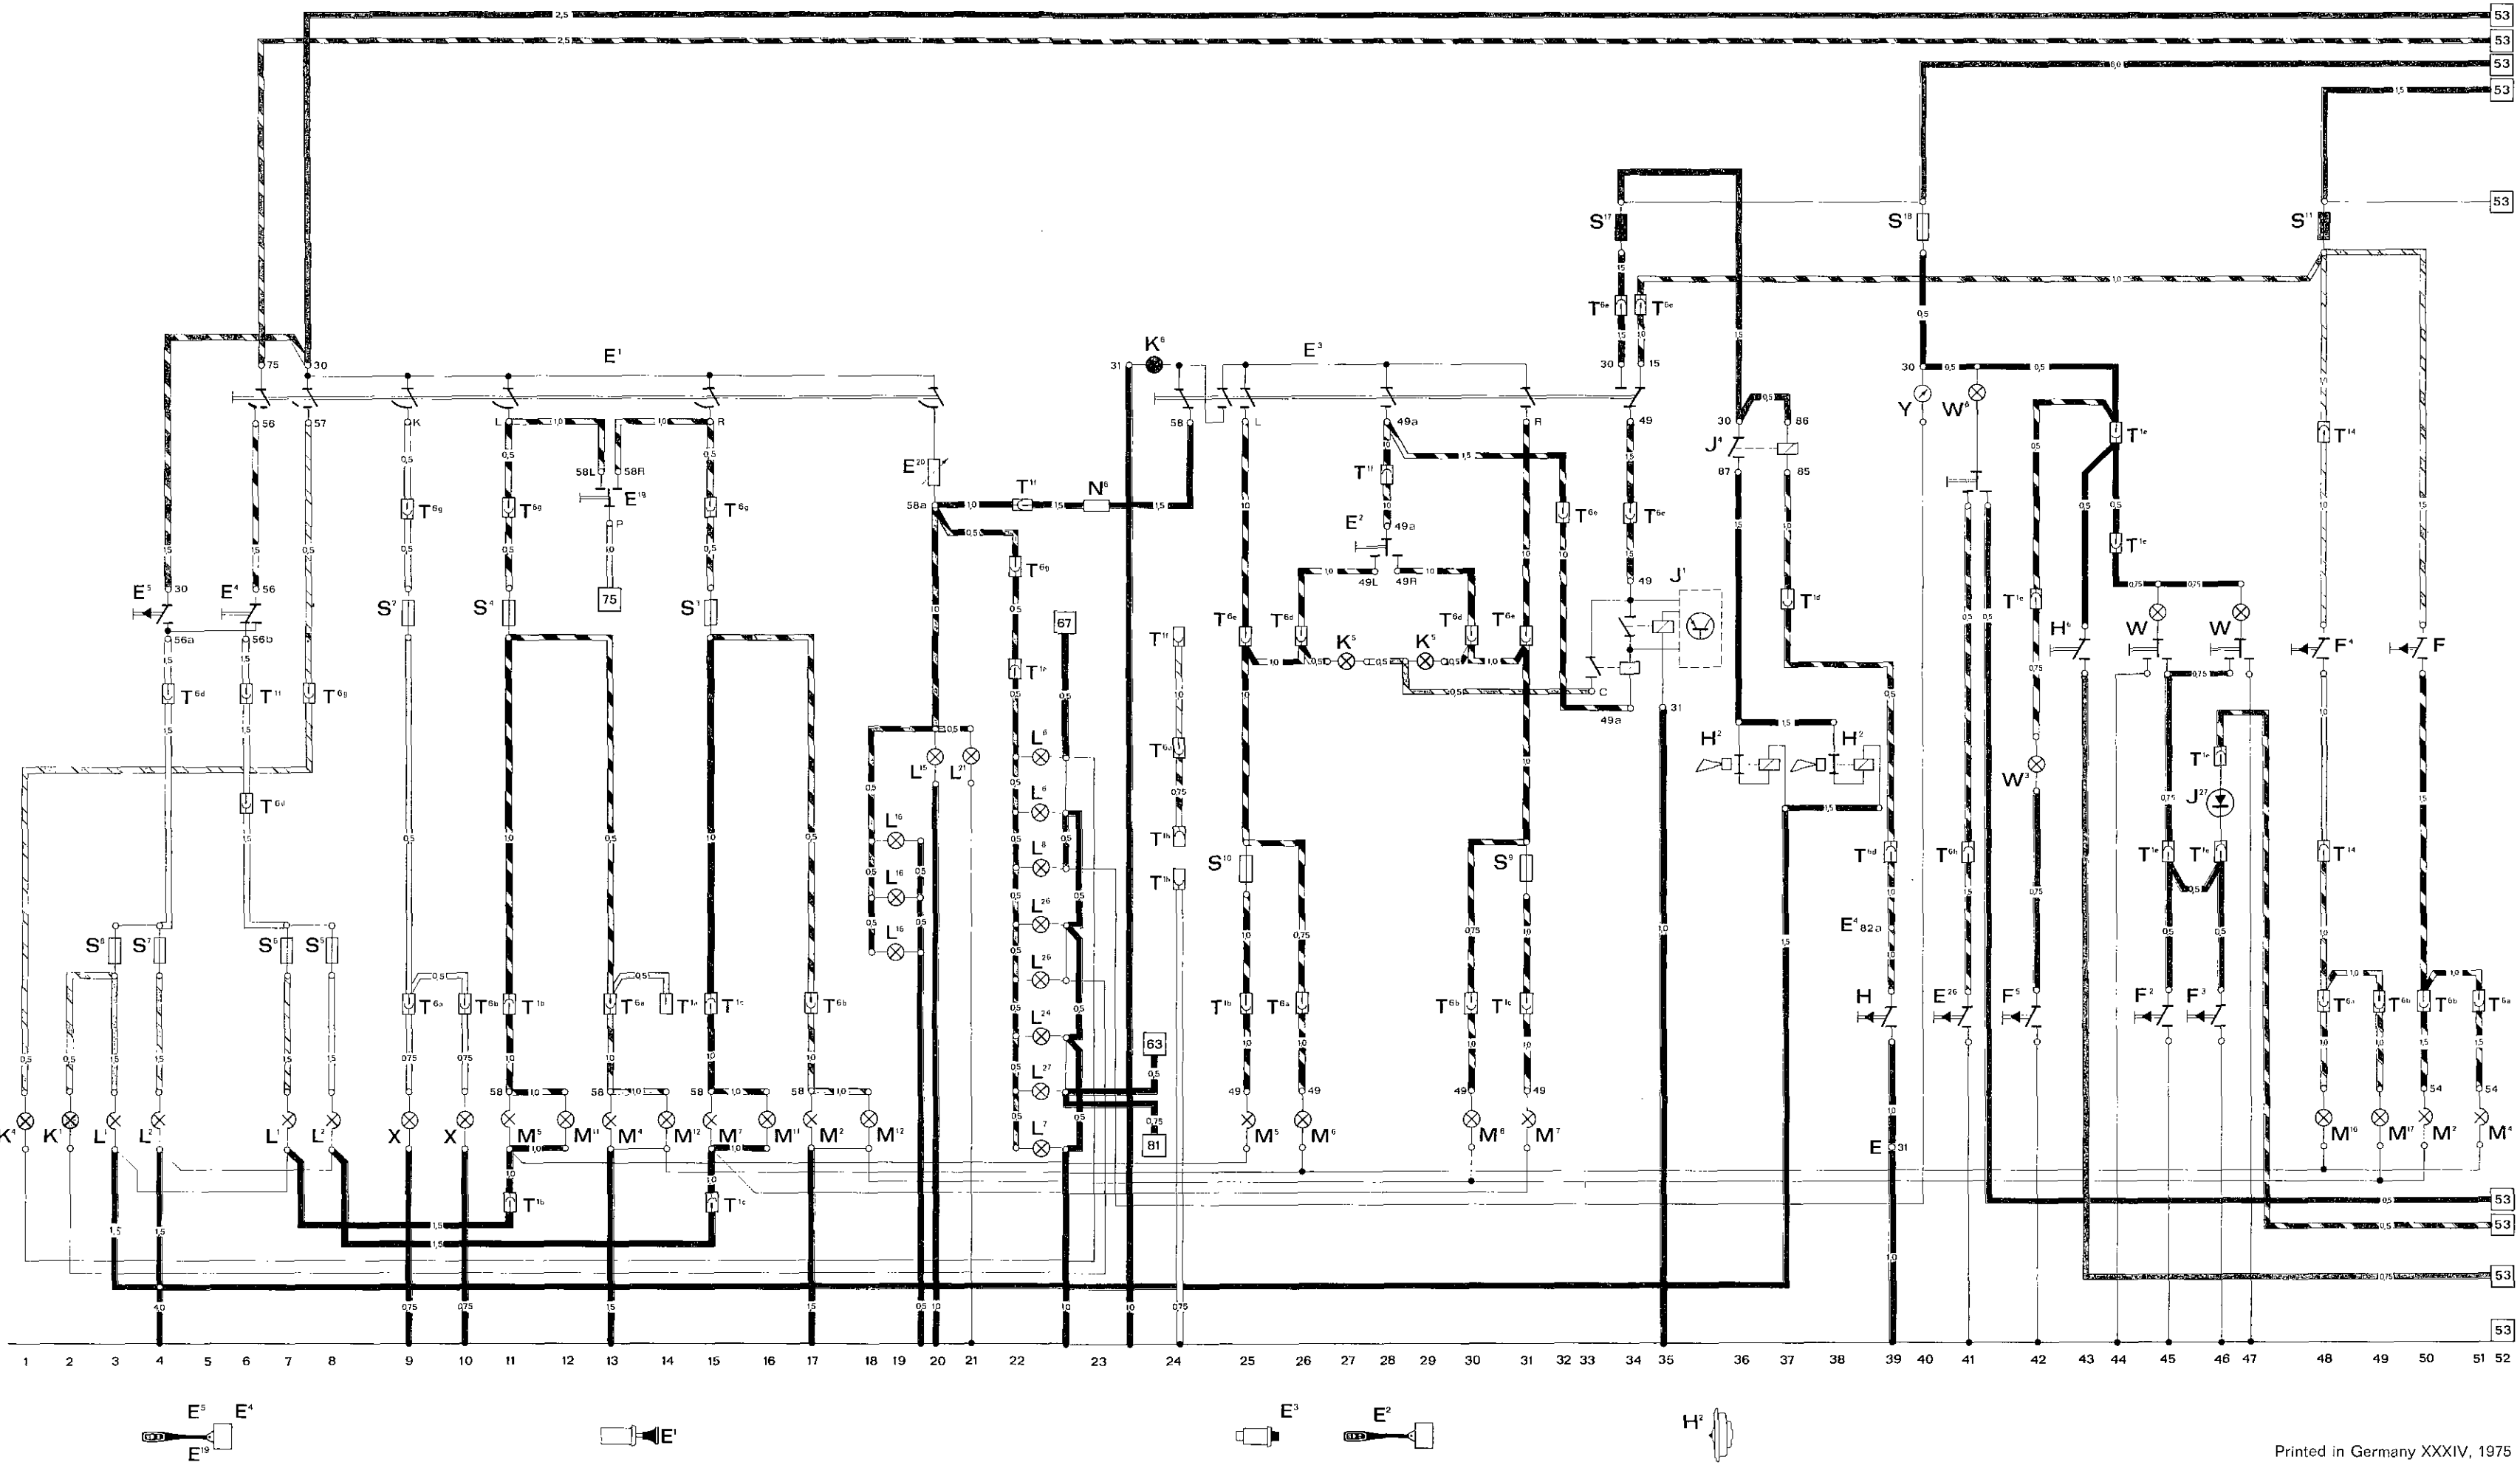

Current flow diagram, Type 911 S, USA, Model 76 **9**

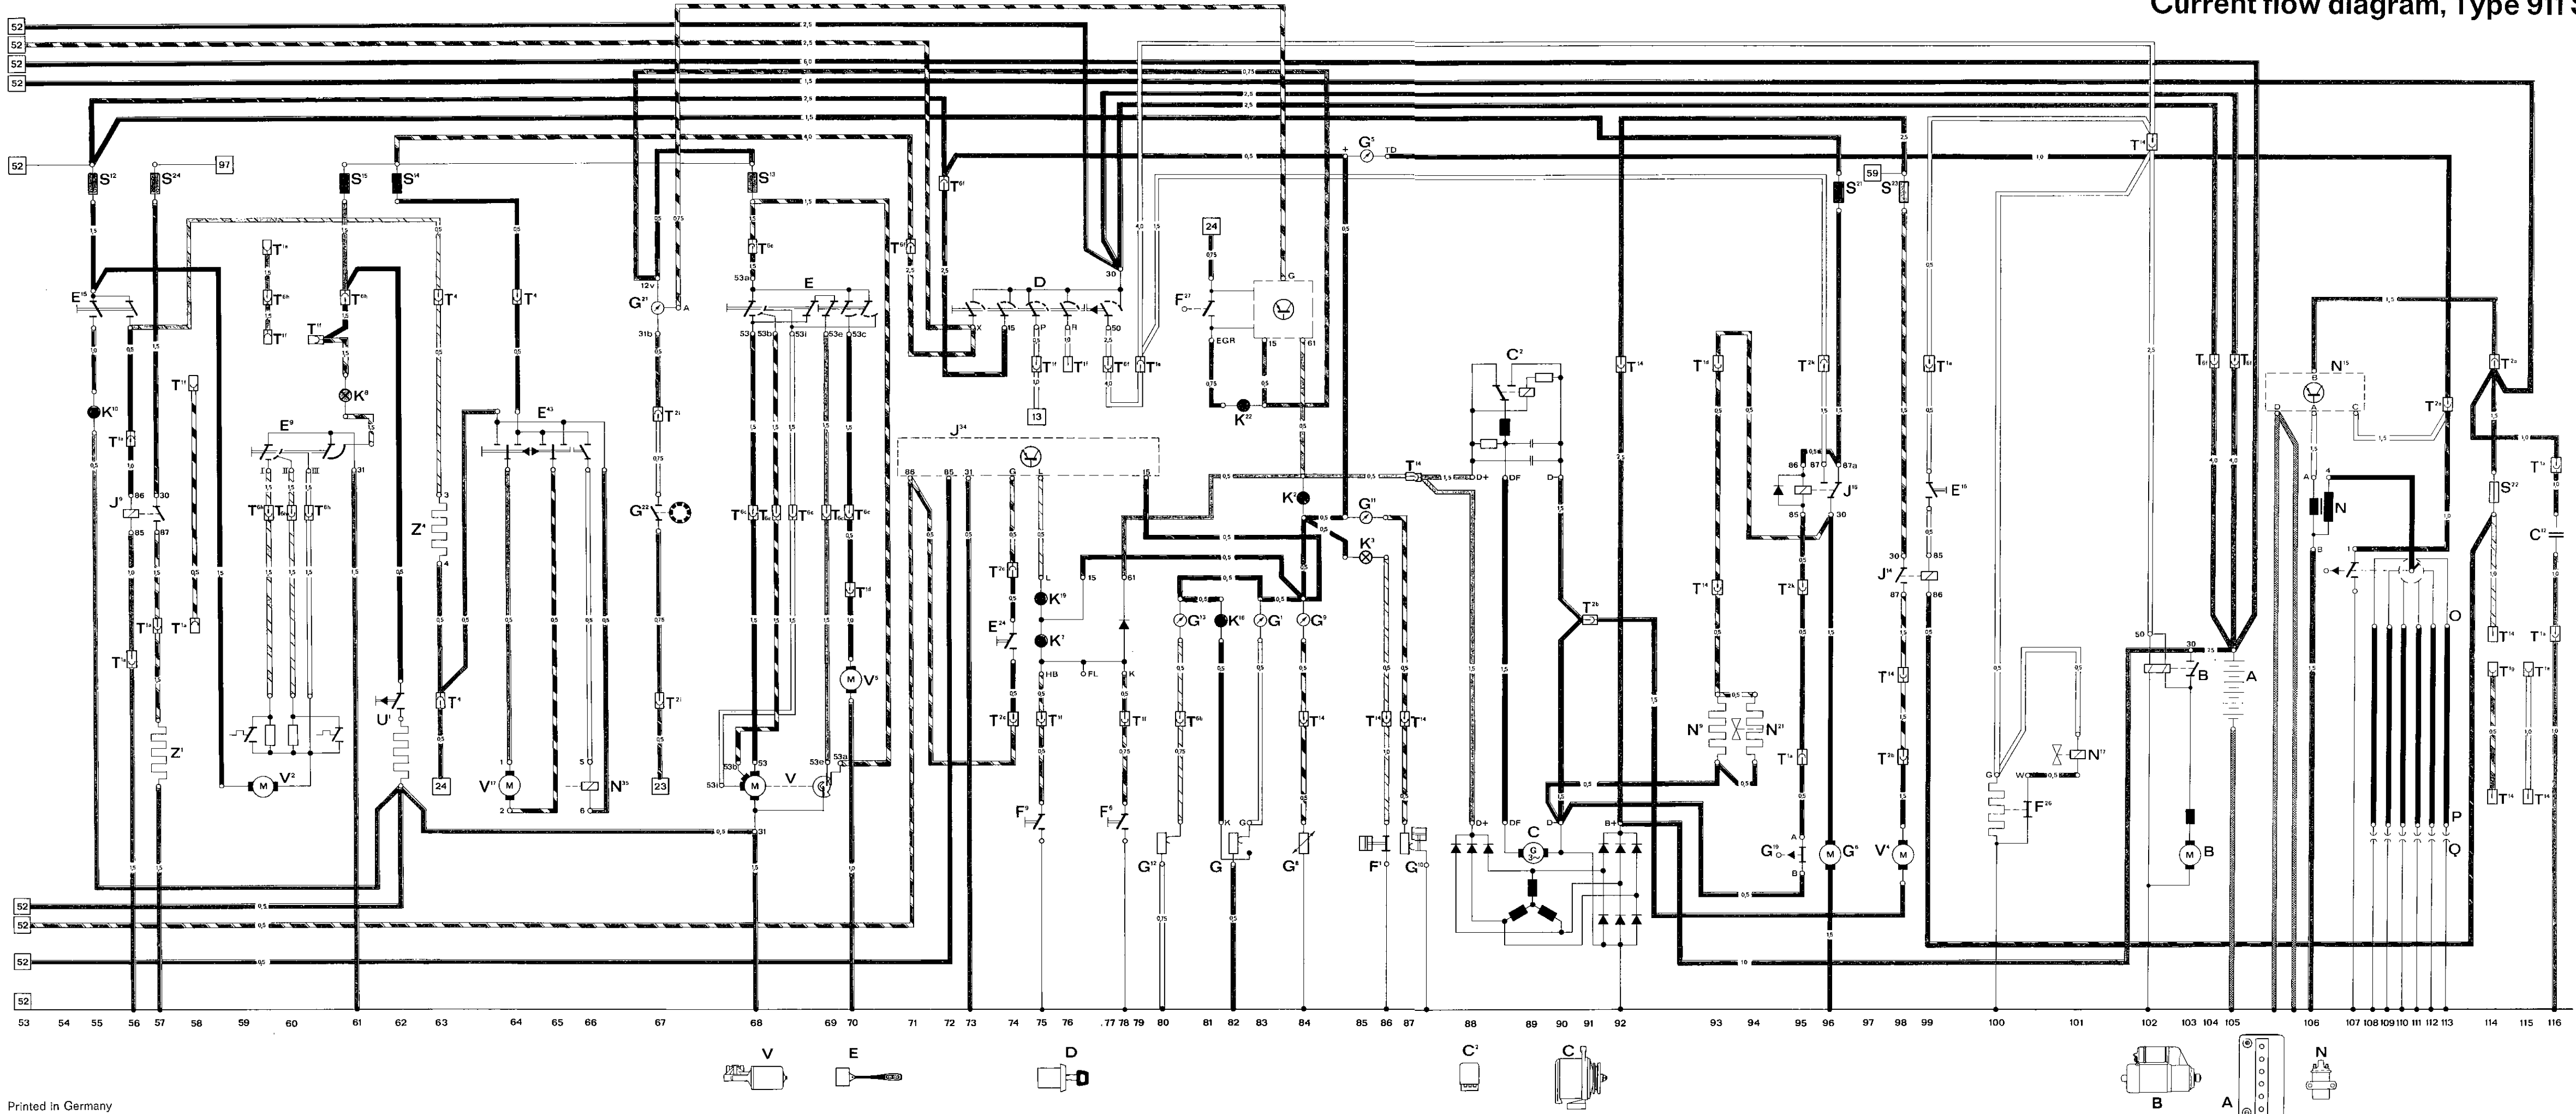

| Description | Current track |
|--|-------------------------|
| A - Battery | 105 |
| B - Starter | 102, 103 |
| C - Generator | 88, 89, 90, 91, 92 |
| D - Voltage regulator | 86, 89, 90 |
| E - Capacitor for ignition unit | 116 |
| F - Ignition - starter switch | 73, 74, 75, 76, 77 |
| G - Windshield wiper switch | 68, 69, 70 |
| H - Fresh air blower switch | 60 |
| I - Rear window defogger switch | 55, 56 |
| J - Heater blower switch | 59 |
| K - Left seat belt switch | 74 |
| L - Outside mirror control switch | 64, 65 |
| M - Oil pressure switch | 86 |
| N - Brake warning switch | 75 |
| O - Parking brake switch | 75 |
| P - Thermo-switch for cold start valve | 100 |
| Q - Missage coupler switch (EGR) | 81, 83, 84 |
| R - Fuel sender unit | 82 |
| S - Fuel gauge | 83 |
| T - Tachometer | 85 |
| U - Fuel pump | 99 |
| V - Oil temperature sender unit | 84 |
| W - Oil temperature indicator | 87 |
| X - Oil pressure sender unit | 85 |
| Y - Oil pressure indicator | 86 |
| Z - Oil level sender unit | 80 |
| AA - Oil level gauge | 89 |
| AB - Air meter contact | 85 |
| AC - Speedometer | 67 |
| AD - Speedometer sensor | 56, 57 |
| AE - Rear window defogger relay | 88, 89 |
| AF - Relay for heater blower | 55, 56 |
| AG - Relay for fuel pump | 71, 72, 73, 74, 75, 79 |
| AH - Seal belt warning system relay with integrated buzzer | 84 |
| AI - Generator charge indicator light | 85 |
| AJ - Oil pressure indicator light | 75 |
| AK - Parking brake - brake warning light | 61 |
| AL - Blower indicator light | 55 |
| AM - Rear window defogger indicator light | 81 |
| AN - Low fuel warning light | 75 |
| AO - Fuel level warning light | 82 |
| AP - Ignition transformer | 106 |
| AQ - Warm-up regulator | 93 |
| AR - High tension ignition unit | 106 |
| AS - Cold start valve | 101 |
| AT - Supplimentary air valve | 94 |
| AU - Magnetic clutch for mirror control | 66 |
| AV - Distributor | 107-113 |
| AW - Spark plug connector | 108-113 |
| AX - Spark plug | 108-113 |
| AY - Fuses | 55, 56 |
| AZ - on the fuse box | 61 |
| BA - Fuses on the rear fuse box (regulator panel) | 114 |
| BB - Cable connector, single | 55, 57, 58, 59, 99, 116 |
| BC - behind fuse box | 70, 83 |
| BD - on luggage compartment floor | 60, 80, 115 |
| BE - behind instrument panel | 58, 60, 61, 75, 76 |
| BF - below shift lever housing | 114 |
| BG - Cable connector, double | 113, 114 |
| BH - below regulator panel | 91, 98 |
| BI - in engine compartment, left | 74 |
| BJ - in turn, rear | 67 |
| BK - below regulator panel | 55, 56 |
| BL - Cable connector, quadruple, in outside mirror housing | 63, 84 |
| BM - Cable connector, sixfold | 80 |
| BN - in engine compartment right | 58, 69, 70 |
| BO - below instrument panel | 71, 72, 77, 104, 105 |
| BP - below instrument panel | 60, 61 |
| BQ - Cable connector, fourfold, on regulator panel | 84, 86, 87, 92, 93 |
| BR - Cable connector, fourfold, on regulator panel | 95, 102, 114, 115 |
| BS - Cigar lighter | 62 |
| BT - Windshield wiper motor | 58, 69 |
| BU - Blower motor | 59 |
| BV - Heater blower | 59 |
| BW - Washer pump | 70 |
| BX - Outside mirror control motor | 64 |
| BY - Rear window defogger | 57 |
| BZ - Out-view mirror defogger | 63 |


Current flow diagram, Type 911 S, USA, Model 76

Additional current flow diagram automatic speed control, Type 911

9

Additional current flow diagram
automatic speed control, Type 911

| Description | Current track |
|---|---------------|
| E ²¹ - Selector lever contact (Sportomatic) | 11 |
| E ⁴⁵ - Speed control switch | 2, 3, 4 |
| E ⁴⁶ - Control unit for speed control | 1-9 |
| F - Stop light switch | 1 |
| F ³⁶ - Clutch pedal switch | 7 |
| G ²¹ - to speedometer (terminal 31 b) | 5 |
| G ²¹ - to speedometer (ground) | 6 |
| J ⁵⁴ - Diode for speed control | 10 |
| N ⁷ - to control valve | 12 |
| N ³⁷ - Solenoid valve for speed control | 9 |
| S ¹¹ - Fuses in the | 1 |
| S ¹² - fuse box | 2 |
| T ¹ - Cable connector, single, in tunnel | 7, 11 |
| T ³ - Cable connector, triple, in footwell, left | 7, 8, 9 |
| T ⁴ - Cable connector, quadruple, below instrument panel | 2, 3, 4 |
| V ¹⁸ - Control element | 9 |

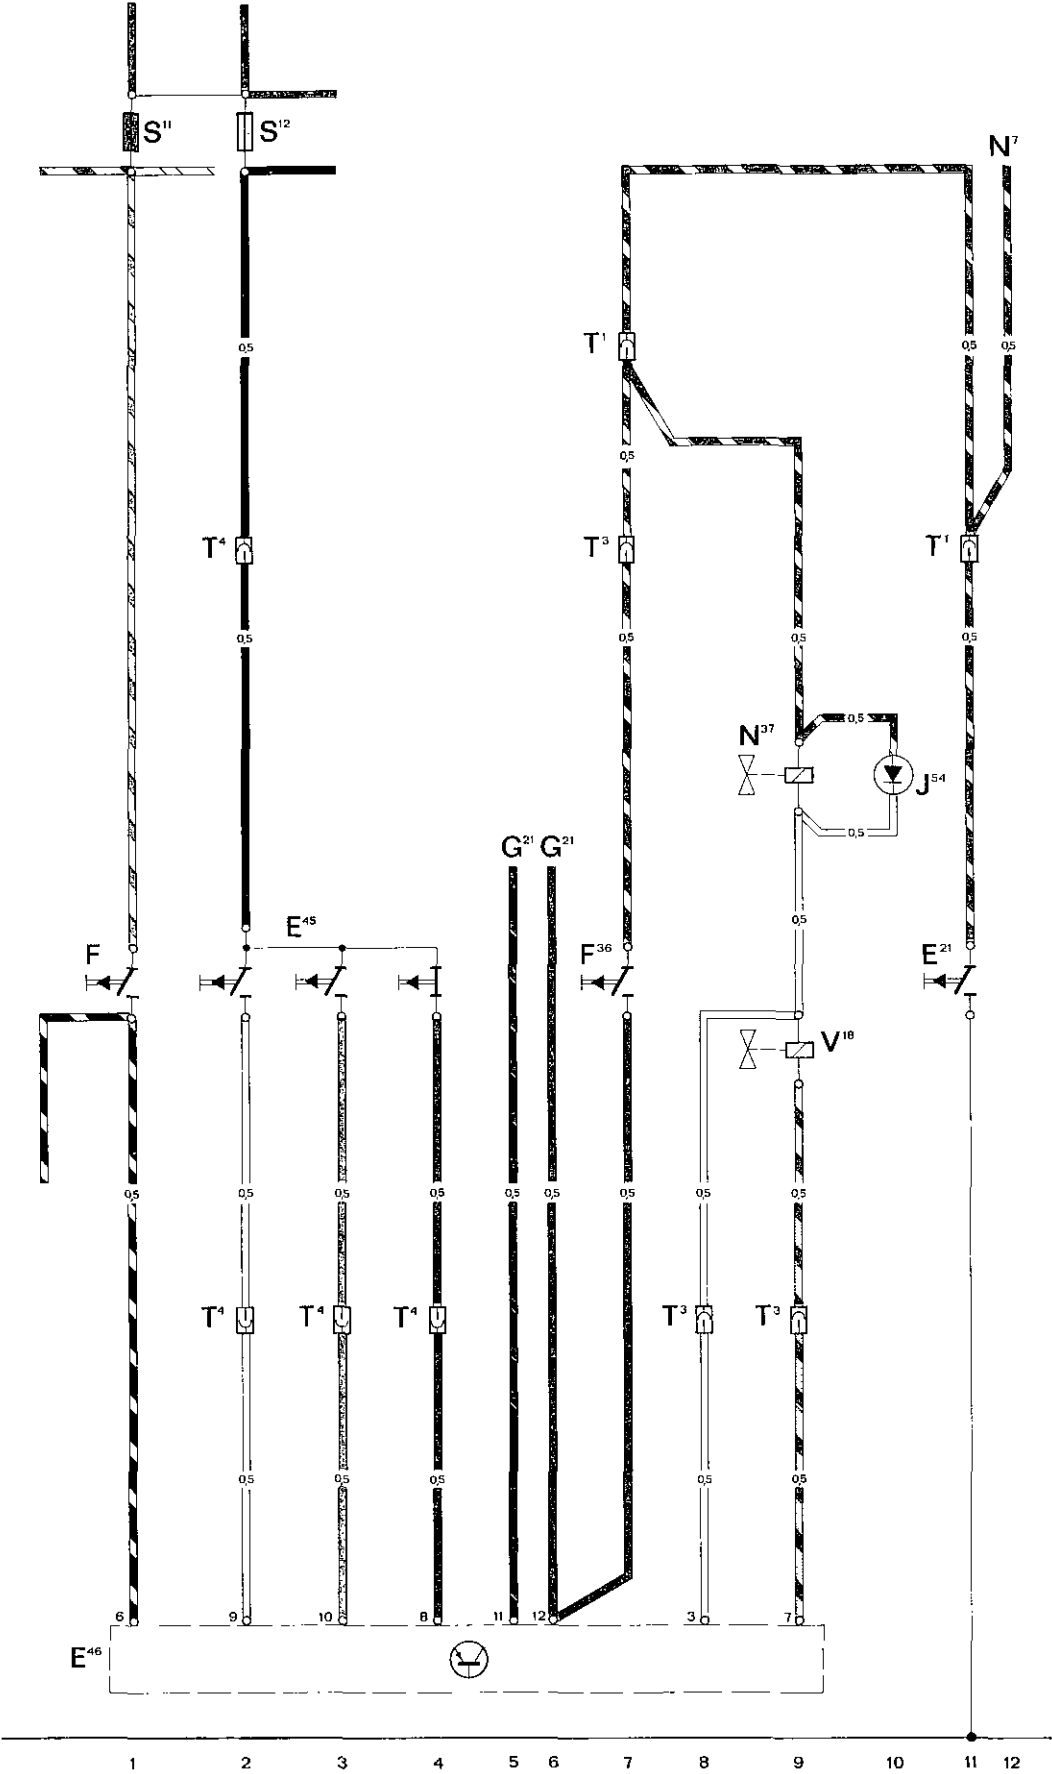


Additional current flow diagram intermittent wiper operation, Model 76

9

Additional current flow diagram
intermittent wiper operation, Model 76

| Description | Current track |
|--|---------------|
| D - to ignition/starter switch | 1 |
| E - Windshield wiper switch | 2, 5, 7, 9 |
| E ³⁸ - Potentiometer for intermittent wiper operation | 7, 8 |
| J ³¹ - Relay for intermittent wiper operation | 5, 6, 7, 8 |
| S ¹³ - Fuses in the | 2 |
| S ¹⁴ - fuse box | 1 |
| T ¹ - Cable connector, single | |
| a - on luggage compartment floor | 5, 7 |
| d - behind fuse box | 9 |
| T ^{4c} - Cable connector, sixfold, | |
| below instrument panel | 2, 3, 4, 5, 9 |
| V - Windshield wiper motor | 2, 5 |
| V ⁵ - Washer pump | 9 |

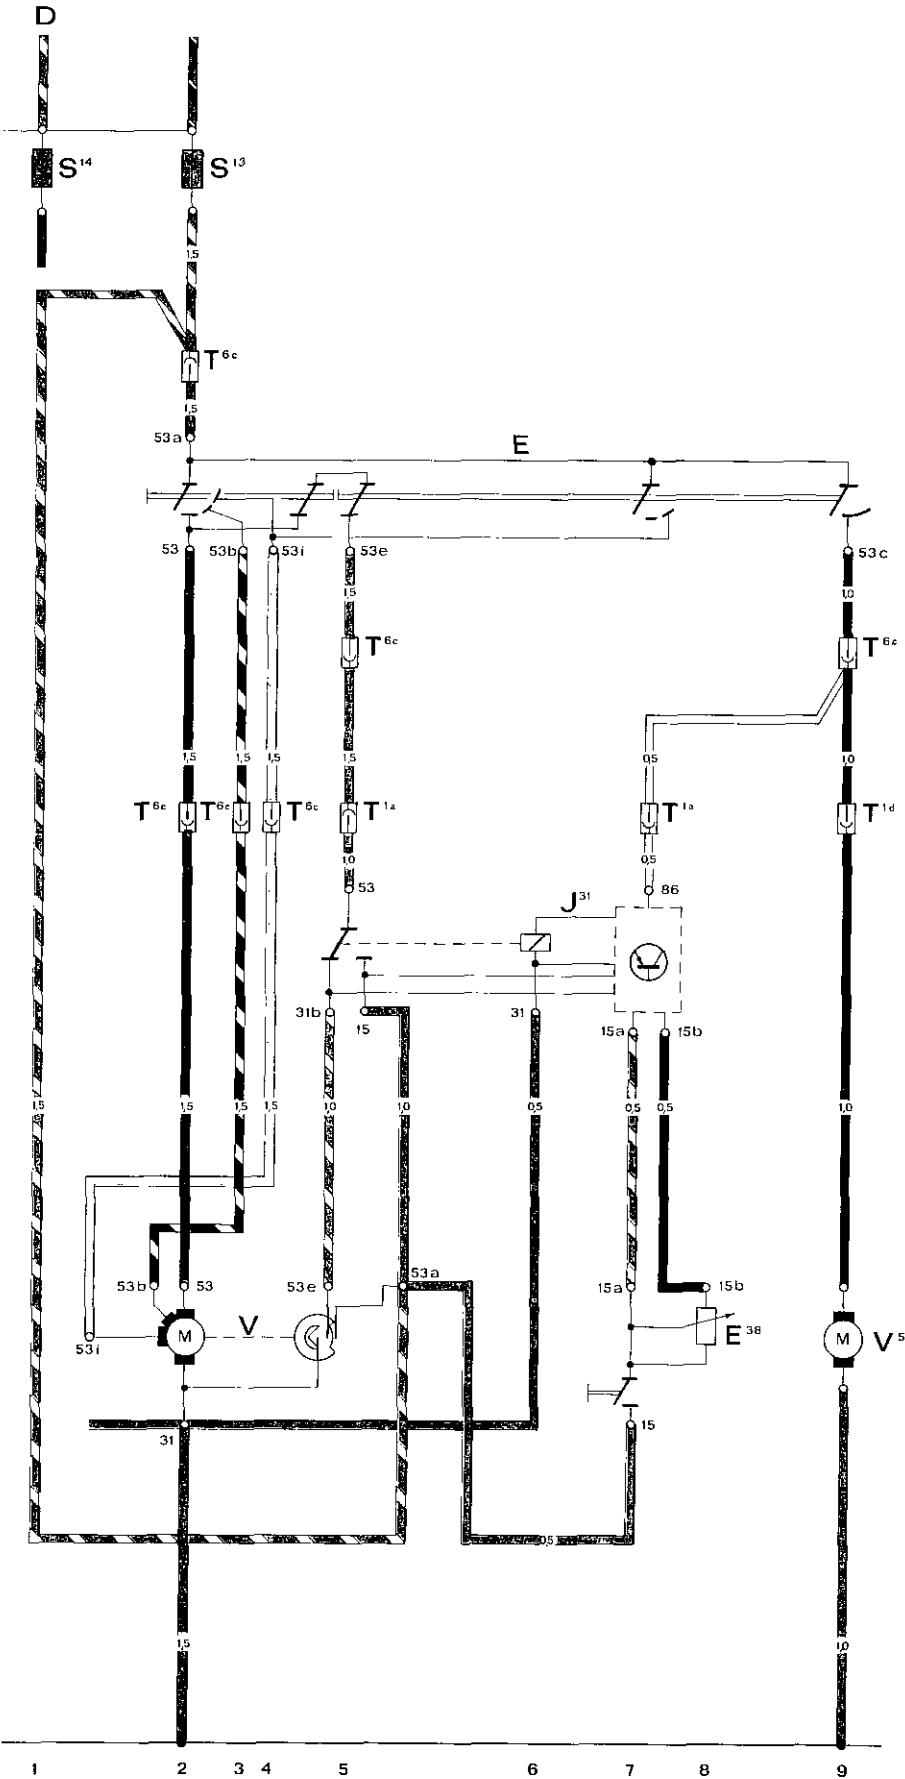


Additional current flow diagram air conditioner with front condenser

9

Additional current flow diagram
air conditioner with front condenser


| Description | Current track |
|--|---------------|
| A - to battery | 4 |
| B - to starter | 2 |
| D - to ignition/starter switch, terminal 50 | 2 |
| D - to ignition/starter switch, terminal 15 | 3 |
| E ³⁰ - Blower switch | 6, 7 |
| E ³³ - Temperature switch | 7 |
| F ³⁰ - Thermostat | 5 |
| J ³² - Power supply relay | 1, 6 |
| J ⁵⁶ - Relay for condenser fan | 8, 9 |
| N ²⁵ - Electromagnetic clutch | 7 |
| S ¹¹ - Fuses | 2 |
| S ¹² - in | 3 |
| S ¹⁸ - the | 4 |
| S ¹⁹ - fuse | 5 |
| S ²⁰ - box | 6 |
| T ¹ - Cable connector, single a - near regulator panel e - on luggage compartment floor | 7 2, 7 |
| T ² - Cable connector, double a - near evaporator blower b - near battery | 5 9 |
| T ⁴ - Cable connector, fourfold, below instrument panel | 5, 6, 7 |
| V ¹⁹ - Condenser fan | 9 |
| V ²⁰ - Evaporator blower | 5 |

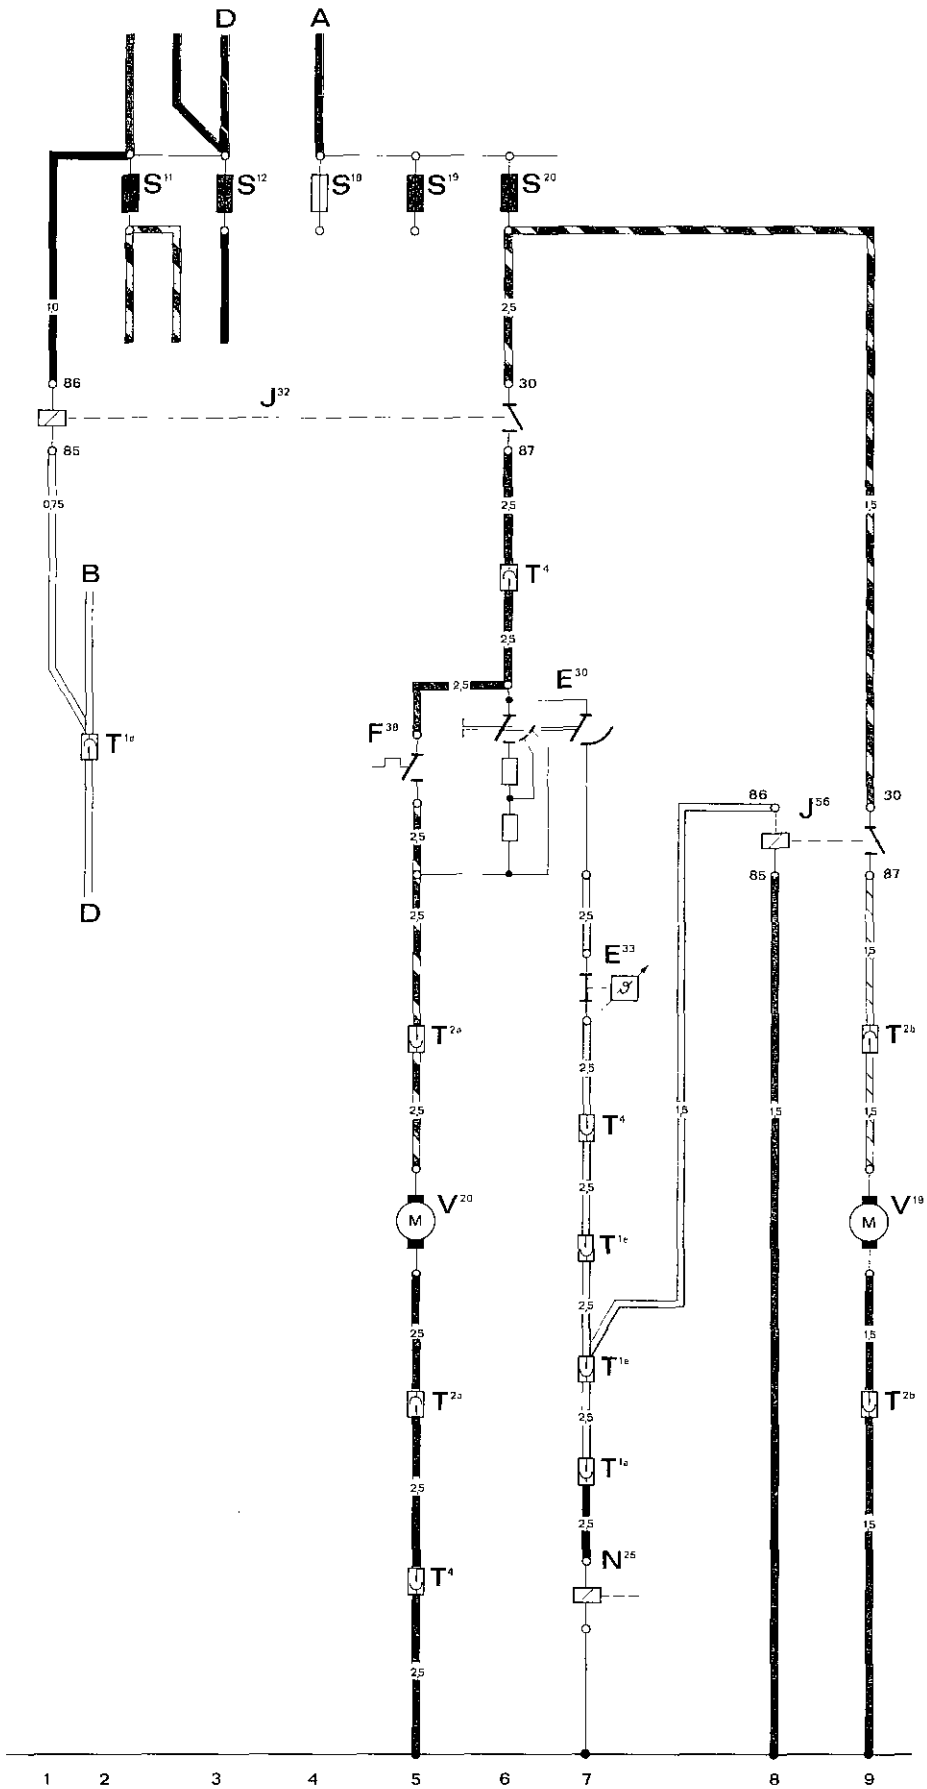

Additional current flow diagram fog lights

| Description | |
|-----------------|---------------------------------|
| A | - to battery |
| E ¹ | - to headlight switch |
| E ⁷ | - Fog light switch |
| J ⁵ | - Fog light relay |
| K ¹⁷ | - Fog light indicator light |
| L ¹ | - to left headlight |
| L ²² | - Left fog light |
| L ²³ | - Right fog light |
| S ¹ | - |
| S ² | - Fuses |
| S ⁵ | - in |
| a | - the |
| S ⁸ | - fuse |
| S ¹⁷ | - box |
| S ¹⁸ | - |
| T | - Cable connector |
| T ² | - Cable connector, double |
| a | - in luggage compartment, left |
| b | - in luggage compartment, right |


| Current track | |
|---------------|--|
| 1 | |
| 5, 6, 9 | |
| 6, 7 | |
| 2, 3 | |
| 7 | |
| 4 | |
| 1 | |
| 2 | |
| 2 | |
| 6 | |
| 8 | |
| 9 | |
| 5, 4 | |
| 1 | |
| 1 | |
| 3 | |
| 1 | |
| 2 | |

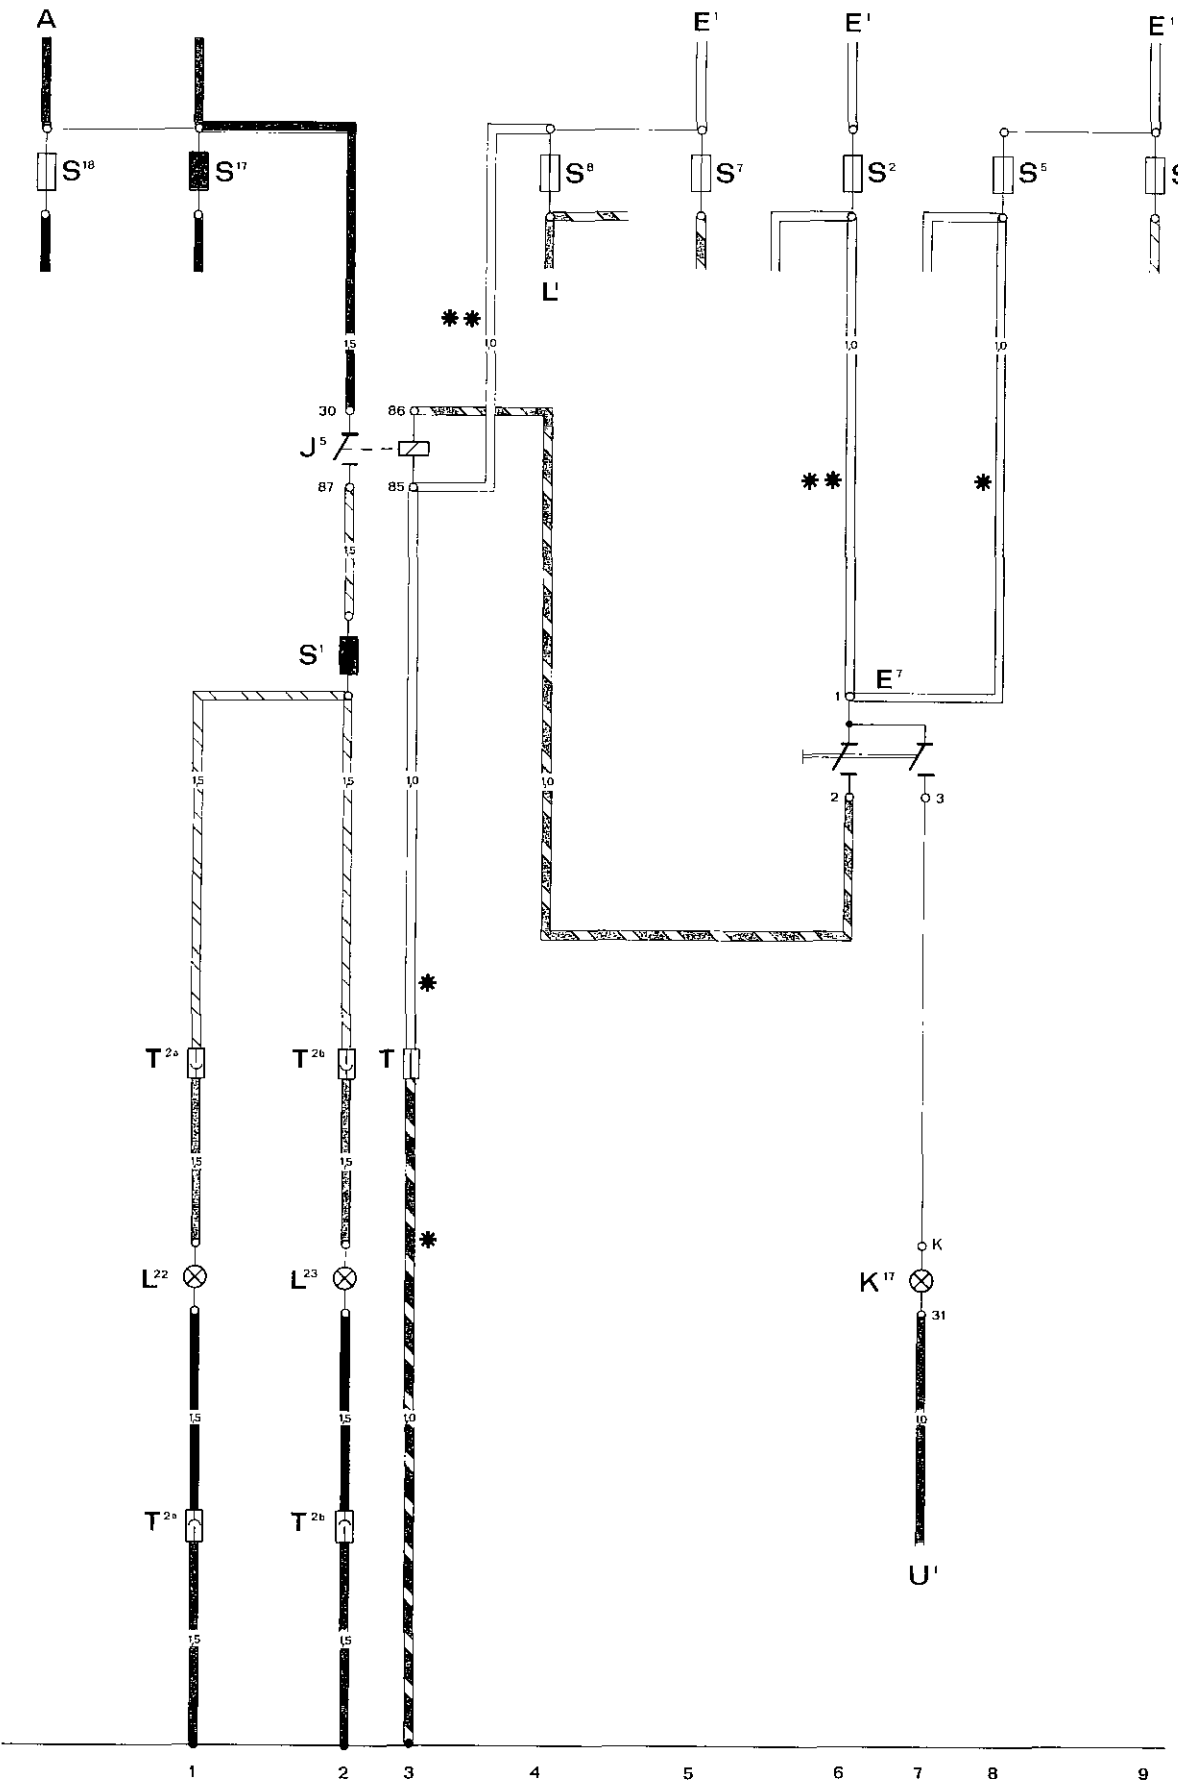

Additional current flow diagram engine compartment light

9

| Description | Current track |
|---|---------------|
| E ¹ - to headlight switch | 1 |
| L ²⁹ - Engine compartment light | 3 |
| S ⁴ - Fuse in fuse box | 1 |
| T ^{1a} - Cable connector, single, near regulator panel | 3 |
| T ^{6a} - Cable connector, sixfold, in engine compartment, rear left | 2 |

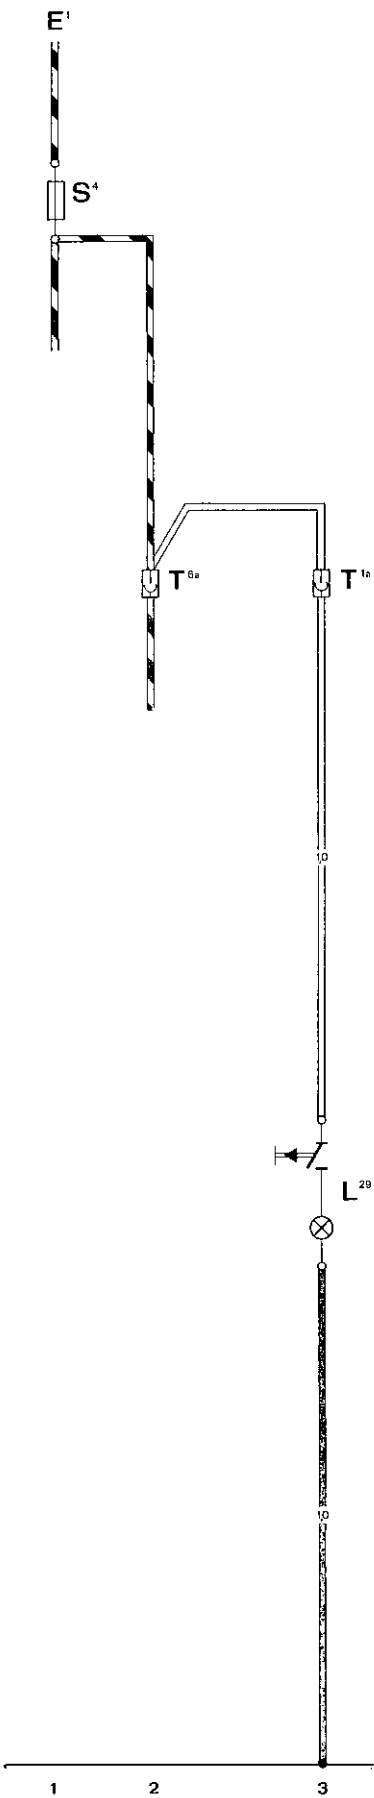


**Additional current flow diagram
remotely controlled outside mirrors, Type 911**

9

Additional current flow diagram
remotely controlled outside mirrors, Type 911

| Description | Current track |
|--|---------------|
| D - to ignition/starter switch | 2 |
| E ¹⁵ - to rear window defogger switch | 1, 9 |
| E ⁴³ - Mirror control switch | 2, 3, 4, 5 |
| E ⁴⁸ - Change-over switch for mirror control | 3 |
| L ²⁷ - to oil pressure indicator light | 1, 9 |
| N ³⁵ - Magnetic clutch for mirror control, driver side | 4 |
| N ⁴² - Magnetic clutch for mirror control, passenger side | 7 |
| S ¹⁴ - Fuse on fuse box | 2 |
| T ⁶ - Cable connector, sixfold | |
| a - in mirror housing, driver side | 1, 2, 3, 4, 5 |
| b - in mirror housing, passenger side | 3, 6, 7, 8, 9 |
| T ⁹ - Cable connector, ninefold | |
| a - on luggage compartment floor, left | 1, 2, 3, 6, 7 |
| b - on luggage compartment floor, right | 3, 6, 7, 9 |
| V ¹⁷ - Mirror control motor, driver side | 2 |
| V ²⁵ - Mirror control motor, passenger side | 6 |
| Z ⁴ - Outside mirror defogger, driver side | 1 |
| Z ⁵ - Outside mirror defogger, passenger side | 9 |

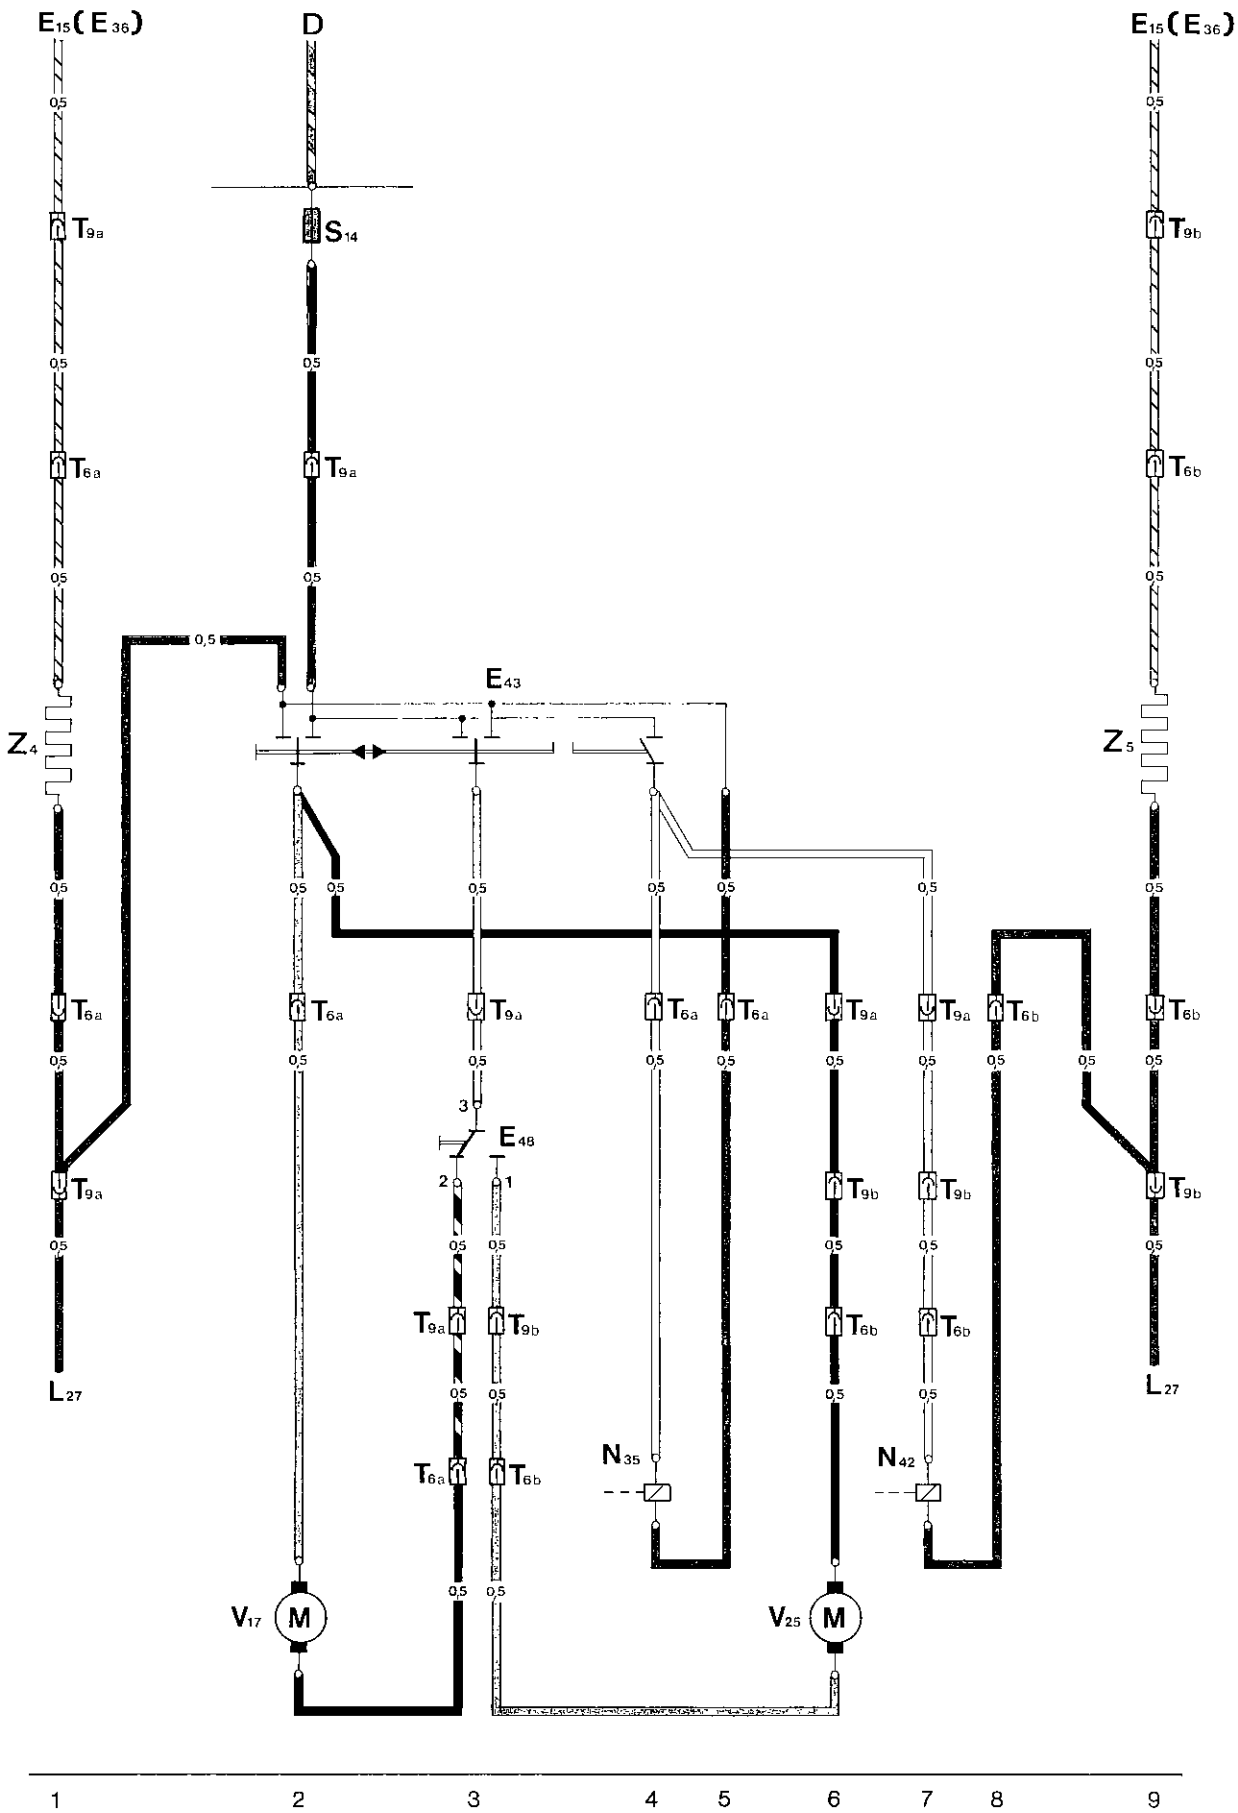

Current flow diagram, Type 911 S, USA, Model 77 **9**


9 Current flow diagram, Type 911 S, USA, Model 77

Description

- E — Windshield wiper switch
- E¹ — Headlight switch
- E² — Turn signal switch
- E³ — Emergency flasher switch
- E⁴ — Dimmer switch
- E⁵ — Headlight flasher switch
- E⁹ — Fresh air blower switch
- E¹⁹ — Rear window defogger switch
- E¹⁹ — Parking light switch
- E²⁰ — Instrument panel illumination potentiometer
- E²⁶ — Switch for glove compartment light
- F — Stop light switch
- F² — Left door switch
- F³ — Right door switch
- F⁴ — Back-up light switch
- F⁵ — Switch for luggage compartment light
- H — Horn switch
- H² — Horns
- H⁶ — Key warning buzzer contact
- J¹ — Hazard / turn signal flasher
- J⁴ — Horn relay
- J⁹ — Rear window defogger relay
- J²⁷ — Diode for seat belt warning system
- K¹ — High beam indicator light
- K⁴ — Parking lights indicator light
- K⁵ — Turn signal indicator light
- K⁶ — Hazard flasher indicator light
- K⁸ — Blower indicator light
- K¹⁰ — Rear window defogger indicator light
- L¹ — Sealed beam unit, left headlight
- L² — Sealed beam unit, right headlight
- L⁶ — Speedometer illumination light
- L⁷ — Fuel gauge illumination light
- L⁸ — Clock illumination light
- L¹⁵ — Ashtray illumination light
- L¹⁶ — Heater control assembly illumination light
- L²¹ — Temperature control lever illumination light
- L²⁴ — Oil temperature indicator illumination light
- L²⁶ — Tachometer illumination light
- L²⁷ — Oil pressure indicator illumination light
- M² — Right stop / rear light
- M⁴ — Left stop / rear light
- M⁵ — Left front turn signal / parking light
- M⁶ — Left rear turn signal
- M⁷ — Right front turn signal / parking light
- M⁸ — Right rear turn signal
- M¹¹ — Front side marker light
- M¹² — Rear side marker light
- M¹⁶ — Left back-up light
- M¹⁷ — Right back-up light
- N⁶ — Resistor
- S² — Fuses
- to — Fuses on the
- S¹² — Fuse on the rear fuse box
- T¹ — Cable connector, single
 - a — near regulator panel
 - b — behind sealed beam unit, left
 - c — behind sealed beam unit, right
 - d — behind fuse box
 - e — on luggage compartment floor
 - f — behind instrument panel
 - h — near left rear lights
- T^{2d} — Cable connector, double, on luggage compartment floor
- T⁶ — Cable connector, sixfold
 - a — in the engine compartment, rear left
 - b — in the engine compartment, rear right
 - d — below instrument panel
 - e — below instrument panel
 - g — below instrument panel
 - h — below instrument panel
- T¹⁴ — Cable connector, fourteenfold on regulator panel
- U¹ — Cigar lighter
- V² — Blower motor
- W — Interior light
- W³ — Luggage compartment light
- W⁶ — Glove compartment light
- X — License plate light
- Y — Clock
- Z¹ — Rear window defogger


Current track

- 39
- 6, 8, 9, 11, 15, 20
- 28
- 24, 25, 28, 31, 34
- 6, 39
- 4
- 58, 59, 60
- 53, 54
- 13
- 20
- 41
- 50, 52
- 45
- 46
- 48
- 42
- 39
- 36, 38
- 43
- 33, 34, 35
- 36, 37
- 54, 55
- 46
- 2
- 1
- 27, 29
- 24
- 60
- 53
- 3, 7
- 4, 8
- 22
- 22
- 22
- 20
- 19
- 21
- 22
- 22
- 22
- 17, 50
- 13, 51
- 11, 25
- 26
- 15, 31
- 30
- 12, 16
- 14, 18
- 49
- 49
- 23
- 9, 15, 11
- 8, 7, 4
- 3, 31, 25, 48, 53
- 60
- 34
- 40
- 55
- 14, 54, 55, 56
- 11, 25
- 15, 31
- 37
- 22, 42, 44, 45, 46, 51
- 6, 22, 24, 28, 56
- 24
- 50
- 9, 13, 24, 26, 48, 51
- 10, 17, 30, 49, 50
- 4, 6, 26, 30, 39
- 25, 31, 32, 34
- 8, 9, 11, 15, 22
- 41, 58, 59, 60
- 48
- 61
- 58, 59
- 45, 46
- 42
- 41
- 9, 10
- 40
- 55

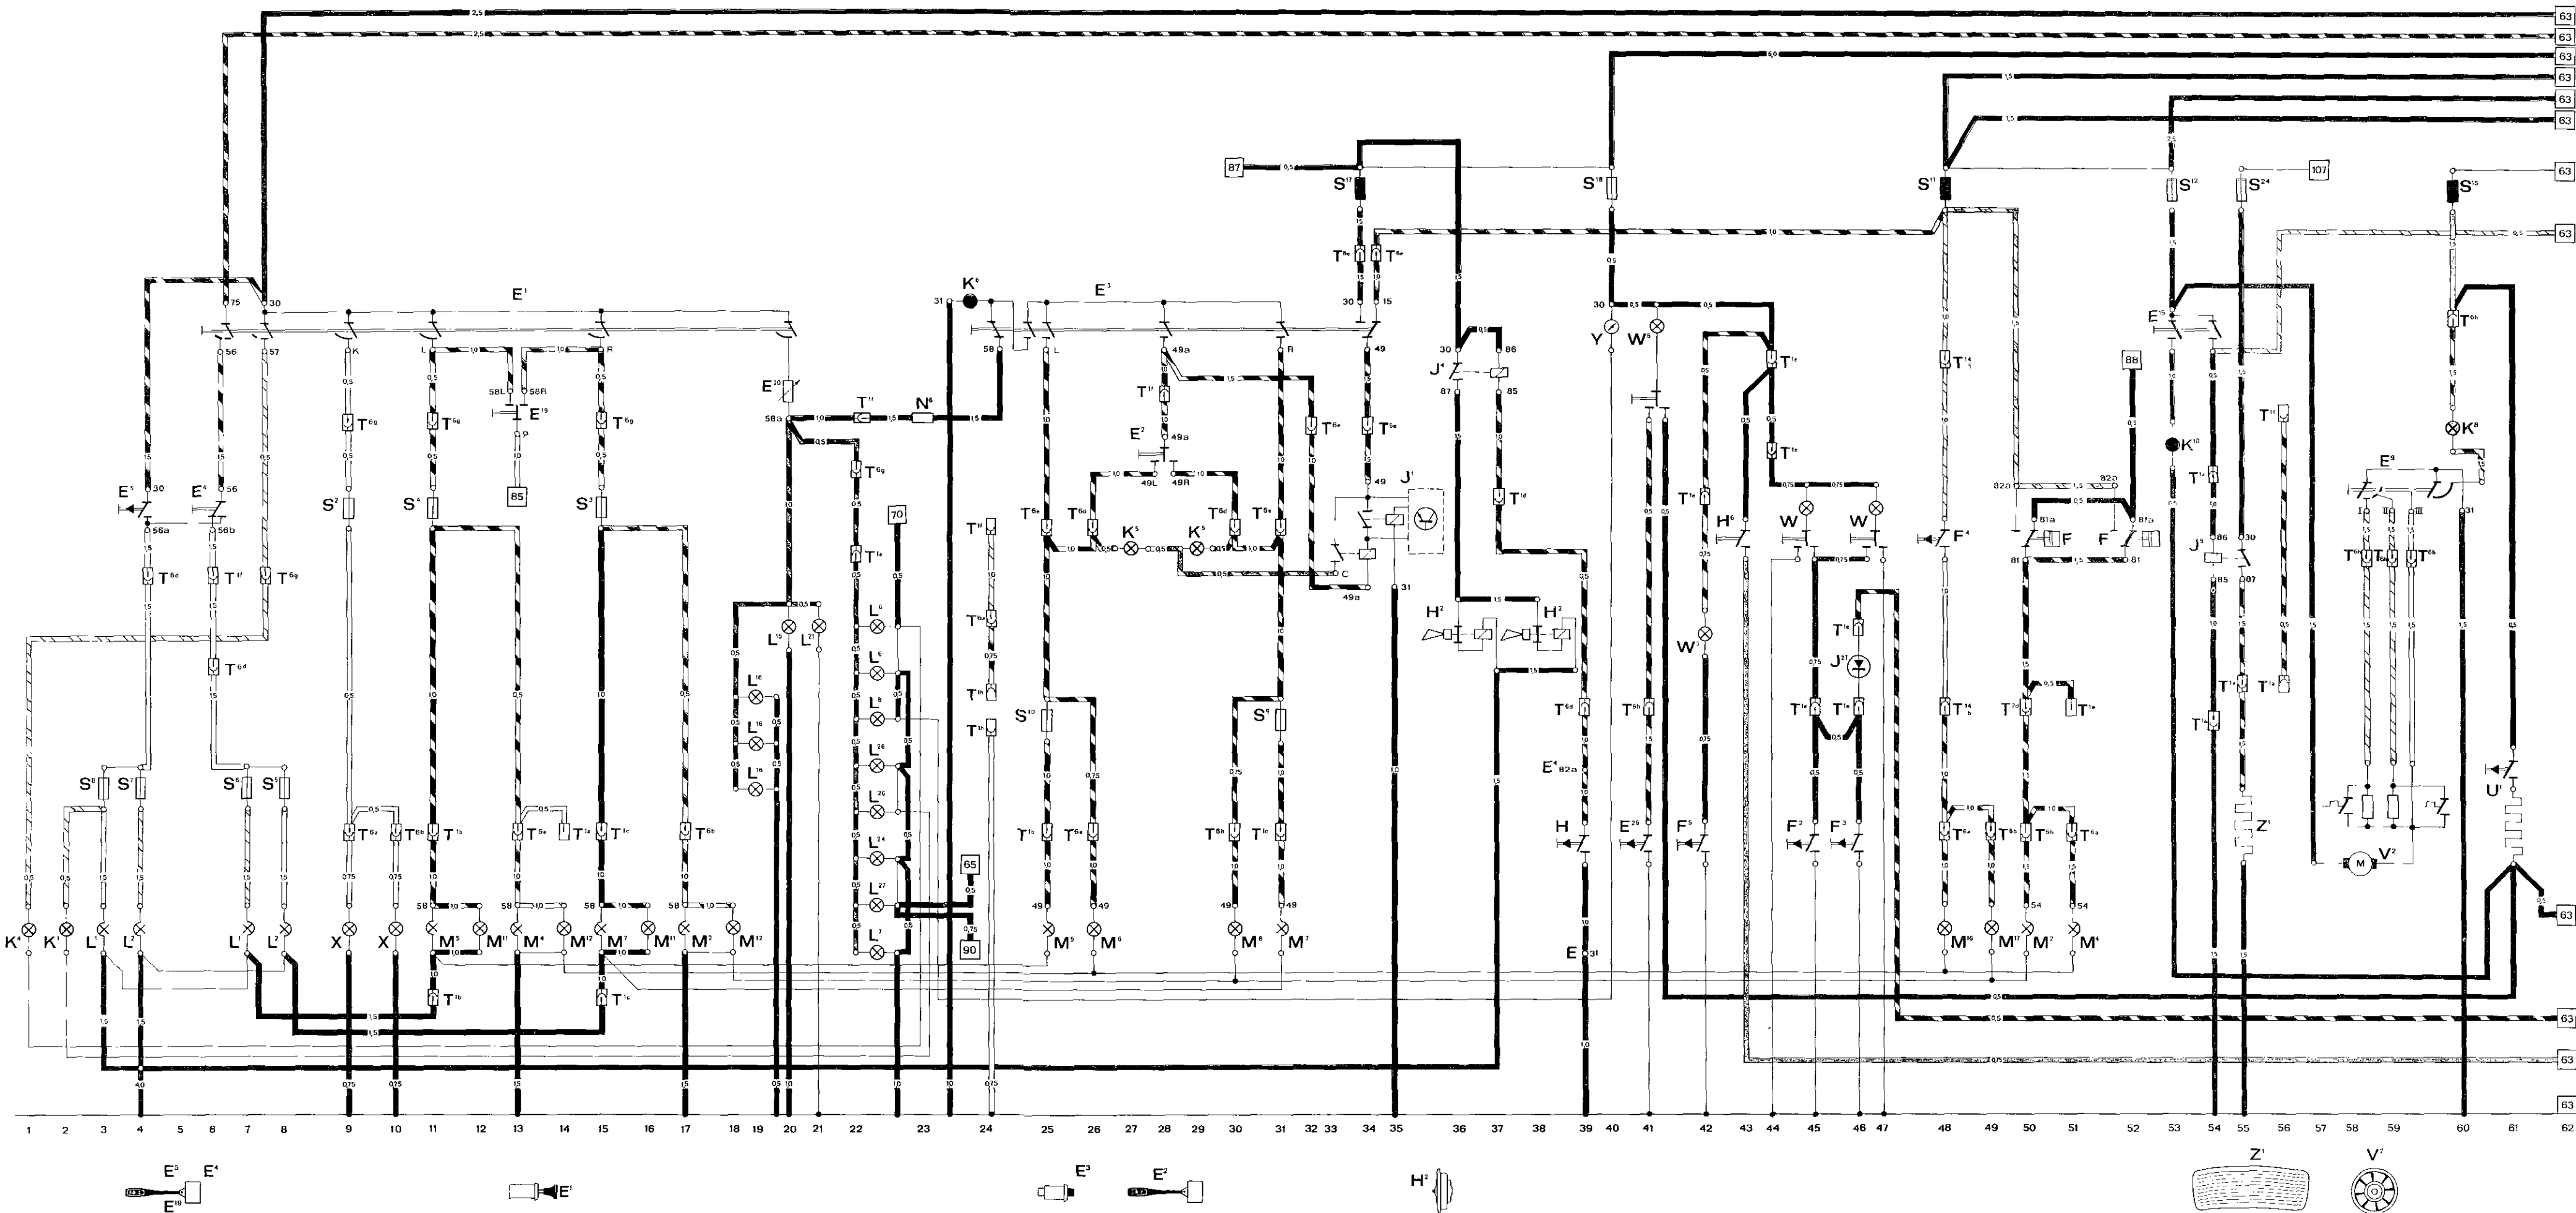

**Current flow diagram,
Type 911 S, USA, Model 77**

9

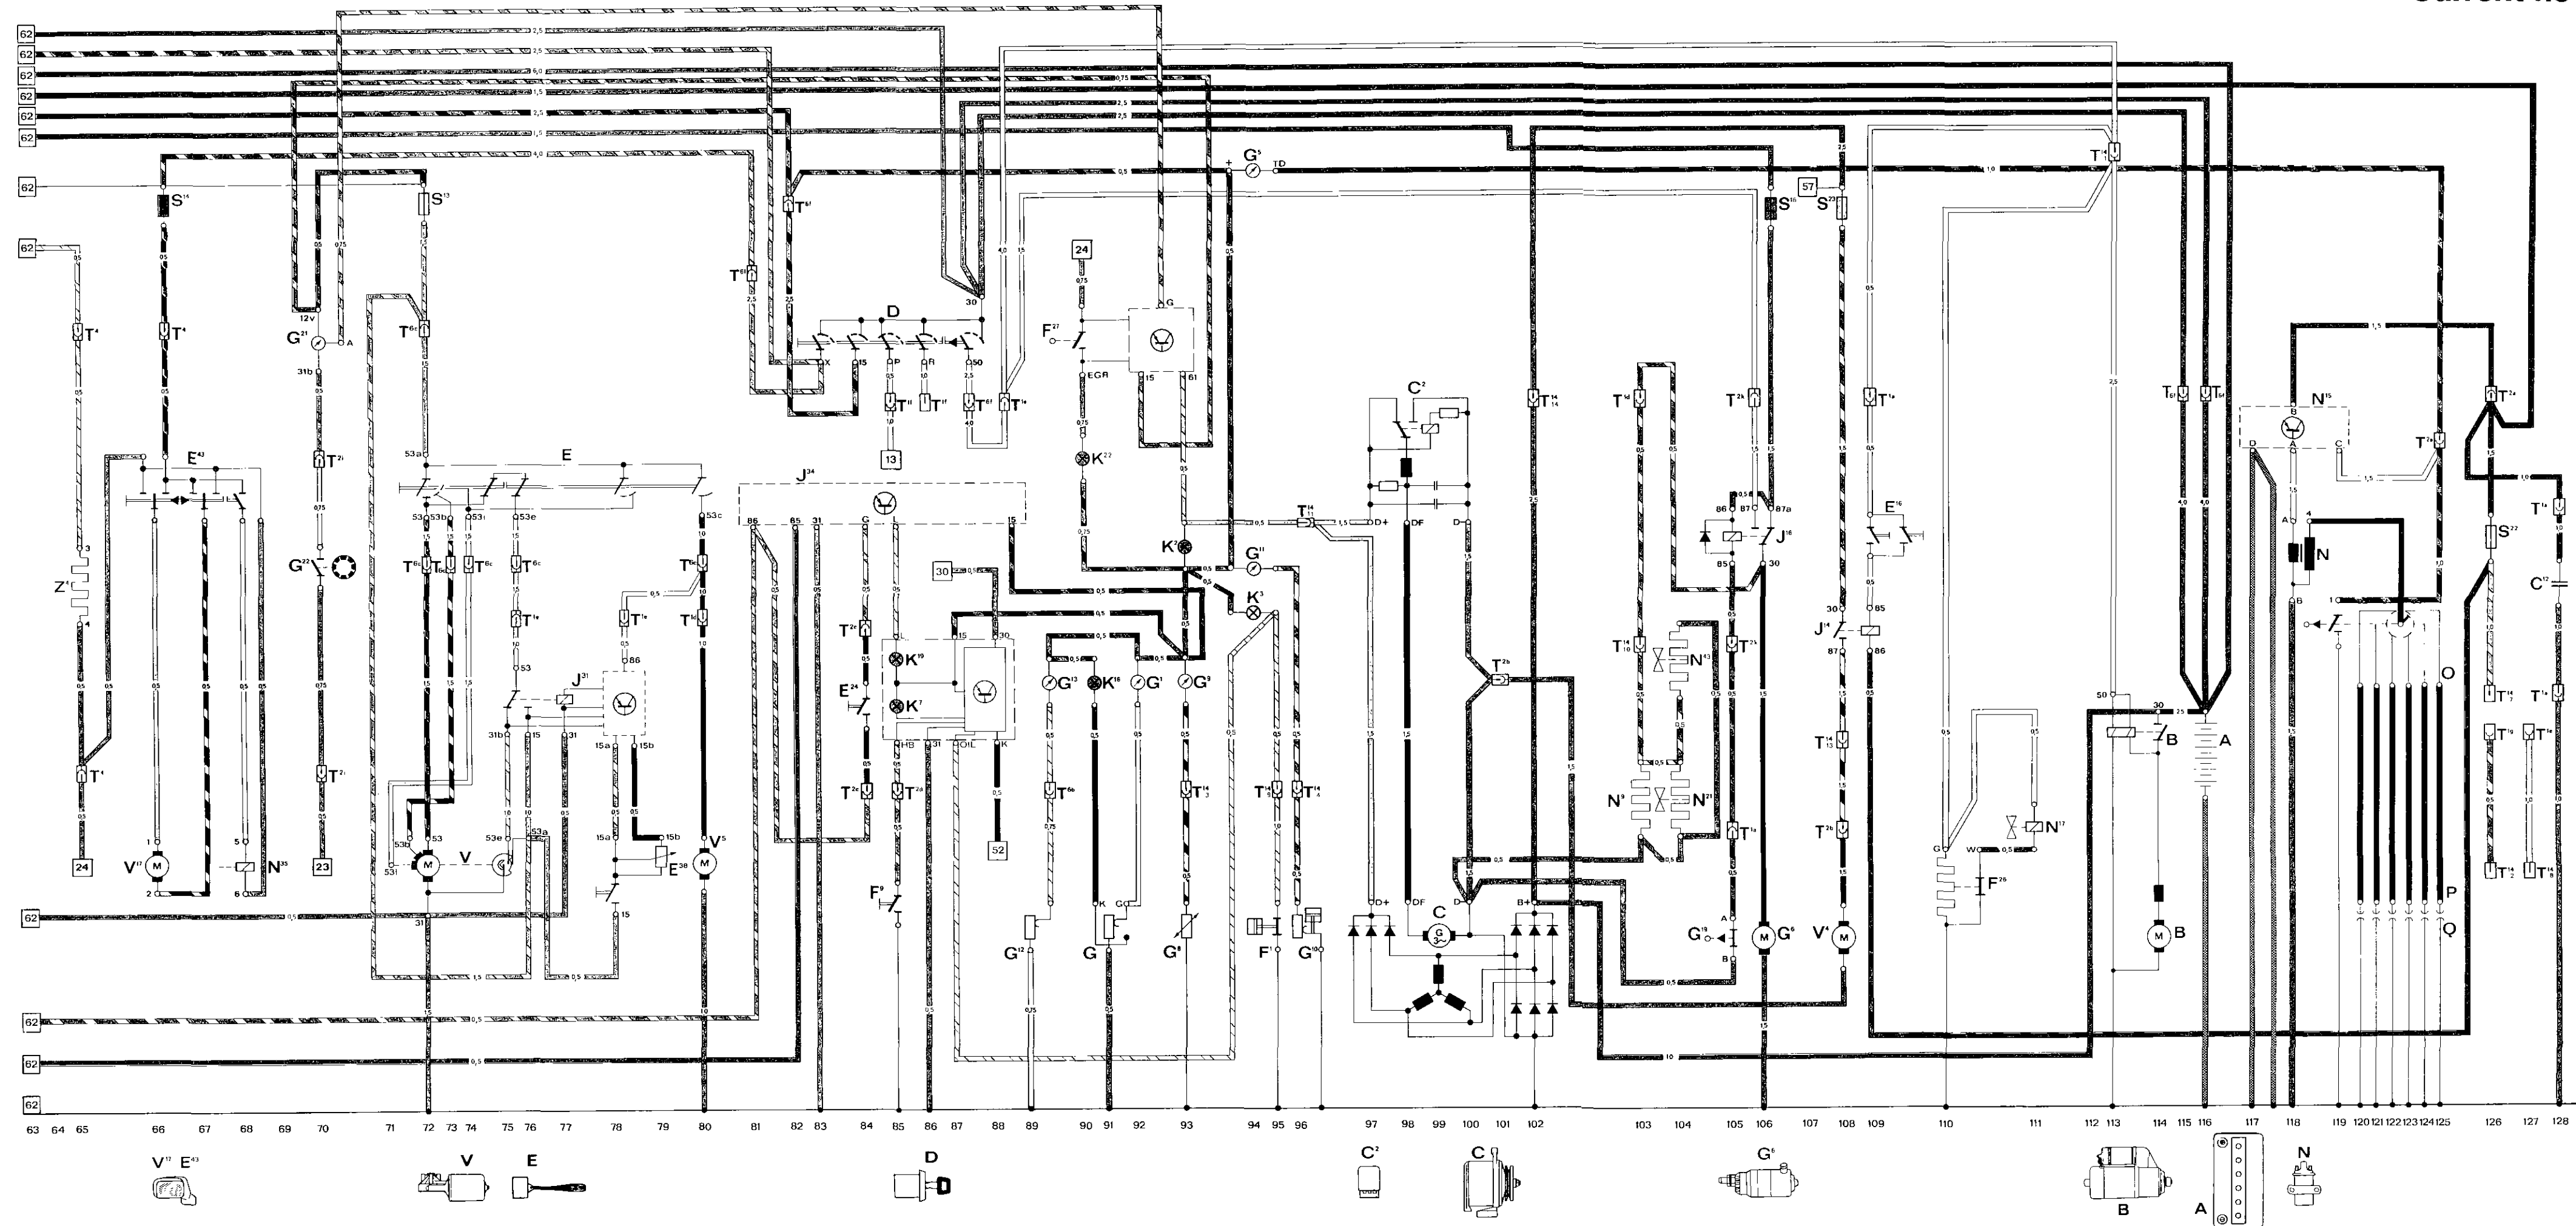


| Description | Current track |
|--|-------------------------|
| A — Battery | 116 |
| B — Starter | 113, 114 |
| C — Generator | 97 - 102 |
| C' — Voltage regulator | 98, 99 |
| C 12 — Capacitor for ignition unit | 128 |
| D — Ignition / starter switch | 83 - 88 |
| E — Windshield wiper switch | 72 - 80 |
| E 16 — Heater blower switch | 109 |
| E 24 — Left seat belt switch | 84 |
| E 38 — Potentiometer for intermittent wiper operation | 78, 79 |
| E 43 — Outside mirror control switch | 66, 67, 68 |
| F — Oil pressure switch | 95 |
| F 9 — Parking brake switch | 85 |
| F 26 — Thermo-switch for cold start valve | 110 |
| F 27 — Mileage counter switch (EGR) | 90 - 93 |
| G — Fuel sender unit | 91 |
| G 1 — Fuel gauge | 92 |
| G 5 — Tachometer | 94 |
| G 6 — Fuel pump | 106 |
| G 8 — Oil temperature sender unit | 93 |
| G 9 — Oil temperature indicator | 93 |
| G 10 — Oil pressure sender unit | 96 |
| G 11 — Oil pressure indicator | 94 |
| G 12 — Oil level sender unit | 89 |
| G 13 — Oil level gauge | 89 |
| G 19 — Air meter contact | 105 |
| G 21 — Speedometer | 70 |
| G 22 — Speedometer sensor | 70 |
| J 14 — Relay for heater blower | 108, 109 |
| J 16 — Relay for fuel pump | 105, 106 |
| J 31 — Relay for intermittent wiper operation | 75 - 78 |
| J 34 — Seat belt warning system relay with integrated buzzer | 81 - 88 |
| K 2 — Generator charge indicator light | 93 |
| K 3 — Oil pressure indicator light | 94 |
| K 7 — Parking brake / brake warning light | 85 |
| K 16 — Low fuel warning light | 90 |
| K 19 — Seat belt warning light | 85 |
| K 22 — EGR warning light | 90 |
| N — Ignition transformer | 118 |
| N 9 — Warm-up regulator | 103 |
| N 15 — High tension ignition unit | 118 |
| N 17 — Cold start valve | 111 |
| N 21 — Supplementary air valve | 104 |
| N 36 — Magnetic clutch for mirror control | 68 |
| N 43 — Thermovalve | 104 |
| O — Distributor | 119 - 125 |
| P — Spark plug connector | 120 - 125 |
| Q — Spark plug | 120 - 125 |
| S 13 — Fuses | 72 |
| S 14 — on the fuse box | 66 |
| S 16 — fuse box | 106 |
| S 23 — Fuses on the rear fuse box (regulator panel) | 126 |
| T 1 — Cable connector, single | 108 |
| a — near regulator panel | 105, 109, 128 |
| d — behind fuse box | 80, 103 |
| e — on luggage compartment floor | 76, 78, 88, 127 |
| f — behind instrument panel | 85, 86 |
| g — below shift lever housing | 126 |
| T 2 — Cable connector, double | 125, 126 |
| a — below regulator panel | 101, 108 |
| b — in engine compartment, left | 84 |
| c — near left seat | 85 |
| d — on luggage compartment floor | 70 |
| i — in tunnel, rear | 105, 106 |
| k — below regulator panel | 65, 66 |
| T 4 — Cable connector, quadruple, on luggage compartment floor | 89 |
| T 6 — Cable connector, sixfold | 72, 73, 74, 76, 80 |
| b — in engine compartment, right | 81, 82, 87, 115, 116 |
| c — below instrument panel | 93, 95, 96, 102 |
| f — below instrument panel | 103, 108, 113, 126, 127 |
| T 14 — Cable connector, fourteenfold on regulator panel | 72, 75 |
| V — Windshield wiper motor | 108 |
| V 4 — Heater blower | 80 |
| V 5 — Washer pump | 66 |
| V 17 — Outside mirror control motor | 65 |
| Z 4 — Outside mirror defogger | |

Additional current flow diagram brake booster, Type 911

9

Description Current track

| | | |
|-----------------|---|---------|
| F | - Stop light switch | 2, 3 |
| F ⁹ | - Parking brake switch | 3 |
| G ⁹ | - to oil temperature indicator (terminal 15) | 6 |
| J ³⁴ | - to seat belt warning system relay | 5 |
| K ³ | - to oil pressure indicator light | 6 |
| K ⁷ | - Parking brake/brake warning light | 4 |
| K ¹⁹ | - Seat belt warning light | 5 |
| M ² | - Right stop light | 7 |
| M ⁴ | - Left stop light | 8 |
| M ⁶ | - to left rear turn signal (ground) | 6 |
| M ⁸ | - to right rear turn signal (ground) | 6 |
| S ¹¹ | - Fuses on the | 4 |
| S ¹⁷ | - fuse box | 1 |
| T ¹ | - Cable connector, single, behind instrument panel | 3, 6, 7 |
| T ⁶ | - Cable connector, sixfold a - in engine compartment, left b - in engine compartment, right | 8 7 |

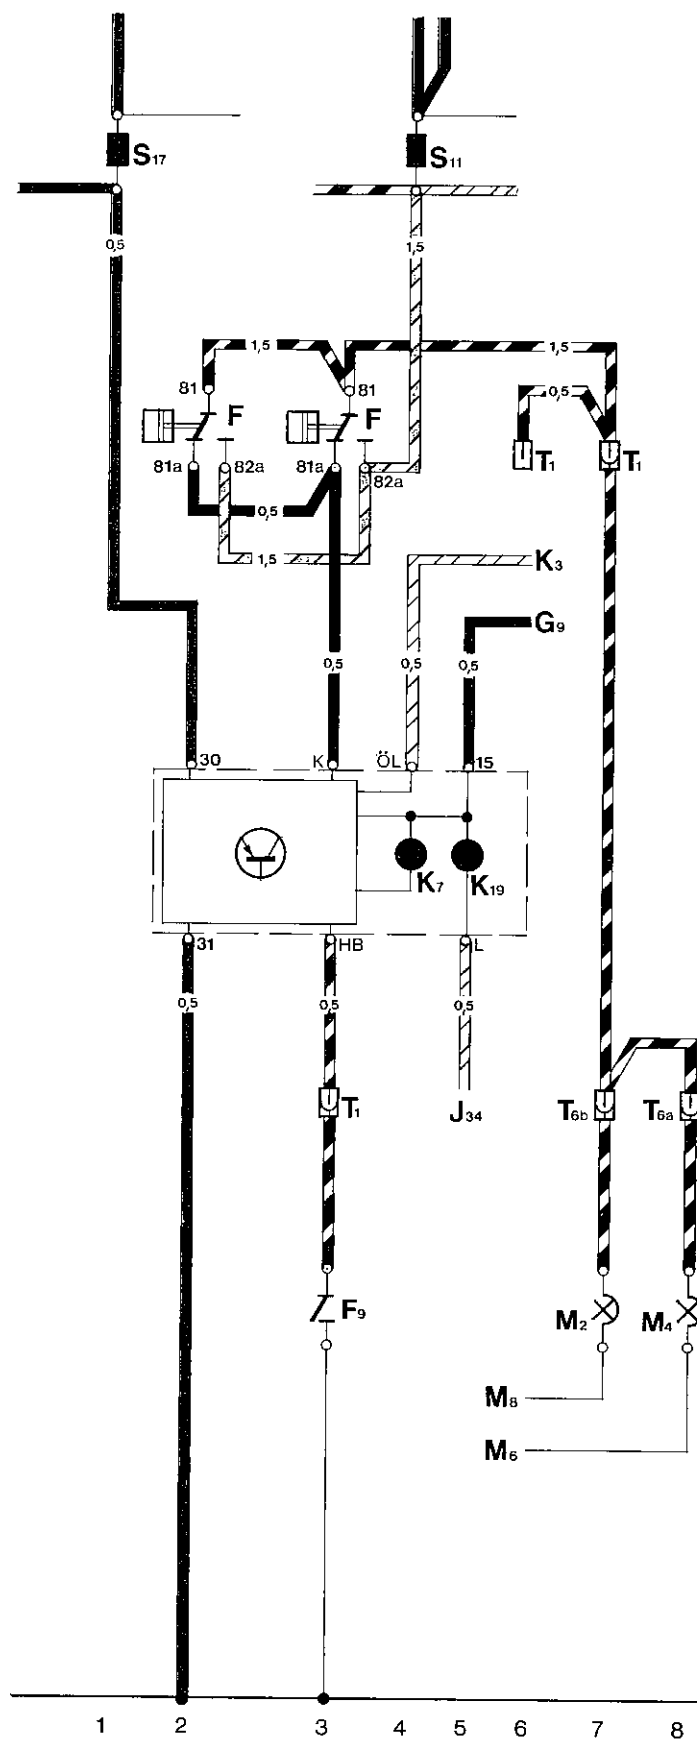

9

The diagram illustrates a control system for a crane with a variable speed drive. It is divided into five vertical sections labeled 1 to 5 at the bottom. Section 1 shows a power supply G_{21} connected to a transformer T_{12} . Section 2 shows a thyristor converter T_{2k} connected to a diode bridge J_{16} . Section 3 shows a feedback loop with a sensor G_{19} and a controller C . Section 4 shows a motor M connected to a power supply G_6 . Section 5 shows a diode bridge J_{16} connected to a power supply G_6 . The diagram includes various electrical symbols and labels such as G_{21} , T_{12} , T_{2k} , J_{16} , M , G_6 , G_{19} , C , N_9 , D , S_{16} , 86 , 87 , $87a$, 30 , 85 , 4 , 1 , 3 , 6 , $0,5$, and $0,5$.

Current flow diagram, Type 911 SC, USA, Model 78 **9**

9 Current flow diagram, Type 911 SC, USA, Model 78

Description

- E¹ - Windshield wiper switch
 E¹ - Headlight switch
 E² - Turn signal switch
 E³ - Emergency flasher switch
 E⁴ - Dimmer switch
 E⁵ - Headlight flasher switch
 E⁹ - Fresh air blower switch
 E¹⁵ - Rear window defogger switch
 E¹⁹ - Parking light switch
 E²⁰ - Instrument panel illumination potentiometer
 E²⁶ - Switch for glove compartment light
 F - Stop light switch
 F² - Left door switch
 F³ - Right door switch
 F⁴ - Back-up light switch
 F⁵ - Switch for luggage compartment light
 H - Horn switch
 H² - Horns
 H⁶ - Key warning buzzer contact
 J¹ - Hazard / turn signal flasher
 J⁴ - Horn relay
 J⁹ - Rear window defogger relay
 J²⁷ - Diode for seat belt warning system
 K¹ - High beam indicator light
 K⁴ - Parking lights indicator light
 K⁵ - Turn signal indicator light
 K⁶ - Hazard flasher indicator light
 K⁸ - Blower indicator light
 K¹⁰ - Rear window defogger indicator light
 L¹ - Sealed beam unit, left headlight
 L² - Sealed beam unit, right headlight
 L⁶ - Speedometer illumination light
 L⁷ - Fuel gauge illumination light
 L⁸ - Clock illumination light
 L¹⁵ - Ashtray illumination light
 L¹⁶ - Heater control assembly illumination light
 L²¹ - Temperature control lever illumination light
 L²⁴ - Oil temperature indicator illumination light
 L²⁶ - Tachometer illumination light
 L²⁷ - Oil pressure indicator illumination light
 M² - Right stop / rear light
 M⁴ - Left stop / rear light
 M⁵ - Left front turn signal / parking light
 M⁶ - Left rear turn signal
 M⁷ - Right front turn signal / parking light
 M⁸ - Right rear turn signal
 M¹¹ - Front side marker light
 M¹² - Rear side marker light
 M¹⁵ - Left back-up light
 M¹⁷ - Right back-up light
 N⁶ - Resistor
 S²
 to -
 S¹² - Fuses
 on the
 S¹⁵
 S¹⁷
 S¹⁸ fuse box
 S²⁴ - Fuse on the rear fuse box
 T¹ - Cable connector, single
 a - near regulator panel
 b - behind sealed beam unit, left
 c - behind sealed beam unit, right
 d - behind fuse box
 e - on luggage compartment floor
 f - behind instrument panel
 T^{2 d} - Cable connector, double, on luggage compartment
 T⁶ - Cable connector, sixfold
 a - in the engine compartment, rear left
 b - in the engine compartment, rear right
 c - below instrument panel
 d - below instrument panel
 e - below instrument panel
 g - below instrument panel
 h - below instrument panel
 T¹⁴ - Cable connector, fourteenfold
 on regulator panel
 U¹ - Cigar lighter
 V² - Blower motor
 W - Interior light
 W³ - Luggage compartment light
 W⁶ - Glove compartment light
 X - License plate light
 Y - Clock
 Z¹ - Rear window defogger


Current track

- 39
6, 8, 9, 11, 15, 20
28
24, 25, 28, 31, 34
6, 39
4
58, 59, 60
53, 54
13
20
41
50, 52
45
46
48
42
39
36, 38
43
33, 34, 35
36, 37
54, 55
46
2
1
27, 29
24
60
53
3, 7
4, 8
22
22
22
20
19
21
22
22
22
17, 50
13, 51
11, 25
26
15, 31
30
12, 16
14, 18
48
49
23
9, 15, 11
8, 7, 4
3, 31, 25, 48, 53
60
34
40
55

14, 54, 55, 56
11, 25
15, 31
37
22, 42, 44, 45, 46
6, 22, 24, 28, 56
50

9, 17, 30, 49, 50
10, 24, 26, 48, 51
4, 6, 26, 30, 39
25, 31, 32, 34
8, 9, 11, 15, 22
41, 58, 59, 60


48
61
58, 59
45, 46
42
41
9, 10
40
55

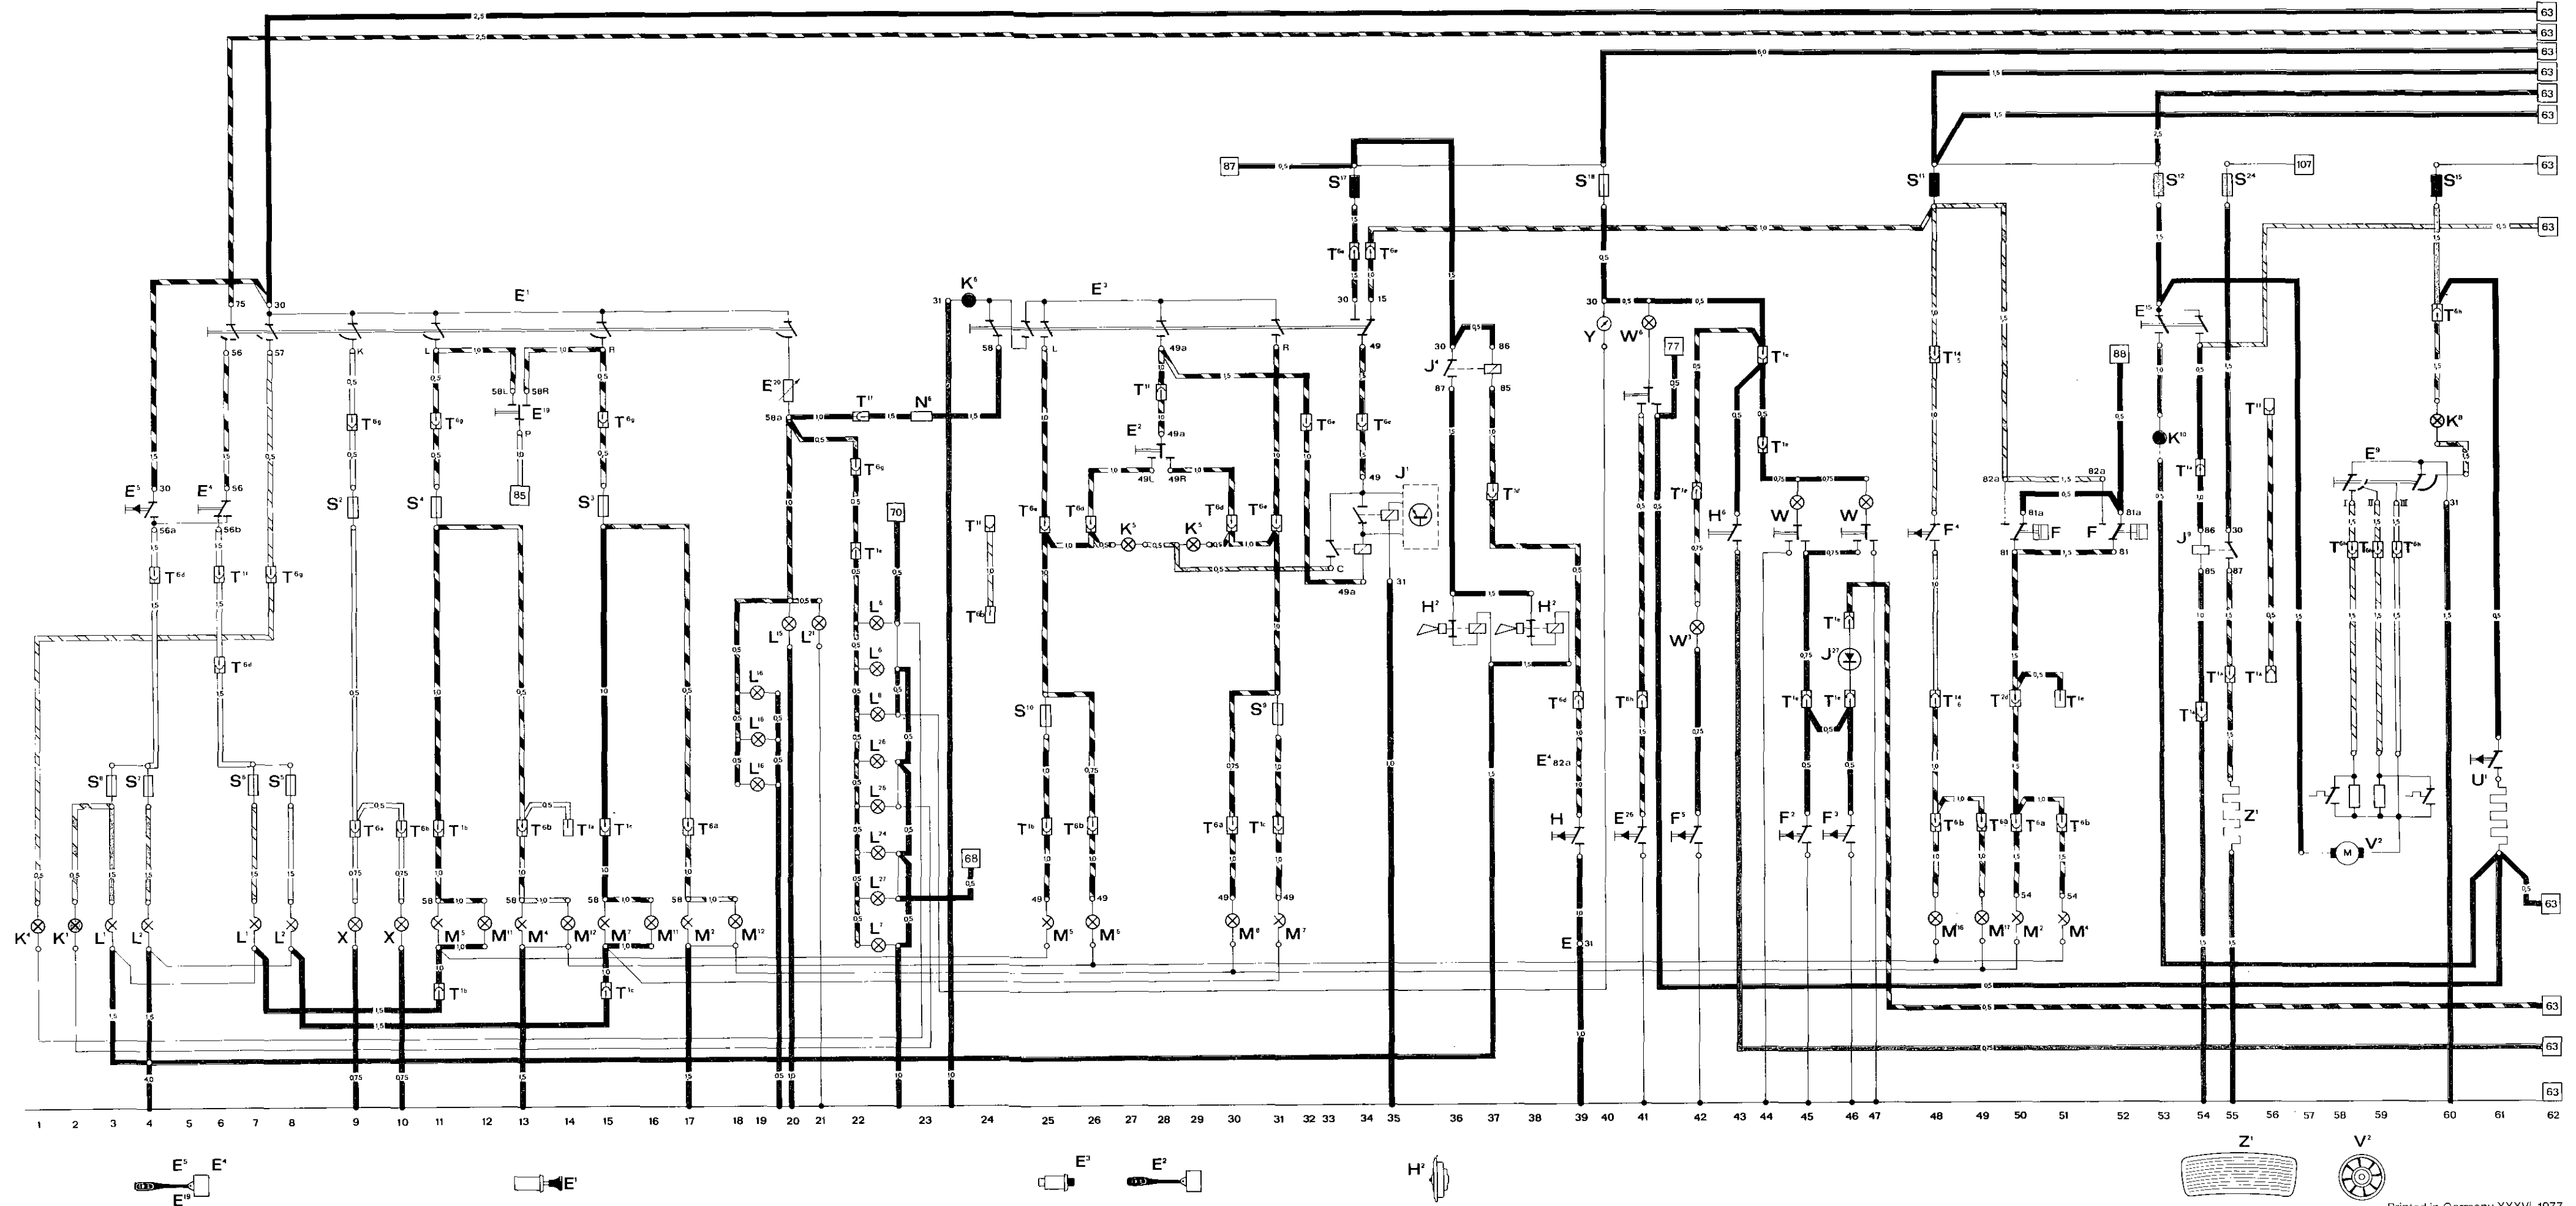

Current flow diagram,

9

Type 911 SC, USA, Model 78

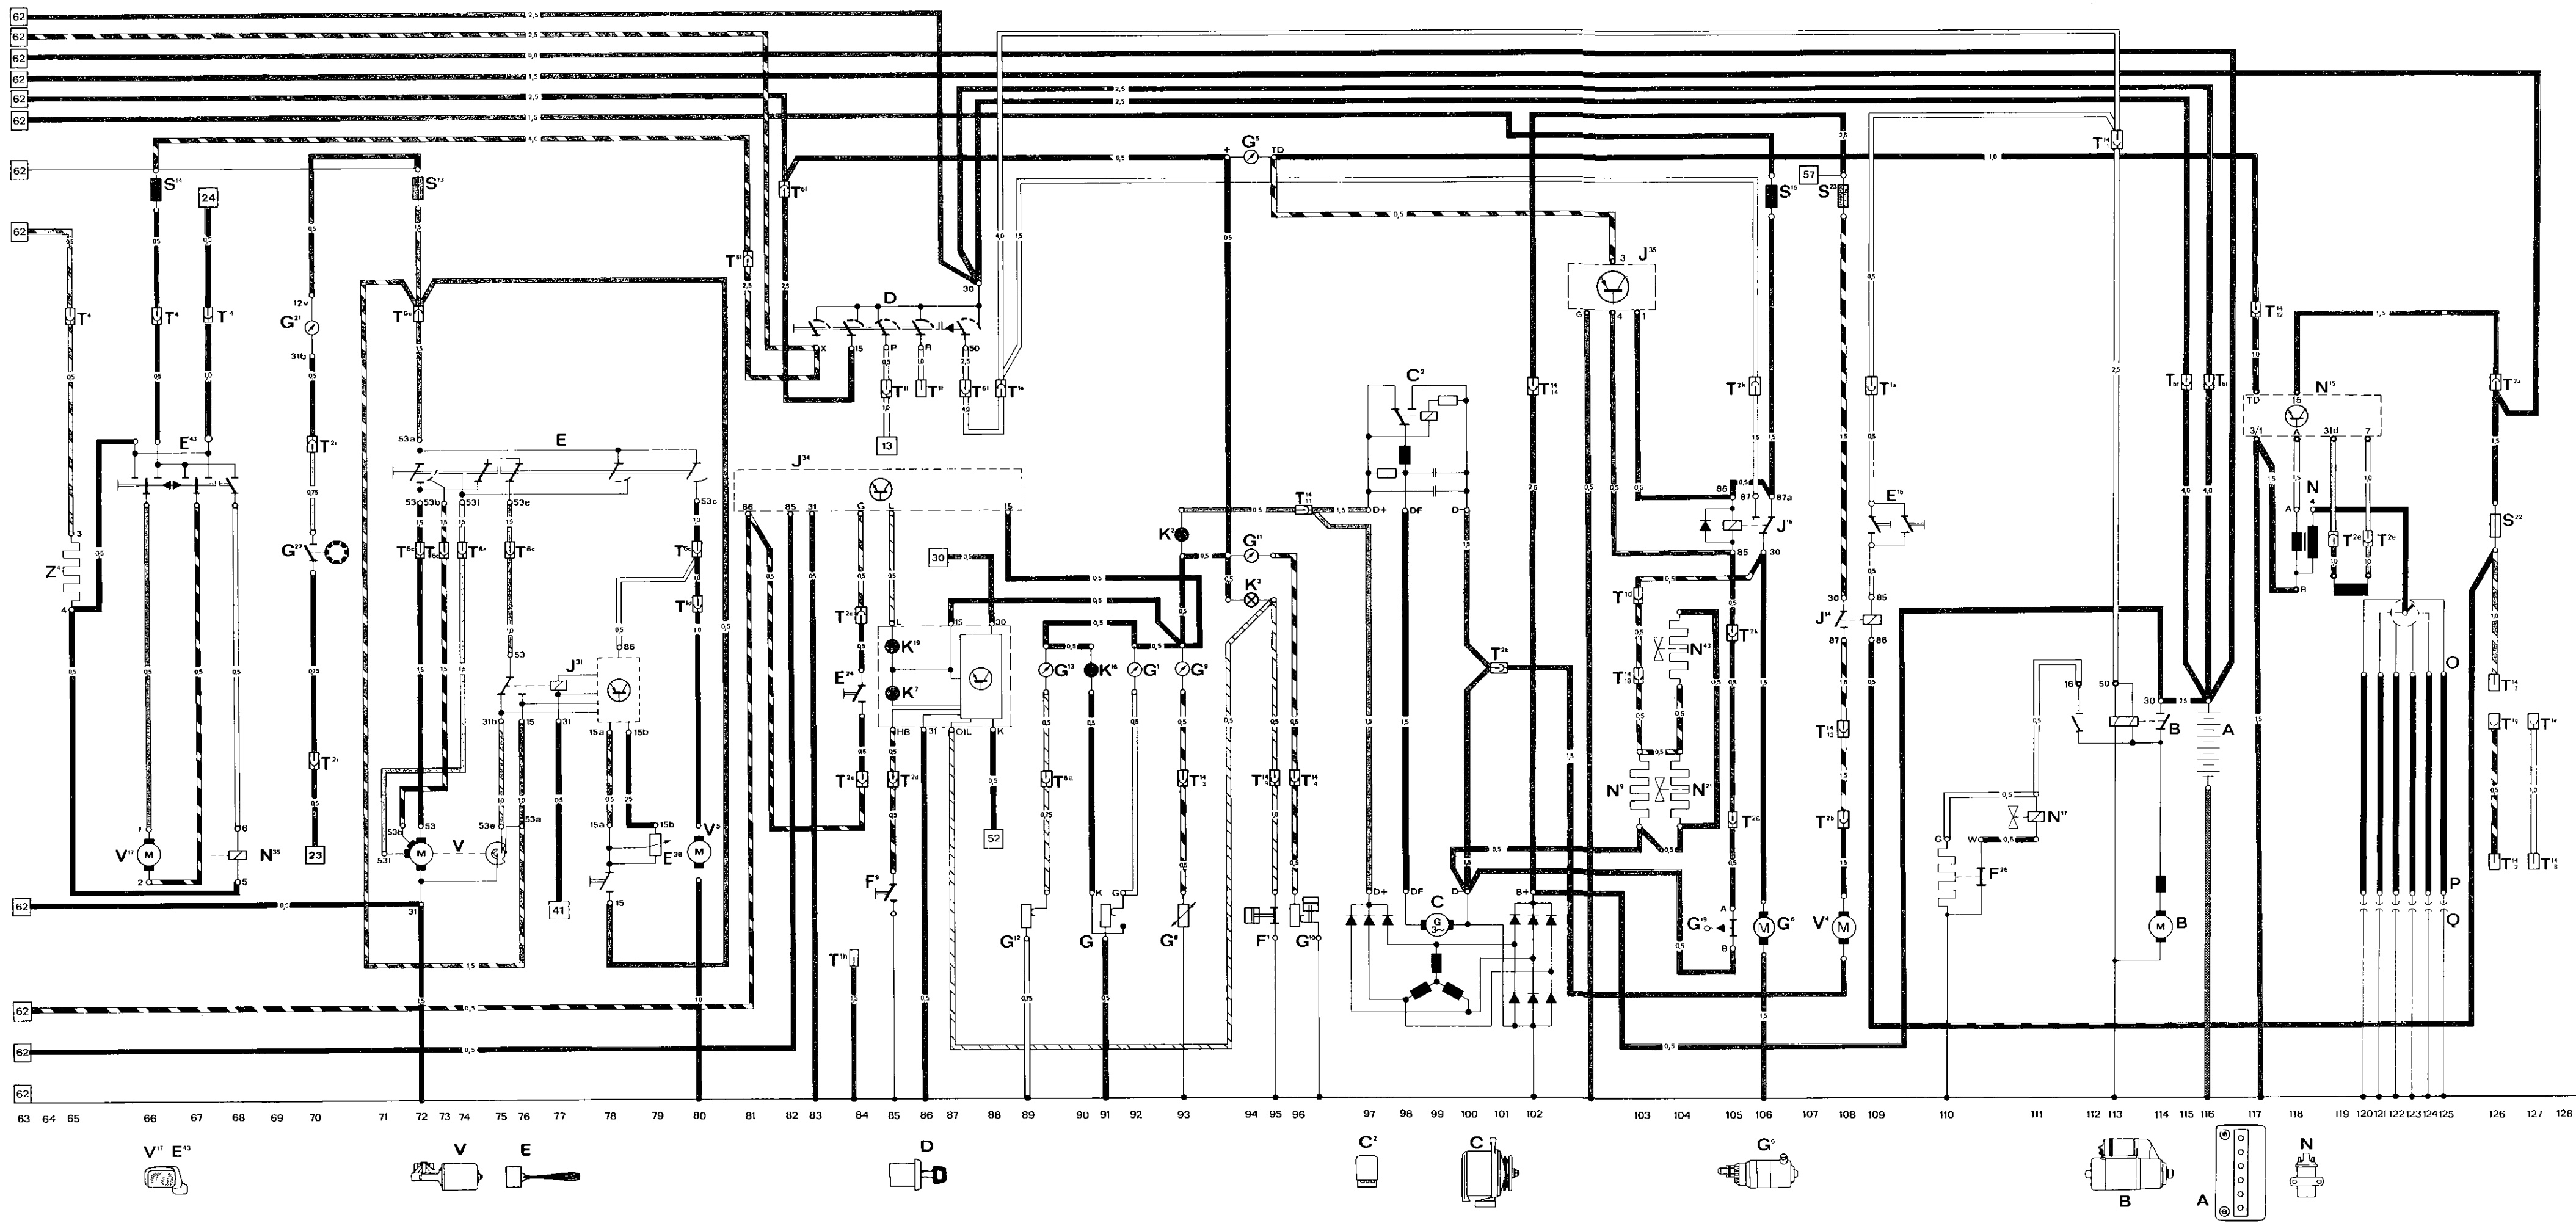


| Description | Current track |
|--|---|
| A — Battery | 116 |
| B — Starter | 113, 114 |
| C — Generator | 97 - 102 |
| C 2 — Voltage regulator | 98, 99 |
| D — Ignition / starter switch | 83 - 88 |
| E — Windshield wiper switch | 72 - 80 |
| E 16 — Heater blower switch | 109 |
| E 24 — Left seat belt switch | 84 |
| E 38 — Potentiometer for intermittent wiper operation | 78, 79 |
| E 43 — Outside mirror control switch | 66, 67, 68 |
| F 1 — Oil pressure switch | 95 |
| F 9 — Parking brake switch | 85 |
| F 26 — Thermo-switch for cold start valve | 110 |
| G 1 — Fuel sender unit | 91 |
| G 5 — Fuel gauge | 92 |
| G 8 — Tachometer | 94 |
| G 9 — Fuel pump | 106 |
| G 10 — Oil temperature sender unit | 93 |
| G 11 — Oil temperature indicator | 93 |
| G 12 — Oil pressure sender unit | 96 |
| G 13 — Oil pressure indicator | 94 |
| G 19 — Oil level sender unit | 89 |
| G 21 — Oil level gauge | 89 |
| G 22 — Air meter contact | 105 |
| G 27 — Speedometer | 70 |
| J 14 — Speedometer sensor | 70 |
| J 14 — Relay for heater blower | 108, 109 |
| J 16 — Relay for fuel pump | 105, 106 |
| J 21 — Relay for intermittent wiper operation | 75 - 78 |
| J 34 — Seat belt warning system relay with integrated buzzer | 81 - 88 |
| J 35 — Speed switch | 103 |
| K 2 — Generator charge indicator light | 93 |
| K 3 — Oil pressure indicator light | 94 |
| K 7 — Parking brake / brake warning light | 85 |
| K 16 — Low fuel warning light | 90 |
| K 19 — Seat belt warning light | 85 |
| N — Ignition transformer | 118 |
| N 9 — Warm-up regulator | 103 |
| N 15 — High tension ignition unit | 118 |
| N 17 — Cold start valve | 111 |
| N 21 — Supplementary air valve | 104 |
| N 35 — Magnetic clutch for mirror control | 68 |
| N 43 — Thermovalve | 104 |
| O — Distributor | 119 - 125 |
| P — Spark plug connector | 120 - 125 |
| Q — Spark plug | 120 - 125 |
| S 13 — Fuses | 72 |
| S 14 — on the | 66 |
| S 16 — fuse box | 106 |
| S 22 — Fuses on the | 126 |
| S 23 — rear fuse box (regulator panel) | 108 |
| T 1 — Cable connector, single | |
| a — near regulator panel | 105, 109, |
| d — behind fuse box | 80, 103 |
| e — on luggage compartment floor | 88, 127 |
| f — behind instrument panel | 85, 86 |
| g — below shift lever housing | 126 |
| h — near battery | 84 |
| T 2 — Cable connector, double | |
| a — below regulator panel | 105, 126 |
| b — in engine compartment, left | 101, 108 |
| c — near left seat | 84 |
| d — on luggage compartment floor | 85 |
| e — near distributor | 119, 120 |
| i — in tunnel, rear | 70 |
| k — below regulator panel | 105, 106 |
| T 4 — Cable connector, quadruple, on luggage compartment floor | 65, 66, 67 |
| T 6 — Cable connector, sixfold | |
| a — in engine compartment, right | 89 |
| c — below instrument panel | 72, 73, 74, 76, 80 |
| f — below instrument panel | 81, 82, 87, 115, 116 |
| T 14 — Cable connector, fourteenfold on regulator panel | 93, 95, 96, 102, 103, 108, 113, 117, 126, 127 |
| V 17 — Windshield wiper motor | 72, 75 |
| V 4 — Heater blower | 108 |
| V 5 — Washer pump | 80 |
| V 17 — Outside mirror control motor | 66 |
| Z 4 — Outside mirror defogger | 65 |

**Additional current flow diagram
power windows
Type 911 from model 77**

Additional current flow diagram
power windows
Type 911 from model 77


| Description | Current track |
|--|---------------|
| A - to battery | 9 |
| D - to ignition/starter switch (terminal X) | 1 |
| D - to ignition/starter switch (terminal 15) | 2 |
| E ³⁹ - Power window switch, driver side, for passenger side | 5, 6 |
| E ⁴⁰ - Power window switch, driver side | 9, 10 |
| E ⁴¹ - Power window switch, passenger side | 5, 6 |
| J ⁵¹ - Power window relay | 3, 4 |
| S ¹² - Fuse | 2 |
| S ¹³ - Fuse | 2 |
| S ¹⁴ - Fuse | 1 |
| S ¹⁷ - Fuse | 8 |
| S ¹⁸ - Fuse | 9 |
| S ²¹ - Fuse | 5 |
| T ¹ - Cable connector, single, behind fuse box | 3 |
| T ⁶ - Cable connector, sixfold | |
| a - in door well, left | 5, 6, 8 |
| b - in door well, right | 5, 6, 7 |
| V ¹⁴ - Power window motor, left | 9, 10 |
| V ¹⁵ - Power window motor, right | 5, 6 |

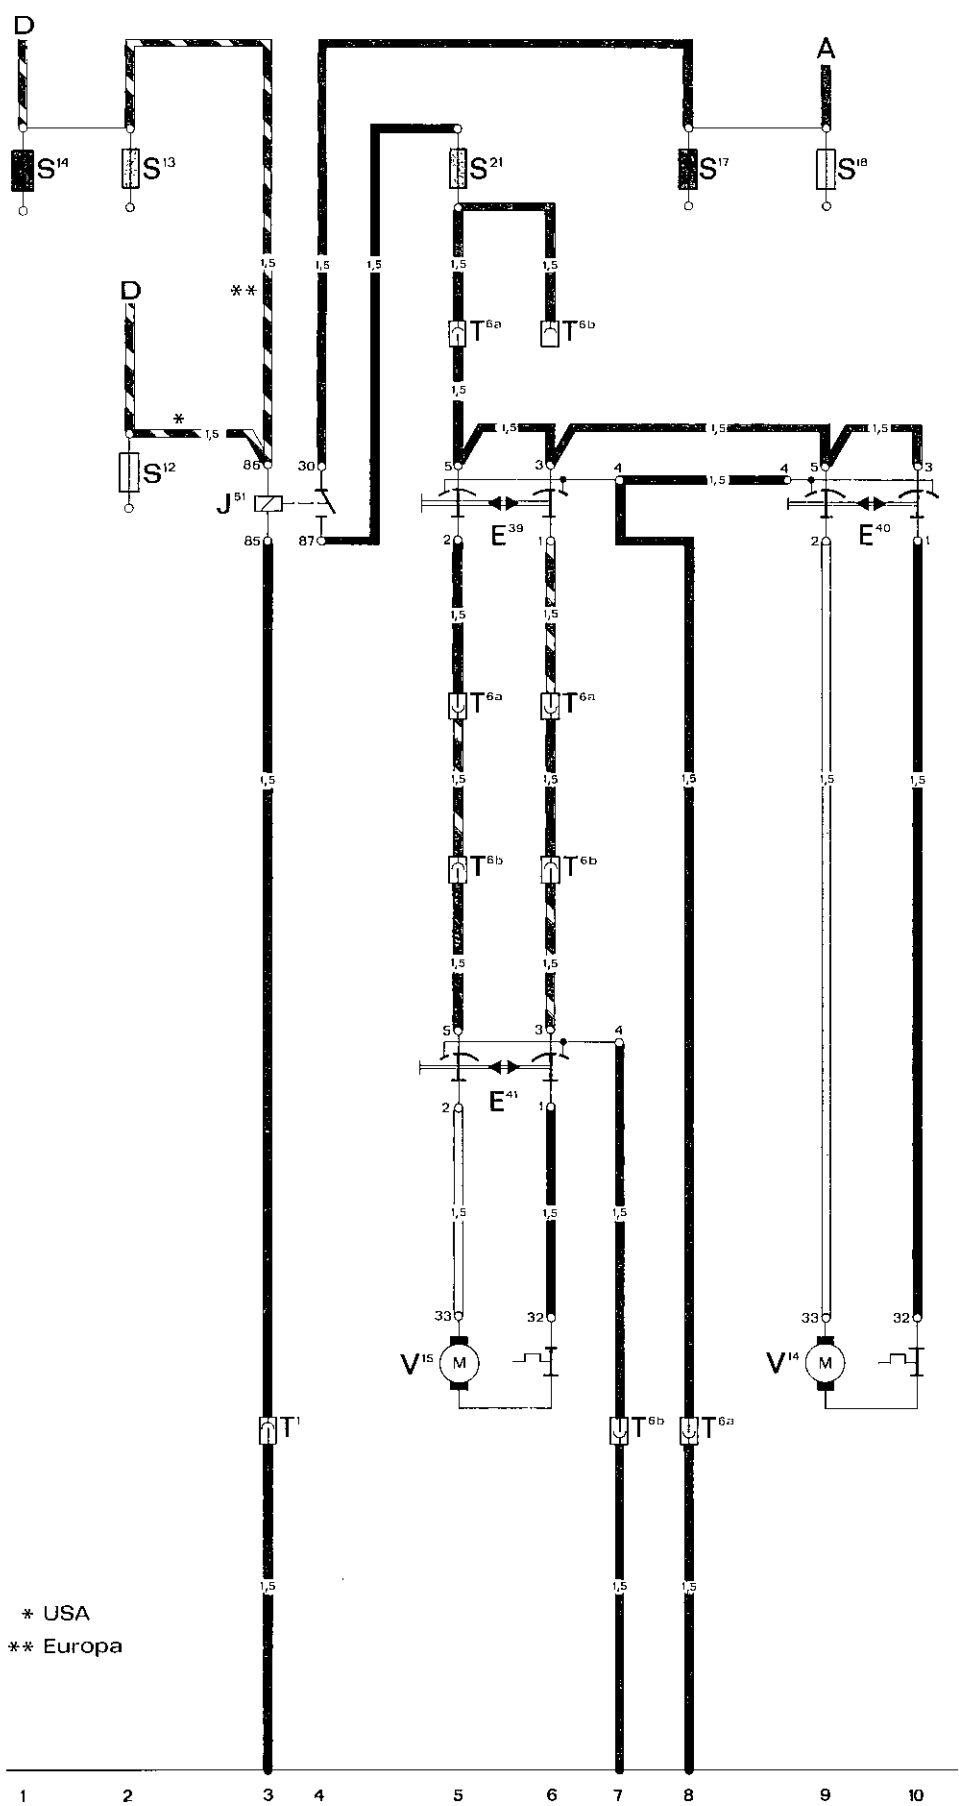

**Additional Current Flow Diagram
Air Conditioner (M 399)
Type 911 from model 77**

Additional Current Flow Diagram
Air Conditioner (M 399)
Type 911 from model 77

| Description | Current track |
|--|---------------|
| A - to battery | 9 |
| B - to starter (terminal 50) | 2 |
| D - to ignition/starter switch (terminal 15) | 1 |
| D - to ignition/starter switch (terminal 50) | 4 |
| E ³⁰ - Switch for AC | 5, 6 |
| E ³³ - Temperature switch for AC | 10 |
| F ⁴⁵ - Thermo-switch for AC (excess temperature) | 10 |
| J ³² - Relay for AC | 4, 5 |
| N ²³ - Resistor for evaporator blower | 5, 6 |
| N ²⁵ - Electromagnetic clutch | 10 |
| S ¹¹ - Fuse | 3 |
| S ¹² - Fuse | 2 |
| S ¹⁸ - Fuse | 7 |
| S ¹⁹ - Fuse | 6 |
| S ²⁰ - Fuse | 5 |
| T ¹ - Wire connector, single | |
| a - near compressor | 10 |
| e - on luggage compartment floor | 2, 4, 10 |
| T ² - Wire connector, two-pole | |
| a - near evaporator blower | 8 |
| T ⁴ - Wire connector, four-pole, below instrument panel | 5, 8, 10 |
| T ^{6f} - Wire connector, six-pole, below instrument panel | 4 |
| V ²⁰ - Evaporator blower | 8 |

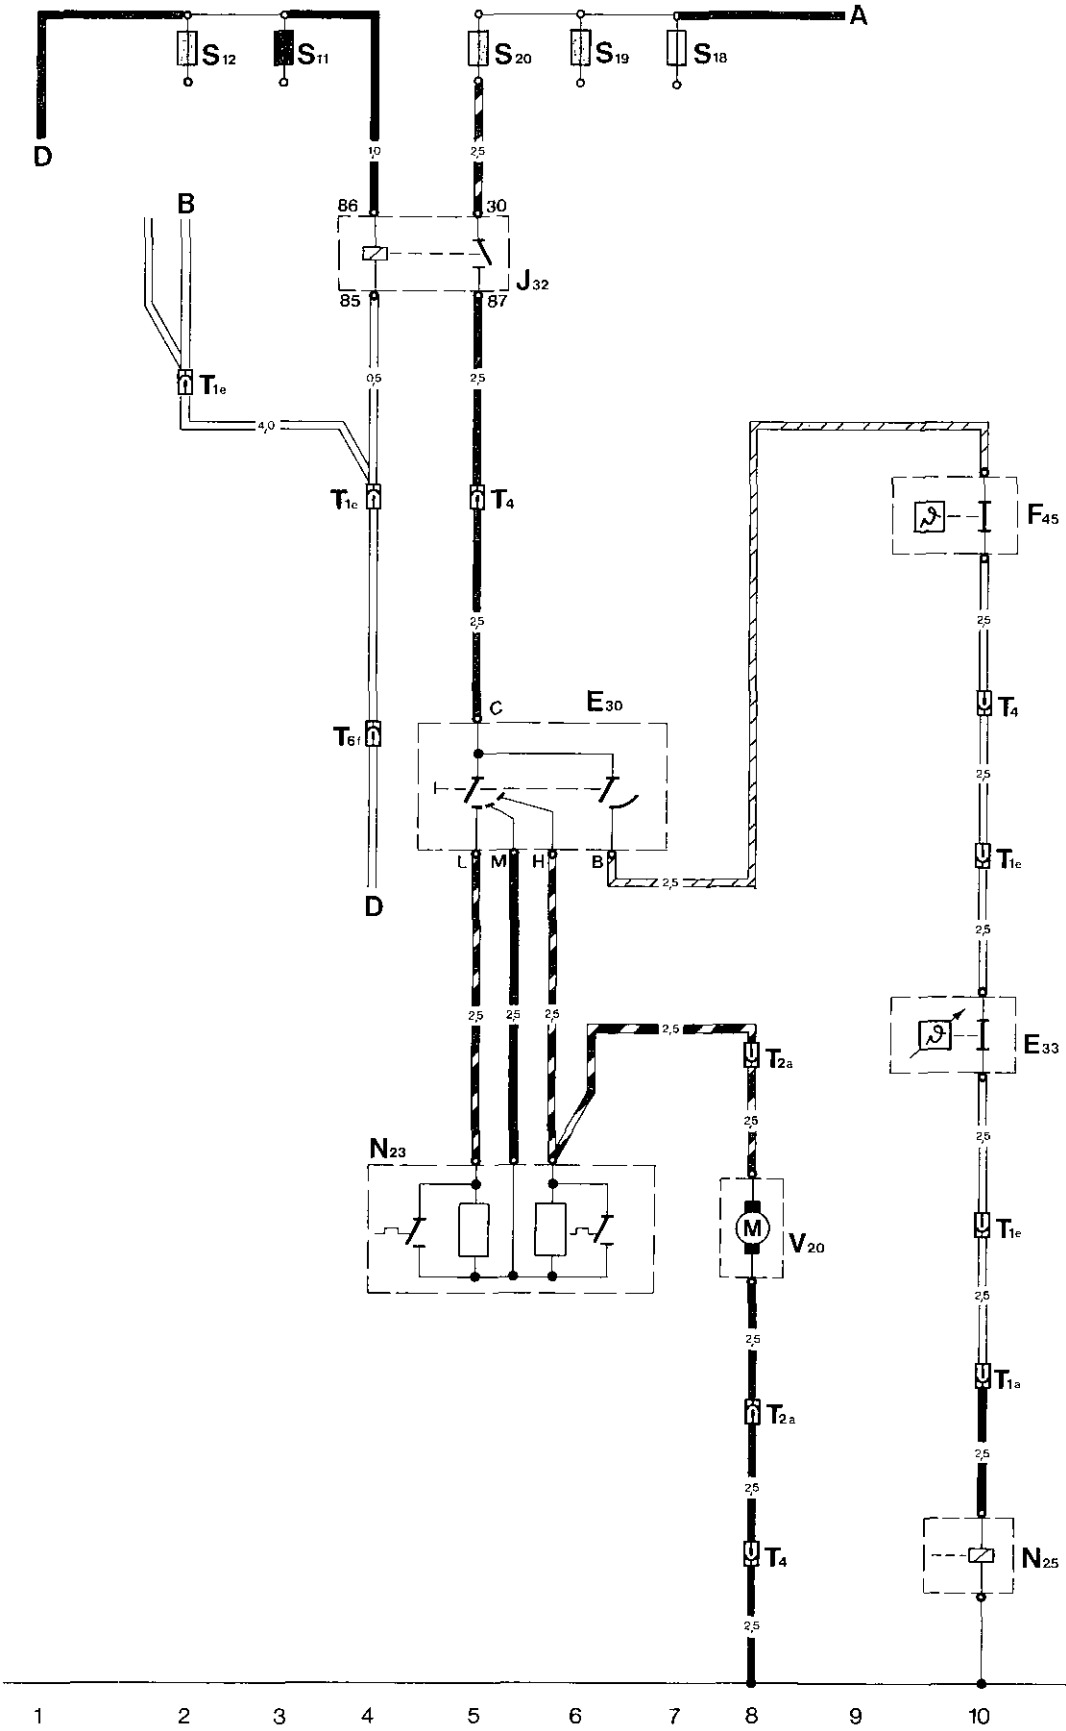


Additional Current Flow Diagram

Type 911 SC USA, Model 80

Oxygen Sensor System

Additional Current Flow Diagram, Type 911 SC USA, Model 80

Oxygen Sensor System

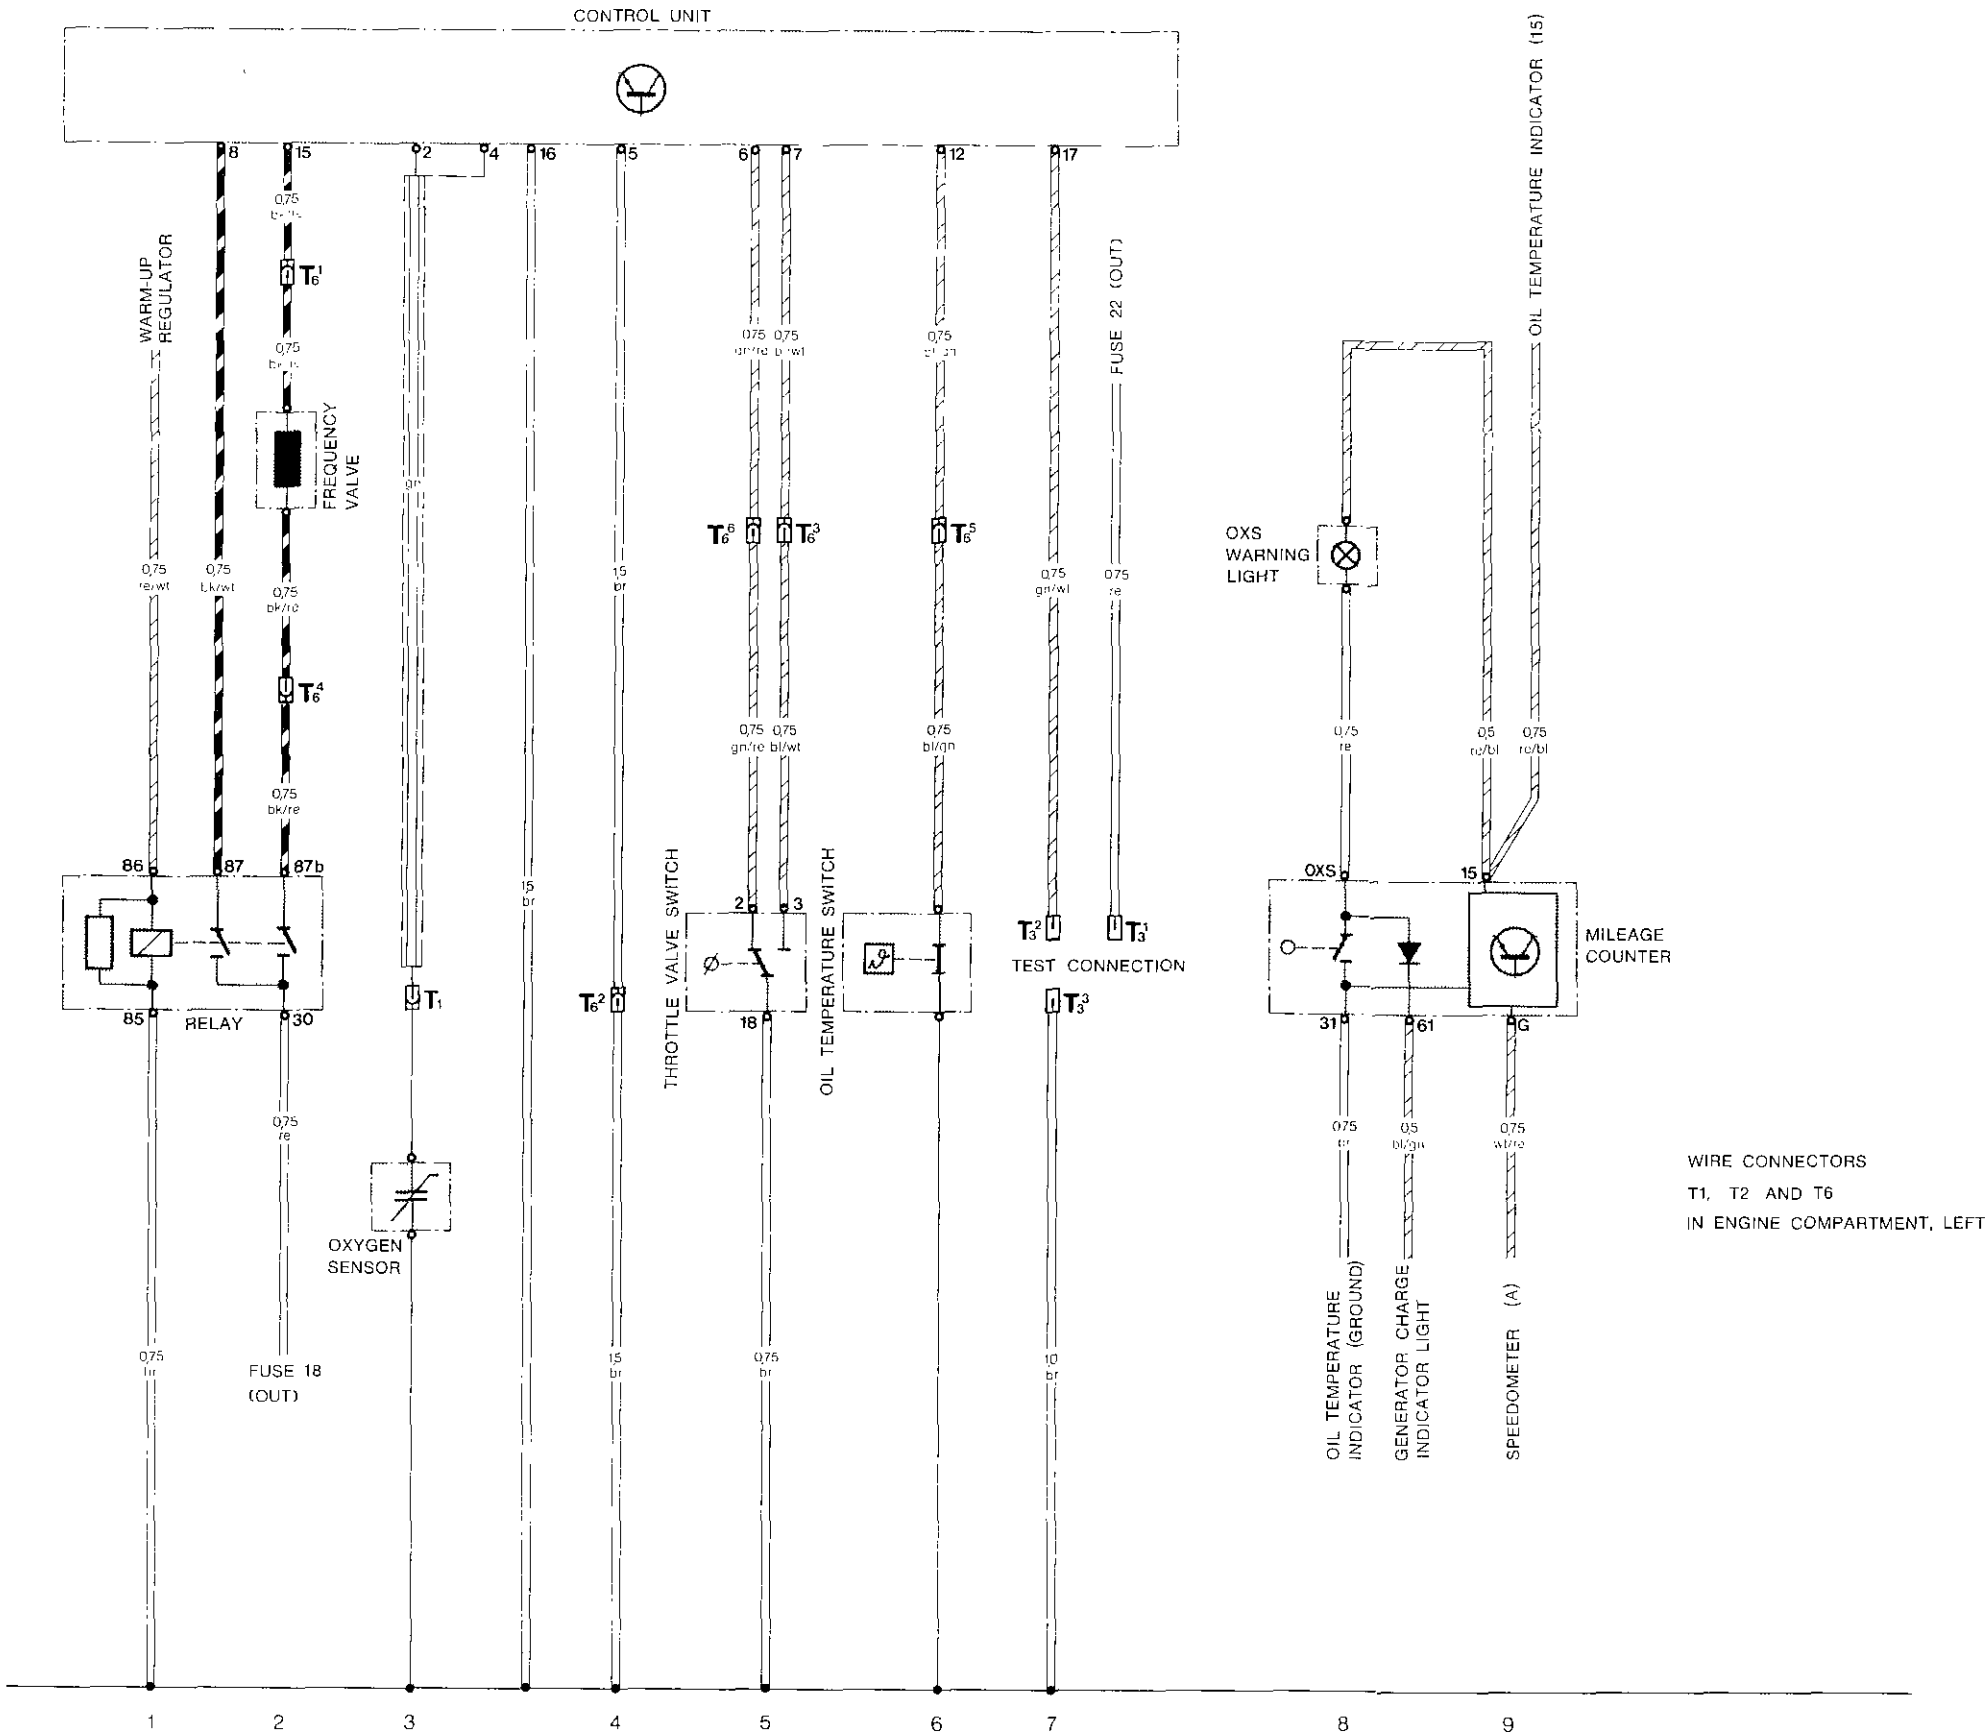

Current Flow Diagram

Type 911 SC USA Model 81

| | |
|-----------------|---|
| PART I | POWER SUPPLY, STARTER FUEL PUMP HEATER VENTILATOR IGNITION |
| PART II | HEADLIGHT, FRONT TURN SIGNAL, HAZARD FLASHER |
| PART III | REAR LIGHT, BRAKE LIGHT HORNS INTERIOR LIGHT IGNITION/STARTER SWITCH REAR WINDOW DEFOGGER |
| PART IV | OUTSIDE MIRROR FRESH AIR BLOWER CIGARETTE LIGHTER WINDSHIELD WIPER POWER WINDOWS |
| PART V | OXYGEN SENSOR SYSTEM INSTRUMENT, SENDER UNITS |
| PART VI | OXYGEN SENSOR SYSTEM |

Current Flow Diagram

Type 911 SC USA Model 81

9

WIRE CONNECTORS

T1 - ONE POLE

- A - NEAR REGULATOR PANEL
- B - BEHIND HEADLIGHT LEFT
- C - BEHIND HEADLIGHT RIGHT
- D - BEHIND FUSE BOX
- E - ON LUGGAGE COMPARTMENT FLOOR
- F - BEHIND INSTRUMENT PANEL

T2 - TWO POLE

- A - BELOW REGULATOR PANEL
- B - IN ENGINE COMPARTMENT LEFT
- C - NEAR DISTRIBUTOR
- D - IN TUNNEL REAR
- E - BELOW REGULATOR PANEL
- F - ON LUGGAGE COMPARTMENT FLOOR
- G - NEAR LEFT SEAT

T3 - THREE-POLE

- A - ON LUGGAGE COMPARTMENT FLOOR
- B - IN ENGINE COMPARTMENT

T6 - SIX POLE

- A - IN ENGINE COMPARTMENT LEFT
- B - IN ENGINE COMPARTMENT RIGHT
- C - BELOW INSTRUMENT PANEL
- D - BELOW INSTRUMENT PANEL
- E - BELOW INSTRUMENT PANEL
- F - BELOW INSTRUMENT PANEL
- G - BELOW INSTRUMENT PANEL
- H - BELOW INSTRUMENT PANEL
- I - IN DOOR WELL LEFT
- K - IN DOOR WELL RIGHT

T12 - TWELVE-POLE IN ENGINE COMPARTMENT


T14 - FOURTEEN POLE ON REGULATOR PANEL

GROUND TERMINALS

- ① ON ENGINE
- ② IN LUGGAGE COMPARTMENT
- ③ BATTERY
- ④ IN ENGINE COMPARTMENT
- ⑤ ON LUGGAGE COMPARTMENT FLOOR
- ⑥ NEAR FUSE BOX

WIRE COLOURS

| | | |
|------------|-------------|-------------|
| BK - BLACK | GN - GREEN | BR - BROWN |
| WT - WHITE | YE - YELLOW | BL - BLUE |
| RE - RED | GR - GREY | VI - VIOLET |

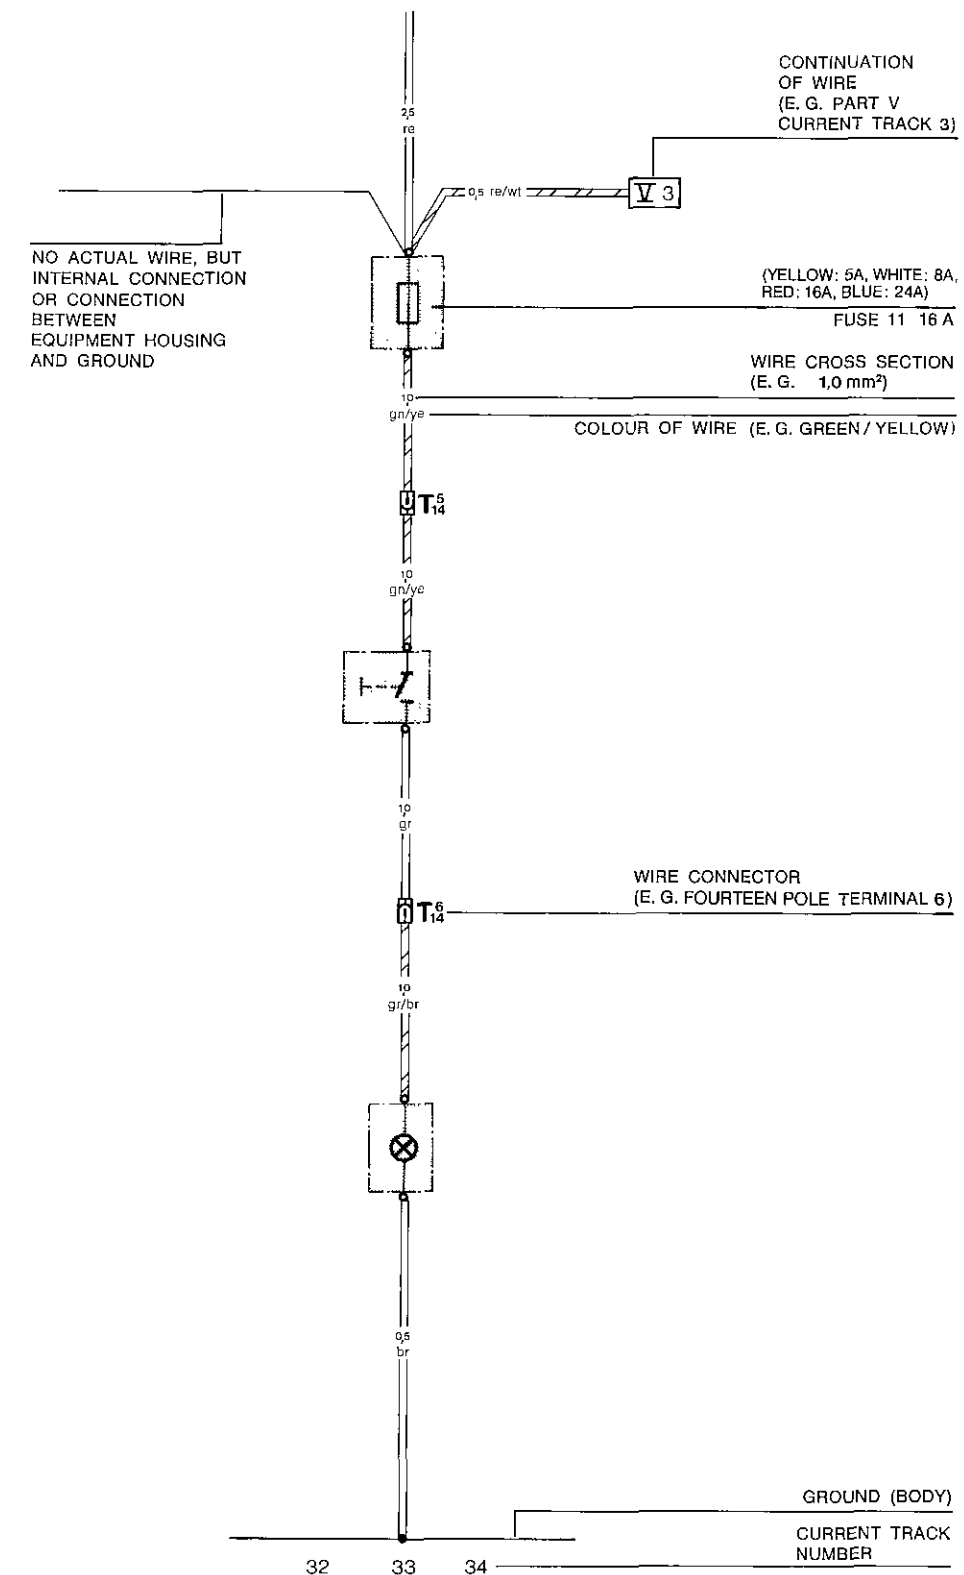

Current Flow Diagram Type 911 SC USA Model 81, Part I


POWER SUPPLY, STARTER

FUEL PUMP

HEATER VENTILATOR

IGNITION


Current Flow Diagram Type 911 SC USA, Model 81, Part I

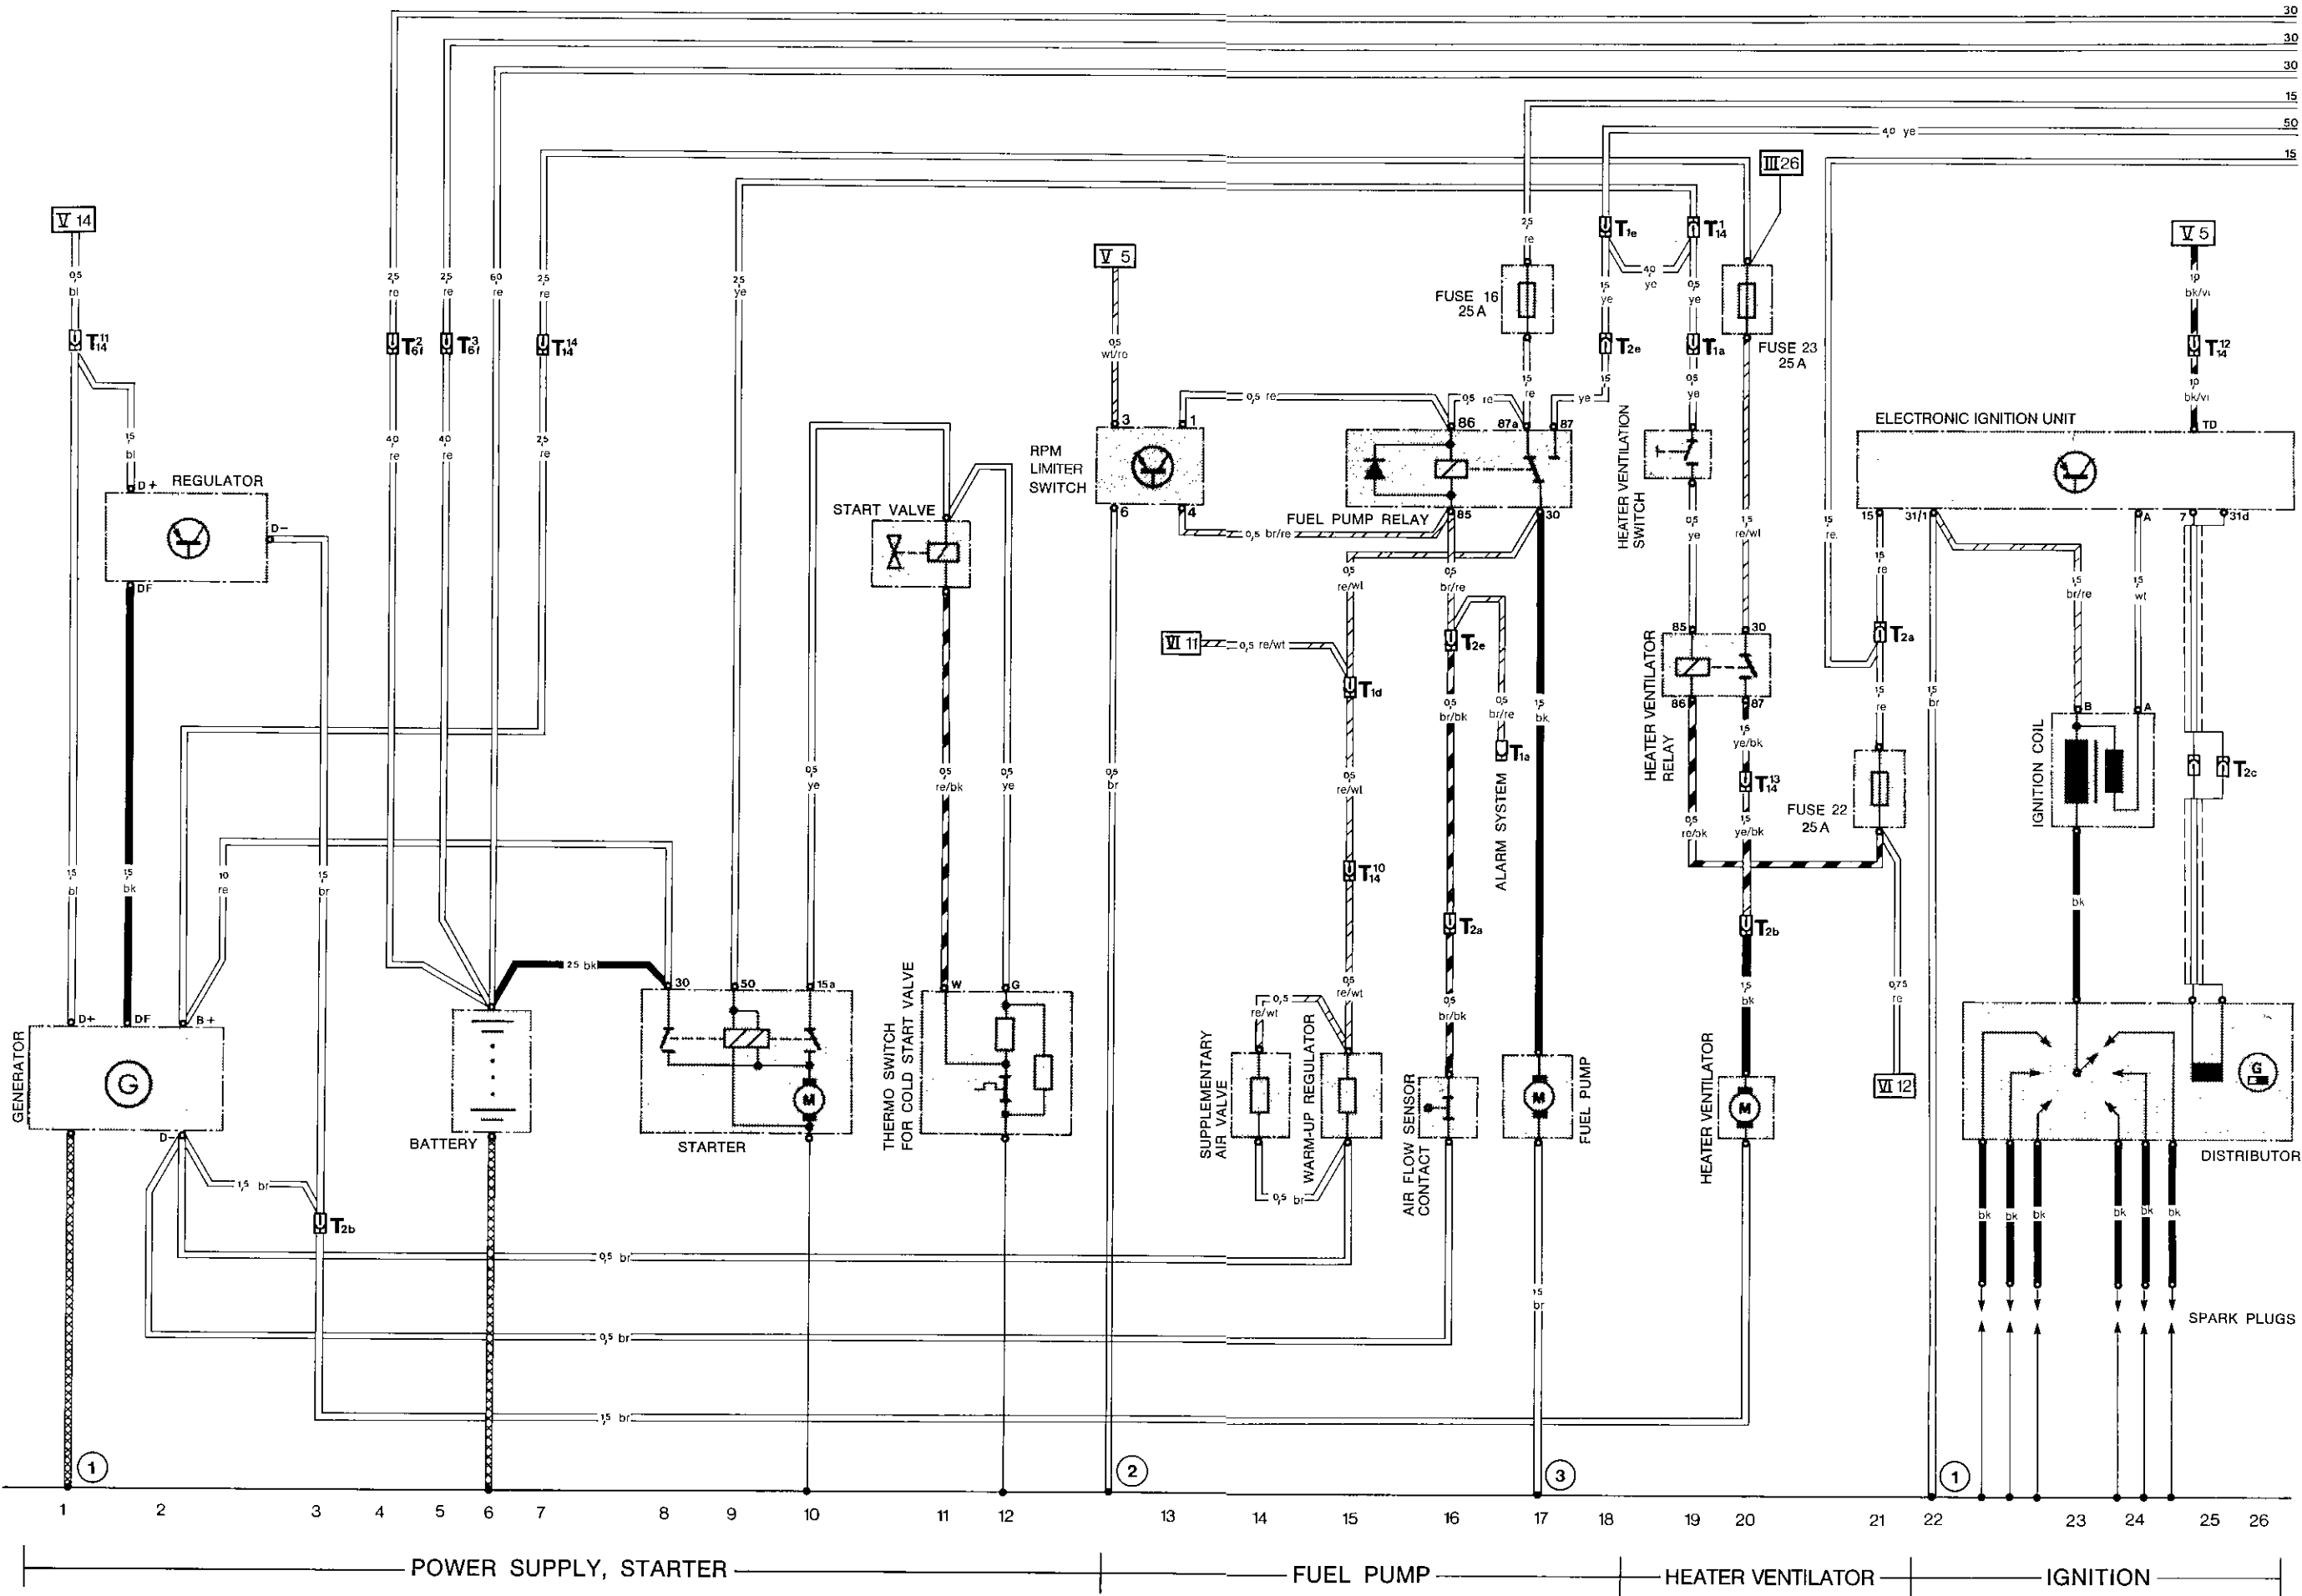

Current Flow Diagram Type 911 SC USA Model 81, Part II

HEADLIGHT, FRONT TURN SIGNAL,
HAZARD FLASHER

Current Flow Diagram Type 911 SC USA, Model 81, Part II

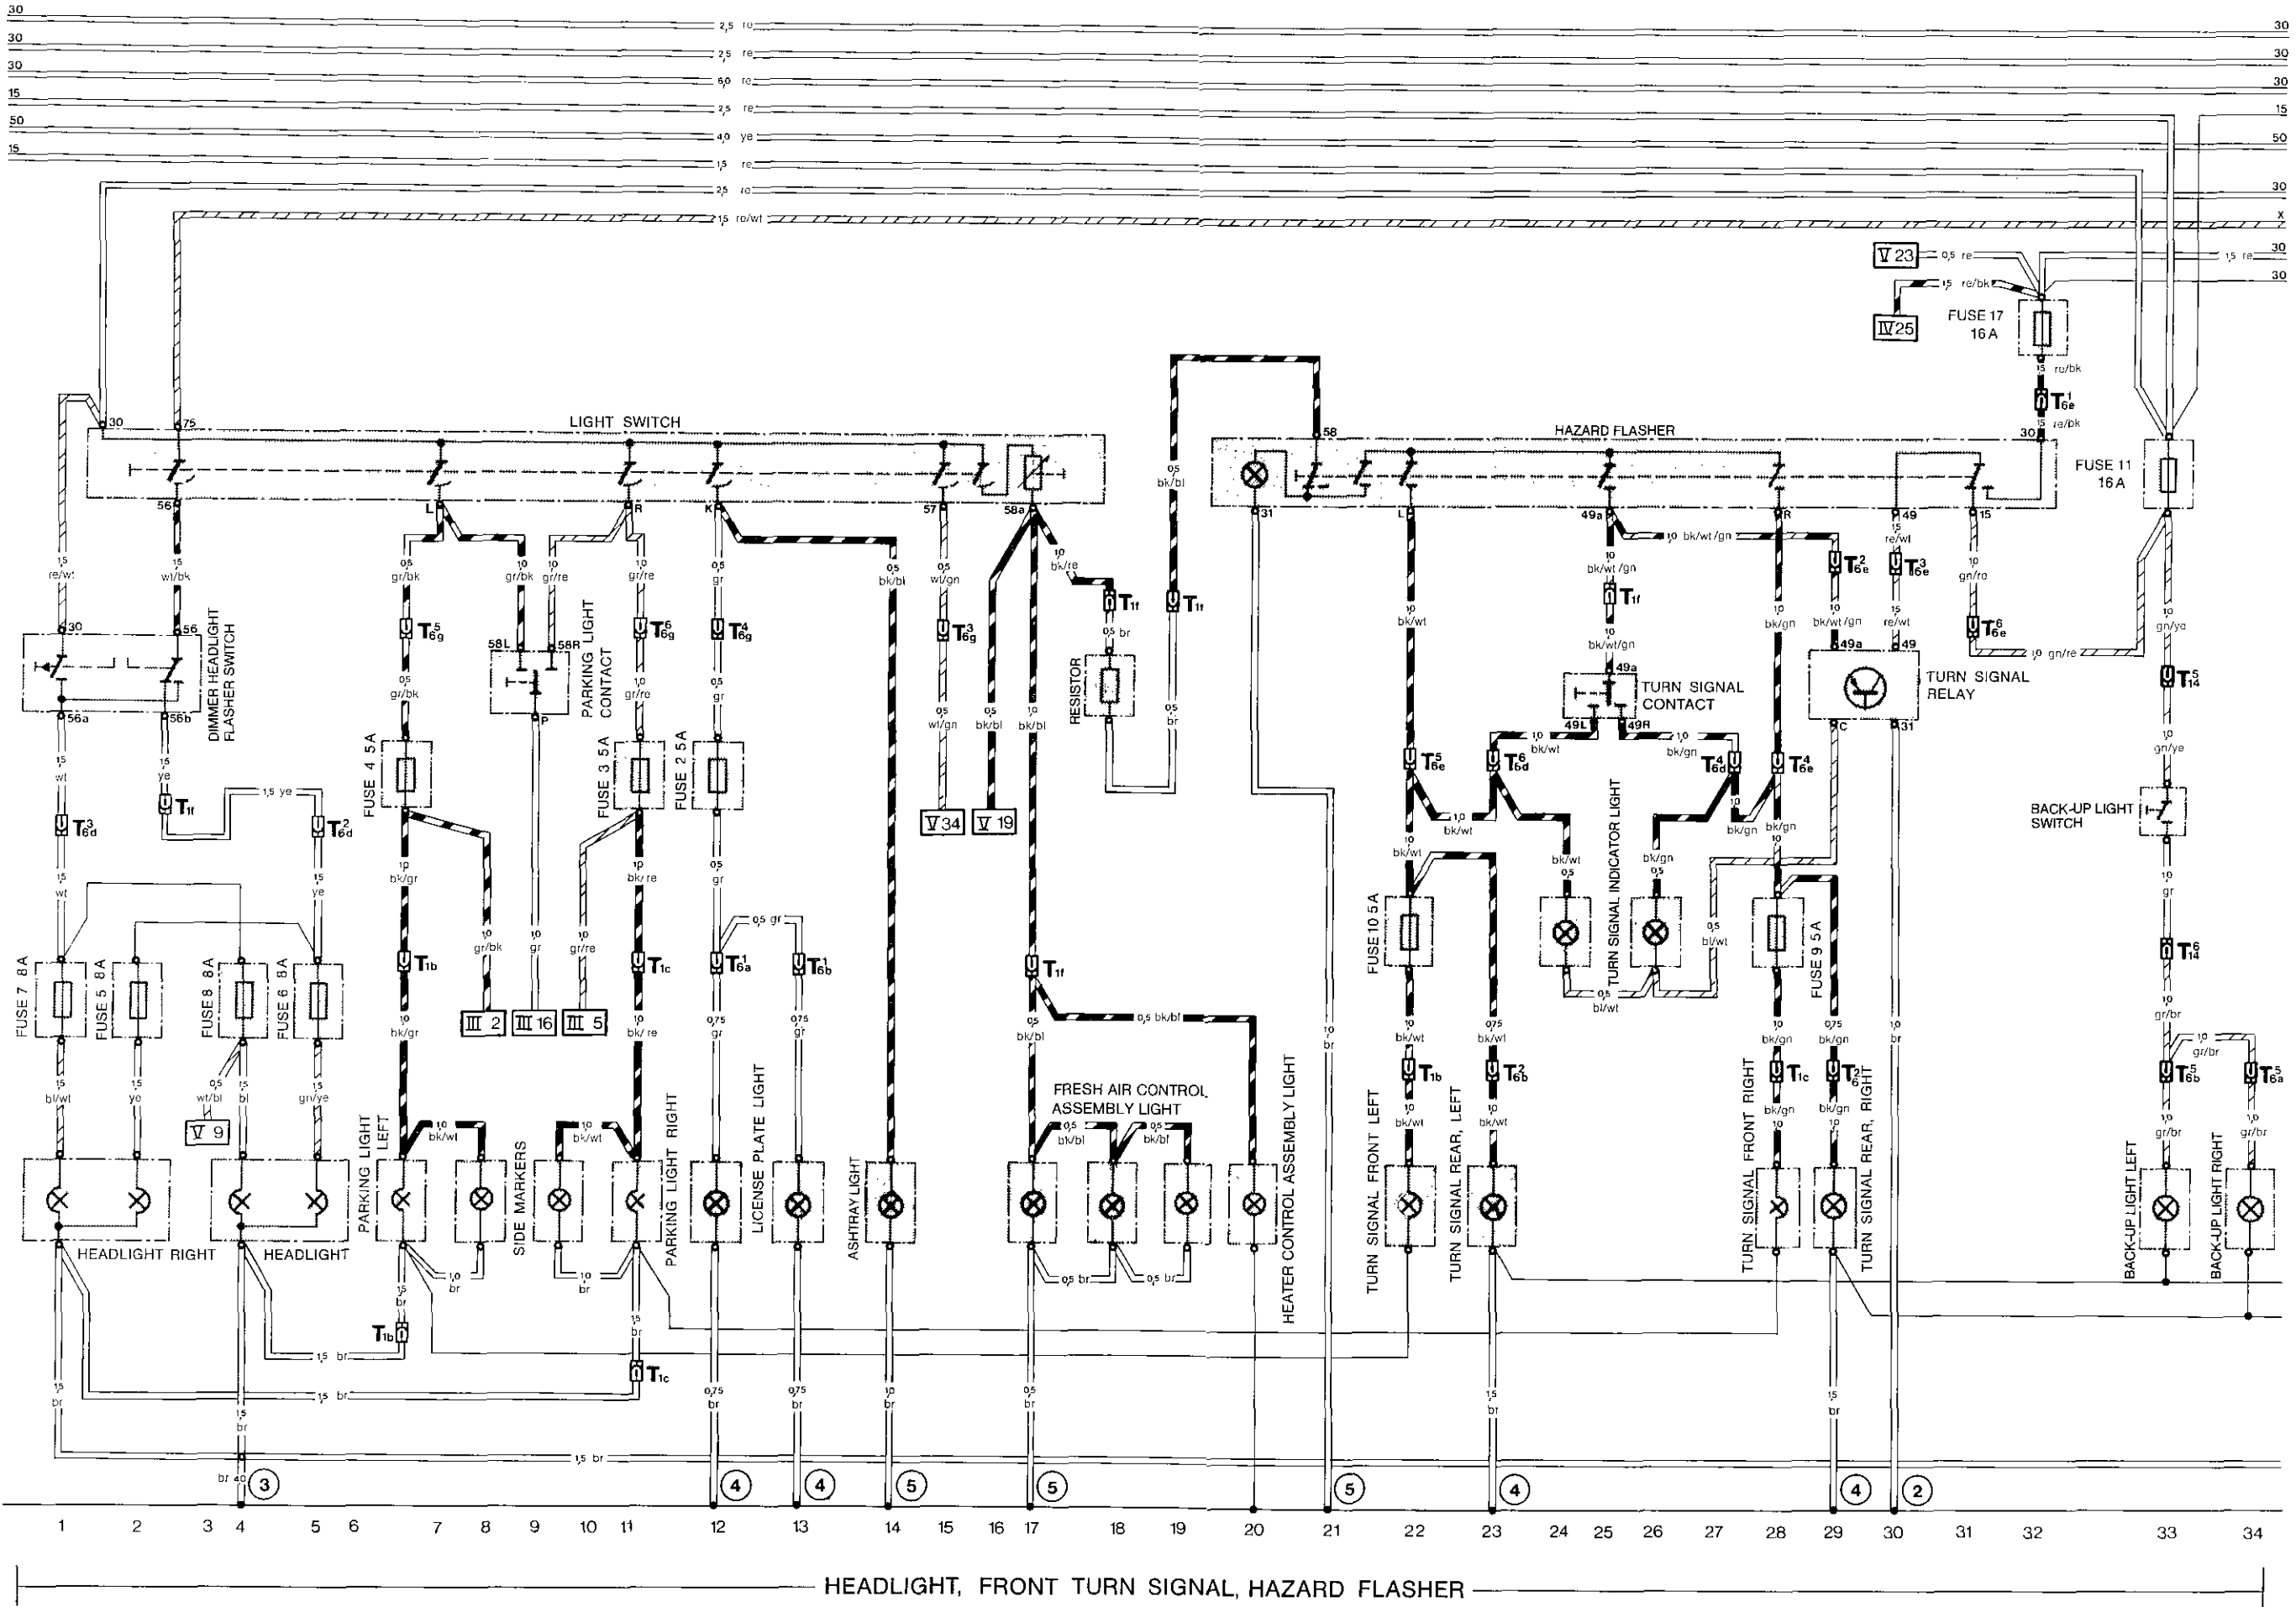

Current Flow Diagram Type 911 SC USA Model 81, Part III

REAR LIGHTS, BRAKE LIGHTS


HORNS

INTERIOR LIGHT

IGNITION/STARTER SWITCH

REAR WINDOW DEFOGGER


9

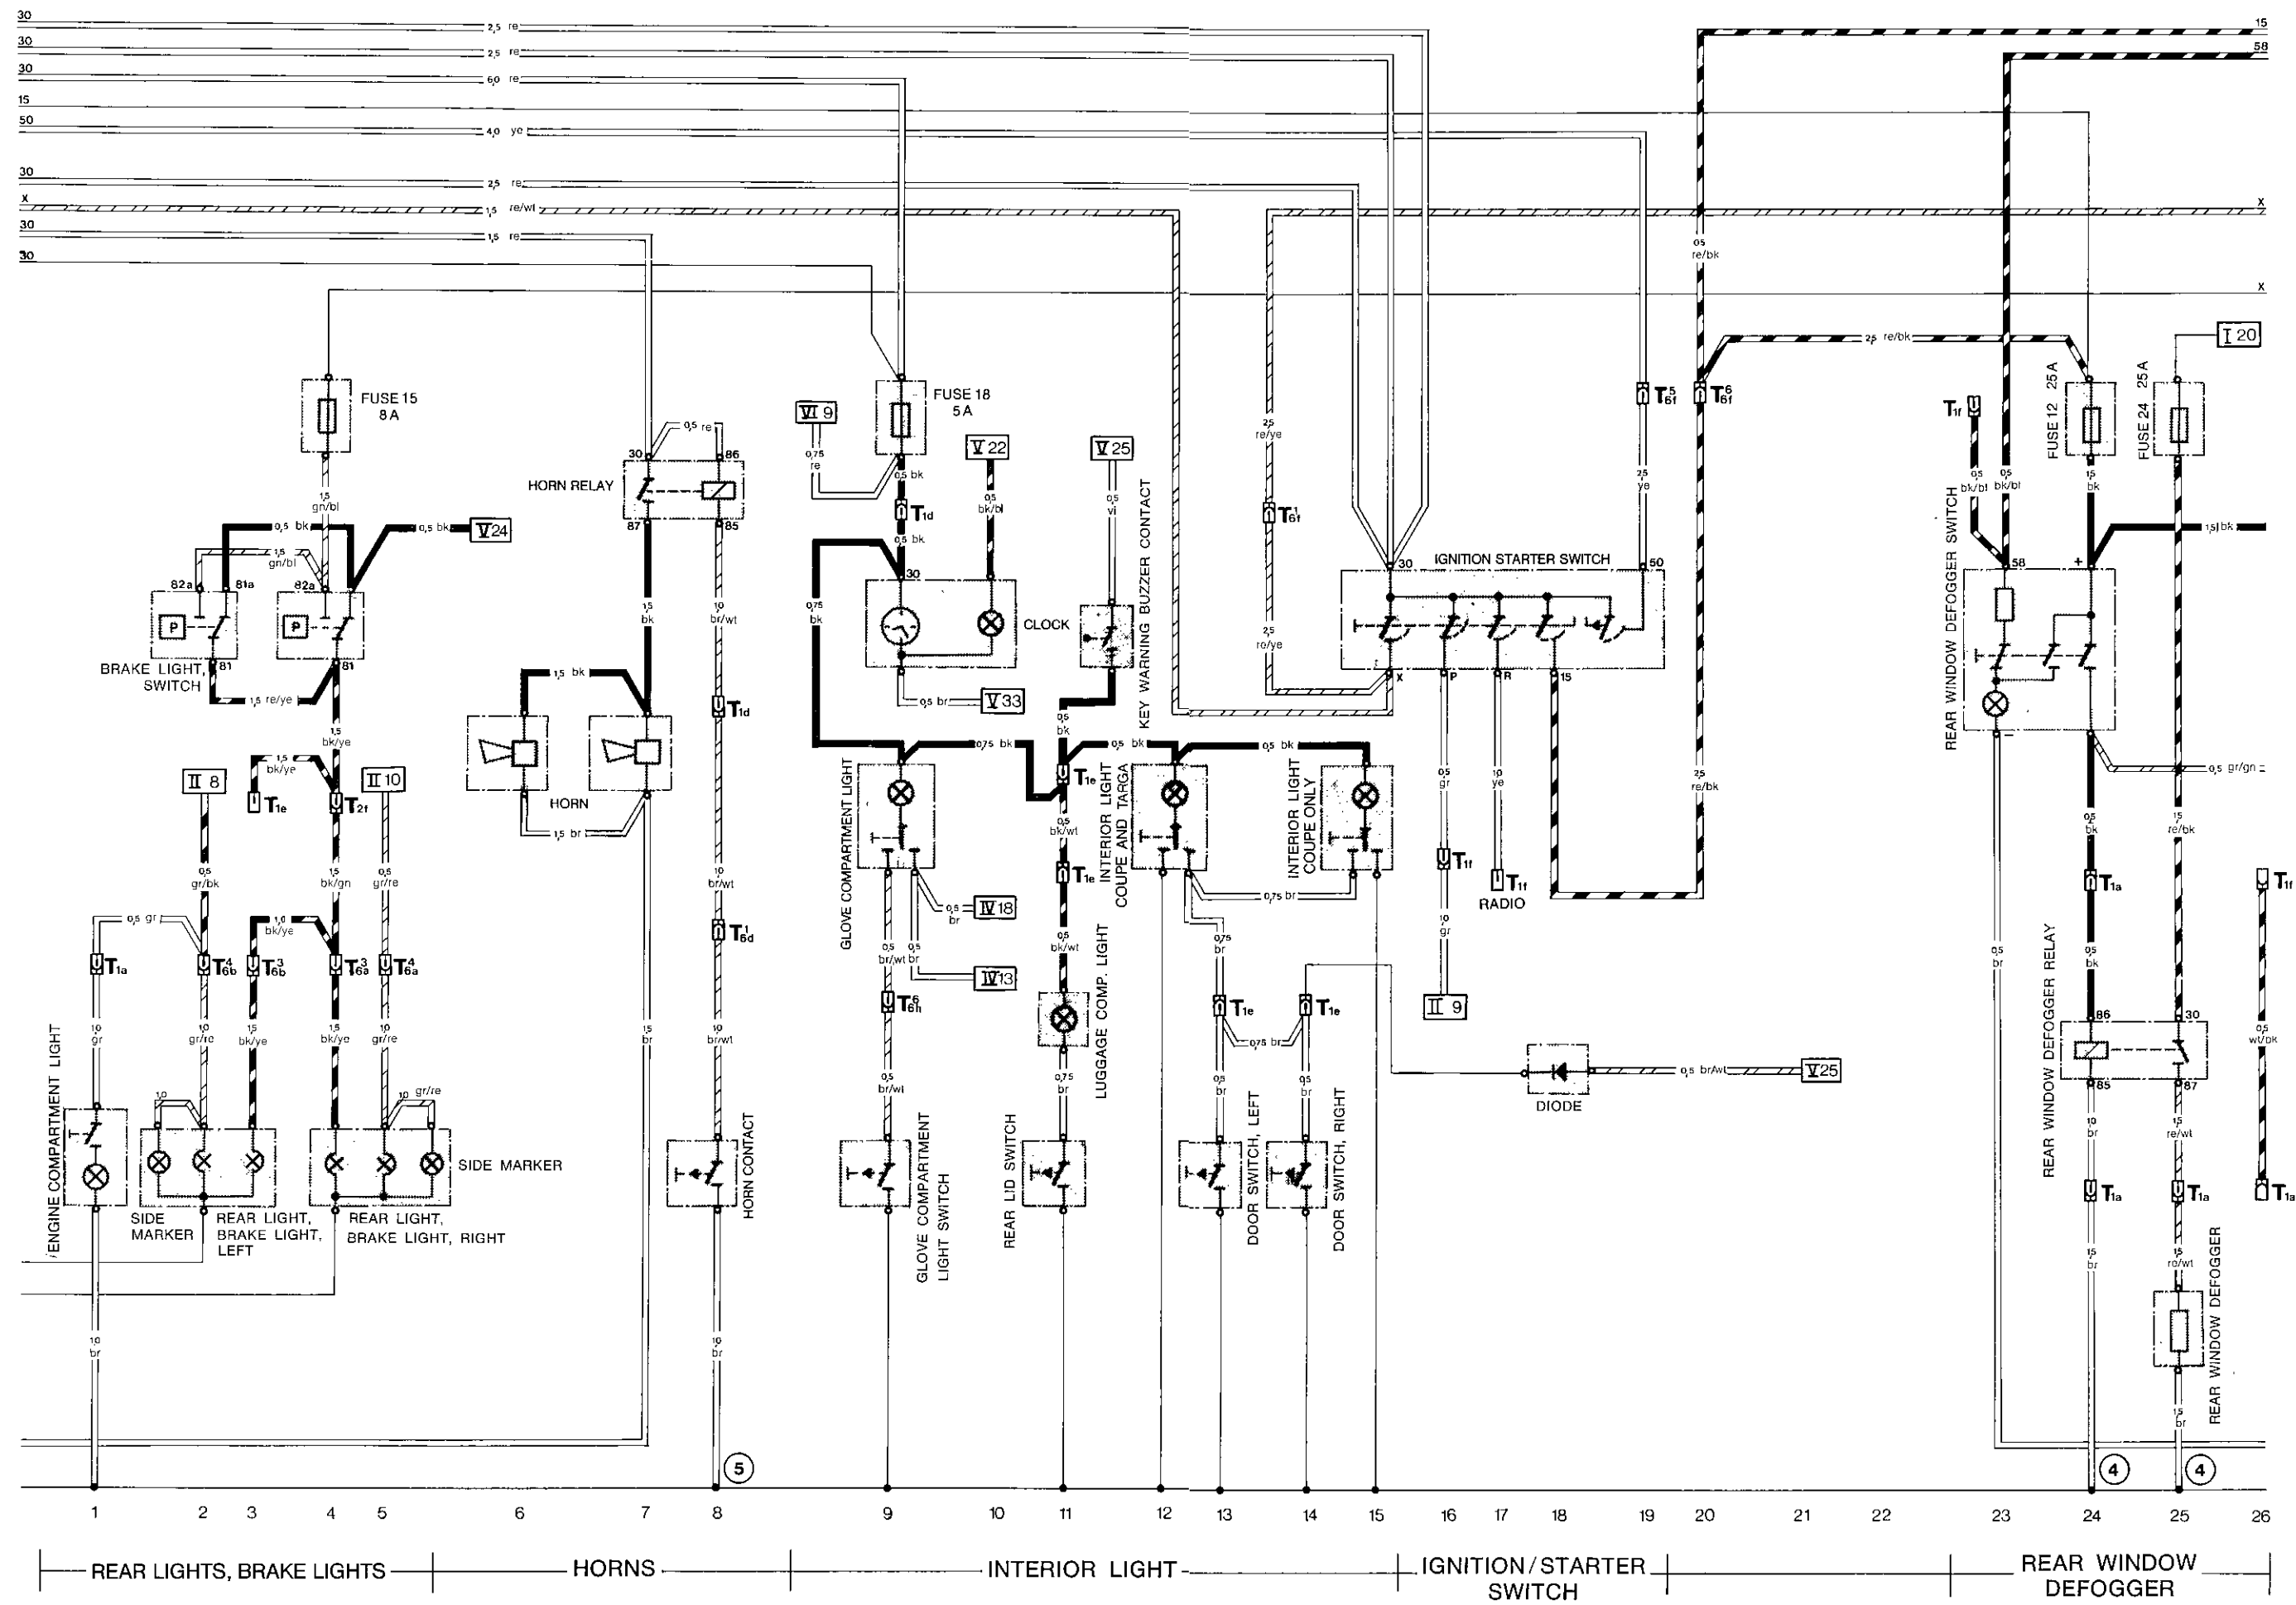

Current Flow Diagram Type 911 SC USA Model 81, Part IV

OUTSIDE MIRROR
FRESH AIR BLOWER
CIGARETTE LIGHTER
WINDSHIELD WIPER
POWER WINDOWS


Current Flow Diagram Type 911 SC USA, Model 81, Part IV

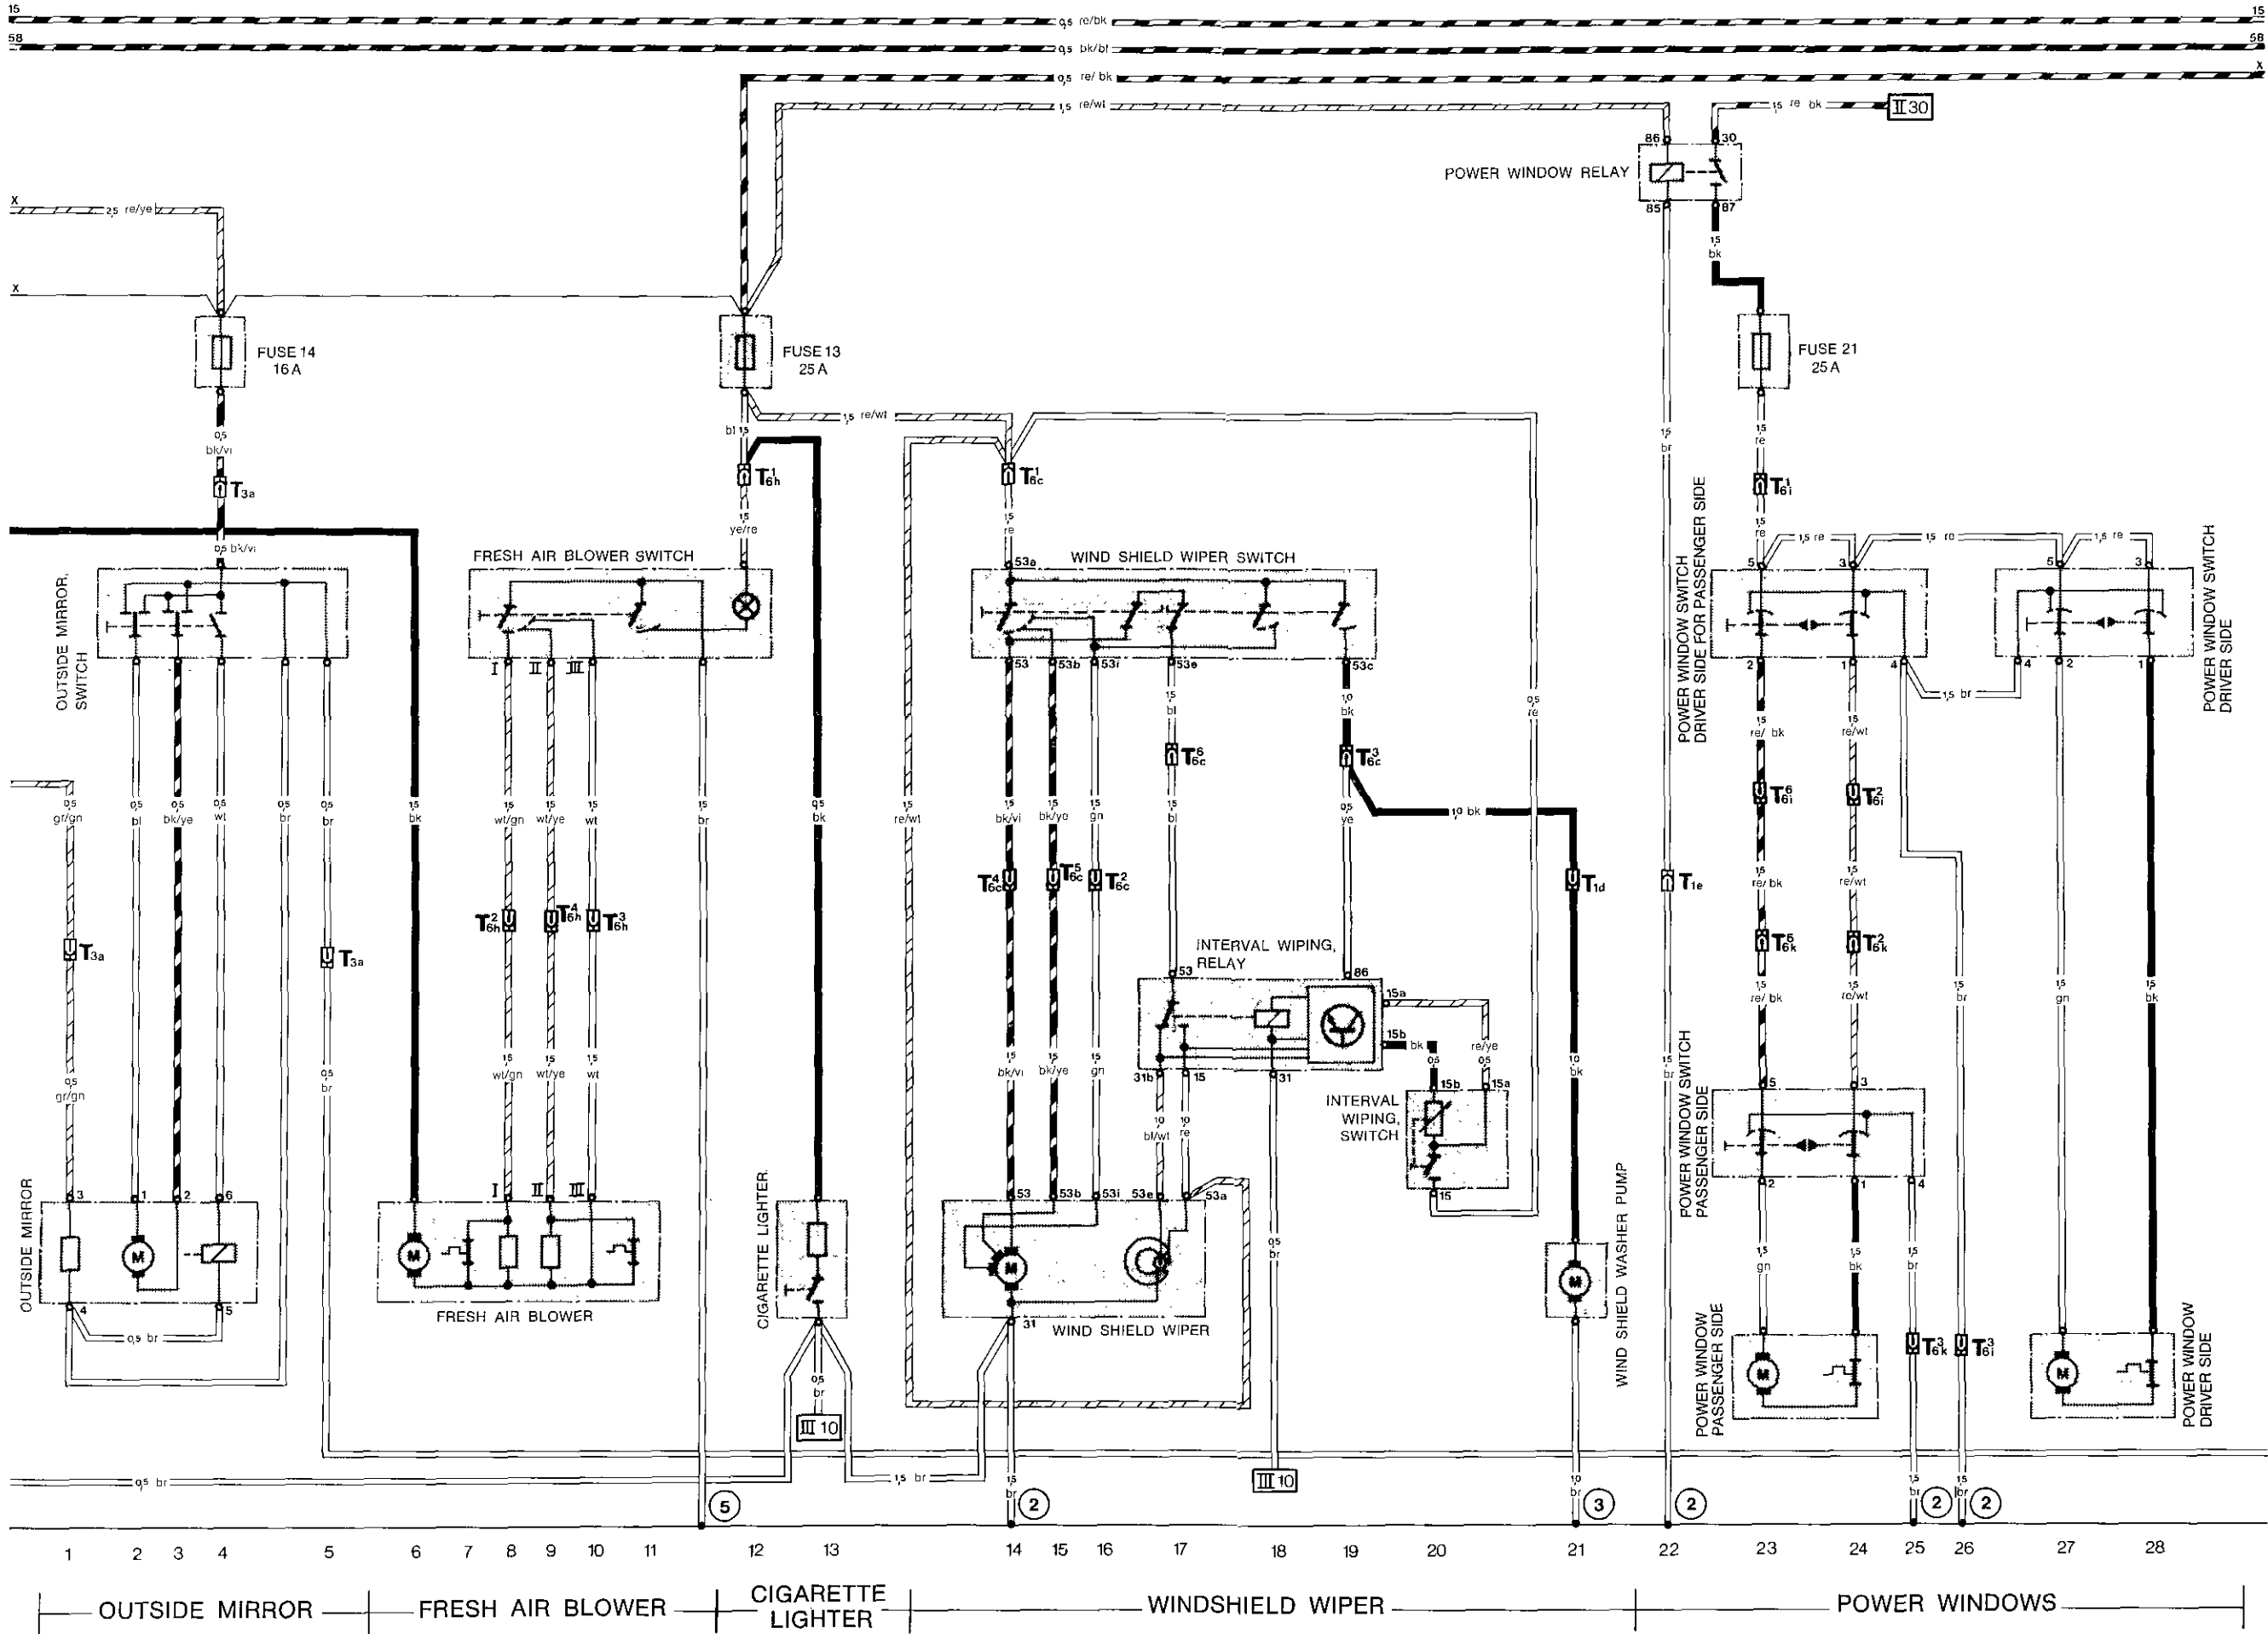

Current Flow Diagram Type 911 SC USA Model 81, Part V

OXYGEN SENSOR SYSTEM
INSTRUMENT, SENDER UNITS


9

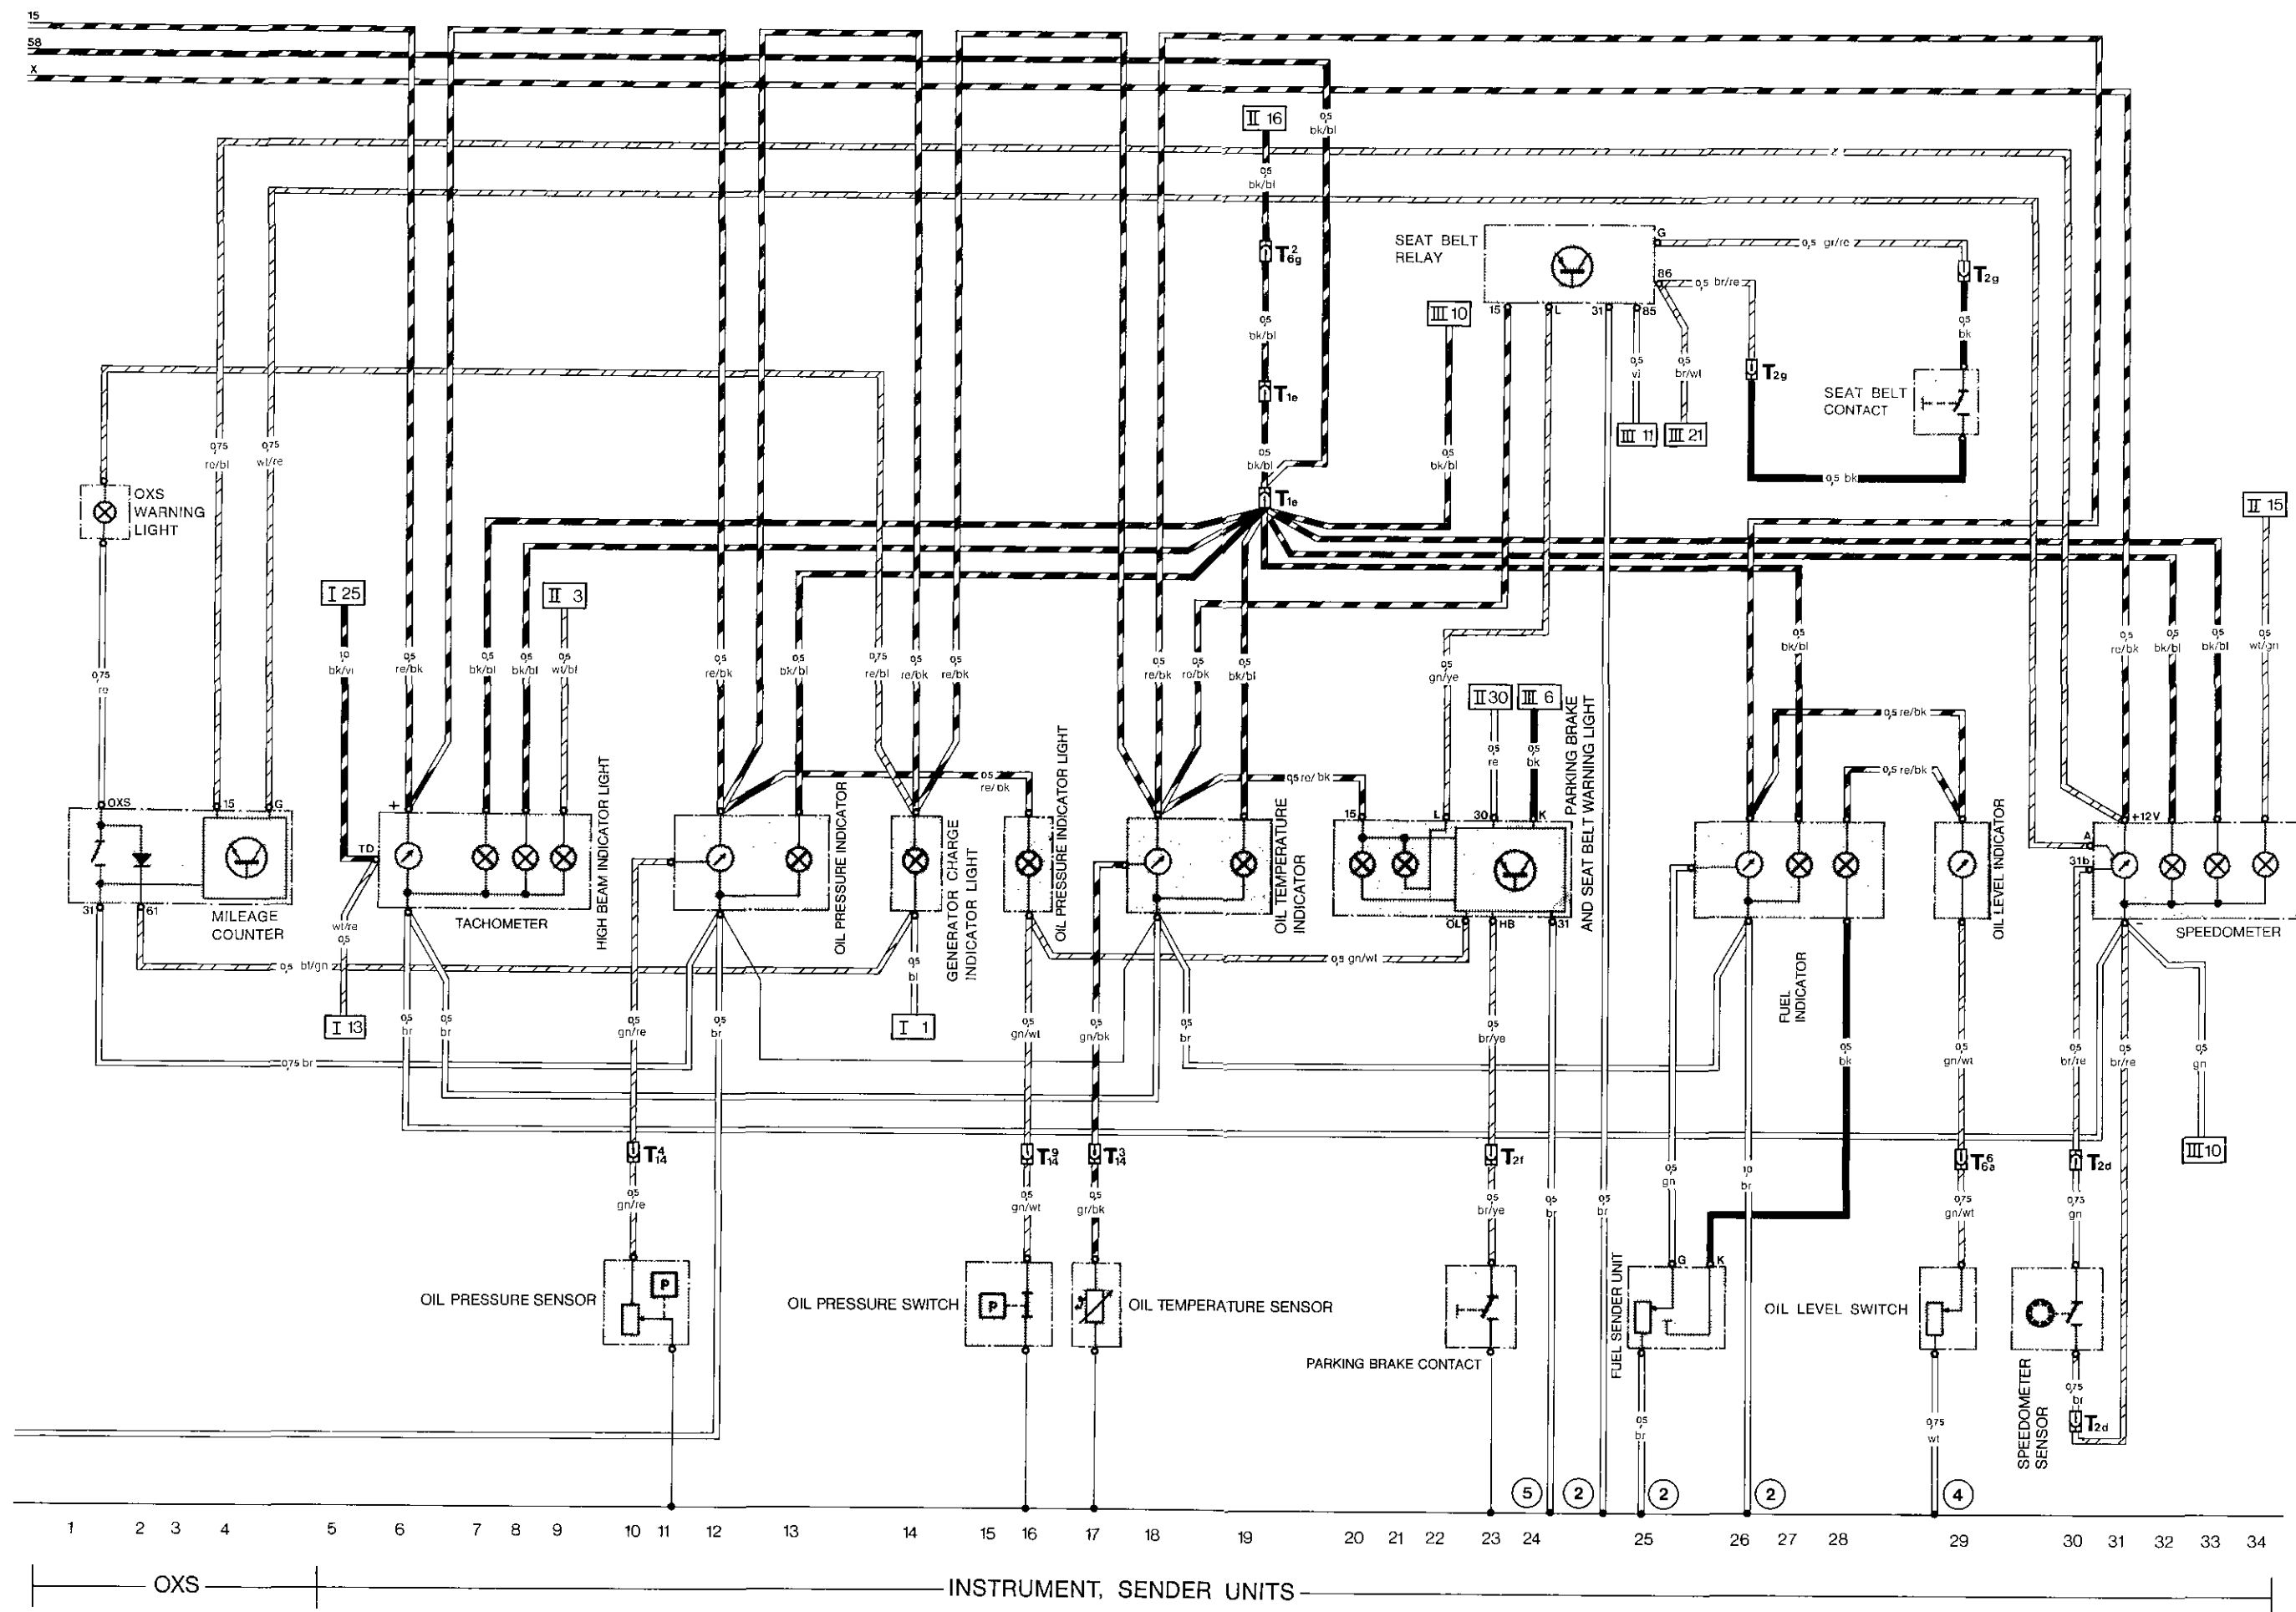


Current Flow Diagram Type 911 SC USA Model 81, Part VI


OXYGEN SENSOR SYSTEM

9

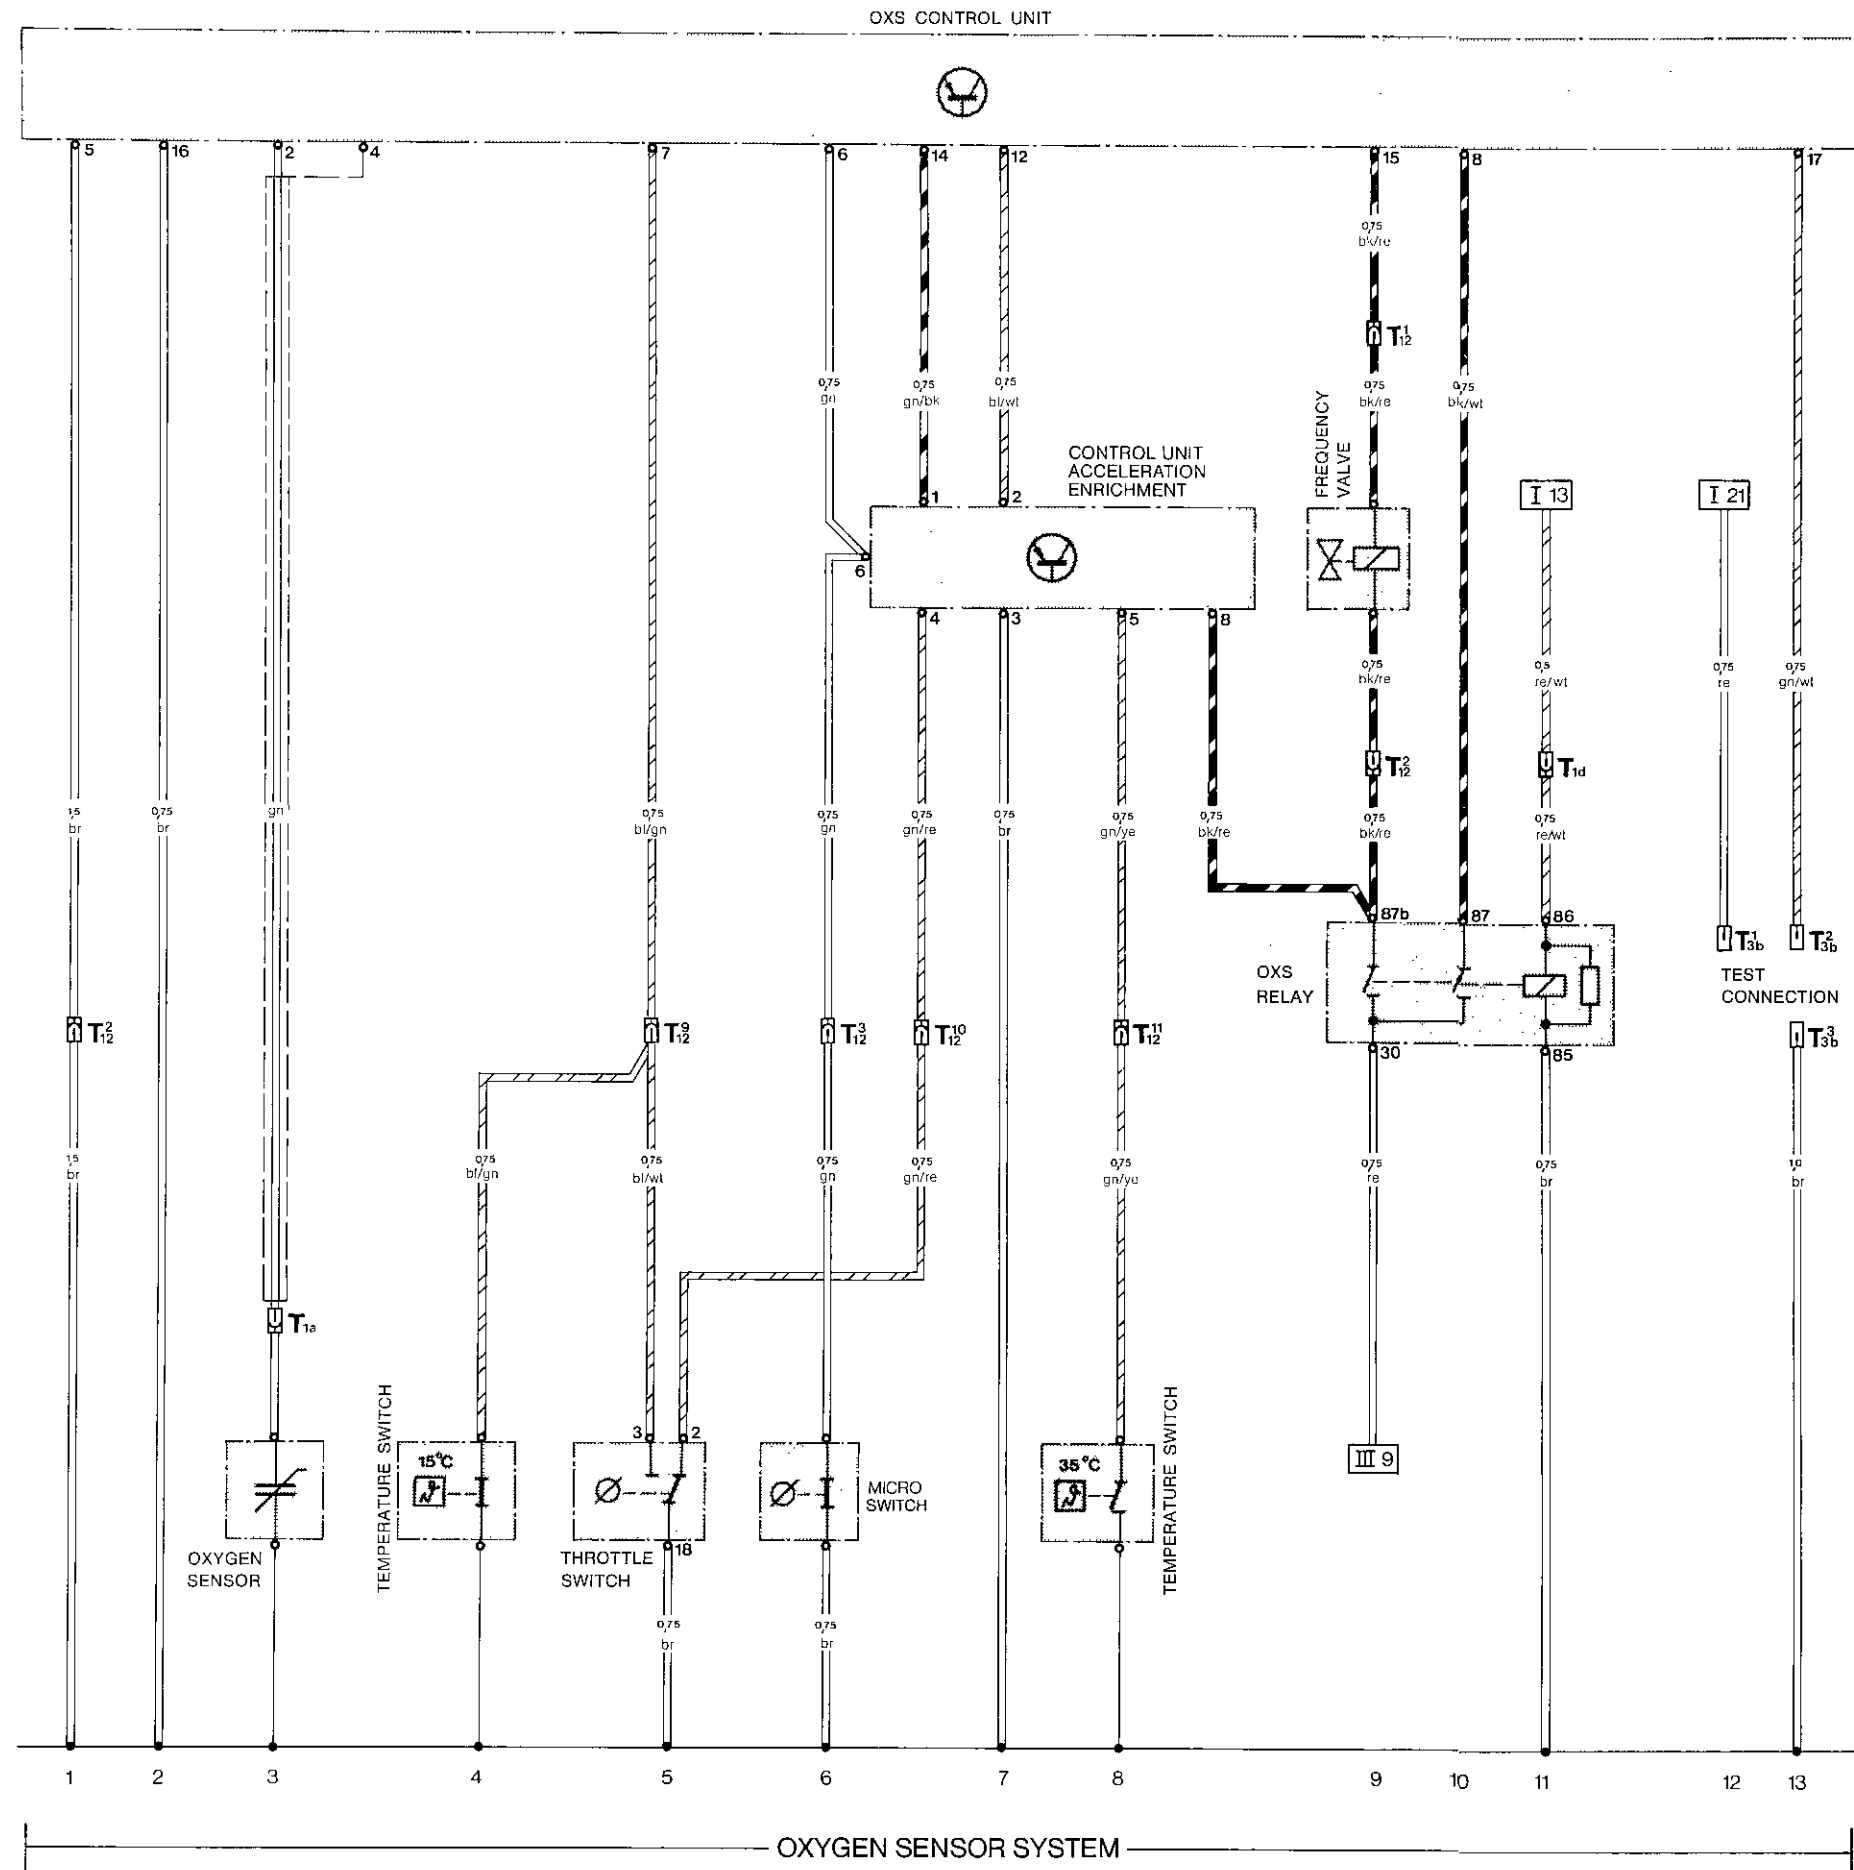


Additional Current Flow Diagram Type 911 SC Cruise control (Tempostat)

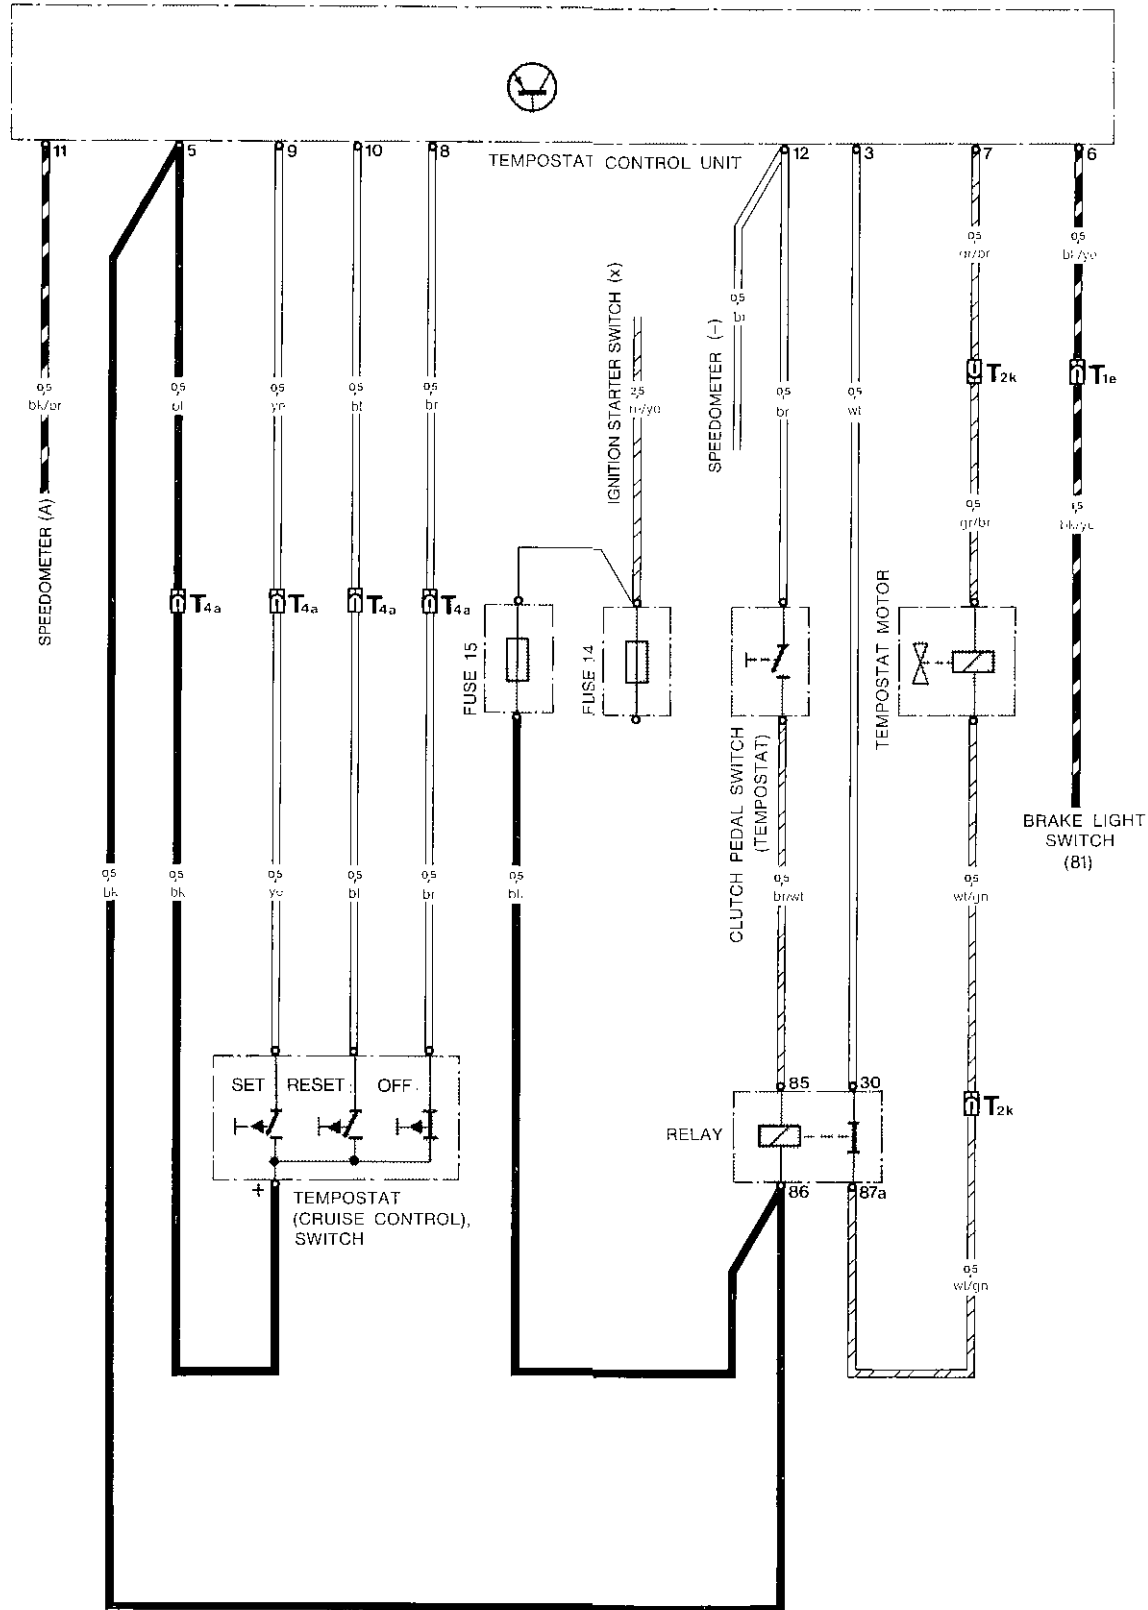

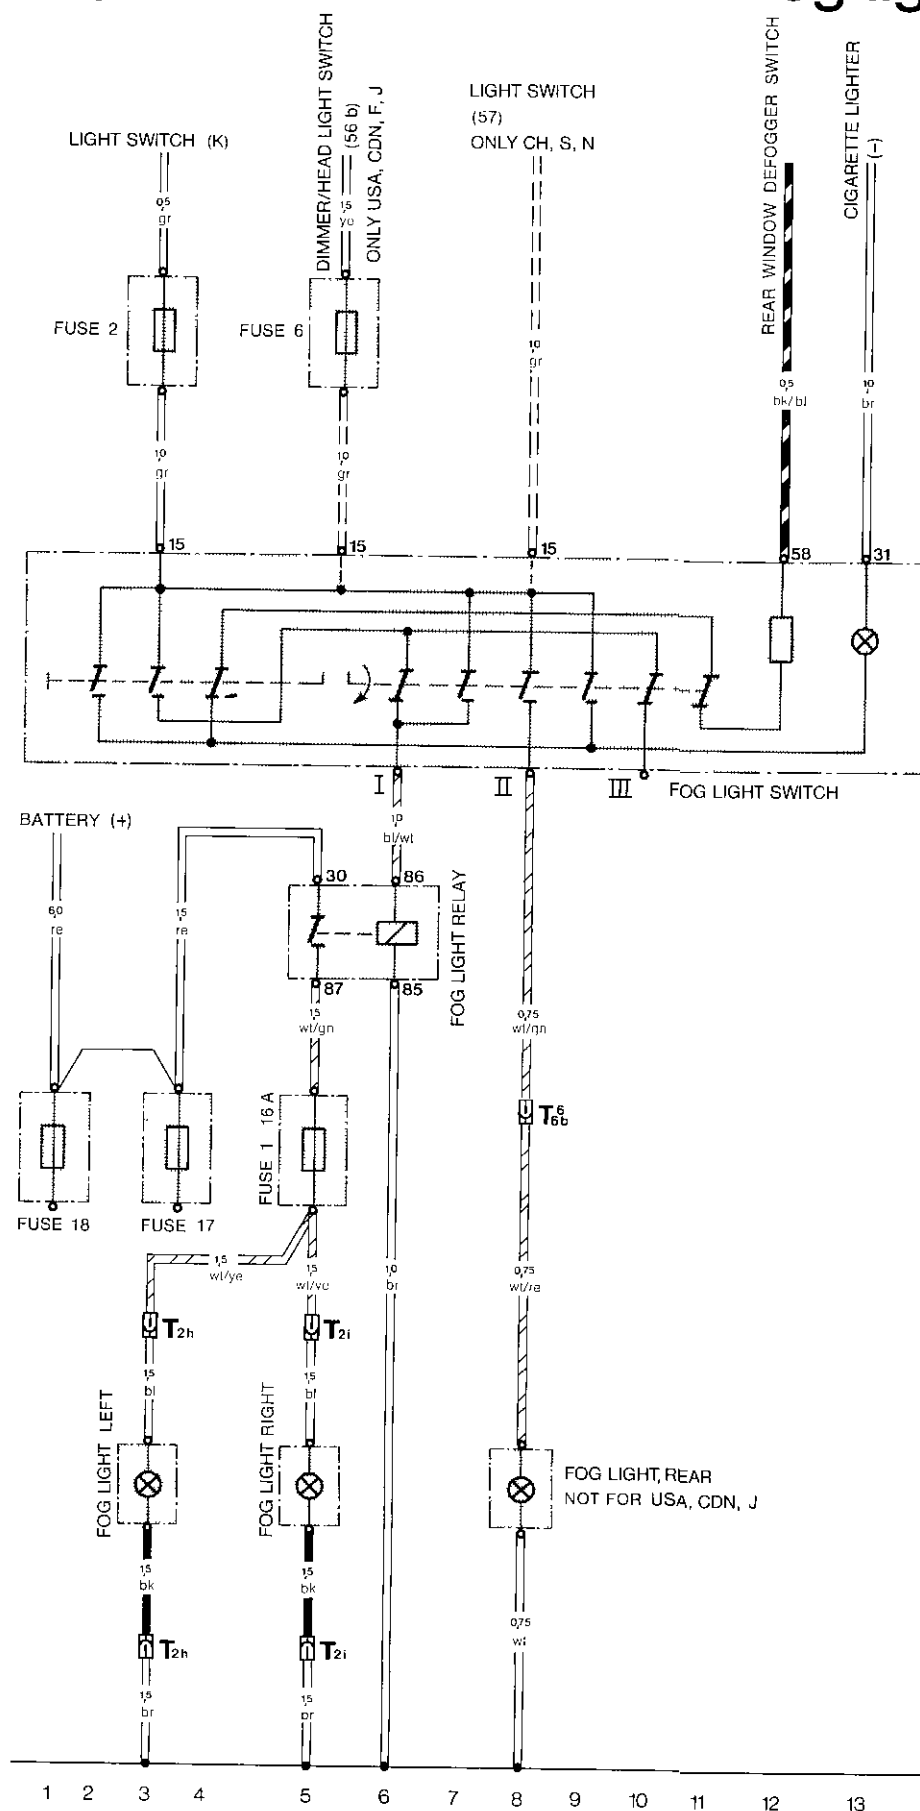

FROM MODEL 81


9

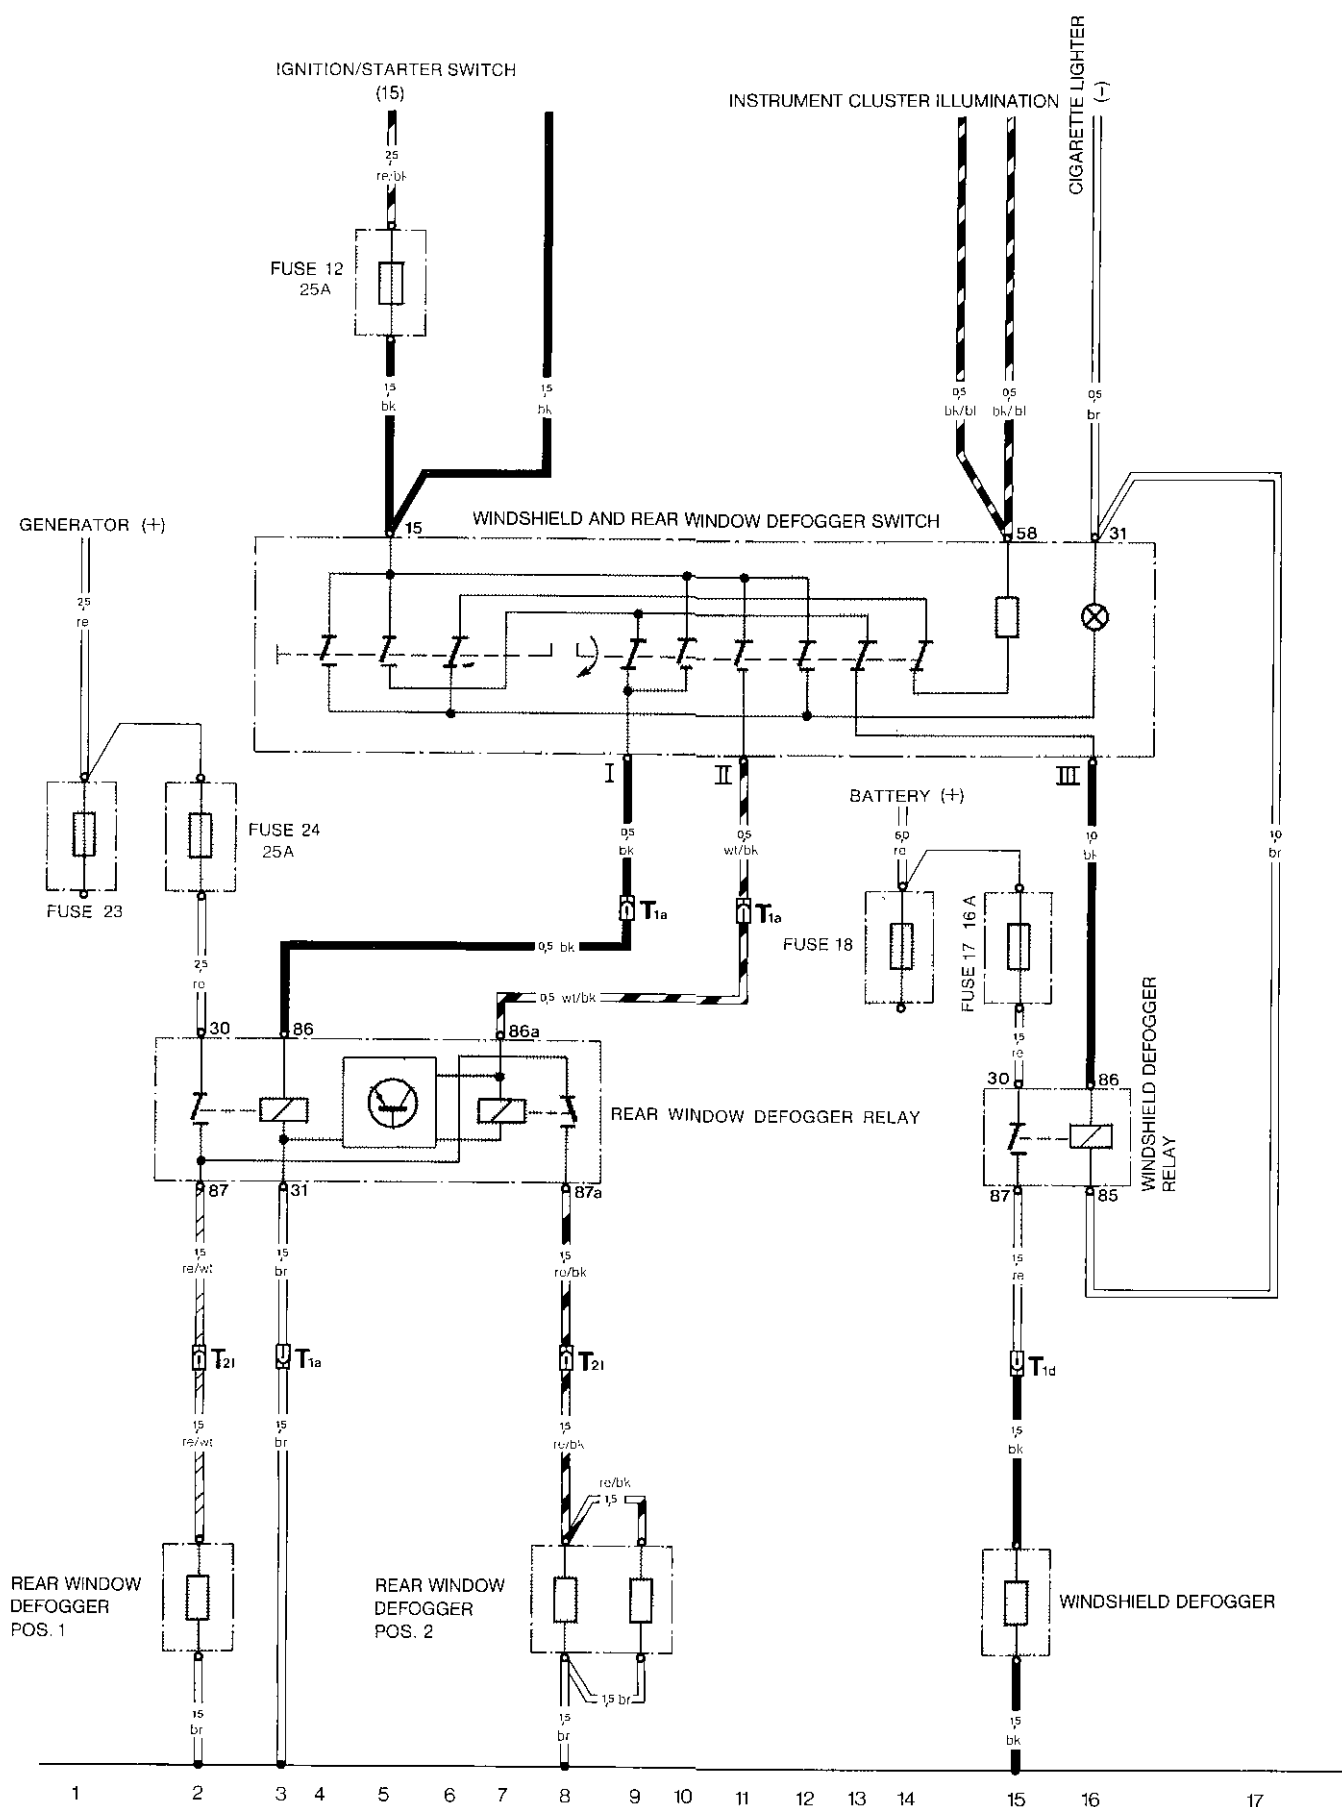

Additional Current Flow Diagram

Type 911 SC Air Condition

9

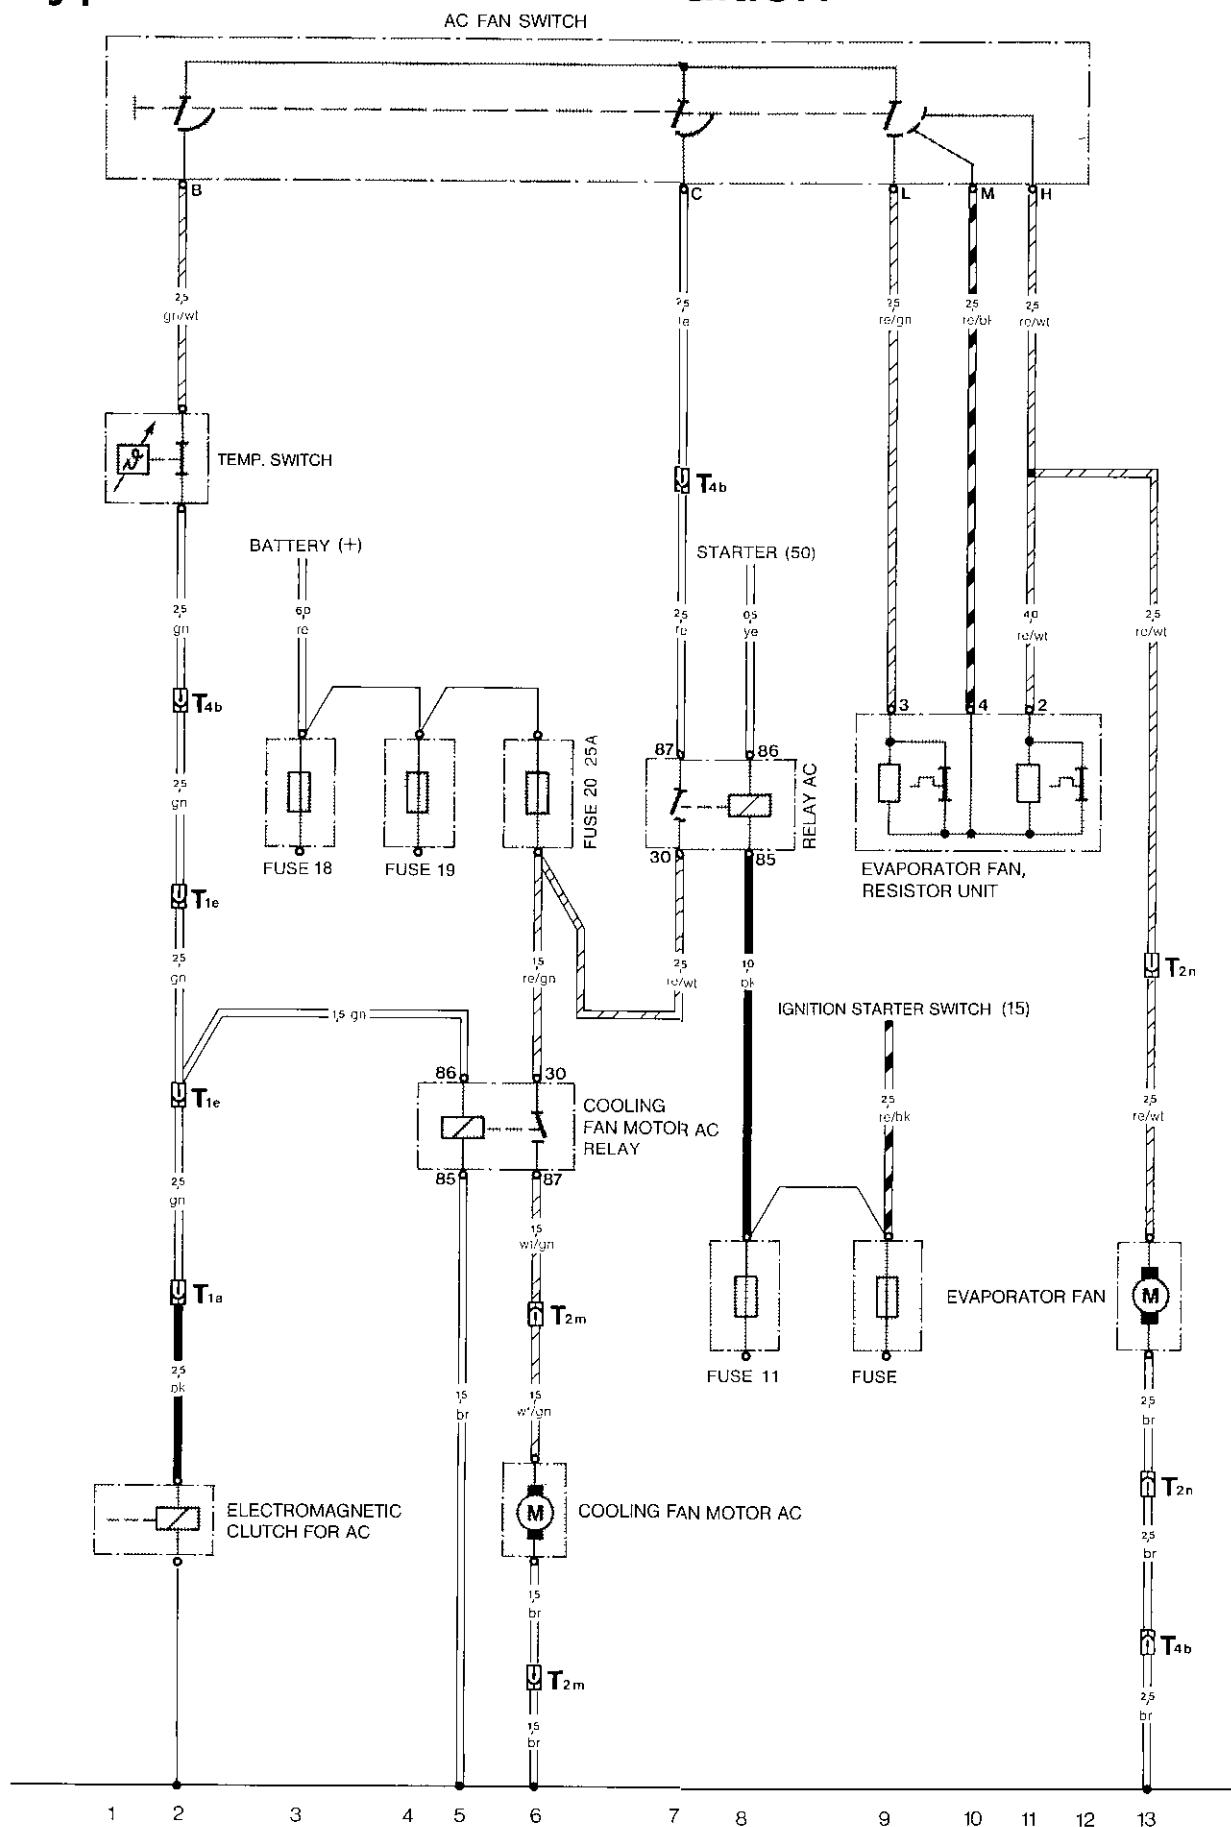

Current Flow Diagram

Type 911 SC USA Model 82

| | |
|-----------------|---|
| PART I | POWER SUPPLY, STARTER FUEL PUMP HEATER VENTILATOR IGNITION |
| PART II | HEADLIGHT, FRONT TURN SIGNAL, HAZARD FLASHER |
| PART III | REAR LIGHT, BRAKE LIGHT HORNS INTERIOR LIGHT IGNITION/STARTER SWITCH REAR WINDOW DEFOGGER |
| PART IV | OUTSIDE MIRROR FRESH AIR BLOWER CIGARETTE LIGHTER WINDSHIELD WIPER POWER WINDOWS |
| PART V | OXYGEN SENSOR SYSTEM INSTRUMENT, SENDER UNITS |
| PART VI | OXYGEN SENSOR SYSTEM HEADLIGHT WASHER |

Current Flow Diagram

Type 911 SC USA Model 82

WIRE CONNECTORS

T1 - ONE POLE

- A - NEAR REGULATOR PANEL
- B - BEHIND HEADLIGHT LEFT
- C - BEHIND HEADLIGHT RIGHT
- D - BEHIND FUSE BOX
- E - ON LUGGAGE COMPARTMENT FLOOR
- F - BEHIND INSTRUMENT PANEL

T2 - TWO POLE

- A - BELOW REGULATOR PANEL
- B - IN ENGINE COMPARTMENT LEFT
- C - NEAR DISTRIBUTOR
- D - IN TUNNEL REAR
- E - BELOW REGULATOR PANEL
- F - ON LUGGAGE COMPARTMENT FLOOR
- G - NEAR LEFT SEAT
- P - NEAR BATTERY

T3 - THREE-POLE

- A - ON LUGGAGE COMPARTMENT FLOOR
- B - IN ENGINE COMPARTMENT

T6 - SIX POLE

- A - IN ENGINE COMPARTMENT LEFT
- B - IN ENGINE COMPARTMENT RIGHT
- C - BELOW INSTRUMENT PANEL
- D - BELOW INSTRUMENT PANEL
- E - BELOW INSTRUMENT PANEL
- F - BELOW INSTRUMENT PANEL
- G - BELOW INSTRUMENT PANEL
- H - BELOW INSTRUMENT PANEL
- I - IN DOOR WELL LEFT
- K - IN DOOR WELL RIGHT

T12 - TWELVE-POLE
IN ENGINE COMPARTMENT


T14 - FOURTEEN POLE
ON REGULATOR PANEL

GROUND TERMINALS

- ① ON ENGINE
- ② IN LUGGAGE COMPARTMENT
- ③ BATTERY
- ④ IN ENGINE COMPARTMENT
- ⑤ ON LUGGAGE COMPARTMENT FLOOR
- ⑥ NEAR FUSE BOX

WIRE COLOURS

- | | | |
|------------|-------------|-------------|
| BK - BLACK | GN - GREEN | BR - BROWN |
| WT - WHITE | YE - YELLOW | BL - BLUE |
| RE - RED | GR - GREY | VI - VIOLET |

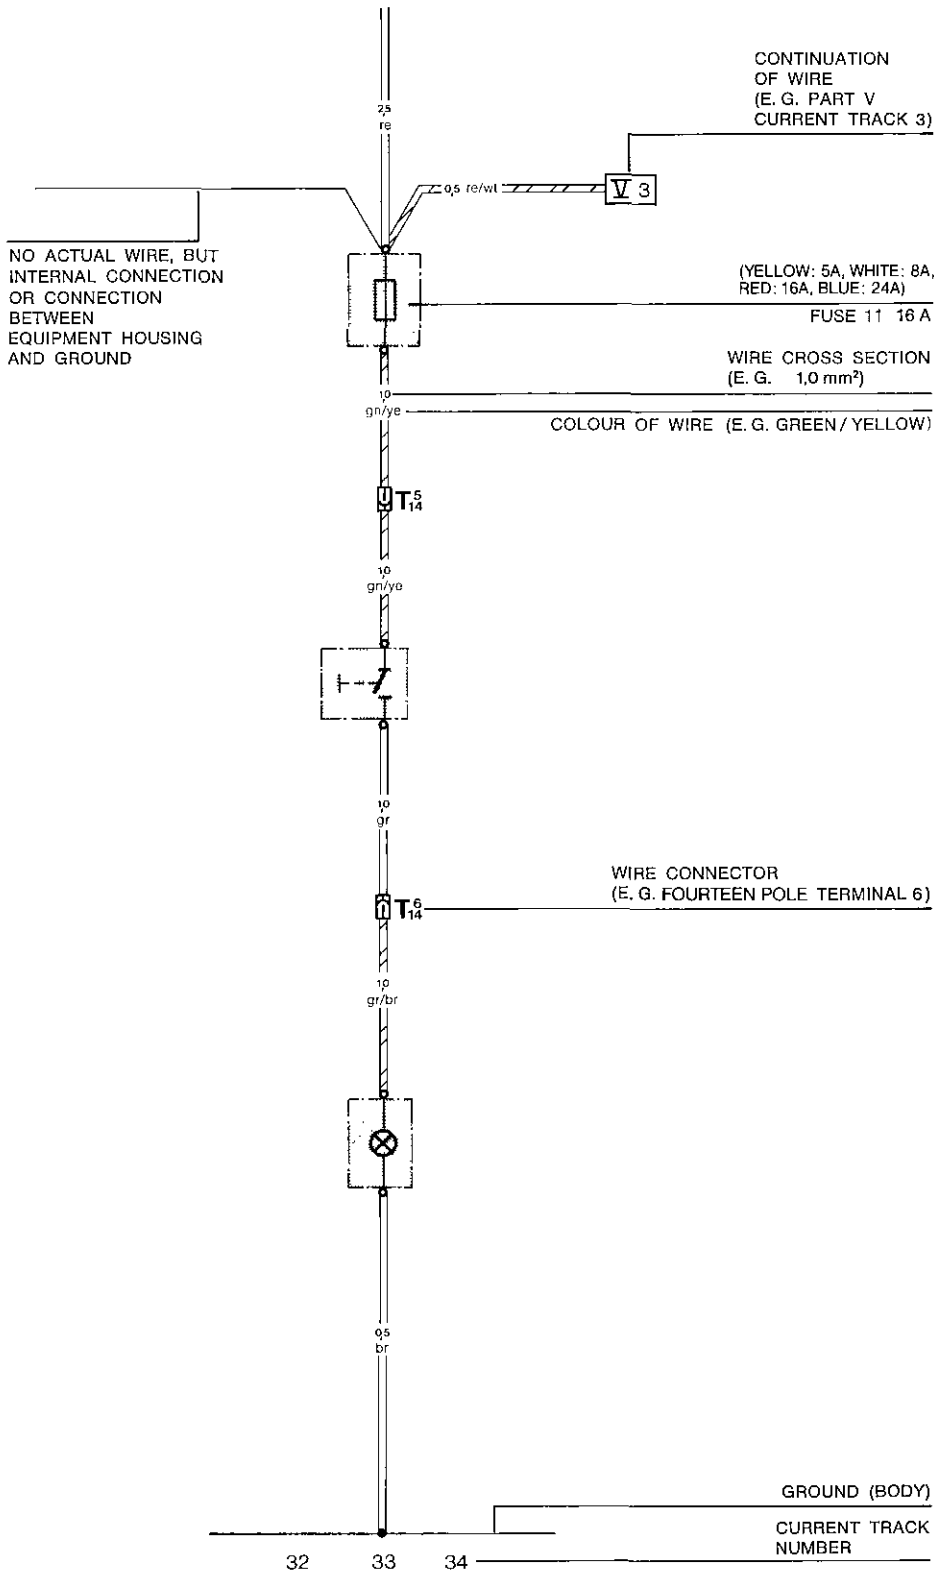

Current Flow Diagram Type 911 SC USA Model 82, Part I


POWER SUPPLY, STARTER

FUEL PUMP

HEATER VENTILATOR

IGNITION

Current Flow Diagram Type 911 SC USA, Model 82, Part I

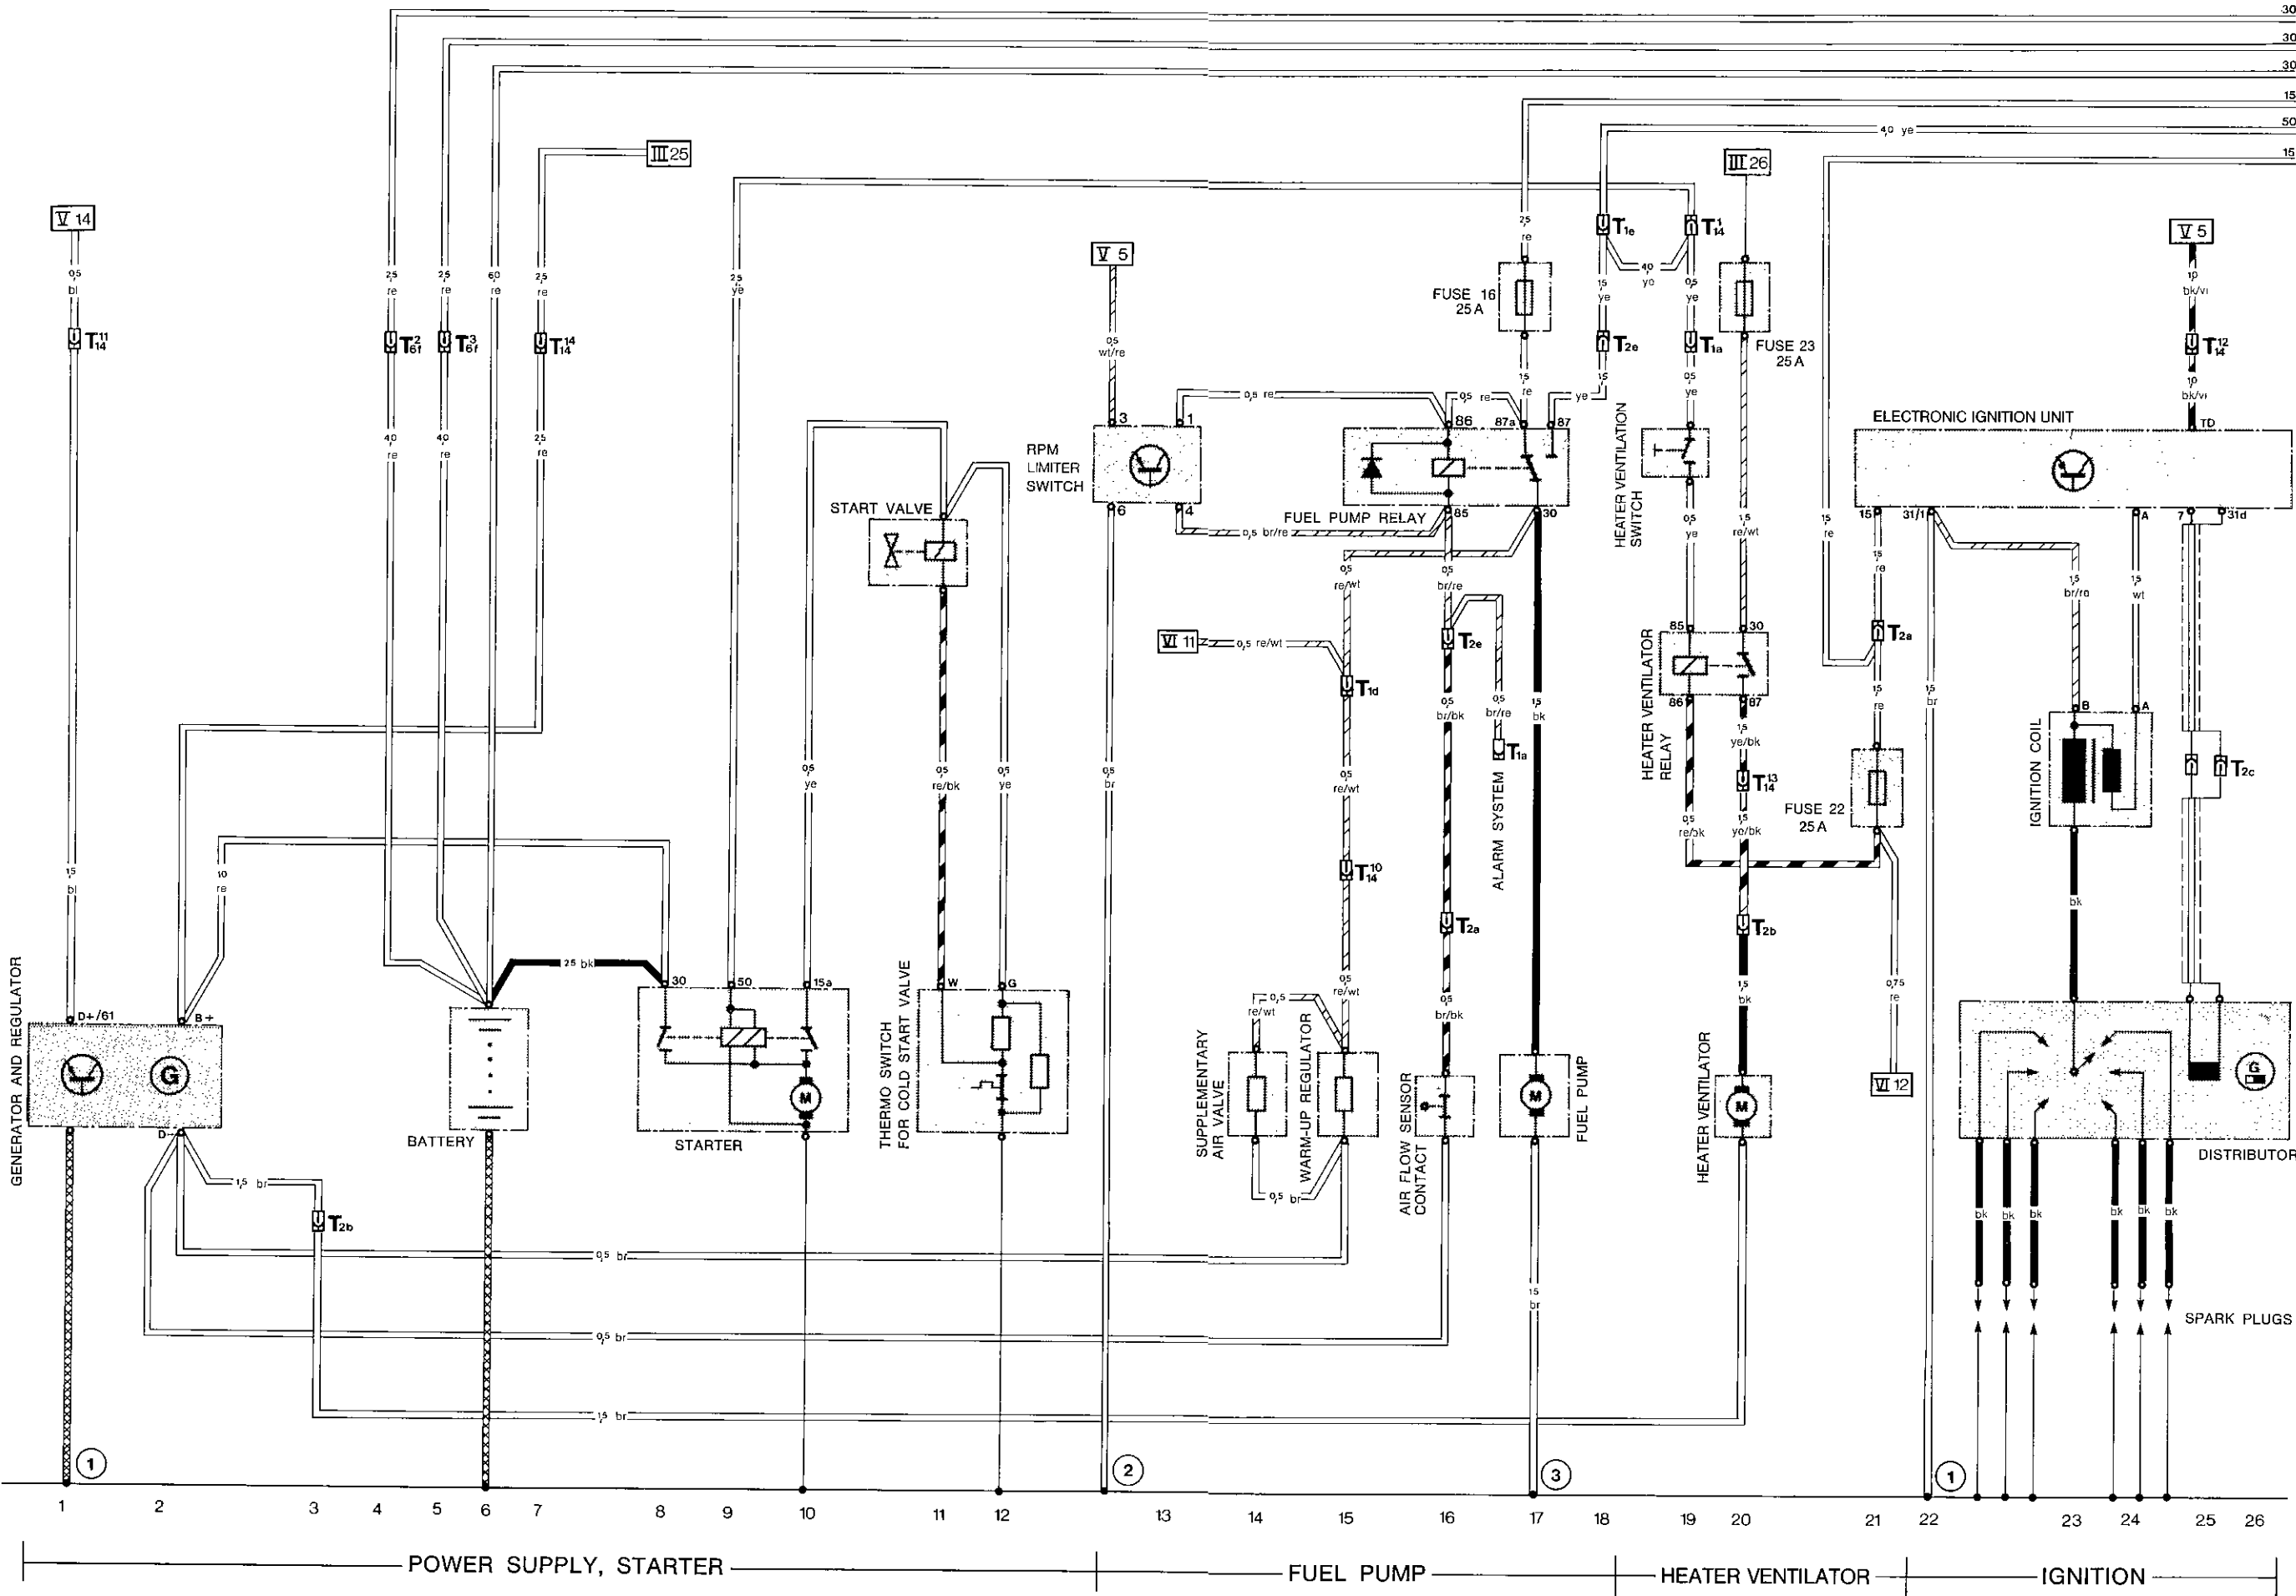


Current Flow Diagram Type 911 SC USA Model 82, Part II

HEADLIGHT, FRONT TURN SIGNAL,
HAZARD FLASHER

Current Flow Diagram Type 911 SC USA, Model 82, Part II

9

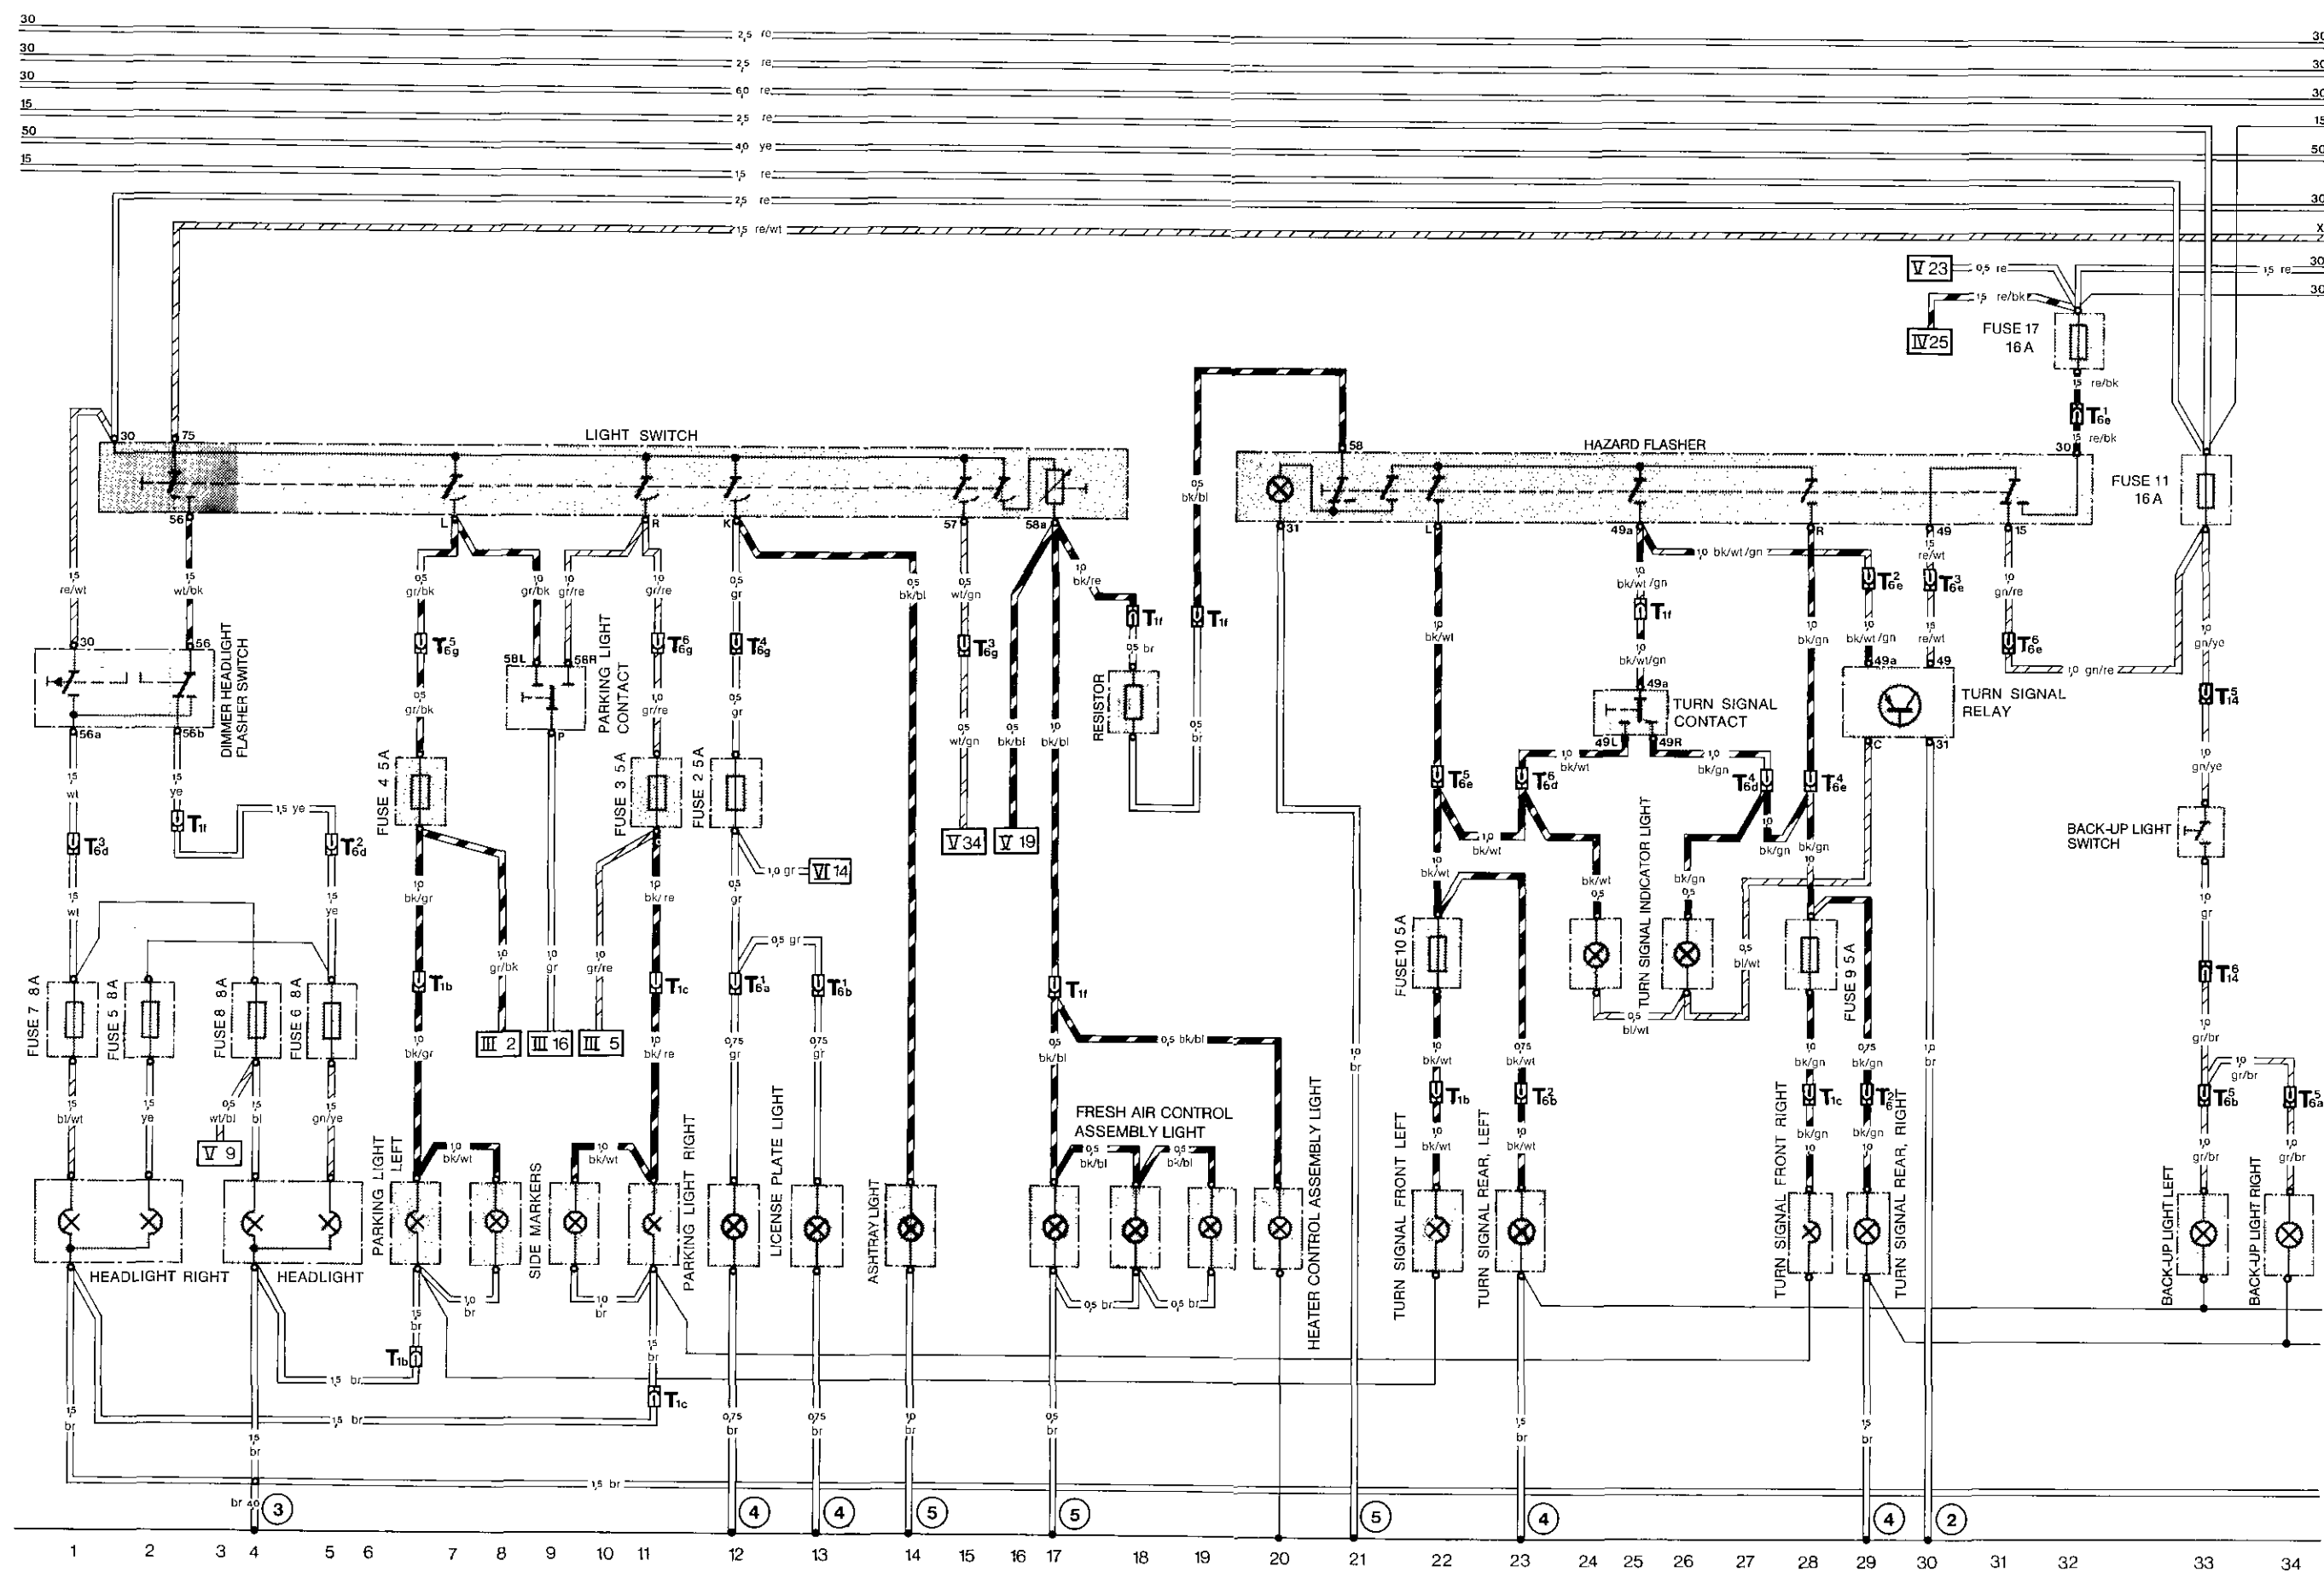

- HEADLIGHT, FRONT TURN SIGNAL, HAZARD FLASHER

Current Flow Diagram Type 911 SC USA Model 82, Part III

REAR LIGHTS, BRAKE LIGHTS


HORNS

INTERIOR LIGHT


IGNITION/STARTER SWITCH

REAR WINDOW DEFOGGER

Current Flow Diagram Type 911 SC USA, Model 82, Part III

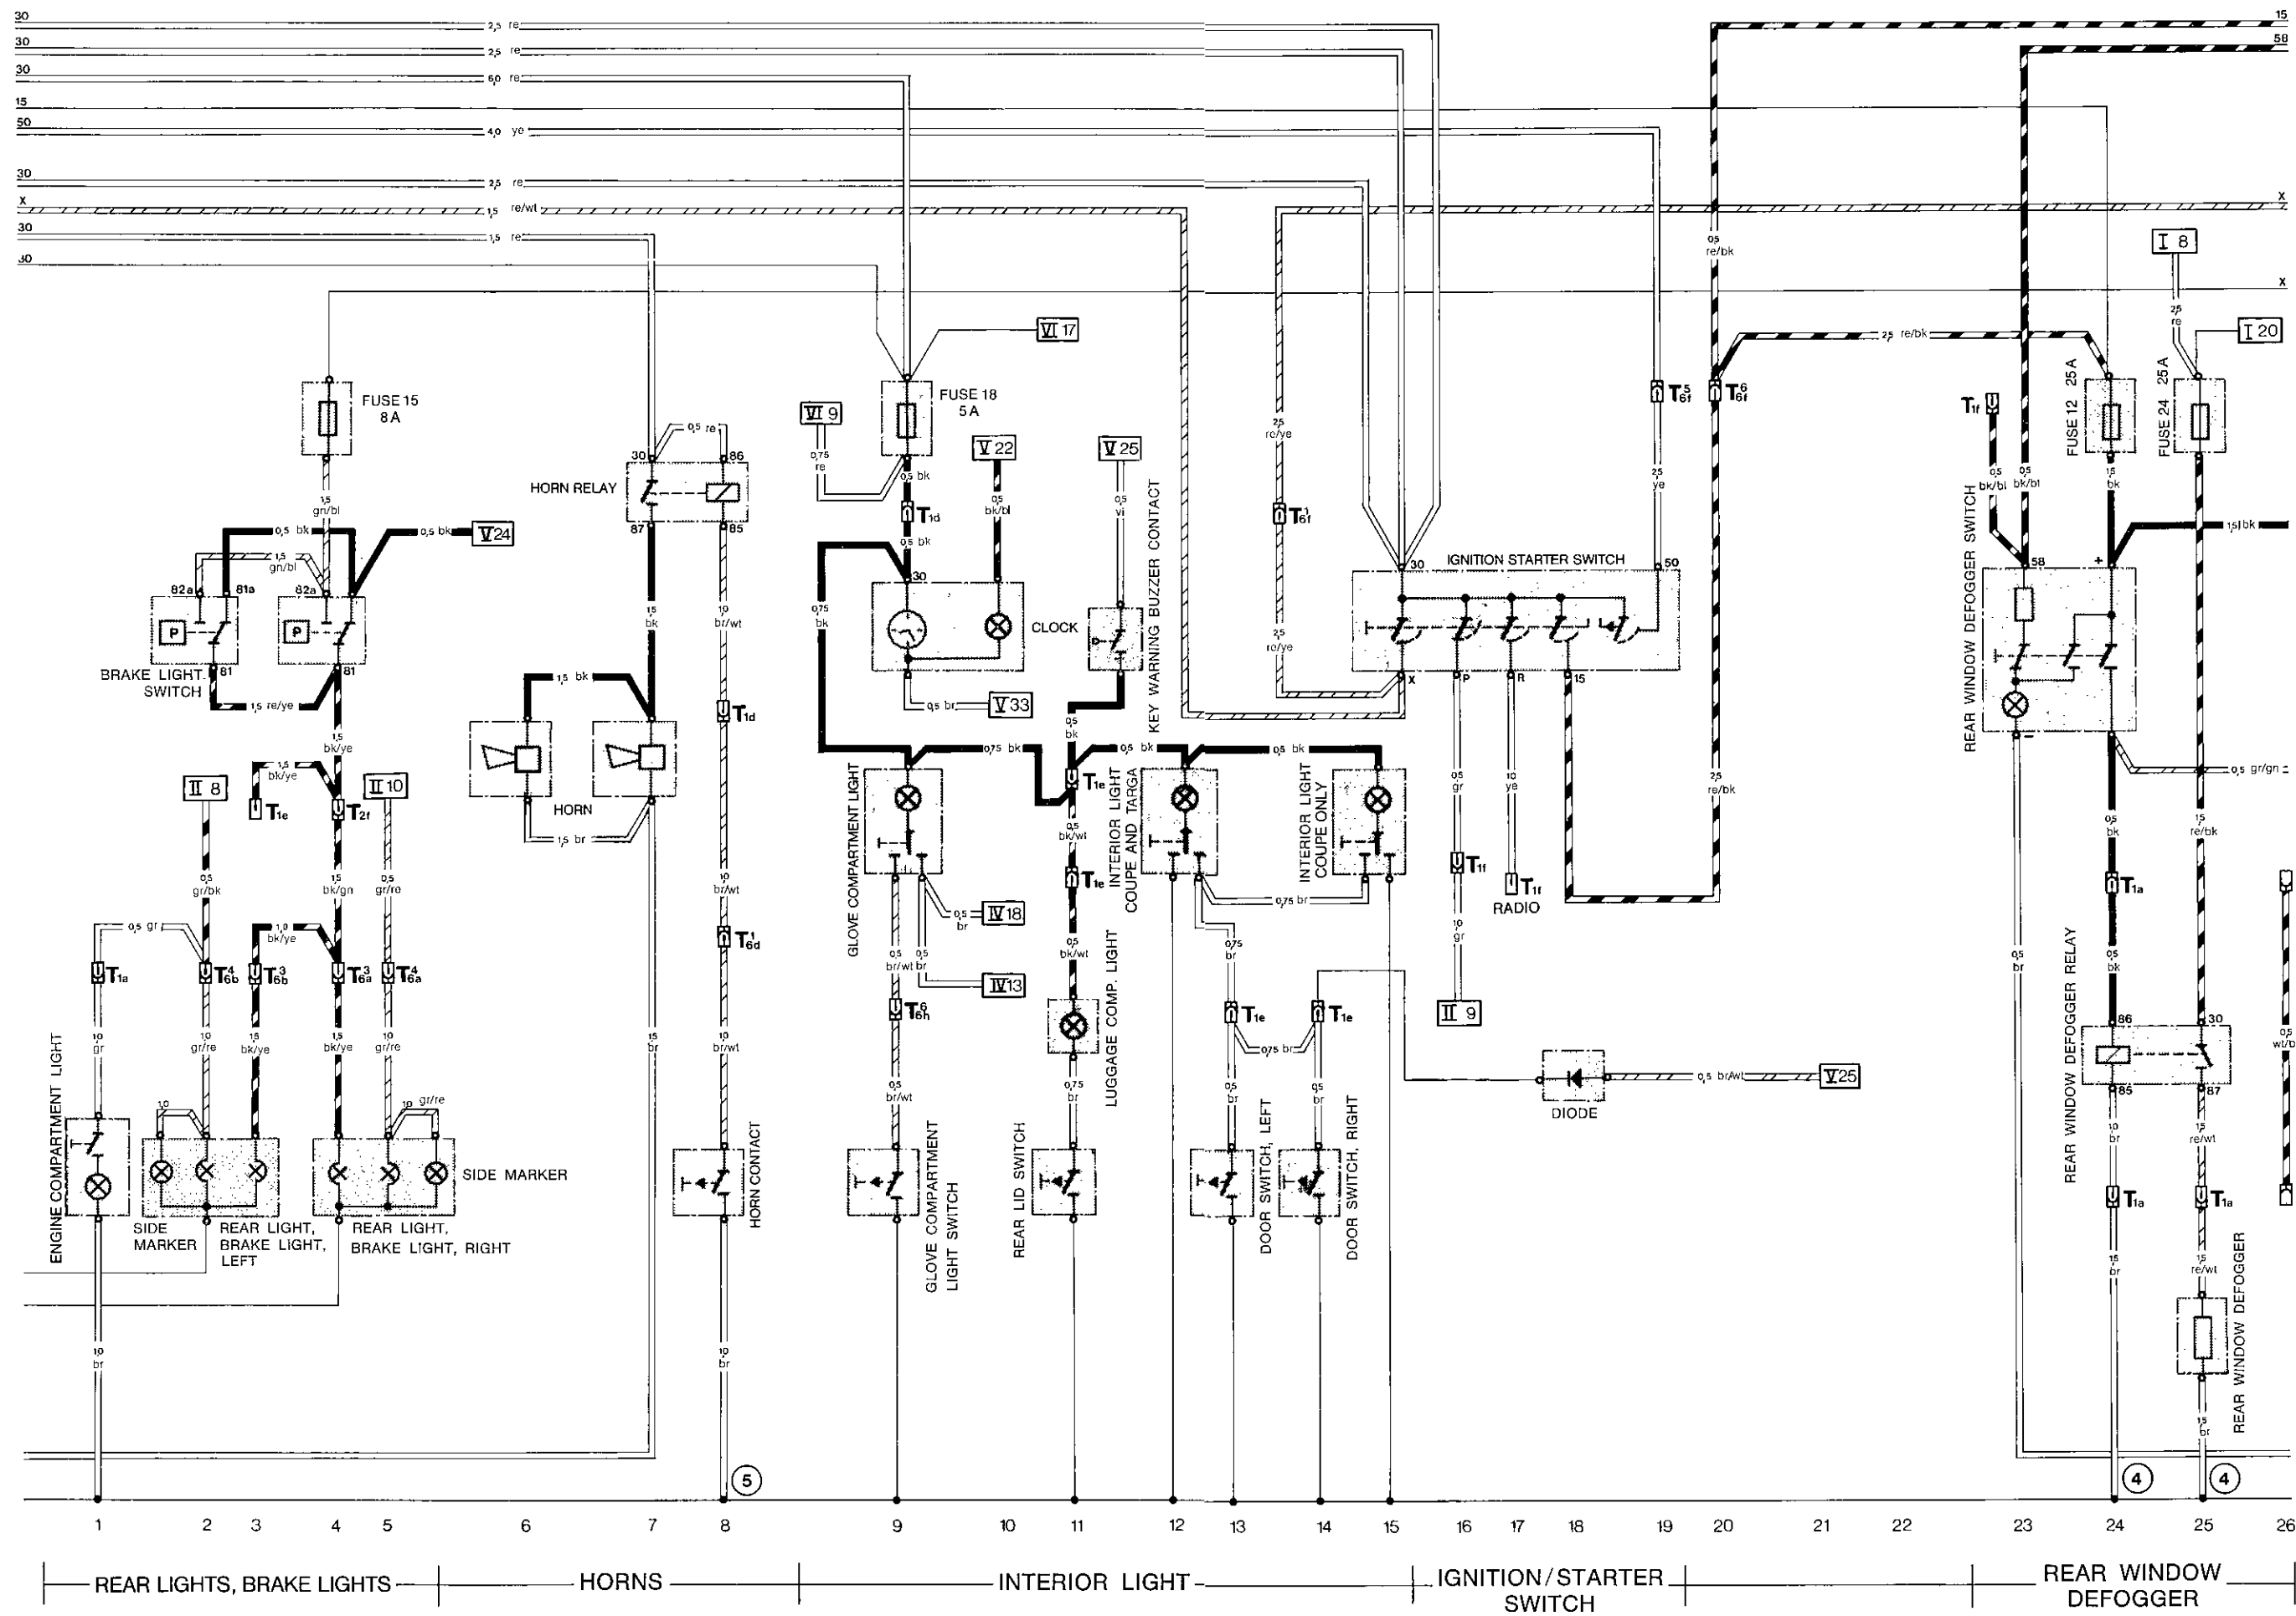


When installing antenna make sure there is perfect ground contact between base of antenna and fender.

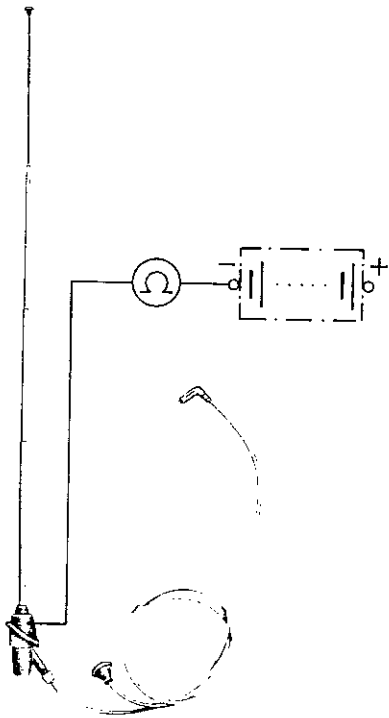


Base ground to battery negative pole = 0 ohm.

Installed distance for automatic antenna.

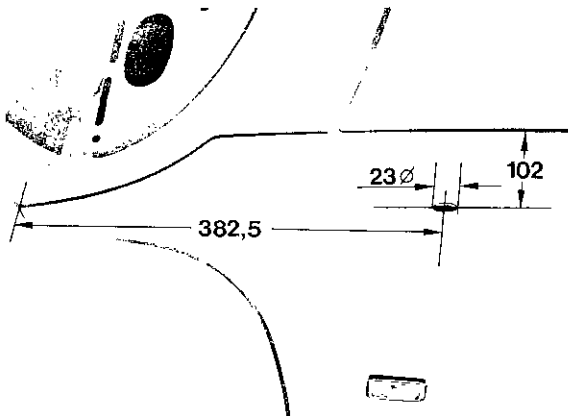


9

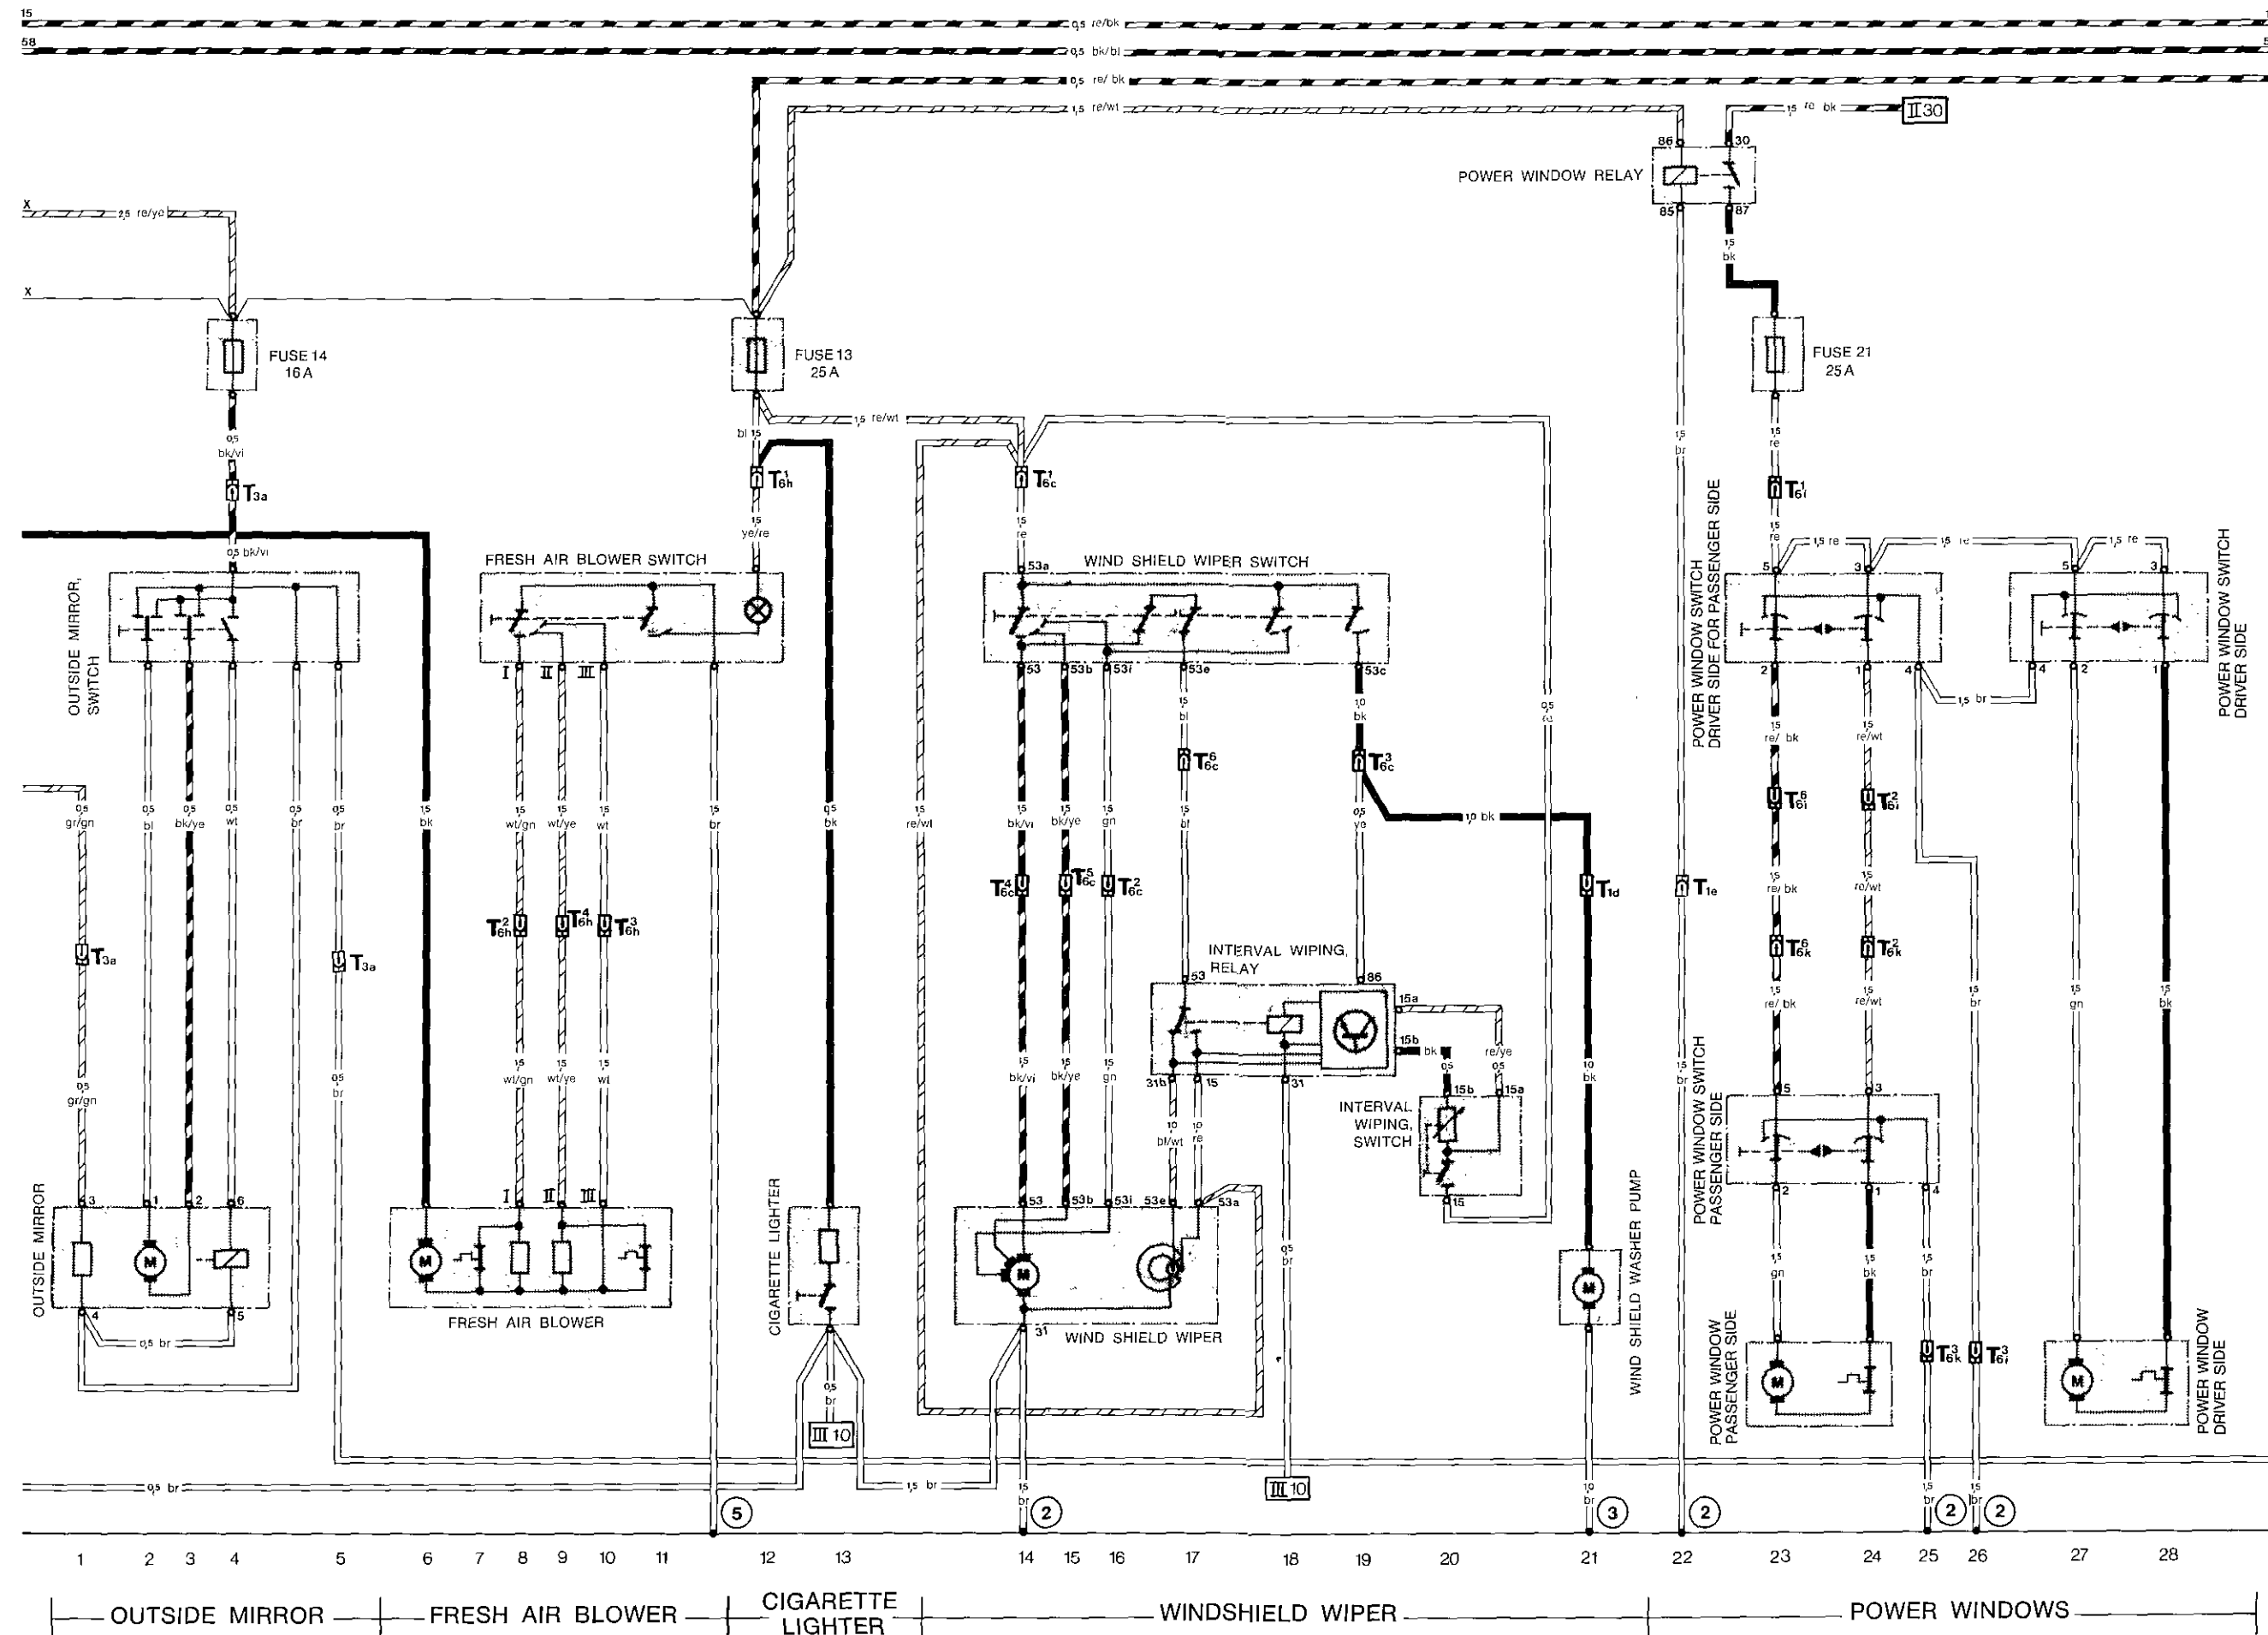

Current Flow Diagram Type 911 SC USA Model 82,Part V

OXYGEN SENSOR SYSTEM
INSTRUMENT, SENDER UNITS


Current Flow Diagram Type 911 SC USA, Model 82,Part V

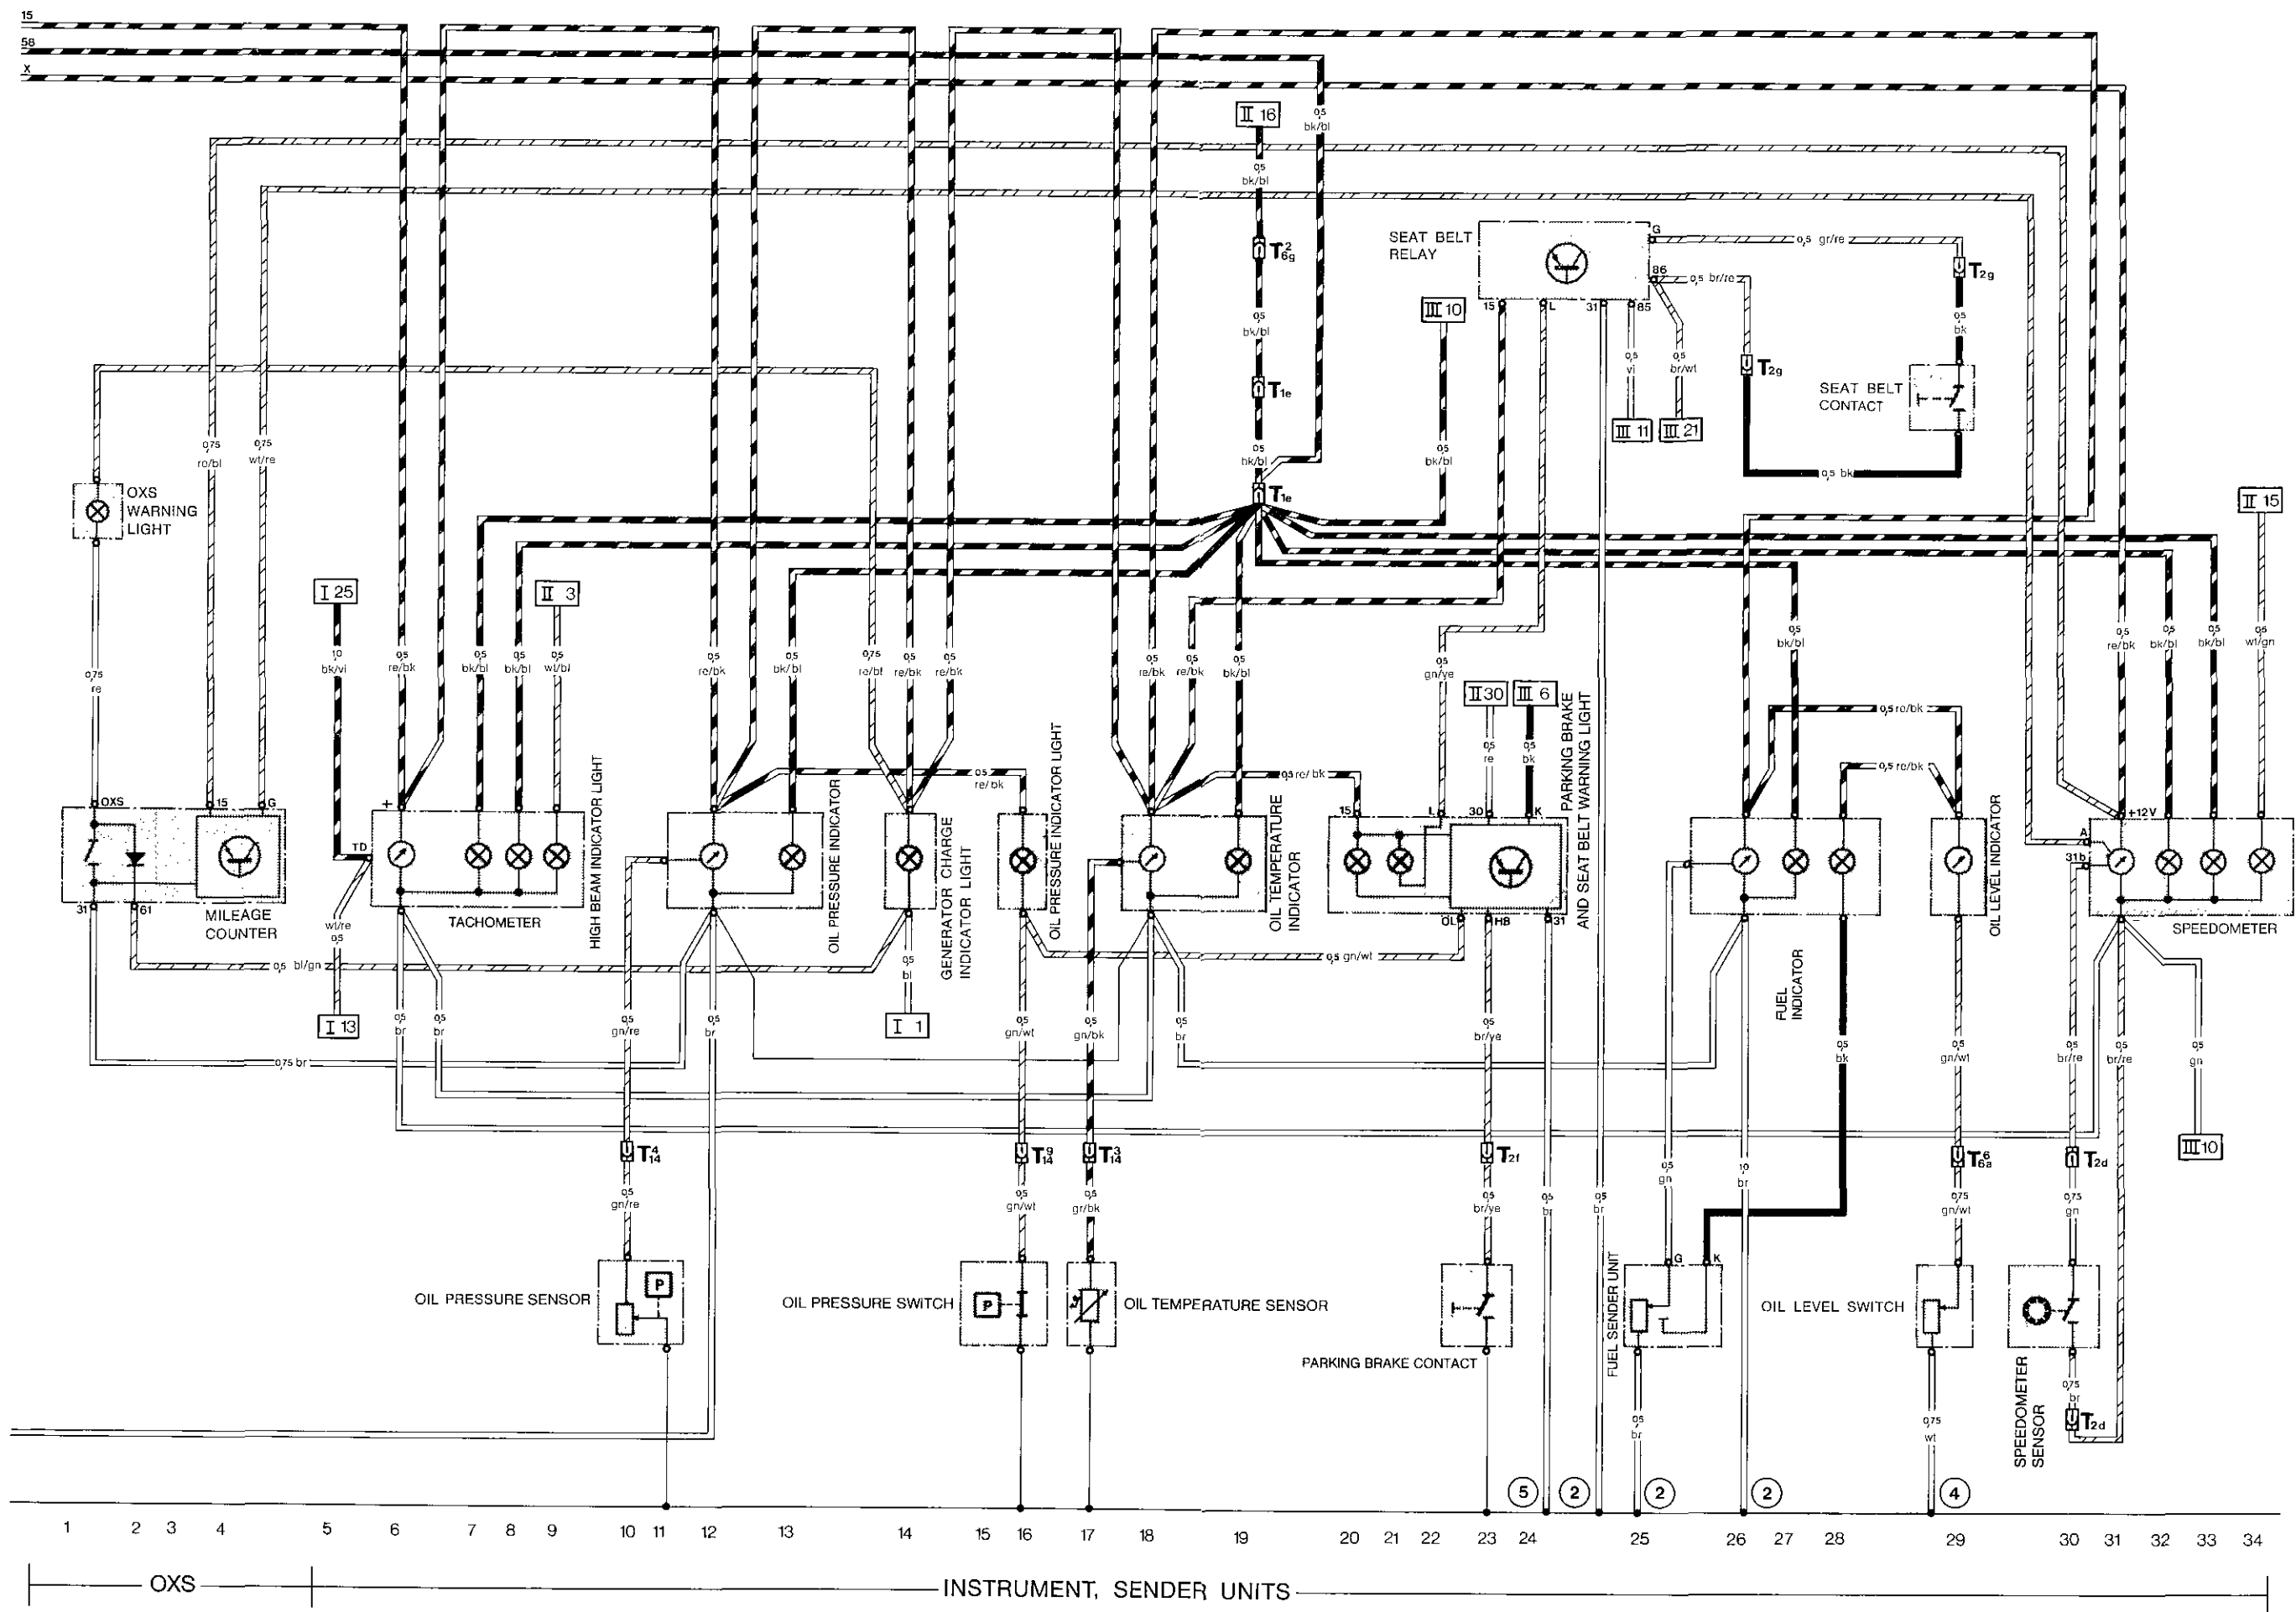

Current Flow Diagram Type 911 SC USA Model 82, Part VI

OXYGEN SENSOR SYSTEM
HEADLIGHT WASHER


Current Flow Diagram Type 911 SC USA, Model 82, Part VI

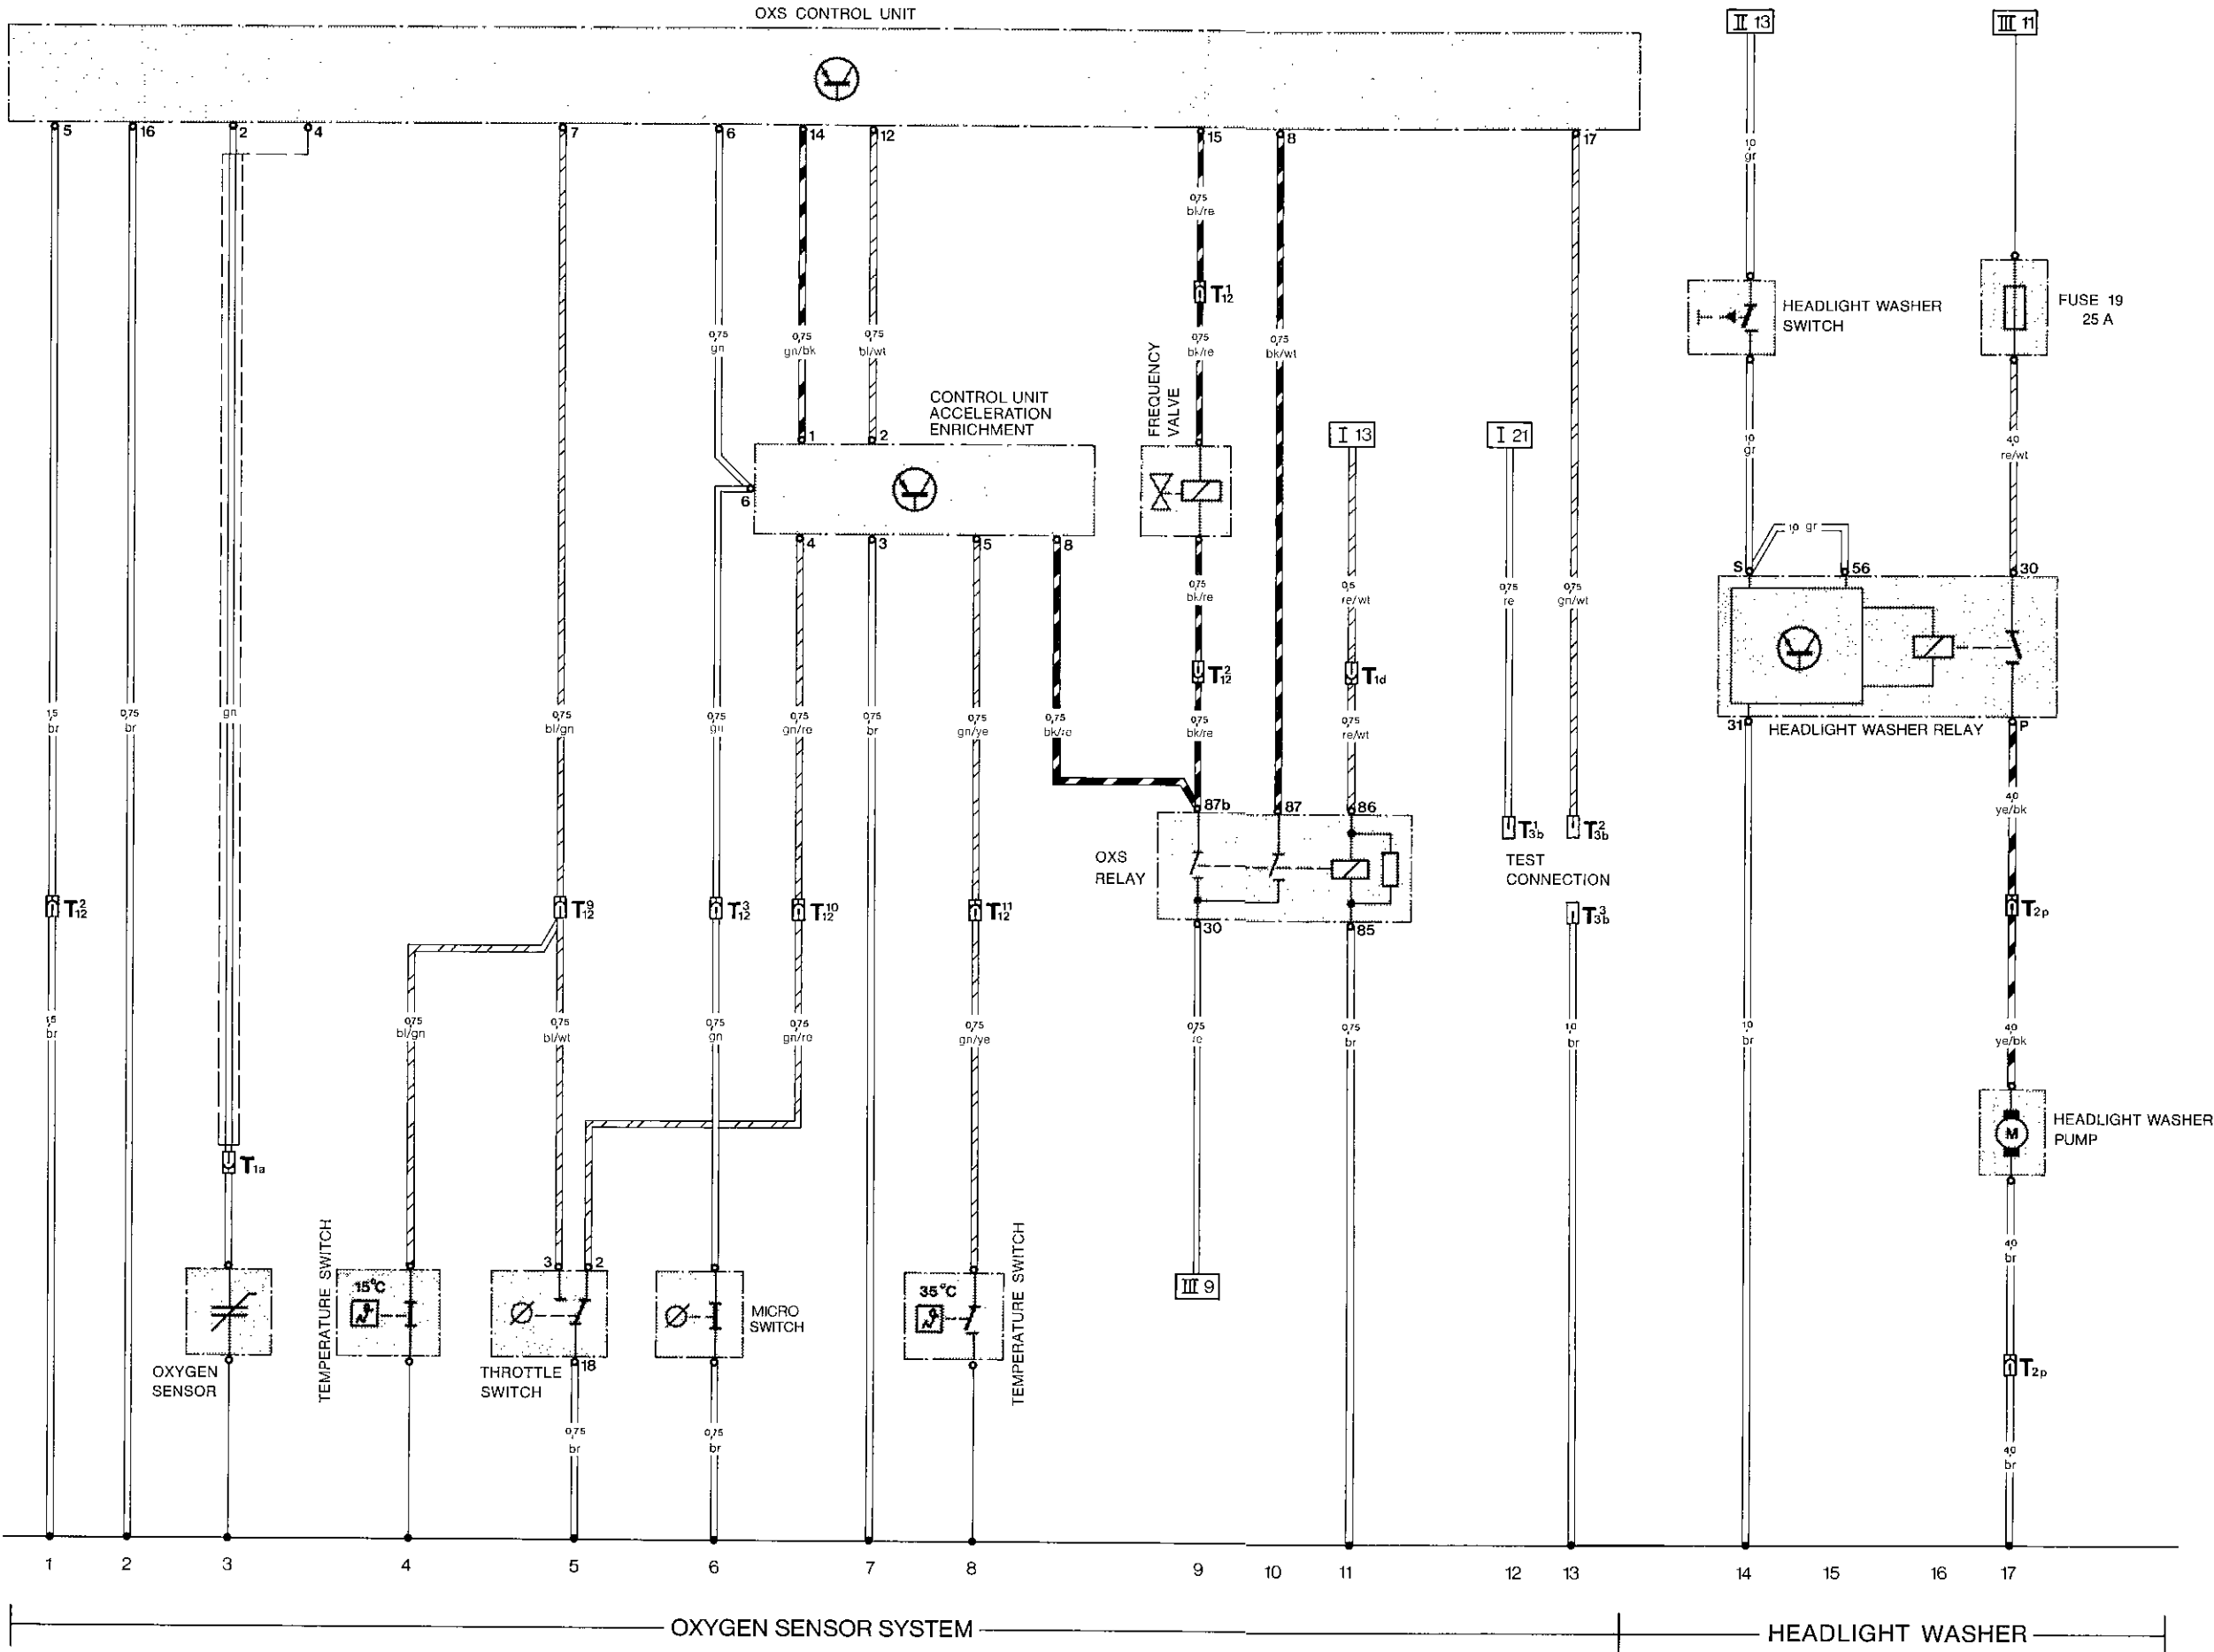

LOCATION OF RELAYS AND FUSES IN THE VEHICLE EFFECTIVE WITH 1974 MODELS

Beginning with 1974 models, the fuse box is located on the left side panel of the luggage compartment near the brake fluid reservoir. The plastic cover can be removed from the fuse box by lightly pressing its top downward.


The fuse box contains 18 fuses and, depending on options, 1 to 3 standard relays.

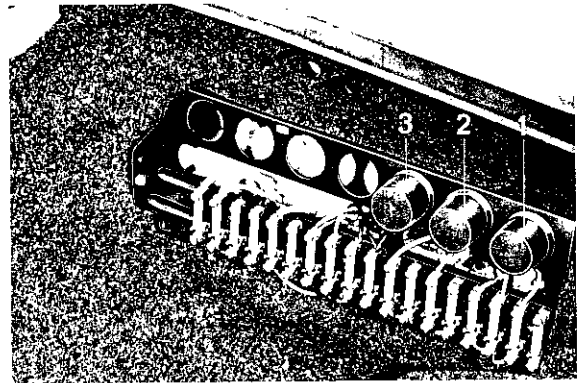

- 1 - Relay for air conditioning
- 2 - Relay for fog lamps
- 3 - Relay for signal horn


Mounting space for 4 additional relays has been provided for possible expansion of the electrical system.

A fuse listing is contained in the wiring diagrams. The fuses are identified in the diagrams in an ascending numerical order whereby the forward-most fuse in the vehicle bears the designation S 1.

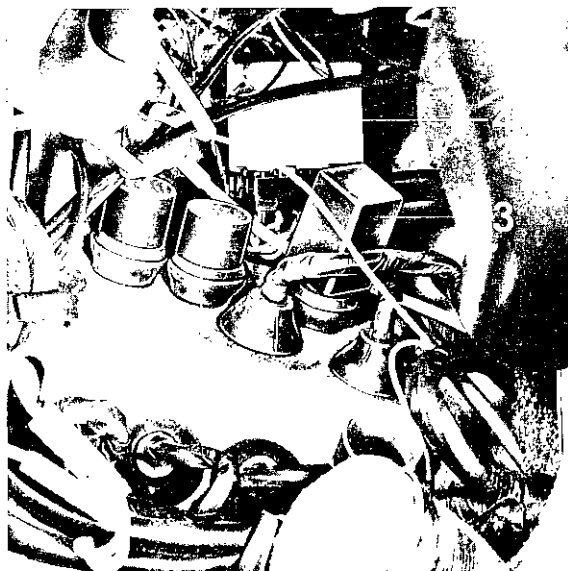

Additional fuses and relays are located on the luggage compartment floor (left, as seen in direction of driving), as well as on the mounting plate in the engine compartment.


- 1 - Vacant
- 2 - Relay for heated windshield
- 3 - Relay for emergency flasher
- 4 - Logic-relay for safety belt warning system

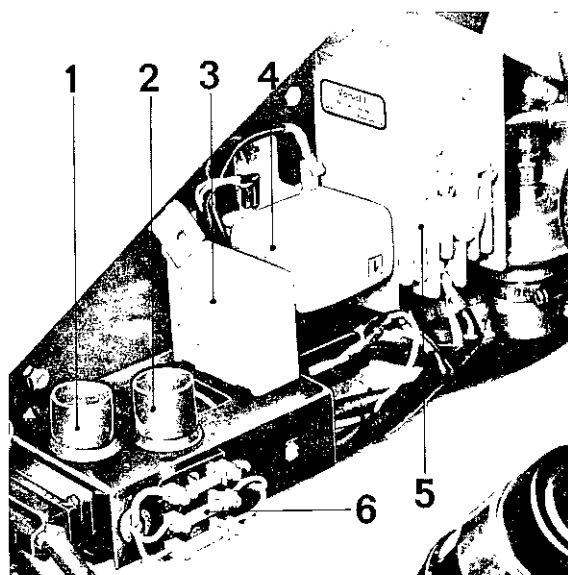

- 1 - Relay for single stage heated rear window (not installed with two-stage version)
- 2 - Cold start relay
- 3 - Control relay for two-stage heated rear window (not installed with single stage version)
- 4 - Voltage regulator
- 5 - CDS trigger unit
- 6 - Rear fuse box

Vehicles not equipped with CIS (fuel injection) have the RPM-transducer installed adjacent to the two-stage heated rear window relay.

The 1975 911 S and Carrera models have a modified relay plate.

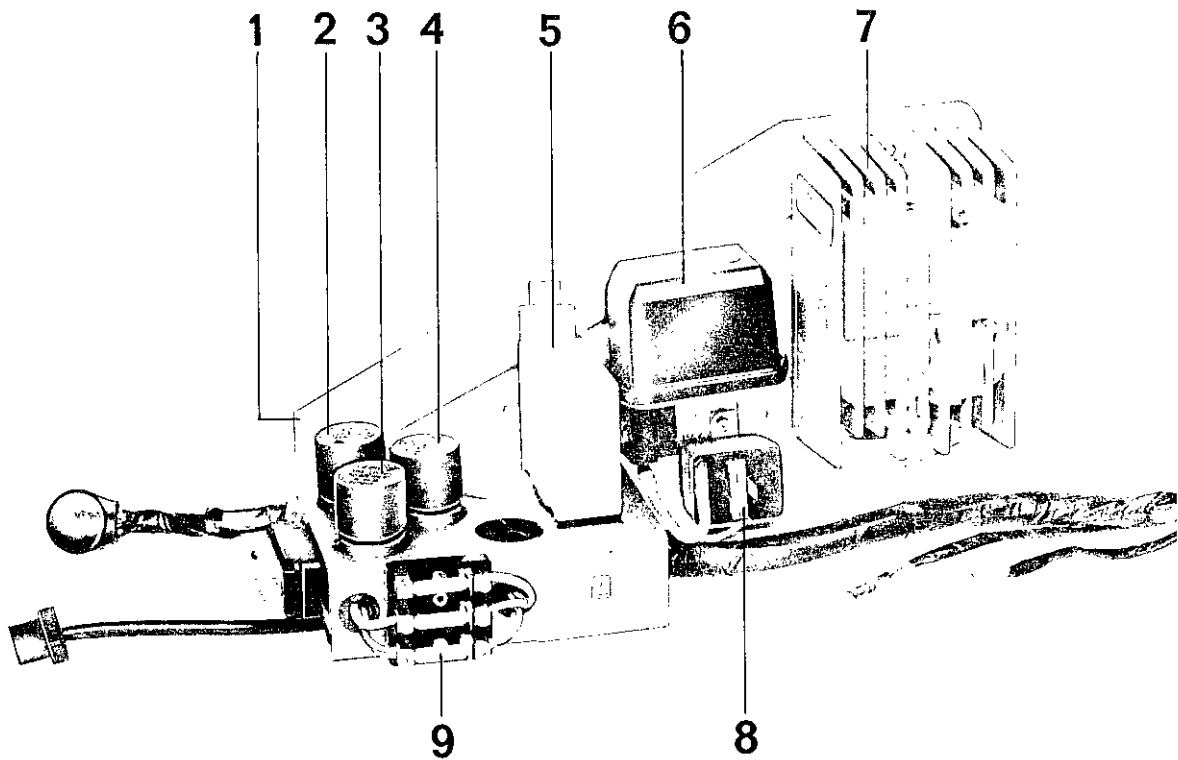


- 1 - Relay plate
- 2 - Standard relay for 1-stage rear window defogger (deleted for 2-stage heater)
- 3 - Standard relay for heater blower
- 4 - Standard relay for warm-up regulator
- 5 - Control relay for 2-stage rear window defogger (deleted for 1-stage heater)
- 6 - Voltage regulator
- 7 - Capacitor discharge ignition control unit
- 8 - Radio (interference) suppressor
- 9 - Rear fuse box (fuses S 22 thru S 24 of wiring diagram)

Note

The relay positions for the heater blower and warm-up regulator were interchanged in some vehicles.

LOCATION OF RELAYS AND FUSES - 1976 MODEL


Depending on the car's equipment, the relay carrier in the fuse box is fitted with up to 5 relays.

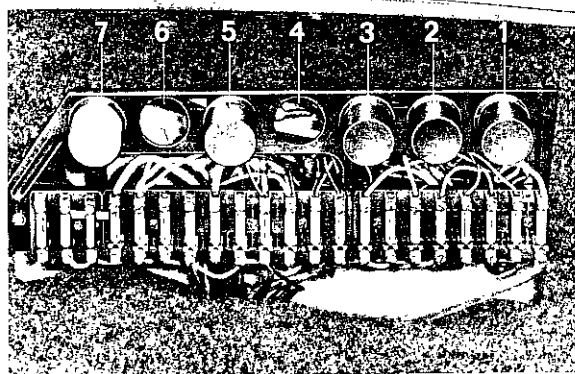

- 1 - Air conditioner relay
- 2 - Foglight relay
- 3 - Horn relay
- 4 - Vacant
- 5 - Electric window winder relay
- 6 - Vacant
- 7 - Fuel pump relay

The fuel pump relay also controls the warm-up regulator and auxiliary air regulator. It has a red cover to distinguish it from the standard relays.

The fuse box has 21 fuses. The last fuse (S 21) as seen in the driving direction is for the fuel pump for 1976 models.

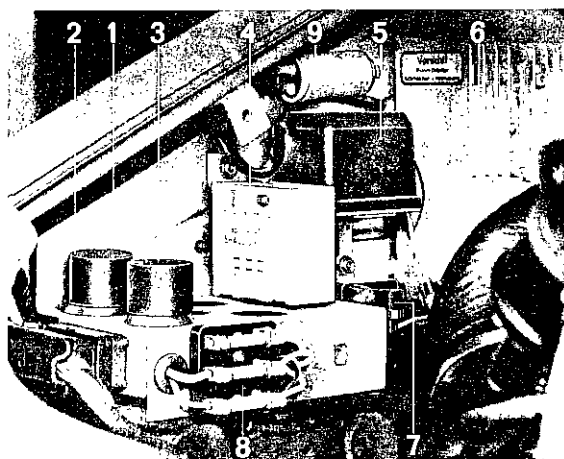


The warm-up regulator relay is omitted.

- 1 - Relay plate
- 2 - Relay for single stage rear window defogger (omitted for 2-stage defogger)
- 3 - Relay for heater blower
- 4 - Relay for 2-stage rear window defogger (omitted for single stage defogger).
- 5 - Voltage regulator
- 6 - CDI control unit
- 7 - Radio (interference) suppressor
- 8 - Rear fuse box (fuses S 22 thru S 24 of current flow diagram)
- 9 - Capacitor (only for Bosch CDI control unit) - omitted as from 1978 models -


HAZARD WARNING FLASHER

Beginning with 1973 models, all Type 911 vehicles are equipped with a new hazard warning flasher.

The new flasher can be identified by its white plastic base; the old flasher was all black. The new flasher is additionally equipped with Terminal 58 which is needed.

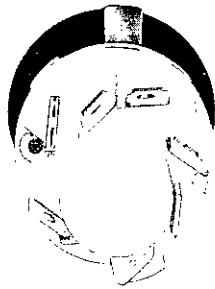


NEW

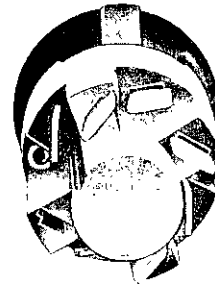

OLD

Since this modification required repositioning of the terminal tabs, it is not possible to install the new hazard warning flasher into vehicles of pre-1973 vintage unless the new wire loom (with white coupling) is used or the terminals are changed in the coupling of the old loom to match those in the new flasher. This would require removal of the brown wire, together with the flat terminal socket, from the plug-in connector (watch retention hook) and inserting it into the adjacent, formerly unused, receptacle.

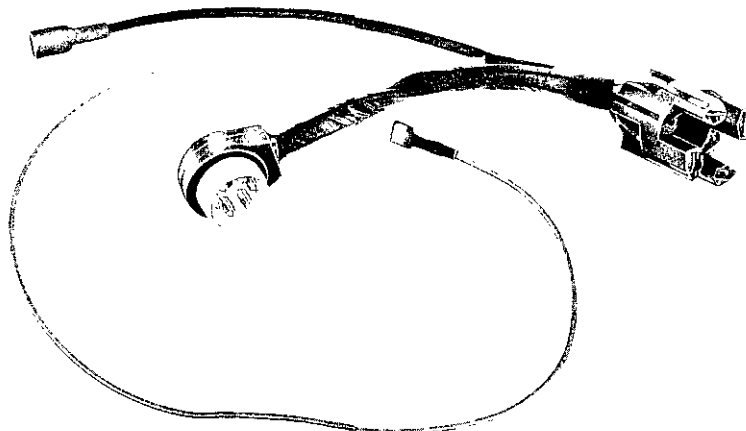

ALTERNATOR - 1975 MODELS



An 840 W alternator (same size as the 770 W alternator used previously) is installed as of the 1975 model year. The 840 W alternator will be replaced by one of 980 W later in the 1975 model year. This alternator will be 9.3 mm longer. The blower housing, already designed for this size, has a ring installed with the 840 W alternator to compensate for the 9.3 mm deeper hole in the blower housing. This ring is to be omitted when a 980 W alternator is service installed in such a vehicle.

A new voltage regulator is also introduced for the 1975 models. It is applicable to both new alternators (840 and 980 watts).

A modified hub extension is installed with the introduction of the 980 W Alternator. This part must also be installed if a 980 W alternator is service installed in a vehicle. If the former hub extension is left in the vehicle, there will be a large gap between it and the blower housing.


IGNITION SYSTEM MODIFICATIONS - 1978 MODELS

1. All 911 models are equipped with a breakerless capacitor discharge ignition system (similar to that of 930 Turbo).
2. CDI unit and distributor have been changed.
3. Ignition control: centrifugal advance and vacuum retard.
4. Speed control:
Electronic speed relay, cut-out of fuel pump at 6850 \pm 150 1/min.
5. Distributor turns counterclockwise. Consequently the breakerless CDI system cannot be serviced installed in earlier vehicles.

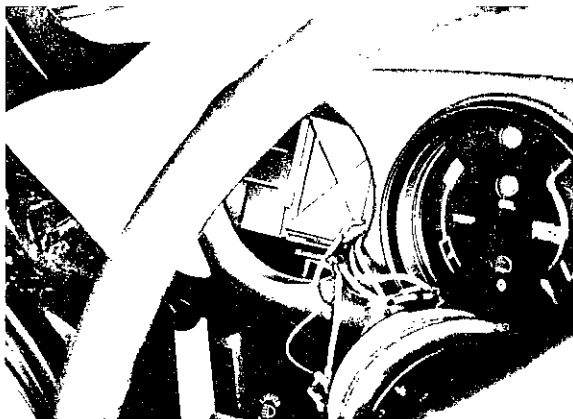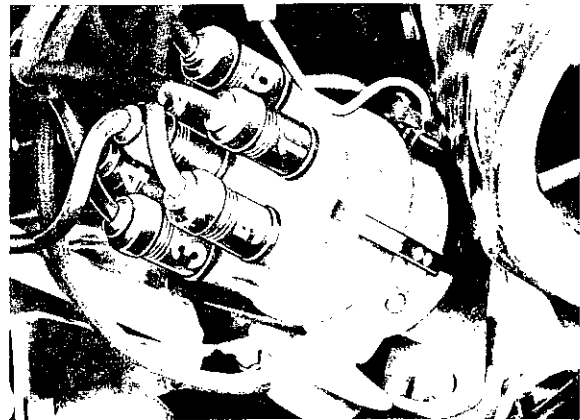

Changes to Ignition System - 1980 Model

The 911 SC is equipped with a distributor having a double vacuum unit for retard and advance ignition control.

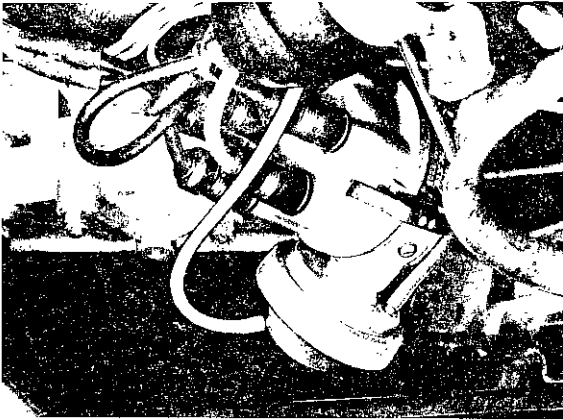

STARTER

General Information

Beginning with 1972 models, starter power output is increased from 0.8 HP to 1.5 HP. Both starter types are basically of the same design.


Specifications for GB 12 V 1.5 HP (BOSCH #: 0 001 312 100)

| | |
|--------------------------------------|-----------------|
| Voltage | 12 V |
| Power rating | 1.5 HP |
| No-load current draw @ 11.5 volts | 50 - 80 amps |
| No-load speed | 7300 - 9300 rpm |
| Stall torque current draw @ 6 volts | 690 - 780 amps |
| Minimum voltage for solenoid draw-in | 7.5 volts |
| Brush pressure | 800 - 900 grams |
| Armature end-play | 0.1 - 0.3 mm |

Beginning with the end of April 1972, only vehicles equipped for countries in the northern hemisphere and Canada continue to be equipped with the 1.5 HP starter. All other Type 911 T, E and S vehicles will again be equipped with the 0.8 HP starter.


DISASSEMBLING AND ASSEMBLING STARTER

TOOLS

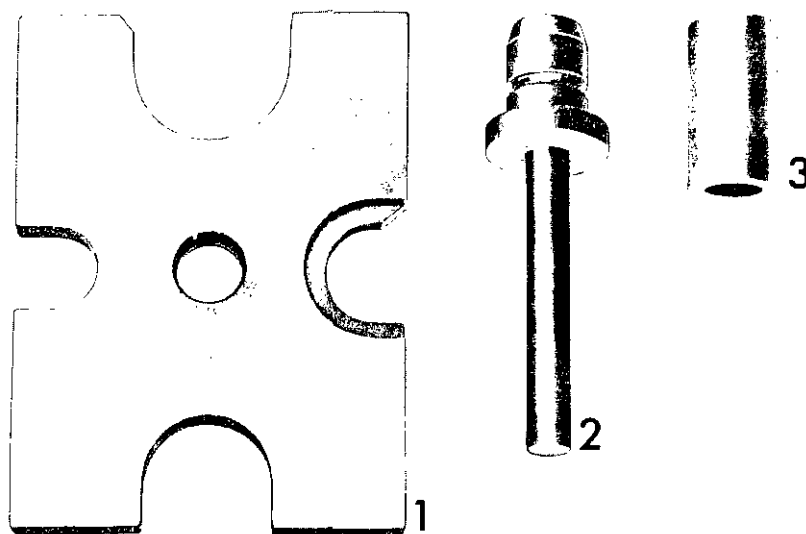

| Nr. | Description | Special Tool | Remarks |
|-----|-------------|--------------|--------------|
| 1 | Press plate | VW 401 | |
| 2 | Press block | VW 411 | |
| 3 | Press pipe | VW 418a | 31.5 mm dia. |

Disassembling and Assembling
Starter

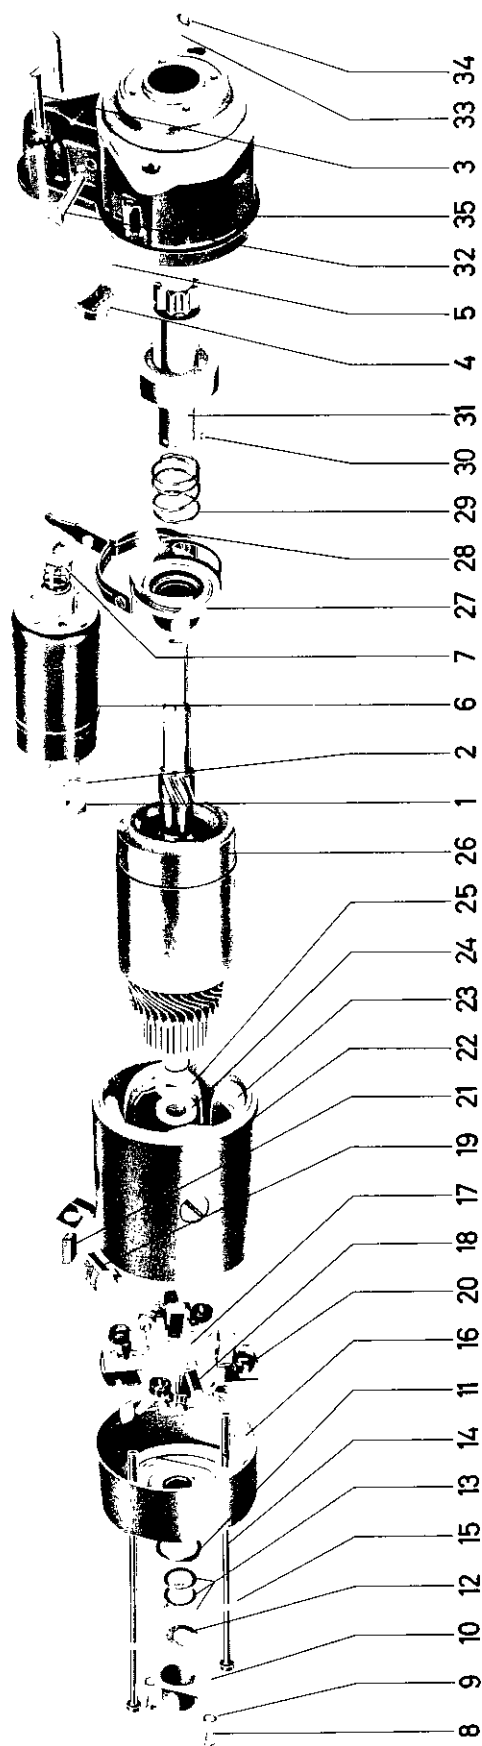

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|----------------------|-----|--|--|--------------------------|
| | | | removing | installing | |
| 1 | Nut | 1 | | | |
| 2 | Lock washer | 1 | | | |
| 3 | Retaining screw | 2 | | | |
| 4 | Rubber block | 1 | | Position rubber block tip in field frame recess. | |
| 5 | Disc | 1 | Pull pinion engagement assembly forward. | Check solenoid current draw and free movement of core. Seal, lubricate lightly. | |
| 6 | Solenoid | 1 | | | |
| 7 | Disengagement spring | 1 | | | |
| 8 | Fillister screw | 2 | | | |
| 9 | Washer | 2 | | | |
| 10 | Dust cap | 1 | | Seal. | |
| 11 | O-ring | 1 | Replace if damaged. | | |
| 12 | Retainer | 1 | | | |
| 13 | Shim | | Note number of shims. Adjust armature endplay to 0.1 - 0.3 mm (0.004 - 0.012 in.) | | |
| 14 | Bolt | 2 | | Seal with paste. | |
| 15 | Washer | 2 | | | |
| 16 | Brush-end cover | 1 | Check bearing bushing, replace if necessary (remove with VW 401, VW 411, and VW 418a). | Ground-connecting surface to field frame must be free of paint or grease. Upon assembling, seal and lubricate lightly. | |
| 17 | Brush carrier plate | 1 | | Check position of rotation detent for proper ground to field frame. | |

| Nr. | Description | Qty | Note when | | Special instructions see |
|-----|-------------------|-----|---|--|--------------------------|
| | | | removing | installing | |
| 18 | Negative brush | 2 | Check for cracks, dirt, and tight connection. | Brushes must move freely in holder. Replace in sets only. | |
| 19 | Positive brush | | | | |
| 20 | Brush spring | 4 | Lift with wire hook. | Brush pressure ca. 800 - 900 grams (28-32 oz.). | |
| 21 | Rubber grommet | 1 | | Check for proper sealing. | |
| 22 | Field frame | 1 | | Check for proper ground between brush end cover and drive housing. | |
| 23 | Field coil | | | Check continuity. Replace coil if burned. | |
| 24 | Insulating washer | 1 | | Locate against brush carrier plate. | |
| 25 | Thrust washer | 1 | | Locate against commutator. | |
| 26 | Armature | 1 | Vertical runout 0.03 mm; minimum diameter 33.3 mm; if necessary, undercut segment insulation 0.8 mm deep. | Check for grounding. Check soldered points between segments and soldered tabs. Install armature together with actuating lever. | |
| 27 | Actuating sleeve | 1 | | | |
| 28 | Actuating lever | 1 | | Replace if bent. | |
| 29 | Engagement spring | 1 | | Coat heavily with Ft 2-v-3 grease or similar. | |
| 30 | Detent balls | 10 | | Install packed in lithium grease. | |
| 31 | Overrun clutch | 1 | | | |
| 32 | Pivot bolt | 1 | | Grease lightly. | |
| 33 | Lock washer | 1 | | | |
| 34 | Nut | 1 | | | |
| 35 | Drive housing | 1 | | Seal joining surfaces between solenoid and drive housing, and field frame and drive housing. Coat lightly with oil. | |

Instructions for Removal and Installation

Beginning with 1974 models, Type 911 and 911 S vehicles are equipped with the 0.8 HP starter motor. The 1.5 HP starter, standard in the 2.7 liter Carrera vehicles, can be installed on special order.

A battery-starter lead with a cross-section of 25 mm² is used in conjunction with the 0.8 HP starter motor; this lead has a cross-section of 35 mm² in vehicles equipped with the 1.5 HP starter motor. For easier identification, both battery leads are color-coded about 800 mm from the starter connector:

| | | |
|-------------|---|--------------------|
| white band | - | 25 mm ² |
| yellow band | - | 35 mm ² |

It is necessary to replace the battery-starter cable when replacing the 0.8 HP starter motor with the 1.5 HP unit in 1974 model and later vehicles.

The type of cable installed in pre-1974 vehicles must be determined in such cases, although no color coding will be found.





| Standard Equipment | To end of 1971 models | From 1972 model to May 1972 | From May 1972 |
|--|-----------------------|-----------------------------|--------------------|
| Starter Power Rating | 0.8 HP | 1.5 HP | 0.8 HP |
| Cross-Section of Battery-Starter Cable | 25 mm ² | 35 mm ² | 35 mm ² |

Excepted from the above are all vehicles equipped with the Sportomatic transmission, which were equipped exclusively with the 0.8 HP starters and 25 mm² cables; and Carrera 2.7 vehicles which were furnished only with the 1.5 HP starter and 35 mm² cable.

SEALED BEAM HEADLIGHTS

Replacing Sealed Beam

1. Unscrew retaining screw and remove lamp rim.
2. Remove only the 3 screws (arrows) which secure the lamp unit retaining ring, remove retaining ring and withdraw sealed beam unit.
3. Disconnect plug from rear of unit.
4. Attach plug to rear of new unit.
5. Insert sealed beam unit and retaining ring tighten hold-down-screws.
6. Install lamp rim and tighten retaining screw. It is best to first screw the Philips-headscrew in by a few turns and then to seat the lamp unit in its upper retainer. Afterwards tighten the Philips-headscrew.

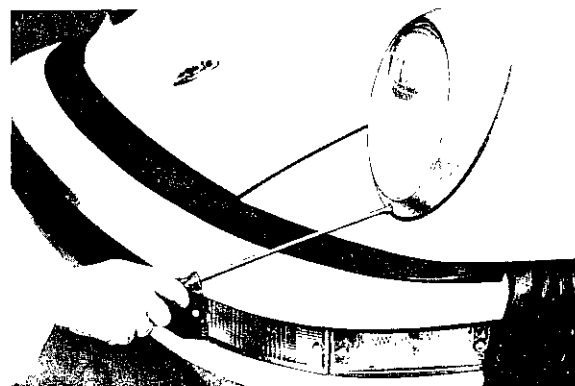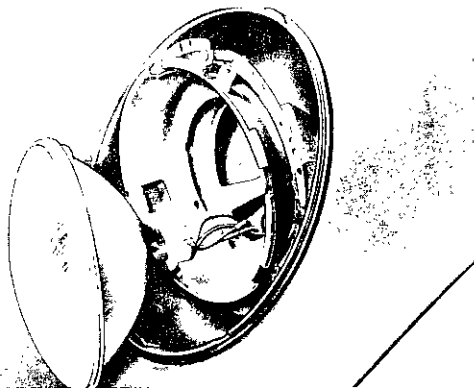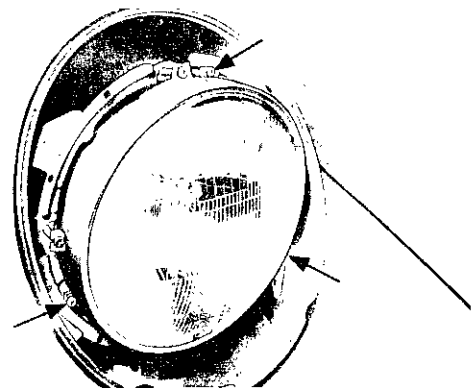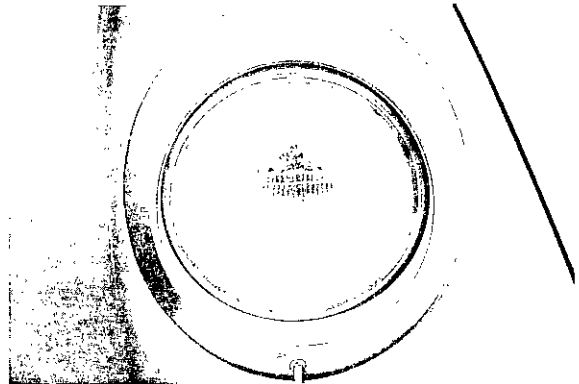



Beginning with the 1974 models, it is necessary to use the extra-long Philips screwdriver when loosening or tightening the headlamp retaining screw (Special Tool P 388).


FOG LAMPS AND FOG TAIL LAMP

Subsequent Installation


1. Disconnect battery ground strap.
2. Drill holes for lamp mounting and rubber grommets in front and rear bumper skirts. Make sure that the hole arrangement is made exactly as in the illustration for each of the two fog lamps.

(Dimensions are in mm)

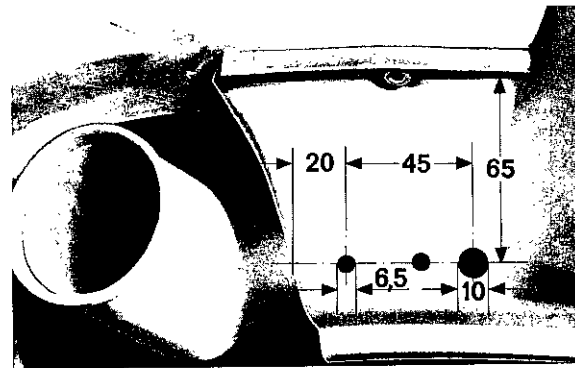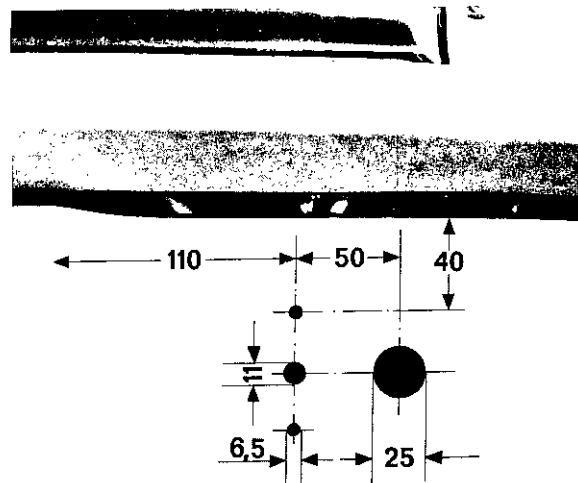

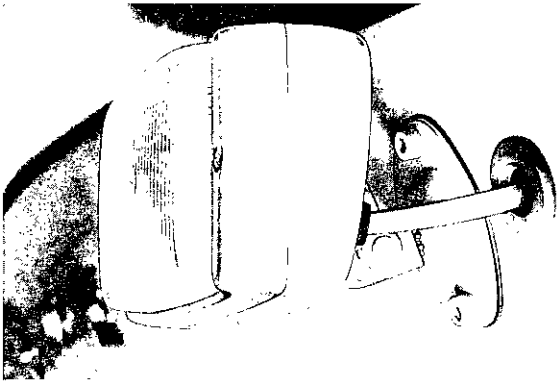

3. Install the outer and inner fog lamp mounting plates. The plate with the larger bulge is mounted outside, together with the rubber gasket. Use two Allen-head, M 6 x 15 bolts with washers and lock washers on each lamp unit. Place a toothed washer between the lamp bracket and lamp mounting plate. Fasten the lamp to the mounting plates with a lock ring and M 10 nut.

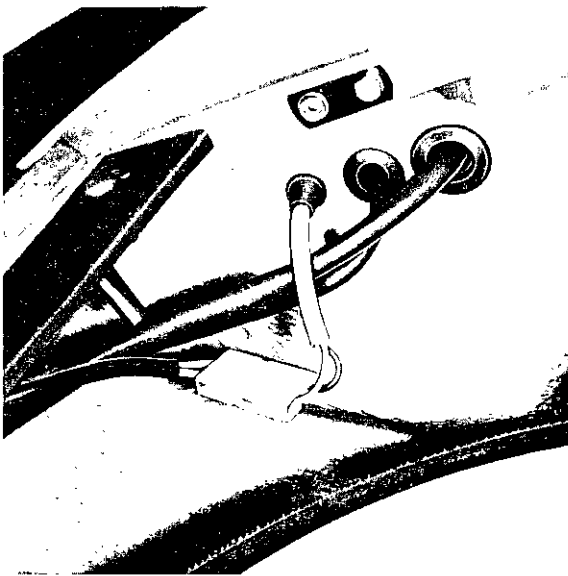


4. Thread the electrical wire through the bumper skirt and the already present holes in the wheelhouse into the luggage compartment, then press the grommets into place. The windshield washer reservoir must be removed for this operation (see 4.4-1/1).


5. Remove loudspeaker cover and loudspeaker. This fog lamp switch should be installed between the rear window defroster switch and the cigarette lighter. A hole of 20 mm dia. has to be cut in the instrument panel cover; the holes are already made in the instrument panel and luggage compartment pan. Mark center of the hole by pushing a pin through the back of the instrument panel cover. Cut the hole by using a compass for marking and then carefully cutting the cover with a knife, or by using an appropriate rotary cutter and cutting the cover to the sheetmetal base.

Vehicles manufactured to U.S. specifications are furnished with the hole already made; it is covered with a plug.

Remove plug from luggage compartment pan and install a grommet in its place, or else cut a hole in the plug. Insert switch assembly from the rear, fasten with ring nut, and screw the knob in.

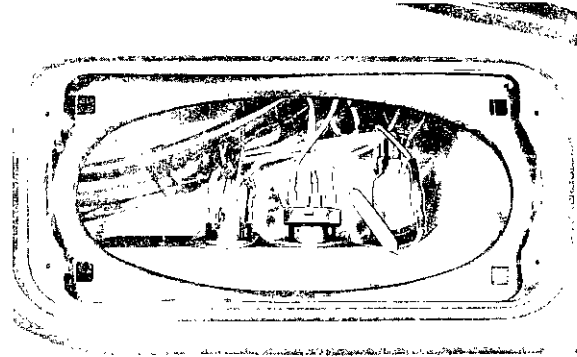

6. Remove luggage compartment lining and detach fuse box. Install the wires in such way that the two two-pole connectors will be located adjacent to the fog lamp wires. Fasten the wires along the front cross panel with the metal tabs already there. The relay switch socket should be pushed in from the front and the relay switch then plugged into it. The wires are then pushed along the luggage compartment floor to the fog lamp switch. The speedometer should be removed during this installation. Make sure that the wire does not touch the windshield wiper drive components.

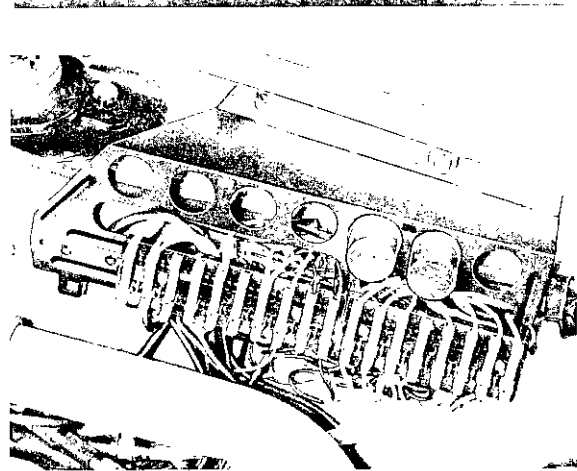

7. Wires leading from the fog lamps should connect brown with black, and white/yellow with blue. The brown ground wire should be connected to the ground bolt in the cross panel near the battery.

Connect wires to fuse box as follows:

| | |
|----------------------------|-----------------|
| red wire to | Fuse # 17 top |
| grey wire to | Fuse # 2 bottom |
| white wire to | Fuse # 8 top |
| white/green wire to | Fuse # 1 top |
| both white/yellow wires to | Fuse # 1 bottom |

Refasten fuse box and replace luggage compartment lining.

NOTE:

In vehicles manufactured to U.S. specifications, the connections differ as follows:

| | |
|---------------|----------------------------|
| grey wire to | Fuse # 6 bottom |
| white wire to | Ground (lengthen the wire) |

To preclude mistakes, note that the fuses are numbered 1 thru 18 (in vehicles equipped with air conditioning the numbers go thru 23), starting in front in the direction of travel. The fuse number code is also used in the wiring diagram.


The wires are connected to the switch as follows:

blue/white wire to Terminal N
grey wire to Terminal 58

A white/green wire is already installed in the vehicle; it is accessible through the loud-speaker cutout and can be found taped to the wire loom located there. Remove the tape and connect the wire to Terminal NR. The negative (-) terminal at the switch should be connected to the ground at the cigarette lighter through a resistor of 100 ohms.

NOTE:

If only the fog lamps, or one fog tail lamp is installed, a simple push-pull switch is used instead of the pull-turn switch. In addition, the resistor in the ground wire connecting the switch and the cigarette lighter is not used.

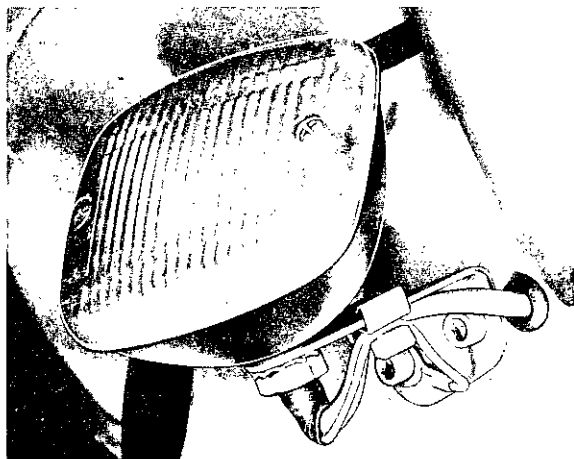

8. Unfasten wire attached to the rear part of the left tail lamp assembly. Push rubber grommet into the 10 mm hole in the bumper skirt and lead the wire from inside out. Attach fog tail lamp bracket to the bumper skirt with 2 Allen-head bolts M 6 x 15, lock washers and washers.

Attach a connector to the white cable and fasten it to the skirt with one of the two bolts. Lead the white/green wire through the grommet into the lamp unit and connect. Install wedge-base bulb (18 watts) and close lamp unit. The lamp retaining nut should be tightened firmly for proper ground connection.

Attach wire to lamp bracket with a wire clip.

9. Reconnect battery and check lamp operation. When the switch knob is pulled out, the fog lamps are switched on and the yellow control light glows with reduced brightness. When the knob is turned, the fog tail lamp is switched on and the yellow control light glows with full intensity.

10. Adjusting Lamps

An optical lamp adjuster should be used for adjusting the fog lamps. When the driver's seat is occupied, the upper bright/dark intensity line must be on the marker line, extending horizontally over the entire screen.

The lens of the fog tail lamp must be positioned vertically to the road and at a right angle to the longitudinal vehicle axis.


ADJUSTMENT INSTRUCTIONS

Beginning with February 1972 and the below given chassis serial numbers, all type 911 vehicles are equipped with modified windshield wiper arms:

| Type | VIN |
|-------------|--------------|
| 911 T Coupe | 911 250 1075 |
| 911 T Targa | 911 251 0905 |
| 911 E Coupe | 911 220 0529 |
| 911 E Targa | 911 221 0419 |
| 911 S Coupe | 911 230 0818 |
| 911 S Targa | 911 231 0482 |

When adjusting the new windshield wiper arms make sure that the outer (left) arm does not rest against the decorative strip, and the distance of 20 mm (25/32 in) is maintained between both arms. Check that blades are positioned properly by operating the wipers for a few strokes.

NOTE: When operating the windshield wipers, make sure the windshield is wet.

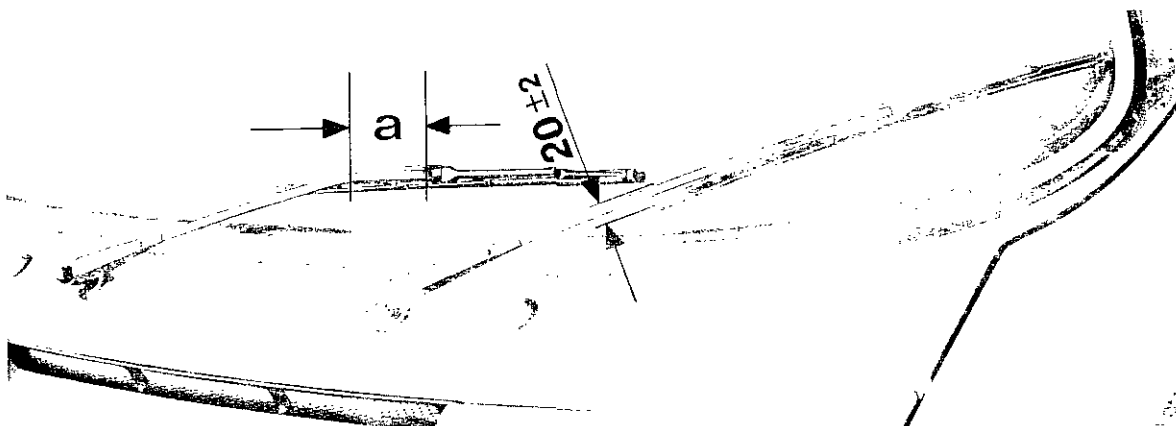

The difference for dimension a between the old and new wiper arms is:


- a - approx. 35 mm (1 3/8 in) (old)
- a - approx. 60 mm (2 3/8 in) (new)

WINDSHIELD WASHER PUMP


Removal and Installation

The windshield washer pump in 1974 model vehicles is located at the lock transverse panel near the battery.

Both electrical wires and water hoses must be detached prior to removal of the pump.

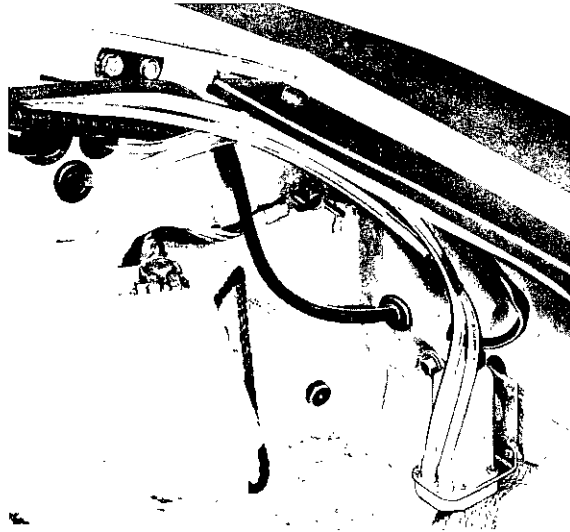

When connecting the wires, it is necessary to note the proper polarity, that is, the brown wire must be connected to the terminal marked (-). The nipple marked D is connected to the hose leading to the spray nozzles through the T-joint. A hose leads from each (the connection B and a connection in the T-joint) to the threaded cap in the windshield washer reservoir which, effective with 1974 models, is located under the left front fender. An additional connection in the reservoir cap is a vent hose which leads to the water filler neck within the tank filler compartment.

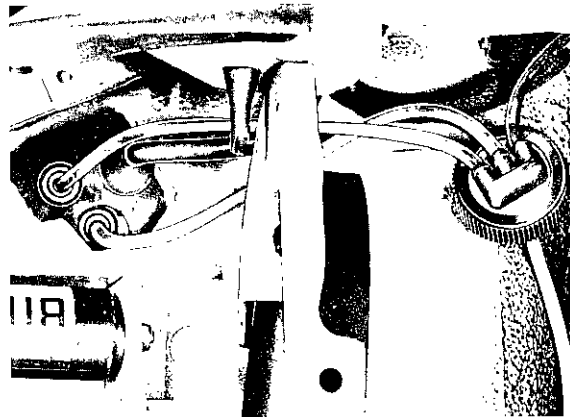


WATER RESERVOIR FOR WINDSHIELD WASHER SYSTEM


Removal and Installation

The left front wheel must be removed when removing the water reservoir. The bumper does not have to be removed.

The reservoir is attached to the vehicle by means of a strap which is bolted to the headlamp compartment. The reservoir can be taken out rearward after the attachments are unfastened, the filler hose detached, and the threaded cap removed.

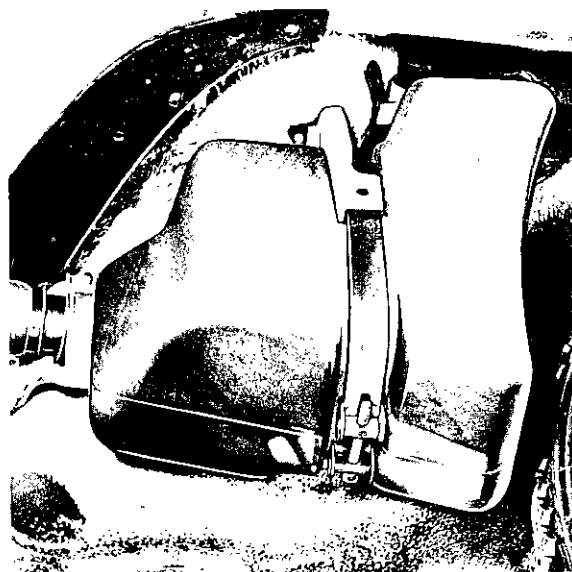


Make sure during installation that the mounting strap is seated properly in the support bracket.

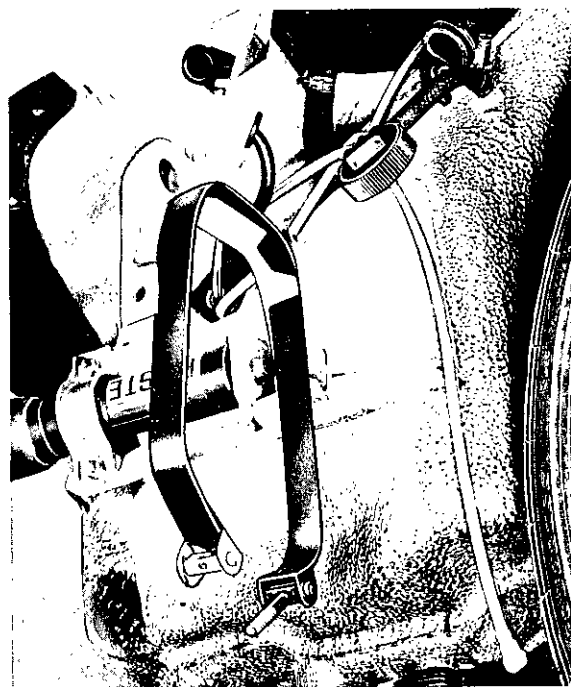

INTERMITTENT WINDSHIELD WIPER SWITCH


Removing and Installing Potentiometer

1. Disconnect battery ground strap.
2. Remove clock.
3. Pull off potentiometer knob, unscrew nut and take out potentiometer to front.

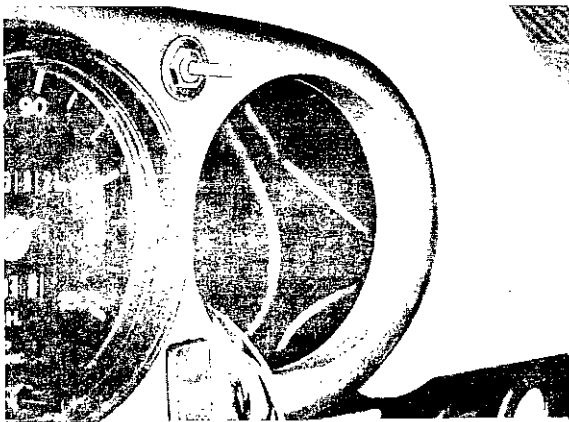

Removing and Installing Intermittent Relay

1. Remove blower housing.
2. Pull plug off of intermittent relay and unscrew mounting screws.

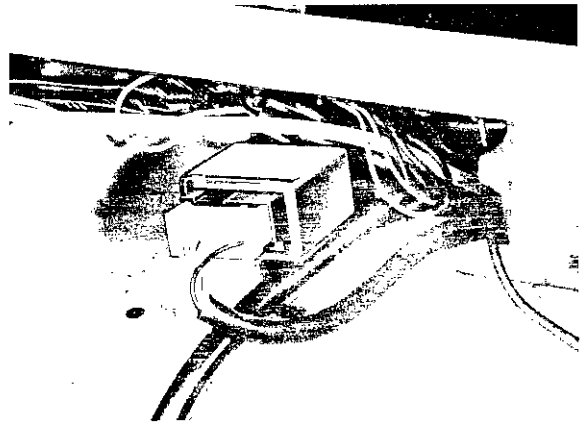

Note

The potentiometer on cars prior to 1976 model is located next to steering column on right side.



Exhaust gas recirculation control


All 1975 models with California equipment have exhaust gas recirculation (EGR) to reduce the pollution from exhaust gases.

Parts of the EGR system are subject to a certain amount of wear and have to be inspected and/or replaced at certain intervals (see Group 1).

An elapsed mileage odometer is installed beneath the blower housing to control the inspection intervals. The EGR indicator lamp will light up after 30,000 miles have been driven. After inspection of the EGR system, the elapsed mileage odometer must be reset to zero as follows:


1. Disconnect battery ground strap.
2. Remove tachometer.
3. Using an appropriate tool (small screwdriver, punch or something similar) press the pin on the elapsed mileage odometer housing in to the stop.

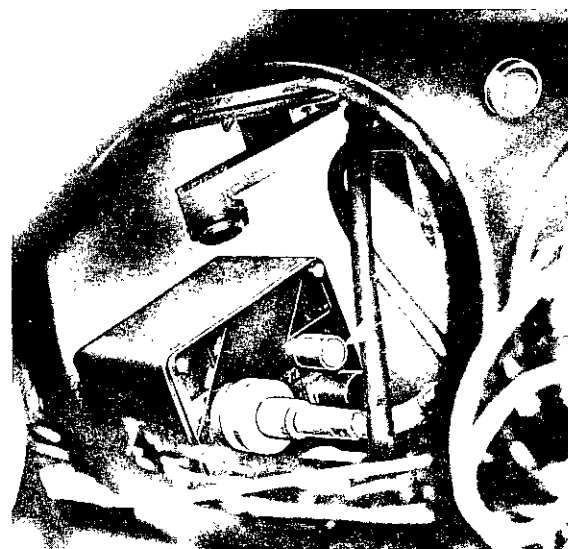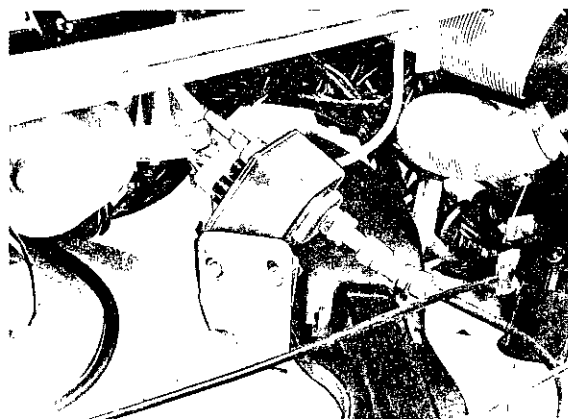

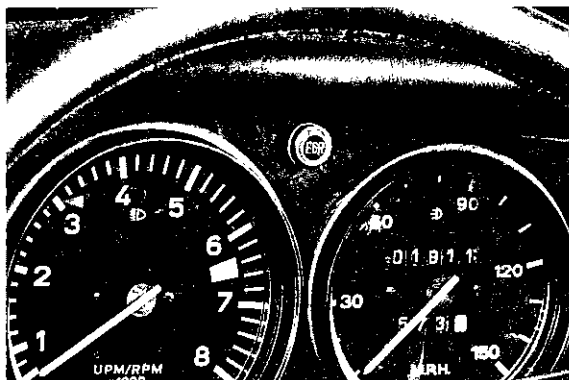

The EGR indicator lamp comes on when the ignition is turned on and goes out when the engine starts. This wiring hookup provides a method of checking the indicator lamp before each start.

An altered elapsed mileage odometer is installed in all models in conjunction with the electronic speedometer, effective with the 1976 model.

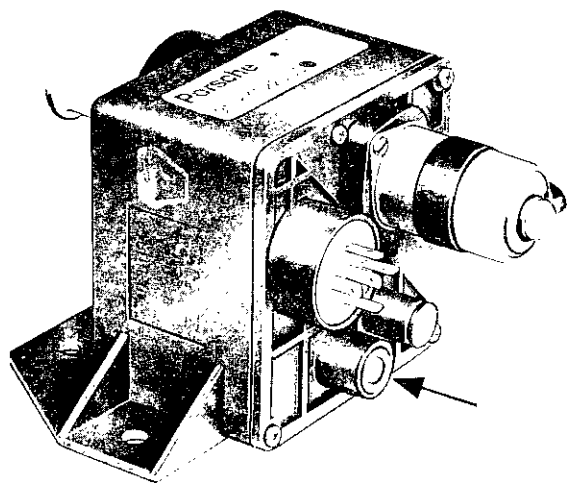

Mounting, removal and installation of this switch is identical to that of the former elapsed mileage odometer. This also applies when resetting to zero.




REMOVING AND INSTALLING SPEEDOMETER CABLE

Note


The blower housing of California equipped cars has to be removed to be able to detach the speedometer cable at the EGR elapsed mileage odometer switch. Pull the speedometer out of the dashboard of all other models to detach the speedometer cable.

Removing


1. Remove blower housing. Do not lock operating cables.

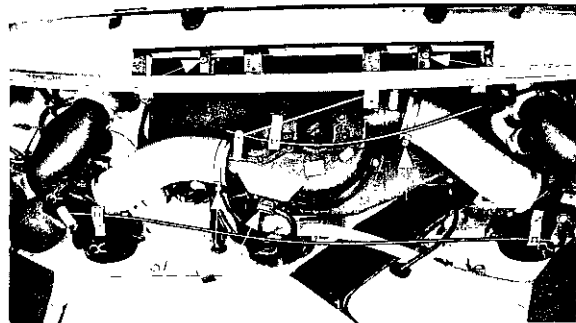


2. Detach speedometer cable at EGR elapsed mileage odometer switch. Tie a string to end of cable.

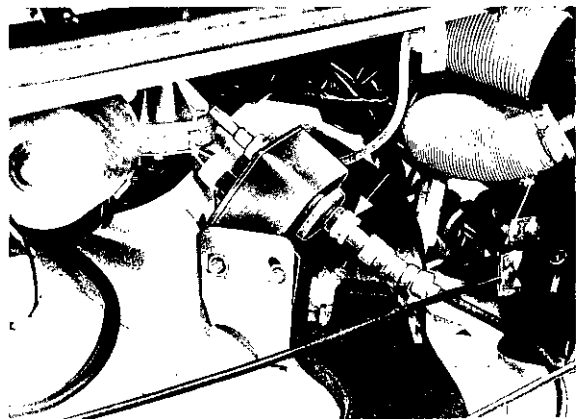

3. Remove tunnel cover in car.
Remove gearshift lever housing.
Take off plastic strap.

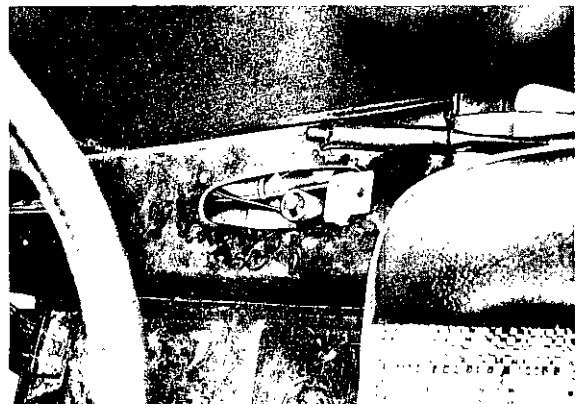

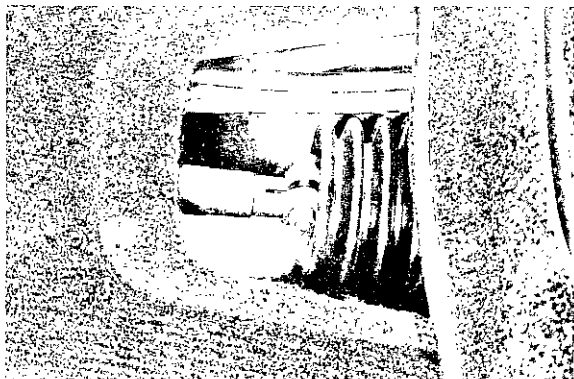

4. Remove cover at back of tunnel.
Take off plastic strap.



5. Disconnect speedometer cable beneath car at transmission.
6. Pull speedometer cable toward rear out of car.

Installing

1. Tie string to speedometer cable and pull in cable toward front.
2. Secure speedometer cable to car tunnel with 2 plastic straps.

Caution

Make sure that cable is installed without kinks or bends.
Install seal at transmission.

ELECTRONIC SPEEDOMETER

Checking Electronic Speedometer Sensor

Remove tunnel cover in front of emergency seats. Disconnect the flat male plugs at the connector in the tunnel and connect a test buzzer to the wires leading back. Lift car at rear axle and turn right rear wheel by hand. Lock left rear wheel. The buzzer must sound off 8 times for each two revolutions of the wheel. If not, replace the sensor.

The left rear wheel need not be locked, if a car is equipped with a limited slip differential. In this case the buzzer sounds off 8 times for each one revolution.

Checking Electronic Speedometer

1. Connect and disconnect very quickly the two wires in the tunnel that lead forward. A distributor can be applied to help, if both wires are connected to terminal 1 and the distributor housing, and the distributor shaft is turned by hand as quickly as possible. Remove the speedometer if there is no deflection of the needle. Check all wire connections to the speedometer and replace the speedometer if necessary.

Turn on the ignition for this test.

2. The operation of the electronic speedometer of Type 911 and Turbo Carrera Models can also be checked as follows:

Disconnect wire from terminal TD of tachometer and instead connect the wire from terminal 31 b on the speedometer.

The speedometer must now show a reading according to the engine speed. If there is no needle deflection, the speedometer must be replaced.

Relation between engine speed and speedometer reading:

$$\text{Speedometer reading (MPH)} = \frac{\text{engine speed (rpm)} \times 180}{\text{calibration number}}$$

Example:

$$55 \text{ MPH} = \frac{2000 \text{ rpm} \times 180}{6524 \text{ pulses/mile}}$$

The calibration number is embossed on speedometer housing.


CAUTION

The testing method at point 2 can no longer be used on speedometers after manufacturing date 1/77.

There is danger of damaging an electronic component in the speedometer.

Removing and Installing Electronic Speedometer Sensor

1. Remove right rear wheel.

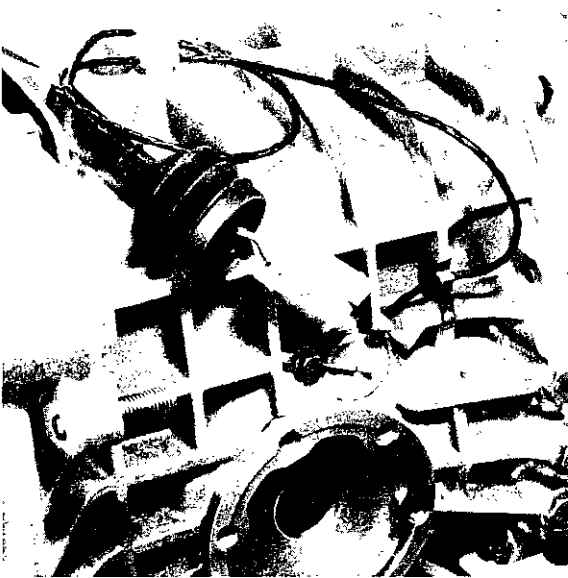

2. Remove hex head screw and take holder off of sensor.
3. Take sensor wires out of holders and pull sensor out of transmission case.
4. Separate connector in tunnel and pull out sensor wire toward rear.

Note

The polarity need not be observed when connecting the sensor wire.

SAFETY BELT WARNING SYSTEM

Beginning with January 1972, all USA export vehicles are equipped with the safety belt warning system required by law. This system consists of 2 inertia reel safety belts with automatic locking retractors, a control lamp with the inscription "Fasten Seat Belt", a seat contact switch built into the passenger seat, a new parking brake switch, and a modified buzzer.

The three-pole buzzer can still be used as replacement for the formerly used two-pole buzzer in vehicles not equipped with the safety belt warning system.

An electric switch is built into each safety belt buckle. The switch is closed when the belts are not worn, providing ground for Terminal G of the control lamp. If Terminal 50a does not have a ground connection through the handbrake switch at the same time, a transistor incorporated in the control lamp becomes conductive. Since the buzzer Terminal 86 is energized at all times, and Terminal 15 of the control lamp is energized when the ignition is on, the control lamp will light up and the buzzer sound off.

When the belt is put on, the contact in the belt buckle opens and Terminal G ceases to have a ground connection.

The passenger seat is equipped with a seat contact which breaks the ground connection from the belt buckle on passenger side to Terminal G in the control lamp when the seat is unoccupied.

The reminder to wear seat belts is given by the control lamp with the inscription "Fasten Seat Belt" and the simultaneously audible sound of the buzzer whenever

the ignition is switched on,
the driver (and passenger) have not put the seat belts on,
the parking brake is fully released.

The former function of the buzzer remains unchanged.

SEAT BELT WARNING SYSTEM 1974 MODELS

The seat belt warning system has been changed effective with the 1974 models.

The new system consists of 2 three-point seat belt assemblies with automatic locking retractors, a control lamp with the inscription FASTEN SEAT BELTS, a seat contact in each seat, and the so-called logic relay switch with an integrated buzzer. The formerly used separate buzzer is discontinued. Also, the control lamp circuit has been changed so that it cannot be used in cars of pre-1974 vintage.

The following steps must be performed to start the engine:

1. The engine can be started at any time when no load is placed on the seats (for instance, starting from the outside).
2. Whenever a load is placed on a seat, the seat belt must be buckled. This applies to both driver's and passenger's seats. It may become necessary to buckle the seat belt when a heavier piece of luggage is placed upon it. Since the action sequence of "Occupy Seat - Fasten Seat Belt" is monitored by the logic relay switch, the engine will not start if either the driver or passenger should fasten the seat belt prior to occupying the seat.
When the proper action sequence is not followed, the buzzer and the control lamp with the inscription FASTEN SEAT BELT are activated as soon as the ignition switch is turned on.
3. It is possible to restart the engine without fastening the seat belt if the restarting occurs within 2 ± 1 minutes of shutdown.

The acoustic and optical warning system will be activated whenever any of the following conditions occur when the engine is running:

1. When a load is placed on a seat without buckling the seat belt.
2. If the action sequence of "Occupy Seat - Fasten Seat Belt" was not followed in that order.
3. When the load is removed from a seat in which the belt is buckled for more than 10 seconds and is then placed back on it.

In all of the above cases the warning system can be activated only when the parking brake is in the off position. The warning condition can be cancelled by refastening the seat belts in proper sequence.

The buzzer integrated in the logic relay switch also is part of the ignition key warning system.

An improved interlock relay for the seat belt warning system was introduced around the middle of December 1973.

With the introduction of this relay, the warning system is only activated (engine running) if the seat belts are unfastened while the seats are occupied.

SEAT BELT WARNING SYSTEM FROM FEBRUARY 14, 1975

All models have a modified seat belt warning system as of February 24, 1975.

The belt contact switch on the passenger's side and both seat contact switches are omitted. A timer relay with a built-in buzzer replaces the interlock relay. The connection between the seat belt warning system and starter is omitted, i.e. the starter can be used any time.

"Fasten Seat Belt" warning light always lights up when the ignition is switched on and goes off in 4 to 8 seconds regardless if belts are worn or not. If the driver's belt is not worn a buzzer will also come on with the warning light. The passenger's belt has nothing to do with the warning system.

CONTROL ILLUMINATION

Beginning with the 1973 models the following controls are illuminated:


1. Heater control lever on the center tunnel.
2. Fan control switch on the instrument panel.
3. Hazard warning flasher control switch.

All lamps are connected to the instrument illumination circuit permitting dimming.

HEADLIGHT WASHERS

Depressing the switch in the instrument panel operates the water pump, which is bolted to the front hood lock panel. It is controlled by a relay located next to it. At a pressure of about 2.8 bar, a valve opens and a stream of high pressure water goes to the spray jets. The relay limits the washing phase to about 0.3 seconds. If this time is not sufficient to clean headlights, depress switch again.

The container (in front of the left front wheel) holds about 9 liters (2.2 US gal.) of fluid. It is also used to provide fluid for the windshield washer.

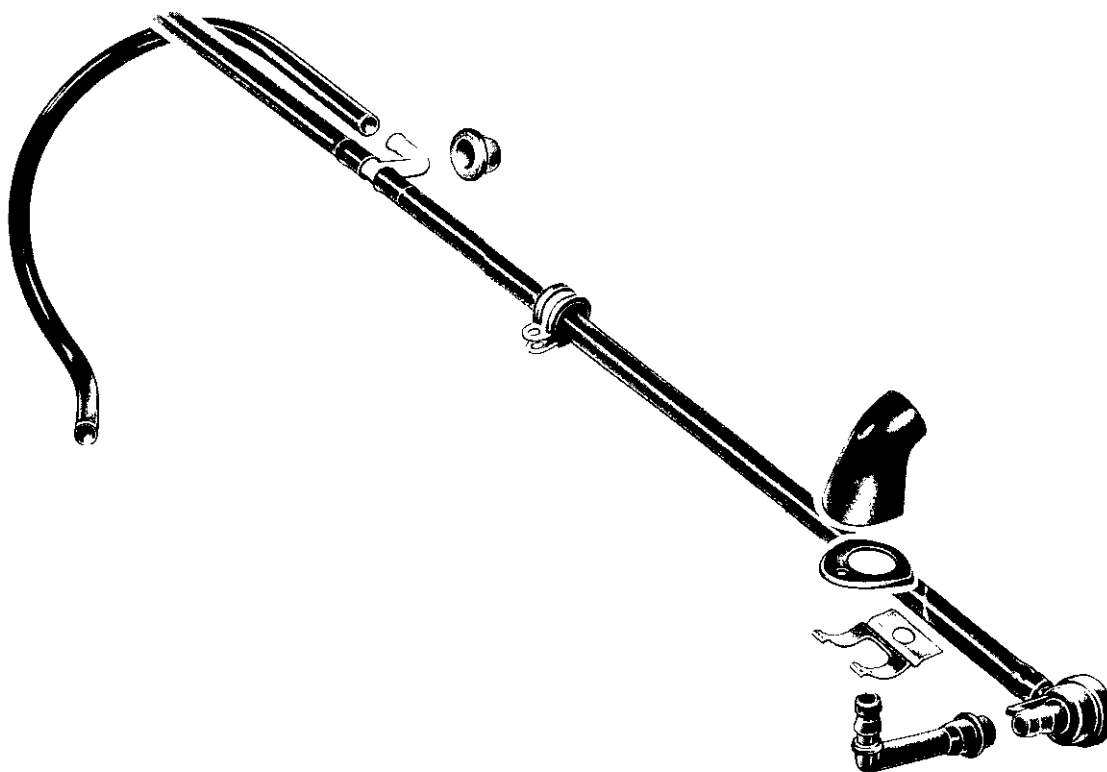


SAFETY BELT WARNING SYSTEM


Removing and Installing Seat


(Also see Group 8)

A two-pole connector is located under the seat. In the driver's seat the connector wire leads into the seat interior and is connected directly to the safety belt buckle. In the passenger's seat an additional seat contact is wired inbetween.

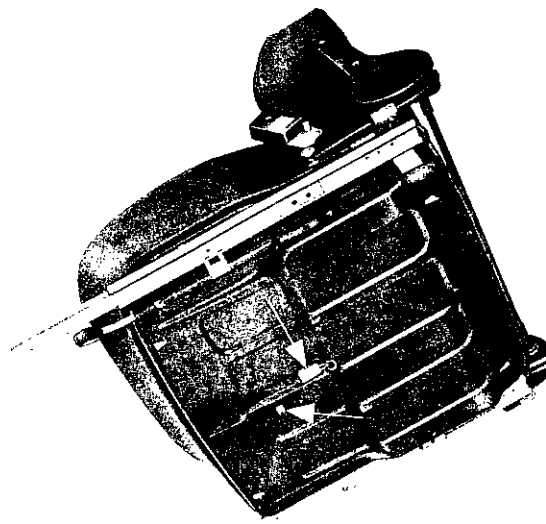

Prior to seat removal, the wire must be disconnected at the connector and also detached from its retainer on seat underside. The wire must be reconnected upon installation of the seat; the polarity makes no difference.

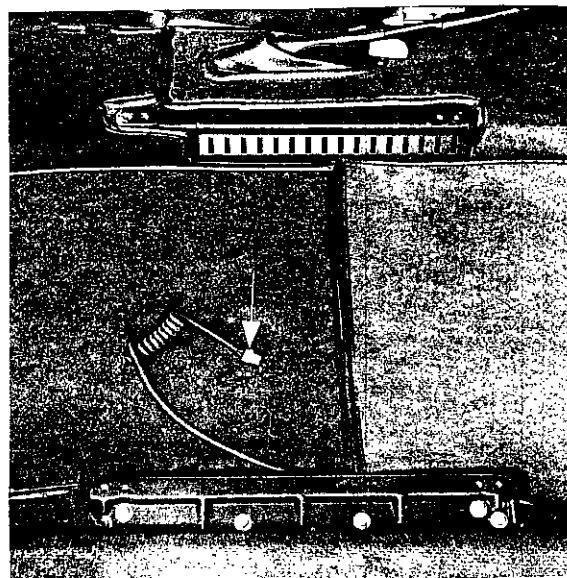

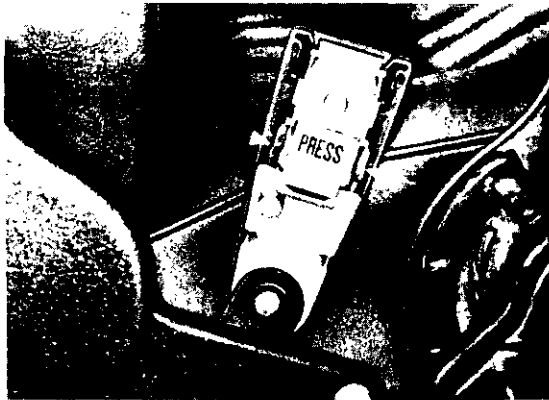


Removing and Installing Safety Belt Buckle

(Also see Group 8)

The front plastic cover of the buckle can be removed upon removal of both countersunk screws. Push rear cover to the side and remove buckle retaining screws.


When detaching both wires, hold terminal tabs with needle pliers since otherwise the tabs can break off when the wires are being pulled off.

The belt buckle should not be disassembled unless it does not function properly.

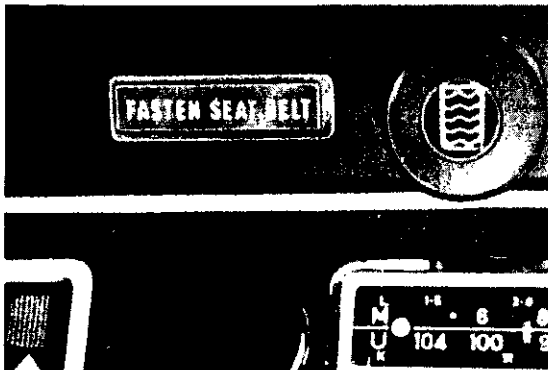


Removing and Installing "Fasten Seat Belt" Control Lamp


Pry loudspeaker cover off and pull off glued in plastic foil or remove loudspeaker, respectively. Detach connector from the back side of the control lamp and press the lamp forward out of the instrument panel.

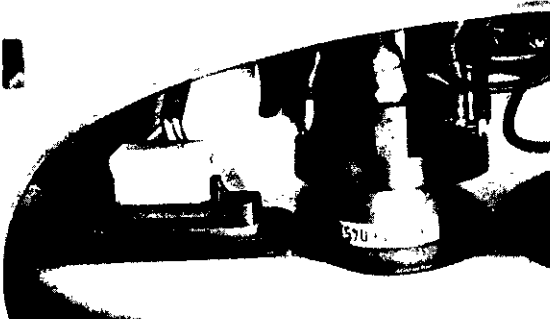

When replacing the wedge-base bulb (12V, 1.2W), it is necessary to open the control lamp for access.

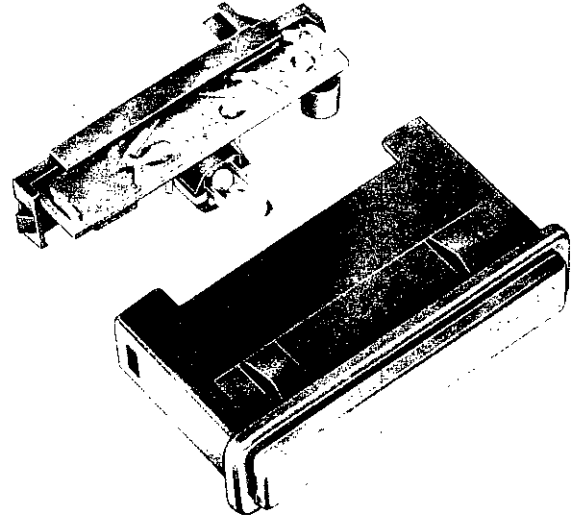

When installing the lamp, make sure that the rubber gasket is properly seated.

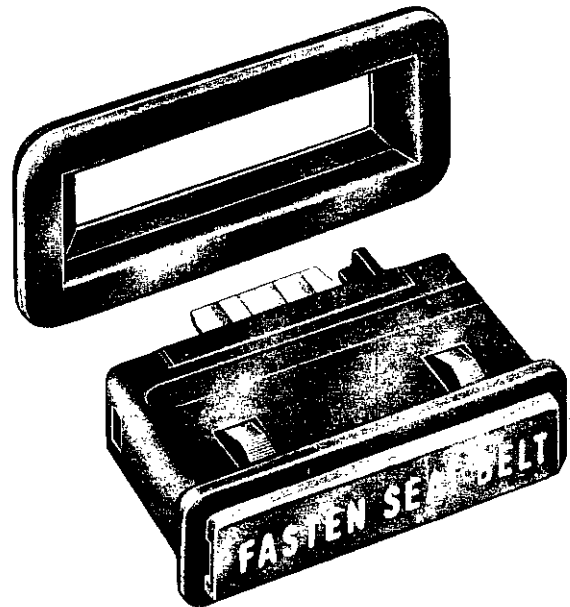




Removing and Installing Seat Contact in Passenger Seat

Remove seat (see Group 8, page SB 21 and 22).

Remove seat recliner retaining screws and remove back rest. Remove seat cover to gain access to the seat contact.


Make sure during installation that the seat contact is located in its original position in the seat. Reconnect both wires; polarity makes no difference.

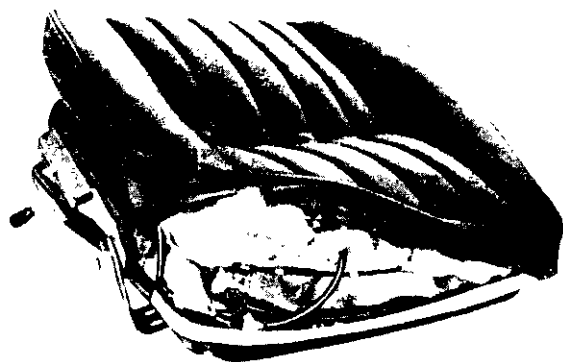

Removing and Installing Safety Belt Lock in the Sport Seat

Remove both countersunk screws and take the plastic cover off. The rear cover should be pushed to the side to clear the lock assembly retaining bolt and permit its removal.

Pry both wire retaining clips open to free the wire and detach it at the plug connector.

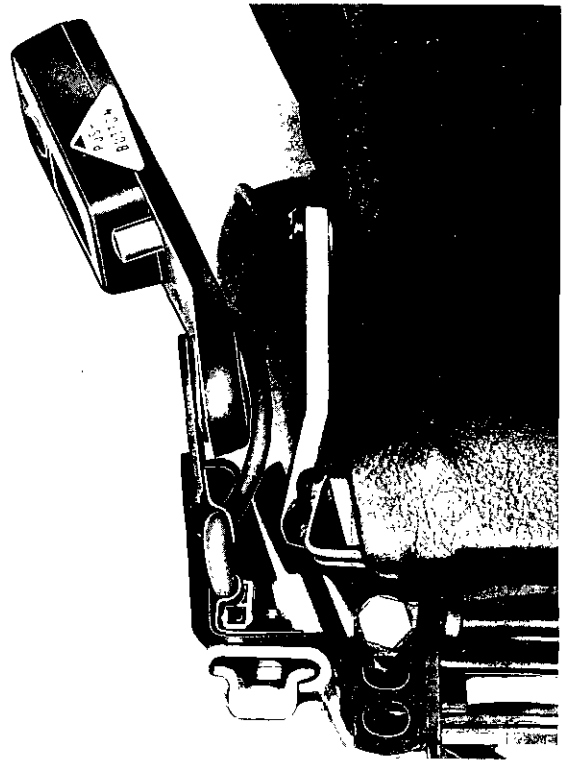

Removing and Installing Seat Contact Switch in Passenger's Seat (Sport Seat)


Remove seat (see Group 8, page SB 21 and 22).

The seat contact switch is freely accessible on the seat underside and can be removed once the wires are disconnected.


Make sure during installation that the seat contact switch is reinstalled in its original position (note dimensions). To prevent the seat contact switch from relocating itself sideways, it should be glued to the seat underside with a commercial adhesive.

Polarity is of no consequence when the electrical connections are made.

(Dimensions shown are in mm)

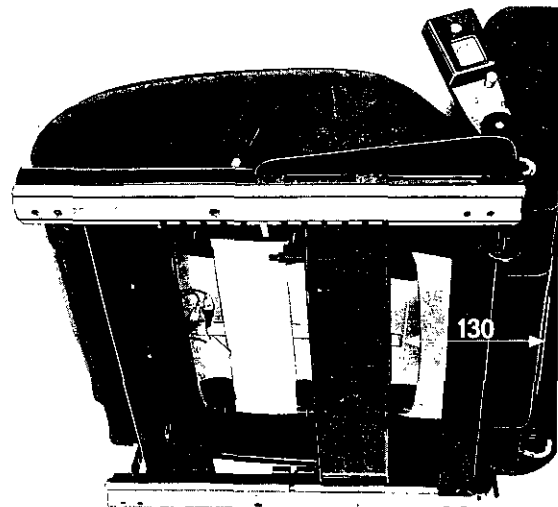


SAFETY BELT WARNING SYSTEM 1974 MODELS

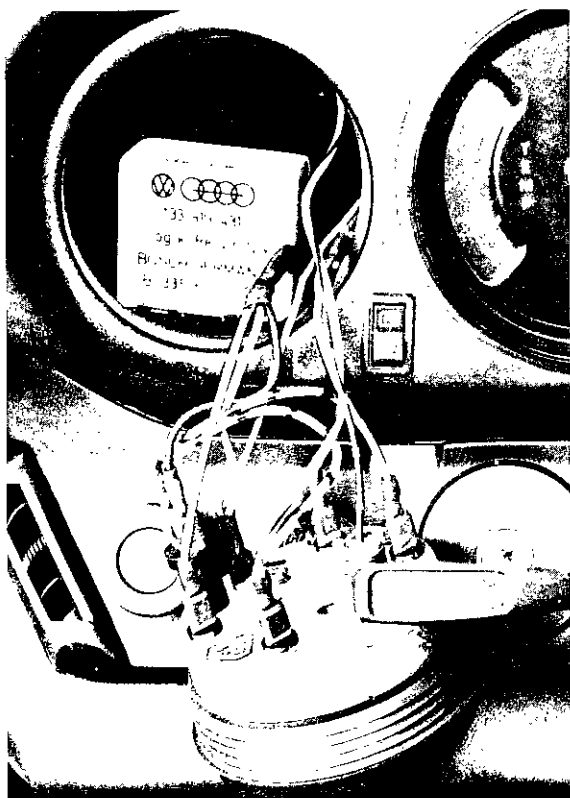

Removing and Installing Logic Relay Switch


The logic relay switch rests in a socket which is attached to the luggage compartment floor and is accessible upon removal of the small combination instrument. The asymmetrically arranged contact prongs ensure proper installation of the relay, which is with the inscription facing rearward in relation to the direction of travel.

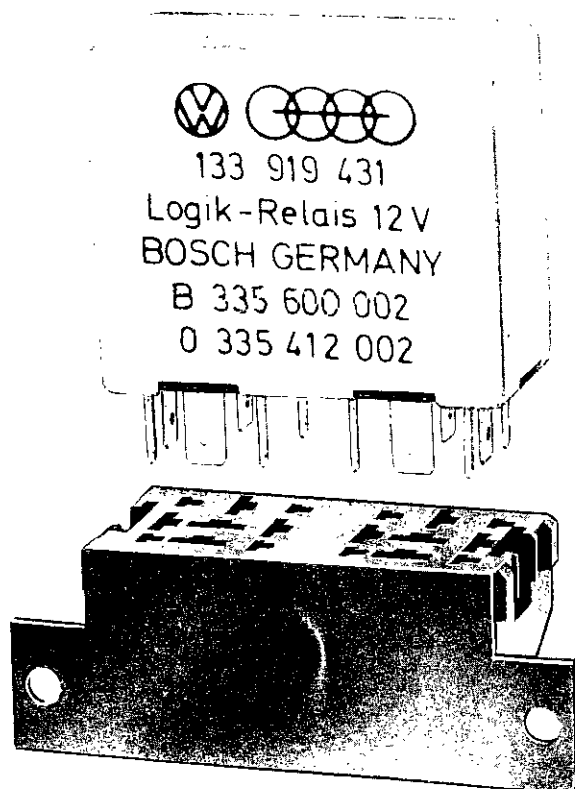

SEAT BELT INTERLOCK SYSTEM - 1976 MODEL


Removing and Installing Time Relay

The time relay, installed since February 1975 is just as accessible as the logic relay after removal of the small combination instrument.

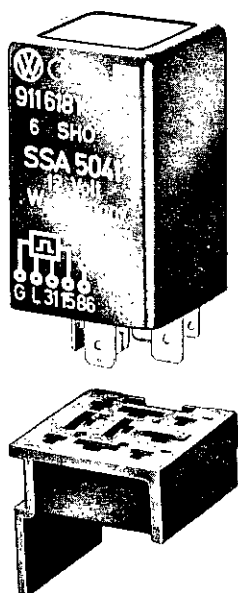

Removing and Installing Seat Belt/Brake Warning System Indicator Housing

A housing containing the indicator lights for both warning systems (seat belts and brakes including parking brakes) is installed in the 1976 model. It replaces the previous FASTEN SEAT BELT indicator light. Consequently, the brake warning light in the combination instrument is no longer installed.

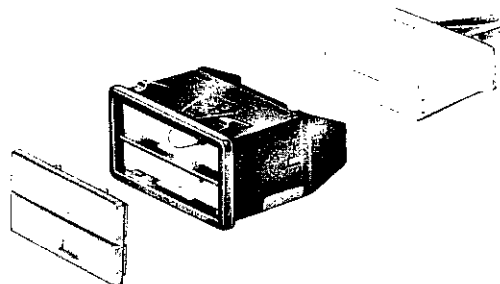

Removal and installation is the same as previously for the single indicator housing.

SAFETY BELT WARNING SYSTEM 1974 MODELS

Troubleshooting Safety Belt
Warning System

If the starter does not work despite properly attached safety belts, proceed as follows to eliminate the problem:

1 - Replace logic relay switch.

If this does not correct the problem the malfunction may be in the following component areas:

- a - in the starter itself
- b - in the ignition/starter switch
- c - in the connecting wire between the two
- d - in the wires between belt and seat contacts, and logic relay switch.

2 - Remove logic relay and connect jumper wire between terminal C and 50 in the logic relay socket. The jumper wire must be provided with flat contact tabs to ensure good connection.

If starting is now possible, the defect will be found in the wires which connect the belt or seat contacts with the logic relay switch.


3 - Remove seats and check electrical connections according to the wiring diagram.

If the starter fails to work despite the jumper wire connection, check starter, starter/ignition switch, or wires connecting the two.

Other possible malfunction areas are:

- a - Malfunction in the optical and acoustic warning devices when belts are not buckled.
- b - Activation of the warning devices despite proper handling of the safety belts.

In either case, first replace the logic relay switch and then, if necessary, check the electrical connections and wires in the safety belt warning system by following the wiring diagram.

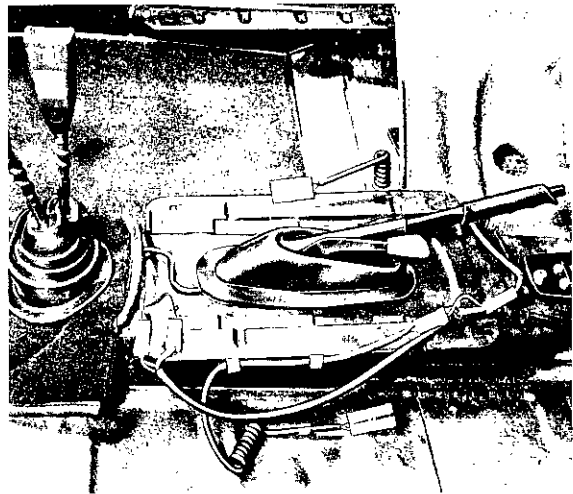

NOTE


Upon rectification of the problem be sure to remove the jumper wire and replace the logic relay switch, otherwise the entire safety belt warning system will remain inoperative.

CONTROL ILLUMINATION

Illumination of the Heater Control Lever


A square, illuminated plaque showing the function of the heater control lever is located on the center tunnel adjacent to the lever.

The plaque can be lifted off to gain access to the wedge-base bulb (12V, 1.2 W).

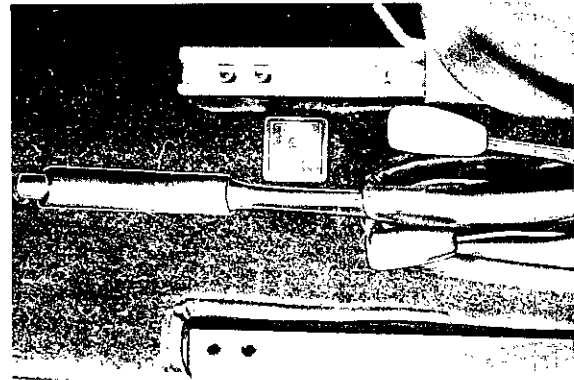


Illumination of the Fan Control Switch

Located behind the inscriptions "DEF. OFF" and "DEF. MAX." in the lower part of the fan control switch are wedge-base bulbs (12V, 1.2 W), one on each side.

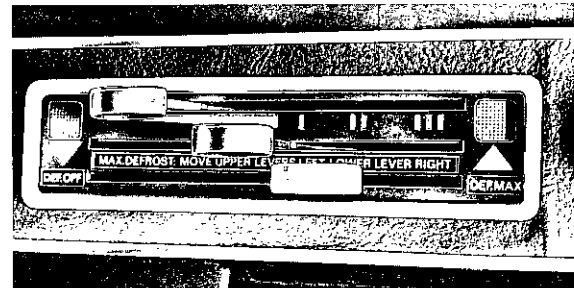

The socket-mounted lamps are seated in their receptacles on the rear side of the switch. The bulbs are easily accessible from beneath the instrument panel without removing the knee guard.

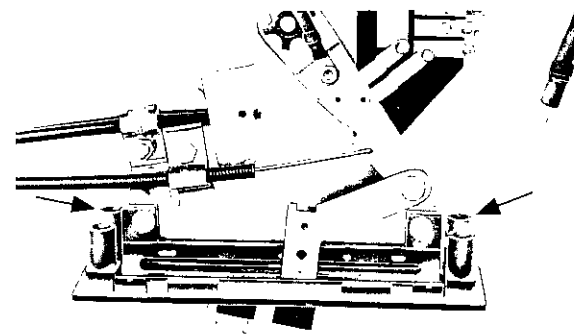

Beginning with 1974 models, a third bulb is installed. It is located above the DEF. OFF field.




The control lamp located in the hazard warning switch is connected to the light switch through a 150 Ohm resistor. Thus the lamp fulfills the requirement of illuminating the hazard warning switch, although it burns with less intensity.

HEADLIGHT WASHERS


Removing and Installing Spray Jets


- 1 - Remove turn signal housing from bumper. Remove water container on left side of car (refer to page 4.4 - 1/1).
- 2 - Push spring out toward rear and lift out spray jet. When installing note that both jets are different for the left and right sides.

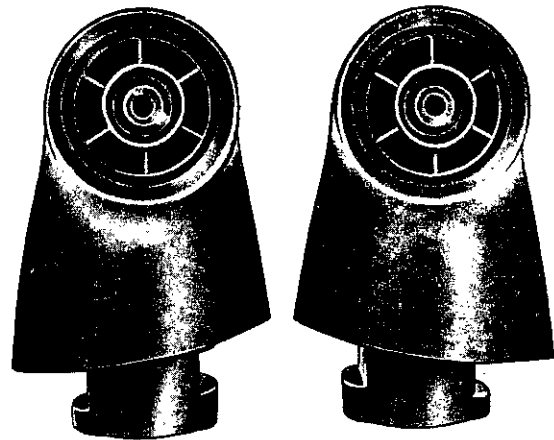

Removing and Installing Water Pump


- 1 - Disconnect hoses and electric wiring at pump.
- 2 - Loosen strap and remove pump. When installing make sure that hoses and wiring are connected correctly.

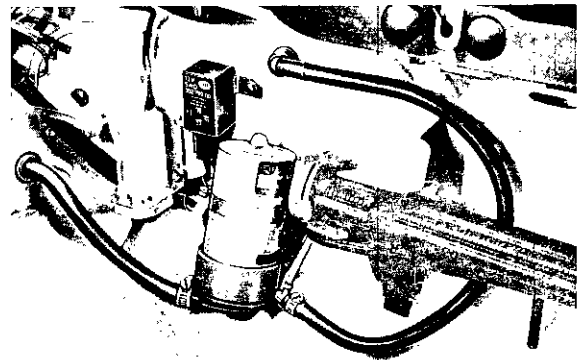

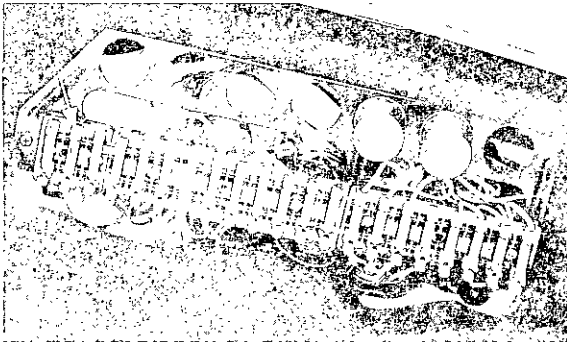

Note

A 25 ampere fuse is used for the water pump.

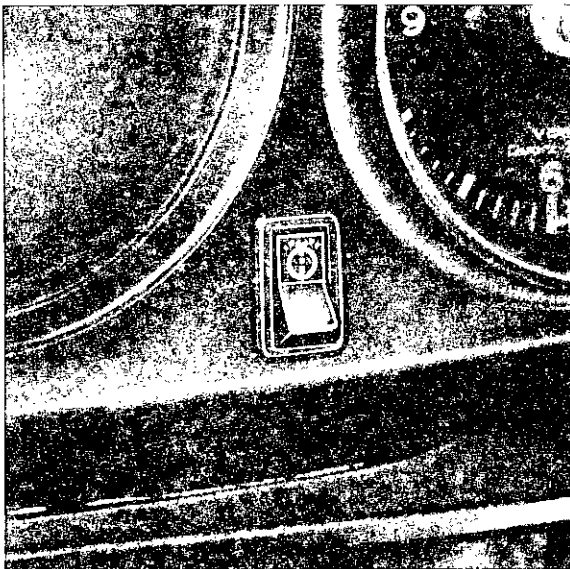

Removing and Installing Switch

- 1 - Disconnect battery.
- 2 - Pull out switch and disconnect wires.

Adjusting specifications

Use a locally manufactured tool to aim spray jets. This tool is inserted over the jet and extended by pulling out the mandrel. The jets are aimed correctly when the mandrel touches the center of the lens.

CAUTION

When adjusting the jet insert, hold the spray jet tightly to prevent damage to the jet.




Tool dimensions

| | |
|-----|--------------|
| a = | 100 mm |
| b = | 10 mm |
| c = | 12,5 mm |
| d = | 5 mm |
| e = | 1 + 0,2 mm |
| f = | 10,5 mm dia. |
| g = | 115 mm |
| h = | 3 mm dia. |
| i = | 30° |

A = M 4 nut, soldered

B = M 4 knurled head screw


Tube 14 x 1.5 mm

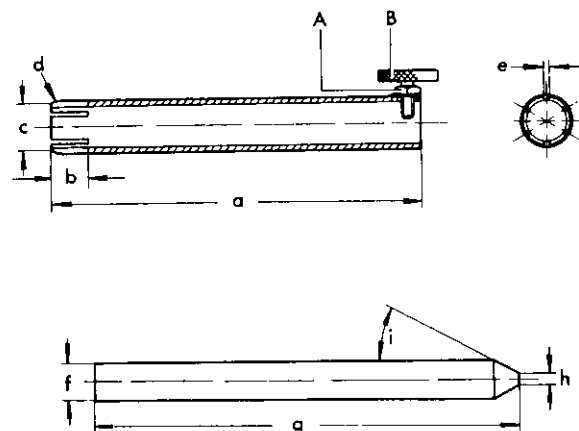

Service Installation of Headlight Washers


beginning with 1974 Models


1. Mark and drill nozzle mounting holes in bumper. To locate hole centers place the rubber grommet on the bumper. Note that the nozzles and rubber grommets are different for left and right sides.

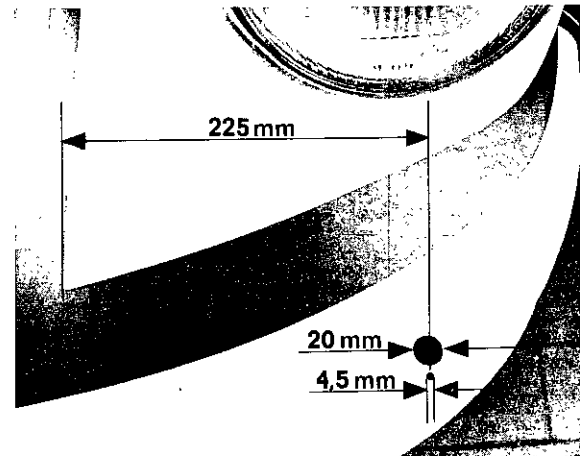

The spray jets are positioned slightly off center (of headlight) the distance between jets is 1250 mm (49 1/4 in.)


2. Remove bumper. If an angle drill motor is not available, the front apron will also have to be removed.
3. Drill 25 mm (1 in.) hole for water feed hose and insert grommet. (Be careful not to damage hoses in this area of cars equipped with an air conditioner.)

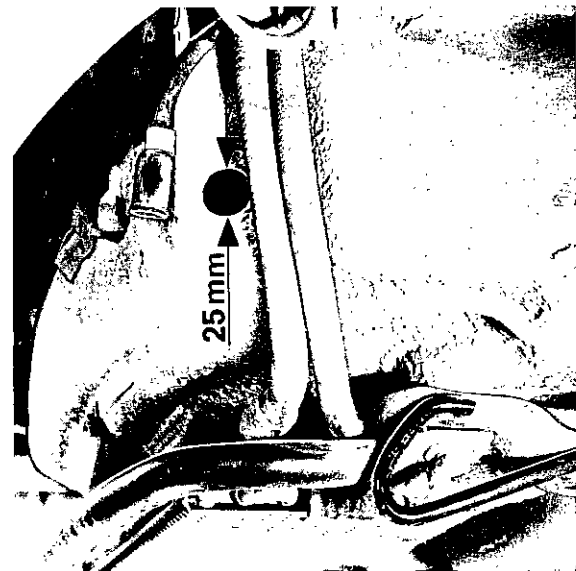

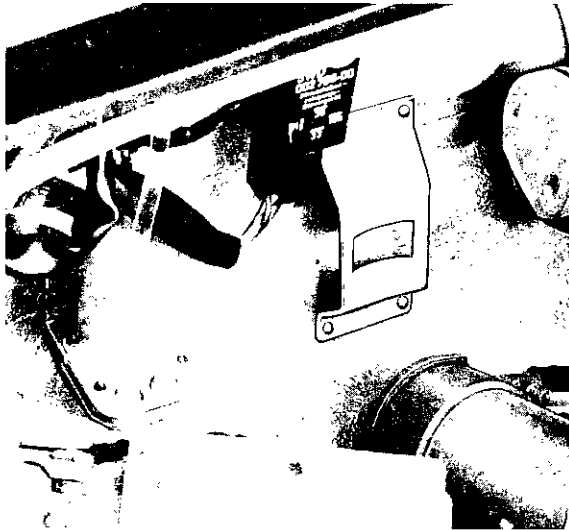


4. Remove present fluid container and install new container.

5. Drill two holes on each side of water pump bracket and bolt or rivet holder to lock panel. Location of bracket itself is different for cars with or without an air conditioner. Locate bracket in cars with an air conditioner so that the inlet adaptor of the pump has its opening at the same height as the water feed hose.

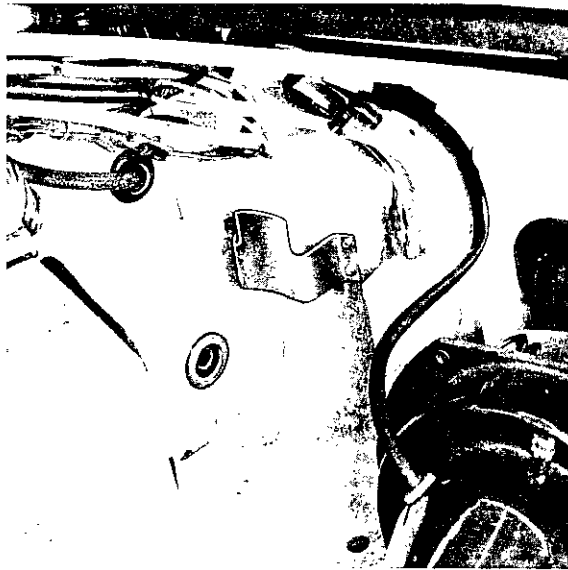


6. Install front apron.


7. Install water feed hose on intake neck and molded hose on pressure adaptor of pump with hose clamps. Use longer molded hose on models with air conditioners and shorten water feed hose to a length of about 100 mm/4in.

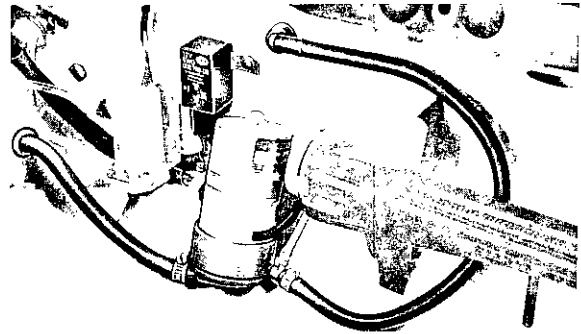


Insert molded hose (detach condenser blower of cars with an air conditioner), slide feed hose through grommet toward outside, clamp hose to water container adaptor with clamp and secure pump to bracket with clamp.

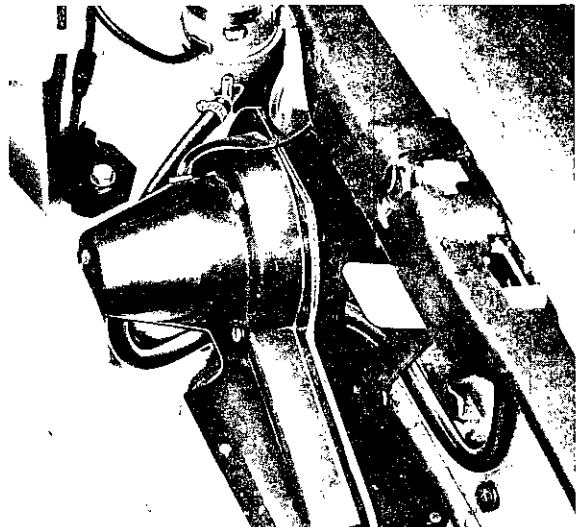


8. Connect both outlet hoses to adaptor (short hose left), locate hole for adaptor by placing in front of lock panel and drill 18 mm (3/4in.) dia. hole. Place adaptor and rubber grommet through hole and connect molded hose. Secure both hoses leading to nozzles with clamps. Insert pressure control valves on ends of hoses.

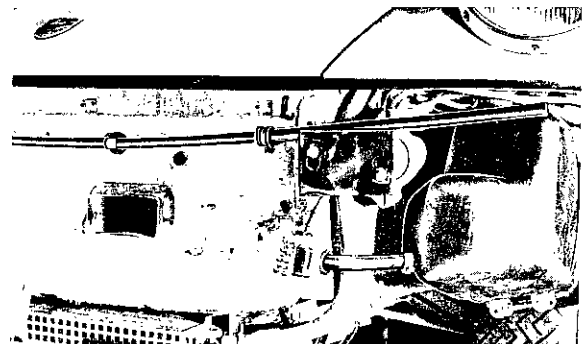

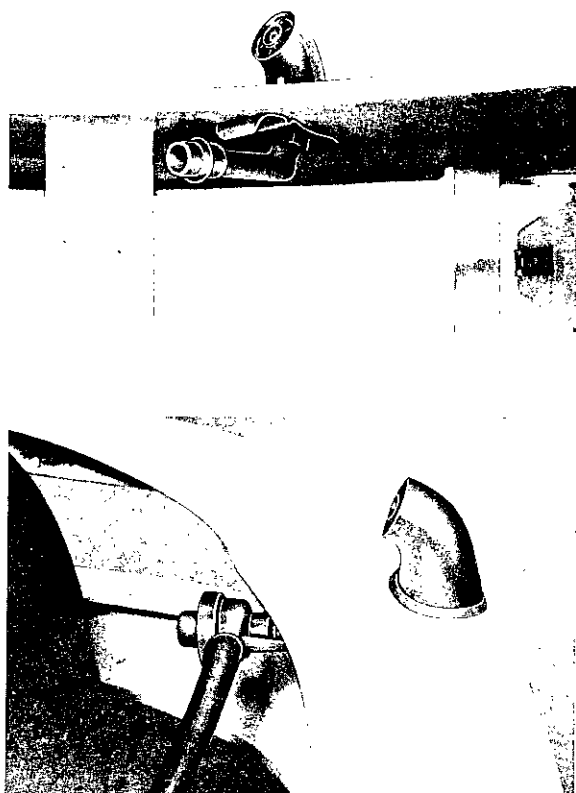

9. Secure nozzles and rubber grommets to bumper with spring locks, connect them to pressure control valves and install bumper.

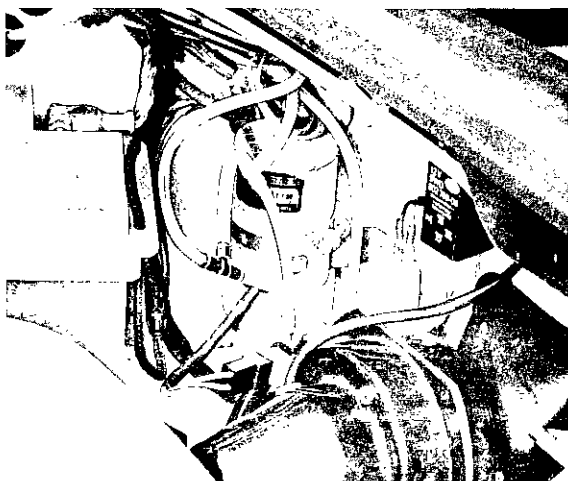


10. Disconnect hose at center connection of adaptor and connect it to center connection of valve adaptor.

Note

Use a longer hose for cars without an air conditioner.

Connect the open center connection of adaptor with S and the outlet adaptor of the water pump with P on valve adaptor.


11. Secure relay to lock panel with sheet metal screw. Disconnect battery ground cable. Connect wires to relay and water pump. Connect brown wire to body ground. Place wires behind fusebox and secure with clamps. Install an extra 3-position fusebox so that the brass rails on the back face upward. Bridge adjacent fuse with a shunt. Connect gray wire to fuse 2 (second fuse from front) at top, red/white wire to fuse 20 (center fuse of 3-position fusebox) at bottom. Use 25 ampere fuses.

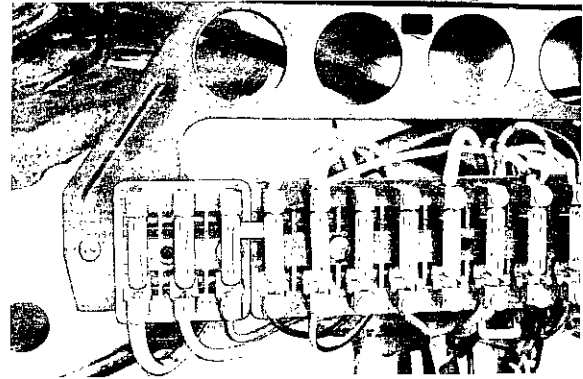

Note

Use open fuse connection of the 3-position fusebox already installed in cars with special equipment (e.g. air conditioner). Install 25 ampere fuse!

12. Locate wires toward instrument panel, remove instrument and clock, take off square cover between tachometer and clock and place wires through opening. Connect switch and press into opening.


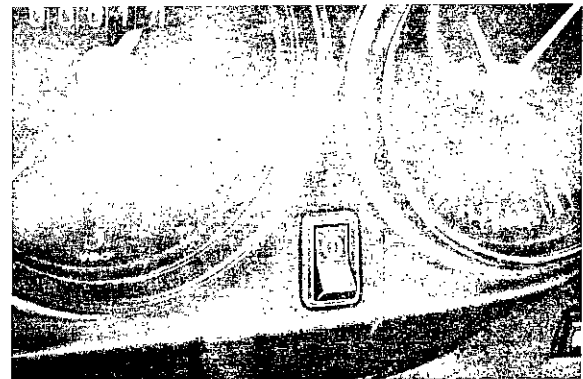


13. Connect battery. Fill fluid container and check operation. Aim spray jets.

AUTOMATIC HEATING CONTROL


Removing and Installing Control Unit

1. Pry both side covers off of control unit.
2. Detach connecting rod between servo-motor and heater lever.

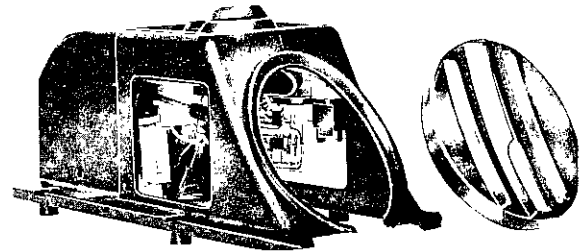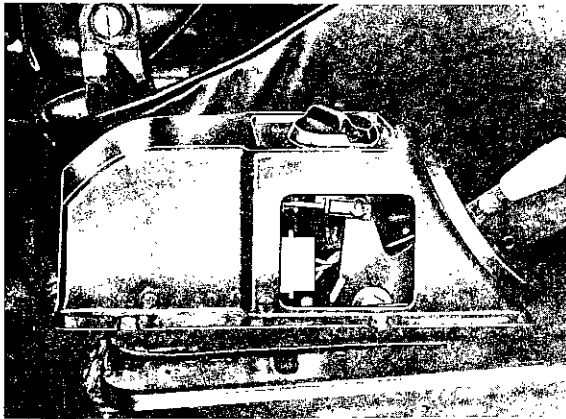

Removing and Installing Interior Sensor

1. Remove both Phillips screws and pull down sensor carefully.

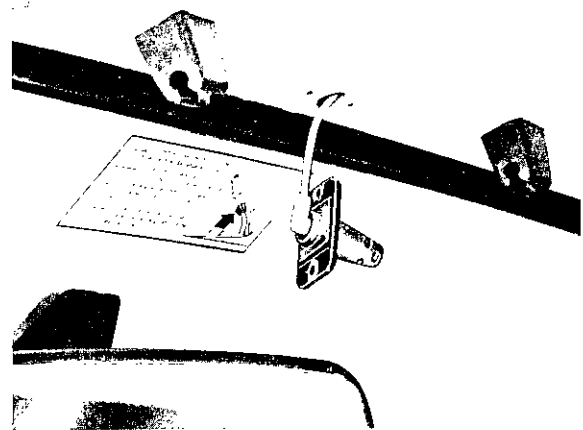


3. Remove the four bolts, lift control unit carefully and disconnect the three plugs at the control unit.
4. Remove rubber seal and slide control unit forward past heater and parking brake levers to remove.
5. After installation of the control unit turn off the heater with the ignition on and let the heater lever move all the way down. Check, whether both heater flaps are closed. If not, adjust the heater cables to remove any play.


2. Pull angled plug off of sensor.

Removing and Installing Heat Sensor in Heater Flap Housing


1. Loosen control unit and pull off the front 2-pole male plug.
2. Loosen carpet along center tunnel and clear cable up to grommet in kick plate.
3. Pull both wires out of male plug housing (be sure to depress terminal retainer) and push out grommet.
4. Remove adaptor on left heater flap housing.

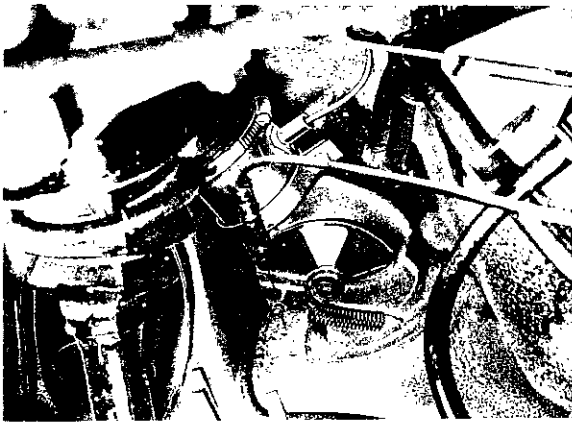

5. Pull out cable and remove rivets on the adaptor.

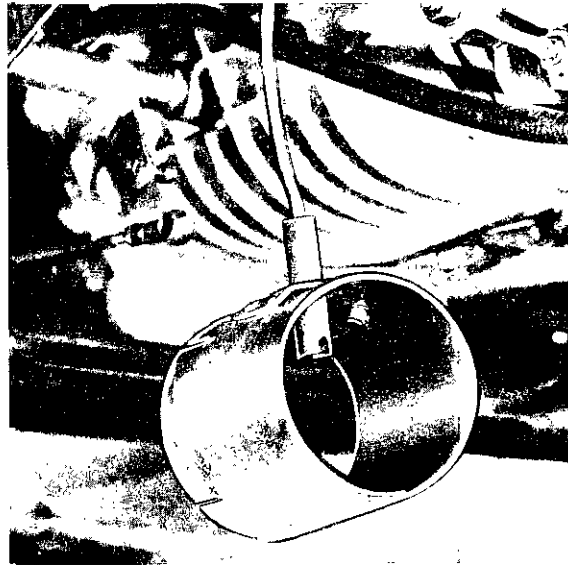


6. Rivet new heat sensor to adaptor rout cable and press in grommet.

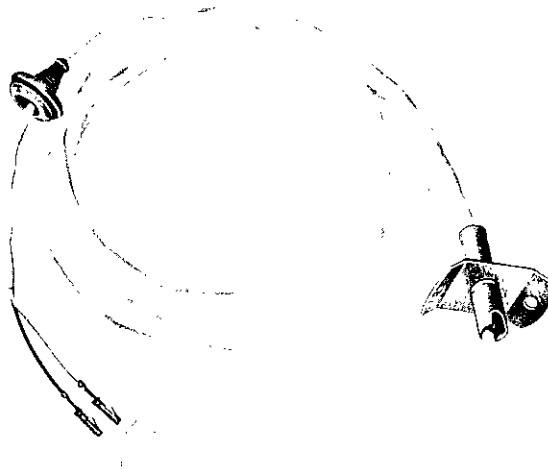

7. Install adapter. Make sure that the heater flaps are adjusted evenly on both sides.
 8. Secure plug housing to cable. The black wire must be located on the side of the housing with a tab.
 9. Place cable inside of car, glue carpets, connect plug to control unit and secure control unit again.
-


Disassembling and Assembling Control Unit

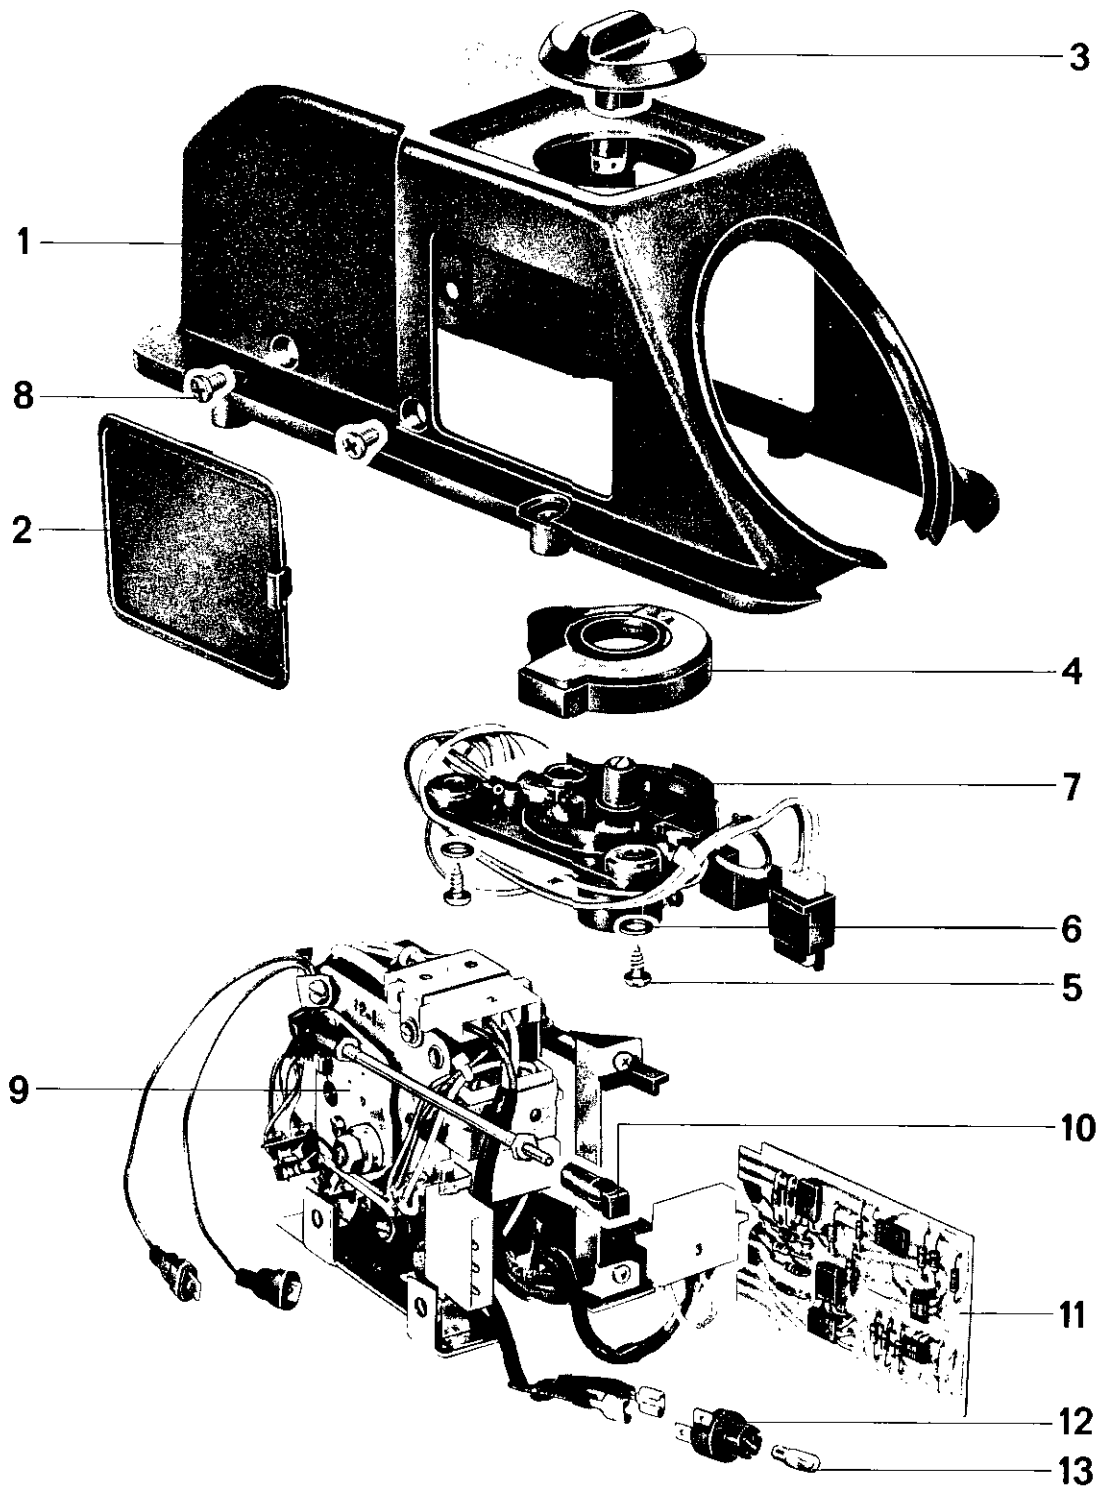


| No. | Description | Qty. | Note When | | Special Instructions |
|-----|----------------|------|--------------------|------------|----------------------|
| | | | Removing | Installing | |
| 1 | Housing | 1 | Pull off | | see page 6.5 - 1/6 |
| 2 | Cover | 2 | | | |
| 3 | Knob | 1 | | | |
| 4 | Light mask | 1 | | | |
| 5 | Screw | 3 | | | |
| 6 | Washer | 3 | | | |
| 7 | Switch | 1 | | | |
| 8 | Phillips screw | 4 | | | |
| 9 | Control unit | 1 | | | |
| 10 | Ball socket | 2 | Push in completely | | 12 V, 1, 2 W |
| 11 | Card | 1 | | | |
| 12 | Bulb holder | 1 | | | |
| 13 | Bulb | 1 | | | |

Installation Instructions

Prior to removing the connecting rod, detach clamp at ball socket with a screwdriver.

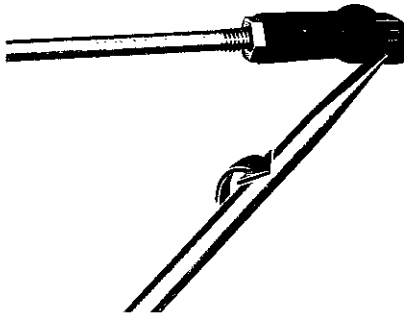


When replacing ball sockets adjust to 124^{+2}_{-2} mm as shown in figure.



TROUBLESHOOTING AUTOMATIC HEATING CONTROLS


Checking Interior Sensor

1. Remove interior sensor.
2. Using an ohmmeter with an appropriate testing range, check the resistance between both coaxial connections on the sensor (use test points). The resistance is very dependent on the temperature and should be about 1.5 kOhm at room temperature. Replace the temperature sensor if the resistance is about ∞ ohm (open circuit in sensor) or about 0 ohm (short circuit in sensor).

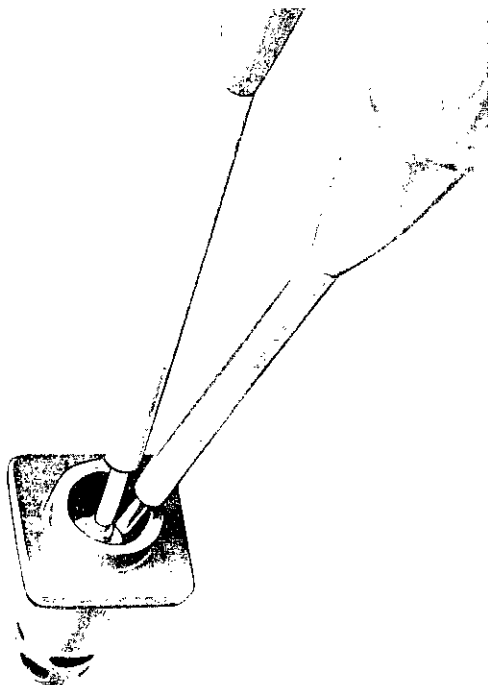

Checking Heat Sensor in Heater Flap Housing

1. Remove control unit.
2. Connect ohmmeter to 2-pole plug of heat sensor. The resistance must be 135 ohm with warm engine at 100°C/212°F. Replace heat sensor if resistance is way off (see "Checking Interior Sensor").

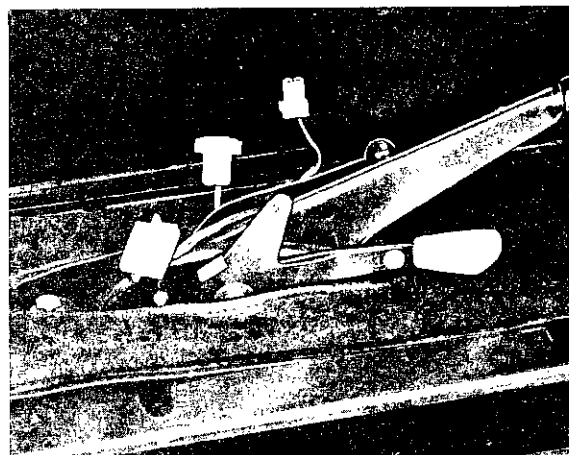


Note

An open circuit in one of the sensors or in the wires to the control unit will show a too low inside temperature or, a short circuit, a too high inside temperature. This will result in an improper movement of the heater lever up or down.

Checking Power Supply to Control Unit

1. Remove right side cover of control unit.

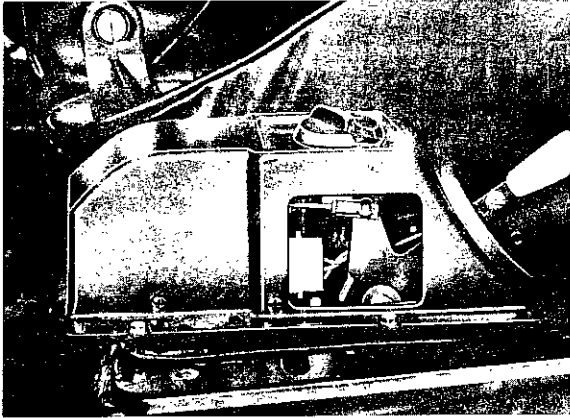


2. Disconnect 3-pole plug.
3. Turn on ignition and parking lights.
4. Connect test lamp between brown and red/white as well as brown and gray/blue cables. Test lamp must come on in both cases.

If both temperature sensors and the power supply operate correctly, but the heater controls do not operate properly, replace the complete control unit.

AUTOMATIC SPEED CONTROL


Removing and Installing Regulator

1. Remove cover in luggage compartment.
2. Pull plugs off of regulator.
3. Remove Phillips head screws and take out regulator.

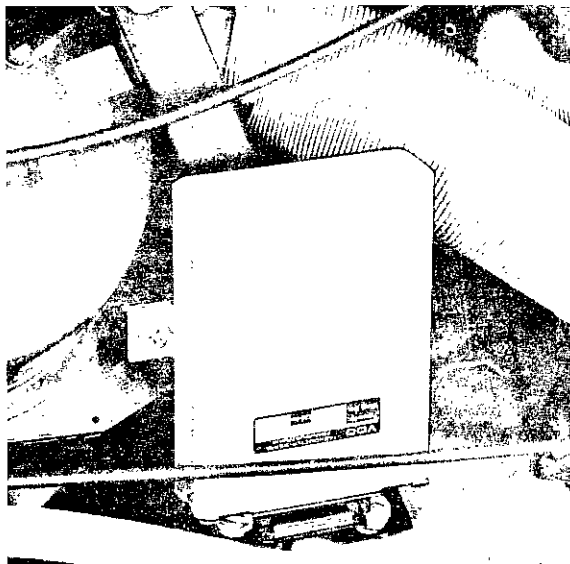

Removing and Installing Engagement Switch

1. Remove steering wheel and switch housing.
2. Remove engagement switch screws and take off switch.
3. Detach plug. If car has an air conditioner, loosen duct on driver's side.

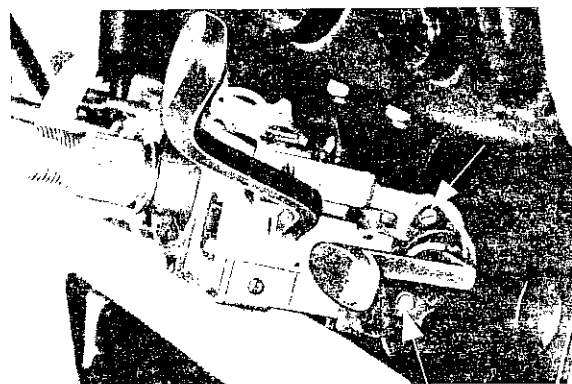


Removing and Installing Clutch Pedal Switch

1. Remove front tunnel cover.
2. Unscrew nuts on bracket, pull off wires and remove bracket with switch.




3. When installing make sure switch is adjusted correctly for clutch pedal. Adjust bracket in slots so that switch is not damaged when pulling back clutch pedal to check clutch play.

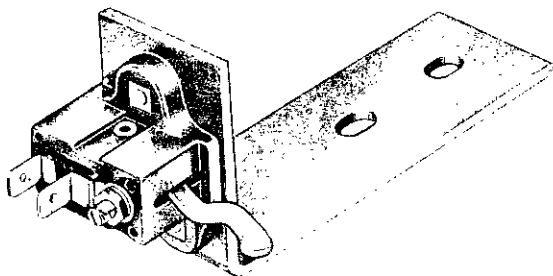


Removing and Installing Servo

1. Take out hose between heater air connection and blower motor.
2. Pull off plugs on servo and solenoid.
3. Unscrew mounting screws, detach vacuum line (small hose) on servo.

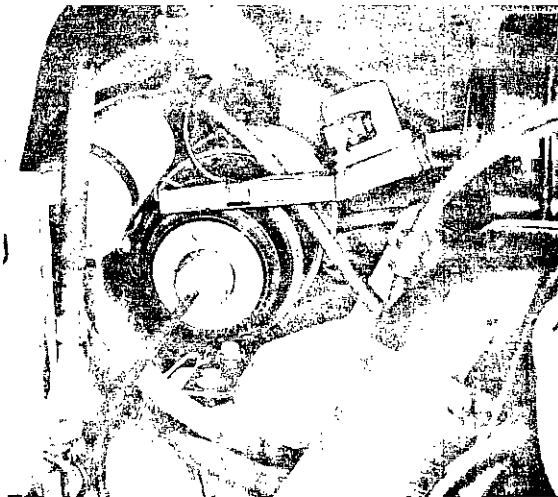


Note


The vacuum hose is connected to an adaptor near the throttle housing.

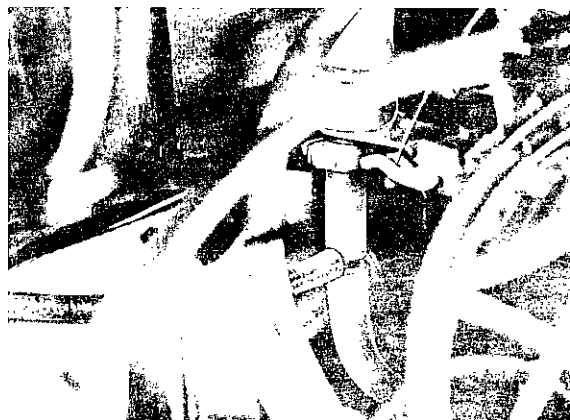

4. Unscrew holder on throttle lever.

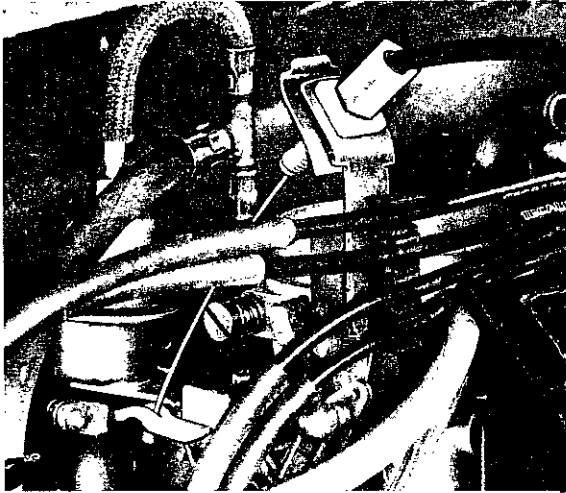


5. Pull off cable clip on holder upward and remove servo with cable.

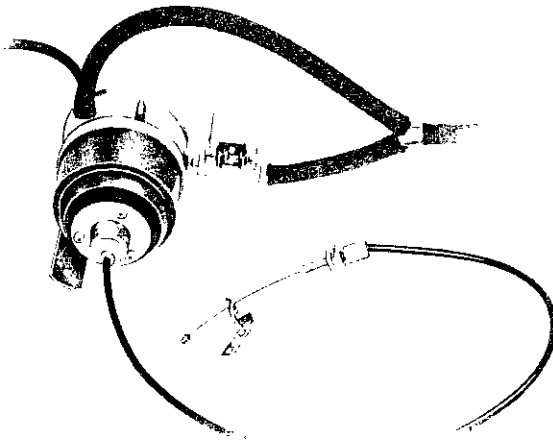


Removing and Installing Cable

1. Detach cable at throttle.
2. Unscrew cap on servo.
3. Press black clip together, slide in and detach cable.

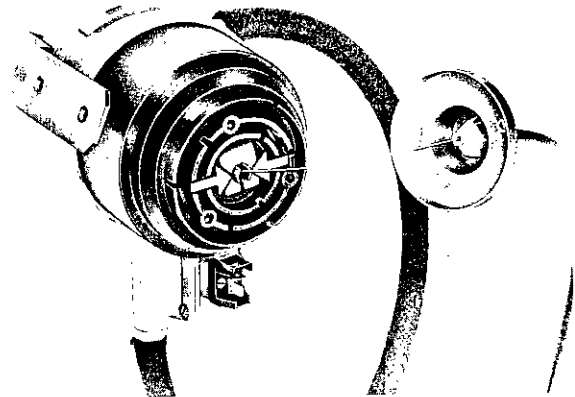

Troubleshooting Automatic Speed Control

1. Disconnect plugs at speed control regulator.

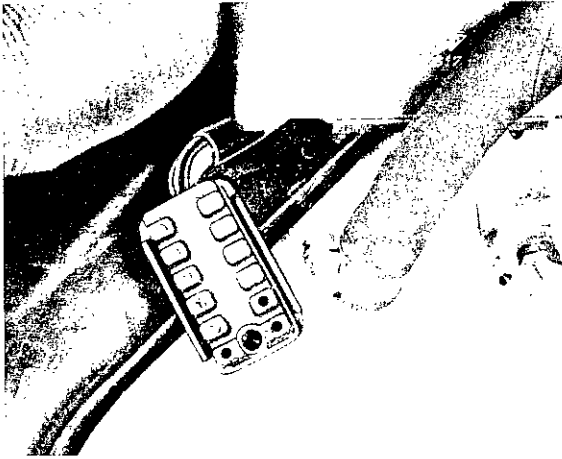

2. Connect ohmmeter between ground and terminal 3 of plug. Ohmmeter must show $\infty \Omega$.

Depress clutch. Ohmmeter now shows about 10 ohms. If resistance remains at $\infty \Omega$, either the clutch pedal switch or the solenoid on the servo is defective or not connected.

Note

On models with a sportomatic transmission operate the selector lever. (If the selector lever is not moved, the ohmmeter will show an additional 20 ohms.)

3. Connect ohmmeter between terminals 3 and 7. Reading must be between 11 and 17 ohms. If not, replace servo.

4. Terminal 12 must go directly to ground.

5. Connect ohmmeter between terminal 11 and ground. Move car; ohmmeter must deflect periodically.

6. Connect ohmmeter between terminal 6 and ground. Ohmmeter must show open circuit, provided that the stop lights operate properly.

7. Turn on ignition. Connect voltmeter between terminal 6 and ground. Depress brake pedal; instrument must show 12 volts.

8. 12 volts must be supplied to terminal 9, if the engagement switch is moved up.



9. Supply 12 volts to terminal 8. Terminal 8 must be dead when moving engagement switch toward steering wheel.

10. Supply 12 volts to terminal 10, if engagement switch is moved down.


The regulator must be replaced if all readings are within specifications and there is still a problem.

REMOVING AND INSTALLING AUTOMATIC ANTENNA


1. Disconnect battery.
2. Pull off wire (term. 30) on light switch and ground wire underneath instrument panel.
3. Disconnect control wire for antenna on radio and antenna wire on radio.
4. Disconnect front area mat and unscrew luggage compartment trim.
5. Unscrew antenna and remove from below.

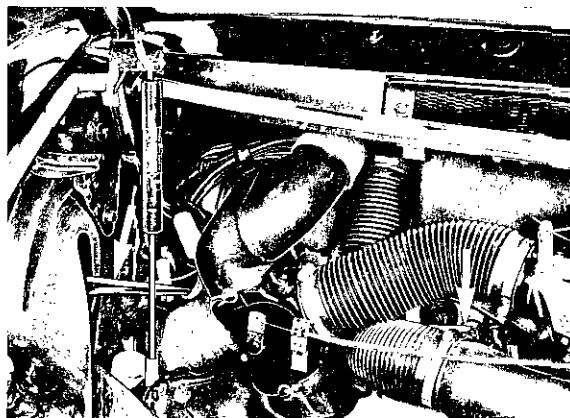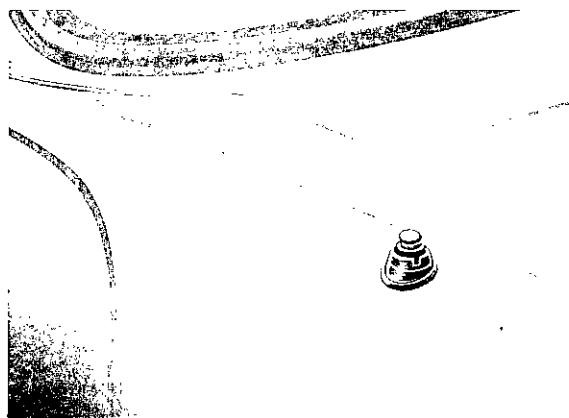

Pull wires into wheel well.

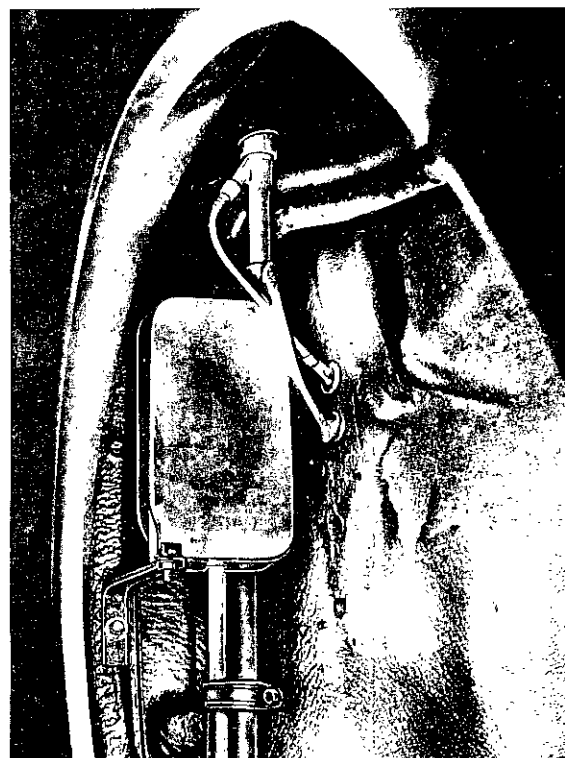


When installing antenna make sure there is perfect ground contact between base of antenna and fender.

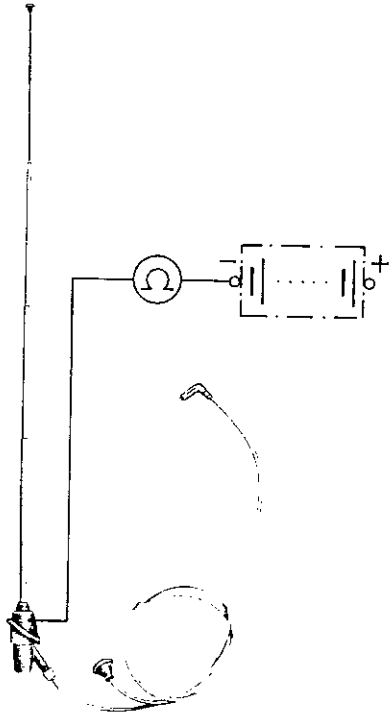

Base ground to battery negative pole = 0 ohm.

Installed distance for automatic antenna.

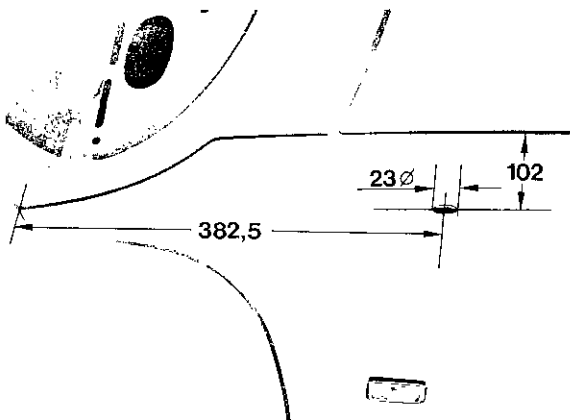


911 ALARM SYSTEM

Function

The alarm system is switched on and off with a separate key. The alarm switch is located on the face of an opened driver's door.

The alarm will be set off by opening the driver's and/or passenger's door, the engine hood and when turning on the ignition.

After setting off the alarm system a separate alarm horn will sound off intermittently for about 30 seconds (or constant tone for Swiss version cars) and could be set off again by the measures described above. At the same time the engine cannot be started.

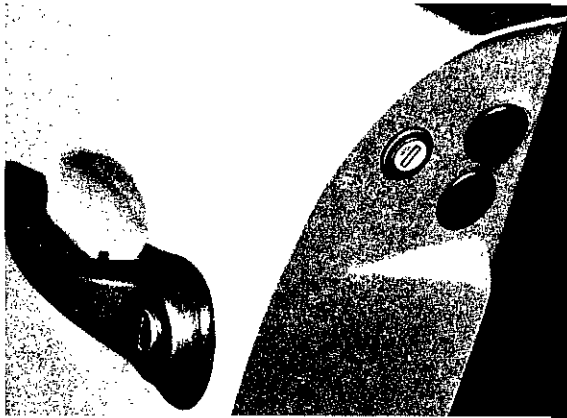

The key must be turned clockwise 90° to switch on the system.

Setting off the alarm system with the doors is accomplished via the door contact switches which also operate the inside light. Consequently when turning off the alarm system the driver's door must only be opened far enough to insert the key in the alarm switch lock.

Note


Spare keys are not available for the alarm switch. The alarm switch must be replaced, if the key is lost.

Removing and Installing Alarm Switch

1. Take off left door panel.
2. Pull off rubber escutcheon on alarm switch and unscrew hexagon nut.




3. Remove alarm switch through inside of door and pull off flat plug.

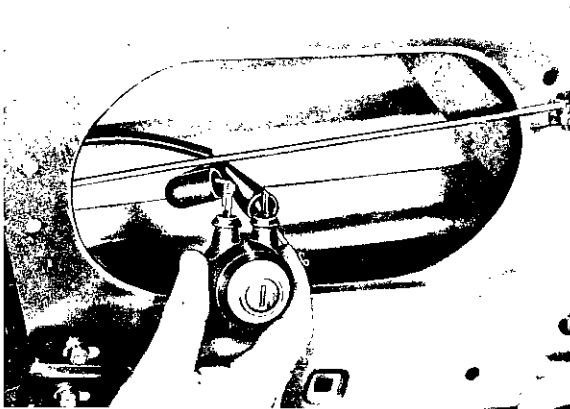

Removing and Installing Alarm Control Unit

1. Disconnect and remove front area mat. Unscrew luggage compartment trim.
2. Remove fresh air blower.
3. The alarm control unit is held by a holding clip and can be pulled off in direction of instrument panel.

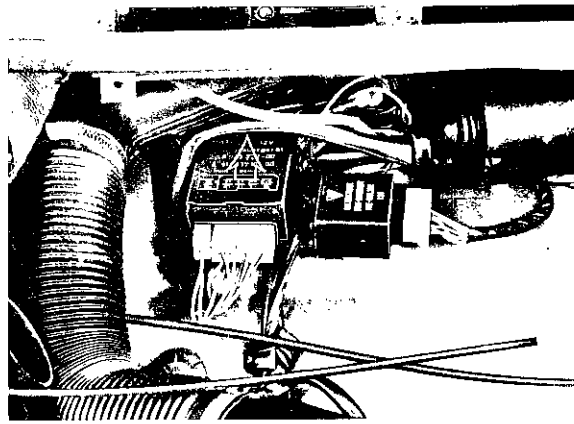

Removing and Installing Alarm Horn


1. Unscrew bottom guard on front axle.
2. Unscrew alarm horn and pull off wire plug.



Troubleshooting Alarm System

Checking Alarm Switch

1. Remove alarm switch and measure ohm values between contacts.

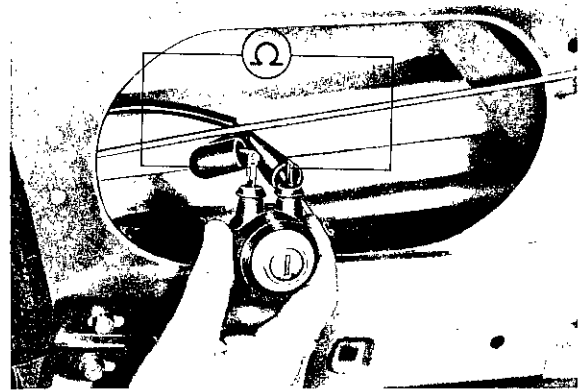



Alarm switch on
(key positioned horizontally)
= 2 to 3 k-ohms)

Alarm switch off
(key positioned vertically)
= 4 to 5,5 k-ohms

If measured values are higher or lower than specified ohm values, replace alarm switch.

Checking Lines and Connections

1. Remove alarm control unit. Pull off both plugs on alarm control unit.
2. Connect test lamp (max. 3 W) on double contact plug (term. 30 and Hn).
If lamp comes on, there is battery voltage and wire to alarm horn is okay.
3. Leave test lamp connected on term. 30 and make other lamp connection on term. K 1. Lamp should come on.
4. Connect test lamp on term. 30 and 31. Lamp should come on.
5. Connect test lamp on term. 30 and T-. Open and close both doors separately. Lamp should come on while opening.
6. Connect test lamp on term. 31 and 15. Lamp should come on when turning on ignition.
7. Connect test lamp on term. 30 and 61 (connect on both terminals separately).

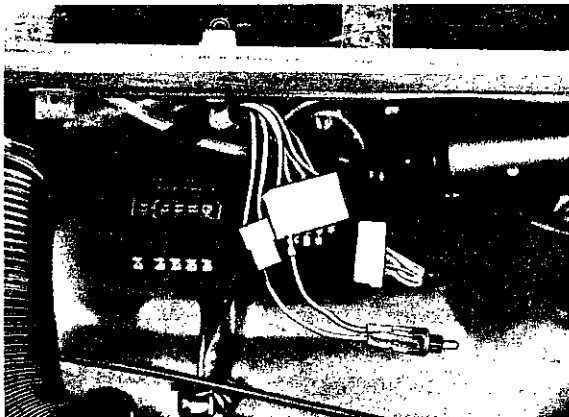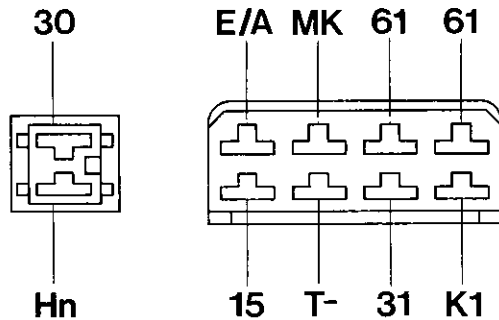

Lamp comes on and goes out when turning on ignition.

Lamp comes on and goes out after starting and running engine at high speed.

8. Connect test lamp on term. 30 and MK. Operate trunk light contact switch by hand. Lamp should come on and go out when pushing in switch.

Checking Function of Control Unit

Note

9. Terminal E/A must be checked with an ohmmeter. Connect meter between term. E/A and 31. Alarm switch must be connected.


It is recommended to use a test lamp instead of the alarm horn (no noise).

Test as described in point 1.1 (checking alarm switch). The same ohm values apply.

1. Connect eight-pin plug with alarm control unit. Two-pin plug remains disconnected.

Connect red wire on two-pin plug and term. 30 of control unit with a piece of wire.

Connect test lamp between term. HN on control unit and red/white wire of two-pin plug.

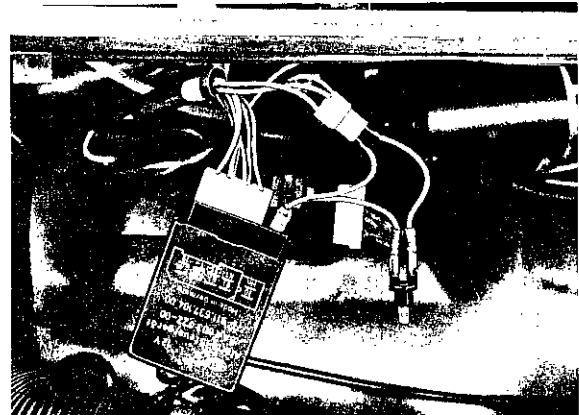

2. Turn on alarm system and open door wide. Lamp should flash. Also check passenger's door and trunk lid.

3. Set off alarm by opening a door. Leave system turned on and close door again. The alarm must last about 30 seconds.
Don't turn off alarm system.
When opening door again, alarm should also be set off again.
4. Turn on ignition after alarm has stopped. Lamp should flash.
Start engine. Engine should not run.
5. Disconnect test lamp and connect two-pin plug on control unit.
Install control unit.
Check function of alarm horn by setting off alarm system once again.

Replace alarm control unit if functions are not fulfilled.

Note

Even with the alarm system turned off a defect in the control unit could cause failure of the fuel pump under certain circumstances.

If a new control unit were not immediately available, help could be provided by the following measure.

Remove alarm control unit and pull off eight-pin plug. Bridge both terminals 61 on plug with a piece of wire. This will eliminate function of the alarm system.


BATTERY - 1974 MODELS

Removal and Installation

Beginning with 1974 models, all vehicles are furnished with only one battery. The battery has a capacity of 66 Ah. A battery with a capacity of 88 Ah is available on special order.

The battery is located in the left forward part of the luggage compartment and is easily accessible upon removal of the cover mat.


To remove the battery, disconnect battery leads from the battery terminals, disconnecting the ground strap first. Then remove the bracket retaining bolt in the compartment floor and take the bracket off.

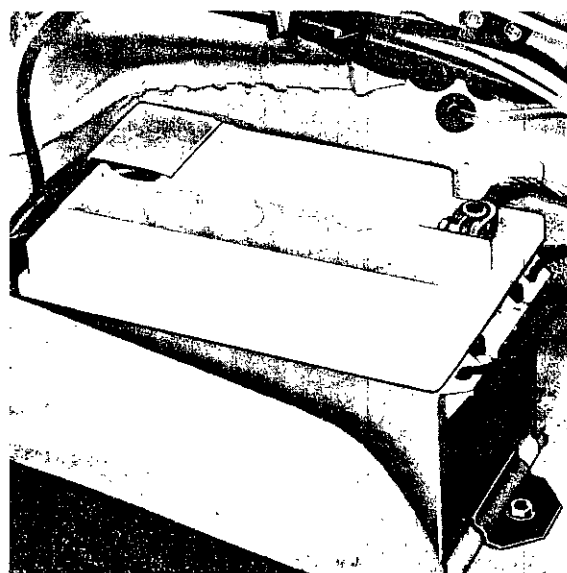

A special tool for removal and installation of the 88 Ah battery is supplied with the car from 1981 models on.




Angled driver for hexagon socket with holder and extension.

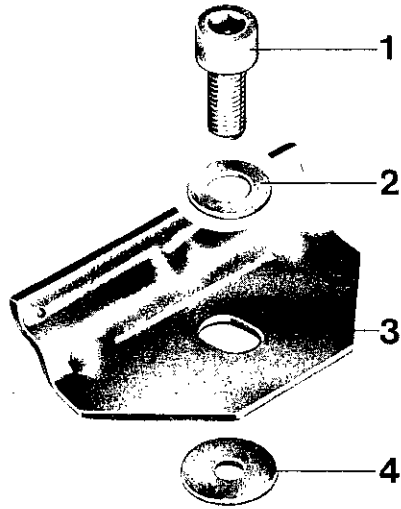

| No. | Description | Qty. | Note When: | | Special Instructions |
|-----|---------------------------------|------|------------|------------|----------------------|
| | | | Removing | Installing | |
| 1 | Socket head bolt M 8 x 20 | 1 | | | |
| 2 | Washer A 8,4 | 1 | | | |
| 3 | Bracket | 1 | | | |
| 4 | Rubber washer 18 x 5,5 x 1,5 | 1 | | | |

To install battery place bolt head in angled driver and holder.

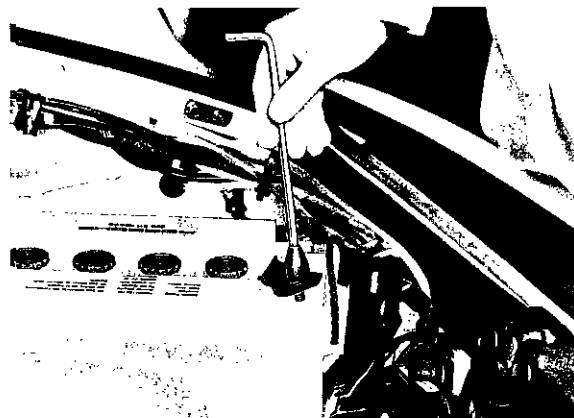

SPARK PLUGS

Beginning with the 1972 models, the following spark plugs can be used in the 2.4 liter engines:

| Vehicle Type | Spark Plug Type | Electrode Gap |
|-----------------|---|--------------------|
| 911 T USA | BOSCH W 235 P 21 BERU 235/14/3 P or similar | 0.55 mm 0.55 mm |
| 911 E and 911 S | BOSCH W 265 P 21 BERU 265/14/3 P or similar | 0.55 mm 0.55 mm |

Coat spark plug threads with a molybdenum paste (such as MOLYKOTE HTP-White or similar) before installing.

Torque spark plugs to 2.5 - 3 mkp (18.1 - 21.7 ft. lbs.).

SPARK PLUGS

The following spark plugs are approved for use in 1974 model engines:

| Vehicle Type | Spark Plug Type | Electrode Gap |
|--------------|-------------------------------------|--------------------|
| 911 | BOSCH W 215 P 21 BERU 215/14/3 P | 0.55 mm 0.55 mm |
| 911 S | BOSCH W 235 P 21 BERU 235/14/3 P | 0.55 mm 0.55 mm |
| Carrera 2.7 | BOSCH W 265 P 21 BERU 265/14/3 P | 0.55 mm 0.55 mm |

Coat spark plug threads with a molybdenum paste (MoS_2), such as MOLYKOTE HTP WHITE, prior to installation.

Torque spark plugs to 2.5 - 3.0 mkp (24.5 - 29.4 Nm).

NOTE

Use only spark plugs approved by PORSCHE.

SPARK PLUGS

Spark plugs - 1976 / 1977 models

| Model | Spark Plug | Electrode Gap |
|-------|------------------------------------|--|
| 911 S | Bosch W 235 P 21 Beru 235/14/3P | 0.55 mm/0.022 in. 0.55 mm/0.022 in. |

Spark plugs - 1978/1979

| Model | Spark Plug | Electrode Gap |
|--------|--|--------------------------------------|
| 911 SC | Bosch W 8 D (W 145 T 30) Beru 14-8 C (145/14/3 A) | 0.8 mm/0.031 in. 0.8 mm/0.031 in. |

Spark plugs - 1980

| Model | Spark Plug | Electrode Gap |
|--------|--|--------------------------------------|
| 911 SC | Bosch W 5 D (W 225 T 30) Beru 14-5 D (225/14/3 A) | 0.7 mm/0.028 in. 0.7 mm/0.028 in. |

Specifications concerning installation of plugs remain unchanged.

Equipment Tables - 1980 Model

Ignition Transformer

| Type/Model | Version | Remarks |
|------------|---|---------|
| 911 SC | 901 602 502 00 Bosch No. 0 221 121 001 | |

Distributor

| Type/Model | Version | Remarks |
|------------|---|---|
| 911 SC | 930 602 021 06 Bosch No. 0 237 304 016 | With double vacuum unit (retard and advance) without rev. limiter |

Spark Plugs

| Type/Model | Version | Remarks |
|------------|---|------------------------|
| 911 SC | Bosch W 5 D (W 225 T 30) Beru 14/5 D (225/14/3A) | 0.7 mm (0.028 in.) |

Control Unit

| Type/Model | Version | Remarks |
|------------|--|--|
| 911 SC | 930.602.702.0 Bosch No. 0 227 300 004 | Capacitor discharge ignition (CDI), breakerless |

IGNITION LEADS

Beginning with 1972 models, ignition lead lengths are as follows:

| | |
|----------------------|------------------------------------|
| From distributor to: | Cylinder 1 = 330 mm (13 in.) |
| | Cylinder 2 = 390 mm (15-11/32 in.) |
| | Cylinder 3 = 510 mm (20- 5/64 in.) |
| | Cylinder 4 = 880 mm (34-21/32 in.) |
| | Cylinder 5 = 900 mm (35- 7/16 in.) |
| | Cylinder 6 = 990 mm (38-63/64 in.) |

These lengths must be maintained for proper radio noise suppression.

ADJUSTING AND CHECKING DISTRIBUTOR

Adjusting Ignition Breaker Points

1. Remove distributor cap, rotor, and dust cover (BOSCH only). In MARELLI distributors, loosen retaining screw in rotor.

2. Turn crankshaft pulley until a distributor cam lifts the breaker arm to its highest point.

3. Adjust gap with feeler gauge (basic setting):

| | |
|---------|---------|
| BOSCH | 0.35 mm |
| MARELLI | 0.40 mm |

4. Check dwell angle with an appropriate tester and adjust, if necessary, by changing breaker point gap:

| | |
|---------|----------------------------|
| BOSCH | $38^{\circ} \pm 3^{\circ}$ |
| MARELLI | $40^{\circ} \pm 3^{\circ}$ |


Large breaker point gap = small dwell angle

Small breaker point gap = large dwell angle

5. Tighten breaker point plate retaining screw.

Note


Always check ignition timing after adjusting dwell angle since dwell angle changes affect timing.

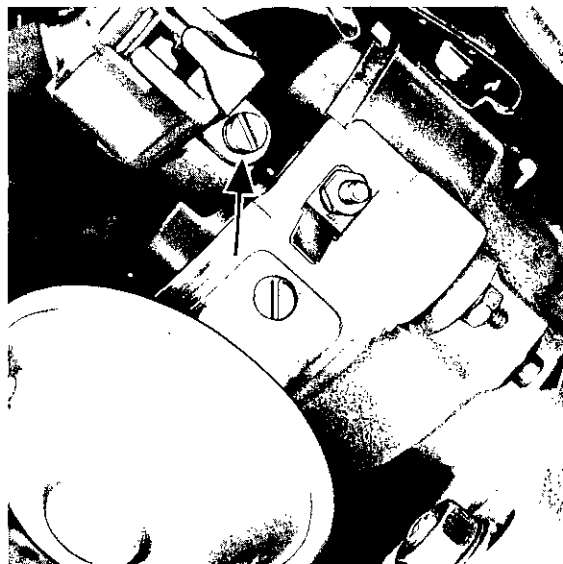

Beginning with 1973 model vehicles, the following specifications apply to MARELLI distributors:


Breaker gap 0.35 mm

Dwell angle $37^{\circ} \pm 3^{\circ}$

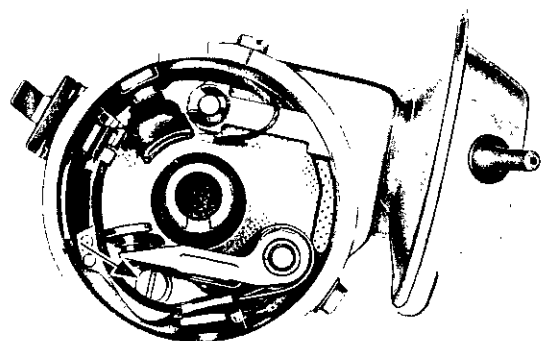

Changing Breaker Points

1. Remove distributor cap, rotor, and dust cover.
2. Remove slotted screws and disconnect wire from Terminal 1. (In MARELLI distributor loosen nut at Terminal 1.)
3. Remove breaker points.

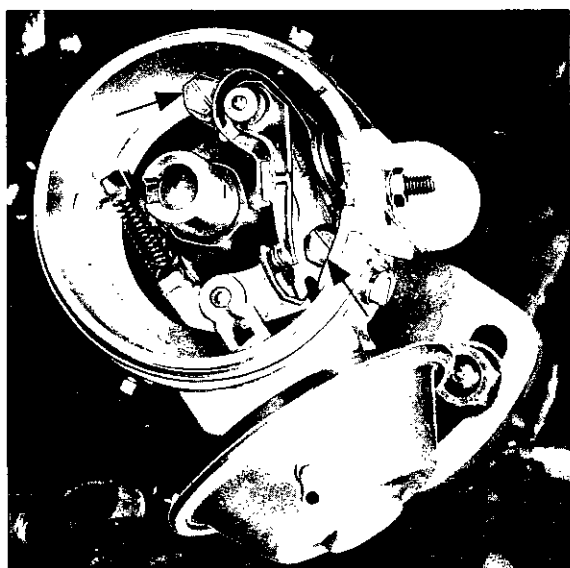


Install in reversed order. Lightly coat the cam with distributor cam lubricant. Keep lubricant off breaker points.

Adjusting Ignition

(All 2.4 and 2.7 liter engines,
except 2.7 CARRERA)

Check dwell angle before adjusting ignition
timing, correct if necessary.

1. Connect engine to engine tester.
2. The adjustment should be made with a stroboscopic timing light when engine oil temperature is 80°C (176°F). The notch located to the left of the Z 1 mark on the crankshaft pulley (5° crankshaft rotation after TDC) must align with the notch in the blower housing at 900 ± 50 rpm. The vacuum hose must remain connected to the ignition distributor. Timing is changed by loosening the distributor clamping nut and turning the distributor body.

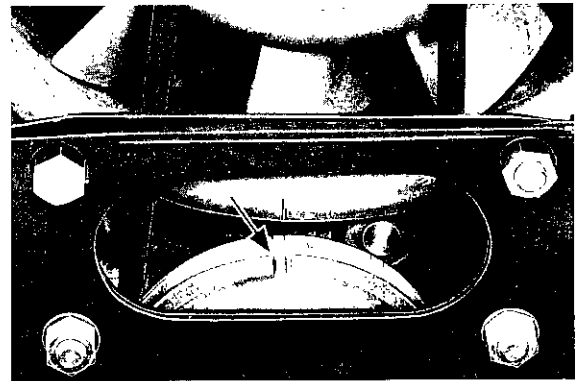


NOTE

The firing point may vary by $\pm 1^{\circ}$ crankshaft rotation at 900 rpm. The variation must be within the tolerance limits of the spark advance curve at 6000 rpm. The timing must not advance past 38° of crankshaft rotation above 6000 rpm.

Adjusting Ignition (2.7 liter engines)

The dwell angle must be checked, and corrected if necessary, prior to adjusting the ignition timing. Apply same values as those applicable to the 2.4 liter engines.

1. Connect engine to the engine tester.

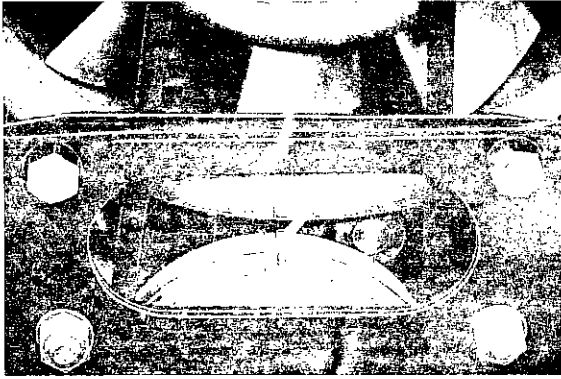

2. The adjustment is to be made with a stroboscopic timing light when engine oil temperature is 80° C (176° F). The Z1 mark on the crankshaft pulley must align with the notch in the blower housing when the engine is running at 850 - 950 rpm. The vacuum hose must remain connected to the ignition distributor. Timing can be changed by loosening the distributor retaining nut and rotating the distributor body.


NOTE

The ignition timing may vary by $\pm 1^\circ$ crankshaft rotation at 900 rpm. The variation must be within the tolerance limits of the advance curve when the engine is running at 6000 rpm. The timing must not advance past 38° of crankshaft rotation at speeds above 6000 rpm.

Checking Timing Advance Curve

1. Remove vacuum hose and compare advance curve with chart below at 1000 - 1500 - 2000 - 4000 - 6000 rpm. The readings must be within the two lines on the chart.

Ignition Advance Curve for Distributor for 2.4 I- and 2.7 I-Engines Bosch and Marelli except Carrera

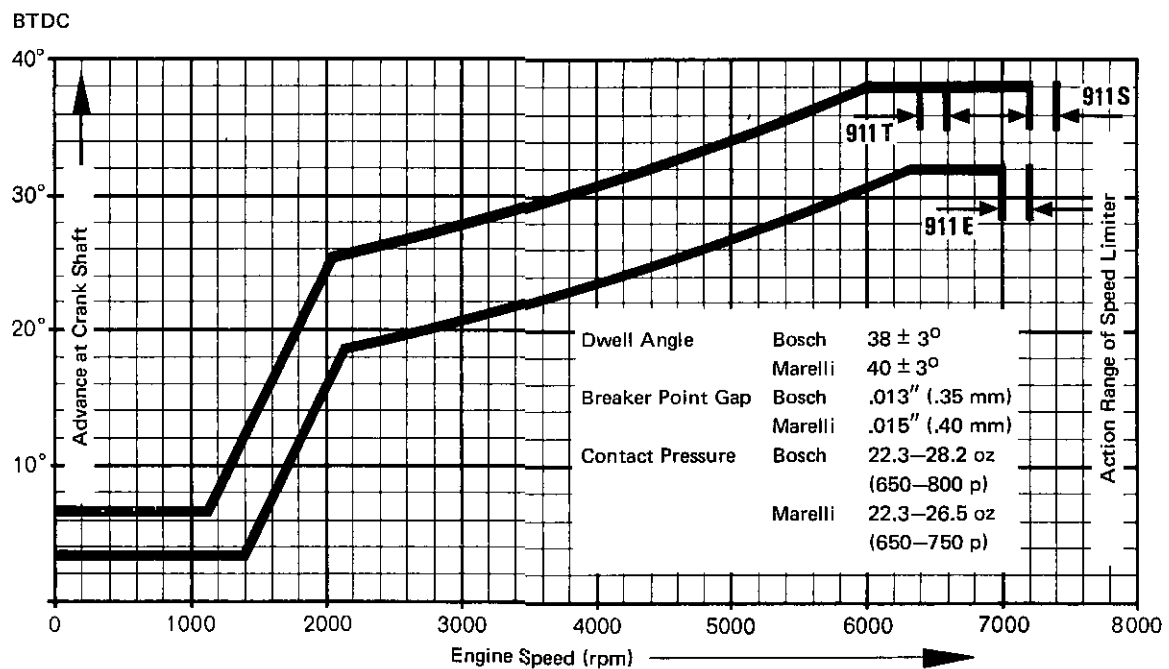

Beginning with 1973 model vehicles, the following specifications apply to MARELLI distributors:


Breaker gap 0.35 mm
Dwell angle $37^\circ \pm 3^\circ$

Checking Distributor Advance Curve on Test Stand

The advance curves may be checked only on a test stand equipped with CDS hookup.

Centrifugal Advance

1. Remove distributor and mount in test stand.

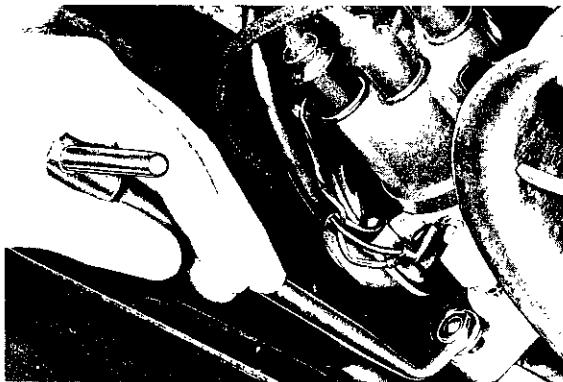

2. Remove distributor cap and connect according to test stand manufacturer. Terminal 4 of the ignition transformer must be connected to the test stand spark display unit by an ignition wire.

3. Position the test stand selector lever to "auxiliary ignition coil"; the CDS unit will then be switched on.

4. Move distributor and bridge so that one of the light-markers will stop at 0° .

Note

The vacuum hose must be disconnected and speed reduction avoided during this test.

Contact Bounce


The light marker must not deviate by more than 1° at 300 rpm, or 2° at 3500 rpm.

5. Increase speed and compare rpm with the degrees of advance (BTDC) with the chart below.

| Degrees Advance | Distributor Shaft RPM | Measurement Errors (cam displacement) |
|-----------------|-----------------------|--|
| 1° | 600 - 750 rpm | Run distributor at 300 rpm. The 6 visible light markers on the protractor must be spaced at 60° intervals ($\pm 1^\circ$ deviation per cam). |
| 7° | 900 - 1050 rpm | |
| 9° | 1000 - 1650 rpm | |
| 12° | 1950 - 2550 rpm | |
| 14° | 2550 - 3050 rpm | |

At 3500 rpm, the advance must be between 14.3° and 15.7° .

Centrifugal Advance Curve for Distributor for 2.4 I- and 2.7 I-Engines Bosch and Marelli except Carrera

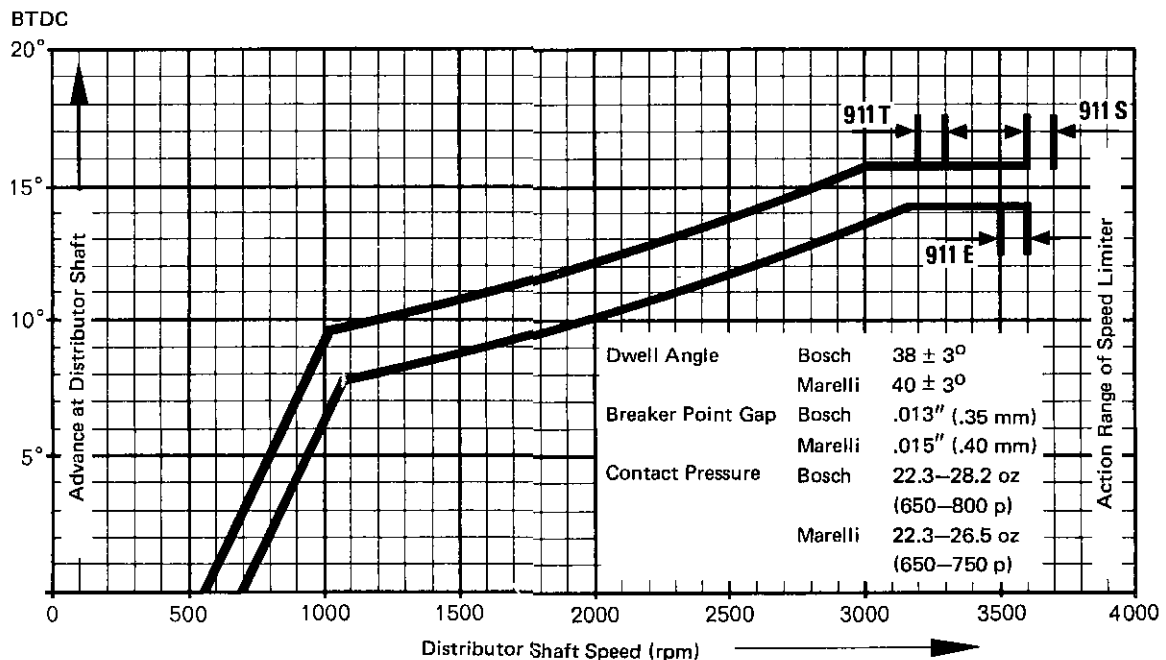

Beginning with 1973 model vehicles, the following specifications apply to MARELLI distributors:

Breaker point gap: 0.35 mm


Dwell angle: $37^\circ \pm 3^\circ$

Vacuum

1. Connect vacuum line of test stand to distributor vacuum chamber.
2. Set speed to 300 rpm and do not change during the test.
3. Check vacuum at the indicated degrees advance (ATDC):

| Degrees Advance | Vacuum |
|-----------------|--------------------------------|
| 1° | 85 - 110 Torr (3.3 - 4.3 in.) |
| 4° | 100 - 125 Torr (3.9 - 4.9 in.) |

Vacuum Advance Curve for Distributor for 2.4 I- and 2.7 I-Engines Bosch and Marelli except Carrera

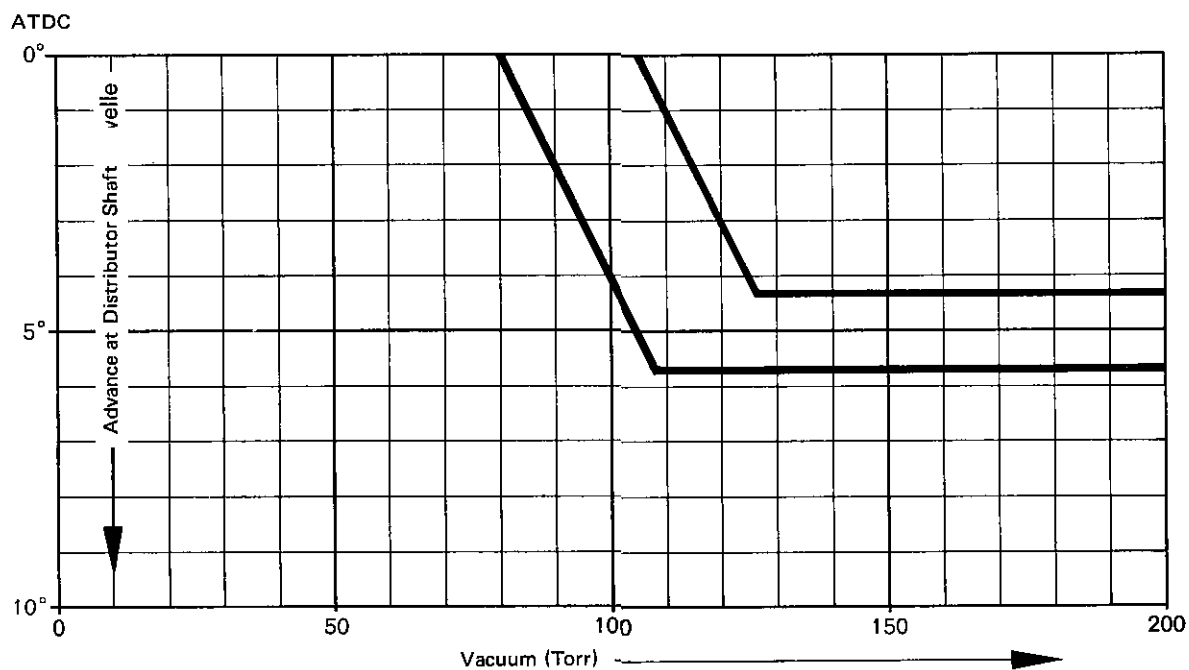

Speed Limiter

1. Mount cap on distributor and connect according to rest stand manufacturer. The ignition lead must be removed from the spark display unit and connected to the distributor cap so that connection is made between ignition transformer and distributor.
2. Adjust spark display to 5 mm distance.
3. Increase speed until sparks stop. The sparks must stop at the following speeds:

| Distributor for Vehicle Type | Cut-off RPM |
|---------------------------------|-------------------|
| 911 T | 3250 ± 50 rpm |
| 911 E | 3550 ± 50 rpm |
| 911 S | 3650 ± 50 rpm |

Beginning with 1973 models, speed limiter tolerances are as follows:

| Distributor for Vehicle Type | Cut-off RPM |
|---------------------------------|--------------------|
| 911 T | 3250 ± 100 rpm |
| 911 E | 3550 ± 100 rpm |
| 911 S | 3650 ± 100 rpm |

Beginning with 1974 models, the cutoff speed for Type 911 (2.7 liters) and 911 S (2.7 liters) engines is

$$3250 \pm 100 \text{ rpm}$$

Dwell Angle

1. Connect standard ignition condenser between Terminal 1 of the distributor and the ground.
2. Position test stand selector lever to the "Dwell Angle" position.
3. Attach test stand connecting wire to Terminal 1 of the distributor.
4. Adjust speed to 300 rpm and turn bridge so that the end of a light marker lines up with the 0° mark on the protractor. The length of the light marker indicates dwell angle.

Remove the ignition condenser after completing the test. Connect vacuum hose and adjust ignition timing after reinstalling the distributor in the vehicle.


Ignition Advance Curves for

2.7 Liter Carrera Engine

Testing is accomplished in same manner as that for distributors in 2.4 liter engines. The values differing from those applicable to the 2.4 liter engines are shown below.

Values shown in the advance curve graph apply to a distributor installed in the engine with the vacuum hose detached. A prerequisite for the test is proper adjustment of the ignition timing at idle speed.

IGNITION DISTRIBUTOR ADVANCE CURVE FOR 2.7 LITER CARRERA ENGINE -
BOSCH AND MARELLI

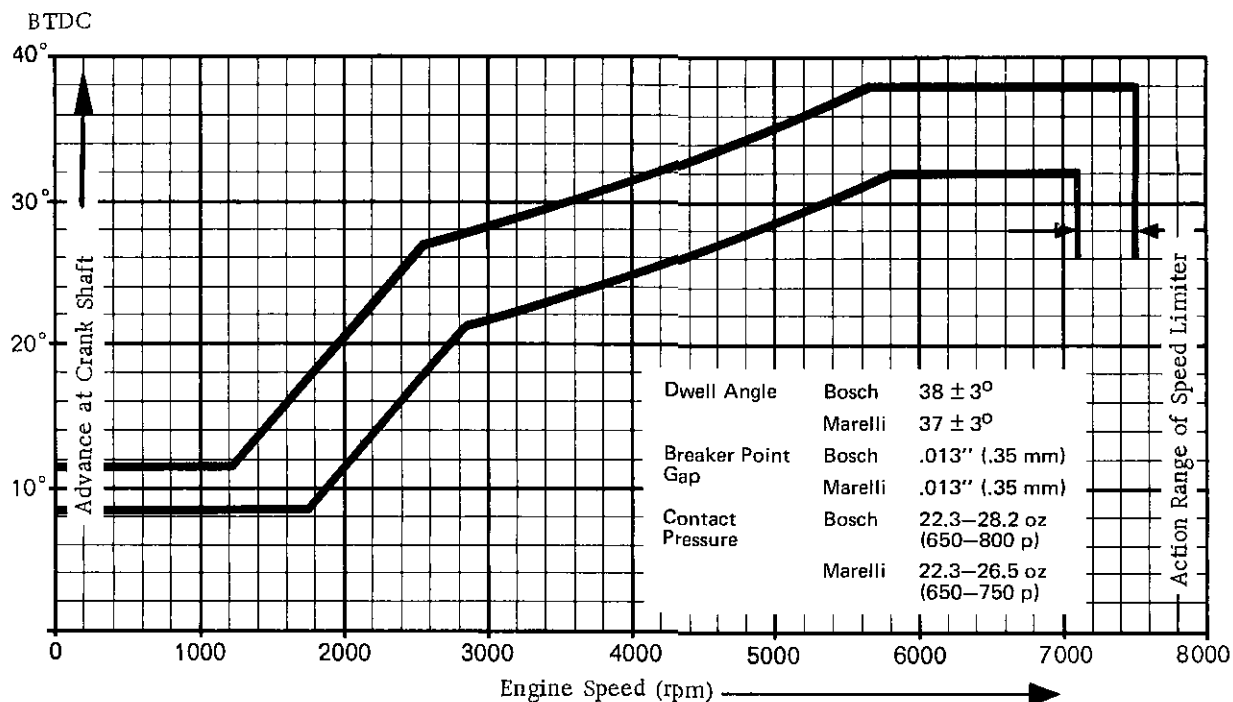


The mechanical advance curve graph applies to a distributor mounted in the test stand.

| Degrees Advance (BTC) | Distributor Shaft Speed |
|-----------------------|-------------------------|
| 1° | 700 - 950 rpm |
| 6° | 1140 - 1380 rpm |
| 8° | 1350 - 1930 rpm |
| 11° | 2250 - 2770 rpm |

The ignition advance point must be between 11.8° and 13.3° at 3500 rpm.

CENTRIFUGAL ADVANCE CURVE FOR 2.7 LITER CARRERA ENGINE - BOSCH AND MARELLI

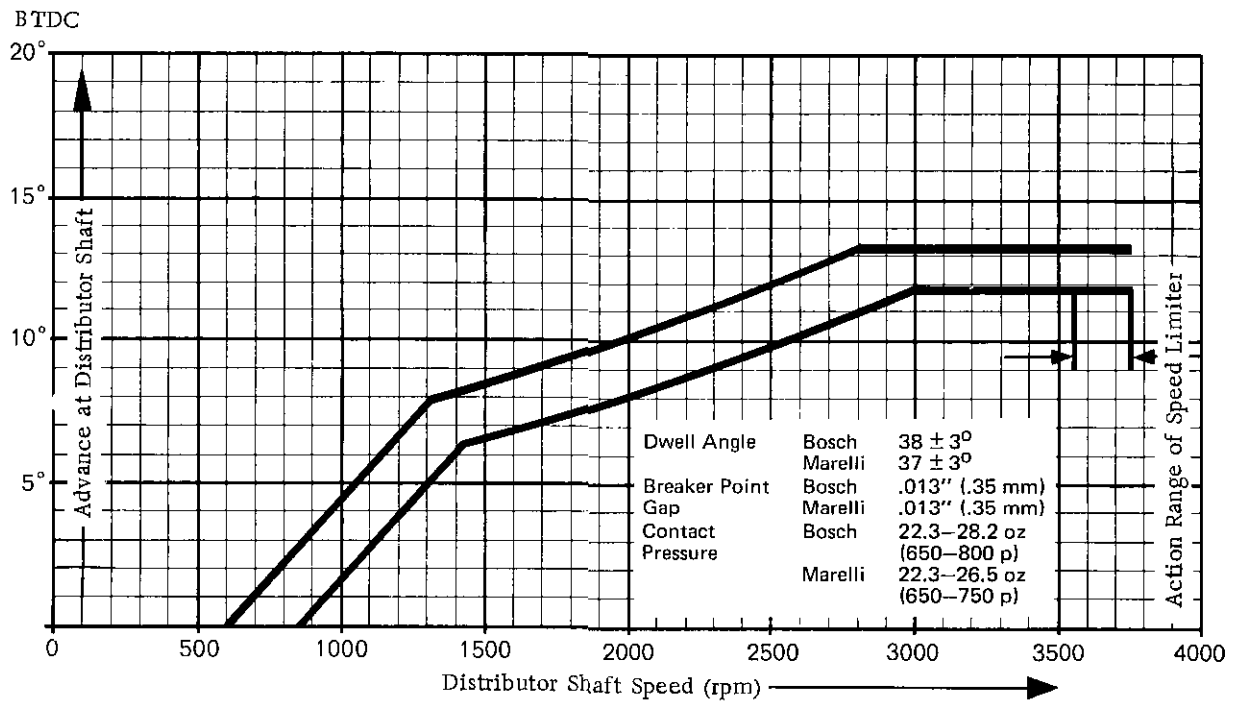


Testing of vacuum advance is accomplished on the distributor test stand.

| Vacuum Advance (ATC) | Vacuum |
|----------------------|--------------|
| 1° | 40 - 65 Torr |
| 4° | 54 - 78 Torr |

The advance point must be between 4.3° and 5.7° when vacuum is at 100 Torr.

The distributor cut-off speed in 2.7 liter Carrera engine is 3550 - 3750 rpm.

VACUUM ADVANCE CURVE FOR DISTRIBUTORS IN 2.7 LITER CARRERA ENGINE -
BOSCH AND MARELLI

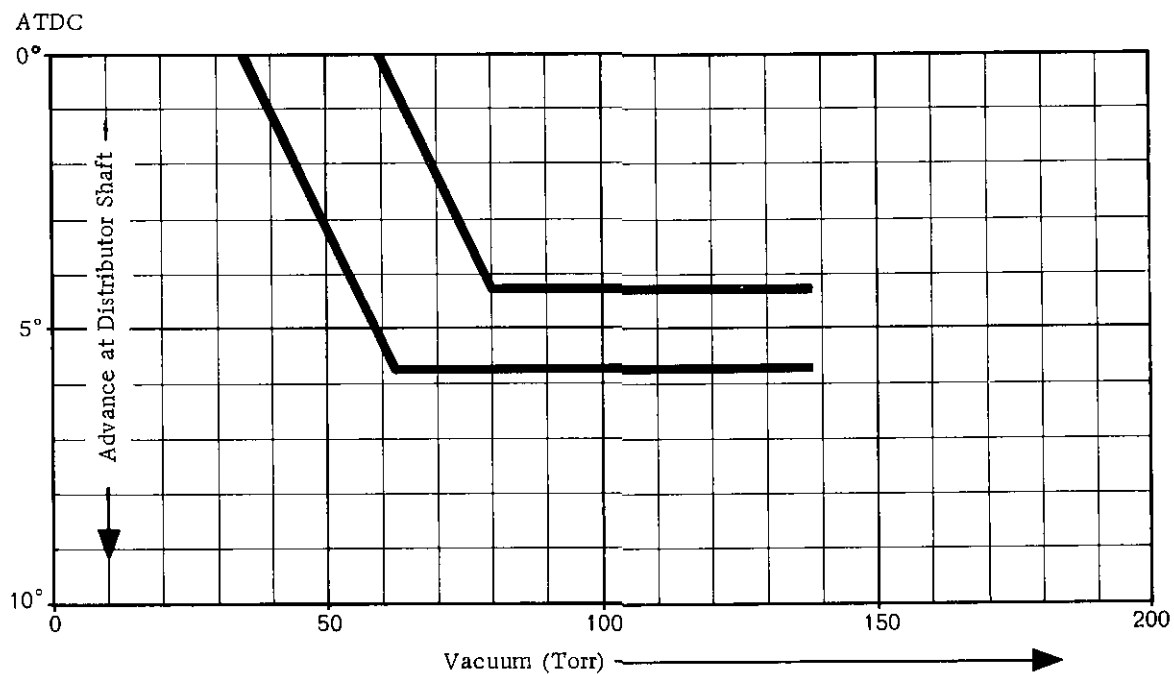

ADJUSTING IGNITION TIMING (Type 911 S - 1977 Model)

USA Version

Adjust to $0^{\circ} \pm 2^{\circ}$ (Z 1 mark) at an oil temperature of $80^{\circ}\text{C}/176^{\circ}\text{F}$ and idle speed of 900 to 1000 rpm.



The plug between the vacuum hose and vacuum advance unit must be installed and may not be removed, not even while adjusting.




California Version


Adjust to $15^{\circ} \pm 2^{\circ}$ ATDC at an oil temperature of $80^{\circ}\text{C}/176^{\circ}\text{F}$ and idle speed of 950 to 1050 rpm.




No plug is installed between the vacuum hose and vacuum advance unit. The vacuum hose must remain connected for adjustments.

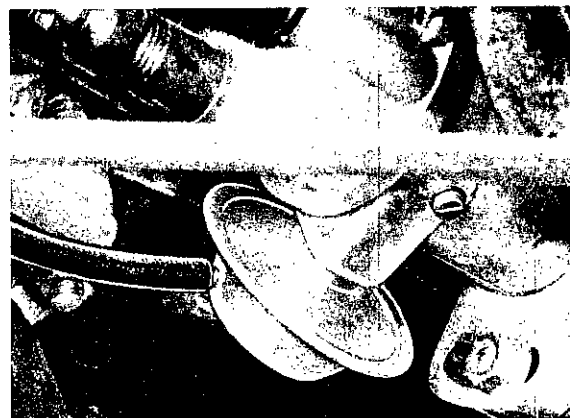

CENTRIFUGAL ADVANCE CURVE TYPE 911 S FROM MODEL 77
(USA, CALIFORNIA)

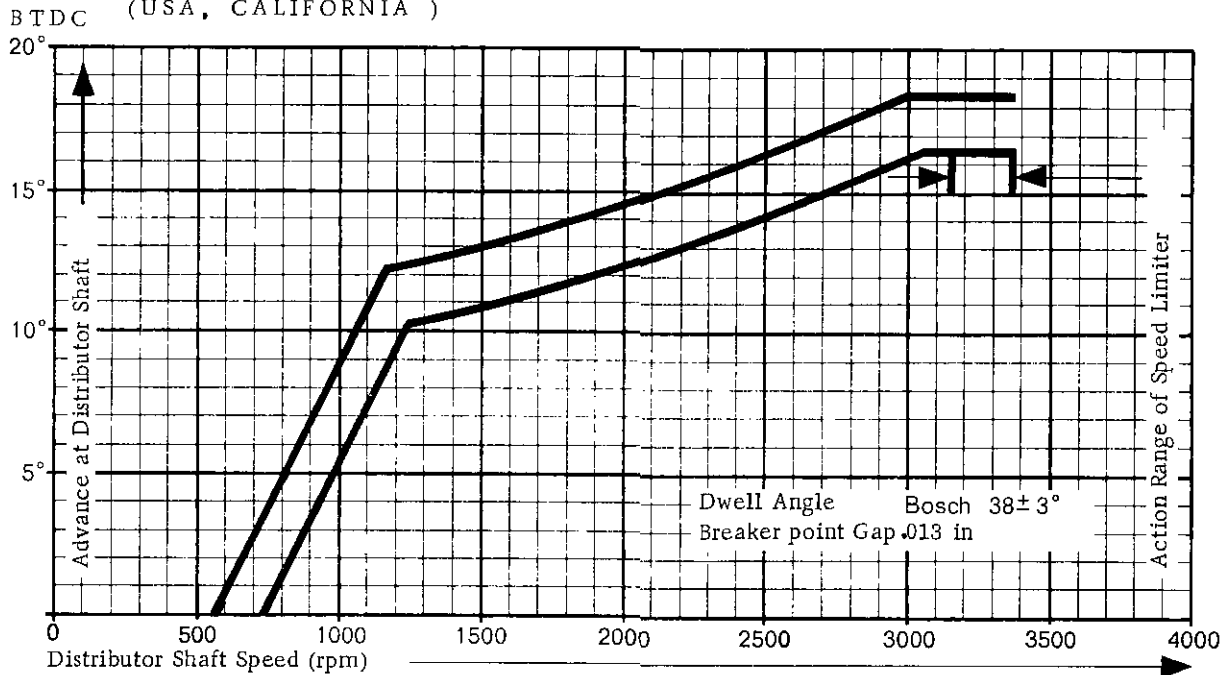


VACUUM ADVANCE CURVE TYPE 911 S FROM MODEL 77
ATDC (CALIFORNIA)

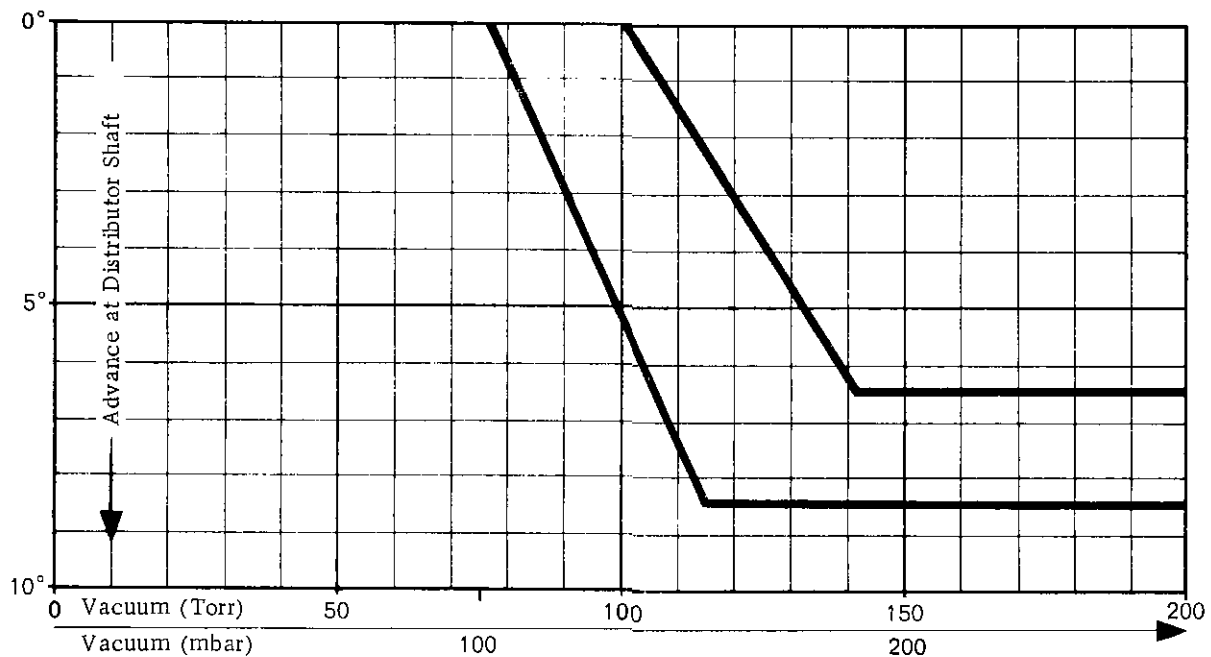


CENTRIFUGAL ADVANCE CURVE TYPE 911 SC - MODEL 78

BTDC

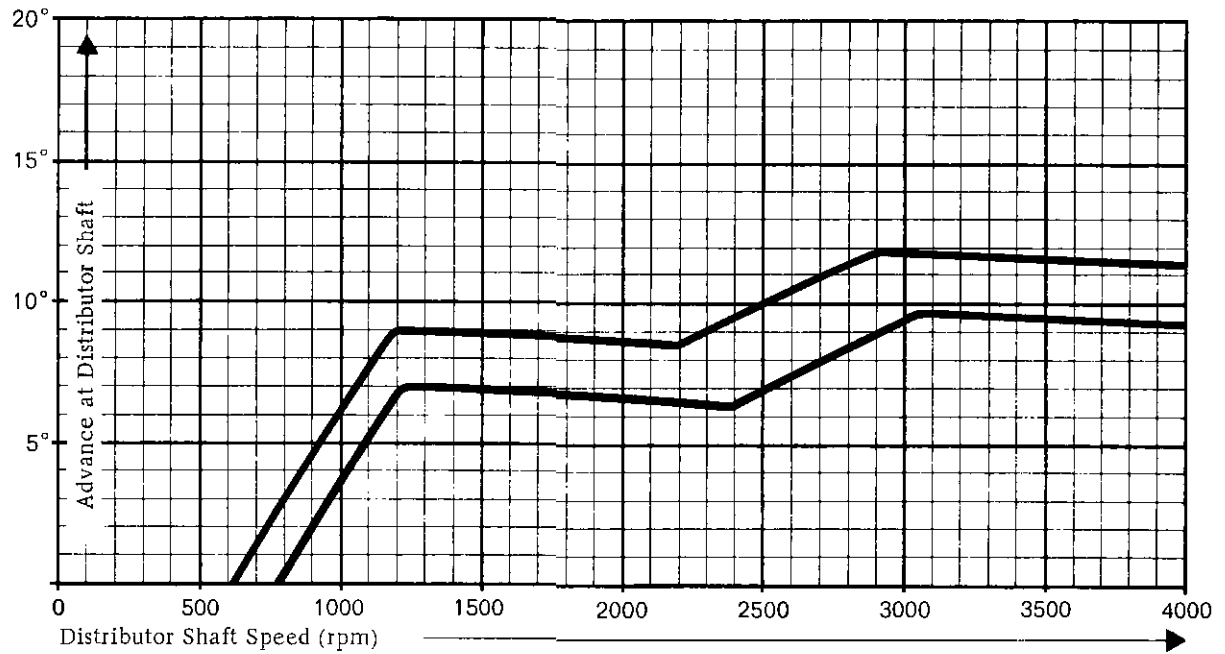

VACUUM ADVANCE CURVE TYPE 911 SC - MODEL 78

BTDC

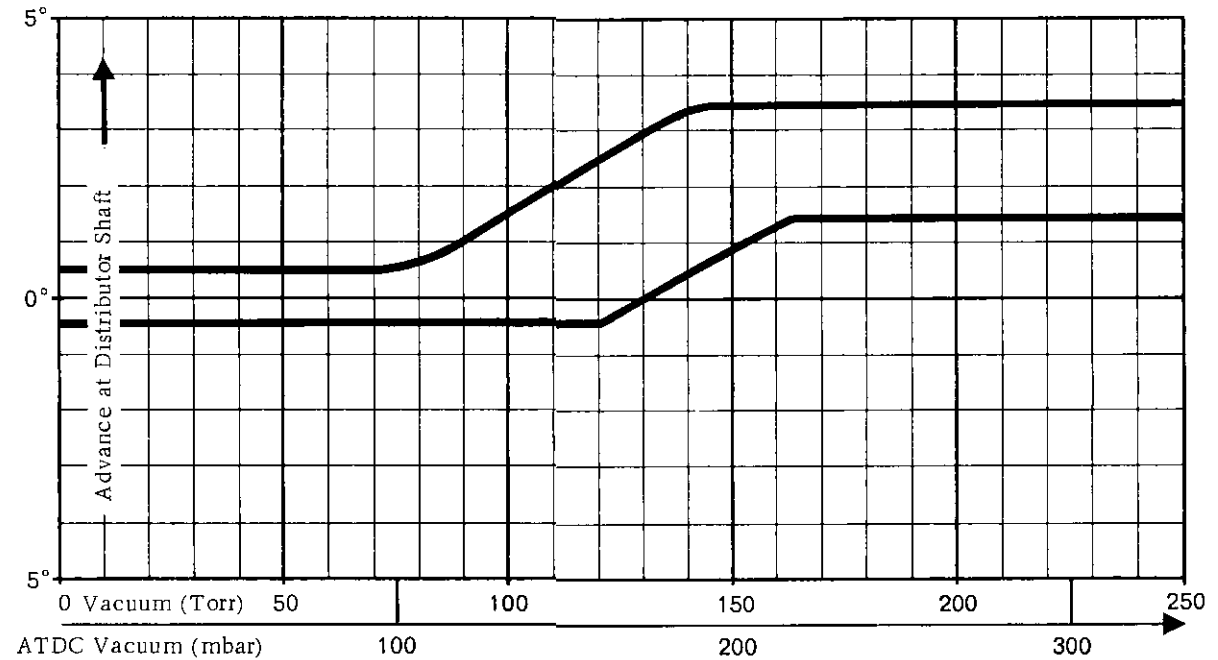

Adjusting Ignition Timing as from 1978 Models

Adjusting value:


Europe: $5^{\circ} \pm 2^{\circ}$ BTDC at 900 \pm 50 1/min
 USA: $5^{\circ} \pm 2^{\circ}$ BTDC at 950 \pm 50 1/min

1. Adjustment must be made on an engine with oil temperature of approx. 80°C . The 5° mark on pulley must align with notch on fan housing at specified engine speed.



The vacuum hose of USA version models can remain attached.

To measure engine speed, use a tester with an inductive speed recorder (clips).

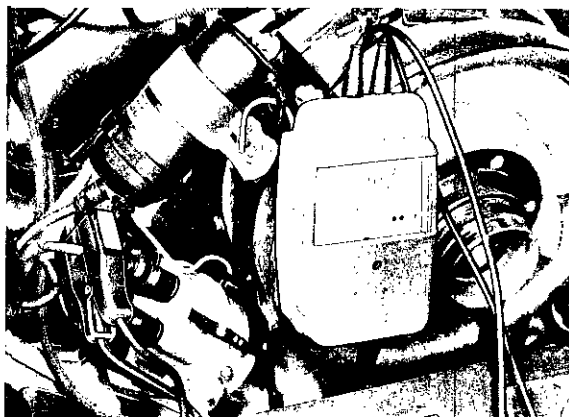

2. After adjustment of ignition timing, check ignition timing advance.

Europe: $35^{\circ} \pm 2^{\circ}$ BTDC at 6000 1/min
 USA: $26^{\circ} \pm 2^{\circ}$ BTDC at 6000 1/min
 (vacuum hose detached)

If these control values are not reached, remove distributor and inspect in a test bench.


Note

An inspection or adjustment of the dwell angle is not possible and also not necessary on the breakerless ignition system installed as from 1978 models.

Adjusting Ignition Timing - 1980 Models

1. Run engine to operating temperature (oil temperature approx. $90^{\circ}\text{C}/194^{\circ}\text{F}$).
2. Connect engine tester.

Adjusting Values: 5° before TDC at
 950 ± 50 rpm

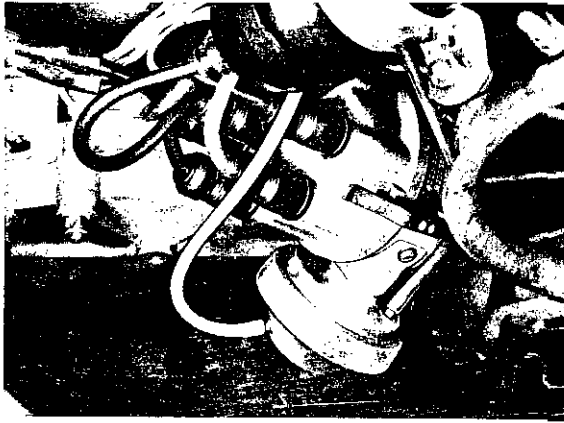

3. Connect timing light.

At specified engine speed the 5° mark on pulley must be opposite notch on blower housing.



Adjust idle speed after connecting the vacuum hoses.

Pull off vacuum hoses.
Adjust speed to 950 ± 50 rpm.

Checking Ignition Retard/Advance - 1980 Models

Requirements:

Ignition timing adjusted to specifications.


1. Centrifugal Advance
(vacuum hoses detached)

Ignition timing must be between 15 and 20° before TDC at 3000 rpm or 19 and 25° before TDC at 6000 rpm.

2. Vacuum Retard/Advance
(measured at idle speed)

Checking Vacuum Retard

Connect blue hose at connection 1 of double vacuum box and disconnect red hose at connection 2.

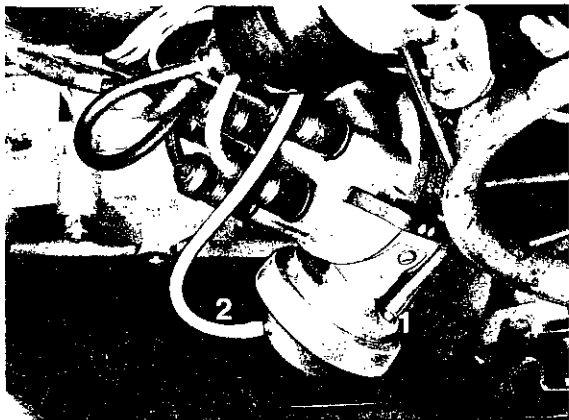

- 1 = Retard (blue)
2 = Advance (red)

Ignition timing must be between 3 and 7° after TDC.

Checking Vacuum Advance


Connect blue hose on connection 2. Adjust speed to 950 \pm 50 rpm.

Ignition timing must be between 8 and 12° before TDC.


Adjust idle speed after connecting vacuum hoses.

If specified values cannot be reached, remove and check distributor on a test bench.

CENTRIFUGAL ADVANCE CURVE TYPE 911 SC - MODEL 1980


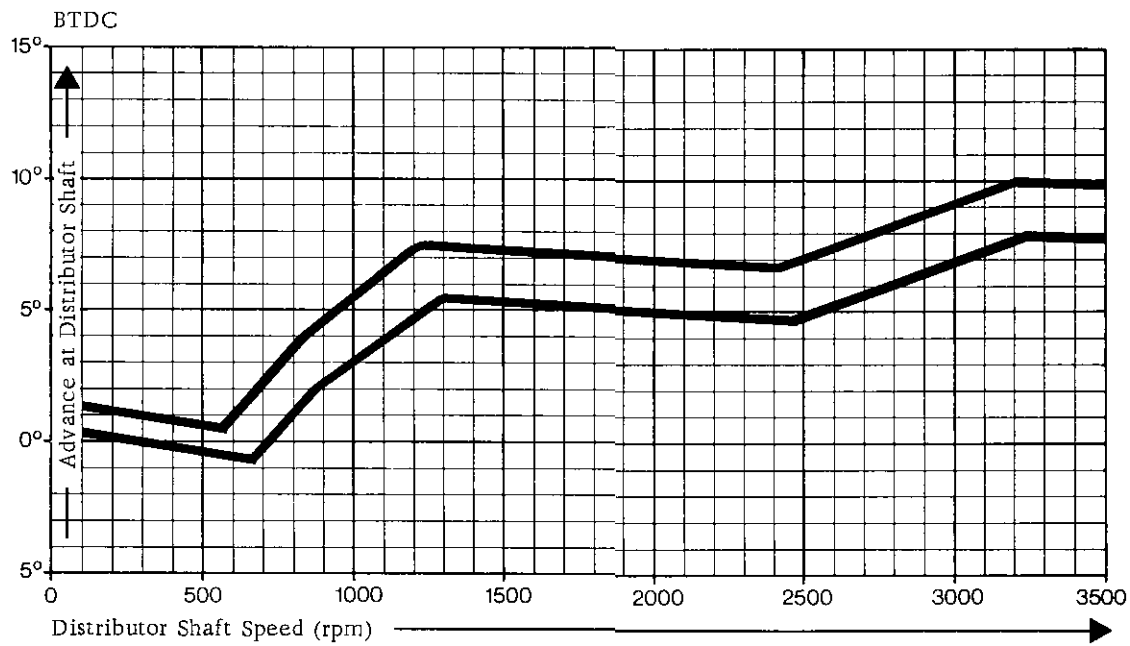


VACUUM ADVANCE CURVE TYPE 911 SC - MODEL 1980

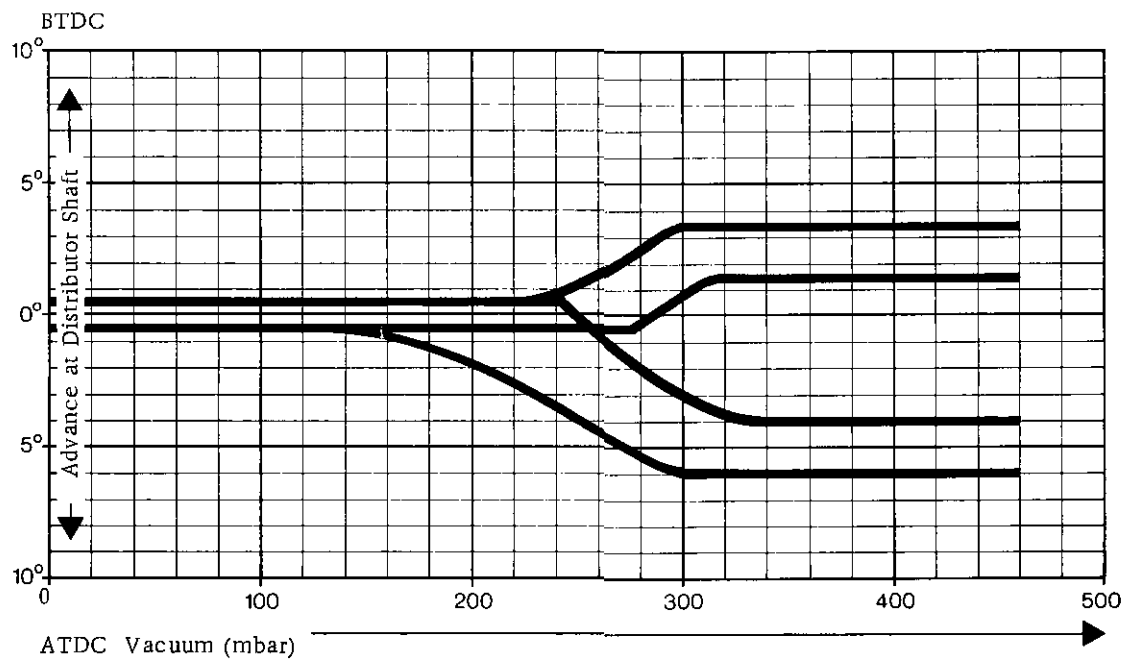

Adjusting Ignition Timing from 1981 Models

1. Run engine warm (oil temperature about 90°C).
2. Connect engine tester.
3. Pull off vacuum hose.
4. Connect ignition stroboscope lamp.
25° mark on pulley should be opposite notch on fan housing at 4000 rpm.

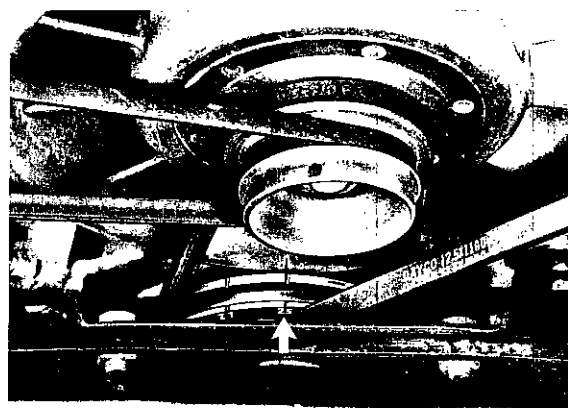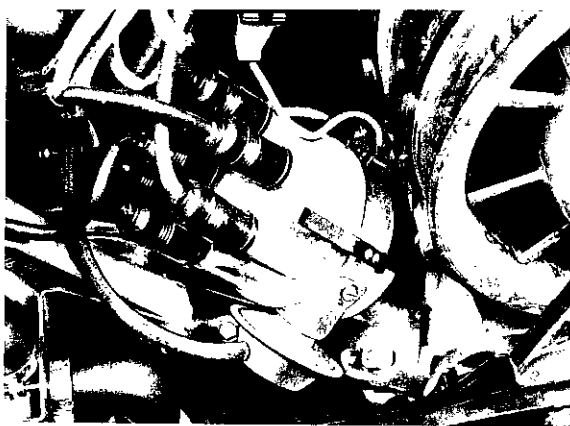

Loosen and turn distributor to correct ignition timing.

5. Connect vacuum hose.

Checking Ignition Timing Control from 1981 Models

Requirements:

Ignition timing adjusted to specifications.

1. Centrifugal control (vacuum hose detached).


Ignition timing should be 3 to 5° before TDC at
idle speed (900 ± 50 rpm).

At 6000 rpm ignition timing must not exceed
25° before TDC.


2. Vacuum control (vacuum hose connected).

At an engine speed of 4000 rpm ignition timing
should be between 28 and 32° before TDC.

CENTRIFUGAL ADVANCE CURVE TYPE 911 SC - from 1981 Models
BTDC

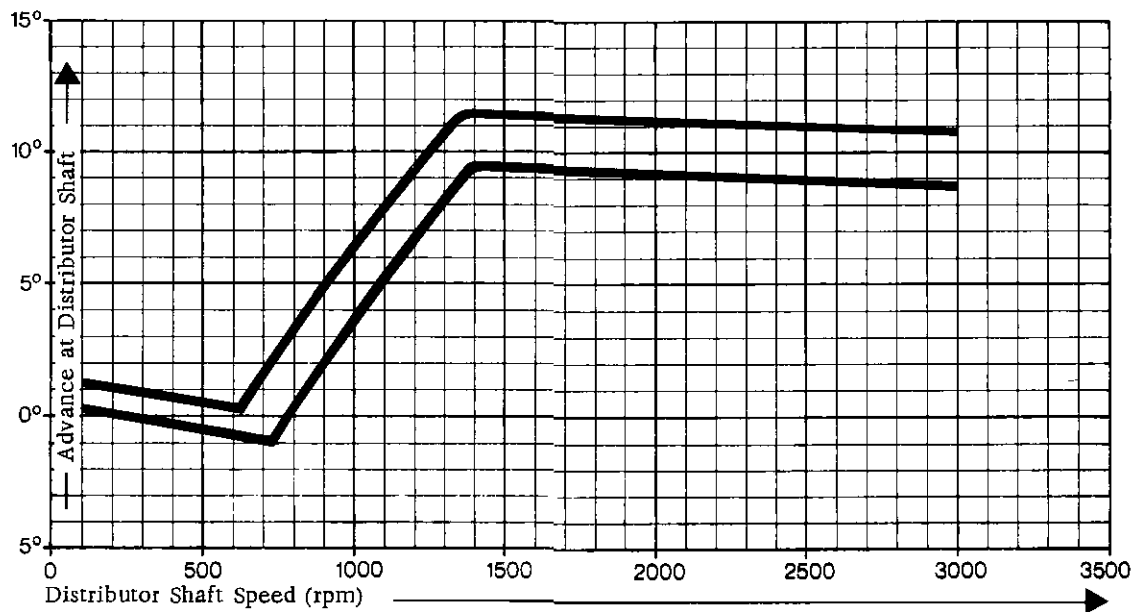

VACUUM ADVANCE CURVE TYPE 911 SC - from 1981 Models

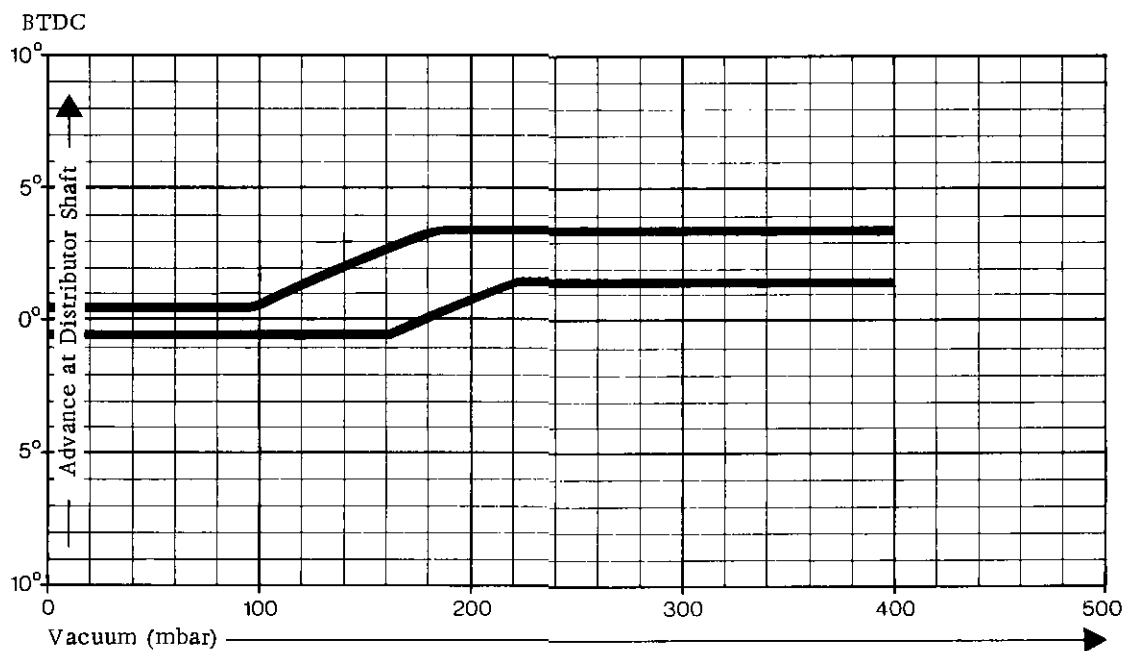

Wartungsarbeiten, Technische Daten
Maintenance, Specifications
Travaux d'entretien, Caractéristiques techniques
Lavori di manutenzione, dati tecnici

0

0

0

0

0

0

0

0

0

0

CONTENTS

0 - INFORMATION

0.0 Information

1 - TECHNICAL DATA

| | | |
|--------------------------------|--|------------|
| Specifications | - Engine | 1.1 - 1/1 |
| | - Fuel System | 1.1 - 1/5 |
| | - Electrical System | 1.1 - 1/6 |
| | - Transmission and Final Drive | 1.1 - 1/9 |
| | - Chassis | 1.1 - 1/11 |
| | - Capacities | 1.1 - 1/15 |
| | - Dimensions | 1.1 - 1/15 |
| | - Weights | 1.1 - 1/16 |
| | - Performance Data | 1.1 - 1/17 |
| | - Specification Changes, from 1973 model | 1.1 - 1/19 |
| | - Carrera 2.7 Specifications | 1.1 - 1/21 |
| Specifications for 1974 Models | - | 1.1 - 1/25 |
| | - Filling Capacities | 1.1 - 1/25 |
| | - Dimensions | 1.1 - 1/25 |
| | - Weights | 1.1 - 1/26 |
| | - Performance | 1.1 - 1/26 |
| Technical Data - 1981 Models | | 1.1 - 1/35 |

2 - MAINTENANCE

2.1 Service Schedule

| | |
|------------------|-----------|
| Service Schedule | 2.1 - 1/1 |
|------------------|-----------|

2.2 Lubrication Schedule

| | |
|----------------------|-----------|
| Lubrication Schedule | 2.2 - 1/1 |
|----------------------|-----------|

2.3 Service Schedule

| | |
|---------------------------------|-----------|
| Preventive Maintenance Schedule | 2.3 - 1/1 |
|---------------------------------|-----------|

TYPE 911 SPECIFICATIONS - BEGINNING WITH 1972 MODELS

| MOTOR | 911 T | 911 E | 911 S |
|--------------------------------------|---|---|---|
| Type | four-stroke gasoline engine with two opposing cylinder banks | | |
| Number of cylinders | 6 | 6 | 6 |
| Cylinder arrangement | horizontal, three cylinders per bank | horizontal, three cylinders per bank | horizontal, three cylinders per bank |
| Bore | 84 mm (3.31 in.) | 84 mm (3.31 in.) | 84 mm (3.31 in.) |
| Stroke | 70.4 mm (2.77 in.) | 70.4 mm (2.77 in.) | 70.4 mm (2.77 in.) |
| Engine displacement | 2341 cc (142.8 cu. in.) | 2341 cc (142.8 cu. in.) | 2341 cc (142.8 cu. in.) |
| Compression ratio | 7.5 : 1 | 8.0 : 1 | 8.5 : 1 |
| Cylinder pressure | maximum difference in compression between cylinders = 1.5 kp/cm ² (21.3 psi), with engine oil warmed to at least 60°C (140°F). | | |
| Horsepower rating (DIN) (SAE NET) | 140 HP 133 HP | 165 HP 157 HP | 190 HP 181 HP |
| at engine speed of | 5600 rpm | 6200 rpm | 6500 rpm |
| Maximum torque (DIN) (SAE) | 20 mkg 166 ft. lbs. | 21 mkg 174 ft. lbs. | 22 mkg 181 ft. lbs. |
| at engine speed of | 4000 rpm | 4500 rpm | 5200 rpm |
| Specific power output (DIN) | 60 HP/ltr 55 HP/ltr .93 HP/cu. in. | 70 HP/ltr 65 HP/ltr 1.09 HP/cu. in. | 81 HP/ltr 75 HP/ltr 1.26 HP/cu. in. |
| Maximum engine speed | 6500 rpm | 7100 rpm | 7300 rpm |

| | 911 T | 911 E | 911 S |
|---|--|--|--|
| Cut off speed of ignition distributor speed limiter | 6500 \pm 100 rpm | 7100 \pm 100 rpm | 7300 \pm 100 rpm |
| Fuel octane requirement | 91 | 91 | 91 |
| Engine weight | approx. 183 kp (404 lbs) | approx. 182 kp (402 lbs) | approx. 182 kp (402 lbs) |
| Nominal fuel consumption | 9.0 ltr/100 km 26.1 mpg | 9.5 ltr/100 km 24.7 mpg | 10.2 ltr/100 km 23.0 mpg |
| Cooling system | air cooled by axial fan on alternator shaft | air cooled by axial fan on alternator shaft | air cooled by axial fan on alternator shaft |
| Air fan drive | by V-belt off crankshaft | by V-belt off crankshaft | by V-belt off crankshaft |
| Crankshaft to fan ratio | approx. 1 : 1.3 | approx. 1 : 1.3 | approx. 1 : 1.3 |
| Air flow rate | approx. 1230 ltr/sec @ 5800 rpm | approx. 1380 ltr/sec @ 6500 rpm | approx. 1380 ltr/sec @ 6500 rpm |
| Lubrication system | dry sump | dry sump | dry sump |
| Oil cooling system | oil cooler on crankcase in air stream of fan | oil cooler on crankcase in air stream of fan | oil cooler on crankcase in air stream of fan plus auxiliary oil cooler in front of vehicle |
| Oil pressure indication | by warning light | by warning light | by gauge in kp/cm ² |
| Oil pressure: engine warm 80°C (175°F) at 5500 rpm | 5.5-7 kp/cm ² (78-99 psi) | 5.5-7 kp/cm ² (78-99 psi) | 5.5-7 kp/cm ² (78-99 psi) |
| Max. oil temperature | 130°C (265°F) | 130°C (265°F) | 130°C (265°F) |
| Oil filter type | full flow | full flow | full flow |

| | 911 T | 911 E | 911 S |
|-----------------------------|--|--|--|
| Oil consumption | 1 1/2 - 2 ltr/100 km 1 1/2 - 2 US qts/600 mi | 1 1/2 - 2 ltr/100 km 1 1/2 - 2 US qts/600 mi | 1 1/2 - 2 ltr/100 km 1 1/2 - 2 US qts/600 mi |
| Crankcase | two-piece pressure casting of aluminum/magnesium alloy | two-piece pressure casting of aluminum/magnesium alloy | two-piece pressure casting of aluminum/magnesium alloy |
| Crankshaft | forged, surface-hardened | forged, surface-hardened | forged, surface-hardened |
| Crankshaft bearings | eight, plain journal | eight, plain journal | eight, plain journal |
| Main bearings 1-7 | split shell, tri-metal inserts | split shell, tri-metal inserts | split shell, tri-metal inserts |
| Main bearing 1 | thrust bearing | thrust bearing | thrust bearing |
| Main bearing 8 | one-piece bushing, hard-lead lined | one-piece bushing, hard-lead lined | one-piece bushing, hard-lead lined |
| Connecting rods | forged steel | forged steel | forged steel surface-hardened |
| Connecting rod bearings | split shell, tri-metal inserts | split shell, tri-metal inserts | split shell, tri-metal inserts |
| Piston pin bushings | bronze, pressed-in | bronze, pressed-in | bronze, pressed-in |
| Intermediate shaft bearings | two, plain journal | two, plain journal | two, plain journal |
| Pistons | light-alloy, die-cast | light-alloy, die-cast | light-alloy, die-cast box-shaped |
| Piston pins | floating, secured with circlips | floating, secured with circlips | floating, secured with circlips |
| Piston rings | two compression rings, one oil scraper | two compression rings, one oil scraper | two compression rings, one oil scraper |

| | 911 T | 911 E | 911 S |
|--------------------|---|--|--|
| Cylinders | individual, grey-cast iron with integral cooling fins | individual, grey-cast iron sleeve with finned light alloy jacket | individual, grey-cast iron sleeve with finned light alloy jacket |
| Cylinder heads | light alloy, finned individual castings for each cylinder | light alloy, finned individual castings for each cylinder | light alloy (Y-alloy) finned individual castings for each cylinder |
| Valve seat inserts | shrunk-in, grey-cast iron alloy | shrunk-in, grey-cast iron alloy | shrunk-in, grey-cast iron alloy |
| Valve guides | shrunk-in, special bronze | shrunk-in, special bronze | shrunk-in, special bronze |
| Spark plug threads | 14 x 1.25, machined into cylinder heads | 14 x 1.25, machined into cylinder heads | 14 x 1.25, machined into cylinder heads |
| Valves | 1 intake and 1 exhaust valve per cylinder | 1 intake and 1 exhaust valve per cylinder | 1 intake and 1 exhaust valve per cylinder |
| Valve arrangement | overhead in "V" | overhead in "V" | overhead in "V" |
| Exhaust valves | sodium cooled, with reinforced seat | sodium cooled, with reinforced seat | sodium cooled, with reinforced seat |
| Valve springs | 2 coil springs per valve | 2 coil springs per valve | 2 coil springs per valve |
| Valve timing | OHC, 1 camshaft per cylinder bank | OHC, 1 camshaft per cylinder bank | OHC, 1 camshaft per cylinder bank |
| Camshafts | cast steel, in three plain journal bearings in camshaft housing | cast steel, in three plain journal bearings in camshaft housing | cast steel, in three plain journal bearings in camshaft housing |
| Camshaft drive | by chain | by chain | by chain |

| 911 T | 911 E | 911 S |
|-------|-------|-------|
|-------|-------|-------|

Valve timing with 1 mm
(0.039 in.) valve clearance

inlet opens
inlet closes
exhaust opens
exhaust closes

18° BTDC
36° ATDC
38° BTDC
8° ATDC

38° BTDC
50° ATDC
40° BTDC
20° ATDC

Intake valve lift at overlap TC with
0.1 mm (0.004 in.) valve clearance

2.3 - 2.7 mm (0.091 - 0.106 in.)

5.0 - 5.4 mm (0.197 - 0.213 in.)

Valve clearance, cold,
intake and exhaust

0.10 mm (0.004 in.) measured
between valve stem and rocker arm

0.10 mm (0.004 in.) measured
between valve stem and rocker arm

Clutch

single plate, dry, pull-actuated

single plate, dry, pull actuated

Pressure plate type

MFZ 225 KL, Fichtel & Sachs

MFZ 225 KL, Fichtel & Sachs

Plate pressure

650 - 720 kp (143 - 159 lbs.)

650 - 720 kp (143 - 159 lbs.)

FUEL SYSTEM

BOSCH intake manifold fuel injection
with double row six-plunger,
injection pump

BOSCH intake manifold fuel injection
with double row six-plunger,
injection pump

BOSCH intake manifold fuel injection
with double row six-plunger,
injection pump

Air cleaner

induction air silencer with cartridge
filter and induction air preheating
system

induction air silencer with cartridge
filter and induction air preheating
system

induction air silencer with cartridge
filter and induction air preheating
system

| | 911 T | 911 E | 911 S |
|--------------------------------|---|---|---|
| Fuel pump | 1 electric roll-cell pump | 1 electric roll-cell pump | 1 electric roll-cell pump |
| Transfer rate | 125 ltr/h (128 qts/h) | 125 ltr/h (128 qts/h) | 125 ltr/h (128 qts/h) |
| Operating pressure | 1 kp/cm ² (14.2 psi) | 1 kp/cm ² (14.2 psi) | 1 kp/cm ² (14.2 psi) |
| Pressure relief valve opens at | approx. 2 kp/cm ² (28.4 psi) | approx. 2 kp/cm ² (28.4 psi) | approx. 2 kp/cm ² (28.4 psi) |
| Fuel filter | fuel screen ahead of fuel injection pump with built-in restrictor valve | fuel screen ahead of fuel injection pump with built-in restrictor valve | fuel screen ahead of fuel injection pump with built-in restrictor valve |
| ELECTRICAL SYSTEM | | | |
| Operating voltage | 12 volts | 12 volts | 12 volts |
| Battery capacity | 2 x 36 Ah | 2 x 36 Ah | 2 x 36 Ah |
| Generator | AC, 770 watts | AC, 770 watts | AC, 770 watts |
| Voltage regulator | same make as generator | same make as generator | same make as generator |
| Ignition type | capacitive discharge system (CDS) | capacitive discharge system (CDS) | capacitive discharge system (CDS) |
| Firing order | 1 - 6 - 2 - 4 - 3 - 5 | 1 - 6 - 2 - 4 - 3 - 5 | 1 - 6 - 2 - 4 - 3 - 5 |
| Ignition transformer | BOSCH | BOSCH | BOSCH |
| Distributor (either kind) | MARELLI 50.10.974.1 BOSCH JFUDR6 0231169003 | MARELLI 50.10.974.2 BOSCH JFUDR6 0231169004 | MARELLI 50.10.974.3 BOSCH JFUDR6 0231169005 |
| Spark advance | centrifugal and vacuum | centrifugal and vacuum | centrifugal and vacuum |
| Basic ignition timing | 5° ATDC @ 900 rpm | 5° ATDC @ 900 rpm | 5° ATDC @ 900 rpm |
| Dwell angle | BOSCH 38° ± 3° MARELLI 40° ± 3° | BOSCH 38° ± 3° MARELLI 40° ± 3° | BOSCH 38° ± 3° MARELLI 40° ± 3° |

| | 911 T | 911 E | 911 S |
|--|--------------------------------|--|--|
| Spark plugs (either kind) | BOSCH W 265 P 21 or similar | BOSCH W 265 P 21 BERU 265/14/3 P or similar | BOSCH W 265 P 21 BERU 265/14/3 P or similar |
| Electrode gap | 0.5 - 0.6 mm | 0.5 - 0.6 mm | 0.5 - 0.6 mm |
| Starter | BOSCH 12 V, 1.5 HP | BOSCH 12 V, 1.5 HP | BOSCH 12 V, 1.5 HP |
| Bulb List (12 V) | | | |
| Headlamps (Halogen) H 1 | (see USA table) | 55 W, 2 each lamp | 55 W, 2 each lamp |
| Driving lamps (Halogen) H 1 and H 3 | (see USA table) | 55 W | 55 W |
| Fog lamps | 35 W | 55 W | 55 W |
| Stop lamp/tail lamp | (see USA table) | 21/5 W | 21/5 W |
| Directional signals | (see USA table) | 21 W | 21 W |
| Backup lamp | (see USA tabl e) | 15 W | 15 W |
| Fog tail lamp | (not for USA) | 18 W | 18 W |
| Interior lamp, luggage compart- met lamp, glove compartment lamp | 10 W | 10 W | 10 W |
| Parking lamp, license plate lamp | (see USA table) | 4 W | 4 W |
| Instrument lamps, control lamps, ashtray lamp | 2 W | 2 W | 2 W |
| Control lamp for ventilator and auxiliary heater | 1.2 W | 1.2 W | 1.2 W |

| Bulb List | 911 T | 911 E | 911 S |
|--|----------------|----------------|----------------|
| Sealed beam headlamps | 50/40 W (6012) | 50/40 W (6012) | 50/40 W (6012) |
| Fog lamps | 35 W | 35 W | 35 W |
| Stop/tail lamp | 32/3 cp (1034) | 32/3 cp (1034) | 32/3 cp (1034) |
| Front turn signal/parking lamps | 32/3 cp (1034) | 32/3 cp (1034) | 32/3 cp (1034) |
| Rear turn signal | 32 cp (1073) | 32 cp (1073) | 32 cp (1073) |
| Backup lamp | 15 cp (1003) | 15 cp (1003) | 15 cp (1003) |
| Sidemarkers lamp | 2 cp (1889) | 2 cp (1889) | 2 cp (1889) |
| Interior lamp, luggage compartment lamp, glove compartment lamp | 10 W | 10 W | 10 W |
| License plate lamp | 4 W | 4 W | 4 W |
| Instrument lamps, control lamps, ashtray lamp | 2 W | 2 W | 2 W |
| Control lamp for ventilator and auxiliary heater | 1.2 W | 1.2 W | 1.2 W |
| Fuses | | | |
| Fuse Box I | | | |
| 1 - Interior lamp, luggage compartment lamp, glove compartment lamp, clock | 5 A | 5 A | 5 A |
| 2 - Emergency flasher | 16 A | 16 A | 16 A |
| 3 - Power windows | 25 A | 25 A | 25 A |
| 4 - Cigarette lighter (auxiliary heater) | 16 A (25 A) | 16 A (25 A) | 16 A (25 A) |
| 5 - Sun roof, rear window wiper | 16 A | 16 A | 16 A |
| 6 - Windshield wipers, windshield washer | 25 A | 25 A | 25 A |
| 7 - Fresh air fan, rear window defroster | 25 A | 25 A | 25 A |

| | 911 T | 911 E | 911 S |
|--|---|---|---|
| 8 - Stop, rear turn signal, and backup lamps | 16 A | 16 A | 16 A |
| 9 - Left front turn signal lamp | 5 A | 5 A | 5 A |
| 10 - Right front turn signal lamp | 5 A | 5 A | 5 A |
| Fuse Box II | | | |
| 1 - High beam, left | 8 A | 8 A | 8 A |
| 2 - High beam, right | 8 A | 8 A | 8 A |
| 3 - Low beam, left | 8 A | 8 A | 8 A |
| 4 - Low beam, right | 8 A | 8 A | 8 A |
| 5 - Parking lamp, left | 5 A | 5 A | 5 A |
| 6 - Parking lamp, right | 5 A | 5 A | 5 A |
| 7 - License plate lamp | 5 A | 5 A | 5 A |
| 8 - Fog lamp | 16 A | 16 A | 16 A |
| TRANSMISSION AND FINAL DRIVE | | | |
| Type | Transmission and differential unitized in one assembly | Transmission and differential unitized in one assembly | Transmission and differential unitized in one assembly |
| Transmission | 4 forward speeds, one reverse, with Porsche synchronization (5 speeds optional) | 4 forward speeds, one reverse, with Porsche synchronization (5 speeds optional) | 4 forward speeds, one reverse, with Porsche synchronization (5 speeds optional) |

| | 911 T | 911 E | 911 S |
|-----------------------------|---|---|---|
| Gear ratio, reverse speed | 3.325 : 1 | 3.325 : 1 | 3.325 : 1 |
| Gear shift system | shift linkage with floor mounted gearshift lever | shift linkage with floor mounted gearshift lever | shift linkage with floor mounted gearshift lever |
| Rear axle drive | spiral bevel gears, differential unit | spiral bevel gears, differential unit | spiral bevel gears, differential unit |
| Rear axle ratio | 7/31, 4.429 : 1 | 7/31, 4.429 : 1 | 7/31, 4.429 : 1 |
| Power transfer | to rear wheels by drive shafts with two CV joints per shaft | to rear wheels by drive shafts with two CV joints per shaft | to rear wheels by drive shafts with two CV joints per shaft |
| Gearbox weight | approx. 49 kp (108 lbs), ready for installation including oil supply but without starter. | approx. 49 kp (108 lbs), ready for installation including oil supply but without starter. | approx. 49 kp (108 lbs), ready for installation including oil supply but without starter. |
| Limited slip differential | ZF limited slip differential optional with manual transmissions | ZF limited slip differential optional with manual transmissions | ZF limited slip differential optional with manual transmissions |
| Automatic Transmission Type | 925/00 | 925/00 | 925/01 |
| Clutch (190 mm dia) | hydraulic torque converter and vacuum actuated single plate, dry clutch MFZ 190K | hydraulic torque converter and vacuum actuated single plate, dry clutch MFZ 190K | hydraulic torque converter and vacuum actuated single plate, dry clutch MFZ 190K |
| Number of gears | 4 forward, 1 reverse, and parking lock | 4 forward, 1 reverse, and parking lock | 4 forward, 1 reverse, and parking lock |
| Selector lever location | floor mounted on center tunnel | floor mounted on center tunnel | floor mounted on center tunnel |
| Torque converter ratio | 2.19 : 1 | 2.19 : 1 | 2.10 : 1 |
| Rear axle ratio | 7/27, 3.857 : 1 | 7/27, 3.857 : 1 | 7/27, 3.857 : 1 |

| | 911 T | 911 E | 911 S |
|--|--|--|--|
| Tow-start speed in "L" | | | |
| Stallspeed | 35 kmh (21 mph) | 35 kmh (21 mph) | 35 kmh (21 mph) |
| Clutch speed | approx. 2500 - 2700 rpm approx. 3000 rpm | approx. 2500 - 2700 rpm approx. 3000 rpm | approx. 2900 - 3100 rpm approx. 3000 rpm |
| CHASSIS | | | |
| Body characteristics | welded assembly, sheet metal box section, unitized with body | welded assembly, sheet metal box section, unitized with body | welded assembly, sheet metal box section, unitized with body |
| Wheel suspension, front | independent, with shockabsorber struts and transverse control arms | independent, with shockabsorber struts and transverse control arms | independent, with shockabsorber struts and transverse control arms |
| rear | independent, with triangulated control arms | independent, with triangulated control arms | independent, with triangulated control arms |
| Springing, front | 1 round longitudinal torsion bar per wheel | 1 round longitudinal torsion bar per wheel | 1 round longitudinal torsion bar per wheel |
| rear | 1 round transverse torsion bar per wheel | 1 round transverse torsion bar per wheel | 1 round transverse torsion bar per wheel |
| Rear control arm adjustment (spring plate inclination) | 36° 30' to 37° | 36° 30' to 37° | 36° 30' to 37° |

| | 911 T | 911 E | 911 S |
|--|--|--|--|
| Shock absorbers | | | |
| front | double-action hydraulic shock absorber strub | double-action hydraulic shock absorber strub | double-action hydraulic shock absorber strub |
| rear | double-action hydraulic shock absorber | double-action hydraulic shock absorber | double-action hydraulic shock absorber |
| Stabilizers | | | transverse, 15 mm (0, 59 in.) dia |
| Steering | rack-steering ZF | rack-steering ZF | rack-steering ZF |
| Mean steering ratio | 17, 78 : 1 | 17, 78 : 1 | 17, 78 : 1 |
| Steering wheel turns, lock-to-lock | approx. 3, 1 | approx. 3, 1 | approx. 3, 1 |
| Smallest turning circle | approx. 10, 7 m (35, 1 ft.) | approx. 10, 7 m (35, 1 ft.) | approx. 10, 7 m (35, 1 ft.) |
| Toe-in. | | | |
| front | $\pm 0^\circ$ | $\pm 0^\circ$ | $\pm 0^\circ$ |
| rear | 0° to $+ 20^\circ$ per wheel | 0° to $+ 20^\circ$ per wheel | 0° to $+ 20^\circ$ per wheel |
| Chamber | | | |
| front | $0^\circ \pm 10^\circ$ | $0^\circ \pm 10^\circ$ | $0^\circ \pm 10^\circ$ |
| rear | $- 1^\circ \pm 10^\circ$ | $- 1^\circ \pm 10^\circ$ | $- 1^\circ \pm 10^\circ$ |
| Caster | $6^\circ 5' \pm 15'$ | $6^\circ 5' \pm 15'$ | $6^\circ 5' \pm 15'$ |
| Inclination | $10^\circ 55'$ | $10^\circ 55'$ | $10^\circ 55'$ |
| Difference angle, front wheels turned 20° | 0 to 30° | 0 to 30° | 0 to 30° |

| | 911 T | 911 E | 911 S |
|---|--|--|--|
| Wheels | steel, 5 1/2J x 15, optional 6J x 15 steel or light alloy | steel, 6J x 15 or optional light alloy | 6J x 15 light-alloy |
| Tires | 165 HR 15 | 185/70 VR 15 | 185/70 VR 15 |
| Tire pressures (cold) | | | |
| front | 2.0 atm (29 psi) | 2.0 atm (29 psi) | 2.0 atm (29 psi) |
| rear | 2.4 atm (35 psi) | 2.4 atm (35 psi) | 2.4 atm (35 psi) |
| Service brake | hydraulic, dual-circuit, vented - disc brakes on all four wheels | hydraulic, dual-circuit, vented - disc brakes on all four wheels | hydraulic, dual-circuit, vented - disc brakes on all four wheels |
| Total effective braking surface (foot brake) | 210 cm ² (32.55 sq.in.) | 210 cm ² (32.55 sq.in.) | 257 cm ² (39.84 sq.in.) |
| Effective brake disc diameter | front 235 mm (9.25 in.) rear 244 mm (9.61 in.) | front 235 mm (9.25 in.) rear 244 mm (9.61 in.) | front 228 mm (8.98 in.) rear 244 mm (9.61 in.) |
| Parking brake | mechanical, to rear wheels | mechanical, to rear wheels | mechanical, to rear wheels |
| BODY | | | |
| Type | all-steel body, unitized with under- body, sloping front, fastback rear in Coupe | all-steel body, unitized with under- body, sloping front, fastback rear in Coupe | all-steel body, unitized with under- body, sloping front, fastback rear in Coupe |
| Doors | 2 doors attached to the body A-pillars | 2 doors attached to the body A-pillars | 2 doors attached to the body A-pillars |

| | 911 T. | 911 E | 911 S |
|------------------------|---|---|---|
| Door opening angle | approx. 70° | approx. 70° | approx. 70° |
| Windows | | | |
| Windshield | one-piece, constant radius, convex contour, laminated safety glass | one-piece, constant radius, convex contour, laminated safety glass | one-piece, constant radius, convex contour, laminated safety glass |
| Door windows | crankdown windows | crankdown windows | crankdown windows |
| Rear side windows | open and lock in position | open and lock in position | open and lock in position |
| Rear window | one-piece, convex contour, electrically heated | one-piece, convex contour, electrically heated | one-piece, convex contour, electrically heated |
| Windshield wipers | electric, 2 parallel wiping arms, 3 speeds | electric, 2 parallel wiping arms, 3 speeds | electric, 2 parallel wiping arms, 3 speeds |
| Front hood | opens from front of vehicle, with hydraulic stays, hood release under instrument panel | opens from front of vehicle, with hydraulic stays, hood release under instrument panel | opens from front of vehicle, with hydraulic stays, hood release under instrument panel |
| Engine compartment lid | opens from rear of vehicle, with hydraulic stays, lid release in left rear door post | opens from rear of vehicle, with hydraulic stays, lid release in left rear door post | opens from rear of vehicle, with hydraulic stays, lid release in left rear door post |
| Heating | hot air heating with remote control; hot air mixable with outside air; 2 defroster outlets at the windshield, and 2 hot air outlets into passenger compartment leg area | hot air heating with remote control; hot air mixable with outside air; 2 defroster outlets at the windshield, and 2 hot air outlets into passenger compartment leg area | hot air heating with remote control; hot air mixable with outside air; 2 defroster outlets at the windshield, and 2 hot air outlets into passenger compartment leg area |

911 T

911 E

911 S

Ventilation

flap-controlled fresh air chamber,
3-speed fan, air distributor system,
centralized control unit

flap-controlled fresh air chamber,
3-speed fan, air distributor system,
centralized control unit

flap-controlled fresh air chamber,
3-speed fan, air distributor system,
centralized control unit

CAPACITIES

Engine

approx. 8 ltr (8.5 US qts) premium
quality HD oil according to API classi-
fication SD or SE; summer SAE 30,
winter SAE 20, below -15°C (+5°F)
SAE 10 W

approx. 8 ltr (8.5 US qts) premium
quality HD oil according to API classi-
fication SD or SE; summer SAE 30,
winter SAE 20, below -15°C (+5°F)
SAE 10 W

approx. 8 ltr (8.5 US qts) premium
quality HD oil according to API classi-
fication SD or SE; summer SAE 30,
winter SAE 20, below -15°C (+5°F)
SAE 10 W
first filling approx. 9 ltr (9.5 US qts)
with oil cooler

Engine together with Sportomatic
(torque converter in engine oil
circuit)

approx. 10 ltr (10.5 US qts)

approx. 11 ltr (11.5 US qts)
with oil cooler

Transmission and differential

approx. 3.0 ltr (3 US qts) SAE 30 trans-
mission oil, specification MIL-L 2105
or MIL-L 2105 B

approx. 3.0 ltr (3 US qts) SAE 30 trans-
mission oil, specification MIL-L 2105
or MIL-L 2105 B

Fuel tank

approx. 62 ltrs (16.4 US gals) including
6 ltrs (1.6 US gals) reserve
Fuel requirement: 91 octane (RON)

approx. 62 ltrs (16.4 US gals) including
6 ltrs (1.6 US gals) reserve
Fuel requirement: 91 octane (RON)

Brake fluid reservoir

approx. 0.2 ltr (0.42 US pints)

approx. 0.2 ltr (0.42 US pints)

Windshield washer reservoir

approx. 2.0 ltr (2 US qts)

approx. 2.0 ltr (2 US qts)

DIMENSIONS

Vehicle empty according to DIN

Wheelbase

2271 mm (89.4 in.)

2271 mm (89.4 in.)

Track, front (wheel center 108 mm
above torsion bar center)

1360 mm (53.54 in.)

1372 mm (54.0 in.)

Track, rear (wheel center 12 mm
below transverse tube center)

1342 mm (52.82 in.)

1354 mm (53.34 in.)

| | 911 T | 911 E | 911 S |
|---|---------------------|---------------------|---------------------|
| Length, USA and Canada only | 4163 mm (163.9 in.) | 4163 mm (163.9 in.) | 4163 mm (163.9 in.) |
| Width | 1610 mm (63.39 in.) | 1610 mm (63.39 in.) | 1610 mm (63.39 in.) |
| Height (unladen) | 1320 mm (51.97 in.) | 1320 mm (51.97 in.) | 1320 mm (51.93 in.) |
| Ground clearance | 150 mm (5.91 in.) | 150 mm (5.91 in.) | 150 mm (5.91 in.) |
| WEIGHTS | | | |
| Unladen weight | 1061 kp (2340 lbs) | 1061 kp (2340 lbs) | 1061 kp (2340 lbs) |
| Maximum load capacity | 280 kp (617 lbs) | 280 kp (617 lbs) | 280 kp (617 lbs) |
| Total permissible weight | 1400 kp (3086 lbs) | 1400 kp (3086 lbs) | 1400 kp (3086 lbs) |
| Maximum axle load, front | 600 kp (1320 lbs) | 600 kp (1320 lbs) | 600 kp (1320 lbs) |
| rear | 840 kp (1852 lbs) | 840 kp (1852 lbs) | 840 kp (1852 lbs) |
| Permissible trailer weight, without brakes | 480 kp (1058 lbs) | 480 kp (1058 lbs) | 480 kp (1058 lbs) |
| with brakes | 600 kp (1320 lbs) | 600 kp (1320 lbs) | 600 kp (1320 lbs) |

| | 911 T | 911 E | 911 S |
|---|---|--|--|
| PERFORMANCE DATA | | | |
| Max. speed (with 4 or 5 speed transmission) | 208 kmh 129 mph | 220 kmh 137 mph | 230 kmh 143 mph |
| 1 km with standing start at DIN empty weight + 1/2 loading capacity | with Sportomatic transmission ca. 5 kmh (3 mph) slower than shown above | | |
| Weight-to-power ratio DIN | 30.0 sec | 28.5 sec | 27.5 sec |
| Nominal fuel consumption | 7.5 kp/HP 9.0 ltr/100 km 26.1 mpg(US) | 6.37 kp/HP 9.5 ltr/100 km 24.7 mpg (US) | 5.52 kp/HP 10.2 ltr/100 km 23.0 mpg (US) |
| Engine oil consumption | 1.5 - 2.0 ltr (1.5 - 2.0 US qts per 600 miles) | 1.5 - 2.0 ltr (1.5 - 2.0 US qts per 600 miles) | 1.5 - 2.0 ltr (1.5 - 2.0 US qts per 600 miles) |

SPECIFICATION CHANGES EFFECTIVE WITH 1973 MODELS

| | 911 T | 911 E | 911 S |
|---|--|-------|--|
| CAPACITIES | | | |
| (Initial filling) | | | |
| Engine with transmission | Approx. 2.77 US gals. (10.5 ltr.) quality brand HD oil, API classification SD or SE, summer SAE 30, winter SAE 20, below + 5° F (-15° C). SAE 10 W | | Initial filling approx. 3.43 US gals. (13 ltr.) with oil cooler. |
| Engine together with Sportomatic (torque converter in engine oil circuit) | Approx. 3.43 US gals. (13 ltr.) | | Approx. 4.09 US gals. (15.5 ltr.) with oil cooler. |
| Fuel tank | 16.4 US gals. (62 ltr.) 1.6 US gals. (6 ltr.) reserve included | | |
| DIMENSIONS | | | |
| Vehicle empty = DIN | | | |
| Wheelbase | 4277 mm (168.39") (Bumpers front and rear) | | |
| WEIGHTS | | | |
| Empty weight, DIN | 2425 lbs. (1100 kg) | | |

CARRERA 2.7 SPECIFICATIONS

Shown below are specifications which differ from Type 911 S/2.4

| ENGINE | | TOURING | SPORT |
|------------------------------------|--------------------|---|----------------|
| Bore | mm | 90 | 90 |
| Stroke | mm | 70.4 | 70.4 |
| Displacement | cc | 2687 | 2687 |
| Compression ratio | ε | 8.5 : 1 | 8.5 : 1 |
| Compression pressure | kp/cm ² | max. difference between cylinders = 1.5 kp/cm ² , engine oil temp = 60°C (140°F) minimum | |
| Horsepower rating (DIN) | HP (KW) | 210 (154) | 210 (154) |
| Horsepower rating (SAE) | HP (KW) | 230 (172) | 230 (172) |
| at engine speed of | rpm | 6300 | 6300 |
| Max. torque | mkg (Nm) | 26 (255) | 26 (255) |
| at engine speed of | rpm | 5100 | 5100 |
| Specific power output (DIN) | HP/ltr (KW/ltr) | 78 (57) | 78 (57) |
| Mean piston speed at maximum power | m/sec | 14.8 | 14.8 |
| Mean pressure at Md. max. | kp/cm ² | 12.19 | 12.19 |
| Max. permissible engine speed | rpm | 7300 | 7300 |
| Fuel octane requirements | RON | 91 | 91 |
| Pistons | | light-alloy, forged | |
| Cylinders | | light-alloy cylinders with Ni coating | |
| Clutch | Type | MFZ 225 KL | MFZ 225 KL |
| Clutch pressure | kp | 720 - 780 | 720 - 780 |
| Fuel System | | | |
| Injection pump | BOSCH # | 0408126019 | 0408126019 |
| | PORSCHE # | 911.110.254.00 | 911.110.254.00 |

| | | TOURING | SPORT |
|-----------------------------------|--------------------------|----------------------------|----------------------------|
| ELECTRICAL SYSTEM | | | |
| Operating voltage | V | 12 | 12 |
| Battery capacity | Ah | 2 x 36 | 1 x 36 |
| Ignition distributor | BOSCH | 0231169011 | 0231169011 |
| (either brand) | MARELLI | 61015155 | 61015155 |
| Breaker point gap | mm | 0.35 | 0.35 |
| (BOSCH and MARELLI) | | | |
| Dwell angle | BOSCH | $38^{\circ} \pm 3^{\circ}$ | $38^{\circ} \pm 3^{\circ}$ |
| | MARELLI | $37^{\circ} \pm 3^{\circ}$ | $37^{\circ} \pm 3^{\circ}$ |
| Basic ignition timing | | TDC at 900 rpm | TDC at 900 rpm |
| (vacuum hose attached) | | | |
| Spark plugs | BOSCH | W 265 P 21 (0.55) | W 265 P 21 (0.55) |
| (gap in mm) | BOSCH | W 260 T 2 (0.7) | W 260 T 2 (0.7) |
| | BERU | 265/14/3P (0.55) | 265/14/3P (0.55) |
| | BERU | 260/14/3 (0.7) | 260/14/3 (0.7) |
| TRANSMISSION AND DIFFERENTIAL | | | |
| Ratios, 5-speed transmission | 1st gear | 11/35 = 3.182 | 11/35 = 3.182 |
| | 2nd gear | 18/33 = 1.834 | 18/33 = 1.834 |
| | 3rd gear | 23/29 = 1.261 | 23/29 = 1.261 |
| | 4th gear | 27/25 = 0.925 | 27/25 = 0.925 |
| | 5th gear | 29/21 = 0.724 | 29/21 = 0.724 |
| | Reverse | 12/21 = 3.325 | 12/21 = 3.325 |
| | | 20/38 | 20/38 |
| Rear axle ratio | | 7 : 31 = 4.429 | 7 : 31 = 4.429 |
| Climbing ability (calculated) | | | |
| 5-speed transmission, | 1st gear | 100 % | 100 % |
| vehicle empty per DIN plus | 2nd gear | 52.5 % | 55 % |
| 1/2 load | 3rd gear | 30.5 % | 32 % |
| | 4th gear | 20 % | 21 % |
| | 5th gear | 12.5 % | 13 % |
| CHASSIS | | | |
| Stabilizer, front/rear | mm dia. | 18/19 or 15/15 | 18/19 or 15/15 |
| Wheels, front, forged light-alloy | | 6 J x 15 | 6 J x 15 |
| rear, forged light-alloy | | 7 J x 15 | 7 J x 15 |
| Tires, front | | 185/70 VR 15 | 185/70 VR 15 |
| rear | | 215/60 VR 15 | 215/60 VR 15 |
| Tire pressure, front/rear | kp/cm ² (bar) | 2.0/2.0 (1.96/1.96) | 2.0/2.0 (1.96/1.96) |
| Spare tire, Collapsible | | 5 1/2 J x 15 steel | 6 J x 15 light-alloy |
| Torsion bar adjustment | | 36° 30' | 33° |

| | | TOURING | SPORT |
|--|----------------------|----------------------------------|----------------------------------|
| DIMENSIONS WHEN EMPTY PER DIN | | | |
| Track, front | mm | 1372 | 1372 |
| Track, rear, with 7 mm spacer on each wheel | mm | 1394 | 1394 |
| Wheel center above center of front torsion bar | mm | 108 | 118 |
| Wheel center below center of rear transverse tube | mm | 12 | 2 |
| Overall width | mm | 1652 | 1652 |
| WEIGHTS | | | |
| Engine weight | kg (lbs) | 182 (402) | 182 (402) |
| Empty, per DIN | kg | 1075 | 960 |
| Total permissible weight | kg | 1400 | 1400 |
| Permissible axle load, front | kg | 600 | 600 |
| rear | kg | 840 | 840 |
| Power/weight ratio | kg/HP (kg/KW) | 5.1 (7.0) | 4.55 (6.2) |
| PERFORMANCE DATA | | | |
| Max. speed | kmh (mph) | 240 (149) | 245 (153) |
| Acceleration, 0 - 100 km (0-62 mph) empty per DIN + 1/2 load | sec | 6.3 | 5.8 |
| Standing kilometer empty per DIN + 1/2 load | sec | 26.5 | 25.5 |
| Nominal fuel consumption | ltr./100 km | 10.8 | 10.8 |
| FILLING CAPACITIES | | | |
| Engine (initial filling) | | | |
| Dipstick min/max | ltr. (US quarts) | 11/13 (12/13) | 11/13 (12/13) |
| Oil change quantity | ca. ltr. (US quarts) | 10 (10) | 10 (10) |
| Transaxle (*) | ca. ltr. (US pints) | 3 (6.3) | 3 (6.3) |
| Fuel tank | ltr. (US gal.) | 85 less 9 reserve (22 less 2) | 85 less 9 reserve (22 less 2) |
| (*) EP oil Mil-L 2105 or 2105 B Limited-slip differential: Kendall 80/90 M 2 C 119 A or equivalent. | | | |

SPECIFICATIONS FOR 1974 MODELS

| | 911 | 911 S | Carrera |
|---|--|-------------|---|
| FILLING CAPACITIES | | | |
| Engine (initial filling) (applies to dipstick check according to owner's manual) | approx. 11 ltr. (11.6 US gts) premium brand HD oil, API classi- fication SD or SE; summer SAE 30, winter SAE 20, below -15° C SAE 10 W | same as 911 | approx. 13 ltr. (13.7 US gts) with oil cooler |
| Engine with Sportomatic transmission | approx. 2 ltr. (2.1 US gts) more | same as 911 | same as 911 |
| Transmission and differential | approx. 3 ltr. (3.2 US gts) per MIL- L-2105 or MIL-L-2105B, SAE 90 | same as 911 | same as 911 |
| Sportomatic transmission | approx. 2.5 ltr. (2.6 US gts) | same as 911 | same as 911 |
| Fuel tank | 80 ltr. (22 US gal.) less 8 ltr. (2 US gal.) reserve | same as 911 | same as 911 |
| Brake fluid reservoir | approx. 0.2 ltr. (0.4 US pt) | same as 911 | same as 911 |
| Windshield washer reservoir | approx. 8.5 ltr. (9 US gts) | same as 911 | same as 911 |
| DIMENSIONS PER DIN EMPTY WEIGHT | | | |
| Wheelbase | 2271 mm | same as 911 | same as 911 |
| Length | 4291 mm | same as 911 | same as 911 |
| Width | 1610 mm | same as 911 | same as 911 |
| Height | 1320 mm | same as 911 | same as 911 |
| Ground clearance | 150 mm | same as 911 | same as 911 |

| | 911 | 911 S | Carrera |
|--|--|---------------------------------------|---------------------------------------|
| WEIGHTS | | | |
| Empty weight, per DIN | 1075 kg | same as 911 | same as 911 |
| with Sportomatic transmission | 1090 kg | same as 911 | same as 911 |
| Max. permissible weight | 1400 kg | same as 911 | same as 911 |
| Permissible axle load, | | | |
| front | 600 kg | same as 911 | same as 911 |
| rear | 840 kg | same as 911 | same as 911 |
| Trailer weight, | | | |
| w/o brakes | 480 kg | same as 911 | same as 911 |
| with brakes | 800 kg | same as 911 | same as 911 |
| PERFORMANCE | | | |
| Max. speed kmh (mph) (with 4-speed or 5-speed transmission) | 210 (125) | 225 (137) | 240 (149) |
| with Sportomatic | approx. 5 kmh (3 mph) less | same as 911 | same as 911 |
| Acceleration, 0 - 100 kmh (0 - 62 mph) per DIN empty weight + 1/2 load | 8.5 sec. | 7.6 sec. | 6.3 sec. |
| Standing kilometer (per DIN empty weight + 1/2 load) | 29.0 sec. | 28.0 sec. | 26.5 sec. |
| Specific power output (per DIN 70020 empty weight) | 7.2 kg/HP 9.8 kg/KW | 6.1 kg/HP 8.3 kg/KW | 5.2 kg/HP 5.5 kg/KW |
| Fuel consumption (average consumption in highway traffic, incl. maximum speed travel) | 14 ltr/100 km (17 mi. per US gal.) | 15 ltr/100 km (16 mi. per US gal.) | 18 ltr/100 km (13 mi. per US gal.) |
| Oil consumption | approx. 1.5 ltr/1000 km (2.5 US gts/1000 mi.) | same as 911 | same as 911 |

TECHNICAL DATA 1975 MODELS

| | 911 S | Carrera |
|---|--|---------------|
| CAPACITIES | | |
| Engine (initial filling) (Measurement with dipstick according to operating instructions applies) | Approx. 13 liters (13, 8 US gt) of brand name HD oils of API classification SD or SE; SAE 30 for summer, SAE 20 for winter, SAE 10 W below -15° C (+ 5° F) | same as 911 S |
| Engine with sportomatic | Approx. 2 liters (2.1 US gt) more | same as 911 S |
| Transmission with differential | Approx. 3 liters (3.2 US gt) according to MIL-L-2105 or MIL-L 2105 B SAE 90 | same as 911 S |
| Sportomatic transmission | Approx. 2.5 liters (2.65 US gt) | same as 911 S |
| Fuel tank | 80 liters (21 US gal.) including 8 liters (2.1 US gal.) in reserve | same as 911 S |
| Brake fluid reservoir | Approx. 0.2 liters (0.21 US gt) | same as 911 S |
| Windshield washer reservoir | Approx. 8.5 liters (2.2 US gal.) | same as 911 S |
| DIMENSIONS AT CURB WEIGHT ACCORDING TO DIN | | |
| Wheelbase | 2271 mm (89.4 in.) | same as 911 S |
| Length | 4291 mm (168.9 in.) | same as 911 S |
| Width | 1610 mm (63.3 in.) | 1652 mm |
| Height | 1320 mm (51.9 in.) | same as 911 S |
| Ground clearance | 180 mm (7.1 in.) | same as 911 S |
| Ground clearance at full load | 140 mm (5.5 in.) | same as 911 S |

| | 911 S | Carrera |
|--|--|---------------|
| WEIGHTS | | |
| Curb weight according to DIN | 1160 kg (2552 lb) | same as 911 S |
| with sportomatic transmission | 1160 kg (2552 lb) | same as 911 S |
| Max. total weight | 1400 kg (3086 lb) | same as 911 S |
| Max. axle load, front | 600 kg (1323 lb) | same as 911 S |
| rear | 840 kg (1852 lb) | same as 911 S |
| Trailer load, without brakes ** | 480 kg (1058 lb) | same as 911 S |
| with brakes ** | 800 kg (1763 lb) | same as 911 S |
| Max. roof load * (coupe only) | 35 kg (77 lb) | same as 911 S |
| PERFORMANCE | | |
| Top speed (with 4 or 5 speed transmission) | 134 mph | same as 911 S |
| with sportomatic | About 3 mph slower | same as 911 S |
| Acceleration from 0 to 62 mph at DIN curb weight plus 1/2 payload | 8.4 seconds | same as 911 S |
| Kilometer from standing start (DIN curb weight plus 1/2 payload) | 29.0 seconds | same as 911 S |
| Weight/power ratio (curb weight DIN 70020) | 6.7 kg (14.7 lb)/HP | same as 911 S |
| | 9.0 kg (19.8 lb)/KW | same as 911 S |
| Fuel consumption (average consumption on highways and country roads) | 13-15 l/100 km (13.7-16 US gt/62 mi.) | same as 911 S |
| Oil consumption | Approx. 1.5 l/1.6 US gt 1000 km/620 mi. | same as 911 S |

* Never exceed max. total weight.

** Grades up to 16 %.

Note

Installation of extra equipment (air conditioner etc.) reduces payload.

TECHNICAL DATA - 1976/1977 Models

911 S

Capacities

| | |
|---|--|
| Engine (initial filling) | approx. 13 ltr. (13.75 US qt) of brand name HD oil per API Classifications SD or SE; summer SAE 30, winter SAE 20, below - 15 ^o C/+ 5 ^o F SAE 10 W |
| (measured with oil dipstick per operating instructions) | |
| Engine with Sportomatic | approx. 2 ltr. (2.1 US qt) more |
| Transmission and differential | approx. 3 ltr. (3.2 US qt) per MIL-L 2105 or MIL-L 2105 B, SAE 90; for locking differential gear lube per M2C28B, SAE 90 |
| Sportomatic transmission | approx. 2.5 ltr. (2.6 US qt) |
| Fuel tank | 80 ltr. (21.1 US gal.), of which 8 ltr. (2.1 US gal.) in reserve |
| Brake fluid reservoir | approx. 0.2 ltr. (6.75 fl oz) |
| Windshield washer tank | approx. 8.5 ltr. (2.2 US gal.) |

Dimensions at DIN Curb Weight

| | | |
|---------------------------------------|---------|-------------|
| Wheelbase | mm/inch | 2272/89.45 |
| Length | mm/inch | 4291/168.94 |
| Width | mm/inch | 1610/63.39 |
| Height | mm/inch | 1340/52.76 |
| Ground clearance | mm/inch | 175/6.89 |
| Ground clearance at max. total weight | mm/inch | 143/5.63 |

911 S

Weight

| | | |
|------------------------------|-------|-----------|
| Curb weight per DIN | kg/lb | 1160/2552 |
| Max. total weight | kg/lb | 1400/3086 |
| Max. axle load, front | kg/lb | 600/1323 |
| rear | kg/lb | 840/1852 |
| Max. roof load *(only coupe) | kg/lb | 35/77 |

Performance

| | | |
|--|--------------------------------|----------------------|
| Max. speed (with 5 speed transm.) | km/h/mpg | above 220/136.7 |
| With Sportomatic | km/h/mpg | 215/133.6 |
| Acceleration 0 - 100 km/h at DIN curb weight + 1/2 payload | sec. | 7.8 |
| Kilometer from standing start (DIN curb weight + 1/2 payload) | sec. | 29.0 |
| Weight-to-power | kg/HP | 6.8 |
| (curb weight DIN 70020) | kg/kW | 9.24 |
| Fuel consumption (average value, highways and country roads) | ltr/100 km miles/US gal. | 13 - 15 15.6 - 18 |
| Oil consumption | ltr/1000 km (US qt/620 mi.) | approx. 1.5 |

* Max. total weight must not be exceeded.

CAUTION

Installation of extra equipment (air conditioner, etc.)
reduces the payload.

TECHNICAL DATA - 1978/1979 Models

911 SC

Capacities

| | |
|--|---|
| Engine (initial filling) | approx. 13 ltr. /13.75 US qt of brand name HD per API Classification SD or SE; summer SAE 30, winter SAE 20, below - 15 ⁰ C (+ 5 ⁰ F) SAE 10 W |
| (measured with oil dipstick per operating instructions) | |
| Transmission and differential | approx. 3 ltr. /3.2 US qt per MIL-L 2105 or MIL-L 2105 B, SAE 90; with locking differential gear lube per M2C28B, SAE 90 |
| Fuel tank | 80 ltr. /21.1 US gal., of which 8 ltr./ 2.1 US gal. in reserve |
| Brake fluid reservoir | approx. 0.2 ltr. /6.75 US fl oz |
| Windshield washer tank | approx. 8.5 ltr. /2.2 US gal. |

Dimensions at DIN Curb Weight

| | | |
|--|---------|-------------|
| Wheelbase | mm/inch | 2272/89.45 |
| Length | mm/inch | 4291/168.94 |
| Width | mm/inch | 1652/65.04 |
| Height | mm/inch | 1340/52.76 |
| Ground clearance at max. total weight | mm/inch | 143/5.63 |

911 SC

Weight

| | | |
|-------------------------------|--------|-----------|
| Curb weight per DIN | kg/lbs | 1160/2558 |
| Max. total weight | kg/lbs | 1400/3086 |
| Max. axle load, front | kg/lbs | 600/1323 |
| rear | kg/lbs | 840/1852 |
| Max. roof load * (only coupe) | kg/lbs | 35/77 |

Performance

| | | |
|--|--|---------|
| Max. speed (with 5 speed transm.) | km/h/mph | 225/139 |
| Acceleration 0 - 100 km/h at DIN curb weight + 1/2 payload | sec. | 7.0 |
| Kilometer from standing start (DIN curb weight + 1/2 payload) | sec. | 27.5 |
| Fuel consumption (average values, highways and country roads) | ltr/100 km 14 - 16 miles/US gal. 14.7 - 16.8 | |
| Oil consumption | ltr/1000 km approx. 1.5 US qt /600 mi. | |

* Max. permissible total weight must not be exceeded.

CAUTION

When installing extra equipment (air conditioner,
etc.) the payload will be less.

TECHNICAL DATA - 1980 Models

911 SC

Capacities

| | |
|--|---|
| Engine (initial filling) (measured with oil dipstick per operating instructions) | approx. 13 ltr. of brand name HD oil per API Classification SD or SE; summer SAE 30, winter SAE 20, below - 15 ^o C/+ 5 ^o F SAE 10 W |
| Transmission and differential | approx. 3 ltr. per MIL-L 2105 or MIL-L 2105 B, SAE 90, with differential lock gear lube M2C28B SAE 90 |
| Fuel tank | 80 ltr./21.1 US gal., of which 8 ltr./ 2.1 US gal. in reserve |
| Brake fluid reservoir | approx. 0.2 ltr./6.75 fl oz |
| Windshield washer tank | approx. 8.5 ltr./2.2 US gal. |

Dimensions at DIN Curb Weight

| | | |
|--|---------|-------------|
| Wheelbase | mm/inch | 2272/89.45 |
| Length | mm/inch | 4291/168.94 |
| Width | mm/inch | 1652/65.04 |
| Height | mm/inch | 1320/51.57 |
| Ground clearance (at max. total weight) | mm/inch | 120/4.72 |

911 SC

Weight

| | | |
|------------------------------|--------|-----------|
| Curb weight per DIN | kg/lbs | 1250/2756 |
| Max. total weight | kg/lbs | 1460/3219 |
| Max. axle load, front | kg/lbs | 650/1433 |
| rear | kg/lbs | 880/1940 |
| Max. roof load* (only coupe) | kg/lbs | 35/77 |

Performance

| | | |
|-----------------------------------|----------|---------|
| Max. speed (with 5 speed transm.) | km/h/mph | 225/139 |
|-----------------------------------|----------|---------|

| | | |
|---|------|-----|
| Acceleration 0 - 100 km/h at DIN curb weight + 1/2 payload | sec. | 7.0 |
|---|------|-----|

| | | |
|--|------|------|
| Kilometer from standing start (DIN curb weight + 1/2 payload) | sec. | 27.5 |
|--|------|------|

Fuel consumption

(acc. DIN 70030, Part 1)

| | | |
|--------------|---------------|------|
| at 90 km/h | 1/100 km | 9.2 |
| at 55.9 mph | miles/US gal. | 25.5 |
| city driving | 1/100 km | 17.3 |
| | miles/US gal. | 13.8 |

| | | |
|-----------------|---------------|-------------|
| Oil consumption | l/1000 km | approx. 1.5 |
| | US qt/620 mi. | |

* Max. permissible total weight must not be exceeded.

CAUTION

Installation of extra equipment (air conditioner, etc.)
will reduce payload.

TECHNICAL DATA - 1981 Models

911 SC

Capacities

| | |
|--|---|
| Engine (new filling) | approx. 13 liters/13.7 US qt |
| (measured with oil dipstick according to operating instructions) | Oil grade: see operating instructions |
| Transmission and differential | approx. 3 liters/3.2 US qt Oil grade: see operating instructions |
| Fuel tank | approx. 80 liters/21.1 US gal., of which 8 liters/2.1 US gal. in reserve |
| Brake fluid reservoir | approx. 0.2 liters/6.75 fl oz |
| Windshield washer | approx. 8.5 liters/2.2 US gal. |

Dimensions at DIN Curbweight

| | | |
|--|---------|-------------|
| Wheelbase | mm/inch | 2272/89.45 |
| Length | mm/inch | 4291/168.94 |
| Width | mm/inch | 1652/65.04 |
| Height | mm/inch | 1320/51.57 |
| Ground clearance (at max. total weight) | mm/inch | 120/4.72 |

911 SC

Weight

| | | |
|-----------------------|--------|-----------|
| Curbweight acc. DIN | kp/lbs | 1250/2756 |
| Max. total weight | kp/lbs | 1550/3417 |
| Max. axle load, front | kp/lbs | 650/1433 |
| rear | kp/lbs | 950/2094 |
| Max. roof load * | kp/lbs | 35/77 |
| (only coupe) | | |

Performance

| | | |
|--|---|---------|
| Max. speed (with 4 or 5 speed manual transmission) | km/h/mph | 225/139 |
| Acceleration from 0 to 100 km/h at DIN curbweight plus 1/2 payload | sec. | 7.0 |
| Kilometer from standing start (DIN curbweight plus 1/2 payload) | sec. | 27.5 |
| Oil consumption | ltr./1000 km approx. 1.5 (1 US qt/600 mi.) | |

* Max. total weight must not be exceeded.

** Up to 16 % gradient.

Important

Installation of extra equipment (air conditioner, etc.) will
reduce the payload.

Service Schedule, Type 911 T, 911 E, and 911 S (beginning with 1972 models)

| at 1000 miles | Maintenance required | then at and every 10 000 miles |
|------------------|--|-----------------------------------|
| — | A. Before Road or Dynamometer Test | |
| | 1. Front wheel bearing play : Check. | |
| | 2. Steering : Check all connections and rubber boots for tightness and for leaks. | — |
| — | 3. V-belt and injection pump spur belt : Check. | — |
| — | 4. Valve adjustment (rocker arm shafts for tightness)*: Check. | — |
| — | 5. Ignition points and timing : Check (engine at operating temperature.) | — |
| | 6. Fuel and air filter cartridges : Replace. | — |
| | 7. Flame trap cartridge : Clean. | — |
| — | 8. Clutch pedal free play : Check. | — |
| | 9. Complete brake system (incl. wear and leaks) : Check. | — |
| — | 10. Reflectors and operation of lights: Check. | — |
| — | 11. Horn, wipers and washer : Check. | — |
| — | 12. Battery electrolyte level : Check. | — |
| — | B. During Road or Dynamometer Test | |
| | 1. Test engine performance, foot and parking brakes, clutch operation and gear shifting. | — |
| — | 2. All instruments, control and warning lights : Check. | — |
| — | C. After Road or Dynamometer Test | |
| | 1. Engine idle and exhaust emission : Check. | — |

Note: The recommended service intervals apply under normal driving conditions. The condition of tires, brakes and clutch lining depends greatly on the amount of driving and on driving habits and should possibly be checked at shorter intervals. A complete maintenance service as well as protection against corrosion should be carried out at least once a year, preferably before the winter.

* Necessary at first maintenance only.

Lubrication Schedule for Type 911 T, 911 E, and 911 S (beginning with 1972 models)

| at 1000 miles | Service required | then at and every 10 000 miles |
|------------------|--|-----------------------------------|
| ■ | Engine Engine oil : Change (oil at operating temperature), at least twice a year, preferably once before summer and once before winter. | ■ |
| ■ | Oil strainer and magnetic drain plugs : Clean. | ■ |
| ■ | Oil filter : Replace. | ■ |
| | Lubricate : Accelerator linkage. | ■ |
| ■ | Transmission Transmission oil : Change (oil at operating temperature.) | ■ |
| ■ | Magnetic drain plug : Clean. | ■ |
| | Miscellaneous Lubricate : Door and hood hinges and locks. | ■ |

Note : The recommended service intervals apply under normal driving conditions. The condition of oil, and wear and tear items depends greatly on the amount of driving and on driving habits. Therefore, oil, and wear and tear items should be checked more frequently and possibly changed at shorter intervals. A complete lubrication and maintenance service should be carried out at least once a year, preferably before the winter. The same applies to protective undercoating for the vehicle.

I. Required Maintenance for the Emission Control System

| at 1,000 miles | Maintenance service required | then at 10,000 miles | and every 20,000 miles |
|----------------|--|----------------------|------------------------|
| Check + adjust | Valves (check rocker arm shafts for tightness *) | Check + adjust | |
| Adjust | V-belt | Check | |
| Retorque | Manifold mounting bolts | | |
| Change | Engine oil | Change | |
| Replace | Oil filter | Replace | |
| Clean | Oil strainer | Clean | |
| Clean | Magnetic drain plug | Clean | |
| Check + adjust | Engine idle | Check + adjust | |
| Check + adjust | Exhaust emission | Check + adjust | |
| Check + adjust | Hand throttle lever | Check + adjust | |
| Check | Auxiliary air by-pass valve for overrun | Check | |
| | Fuel filter | | Replace |
| Check | Fuel cap, tank, lines and connections | | Check |
| | Air filter cartridge | Replace | |
| Check | Dwell angle | Adjust | |
| Check | Timing | Adjust | |
| | Spark plugs | Replace | |
| | Ignition wiring | | Check |
| | Distributor cap/rotor | Check | |
| | Crankcase vent hoses | | Check |
| | Filter for crankcase ventilation system | Clean | |
| | Evaporative emission control system | Check | |
| | Activated charcoal filter | | Replace |

Note: The recommended service intervals apply under normal driving conditions. When driving on dusty roads check air filter cartridge more often and replace if necessary. The condition of tires, brakes and clutch lining depends greatly on the amount of driving and on driving habits and should possibly be checked at shorter intervals. A complete lubrication and maintenance service as well as protection against corrosion should be carried out at least once a year, preferably before the winter.

* Necessary at first maintenance only.

II. Required Maintenance Service

| at 1,000 miles | Maintenance service required | then at and every 10,000 miles |
|---|---|--------------------------------|
| Change | Transmission oil | Change |
| | Door and hood hinges and locks | Lubricate |
| Check + adjust | Front wheel bearing play | |
| | Steering gear and tie rod-connections and rubber boots | Check for tightness and leaks |
| Adjust | Clutch pedal free play | Adjust |
| Check | Brake system complete (includes wear and leaks) | Check |
| Check | Operation of lights | Check |
| Check | Reflectors | Check |
| Check | Horns, wipers and washer | Check |
| Check | Battery electrolyte level | Check |
| During road or dynamometer test: | | |
| Check | Foot and parking brakes Clutch operation and gear shifting | Check |
| Check | All instruments, control and warning lights | Check |

Note: The recommended service intervals apply under normal driving conditions. The condition of oil, and wear and tear items depends greatly on the amount of driving and on driving habits. Therefore, oil, and wear and tear items should be checked more frequently and possibly changed at shorter intervals. A complete lubrication and maintenance service should be carried out at least once a year, preferably before the winter. The same applies to protective undercoating for the vehicle.

I. Required Maintenance for the Emission Control System (from 1975 model)

| at 1,000 miles | Maintenance service required | then at and every 15 000 miles | additional at and every 30 000 miles |
|----------------|--|--------------------------------------|--------------------------------------|
| Change | Engine oil | Change | |
| Clean | Magnetic drain plugs | Clean | |
| Replace | Engine oil filter | Replace | |
| Adjust | V-belts (including V-belt for air pump), check tension and condition | Adjust or replace if necessary | |
| Check + adjust | Valve clearance (additionally at 1,000 miles: Check rocker arm shafts for tightness) | Check + adjust | |
| Retighten | Manifold mounting bolts | | |
| | Compression | Check | |
| | Spark plugs | Replace | |
| | Ignition distributor: ignition points, dwell angle and timing | Adjust with electronic equipment | |
| | Ignition wiring, distributor cap and rotor | Check visually, replace if necessary | |
| | Fuel filter | Replace | |
| | EGR system | | Check visually |
| | EGR system filter | | Replace |
| Check visually | Evaporative control system (incl. fuel cap, tank and connections) | Check visually | |
| | Crankcase ventilation hoses | | Check visually |
| | Filter for crankcase ventilation system | Clean | |
| | Exhaust system (incl. thermal reactor, where applicable) | Check for damage | |
| Check + adjust | Engine idle, hand throttle lever and exhaust emission (CO and HC) | Check and adjust | |
| | Air cleaner filter element (at least after two years) | Replace | |
| | Air pump, control valves, air injection hoses and connections | Check | |
| | Filter element for air pump | Replace | |
| | Anti-backfire valve | Check | |

Regular maintenance of the emission control system at 15 000-mile intervals is necessary to keep your emission control system warranty valid. Details are in your Emission Control System brochure, which you receive with your Owner's Manual.

II. Required Maintenance and Lubrication Service (from 1975 model)

| | | |
|---|---|--------------------------------|
| at 1,000 miles | Maintenance service required | then at and every 15 000 miles |
| | Door hinges and locks | Lubricate |
| | Accelerator linkage | Lubricate |
| | Door and Targa top weatherstrips: Remove rubber residue from contacting areas and coat with talc or other suitable rubber lubricant | Maintain |
| Change | Transmission oil (clean magnetic drain plugs) | Change |
| Check + adjust | Windshield washer, operation and fluid level | Check and correct |
| | Front wheel bearing play | |
| | Front axle: steering gear, tie-rod connections and rubber boots | Check for tightness and leaks |
| Check + adjust | Clutch pedal free play | Adjust |
| Check | Brake system, all lines and hoses (incl. wear and leaks) | Check |
| Check | Operation of lights, horns, wipers and washer | Check |
| | Headlight adjustment | Check and correct |
| | Ignition/steering lock and buzzer alarm | Check |
| | Safety belt warning light and buzzer alarm | Check |
| | Battery electrolyte level | Check |
| Check and correct pressure | Tires | Check and correct pressure |
| During road or dynamometer test: | | |
| Check | Braking, clutch, steering, heating, ventilation systems | Check |
| Check | All instruments, control and warning lights | Check |

The recommended service intervals apply under normal driving conditions. If you drive mainly in dusty areas, check the air cleaner element more often and replace if necessary. The condition of oil, and wear-and-tear items (such as tires, brakes, clutch lining) depend greatly on the amount of driving and on driving habits. Therefore, oil and wear-and-tear items should be checked more frequently, and if necessary replaced at shorter intervals. Also, the battery electrolyte level should be checked more often. A complete maintenance and lubrication service should be performed at least once a year, preferably before the winter. The same applies to protective undercoating for the vehicle.